









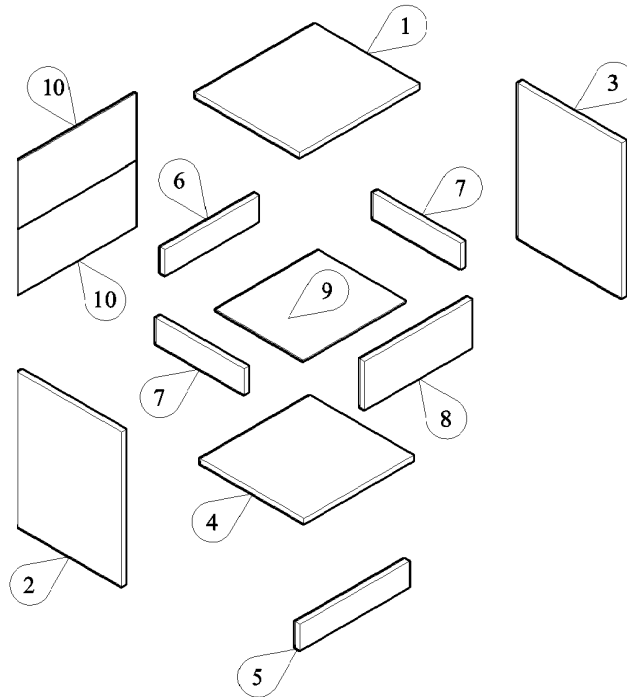



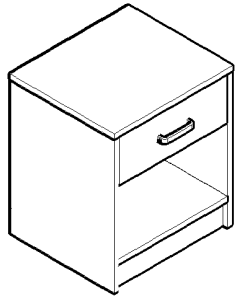


PANEL POSITION








	ACCESSORIES	QUANTITY
A	 MINIFIX M5 x 24MM	4 PCS
B	 MINIFIX CASING	4 PCS
C	 WOOD DOWEL M8 x 30MM	10 PCS
D	 DRAWER SLIDE 12" SCREW M3.5 x 12MM	1 SET 12 PCS
E	 SCREW M7 x 50MM	4 PCS
F	 SCREW M4 x 38MM	4 PCS
G	 WHITE PIN LEG	4 PCS
H	 POWER PIN	25 PCS
I	 HANDLE SCREW M4 x 30MM	1 PC 2 PCS
J	 ALLEN KEY (M4)	1 PC



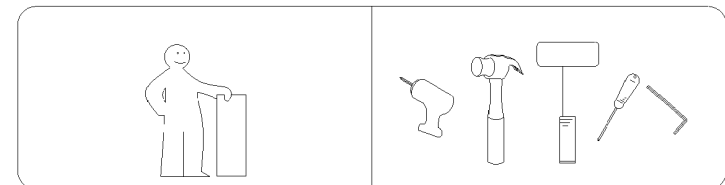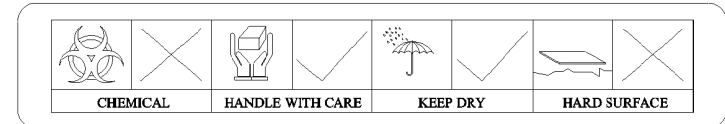


START ASSEMBLY


STEP 1

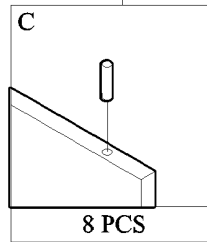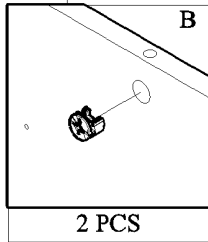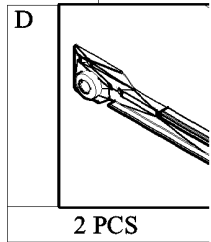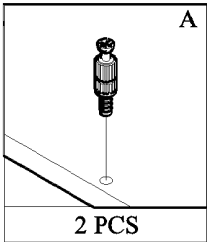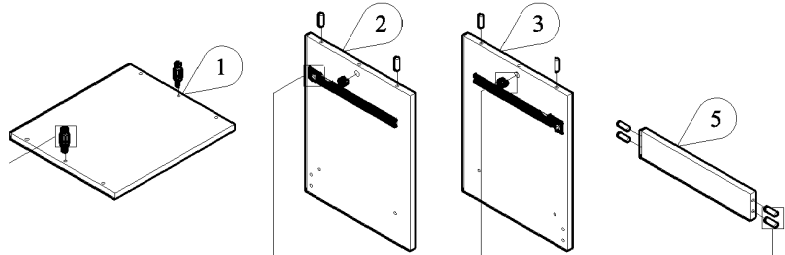




STEP 2

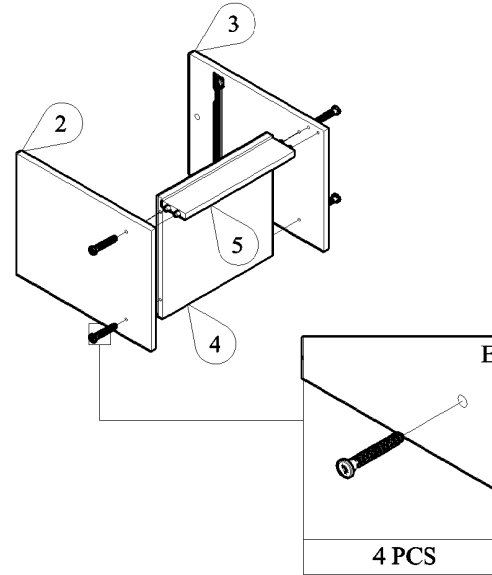


STEP 3

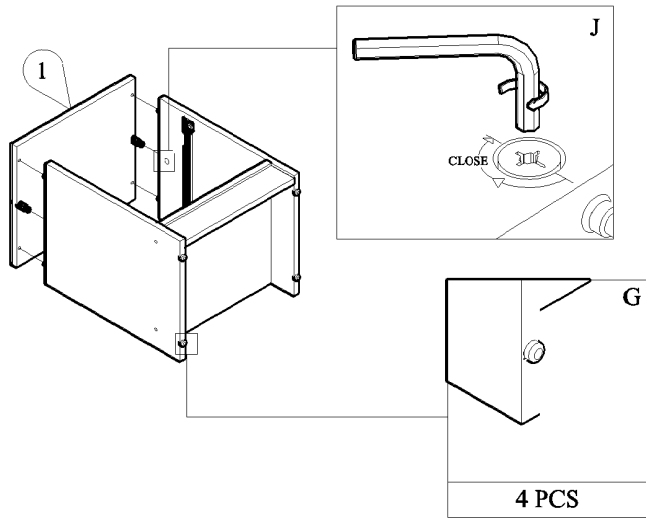


STEP 4

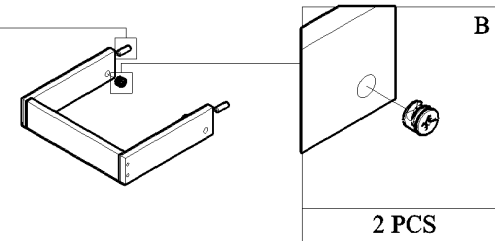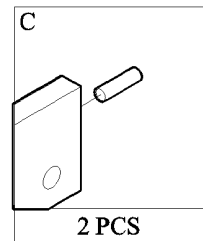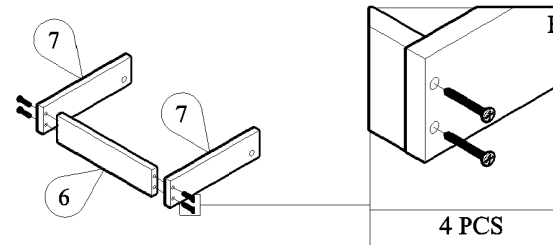


STEP 5

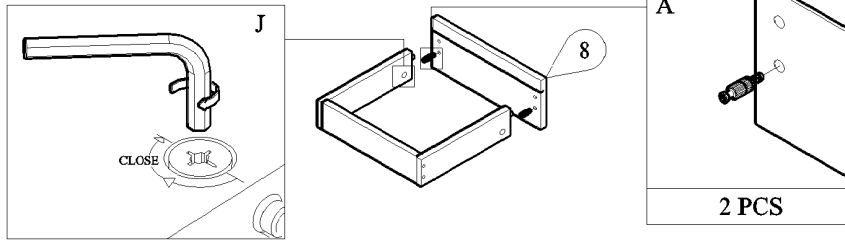


STEP 7

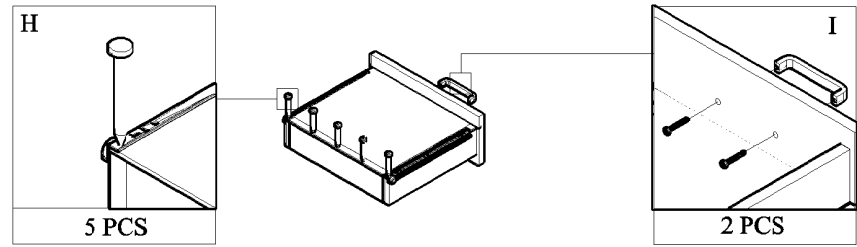


STEP 6

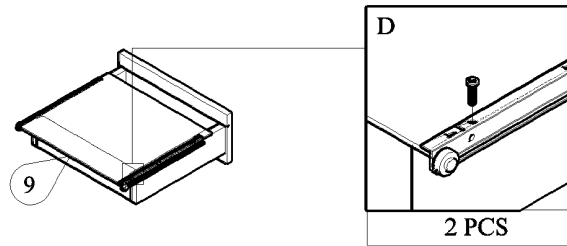

COMPLETED DRAWER

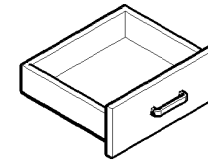

STEP 8

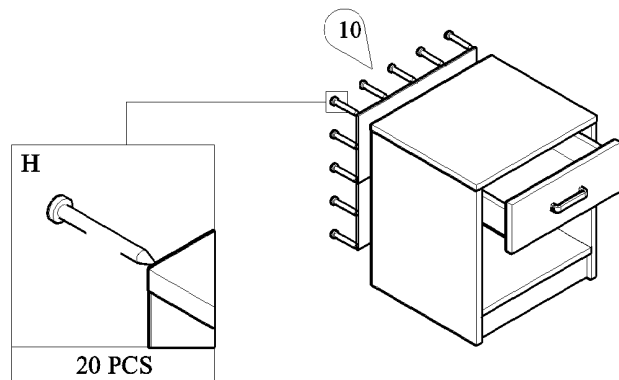

COMPLETED

