
## Night Stand


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

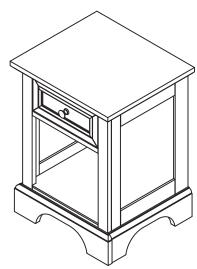

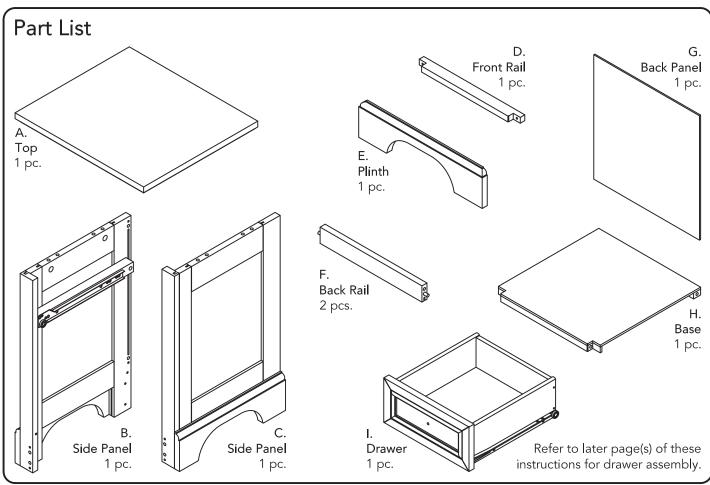

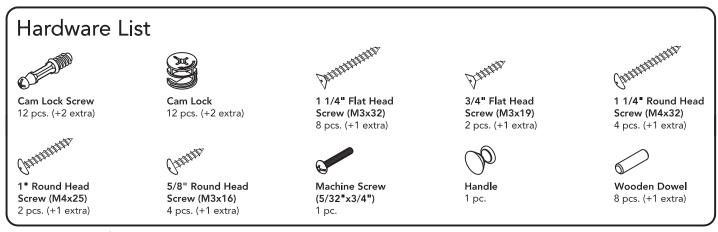


#### Assembly Instructions 2/7

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.

#### STEP 1

Insert Cam Lock Screws into pre-drilled holes in Side Panels (B) and (C), then tighten.

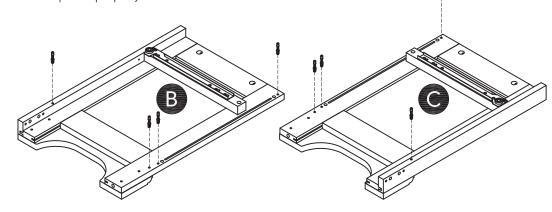



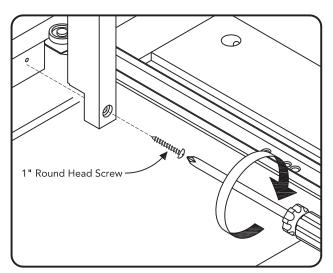


Figure 1

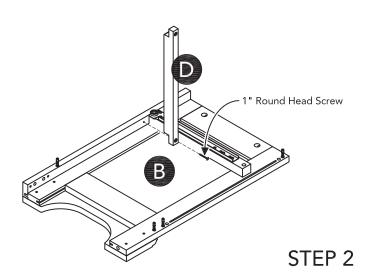

Cam Lock Screw ─►

Attach Front Rail (D) to Side Panel (B) with 1" Round Head Screw. (See Figure 1)

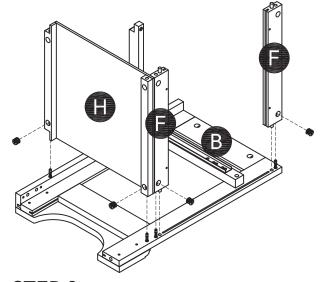

STEP 3

Attach Back Rails (F) and Base (H) to Side Panel (B) with Cam Locks. (See Figure 2)


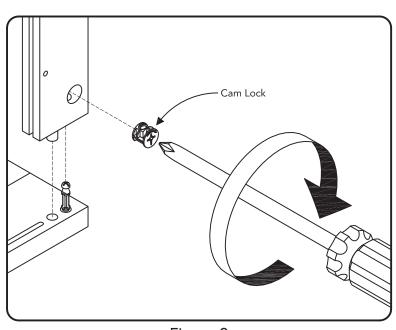


Figure 2

#### Assembly Instructions $\overline{3/7}$

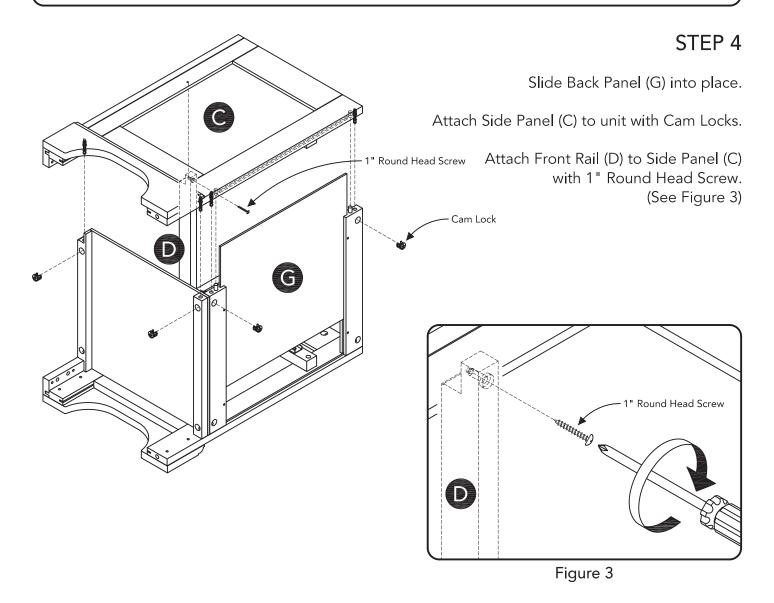


# Cam Lock Screw A


#### STEP 5

Insert Cam Lock Screws into pre-drilled holes in Top (A), then tighten.


#### Assembly Instructions $\overline{4/7}$

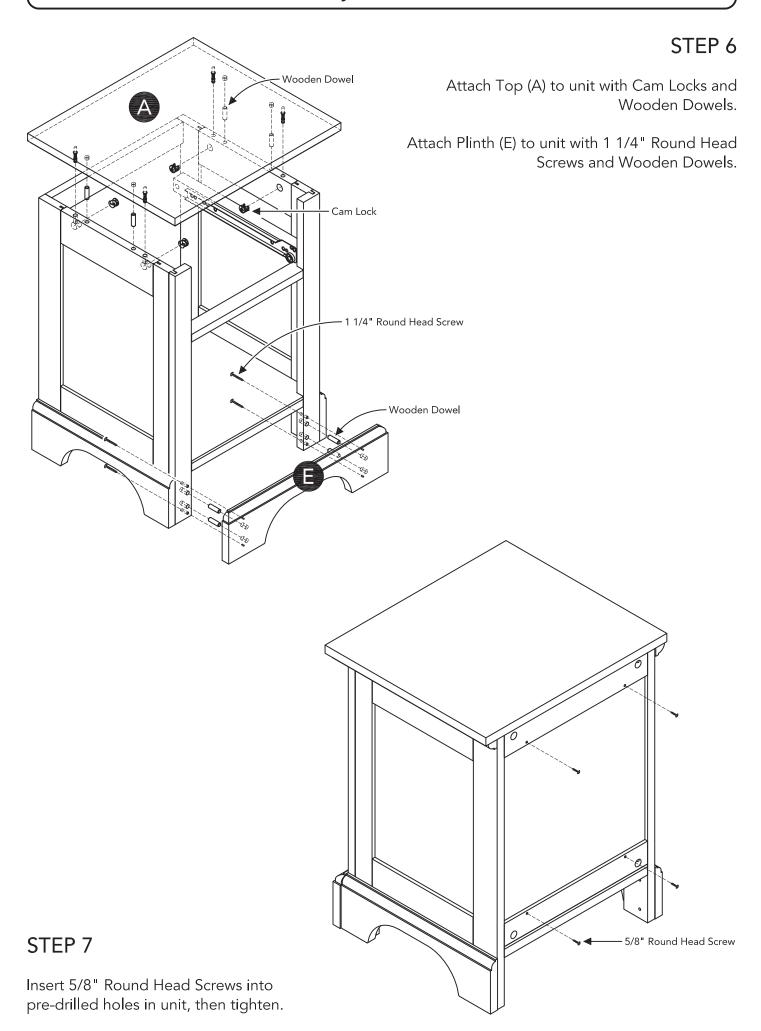

#### Assembly Instructions 5/7

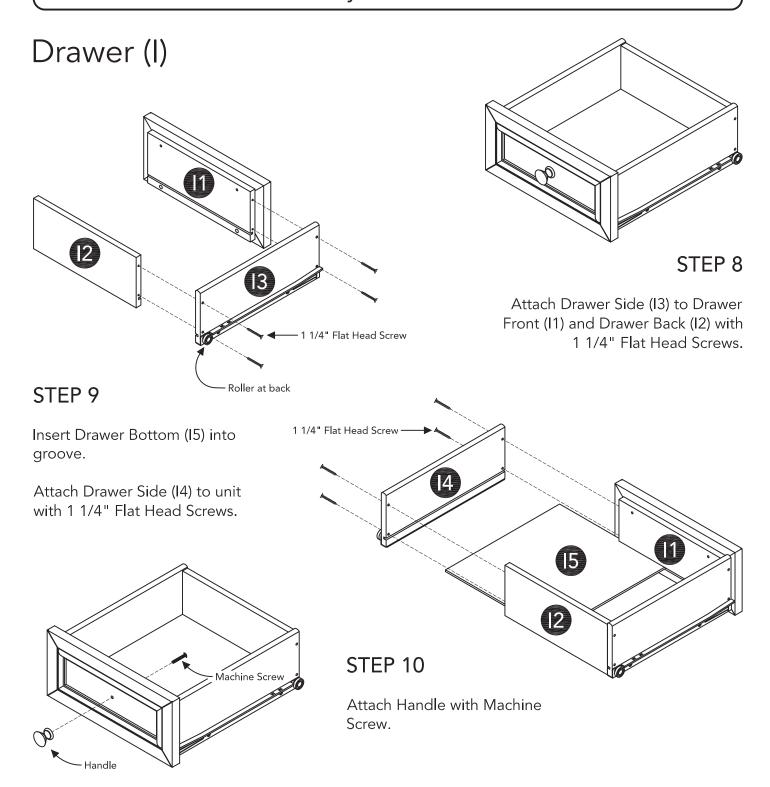


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

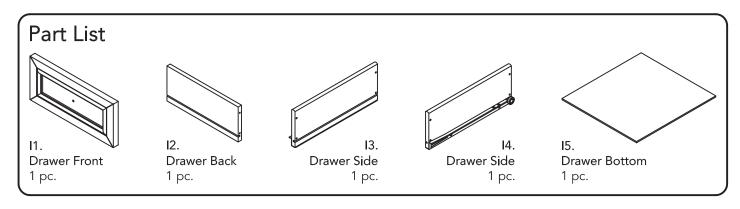


#### Assembly Instructions 6/7

#### **STEP 11**

Loosen slightly the screws pre-installed on back of drawer front.

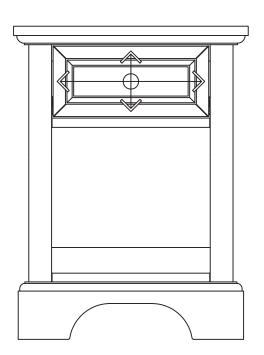

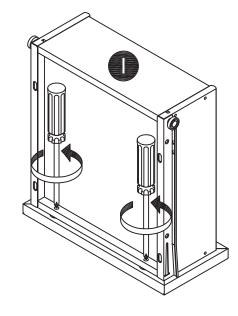

#### **STEP 12**


Insert drawer into unit, then adjust drawer front panel left or right and up or down until drawer gaps look proportional.


#### STEP 13

Pull drawer open slowly and retighten screws from Step 11.

Make sure drawer front panel does not move and lock drawer front panel into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

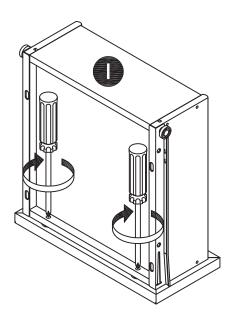


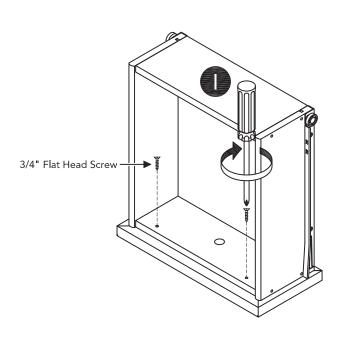

### Assembly Instructions 7/7

#### STEP 14

Slide Drawer (I) into position.

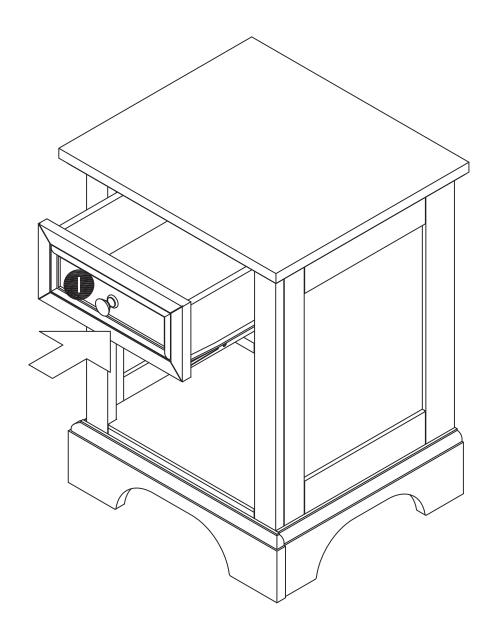

# CARE INSTRUCTIONS

# **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

# NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

# **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



We will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, affiliate, we are under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested.