

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com






PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: **10 minutes**.
- * Tools Required for Assembly (included): **Allen Key**

CARE AND MAINTENANCE

Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.

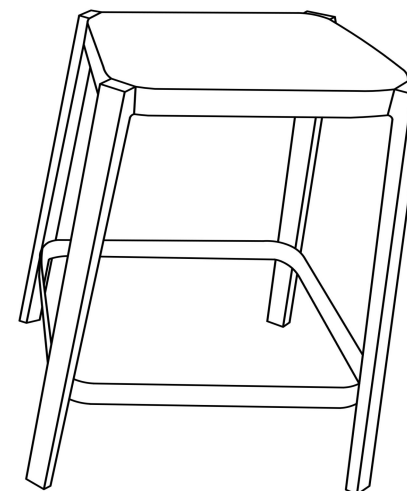
Part List and Hardware List

Piece	Description	Picture	Quantity
A	Top		1X
B	Leg		4X
C	Shelf		1X
HW1	Allen Bolt (M6x1x10mm)		12X
HW2	Allen Key		1X



Model #BST2500

Product Dimensions: 17"Wx17"Dx23.6"H



WARNING:
WEIGHT CAPACITY 275 LBS.
DO NOT STAND ON CHAIR

Preparation

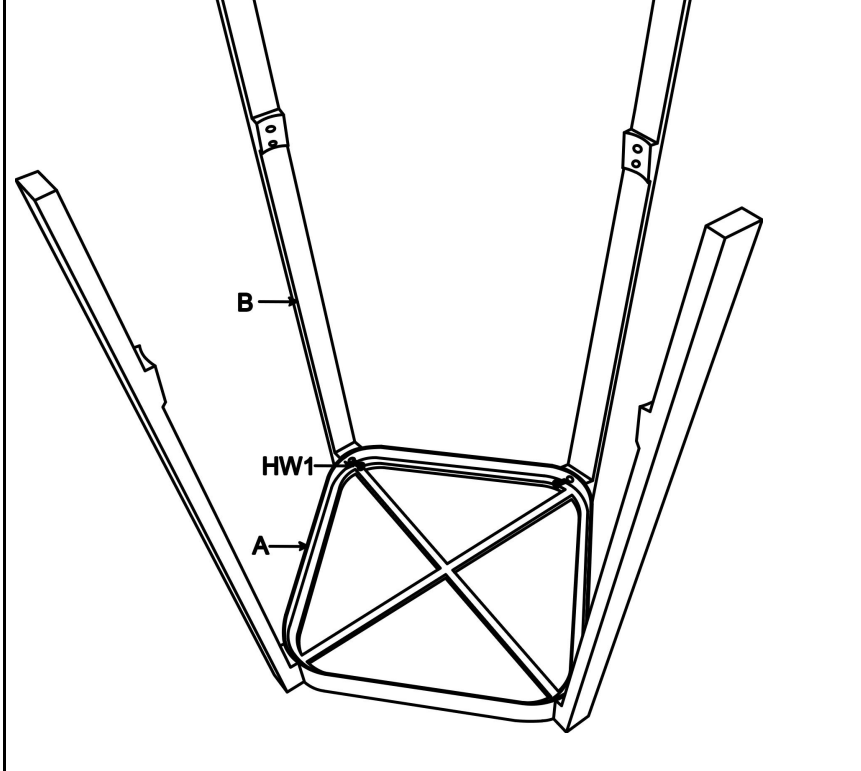
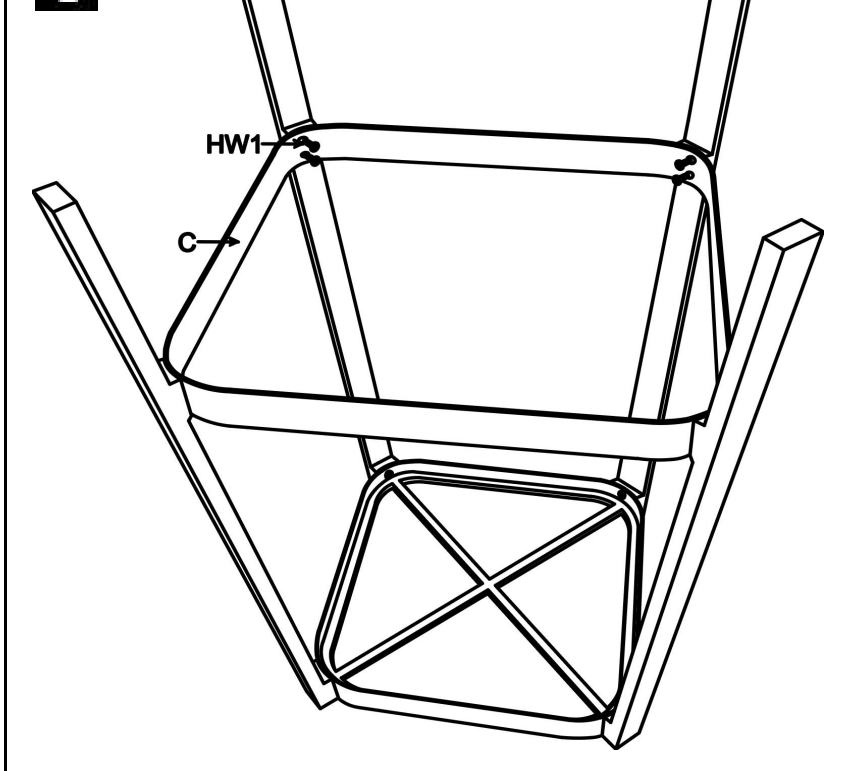
*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: **10 minutes**.

*Tools Required for Assembly (included): **Allen Key**

* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

<div data-bbox="206 466 1064 1316"><div data-bbox="206 466 268 542">1</div><p>A line drawing of a chair frame. A leg, labeled 'B', is being attached to the top of the seat frame, labeled 'A'. Two Allen bolts, labeled 'HW1', are shown being inserted into the leg to secure it to the top of the seat frame.</p></div>	<div data-bbox="1064 466 1908 1316"><div data-bbox="1064 466 1126 542">2</div><p>A line drawing of the same chair frame. A leg, labeled 'B', is being attached to the shelf, labeled 'C'. Two Allen bolts, labeled 'HW1', are shown being inserted into the leg to secure it to the shelf.</p></div>
<p>Attach leg (B) to top (A) using Allen bolts (HW1). Do not over tighten</p>	<p>Attach leg (B) to shelf (C) using Allen bolts (HW1). Tighten all Allen bolts.</p>