




USE AND CARE GUIDE

Model No: A3880-7P

SKU: AK-DR-3880-7P

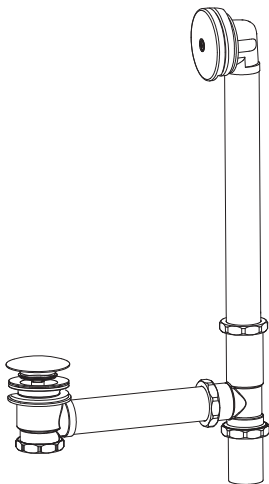

TUBULAR BATHTUB DRAIN KIT

Questions, problems, missing parts?

Call Akicon Customer Service at 8 a.m.-6 p.m. EST, Monday-Friday



Phone: +1(888)-828-2025



Email: service@akicon.com



www.akicon.com

Read and Save These Instructions

BEFORE YOU BEGIN

1. We recommend professional installation if you are not experienced with bathroom fixtures or plumbing. AKICON is not responsible for any damage to floors, walls, plumbing, or personal injury during installation.
2. Please ensure you comply with all local plumbing and building codes.
3. Carefully unpack and inspect the product for any damage. If any damage is found, please contact AKICON Customer Service at +1(888)-828-2025.

TOOLS REQUIRED



Drain Wrench



Adjustable Wrench



Screwdriver



Silicone Sealant




Pipe Wrench



Teflon Tape


PARTS LIST

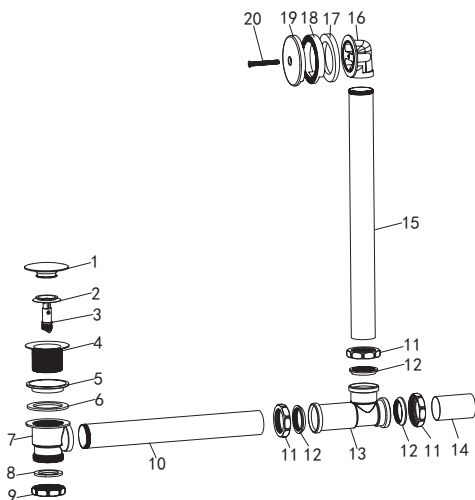

PART	PART NAME	Qty.
1	Tip Toe Button	1
2	Rubber Gasket	1
3	Drain Stopper	1
4	Drain Plug	1
5	Upper Drain Gasket	1
6	Lower Drain Gasket	1
7	Waste Tee	1
8	Slip Joint Washer	1
9	Slip Joint Nut	1
10	Waste Tube	1
11	Slip Joint Nut	3
12	Slip Joint Washer	3
13	Three Way Tee	1
14	Drain Tube	1
15	Overflow Tube	1
16	Overflow Elbow	1
17	Overflow Lower Gasket	1
18	Overflow Upper Gasket	1
19	Overflow Plate	1
20	Screw	1


INSTALLATION INSTRUCTIONS

Step 1

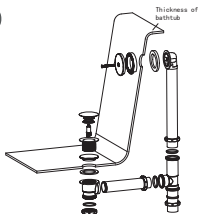


Perform a dry fit of all components before installation. Depending on the size of your bathtub, it may be necessary to trim the tubes to achieve proper alignment. You may also adjust the direction of the three way tee to fit the installation space.

Step 2

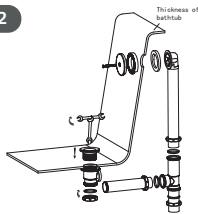


Place the upper drain gasket (5) and lower drain gasket (6) onto the waste tee (7) and position the assembly underneath the bathtub. Apply teflon tape to the waste strainer threads. Apply a bead of silicone sealant underneath the drain plug (4), then thread it into the waste tee (7). Wipe away any excess sealant.

Step 3

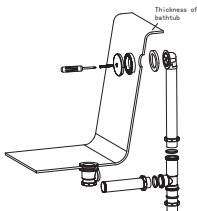


Place the overflow lower gasket (17) and overflow upper gasket (18) onto the overflow elbow. Hold the overflow assembly against the back of the bathtub overflow opening and secure it by tightening the overflow plate (19).

Step 4

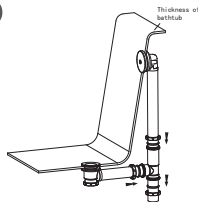

Slide the slip joint nuts (11) and slip joint washers (12) onto the overflow tube (15), waste tube (10), and drain tube, ensuring the washers are installed in the correct orientation to achieve a watertight seal.


Step 5

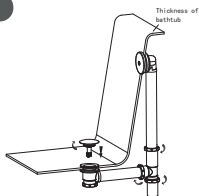

Apply teflon tape to both threaded openings of the three way tee (13) and to the drain tube (14) threads. Attach the three way tee (13) to the waste tube (10), overflow tube (15), and drain tube (14). Adjust all components to the proper position and tighten all slip joint nuts securely.

Step 6

**⚠ WAIT 24 HOURS
BEFORE WATER TEST**

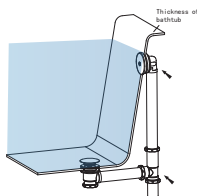

Allow the drain to set for 24 hours to ensure the silicone sealant are fully cured. Fill the bathtub to the overflow plate (19) to test drain and overflow functionality and check for leaks. Tighten connections if necessary.



LIMITED 3-YEAR WARRANTY

This product is warranted to be free from material and workmanship defects for 3 years from the date of purchase. Original proof of purchase from an authorized retailer is required for all warranty claims. All claims must be verified and approved by Akicon, Inc. This warranty is nontransferable and does not cover normal wear and tear, or damage caused by misuse, abuse, neglect, modification, or improper installation.

Questions, problems, or missing parts?
Contact AKICON Customer Service before returning the product.
Service Hours: Monday-Friday, 8:00 a.m.-6:00 p.m. EST

☎ 1-(888)-828-2025

✉ service@akicon.com

🌐 www.akicon.com

📍 18555 Gale Ave, City of industry, CA 91748

