

INSTALLATION INSTRUCTIONS



Three in one screw



Lock catch



foot nails



Double headed screw



Corner connector



Straight connector



Self-tapping screw



Flat head screw



Drawer lock



doorknob




Wire hole box




Buffer hinge




Silent drawer slides

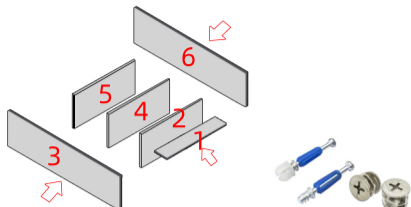


1. Install the three-in-one screws on the side panels and bottom plate of the high cabinet, assemble the foot bars on the bottom plate, and tighten the latches. Then assemble the two layer plates and the bottom plate on the two side plates and tighten the lock

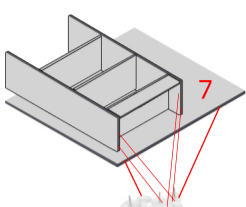


2. Lay the back plate of the high cabinet flat, put a three-in-one screw on the high cabinet. Install the high cabinet on the back plane, tighten the lock, and nail two white foot nails on the side panel and the bottom of the backplane

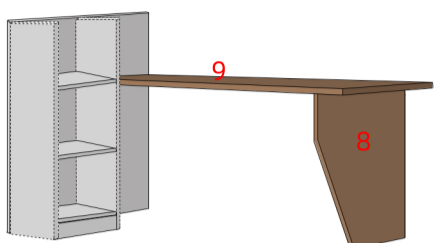


3. Lay a three-in-one screw on the desktop 9, install the center foot on the desktop 9, and then install it together on the backboard of the high cabinet

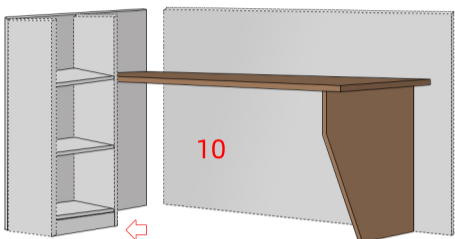


4. Install three-in-one screw on the big backplane, nail two white foot nails on the bottom, align with the hole, and assemble it on the desktop and high cabinet

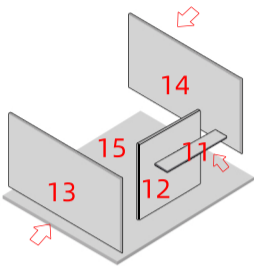


5. Install three-in-one screws in two low cabinet side panels, bottom plate and small backplane. Assemble the cabinet with the backboard and tighten the lock

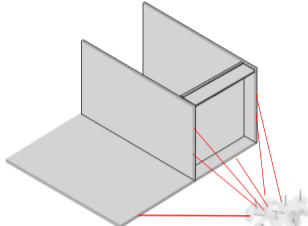

Nail white foot tacks to the bottom of the cabinet

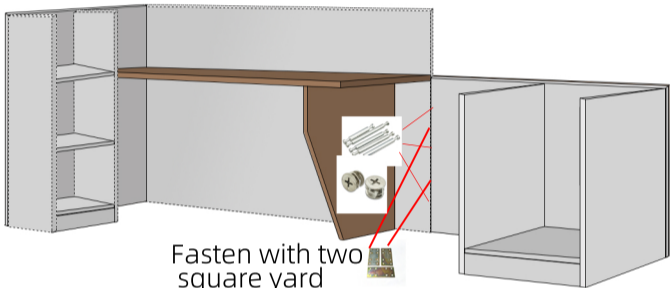


6. Connect the small backboard of the low cabinet and the large backboard of the front desk with three double-headed screws

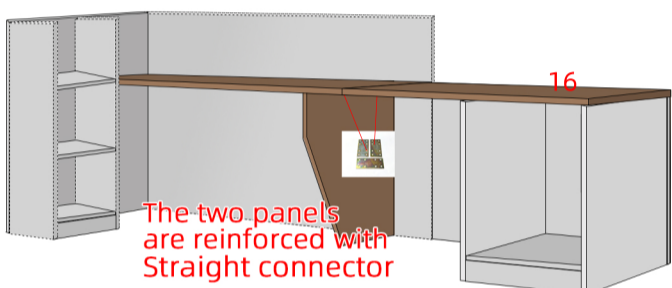


The two panels are reinforced with Straight connector

7. Small desktop lay on the three-in-one screw, cover to the low cabinet, it is reinforced with a straight connector between the desktop and the large desktop

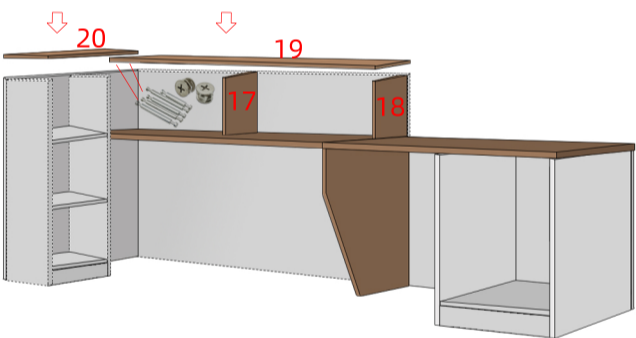


8. The desktop and cabinet top are played on the three-in-one screw, as shown in the picture above, the small vertical plate and cabinet top plate installed on the front desk, tighten the lock

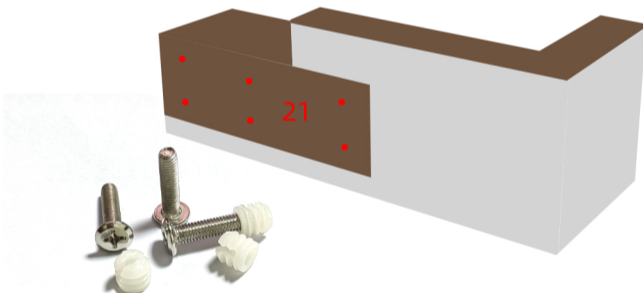


9. Lay the front desk decor flat and insert six plastic pellets, as shown above. The decor is aligned with the top of the desktop, through the big back plate 10 screw 6 flat head screws fixed decorative board (before screw six, decorative board need someone to hold)

Guide rail guide hole

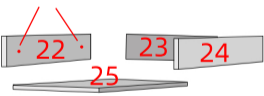


10. Install the keyboard bracket: First, the left side of the keyboard 22, the right side of the keyboard 24 and the keyboard drawer 25 are installed on the guideway. Install the three-in-one screw on the two side plates of the keyboard bracket, assemble the side plate and the tailplate together, tighten the lock

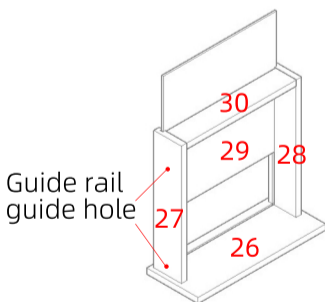


The drawer of the cabinet

11. drawer installation: in the left side 27, right side 28 and 26 draw a three-in-one screw, and then in accordance with the Order of the board 27, 30, 28, 29, 26 assembled together, tighten the lock; Install guide rail inner rails on drawing side 27 and 28

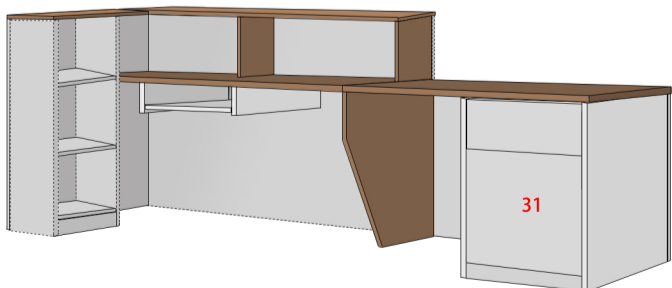

12. Align the keyboard tray with the three-in-one screw of desktop 9, assemble it under desktop 9, tighten the lock, install the drawer on the low cabinet, and install the cabinet door with the door hinge on the low cabinet

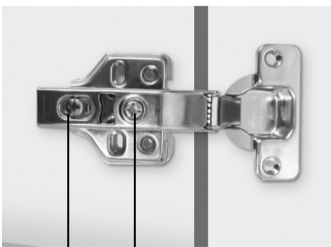

Door Hinge adjustment: this screw can adjust the front and back gap between the door plate and the cabinet

Door Hinge adjustment: this screw can adjust the left and right gap between door plate and cabinet