
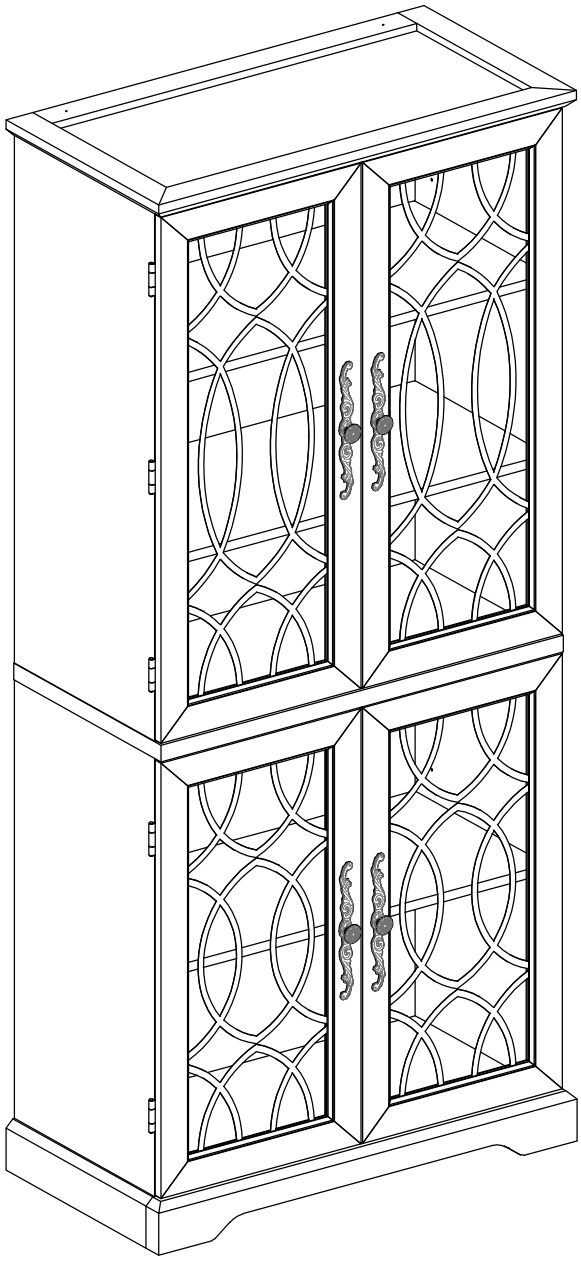


ATTENTION






















If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.











PART LIST

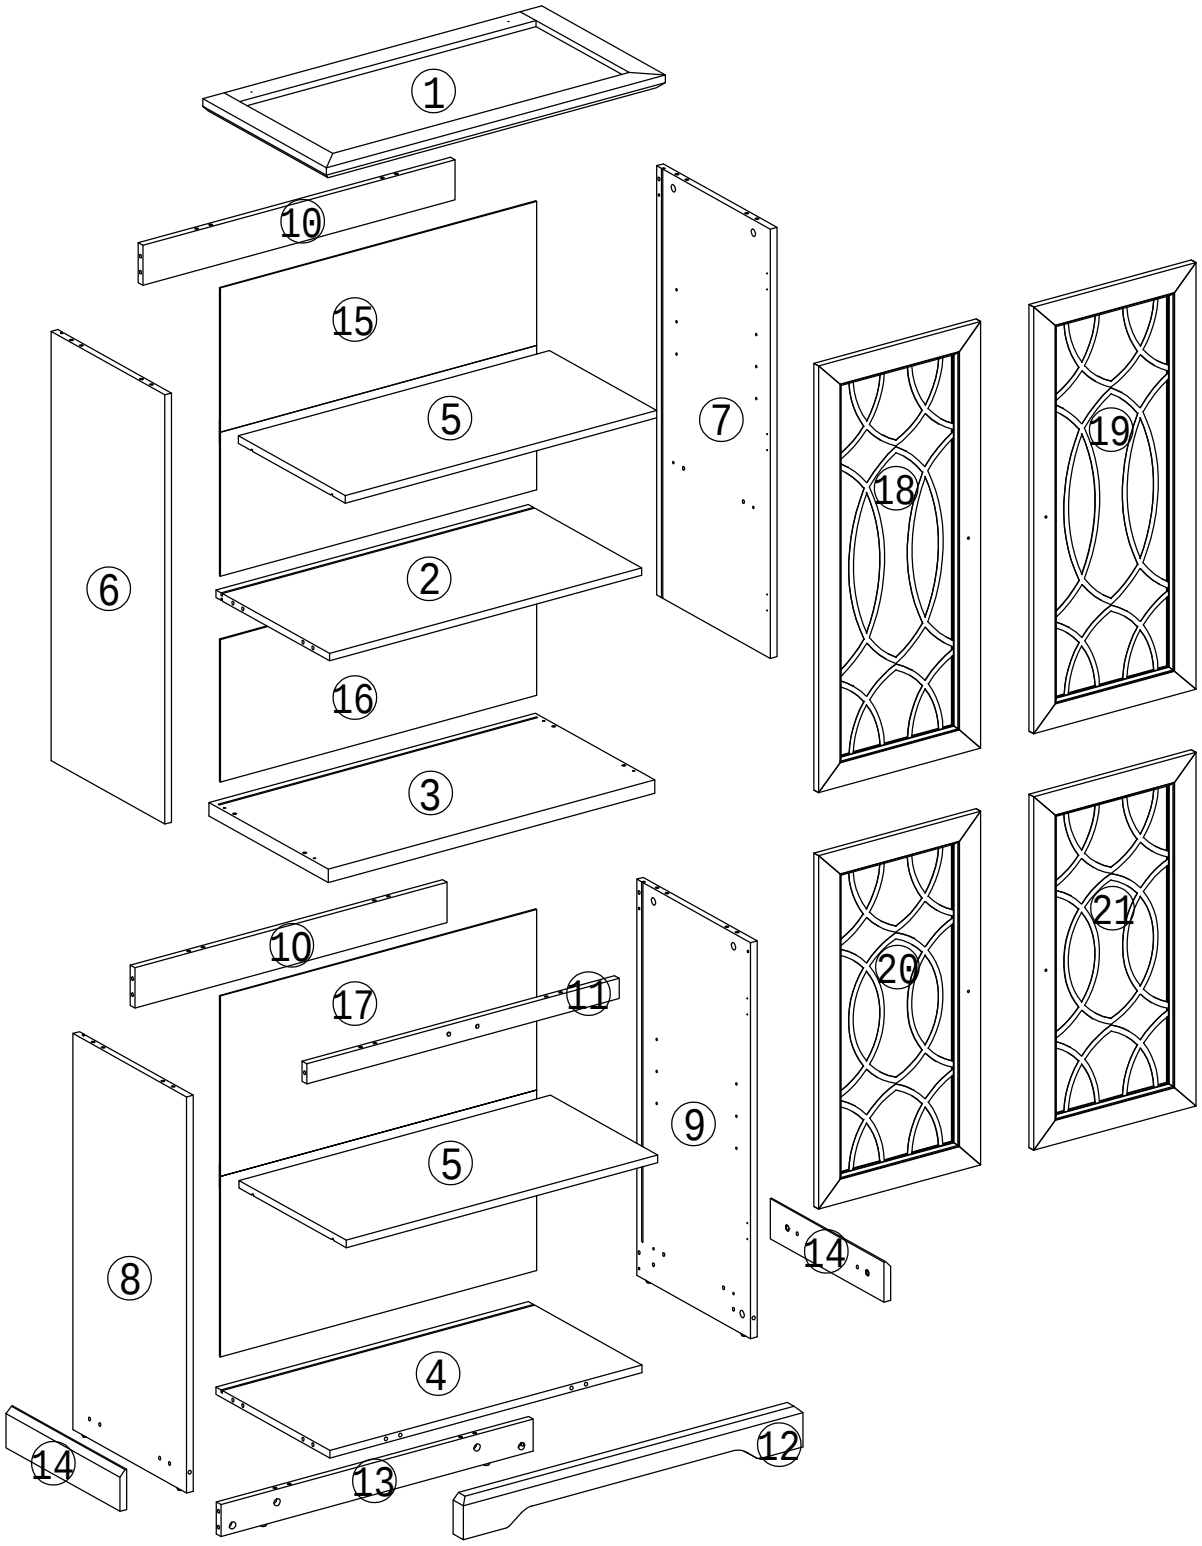


PART LIST

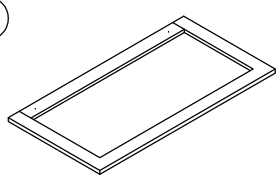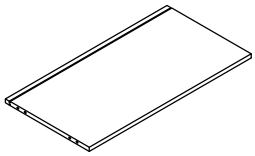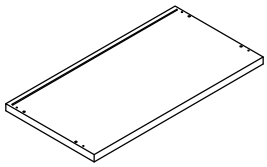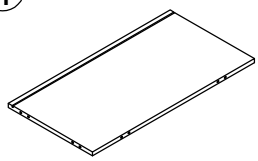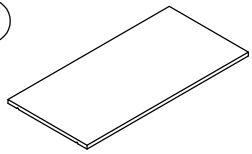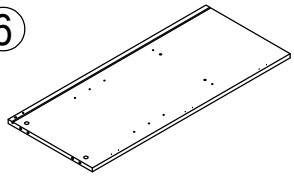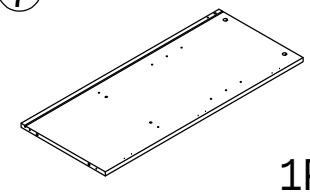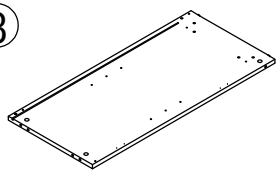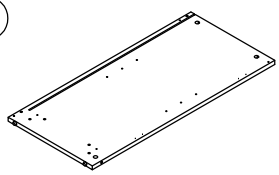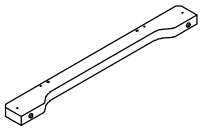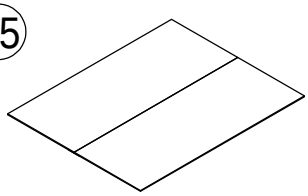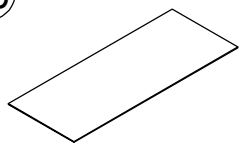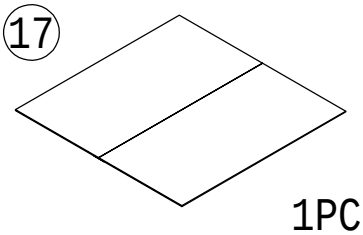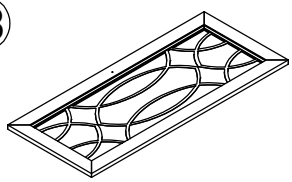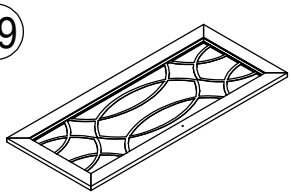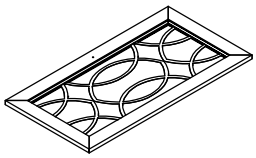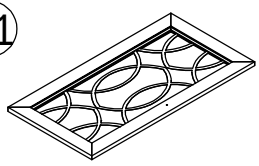
①  1PC	②  1PC	③  1PC
④  1PC	⑤  2PCS	⑥  1PC
⑦  1PC	⑧  1PC	⑨  1PC
⑩  2PCS	⑪  1PC	⑫  1PC
⑬  1PC	⑭  2PCS	⑮  1PC
⑯  1PC	⑰  1PC	⑱  1PC
⑲  1PC	⑳  1PC	㉑  1PC


HARDWARE LIST

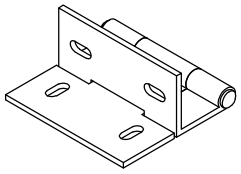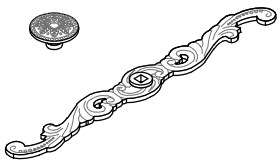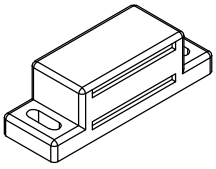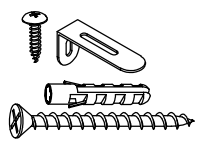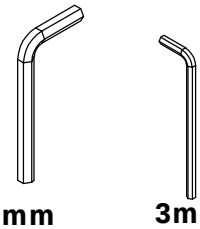A  ϕ5×40 4PCS	B  ϕ6×33 (36+2)PCS	C  ϕ15×12 (36+2)PCS
D  ϕ8×30 (36+2)PCS	E  ϕ8×20 4PCS	F  (8+1)PCS
G  ϕ3×17 (18+2)PCS	H  (18+2)PCS	I  M6×25 4PCS
J  10PCS	K  ϕ3.5×14 (40+2)PCS	L  G5/32×28 4PCS
M  4SET	N  2PCS	O  2PCS
P  ϕ3×15 4PCS	Q  ϕ3×12 4PCS	R  2PCS
S  2SET	 4mm 3mm	 1PC

STEP 1

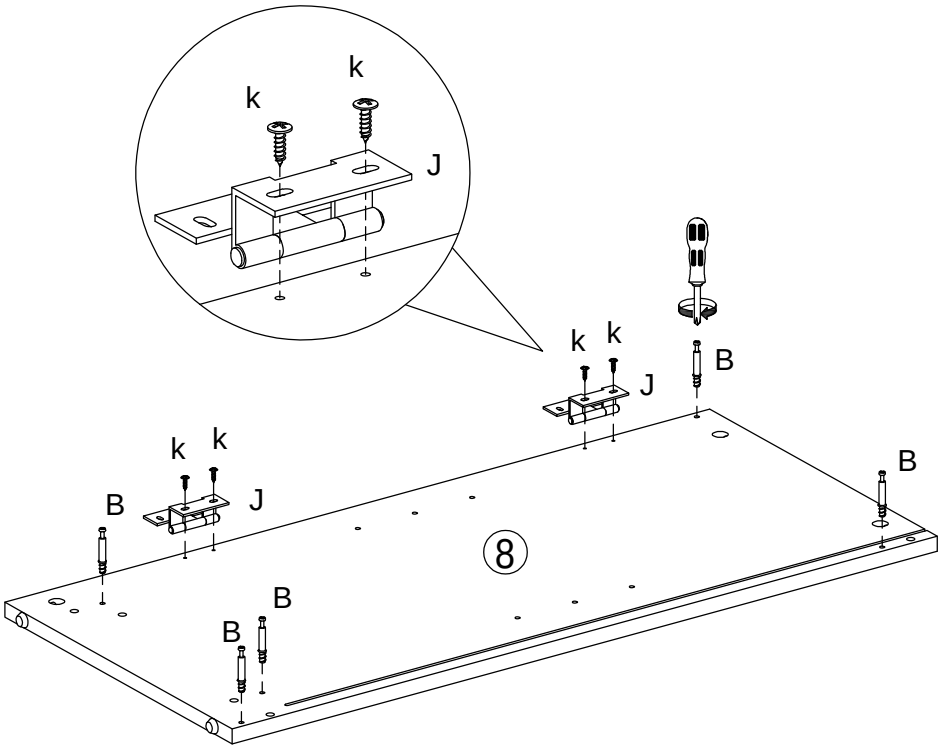


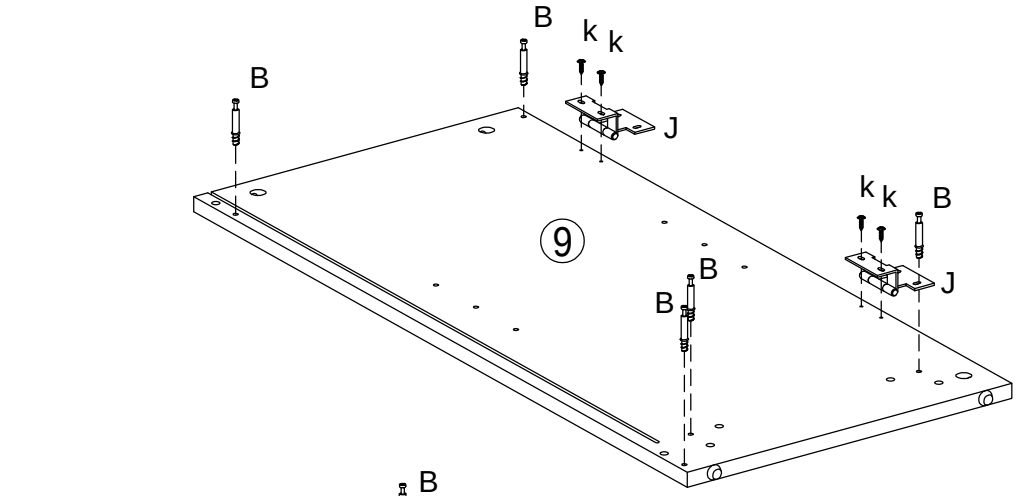


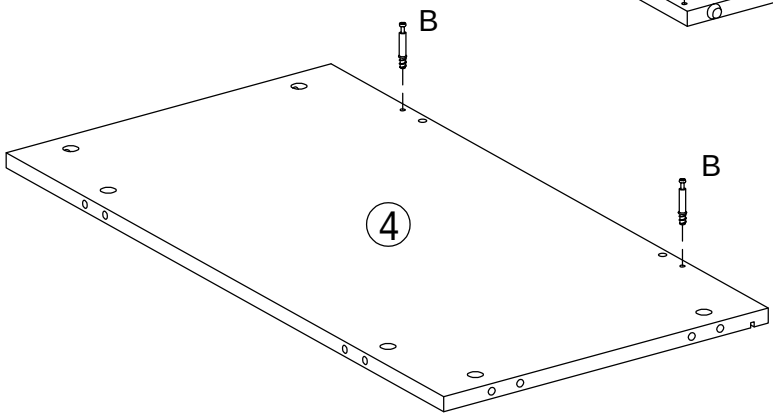

	B × 12PCS
	J × 4PCS
	K × 8PCS


STEP 2

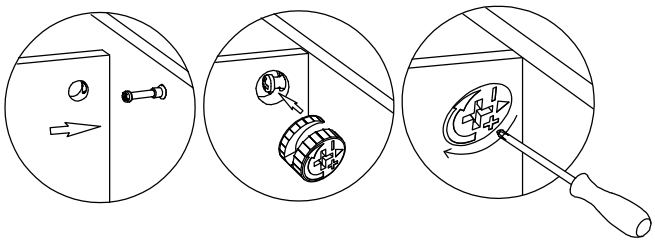


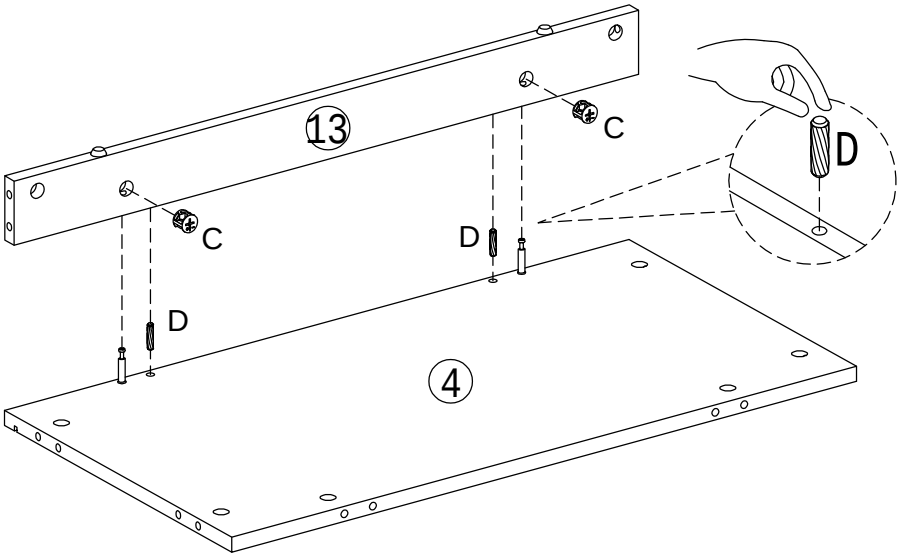

	C × 2PCS
	D × 2PCS


STEP 3

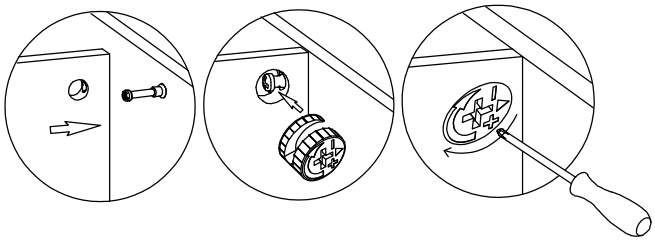

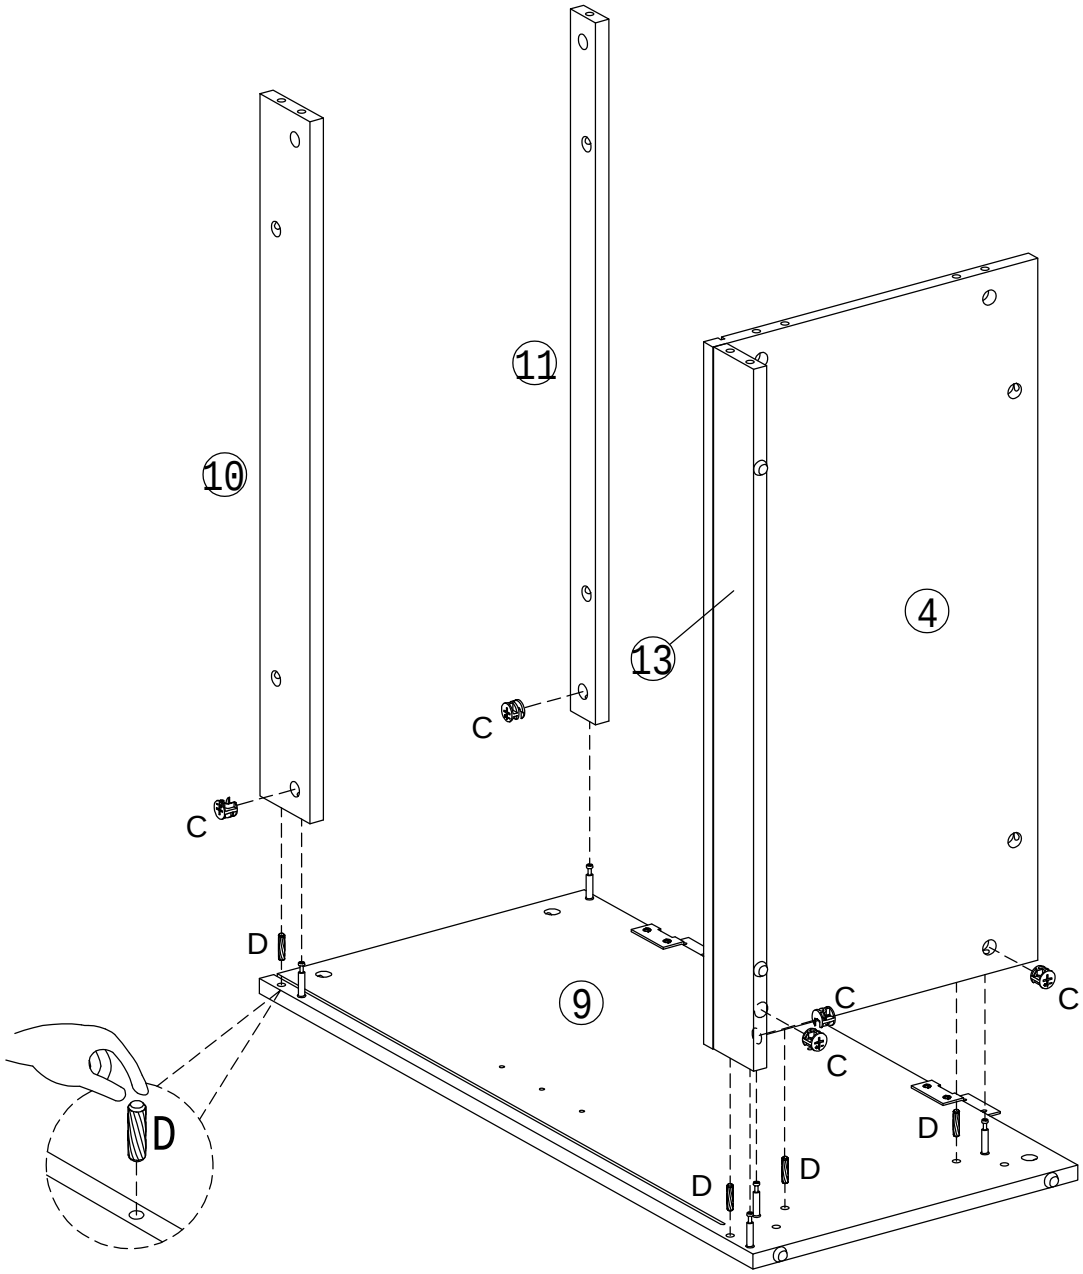


	C × 5PCS
	D × 4PCS


STEP 4

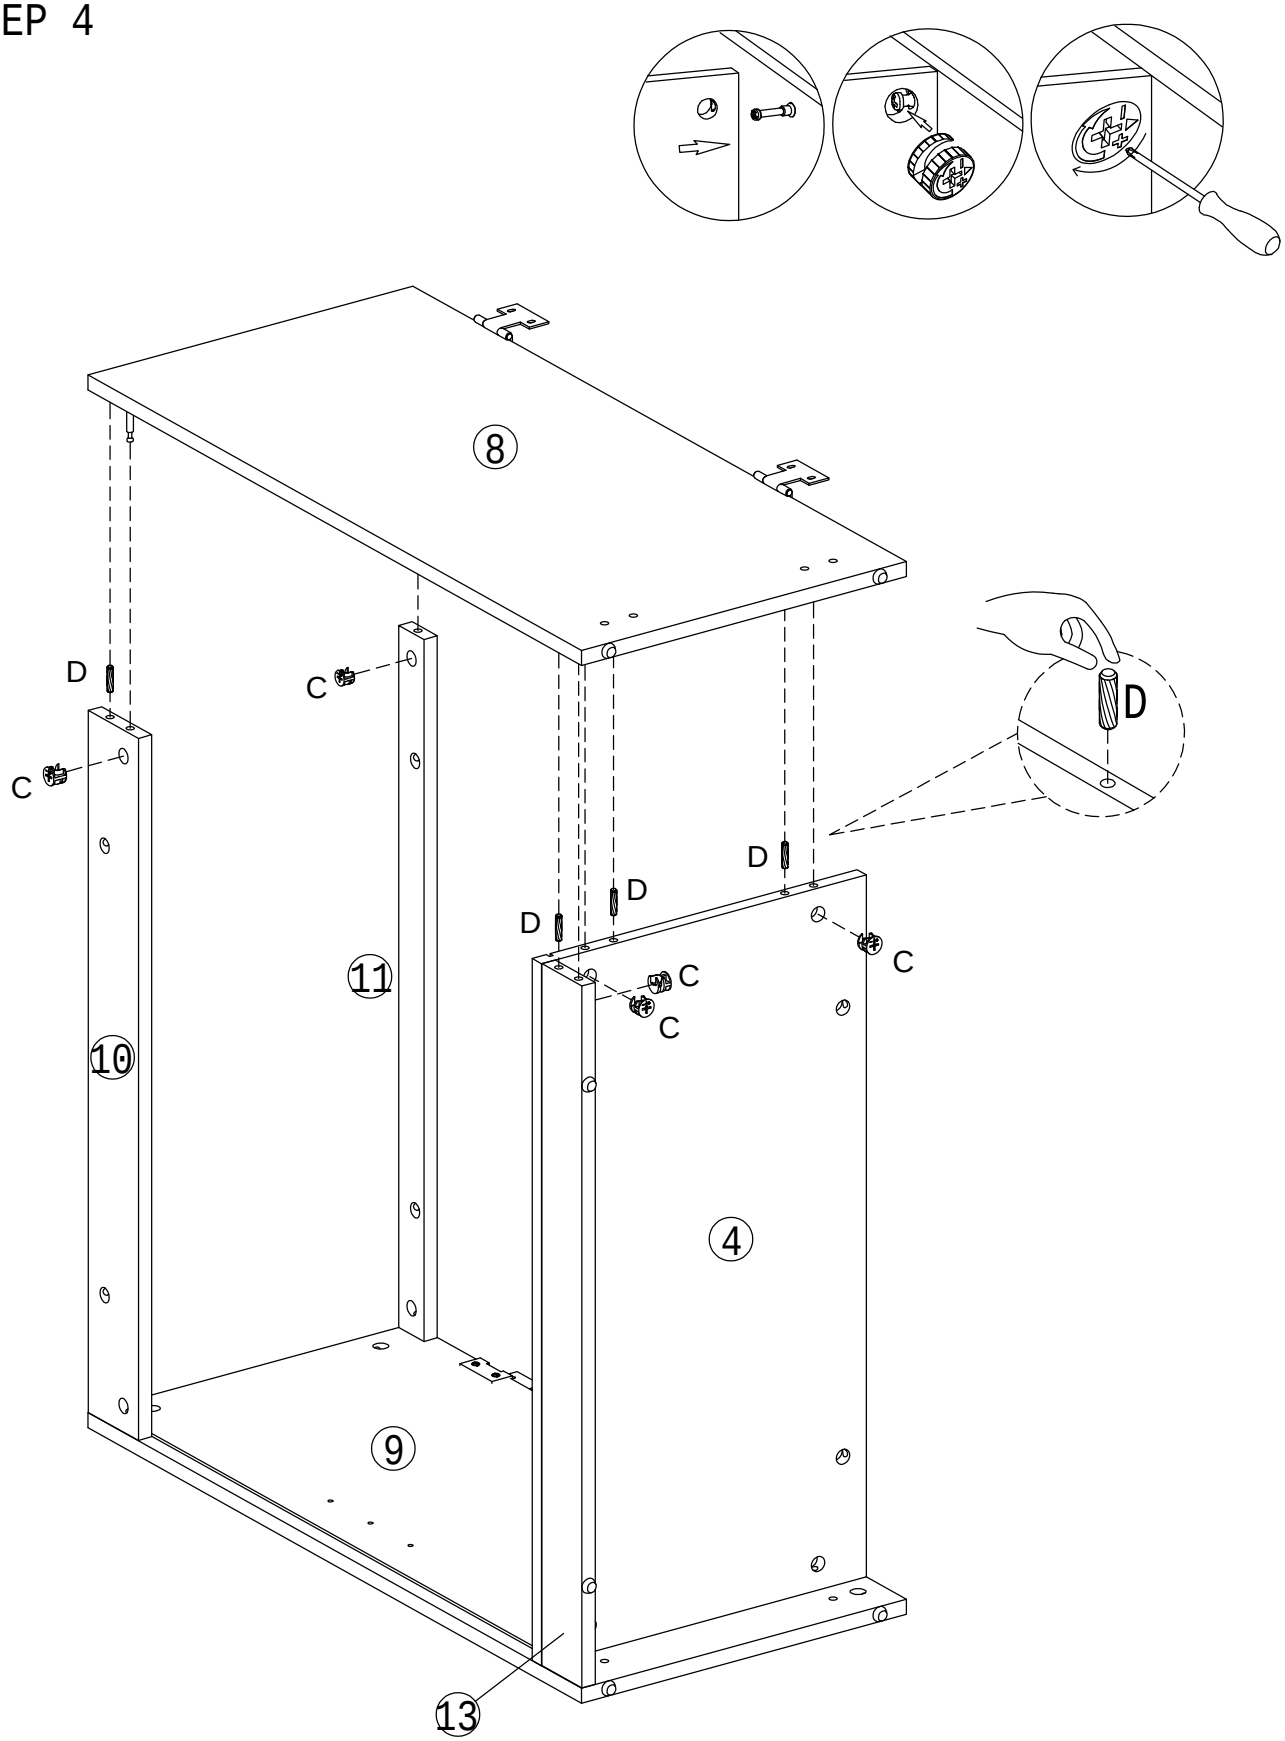


	C × 5PCS
	D × 4PCS

STEP 5

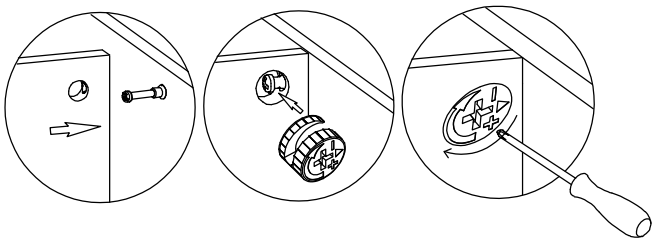


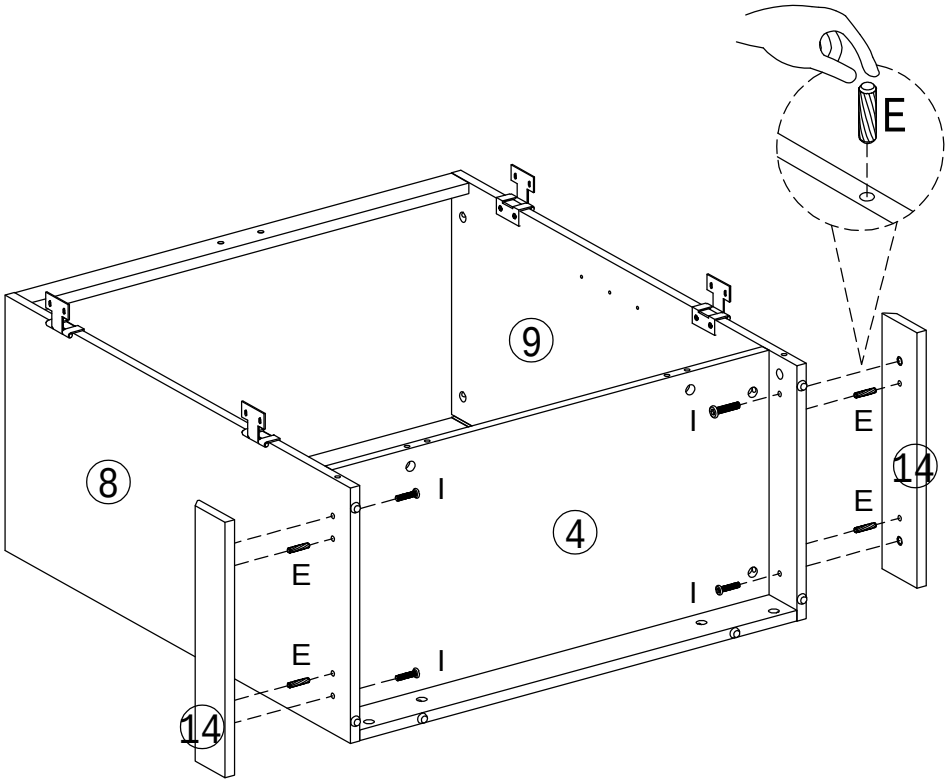


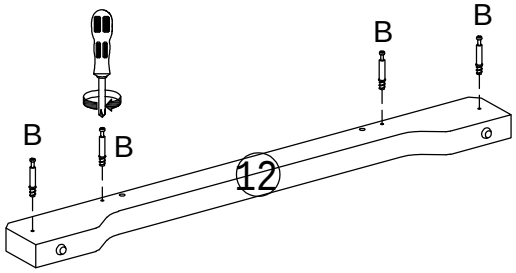

	B × 4PCS
	E × 4PCS
	I × 4PCS


STEP 6

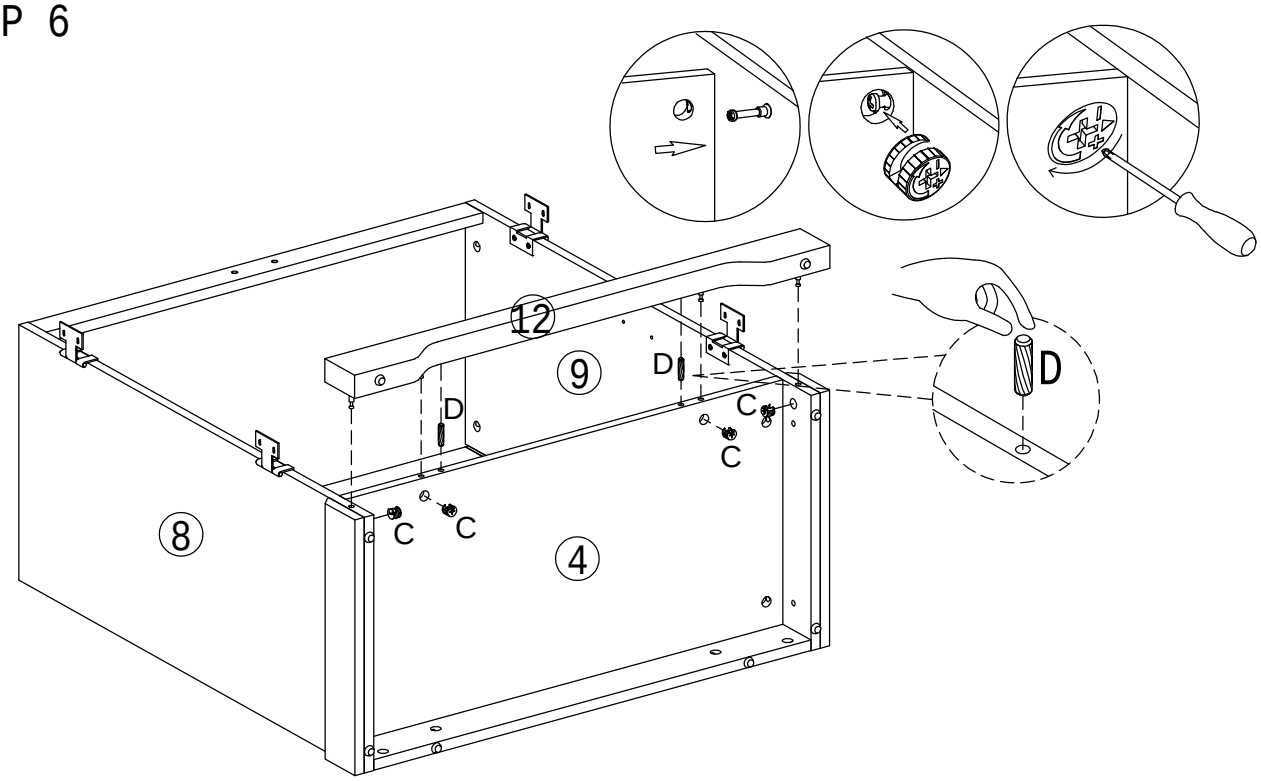


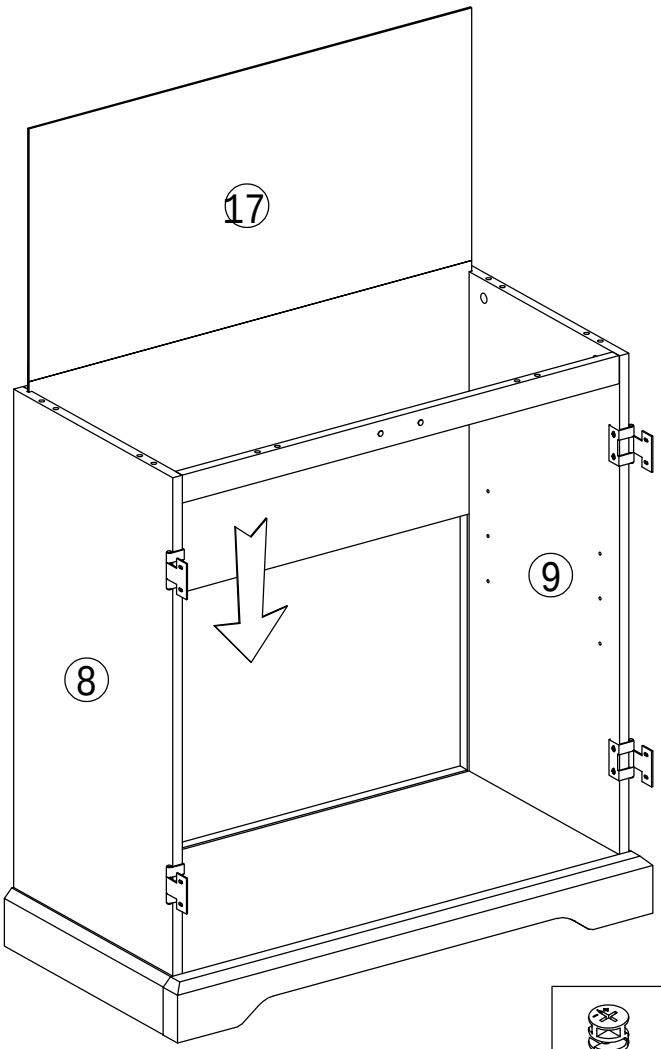

	C × 4PCS
	D × 2PCS


STEP 7

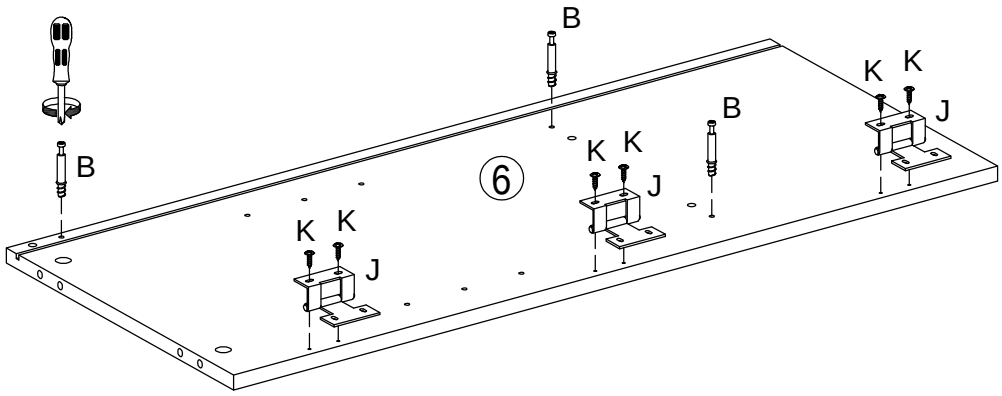


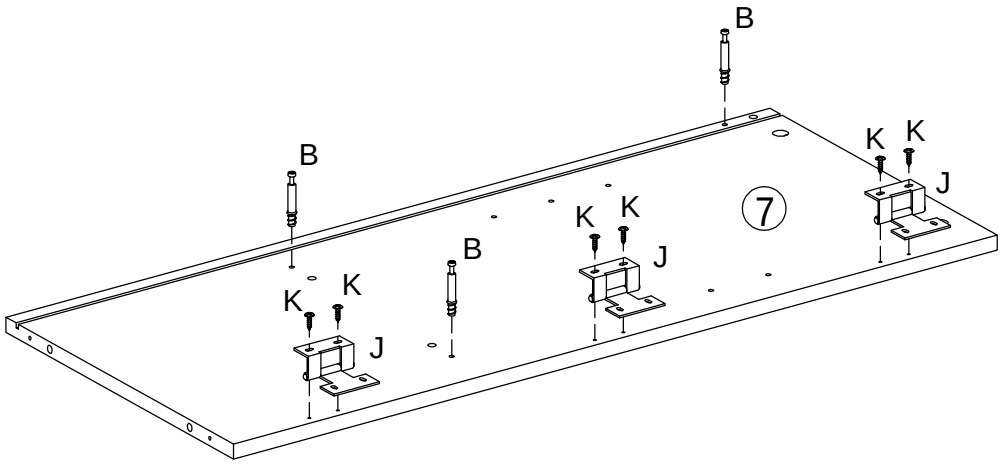

	B × 6PCS
	J × 6PCS
	K × 12PCS


STEP 8

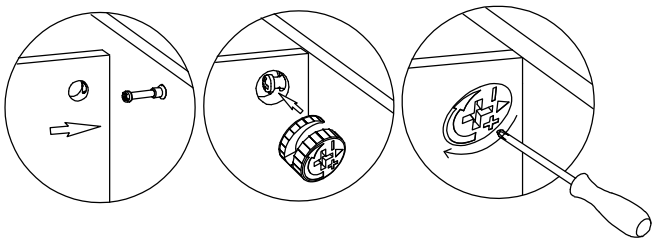

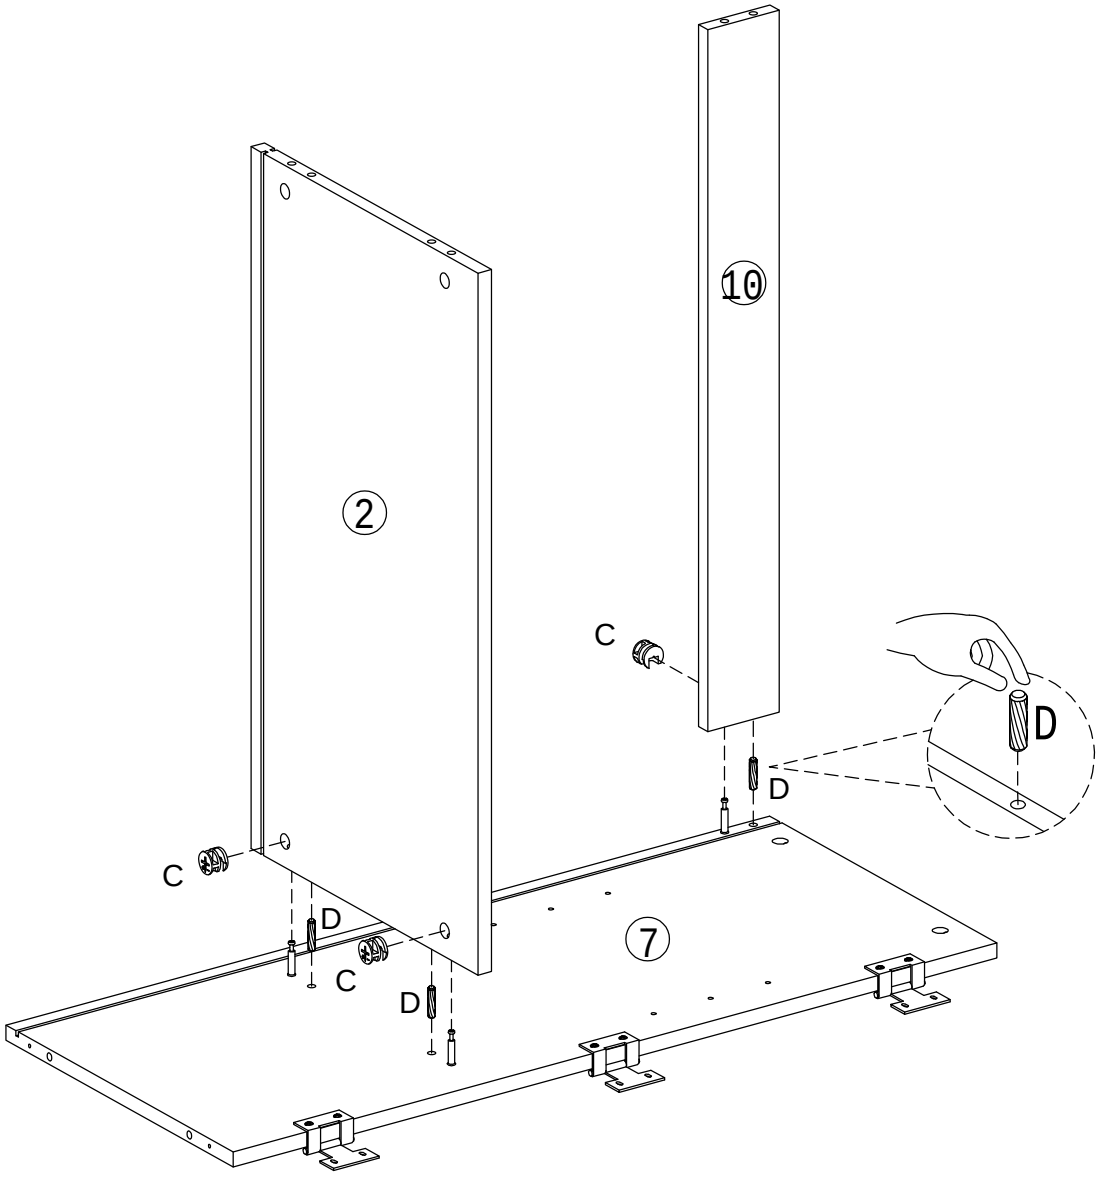


	C × 3PCS
	D × 3PCS


STEP 9


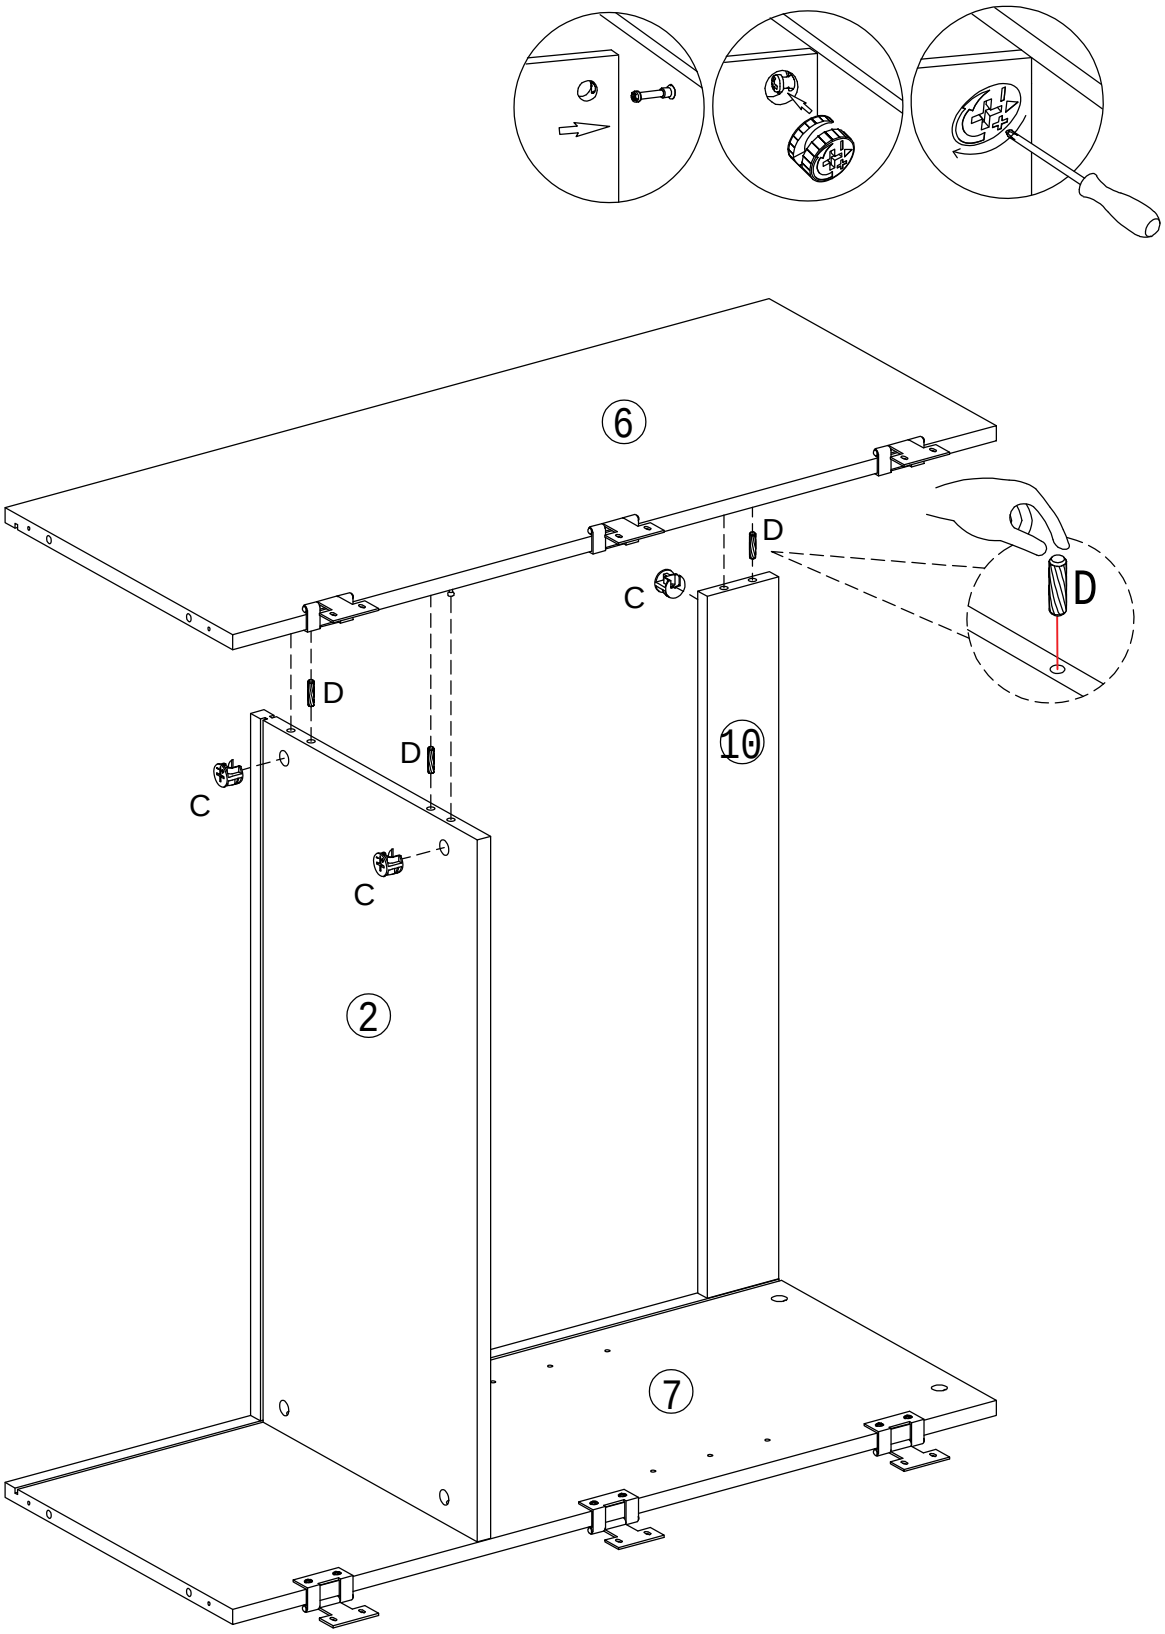


	C × 3PCS
	D × 3PCS


STEP 10

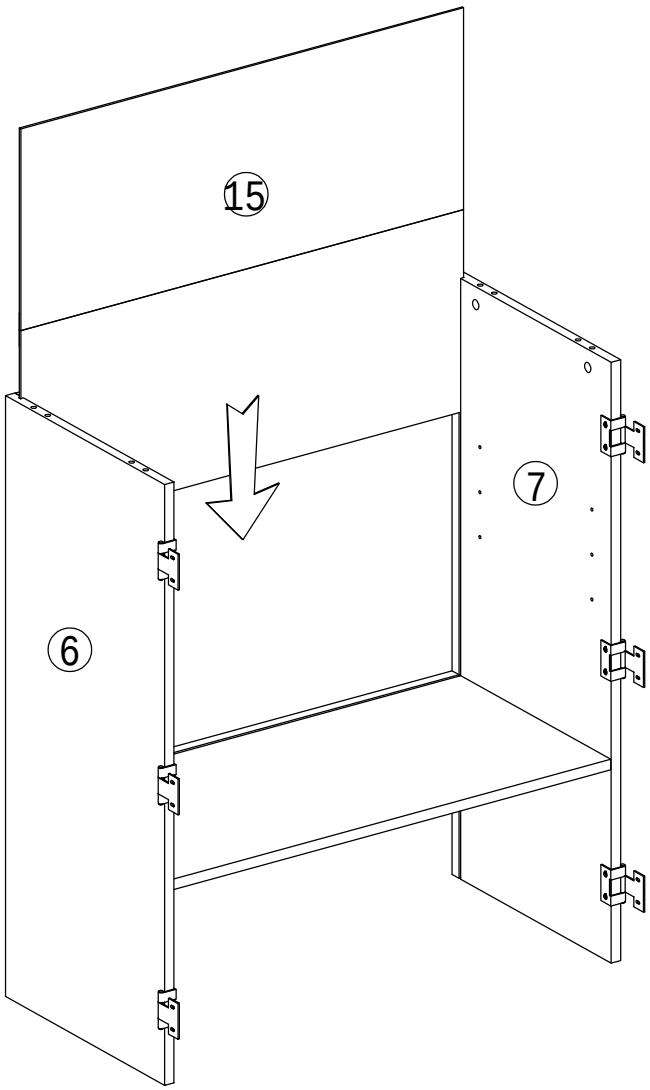


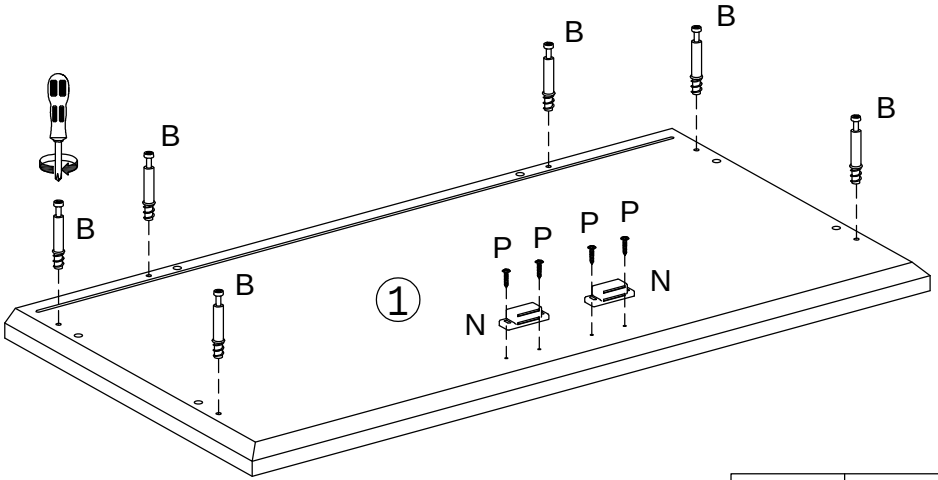

	B × 6PCS
	N × 2PCS
	P × 4PCS


STEP 11

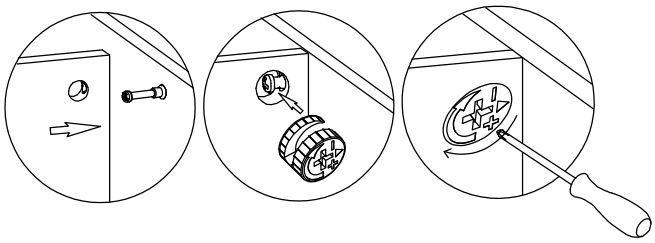

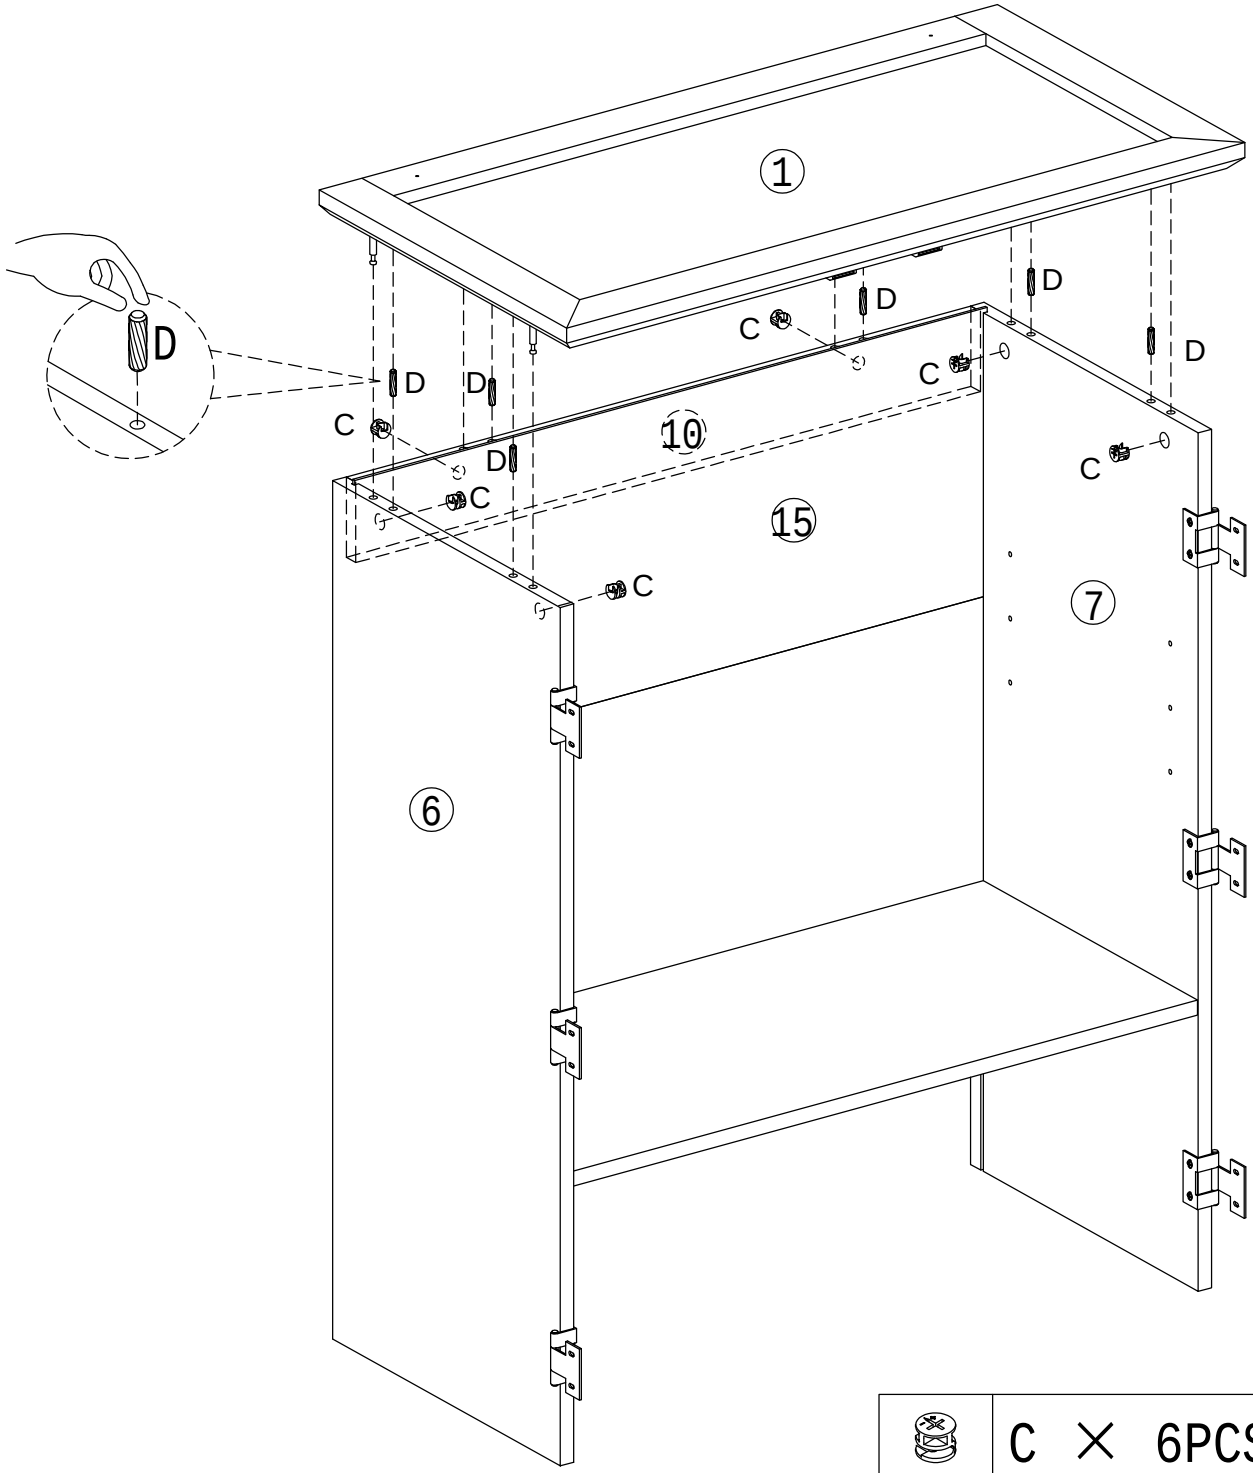

	C × 6PCS
	D × 6PCS


STEP 12

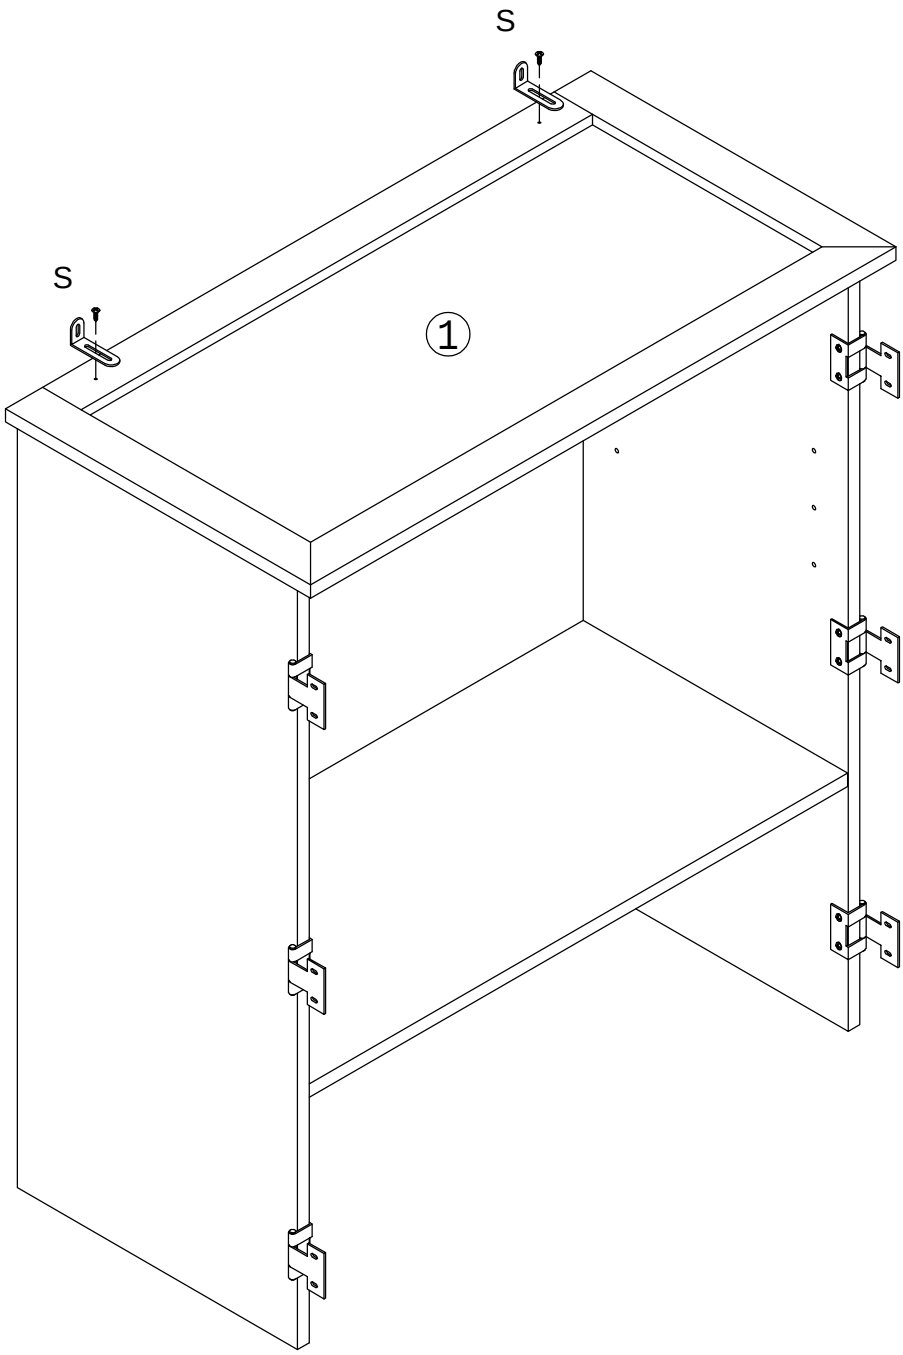





S × 2SET

STEP 13

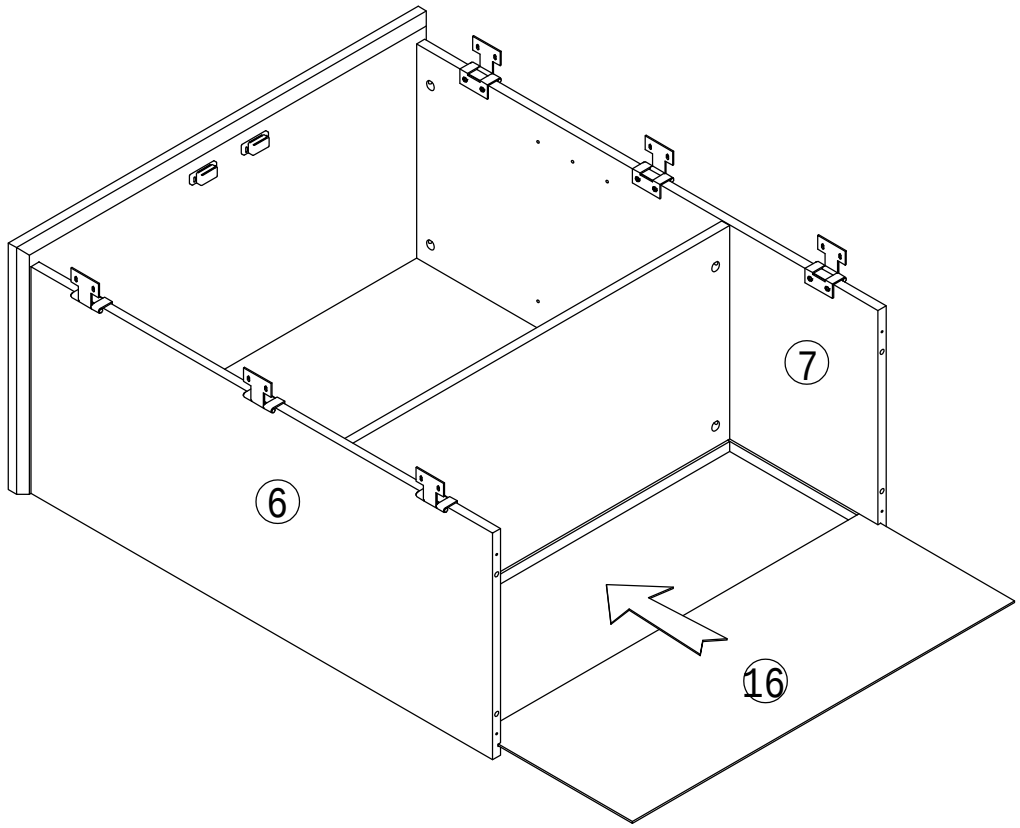

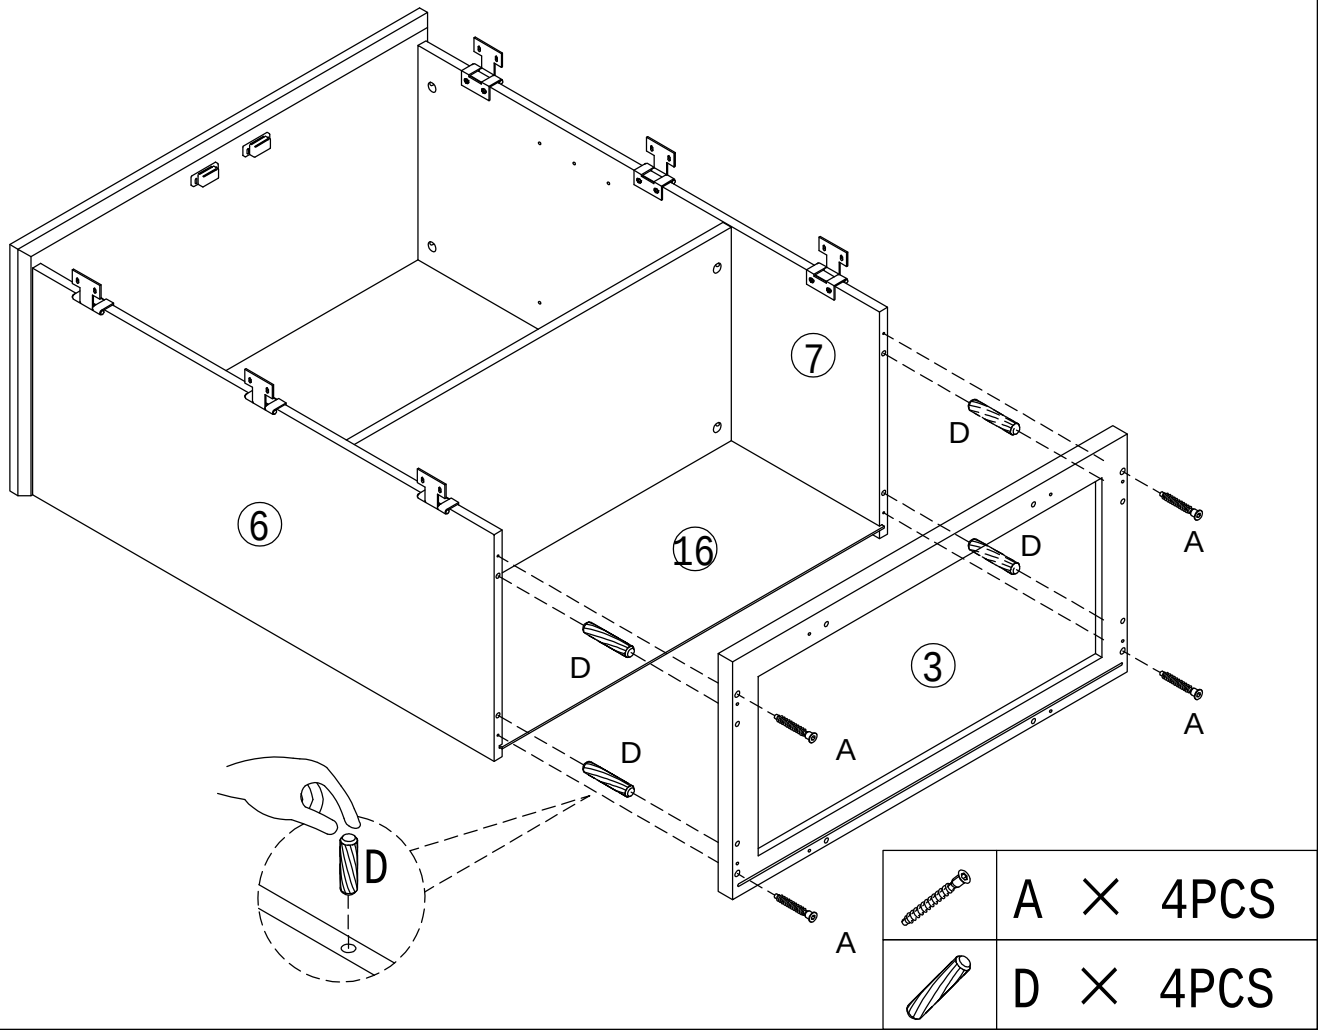



STEP 14

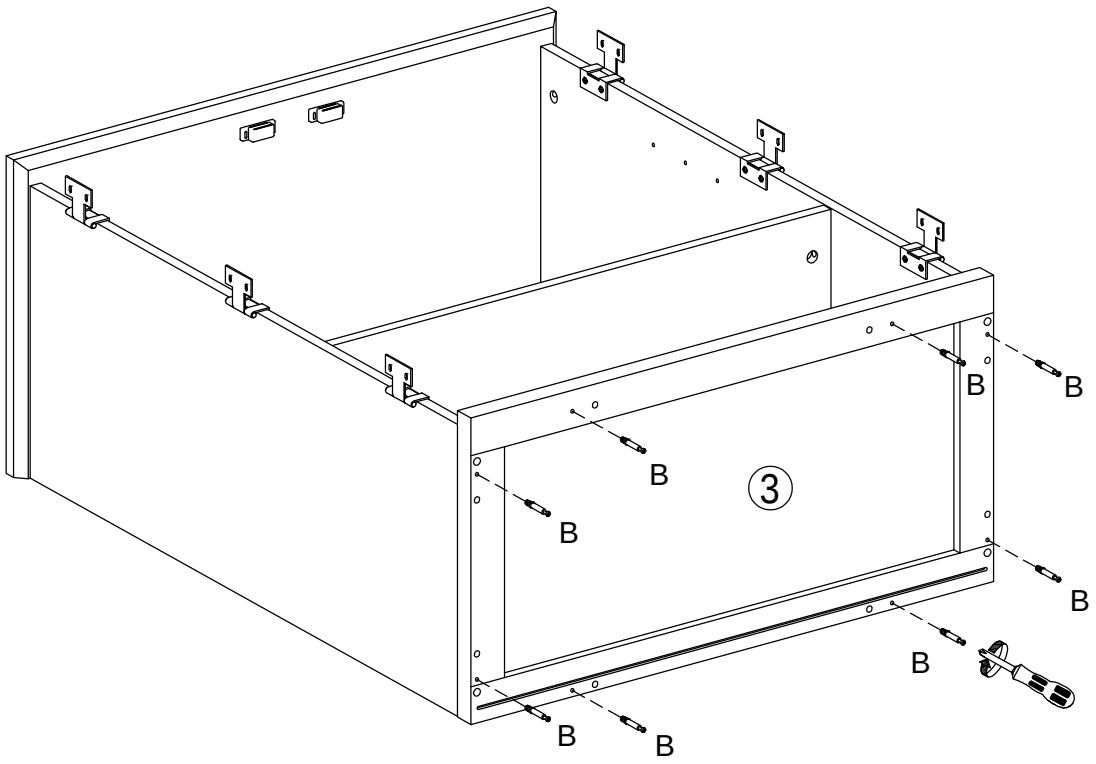

	B × 8PCS


STEP 15

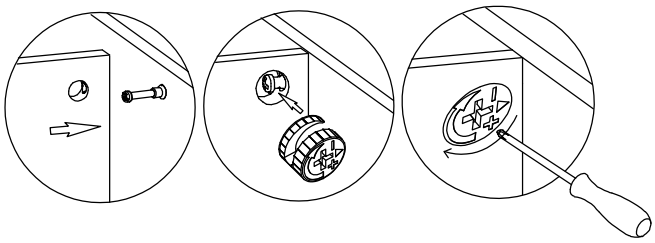


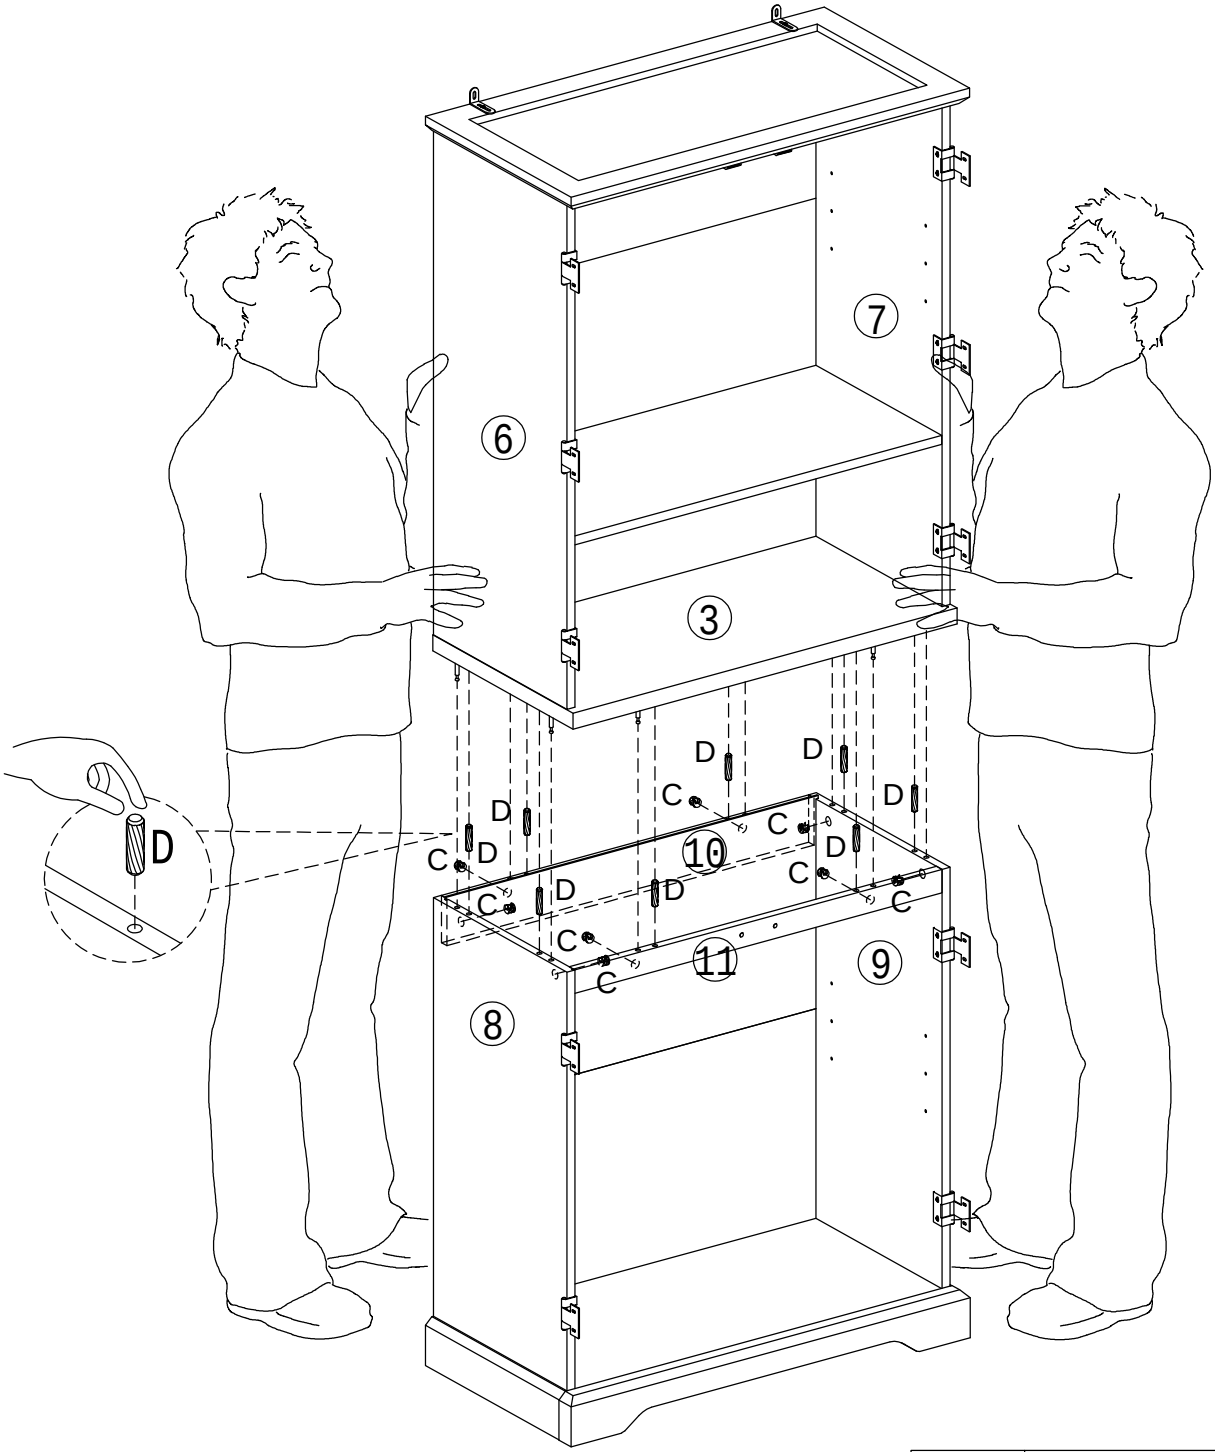



	C × 8PCS
	D × 8PCS


STEP 16

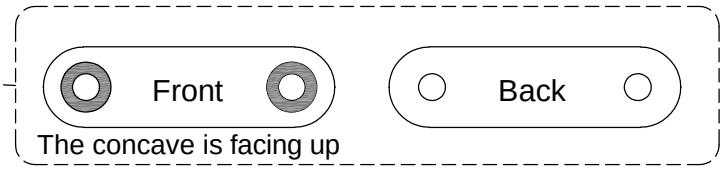

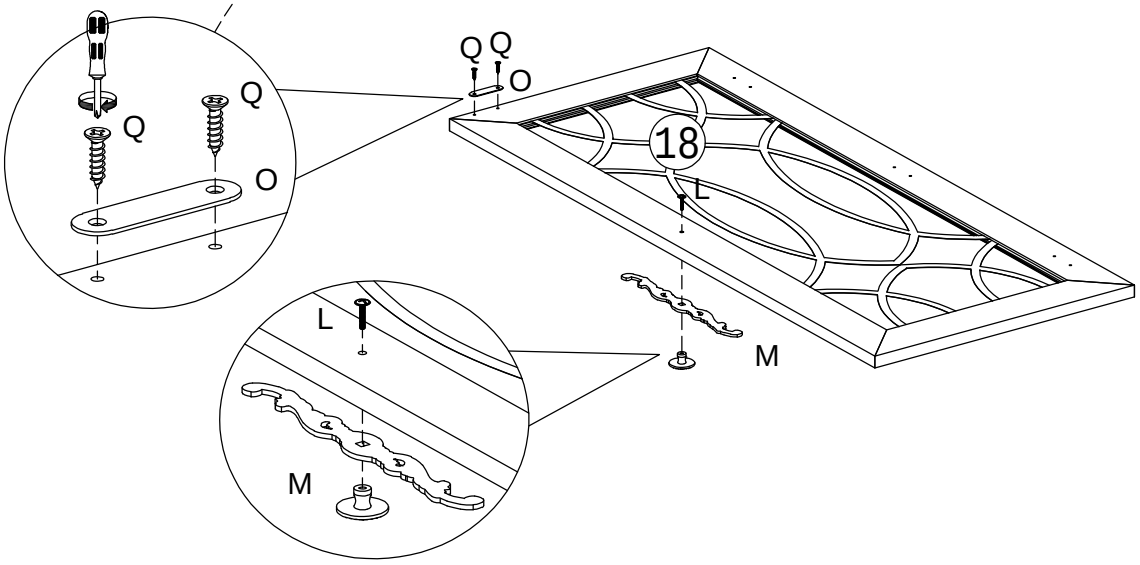

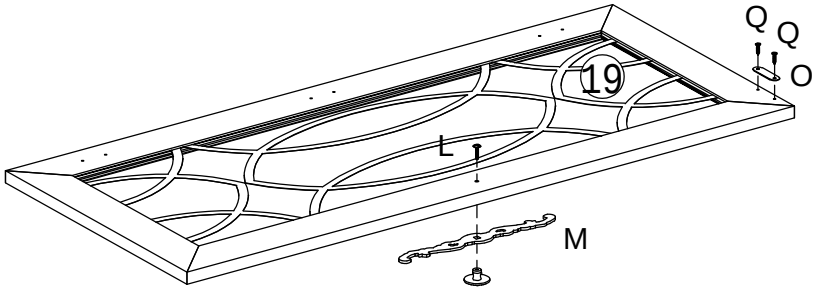


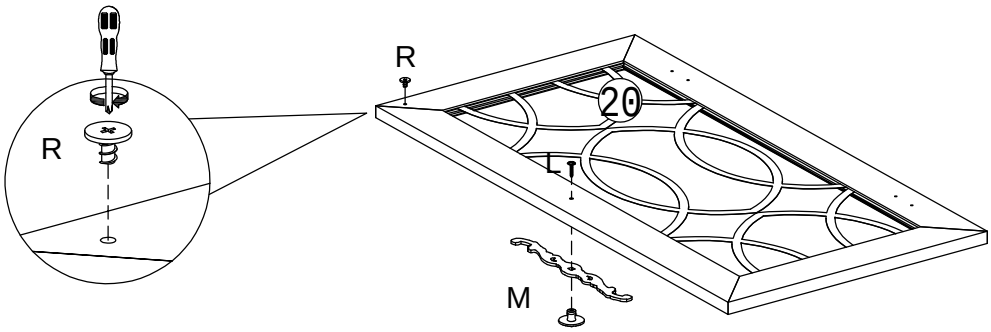


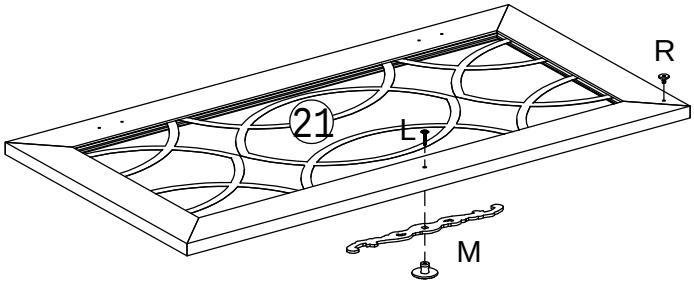

	L × 4PCS
	M × 4SET
	O × 2PCS
	Q × 4PCS
	R × 2PCS


STEP 17

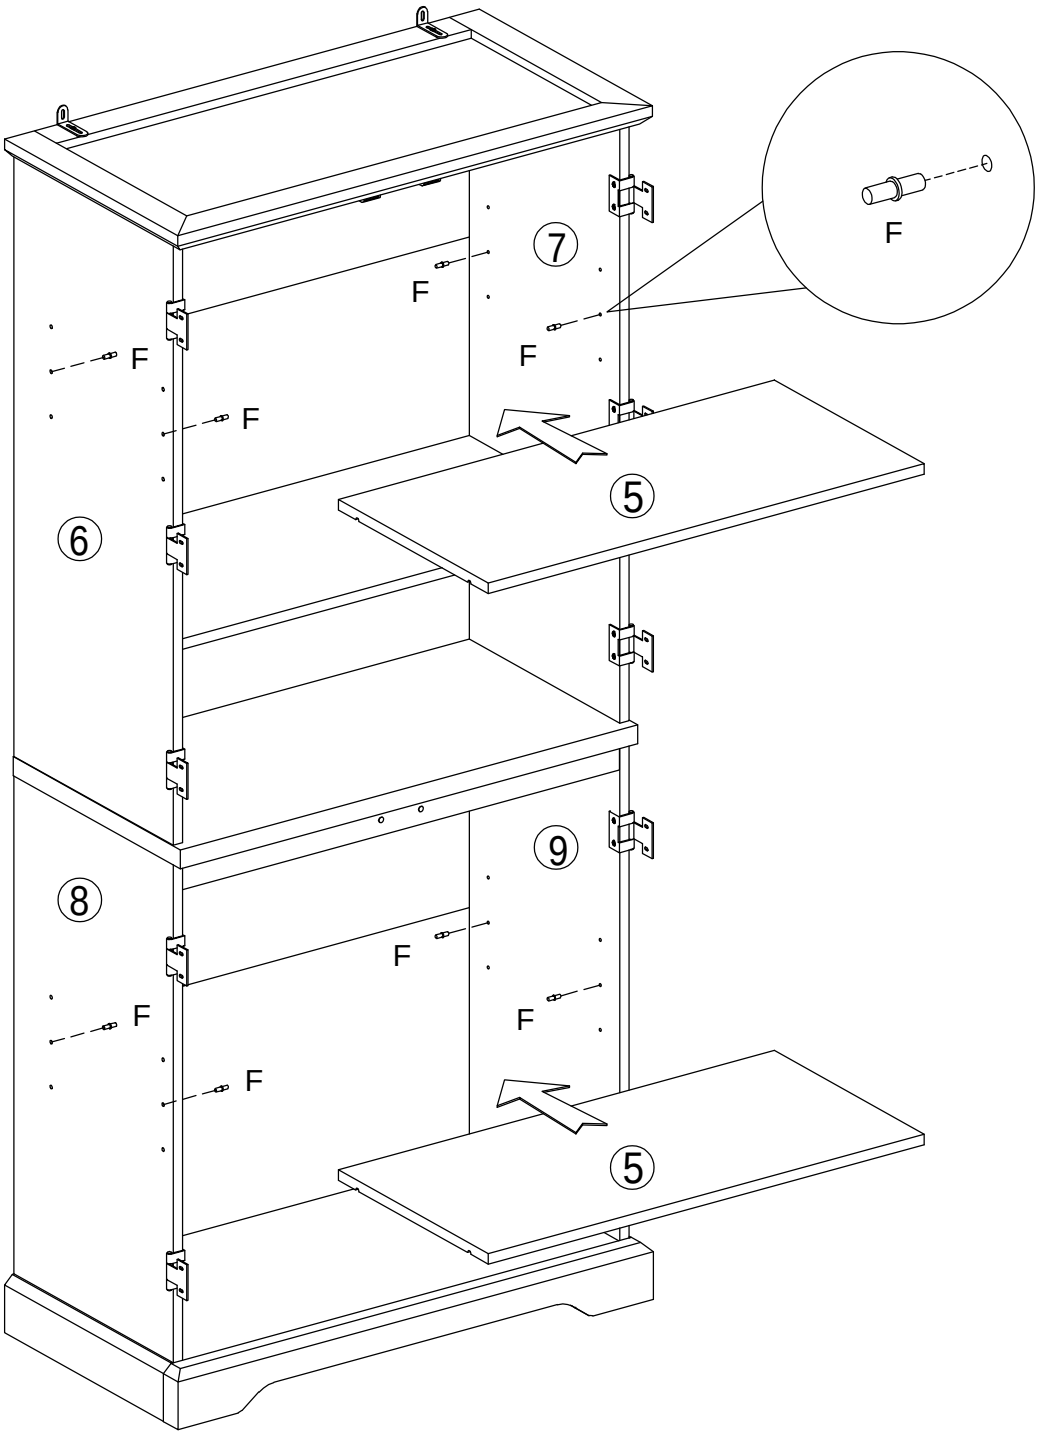




STEP 18


Attention: Befone install the mending wedges,make sure that the cngle of the cahrhet's corner is 90°

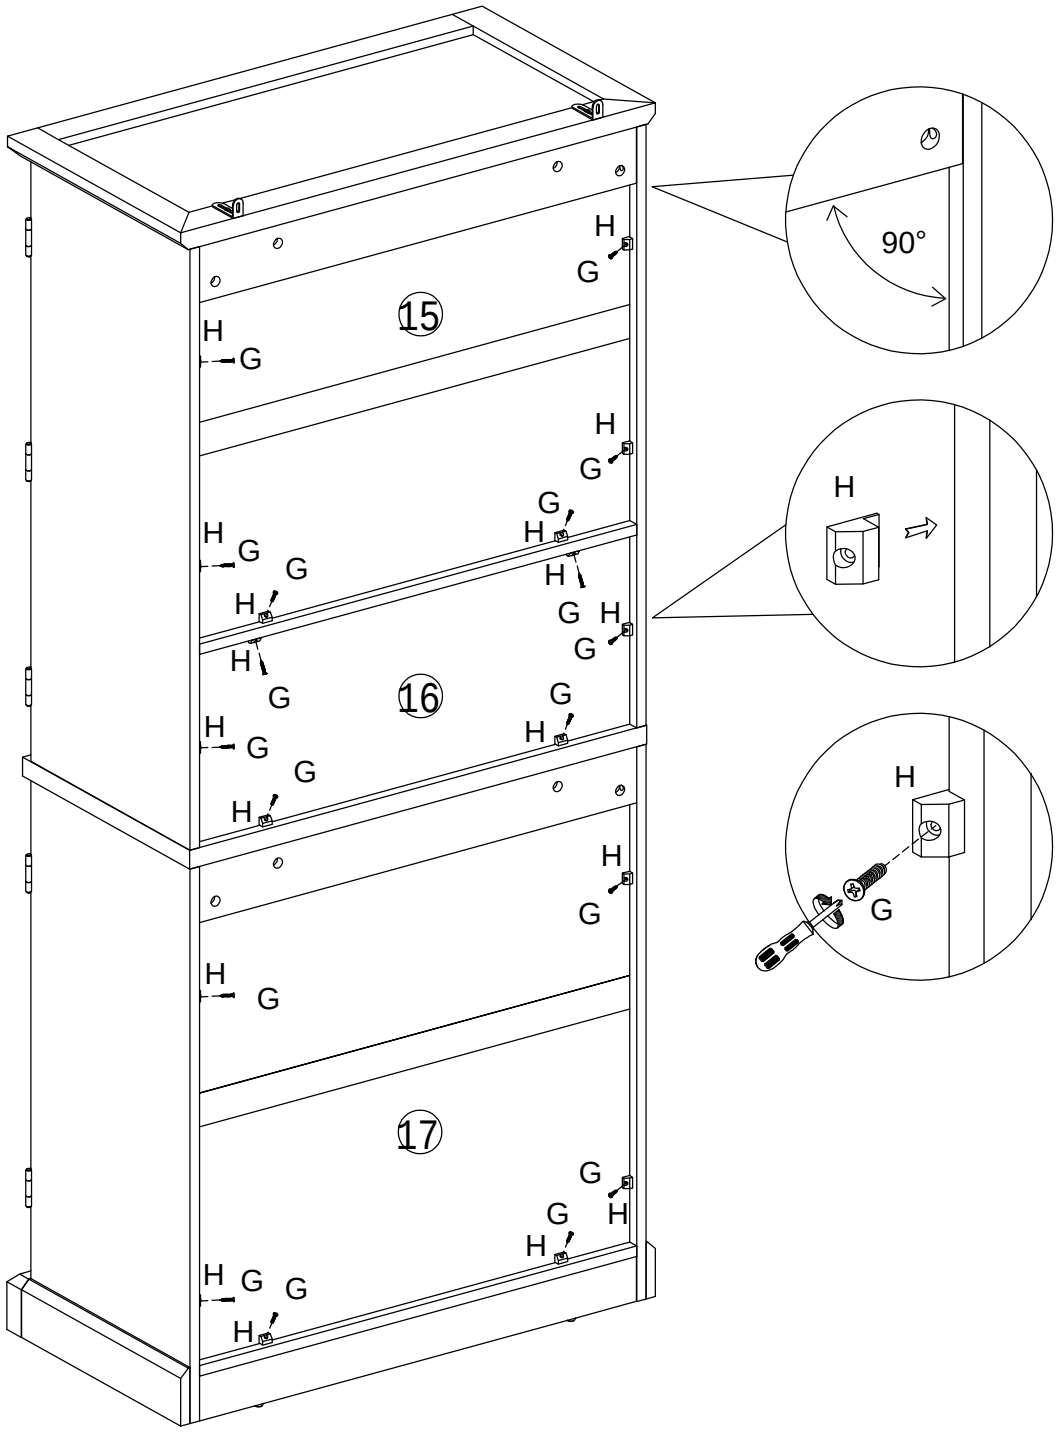


Attention: Please be sure to install these mending wedges to ensure the stability of the cabinet!!!!

	G × 18PCS
	H × 18PCS

STEP 19

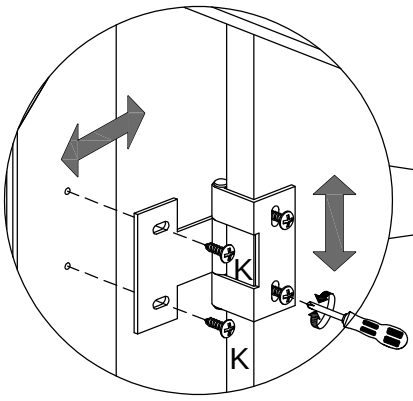


NOTE：
you may need to adjust the hinges in order for your door to function properly.

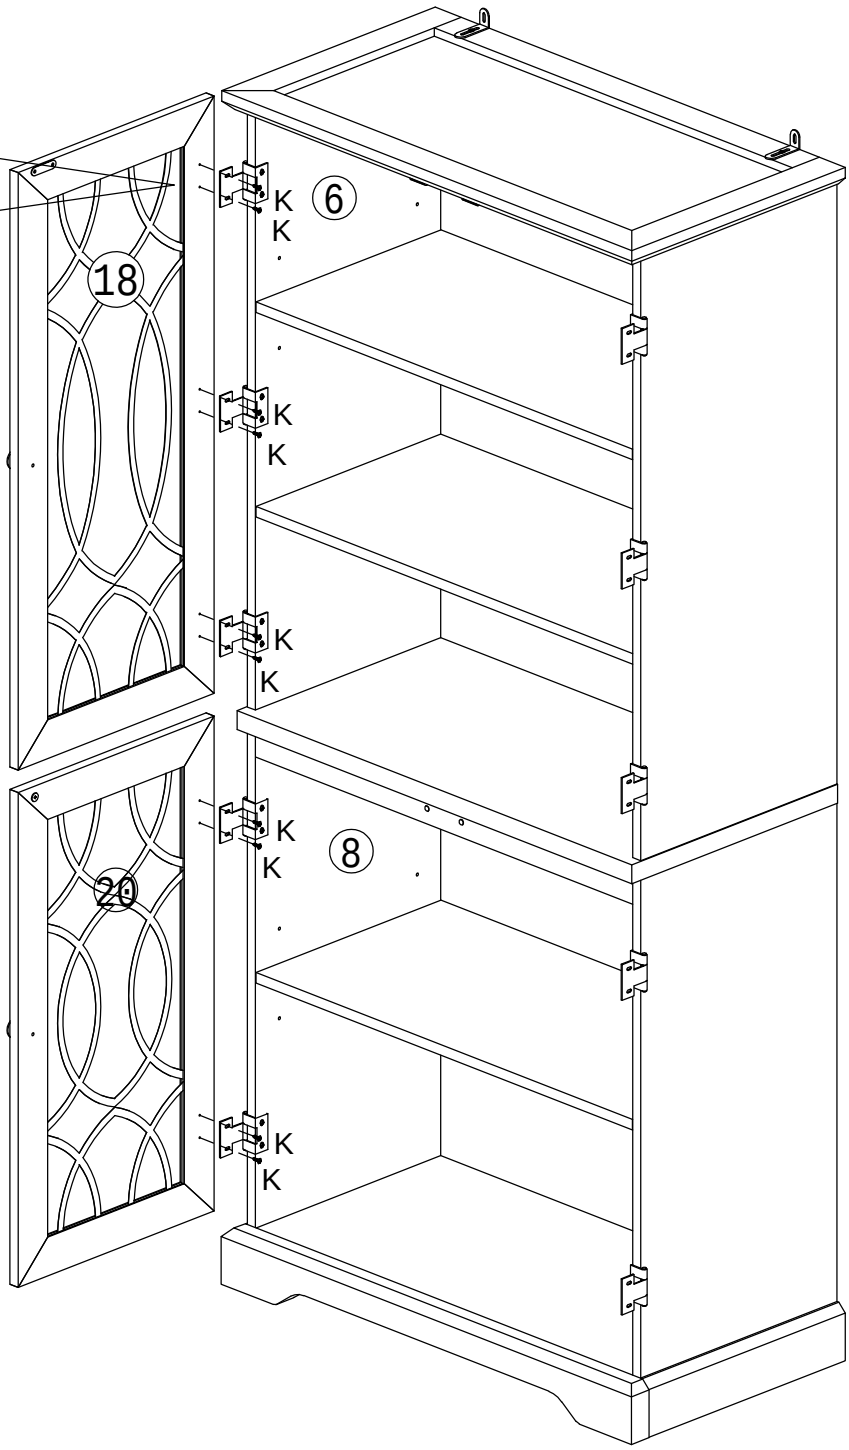

	K × 10PCS


STEP 20

NOTE：
you may need to adjust the hinges in order for your door to function properly.

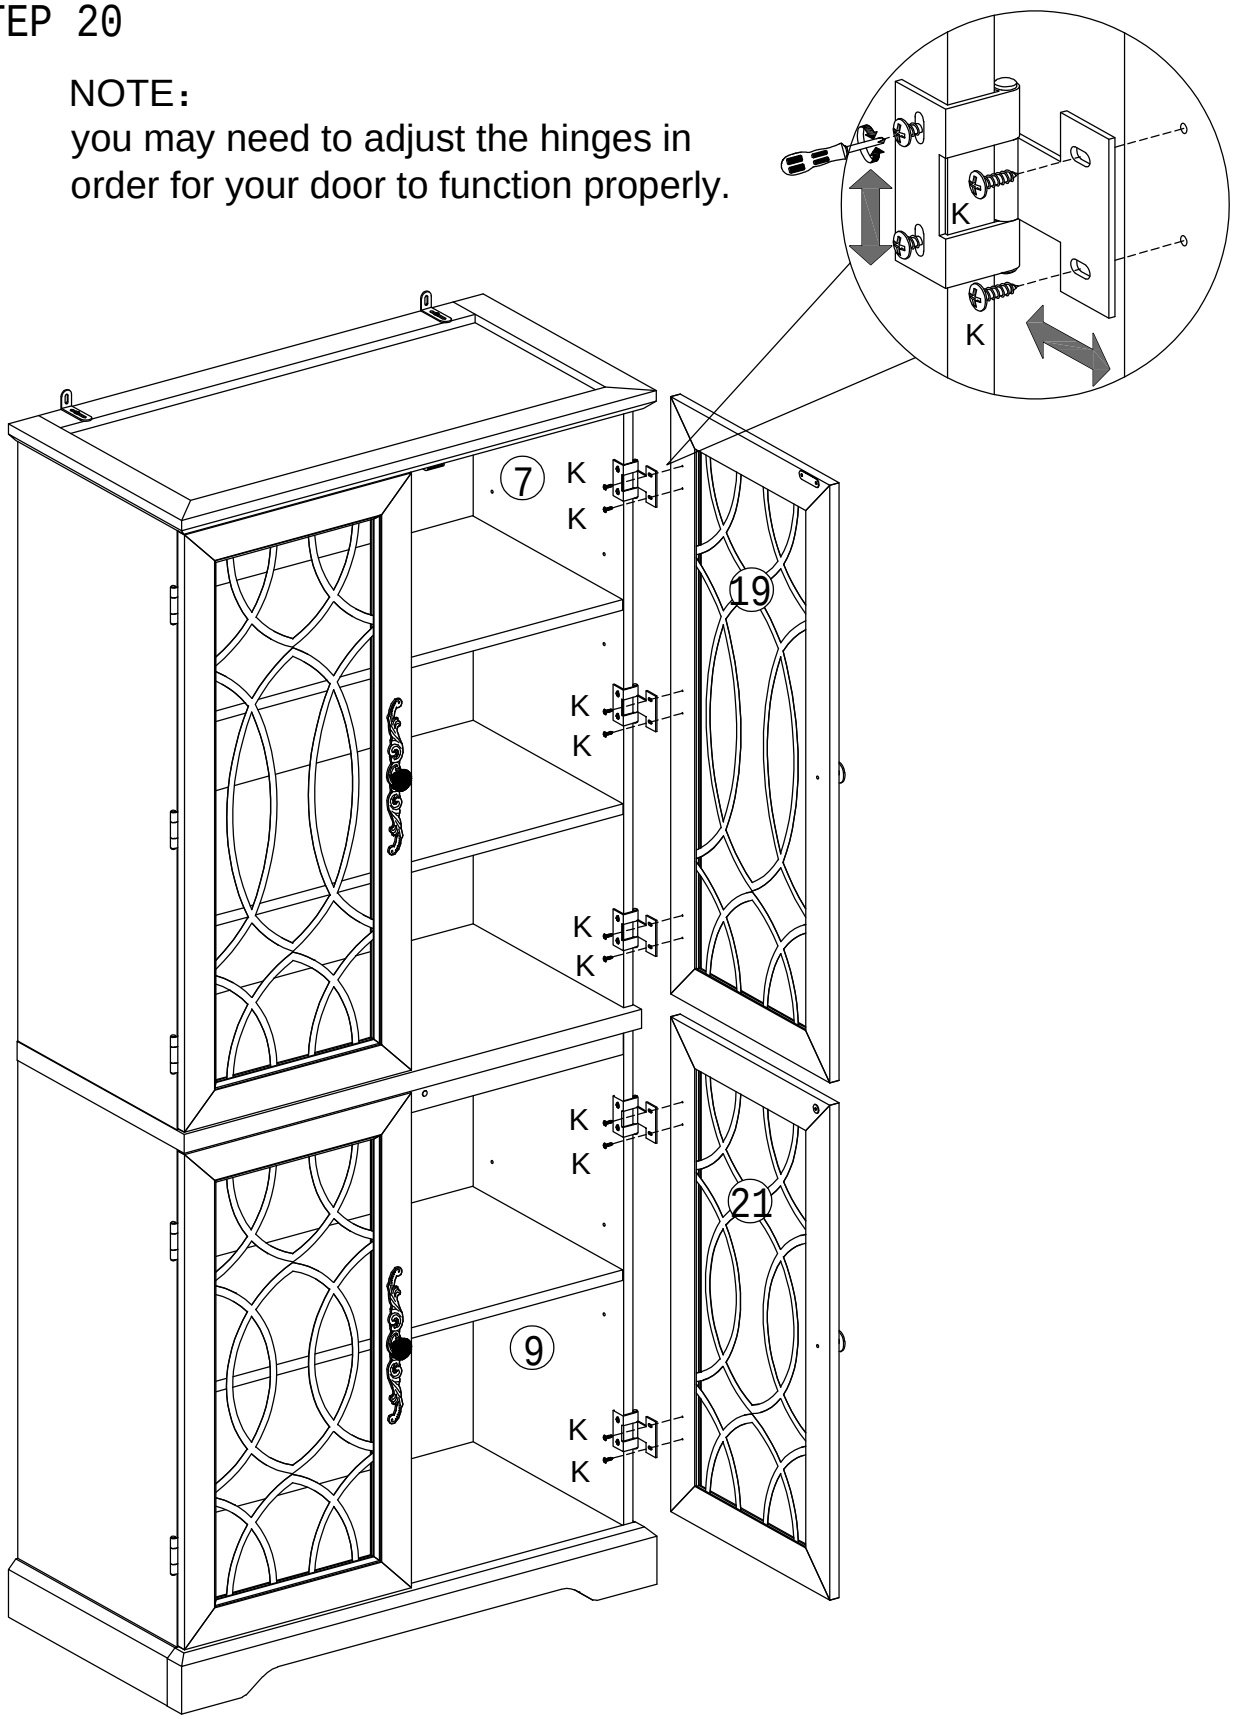

	K × 10PCS


STEP 21

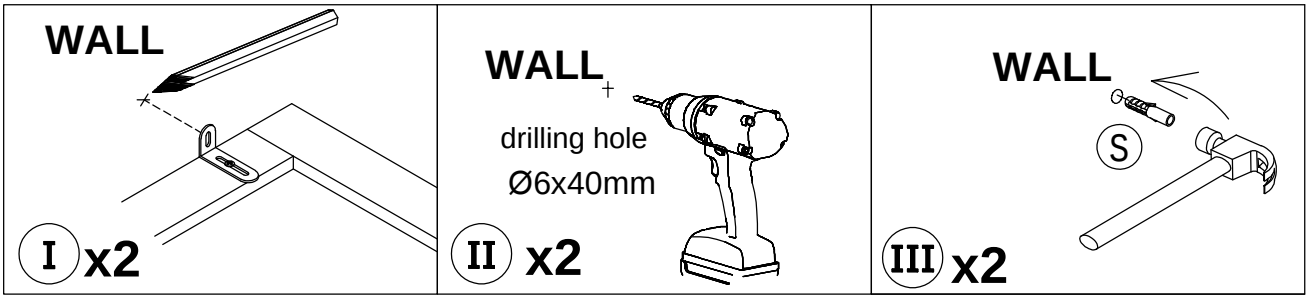

Mark the drill positions on the wall with a pencil.

Drill the holes on the marked positions.

Insert the wall anchors into the drilled holes.

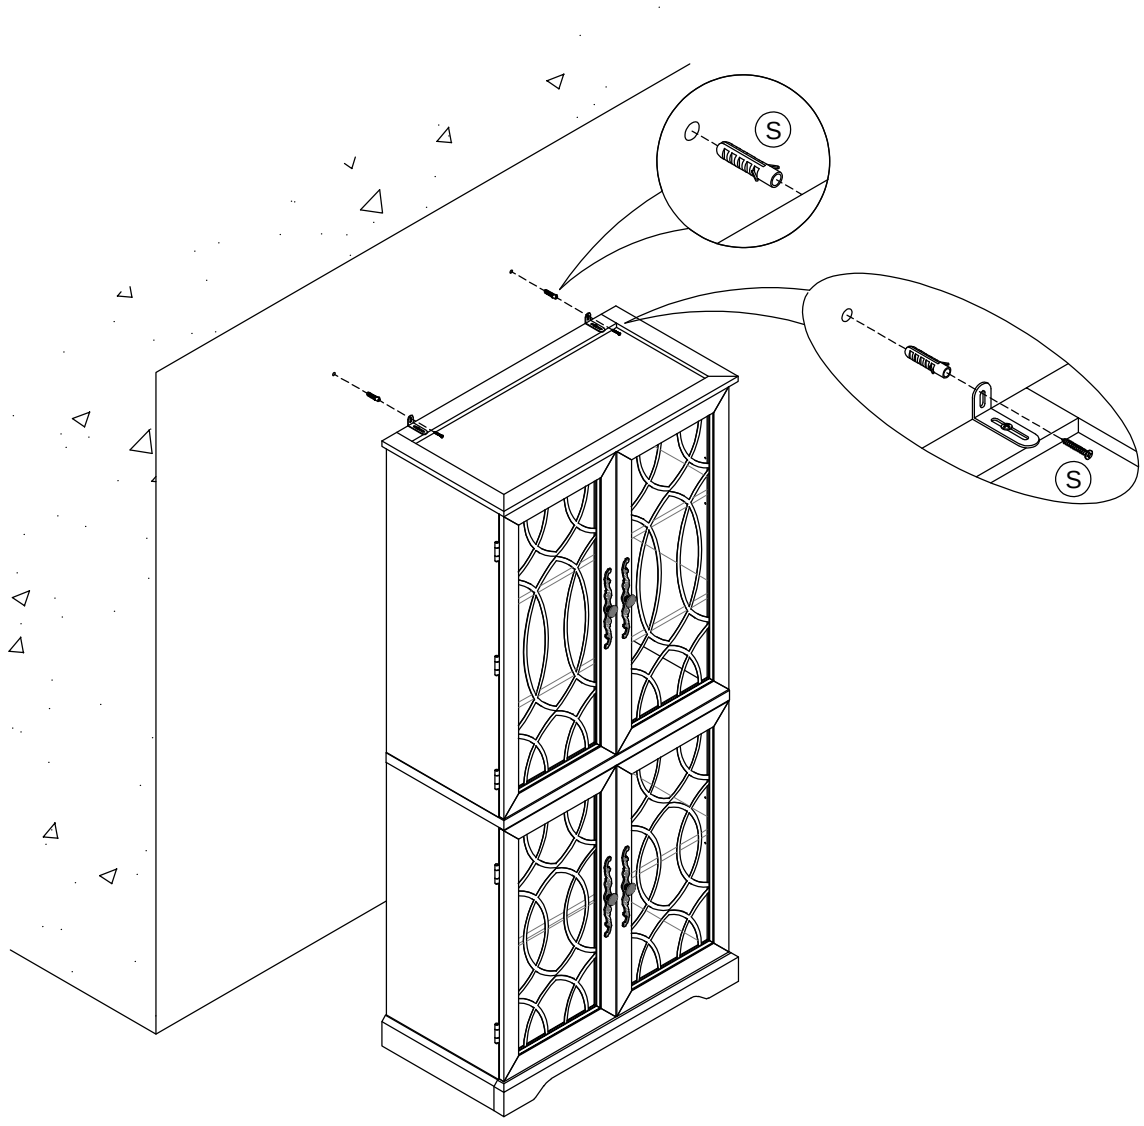


Mark the drill positions on the wall with a pencil.

Drill the holes on the marked position.

Insert the wall anchors (S) into the drilled holes.

Fixed the anti-tip iron sheet to the wall with screw (S).



S × 2SET

STEP 22

