


2941 Assembly Instructions


Scroll Frame Assembly

- 1) Insert 4 Carriage Bolts into small holes in the end of the spreader and loosely secure with washers and wing nuts.
- 2) Slip your fabric into one of the slotted dowels. Place one end of the dowel into the large hole of one of the Spreaders. Move the spreader up to the edge of the fabric. Repeat on the opposite side then repeat with the other dowel at the other end of the Spreader Rail. Roll the bottom edge of the fabric until it is slightly taut. Tighten the Wing Nuts on the bottom of the Spreaders. Turn the top dowel until the fabric is taut. Tighten the Wing Nuts.

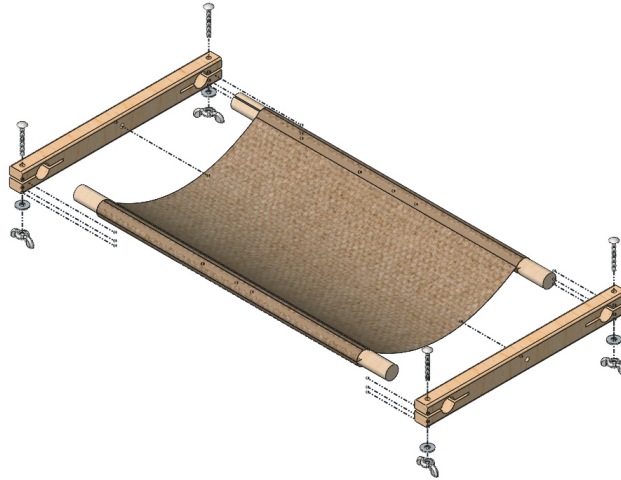

Lap Stand Assembly

- 1) Screw the bolt in the bottom of the Upright into the **TOP** of the Seat Board. (**The top of the Seat Board has rounded edges.**) **DO NOT OVERTIGHTEN.**
- 2) Attach the Scroll Frame Assembly to the Extension using a Carriage Bolt and a Three Prong Knob.
- 3) Attach the Extension to the Upright using 2 Carriage Bolts and 2 Three Prong Knobs.

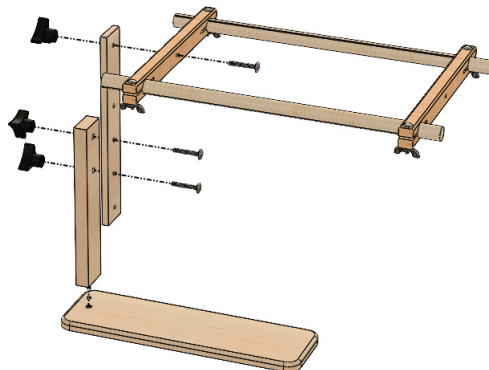

Seat Board
1 ea.



Upright
1 ea.



Extension
1 ea.



Spreader
2 ea.



Dowel
2 ea.



Three Prong Knob
3 ea.



Carriage Bolt
7 ea.



Wing Nut
4 ea.



Washer
4 ea.