

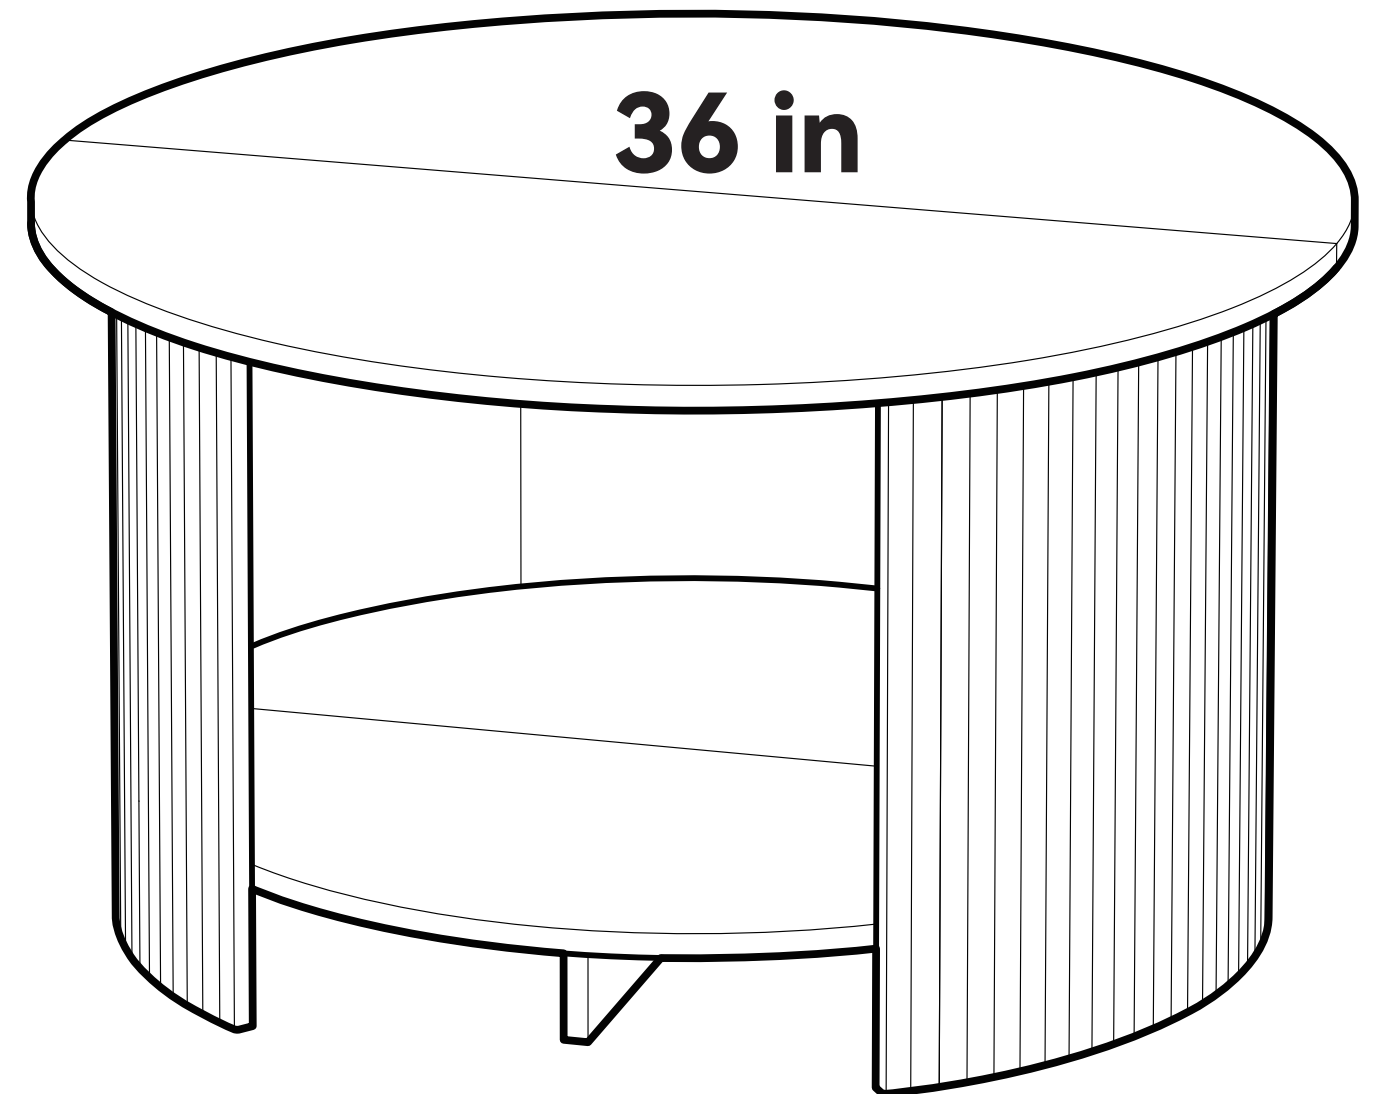


Get in Touch?



ASSEMBLY INSTRUCTIONS

Model: ON-LT05

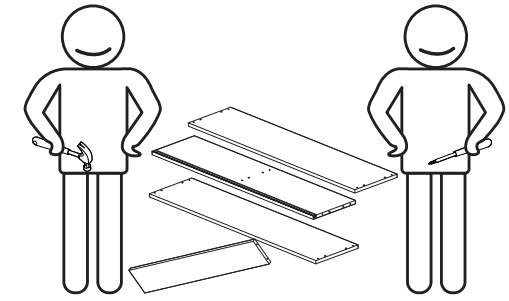


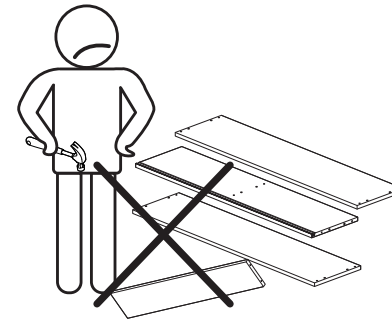


We recommend at least 2 people for the assembly.

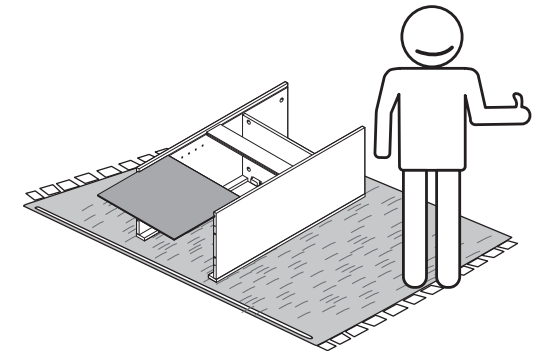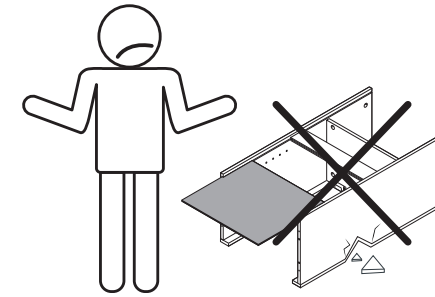


To prevent any damage during assembly, place a mat under the pieces.

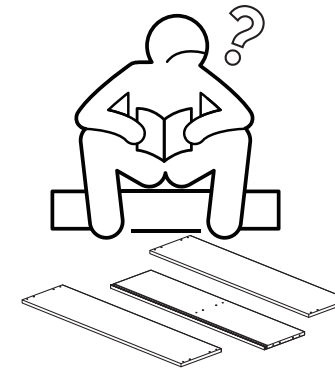


support@servicetimely.com

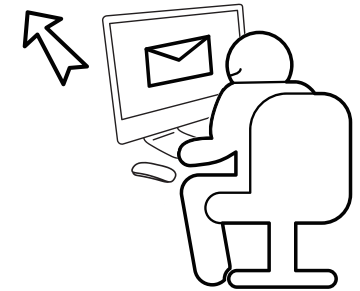


PARTS DIAGRAM

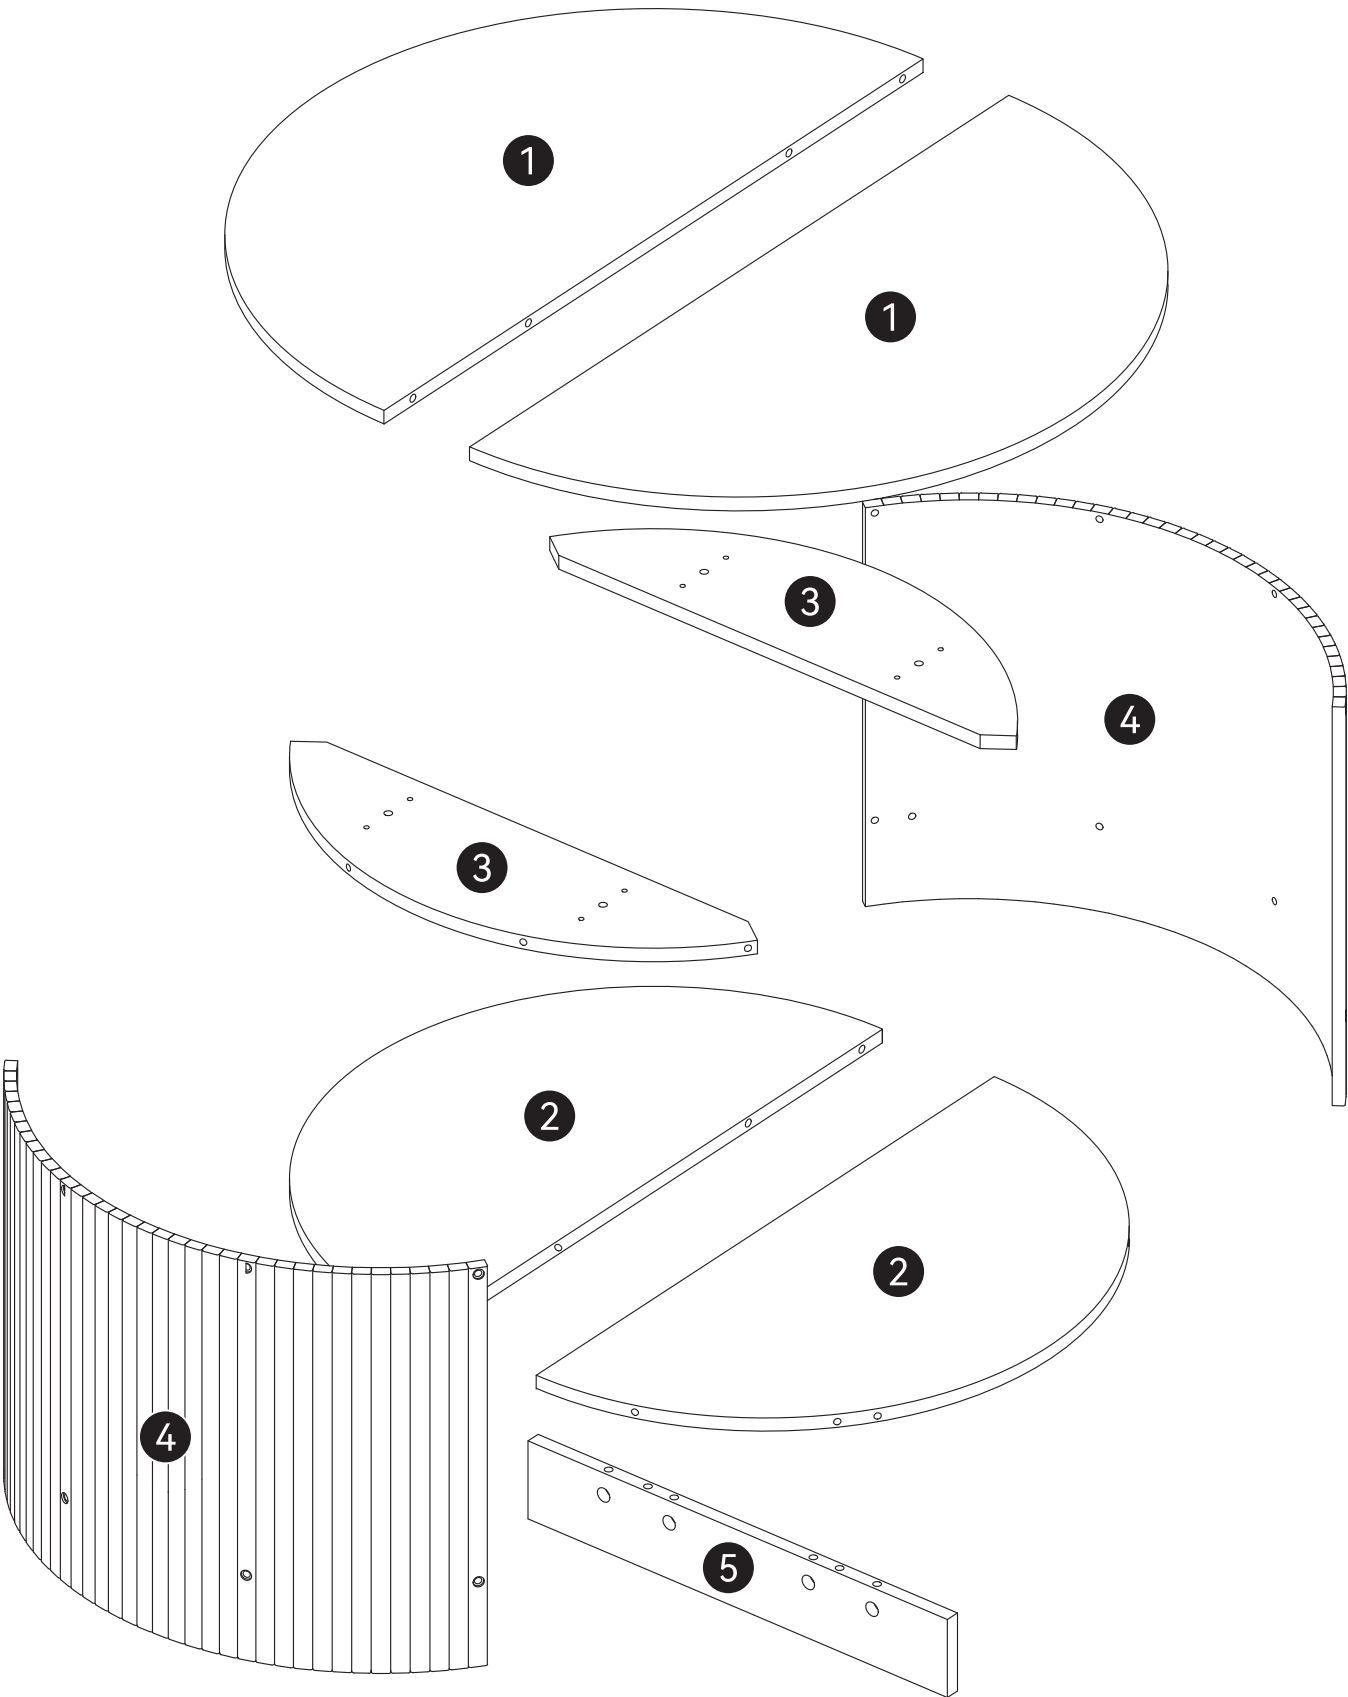

PARTS LIST

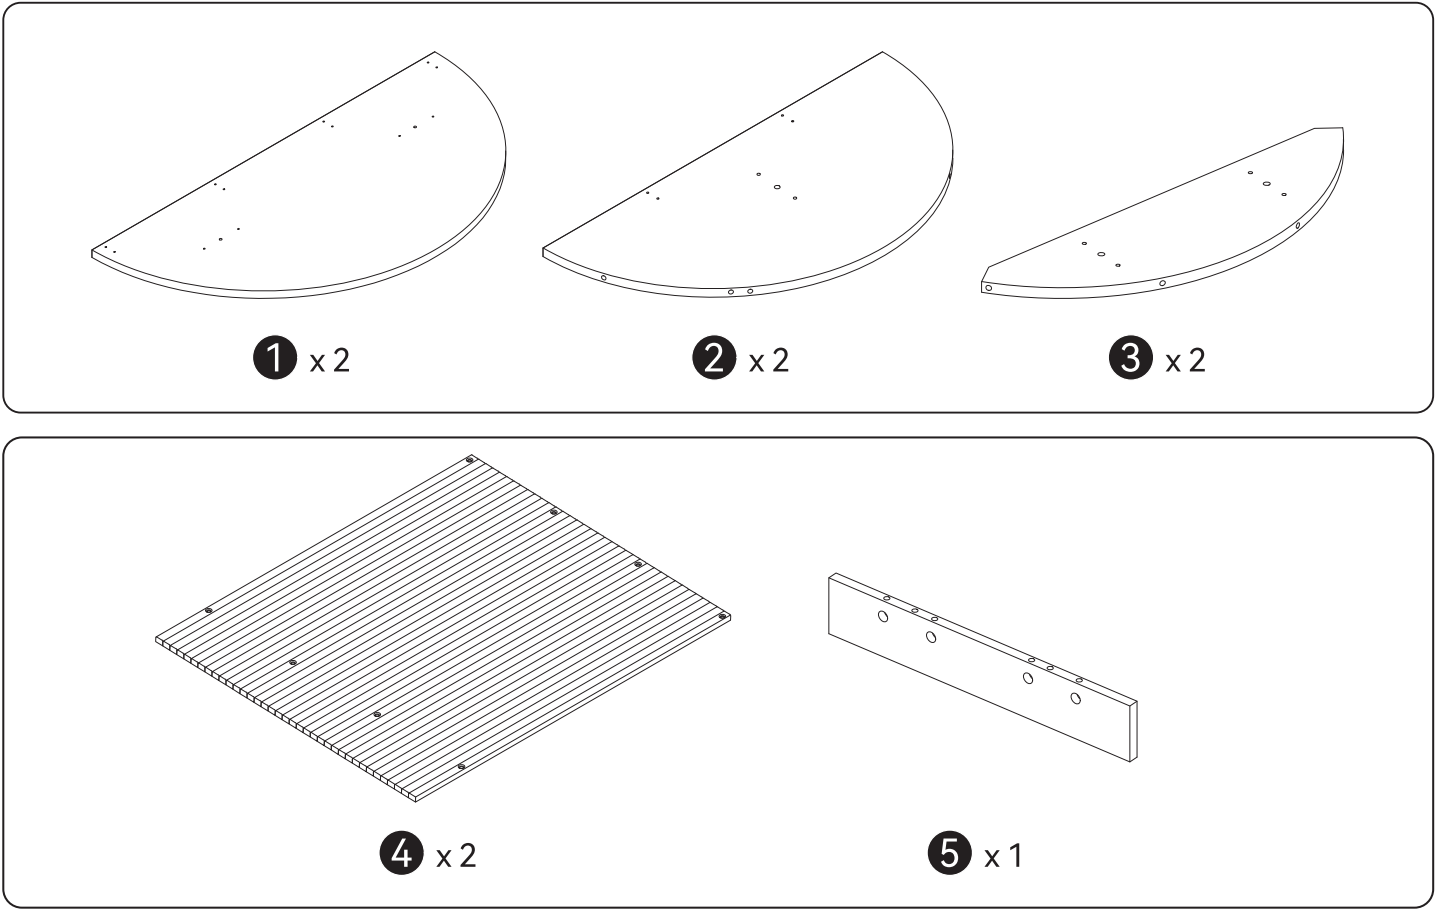


HARDWARES

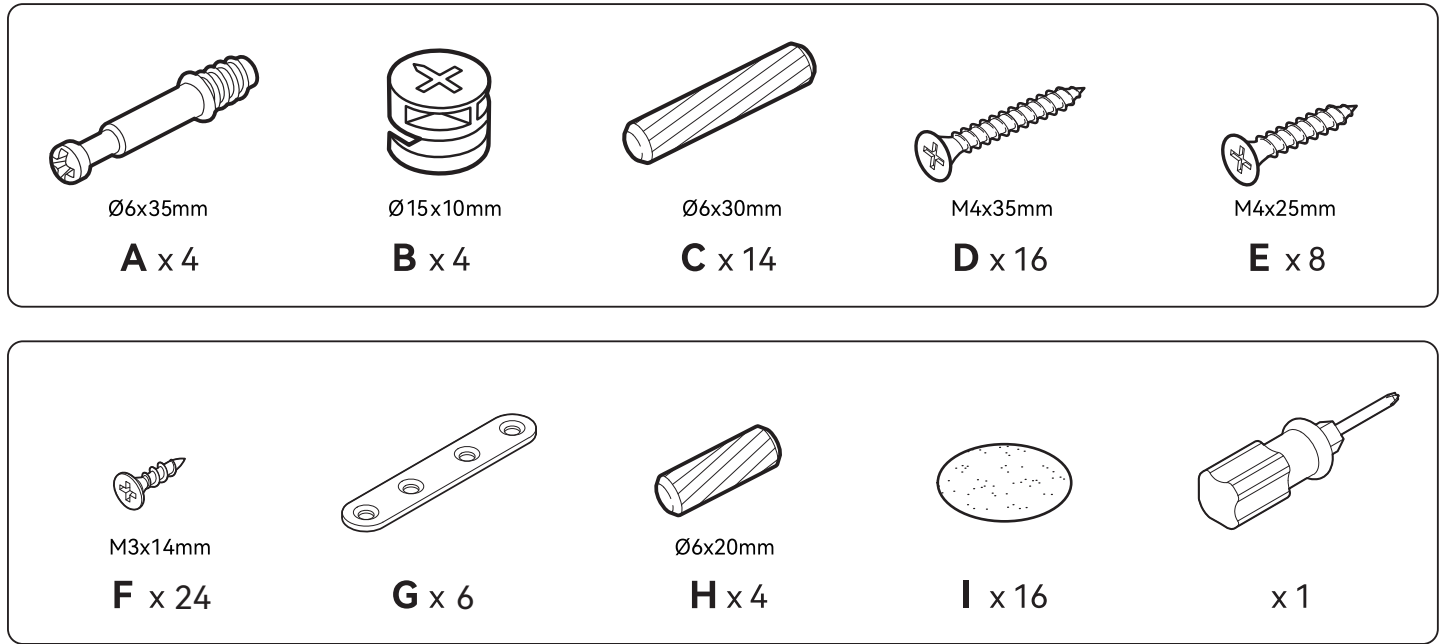


SPARE PARTS

 The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

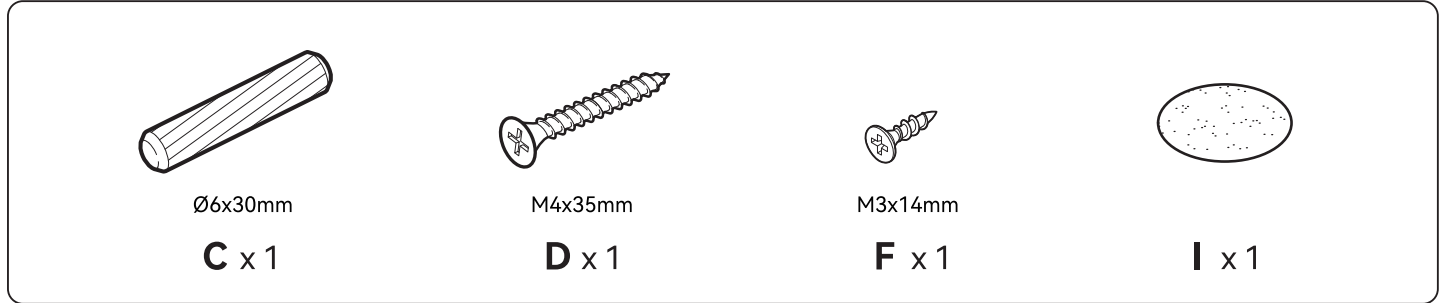



CAM LOCK FASTEN SYSTEM

 Insert the cam bolt into the hole, then insert the cam lock and tighten.


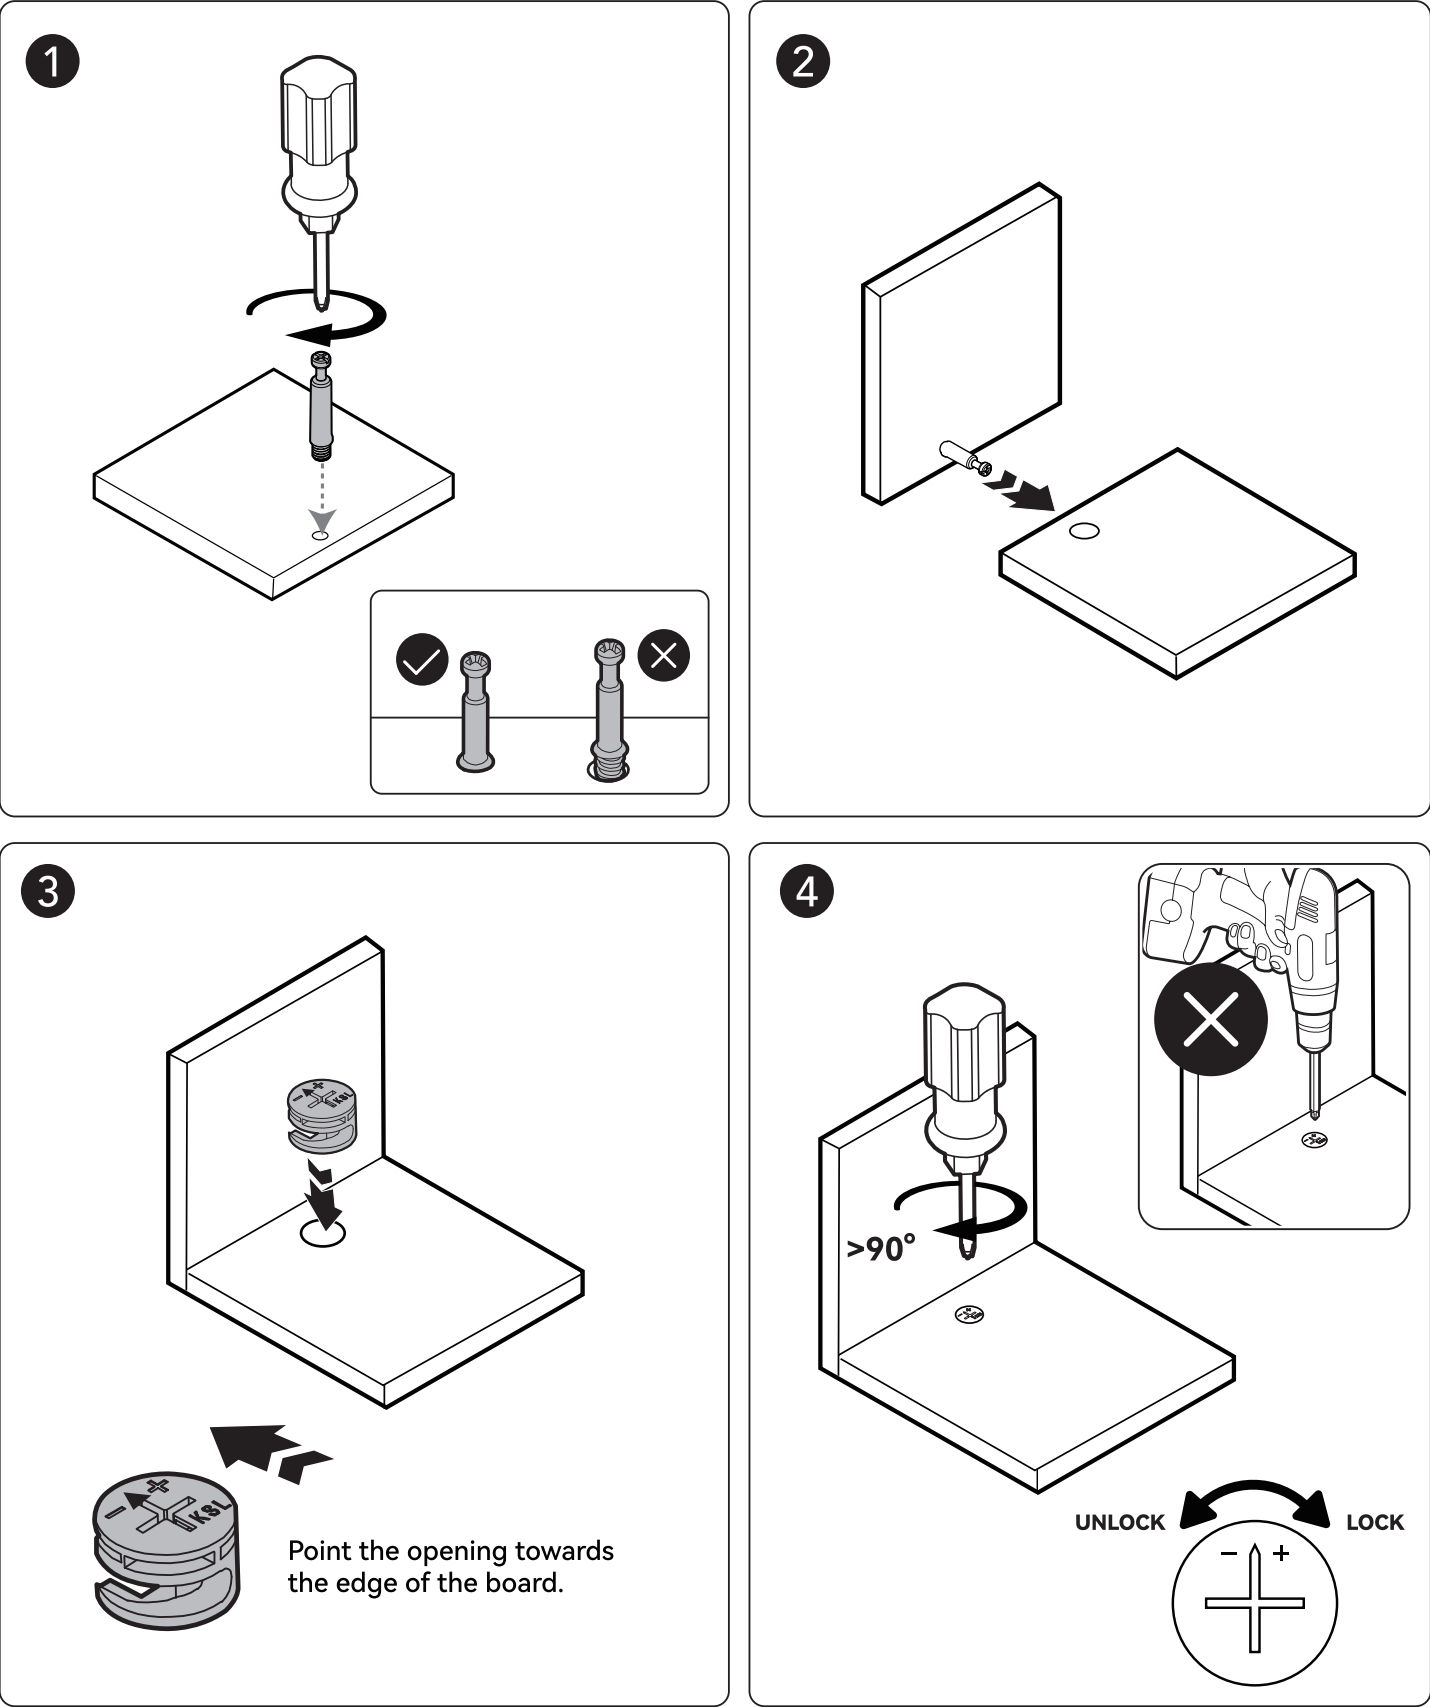


ASSEMBLY




1

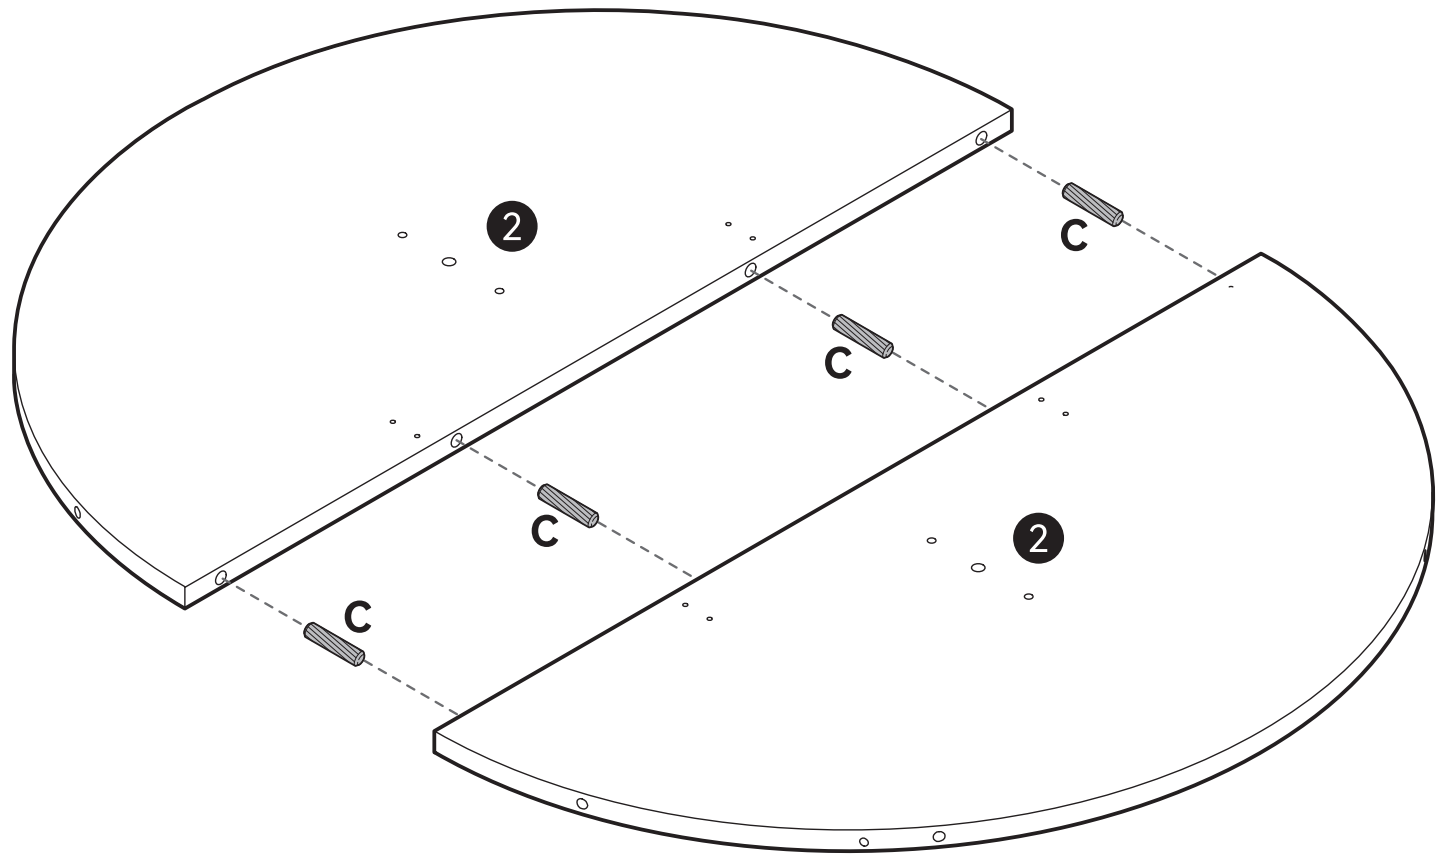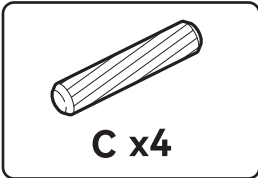




2

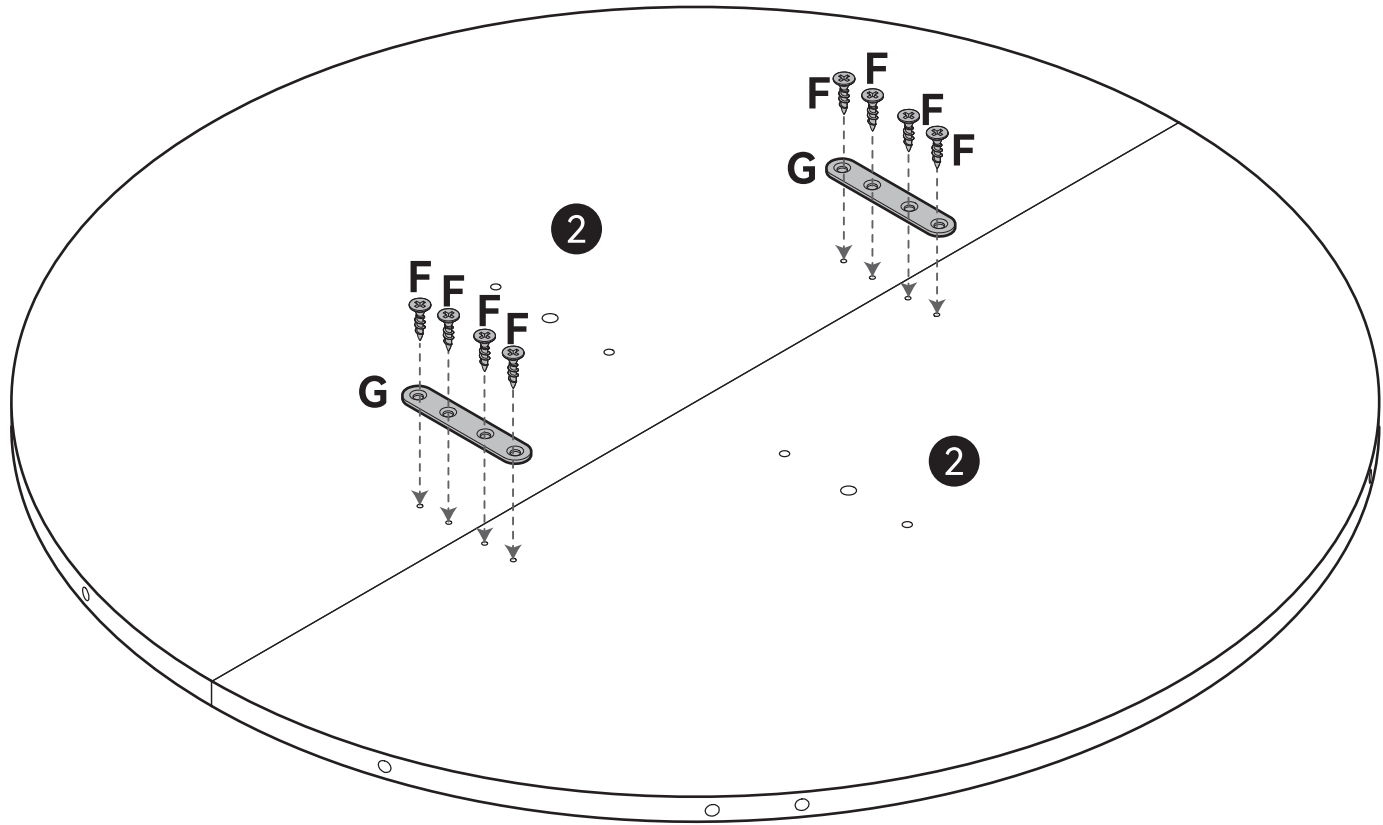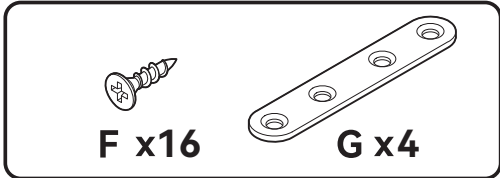



3

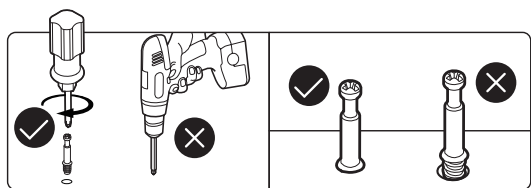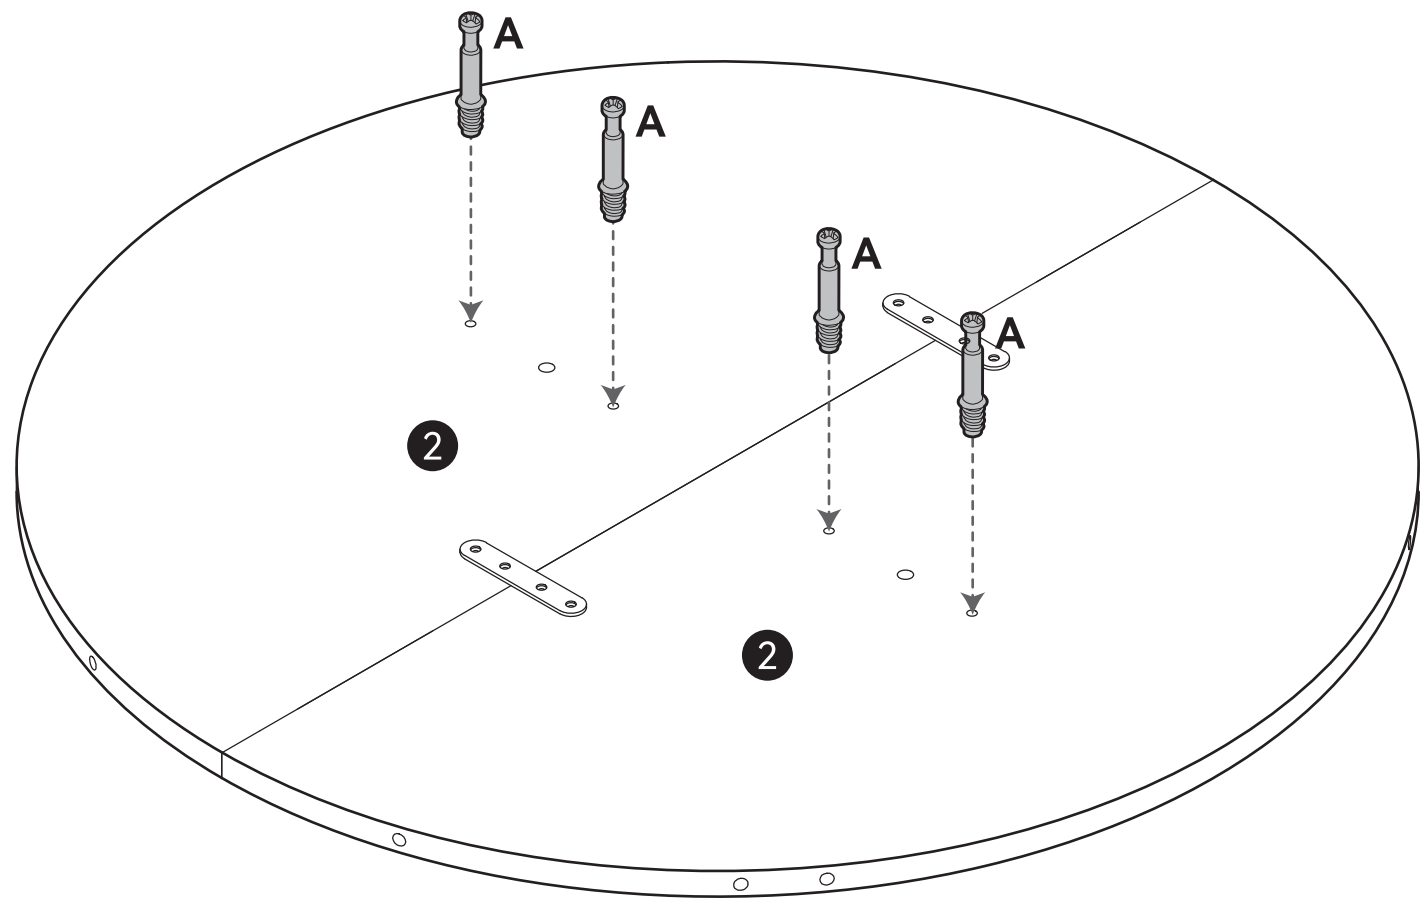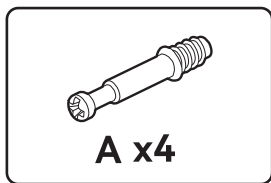



4

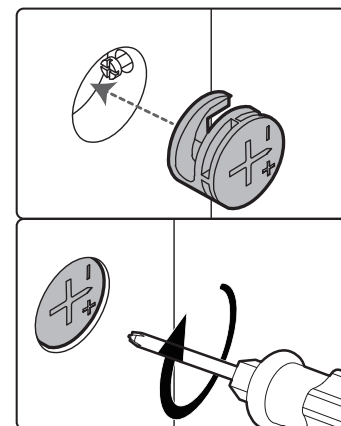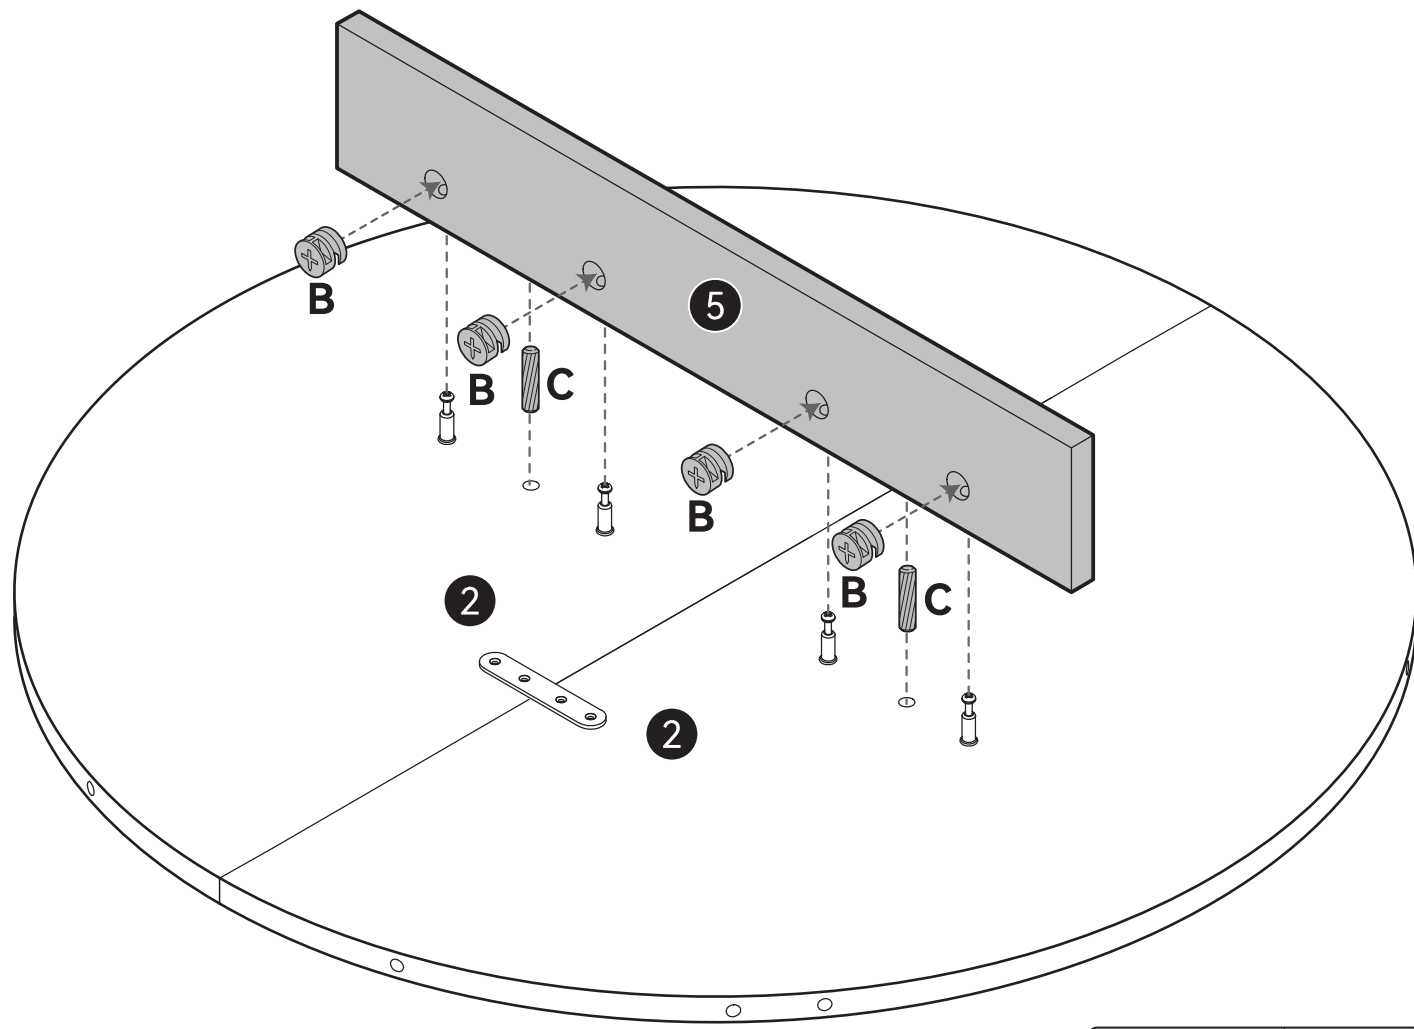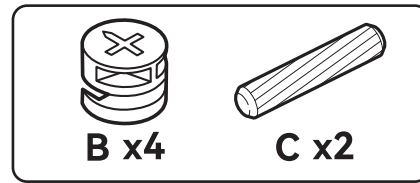



5

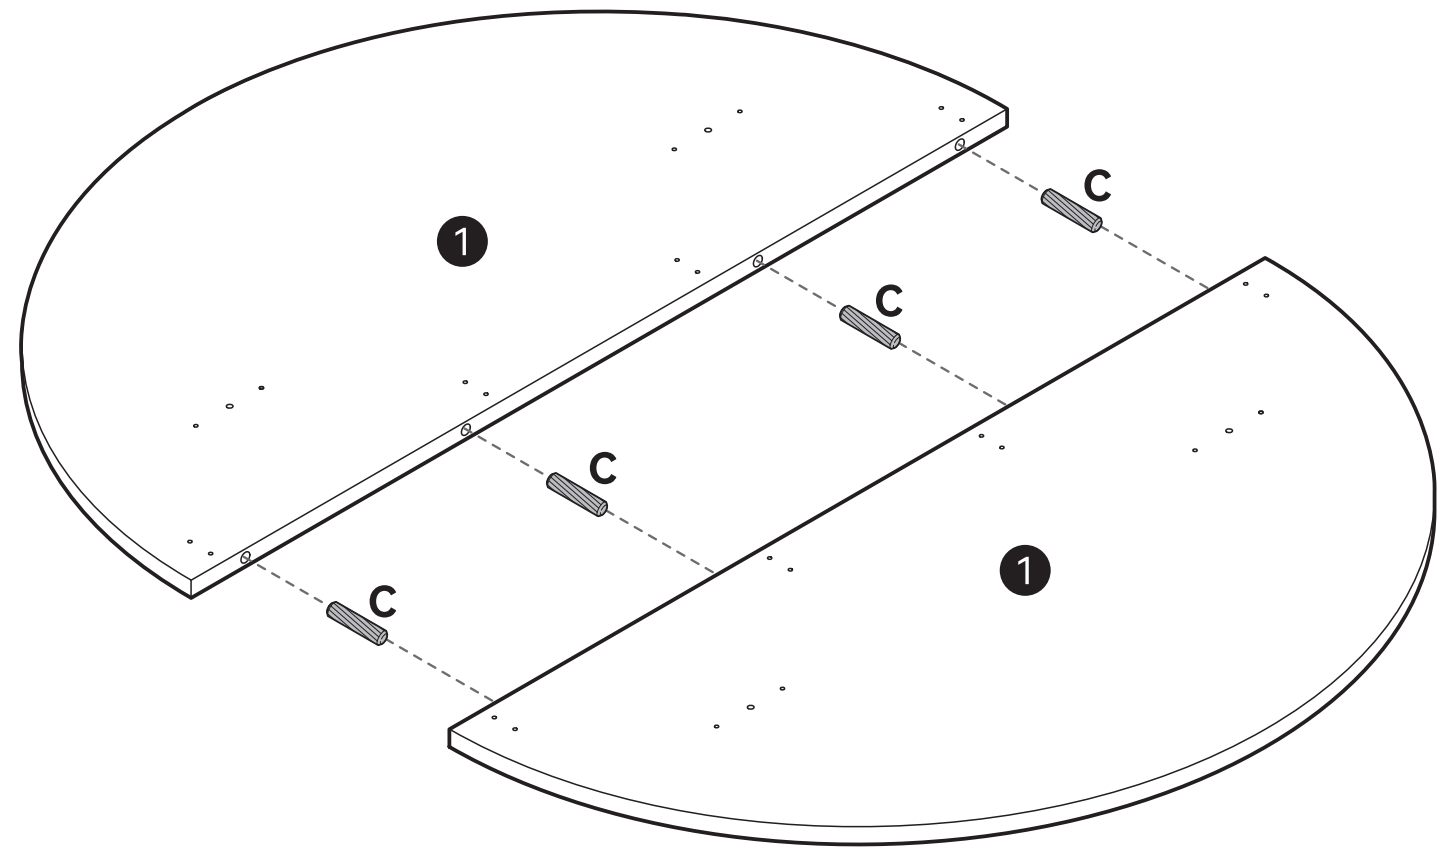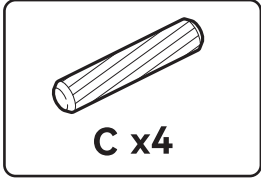



6

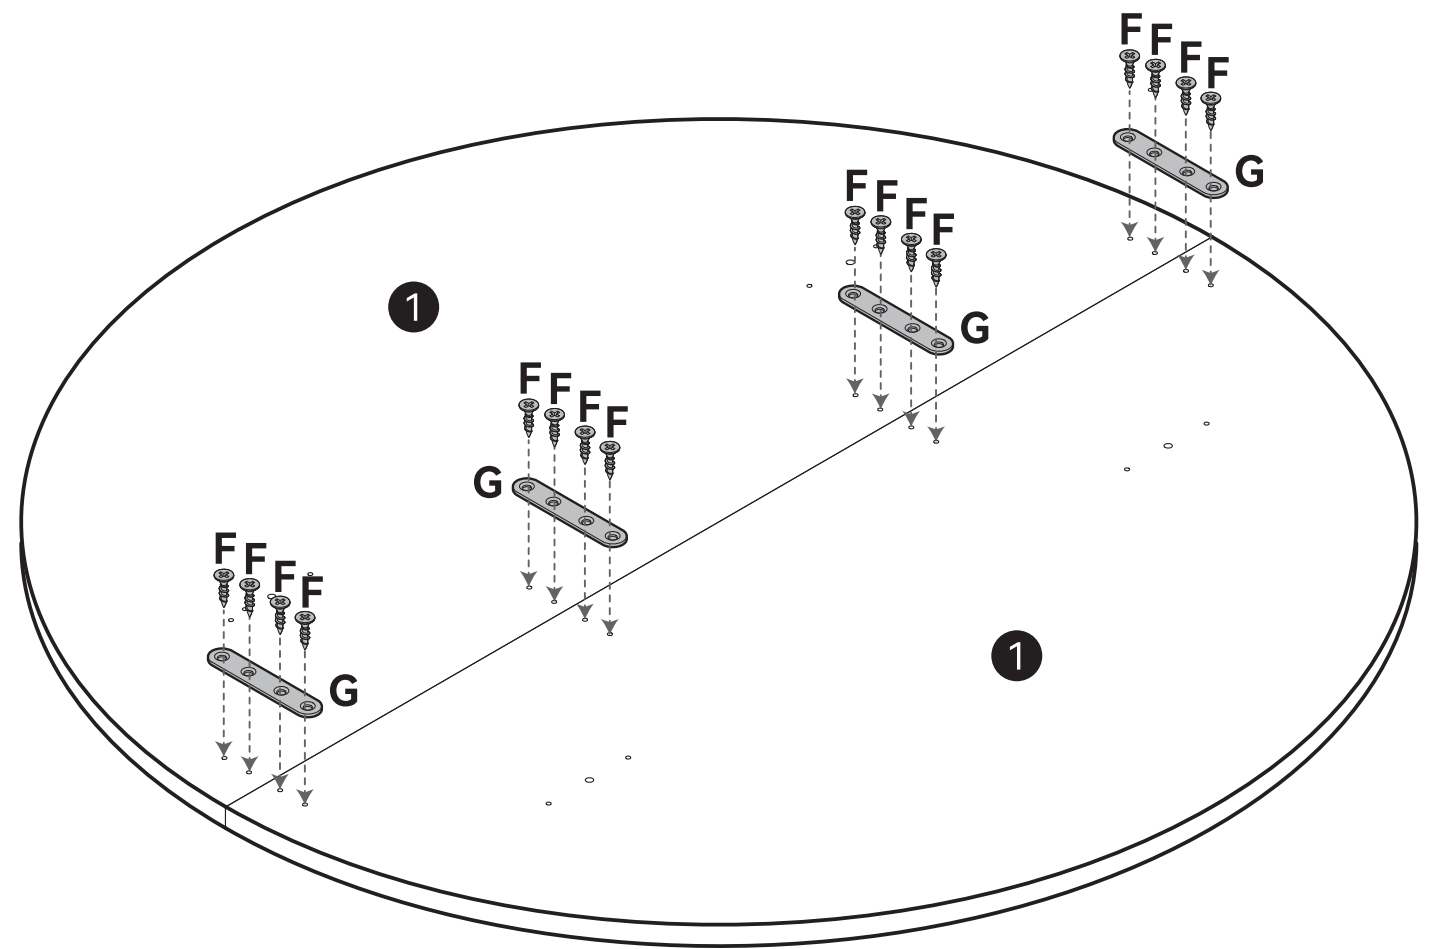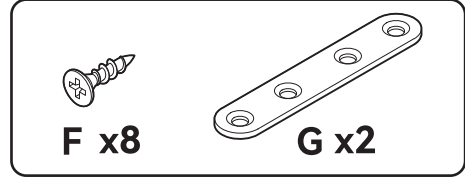



7

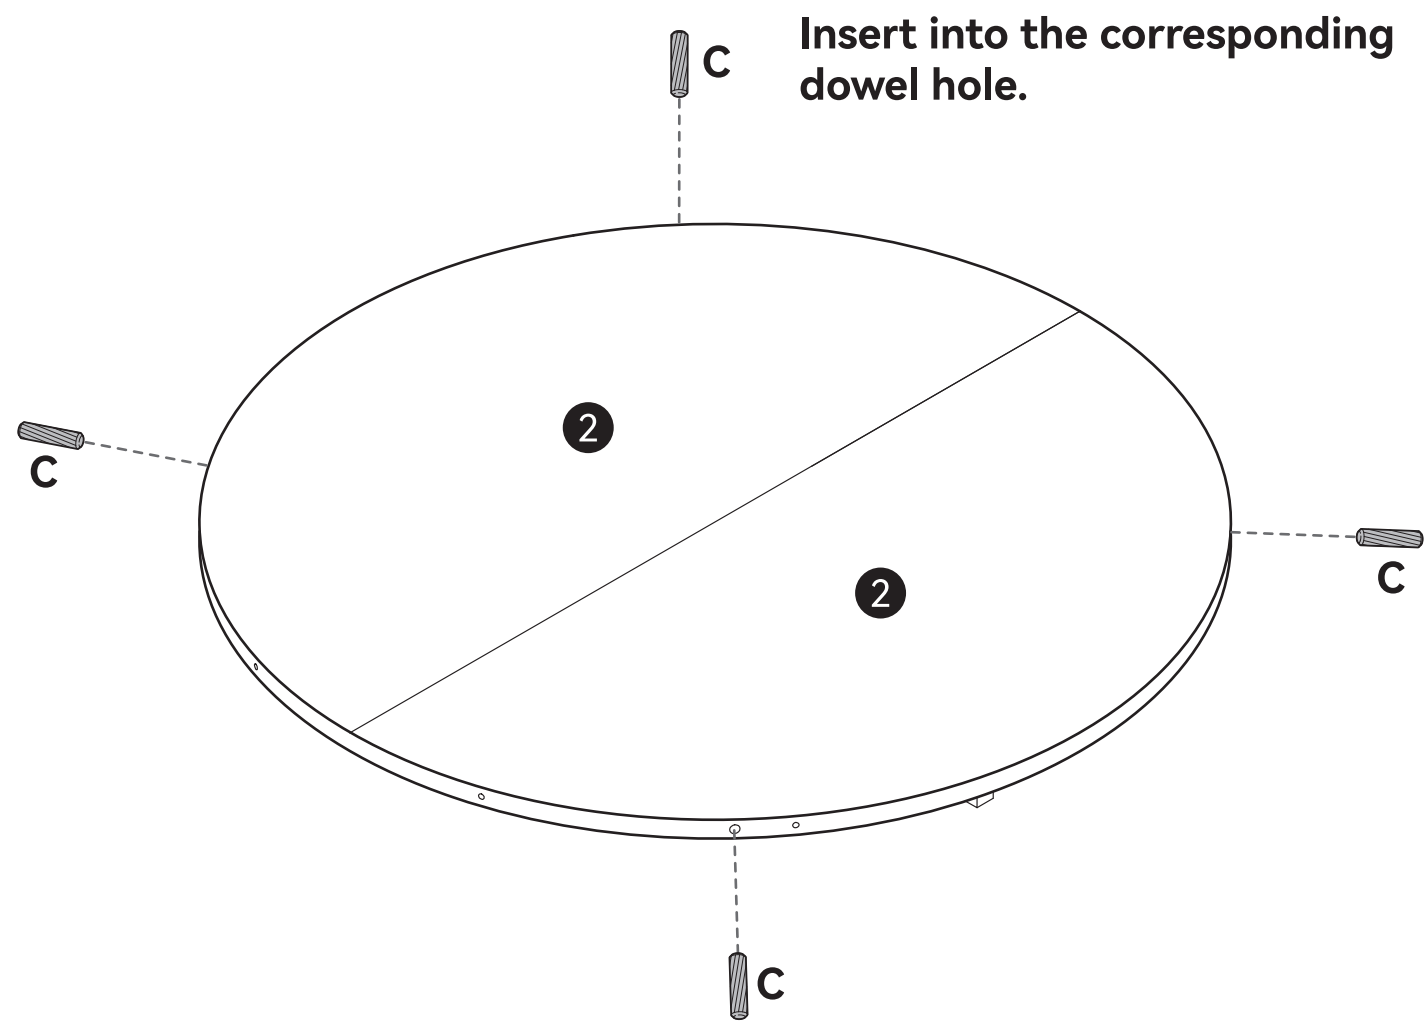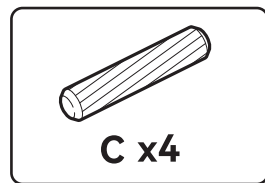


8

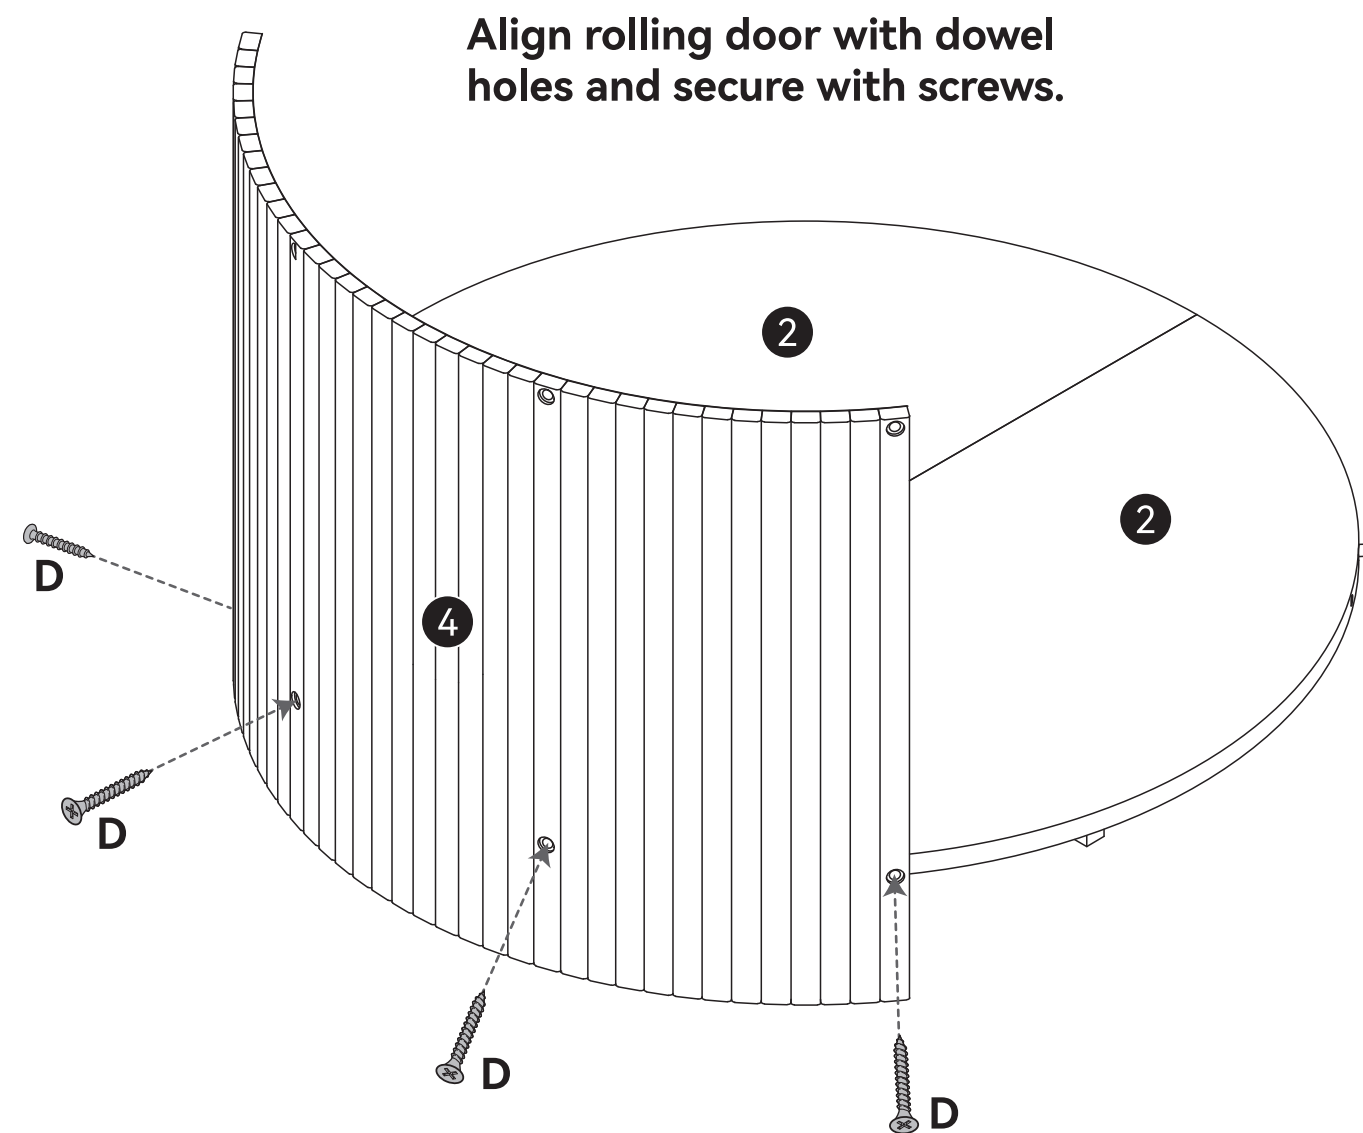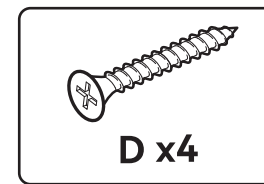


9

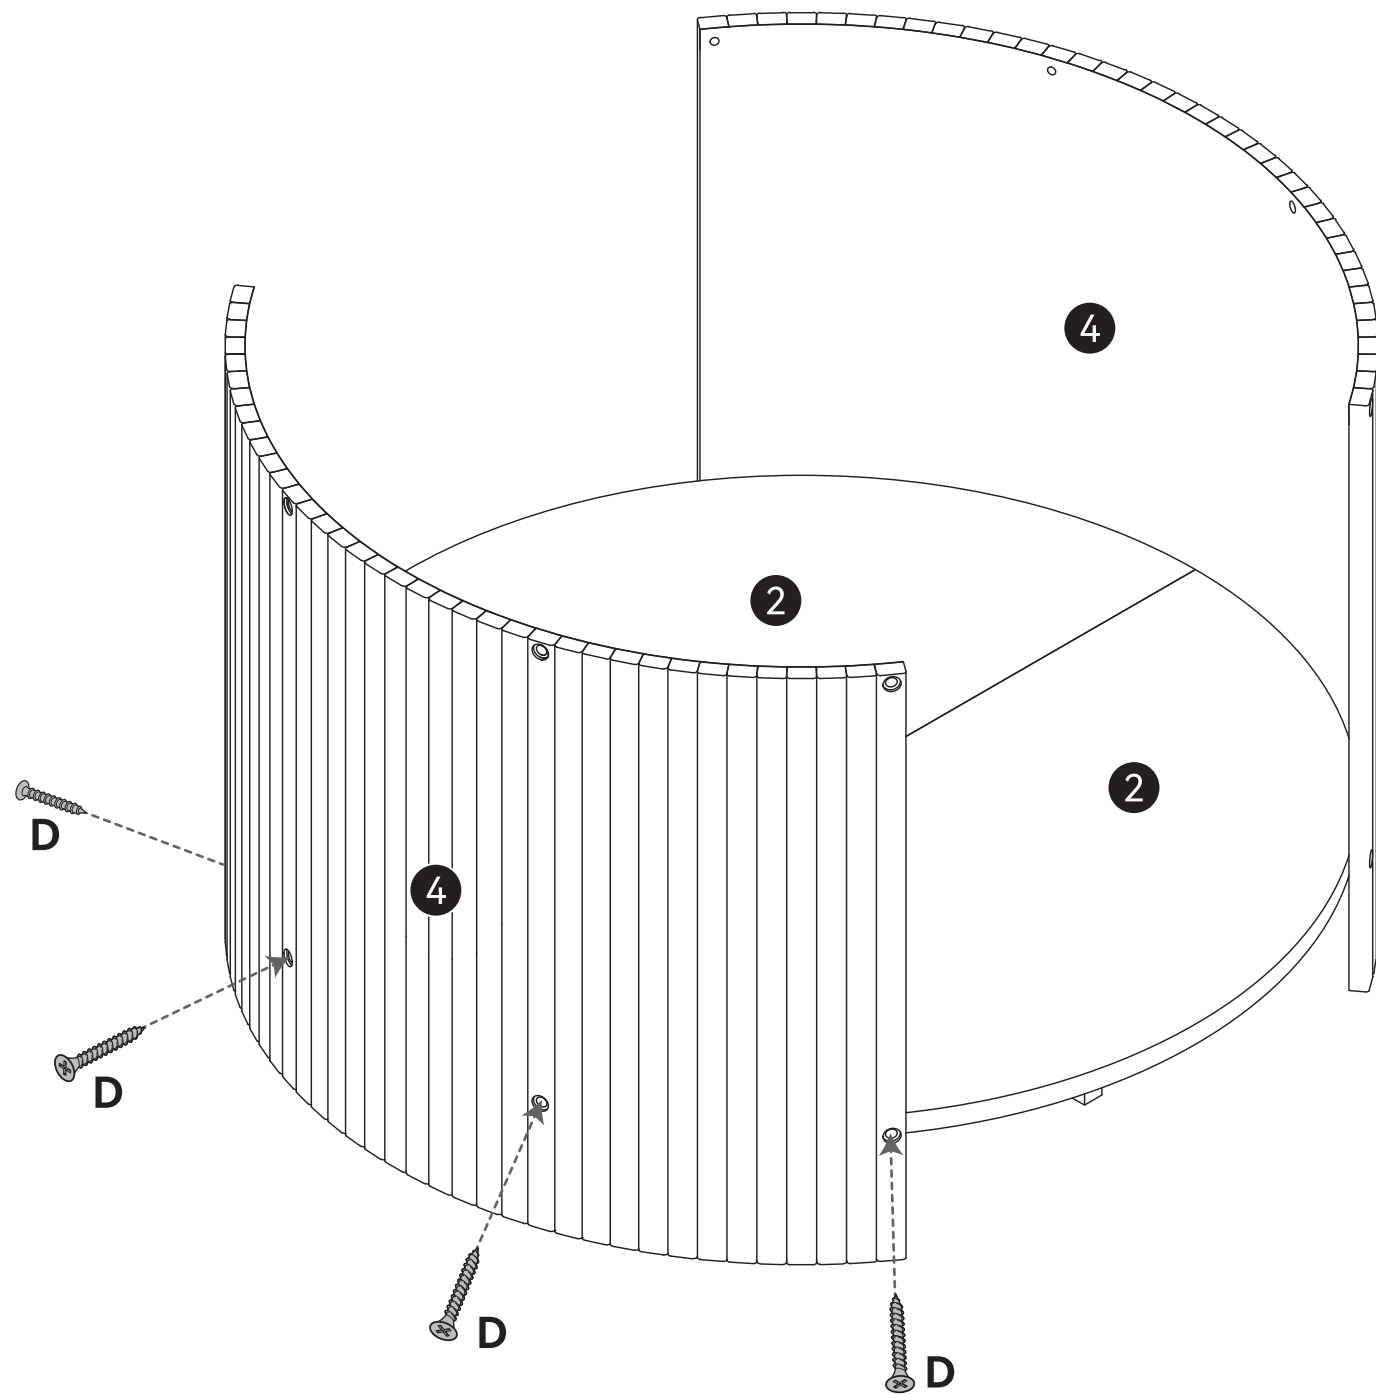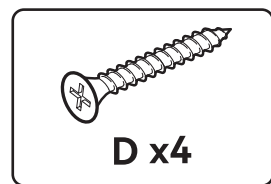


10

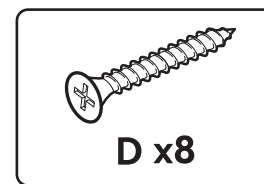


Install board ③ as shown. Then flip the table over for the next step.

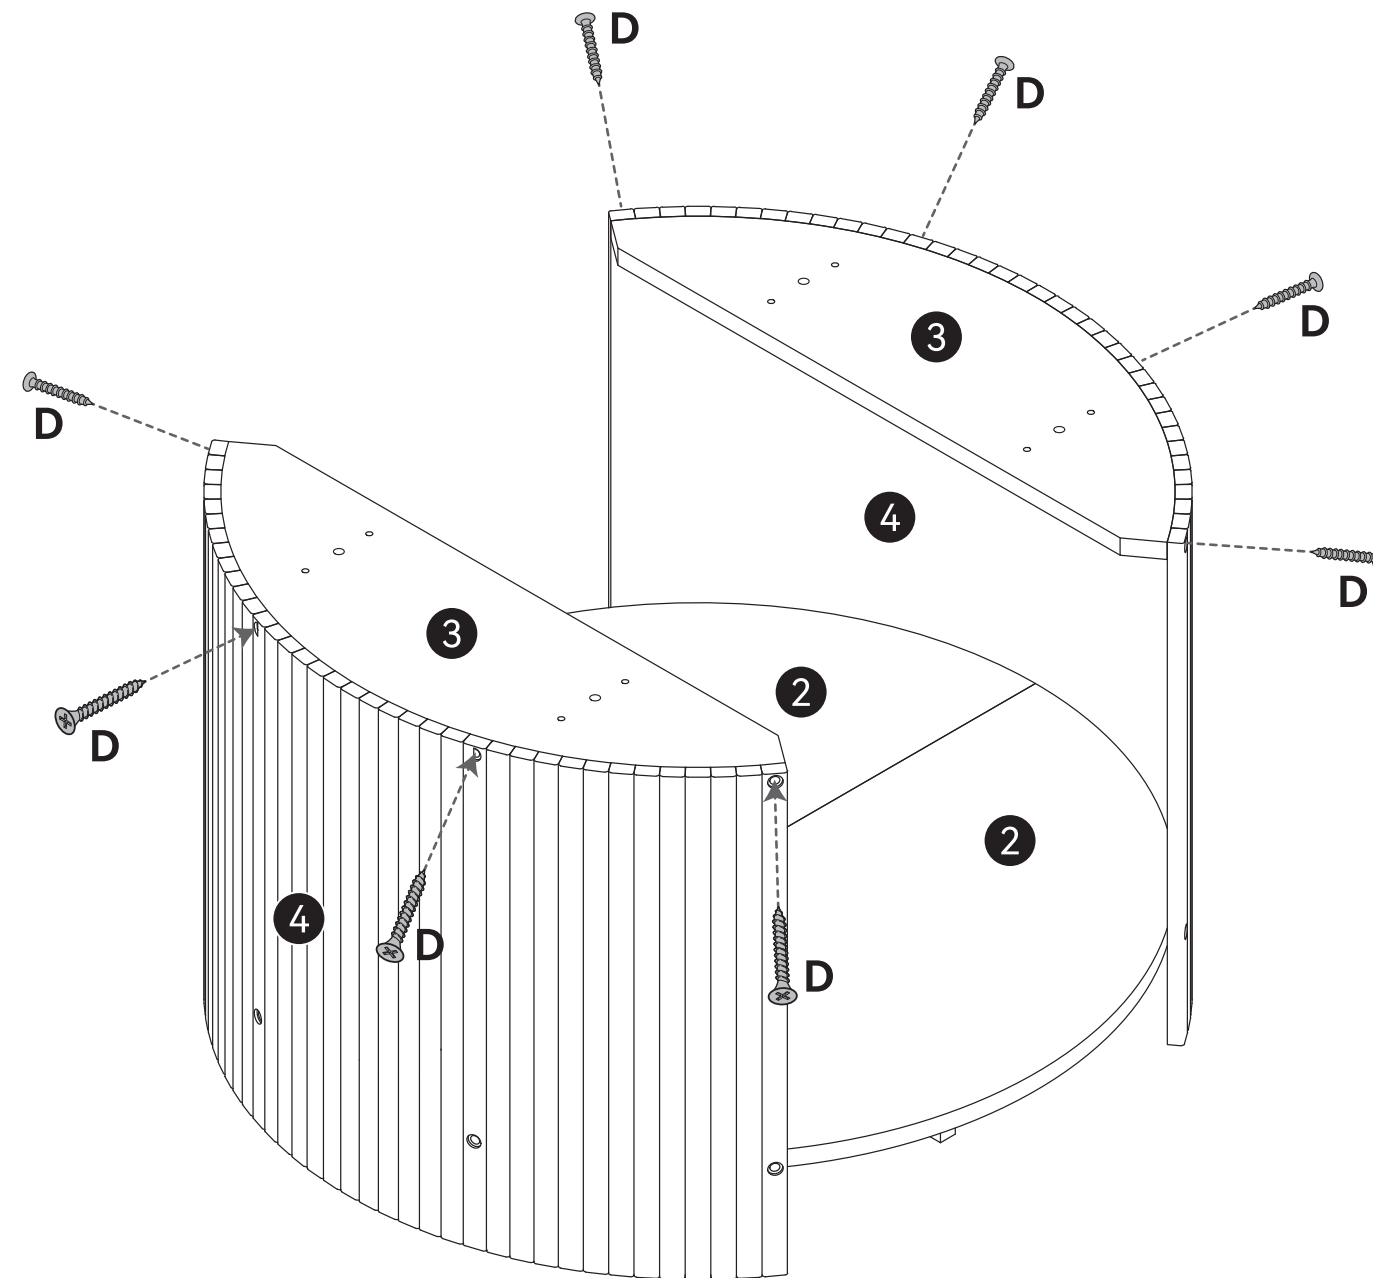

11

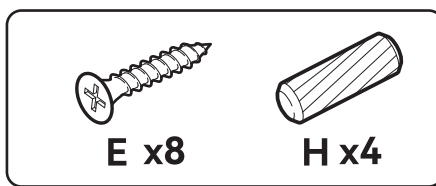



Insert dowels into board ① .
Align board to table body as
shown and secure with screws.

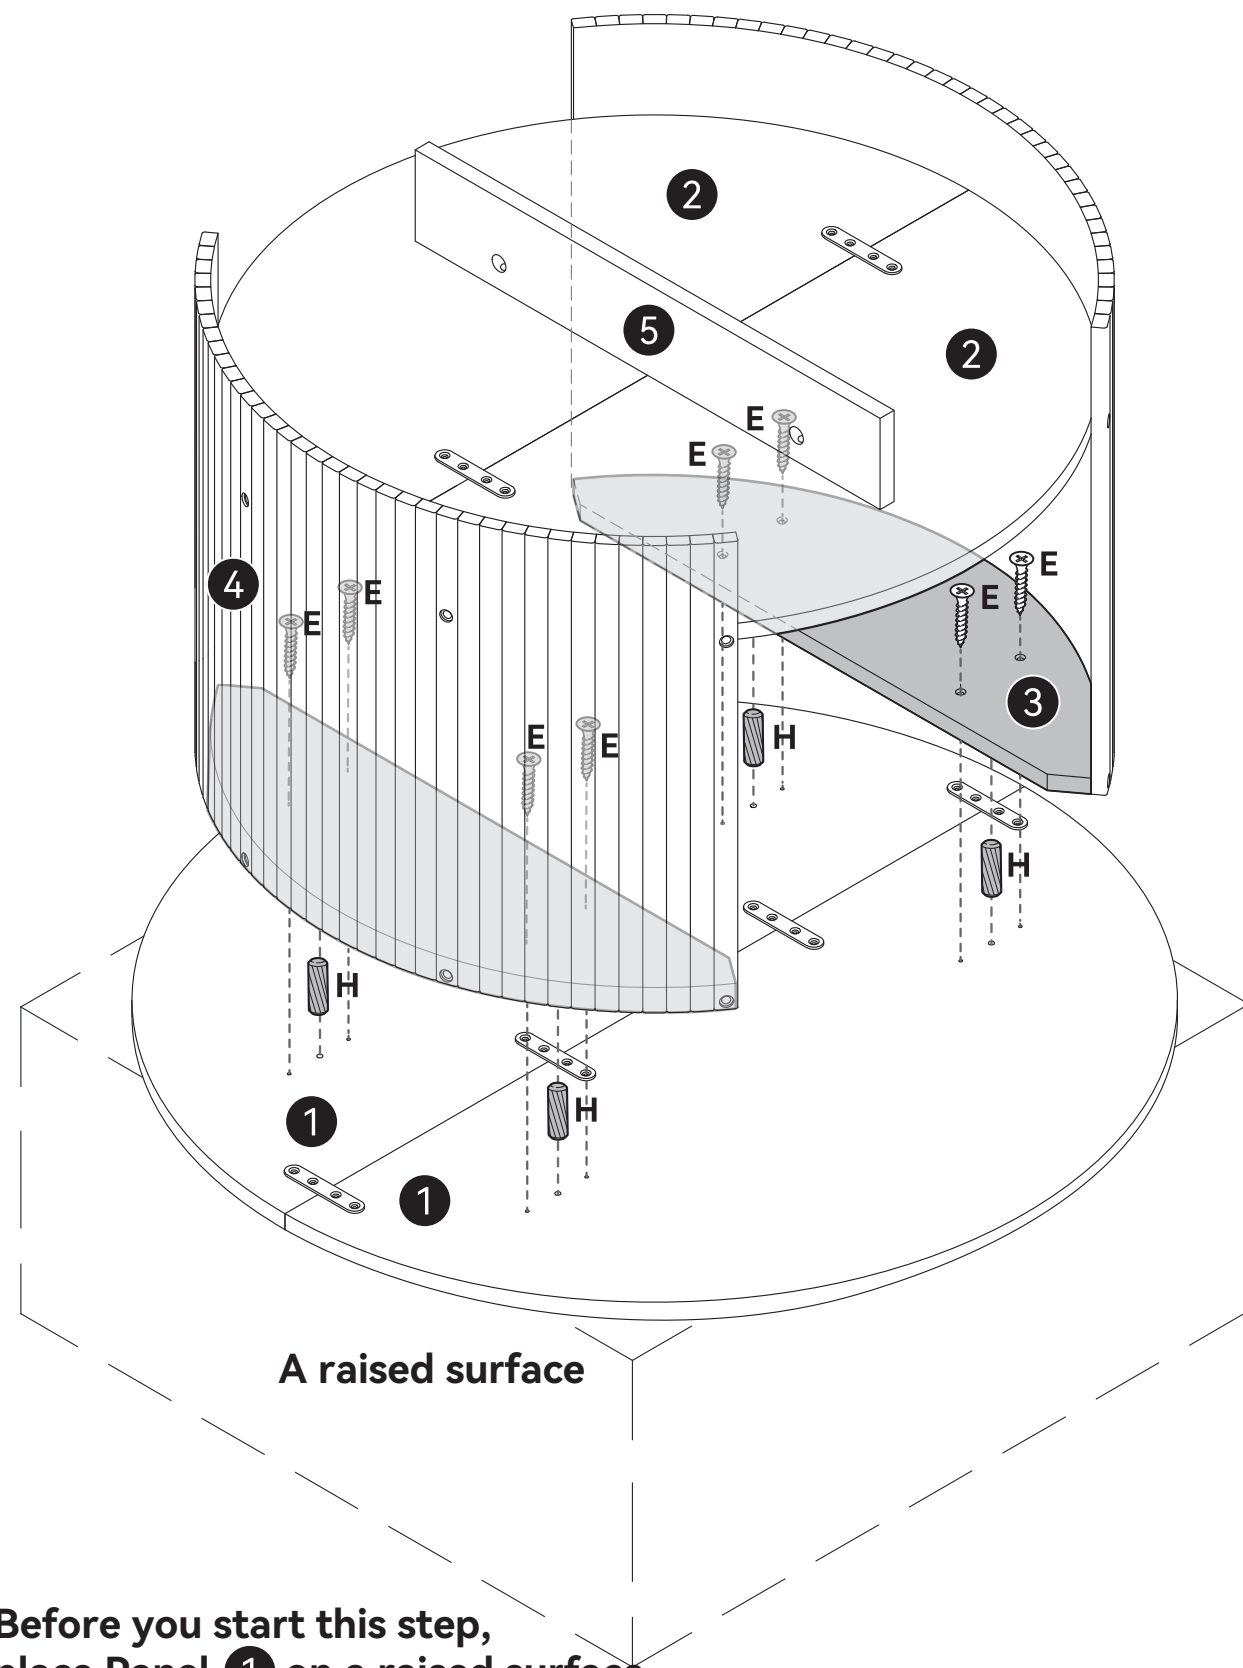

A raised surface

Before you start this step,
place Panel ① on a raised surface -
a table or any other sturdy object will work fine.
This gives you a clear view of how Connector H joins Panel ① and Panel ③.
Then follow the step as shown.

12

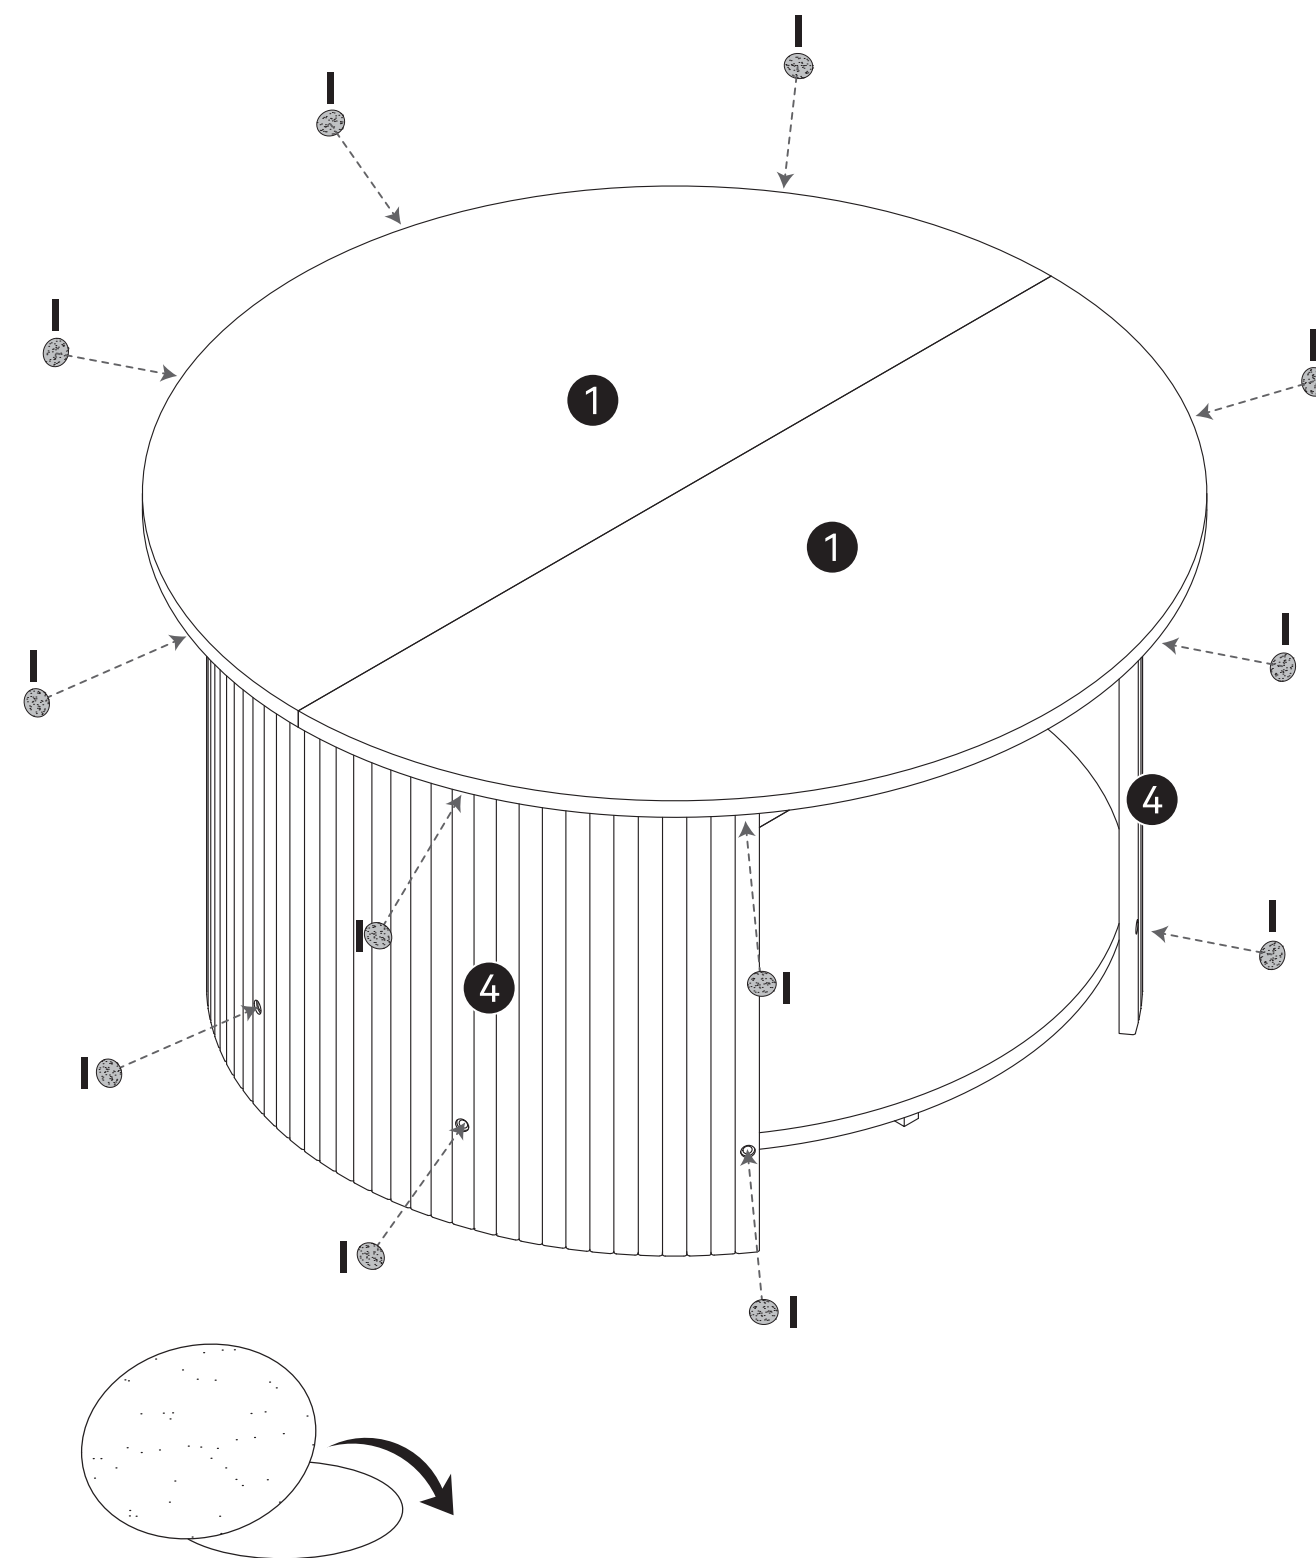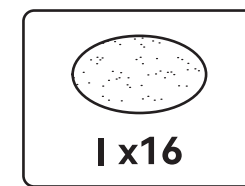

Peel off the backing film and
apply to the exposed holes.

