



GENERAL INSTALLATION INSTRUCTIONS

Wall Mirror | 1408, 1410, 1411 (Drywall installation)

PREPARATION

Tools Required for Assembly: (Not included)



- Electrical drill with 5/16 in. drill bit
- Phillips head screwdriver
- Mallet hammer
- Safety glasses

! CAUTION: Drywall anchors are for drywalls only. Use tile anchors for tile surfaces. (included)

INSTALLATION INSTRUCTIONS

1. Hold the swing arm mirror (A) up against desired position on wall, and mark the position of screw holes. (B) Remove the item. (Fig. 1)
2. Drill 5/16 in. pilot holes into the wall where the drywall anchors (C) will be inserted.
4. Pinch drywall anchors (C) two wings together (Fig. 2), and insert it into the hole horizontally. Tap flush with the wall using a mallet hammer.
5. Insert the red push pin (D) into the drywall anchors (C) until the wings pop open. (Fig. 3) Then remove the pin. Do not tap the red push pin with a hammer.
6. Place the swing arm mirror (A) over the drywall anchors (D). Insert mounting screws (E) through the bracket and anchors, and then tighten firmly with Phillips head screwdriver. (Fig. 4)

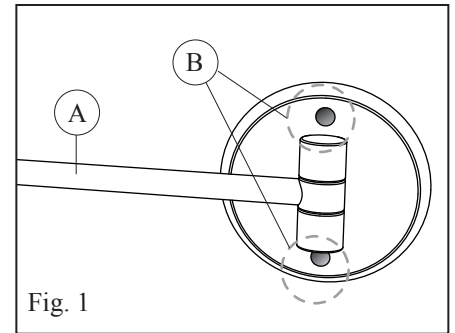


Fig. 1

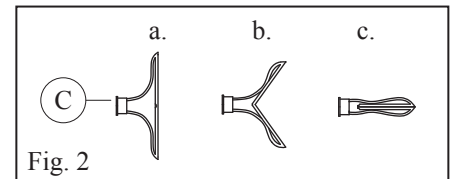


Fig. 2

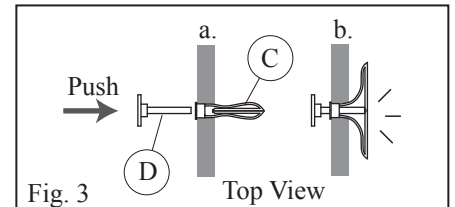


Fig. 3

Top View

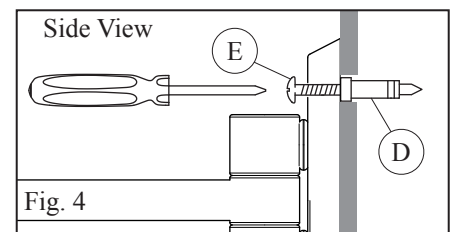


Fig. 4

CARE AND MAINTENANCE

To maintain the beautiful luster finish, please use soft damp cloths when cleaning and never use any cleaning solvents.