


Installation Manual


Please note we are always ready to support you. Don't hesitate to contact us when you have any questions, we will try our best to resolve your issue ASAP.

(yoursupport@163.com)

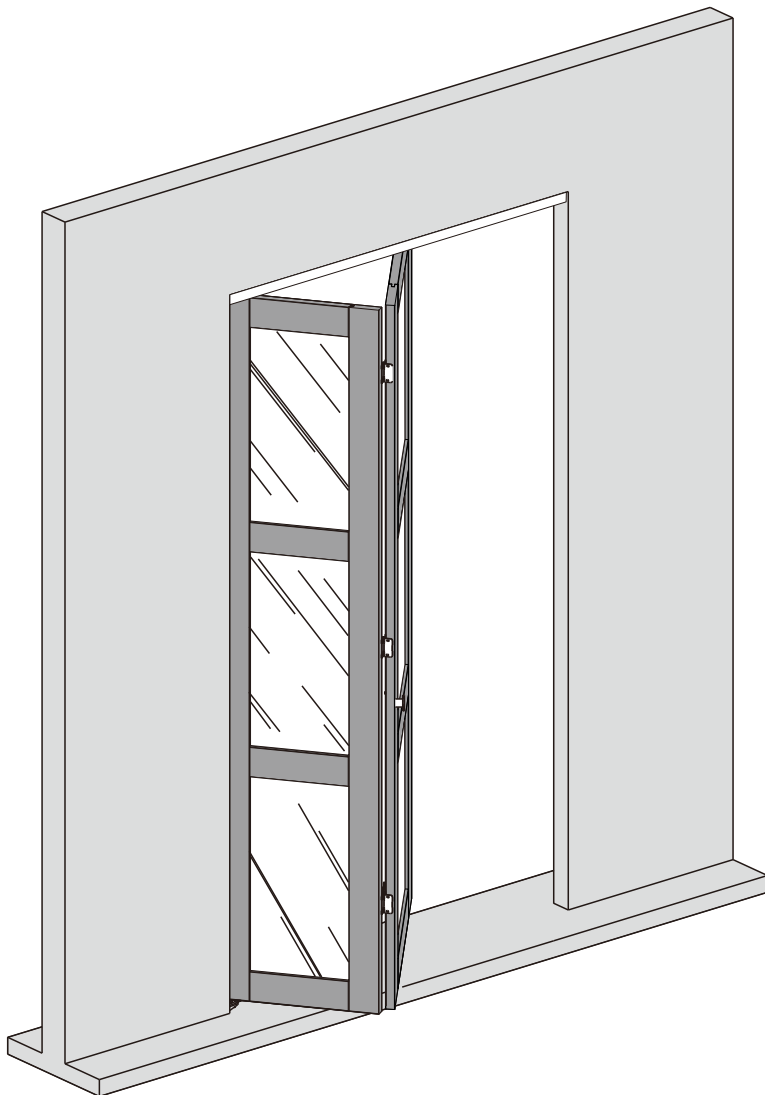

Pre-installation


TOOLS REQUIRED

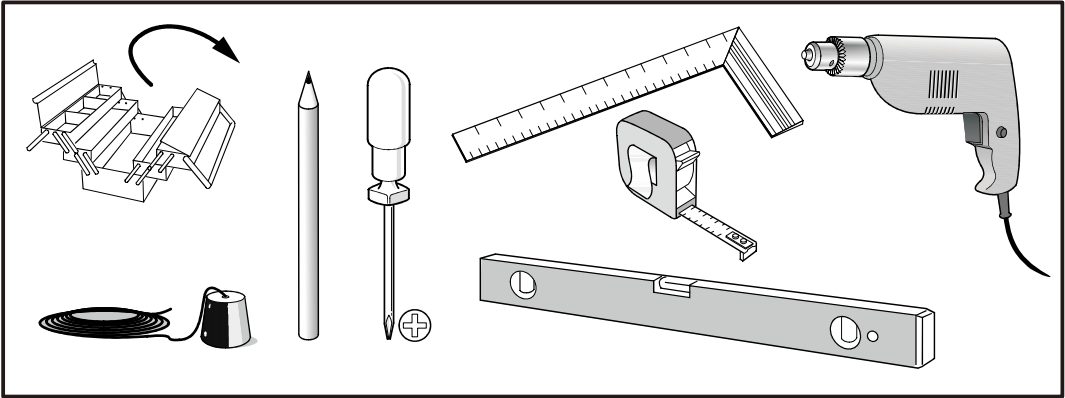

HARDWARE INCLUDED

A (x1) ST4.2x32	B (x1)	C (x1)
D (x1)	E (x1)	F (x3) ST4.2x16 (x12)
G (x1)	H (x1)	I (x1) ST4.2x32 (x1)
J Only for 4 door (x1) ST4.2x16 (x2)	K (x1)	(x1) ST4.2x25 (x9)



Installation

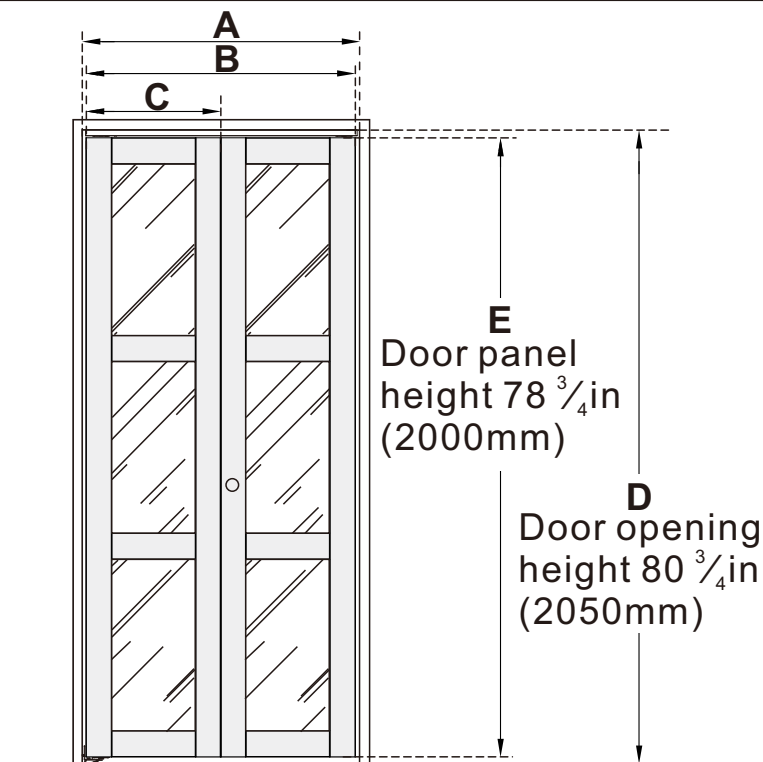

Option Size	A Door Opening Width	B Door Panel Width	C Single Door Panel Width	D Door Opening Height	E Door Pane Height
23 $\frac{1}{2}$ in * 78 $\frac{3}{4}$ in	24 in	23 $\frac{1}{2}$ in	11 $\frac{3}{4}$ in	80 $\frac{3}{4}$ in	78 $\frac{3}{4}$ in
27 $\frac{1}{2}$ in * 78 $\frac{3}{4}$ in	28 in	27 $\frac{1}{2}$ in	13 $\frac{3}{4}$ in	80 $\frac{3}{4}$ in	78 $\frac{3}{4}$ in
29 $\frac{1}{2}$ in * 78 $\frac{3}{4}$ in	30 in	29 $\frac{1}{2}$ in	14 $\frac{3}{4}$ in	80 $\frac{3}{4}$ in	78 $\frac{3}{4}$ in
31 $\frac{1}{2}$ in * 78 $\frac{3}{4}$ in	32 in	31 $\frac{1}{2}$ in	15 $\frac{3}{4}$ in	80 $\frac{3}{4}$ in	78 $\frac{3}{4}$ in
35 $\frac{1}{2}$ in * 78 $\frac{3}{4}$ in	36 in	35 $\frac{1}{2}$ in	17 $\frac{3}{4}$ in	80 $\frac{3}{4}$ in	78 $\frac{3}{4}$ in
41 $\frac{1}{2}$ in * 78 $\frac{3}{4}$ in	42 in	41 $\frac{1}{2}$ in	20 $\frac{3}{4}$ in	80 $\frac{3}{4}$ in	78 $\frac{3}{4}$ in
47 $\frac{1}{2}$ in * 78 $\frac{3}{4}$ in	48 in	47 $\frac{1}{2}$ in	23 $\frac{3}{4}$ in	80 $\frac{3}{4}$ in	78 $\frac{3}{4}$ in

Installation

2 X DOOR

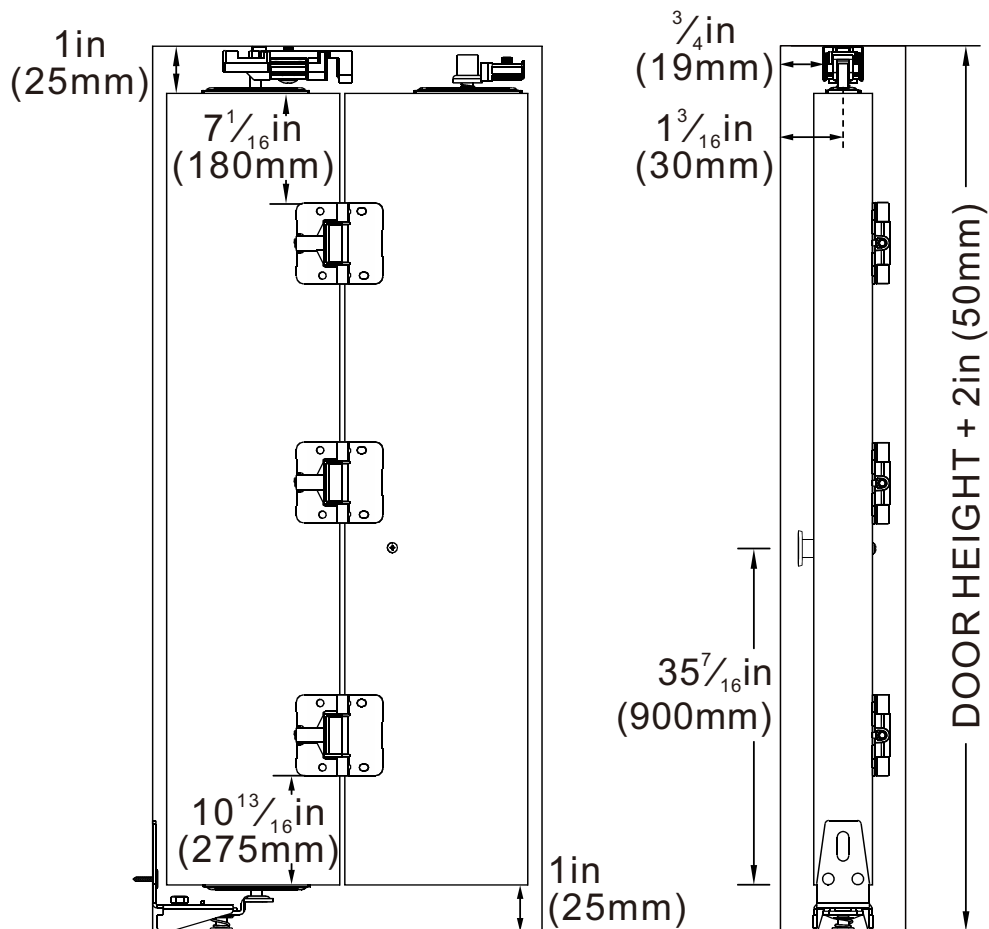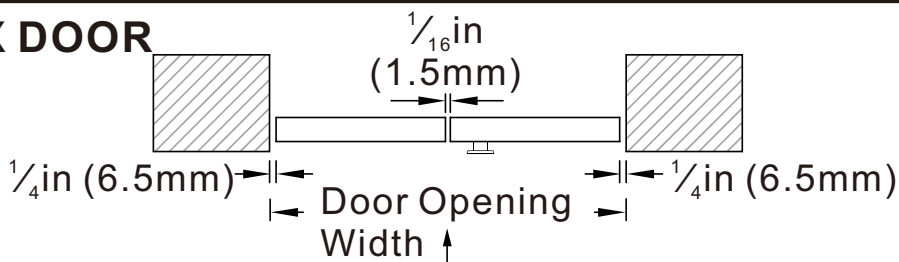


Front view


Side view

Installation

4 X DOOR

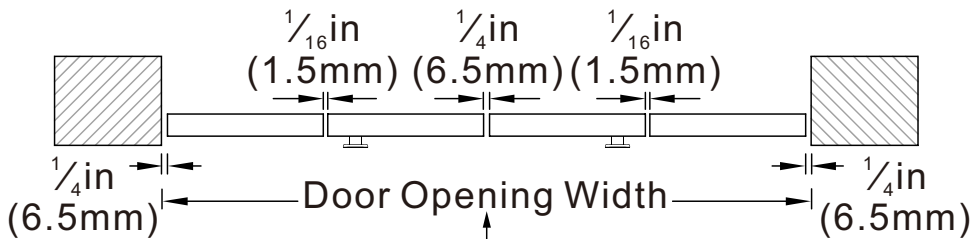

4 X DOOR WIDTH + $\frac{7}{8}$ in (22.5mm)

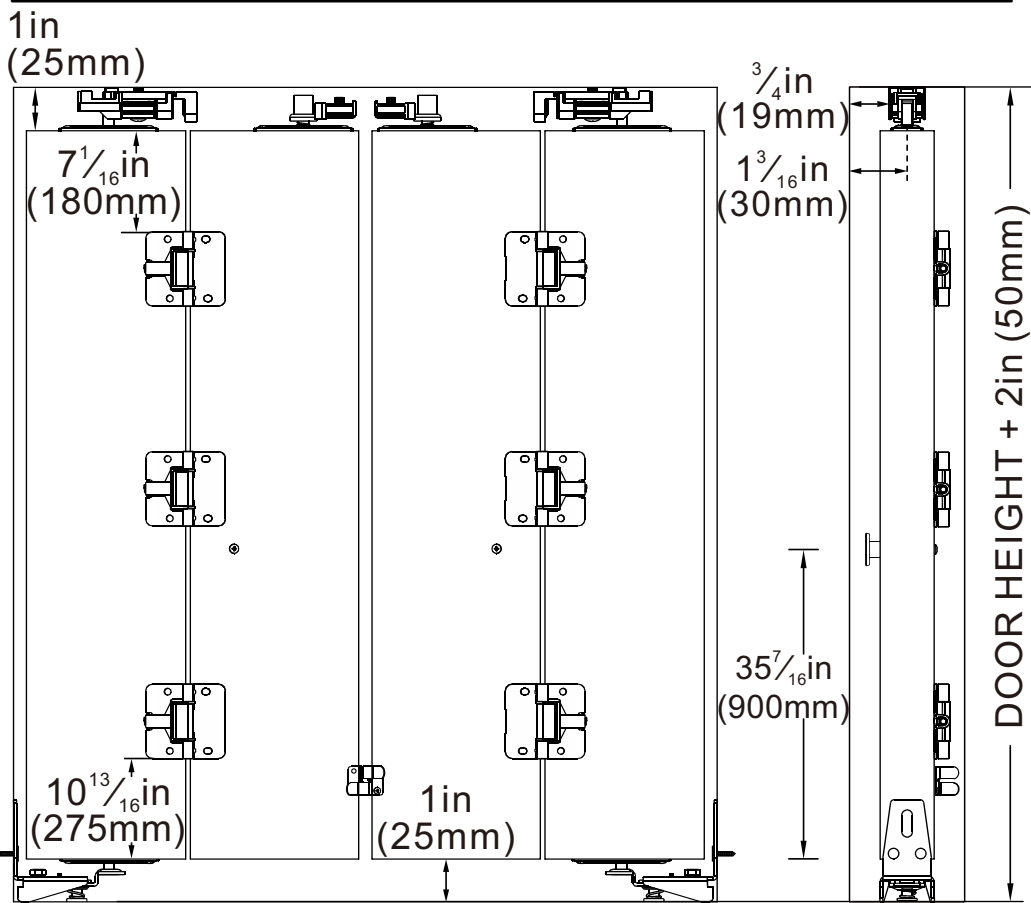

Front view

Side view



Installation

1

A

B

G




(x1)


(x1)

(x1)


Side view

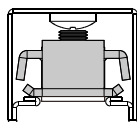

X

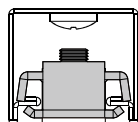


✓

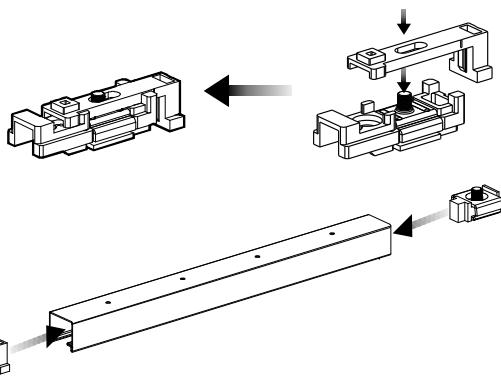

⚠ Do not full tighten screws before completing assemble.

2

A




(x1)



2 X Door

4 X Door


Top view




ST4.2x32

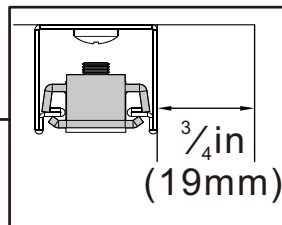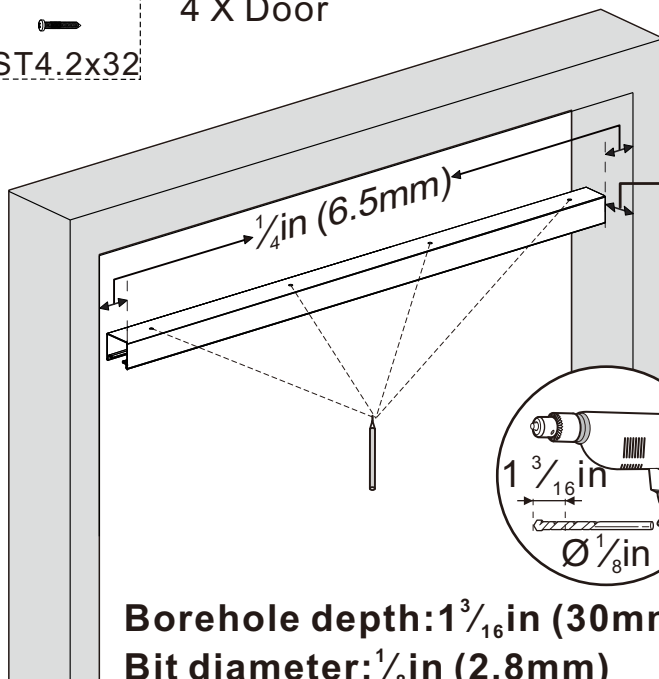

$\frac{3}{4}$ in (19mm)

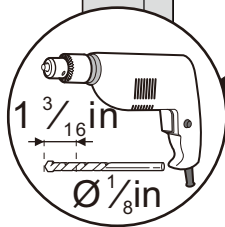

Borehole depth: $1\frac{3}{16}$ in (30mm)
Bit diameter: $\frac{1}{8}$ in (2.8mm)




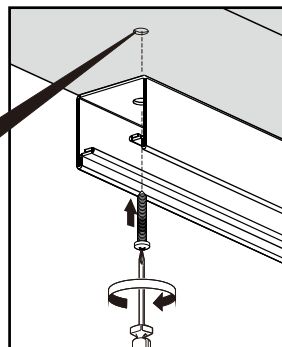


Installation

3

F
(x3)


ST4.2x16
(x12)

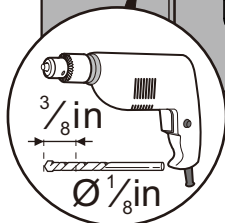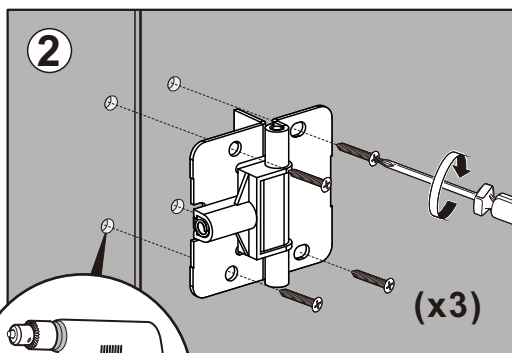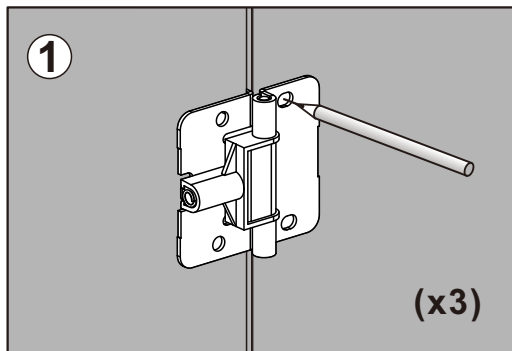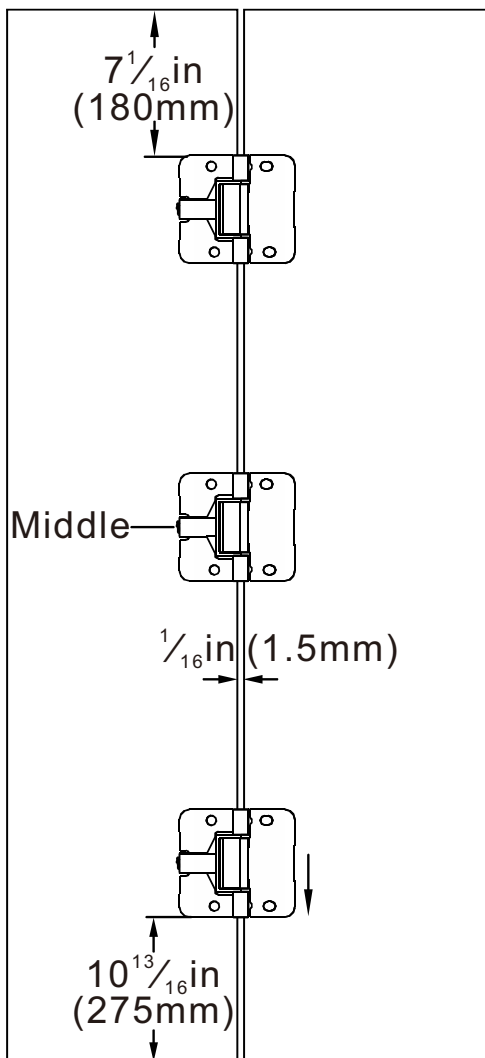

Borehole depth: $\frac{3}{8}$ in (10mm)
Bit diameter: $\frac{1}{8}$ in (2.8mm)


Installation

- 4** Install pivot plates to top and bottom of door panel as shown.

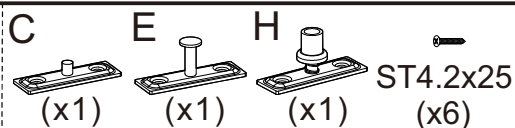


Borehole depth: $\frac{13}{16}$ in (20mm)
Bit diameter: $\frac{1}{8}$ in (2.8mm)


LEFT HAND SWING

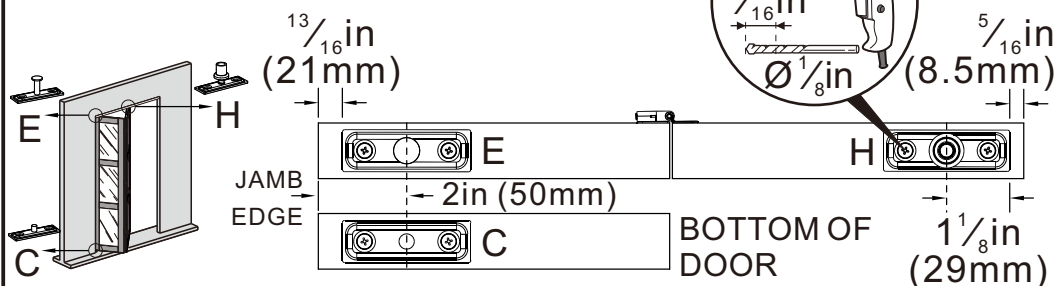

RIGHT HAND SWING

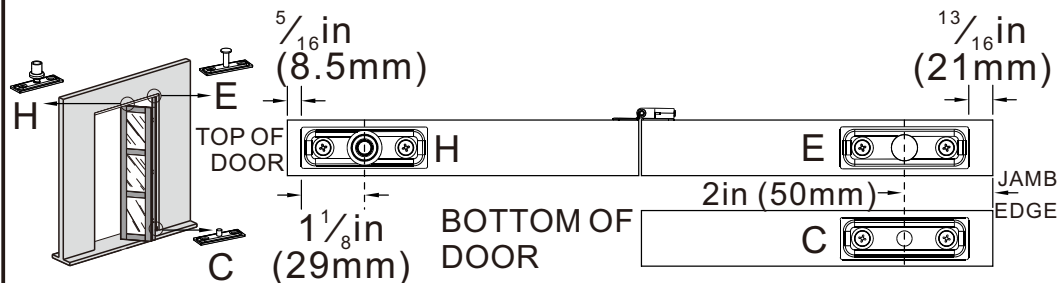

4 X DOOR

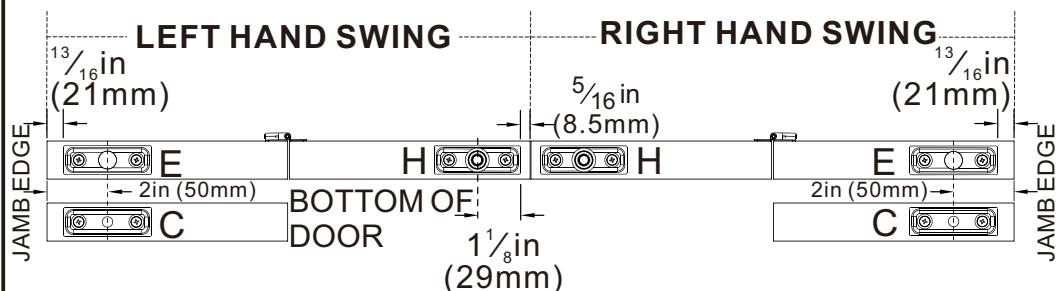

Installation


5

D




ST4.2x25
(x1)

Mark hole location of bottom pivot bracket on side jamb.
Fasten to side jamb with one ST4.2 X 25 flat head screw.

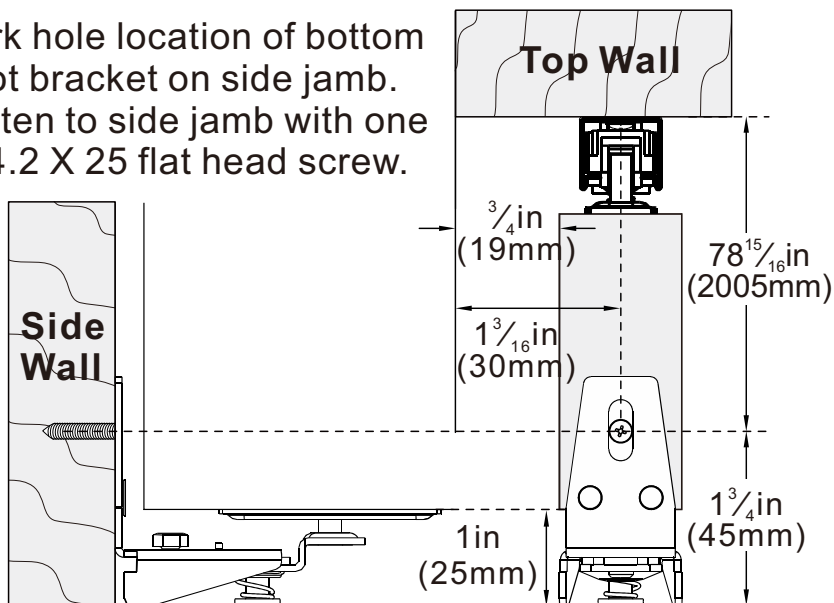

Only top screw first, and please do not screws full tighten, it need adjustment height refers step 5.

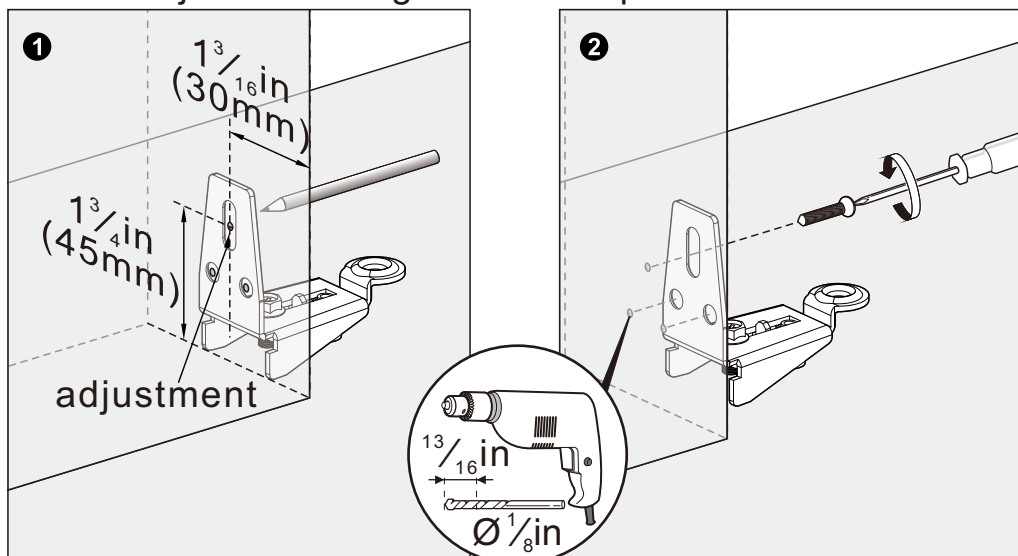


Borehole depth: $\frac{13}{16}$ in (20mm)
Bit diameter: $\frac{1}{8}$ in (2.8mm)

Installation


6

ST4.2x25
(x2)


Note: Ensure track bracket lock is in the unlocked position.

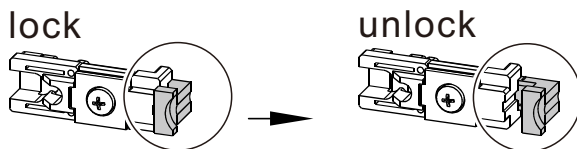





(A) Fold door and place panel guide into track. Insert top pivot pin into receptor of track bracket lock and firmly seated.

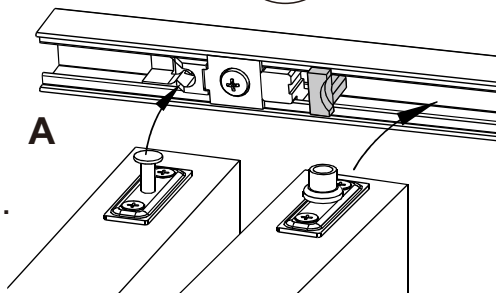

(B) Slide tab lock toward pin so that door panel is hanging from top pivot pin.

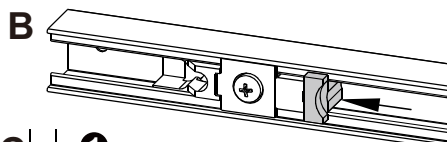

(C) Depress bottom pivot bracket socket arm and insert bottom pivot pin. Secure bottom pivot bracket with other 2 screws. Use a wrench for horizontal adjustment through track bracket lock and bottom pivot bracket.

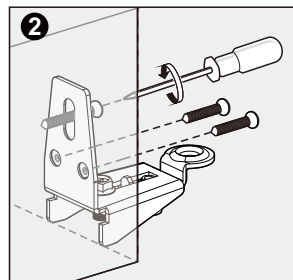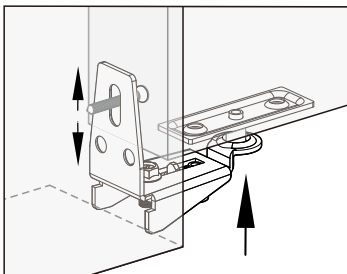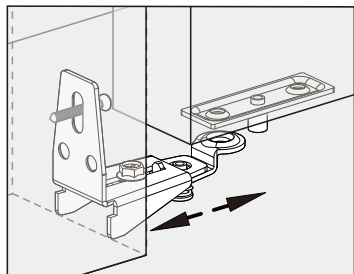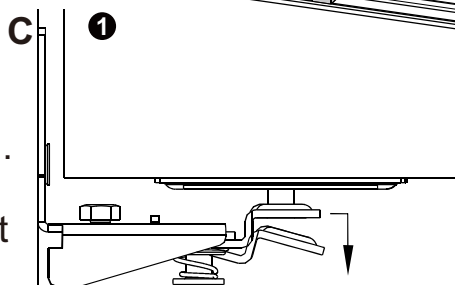

Adjust left and right Adjust up and down

Installation

7

Install door pull.

I




(x1)



ST4.2x32


(x1)

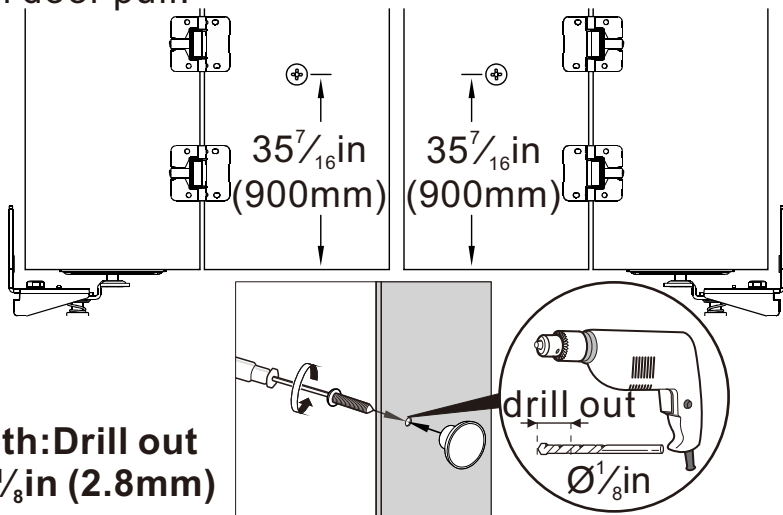

Borehole depth: Drill out
Bit diameter: $\frac{1}{8}$ in (2.8mm)

8


Mount aligner on back side of lead doors.
(4 door sets only)



(x1)


ST4.2x16

(x2)

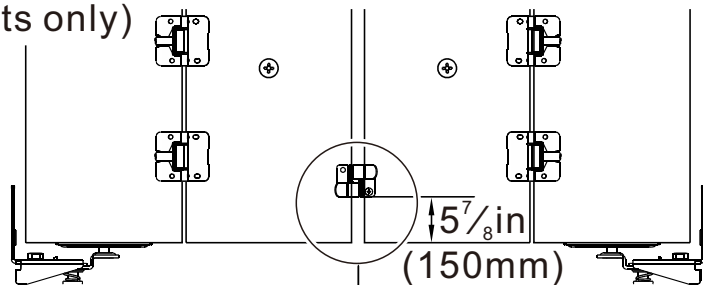


Borehole depth: $\frac{3}{8}$ in (10mm)
Bit diameter: $\frac{1}{8}$ in (2.8mm)


1

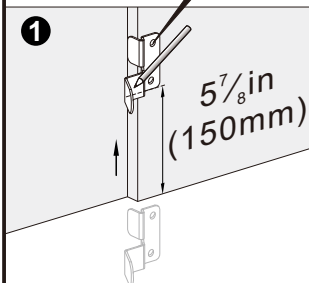


2

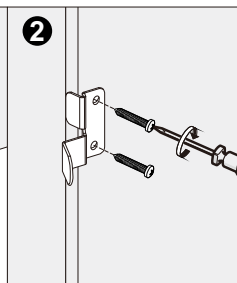

3

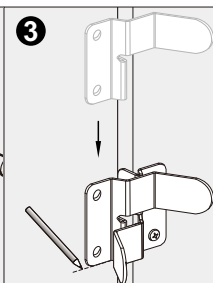

4

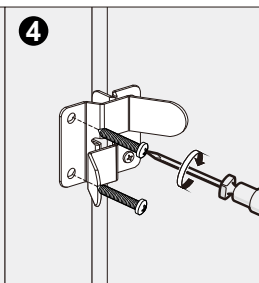


Installation

9

Adjust track stop



Close doors, slide track stop until it touches panel guide. Then open doors, move track closer to panel guide and tighten. Doors should "snap" shut yet open easily by a slight pull on the pull.

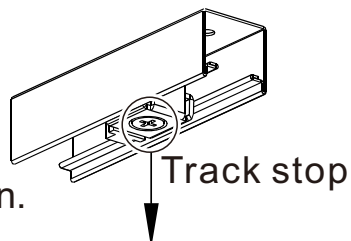

**Please screws
tighten after
competing assemble**

2 Door


4 Door

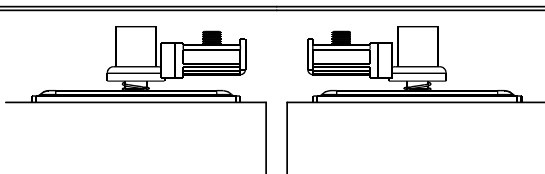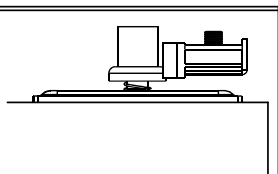


10

K

(x1)

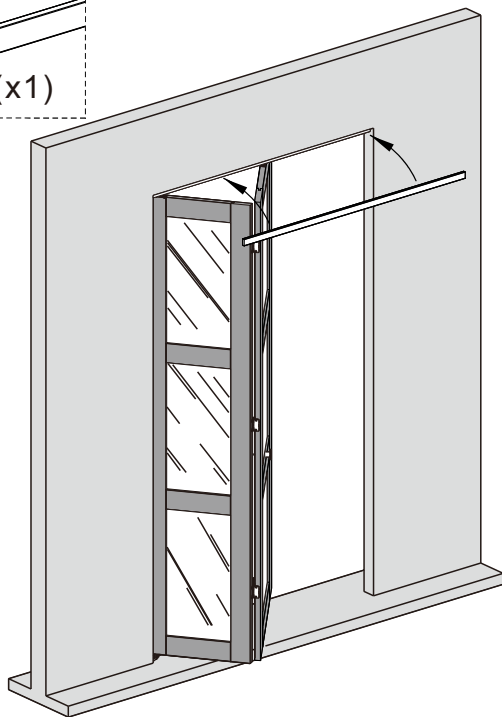

1

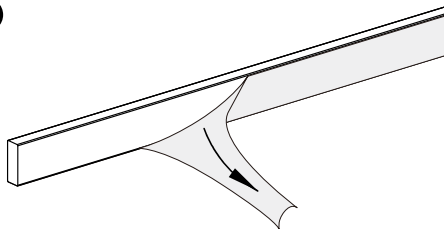

2

