


## Installation Guide for WPC Column Interior Partitions


**Step1** Measure the spacing: Use a measuring tape or other tool to measure the distance between the surfaces where the WPC column will be installed.

**Step2** Cut the WPC column: Based on the spacing measurement, cut the WPC column to the appropriate length that fits between the surfaces.


**Step3** Prepare the WPC column for the wood block: Use a cutting tool to carefully remove the middle section of the WPC column based on the thickness of the wood block. Be sure to use caution and follow appropriate safety procedures when using cutting tools.

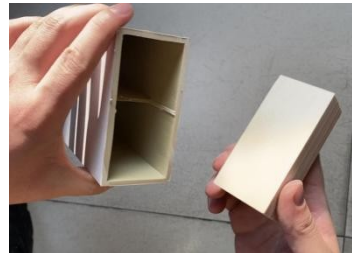

**Step4** Secure the wood block to the ceiling: Apply a high-quality, nail-free glue to the interface of the wood block and the inner part of the column. Apply a generous amount of glue to ensure a strong bond. Apply screw if necessary.

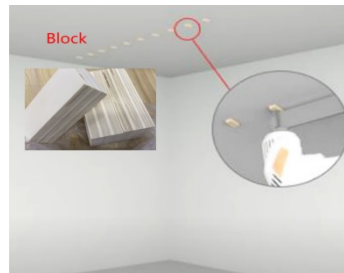

**Step5** Apply glue to the second wood block: Apply glue to the interface of the second wood block and the inner part of the column. Apply a generous amount of glue to ensure a strong bond between the wood block and the ground.

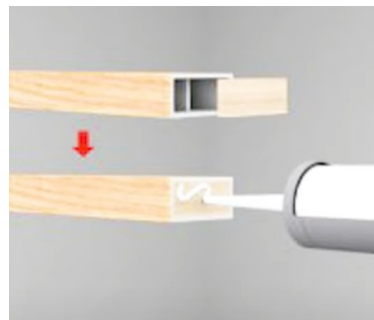

**Step6** Install the partition column: Insert the ceiling wood block into the carved-out WPC column hole, carefully place the wooden column vertically. Once the glue has dried, clean up any excess glue on the ground.

