



SKU : SF001034

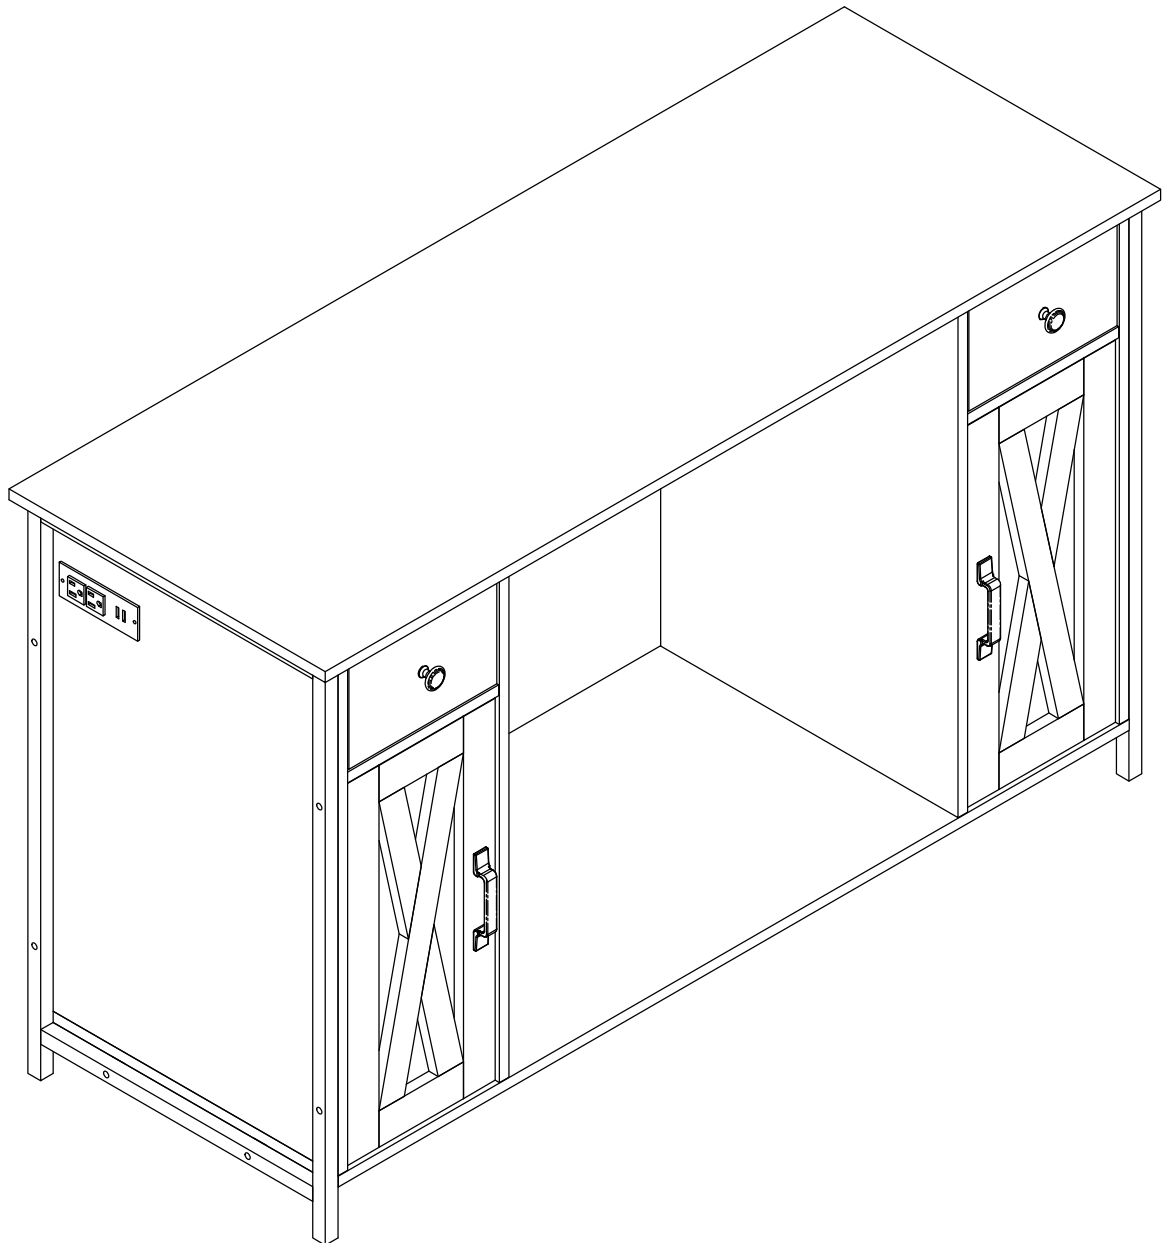

ASSEMBLY INSTRUCTIONS

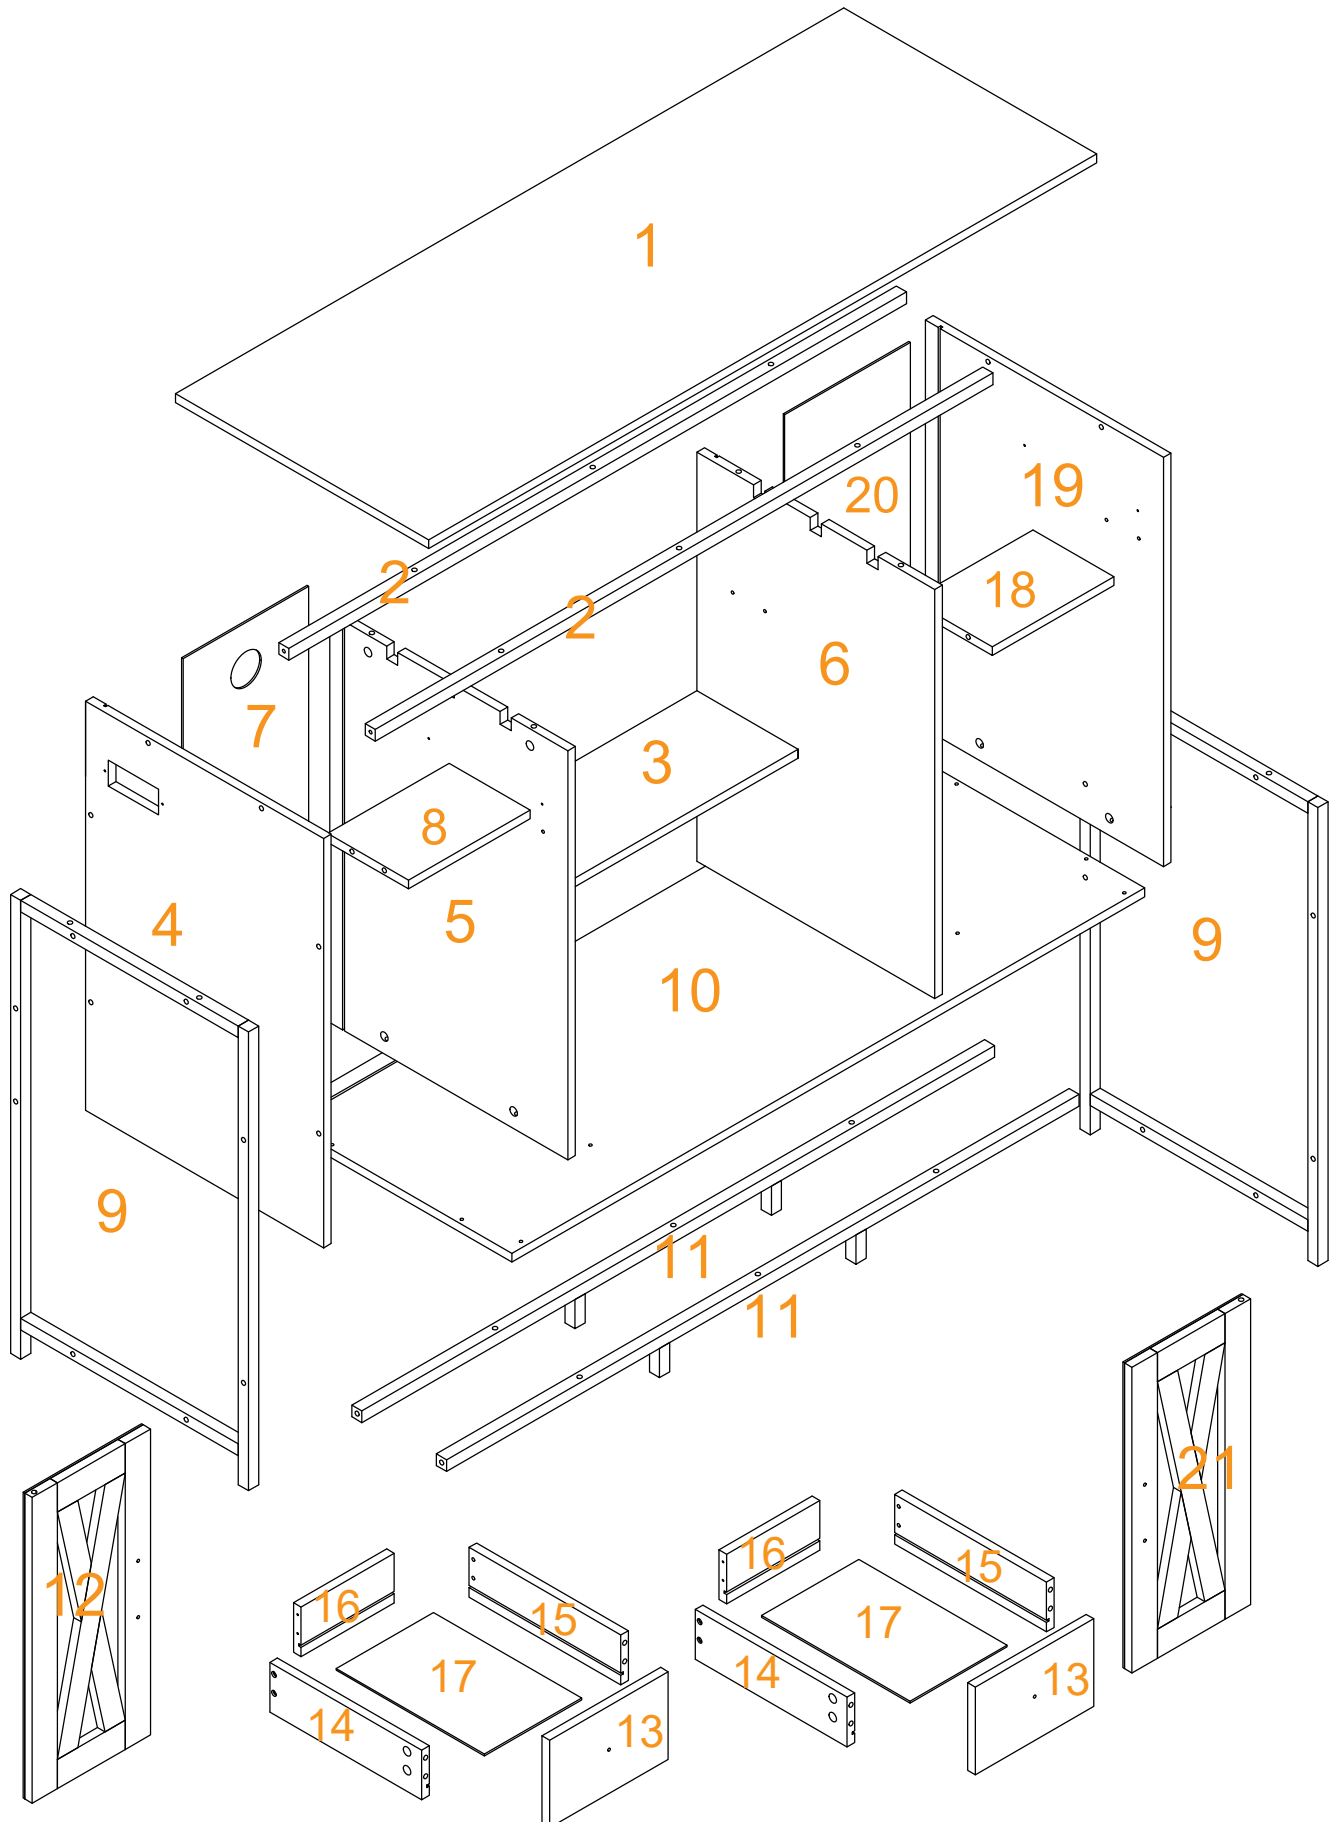

Trouble Shooting

Missing/Damaged pieces/
Wrong size and installation issues



Contact us with your problem,pic,
number and qty to the "Contact seller"
button in the detail page of your order







Respond with 24 hours to solve issue

Before You Start


1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw

Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process

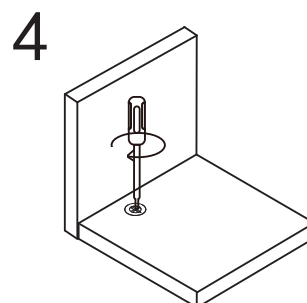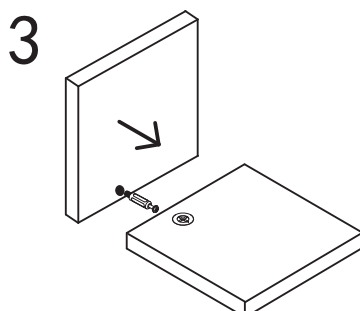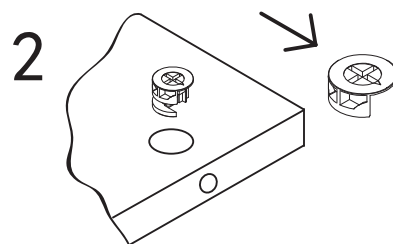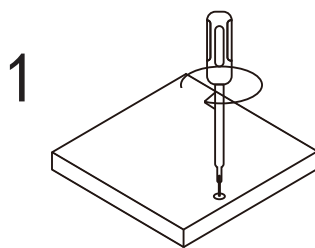


Parts List

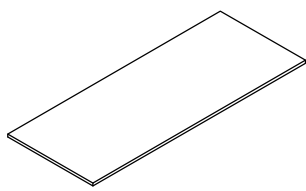


1 1PC

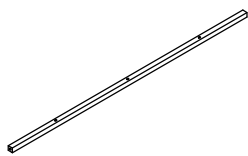


2 2PCS

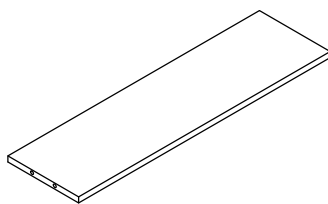


3 1PC

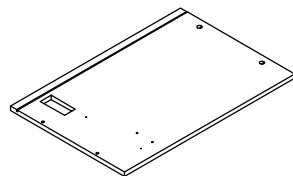


4 1PC

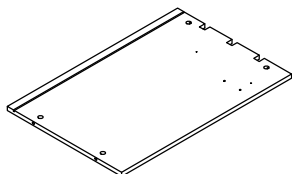


5 1PC

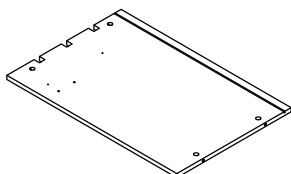


6 1PC

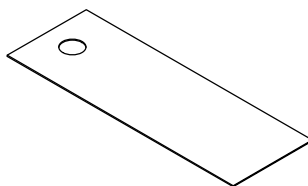


7 1PC

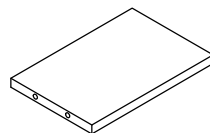


8 1PC

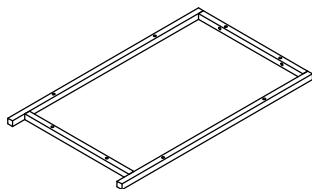


9 2PCS

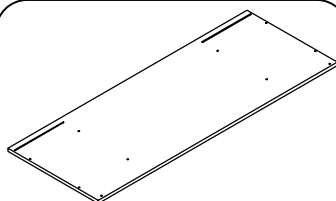


10 1PC

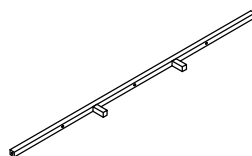


11 2PCS

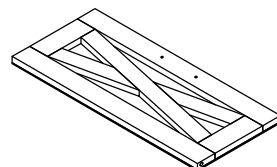


12 1PC

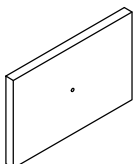


13 2PCS

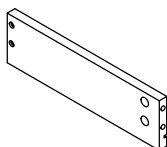


14 2PCS

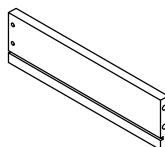


15 2PCS




16 2PCS

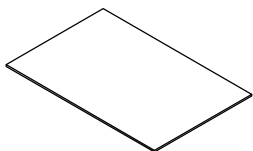


17 2PCS

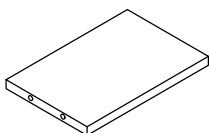


18 1PC

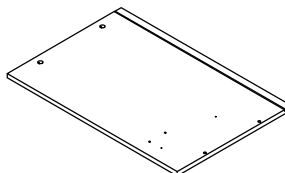

19 1PC

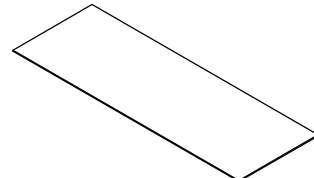

20 1PC

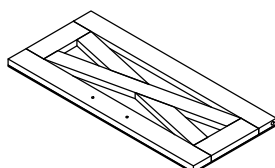


21 1PC


Hardware List




A 32PCS

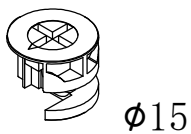

B 32PCS



M6*30MM
C 24PCS



Ø4*40mm
D 8PCS



E 2PCS




M4*18mm
F 2PCS




Ø3*12mm
G 24PCS




Ø3*14mm
H 2PCS

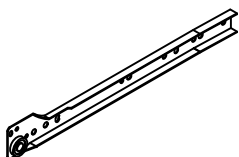


I 2PCS

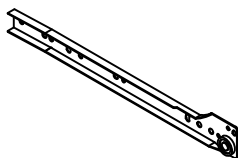

J 2PCS

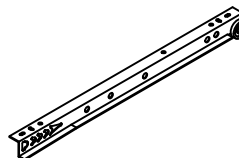

K 2PCS

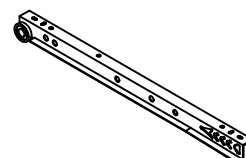

L 2PCS



M 2PCS




N 4PCS




M4*22MM
O 4PCS




M6*50MM
P 8PCS

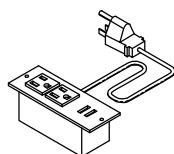

Q 1PC
















R 2PCS


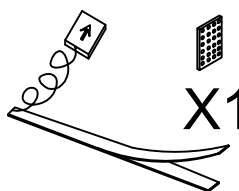


S 1PC




STEP 1

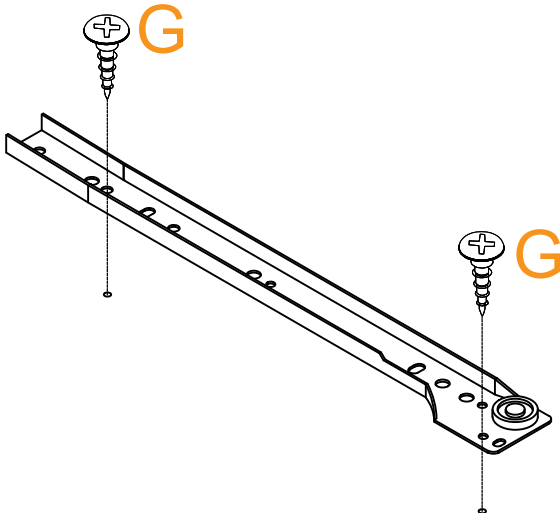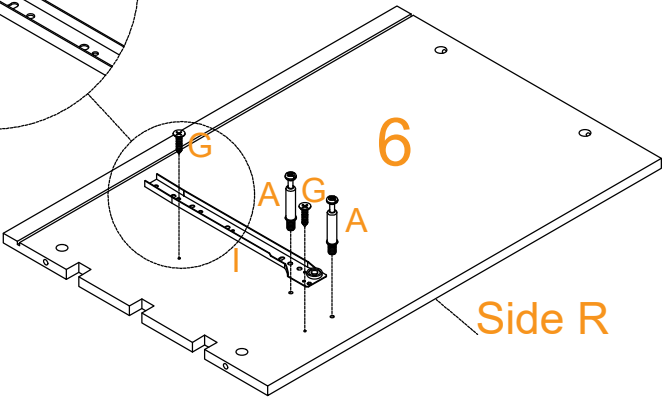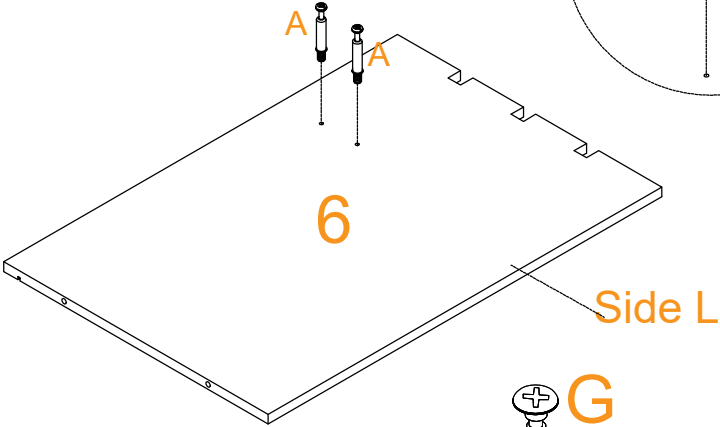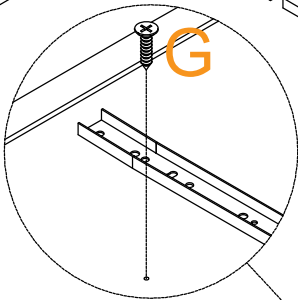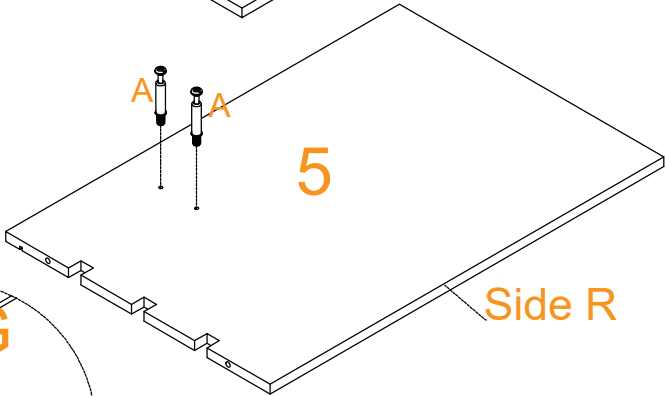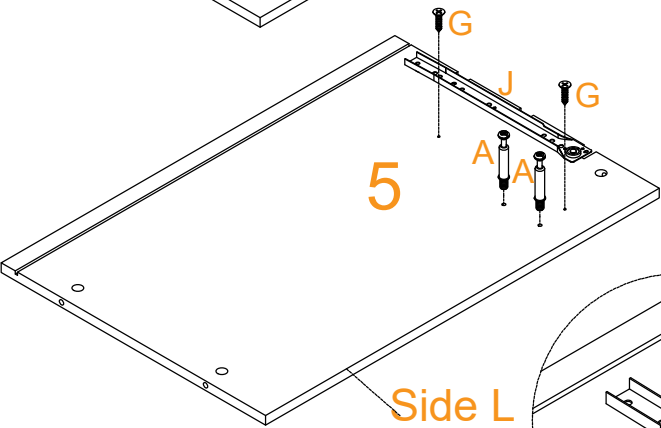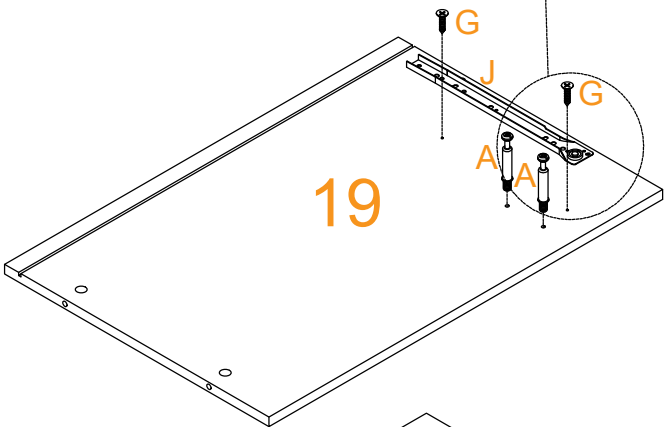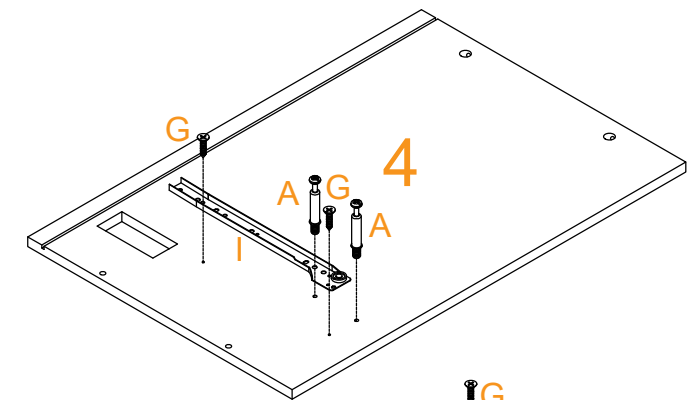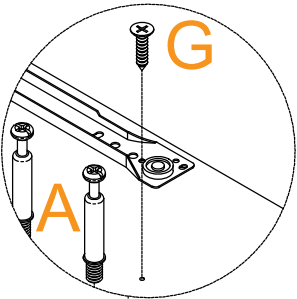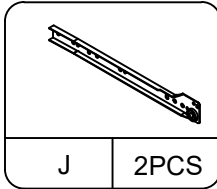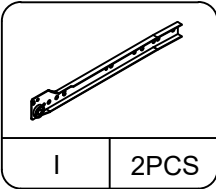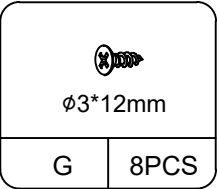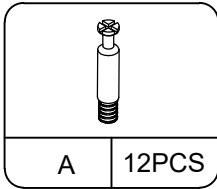

STEP 2

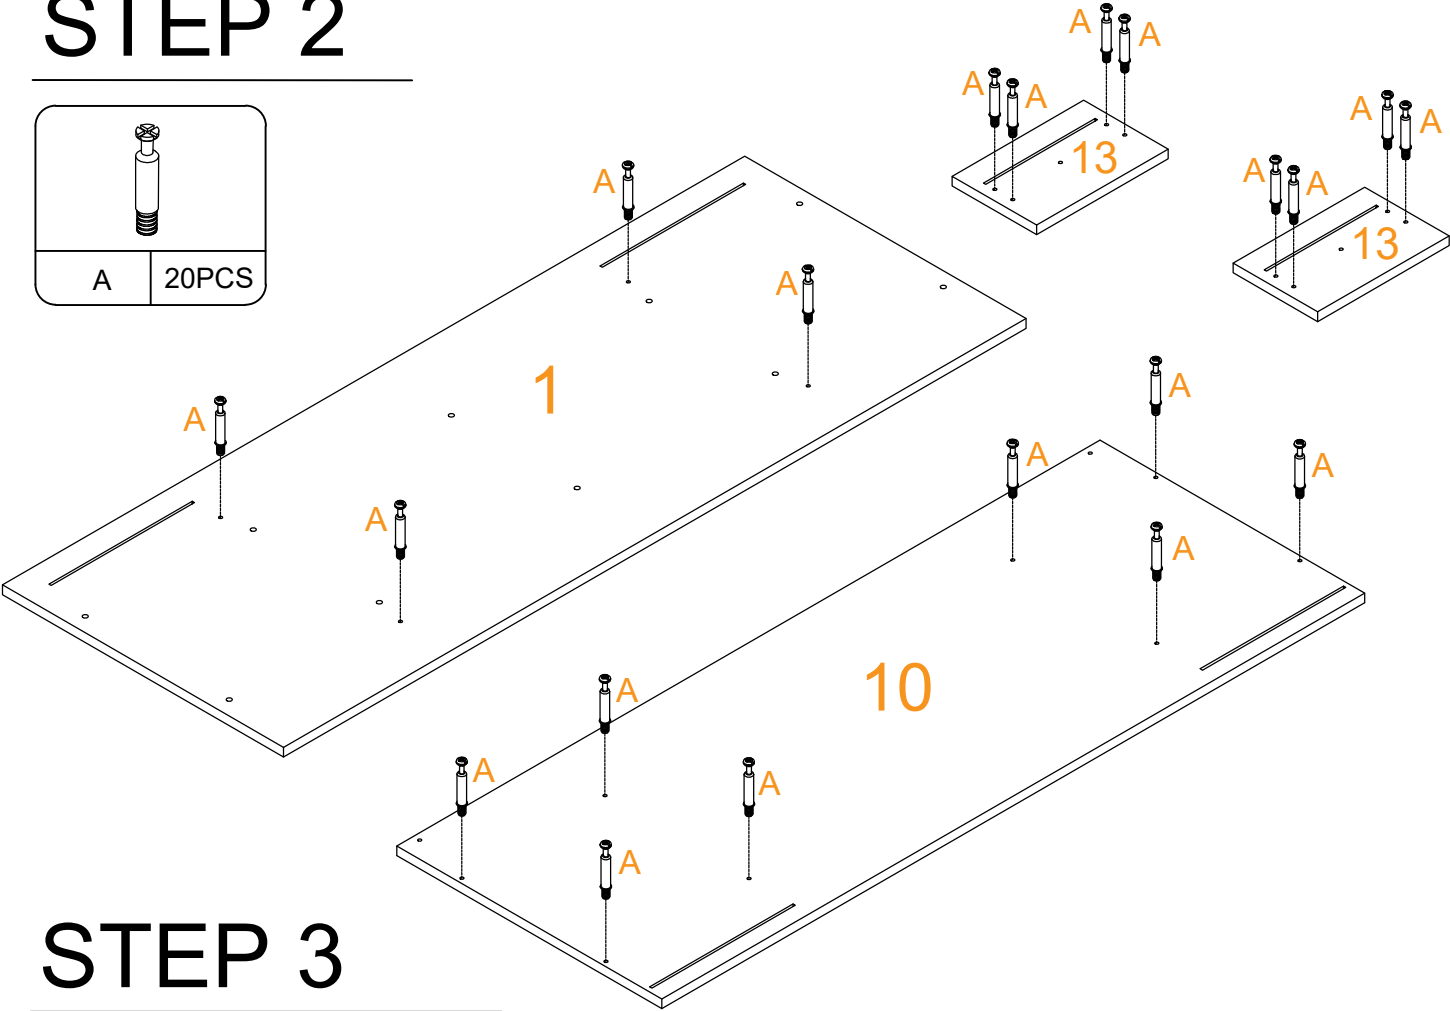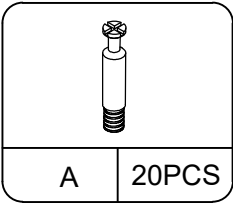

STEP 3

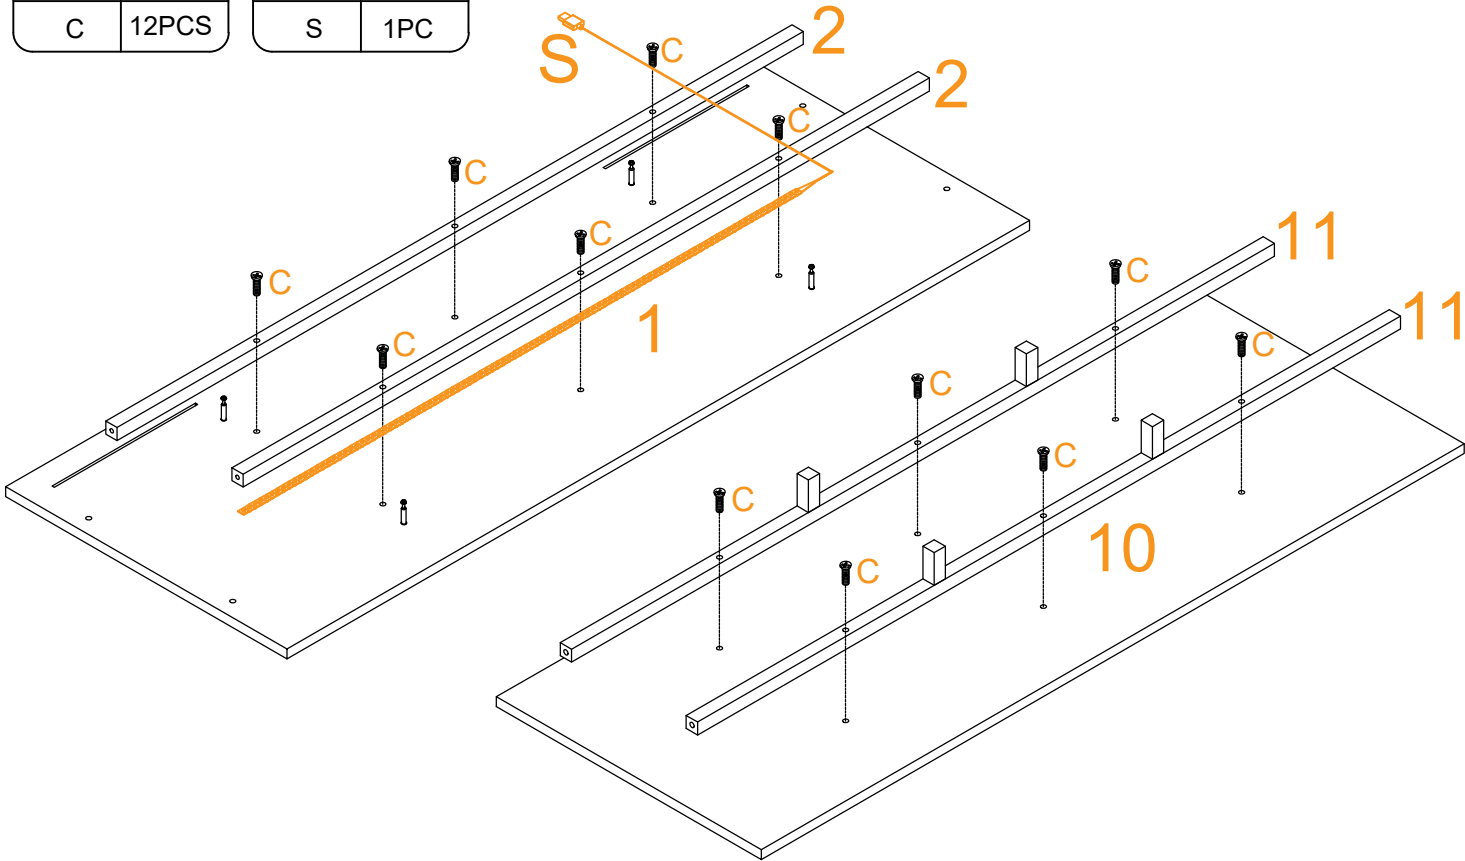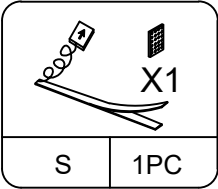
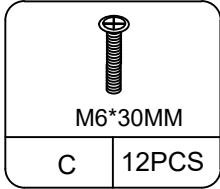


STEP 4



Ø15

B8PCS

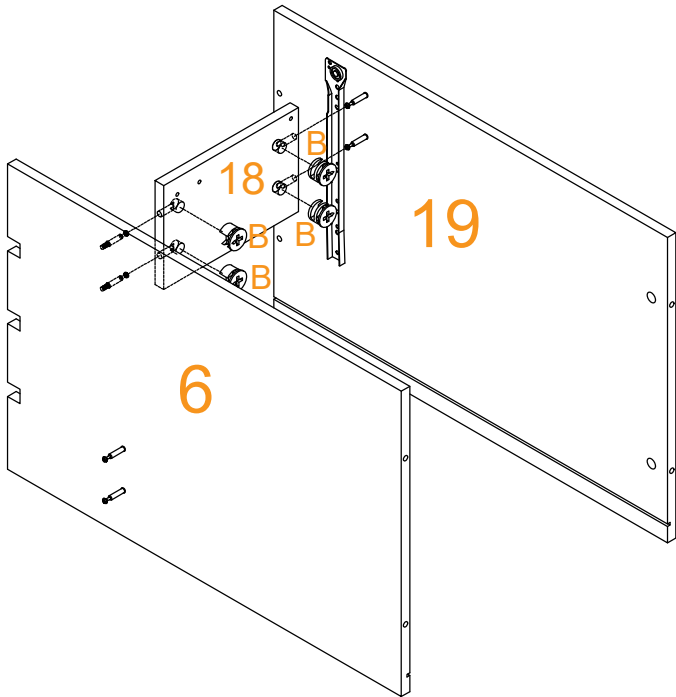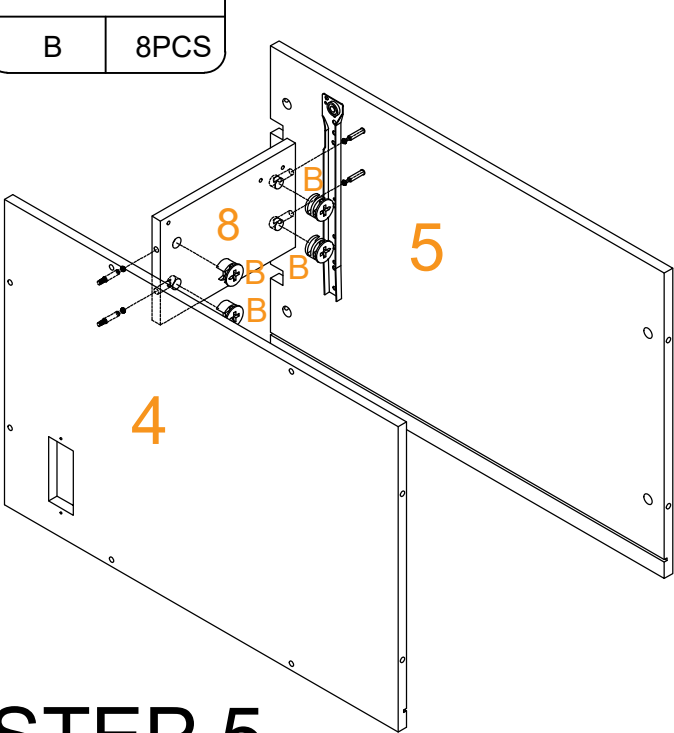

STEP 5



Ø15

B4PCS





Ø3*12mm

G4PCS



R2PCS

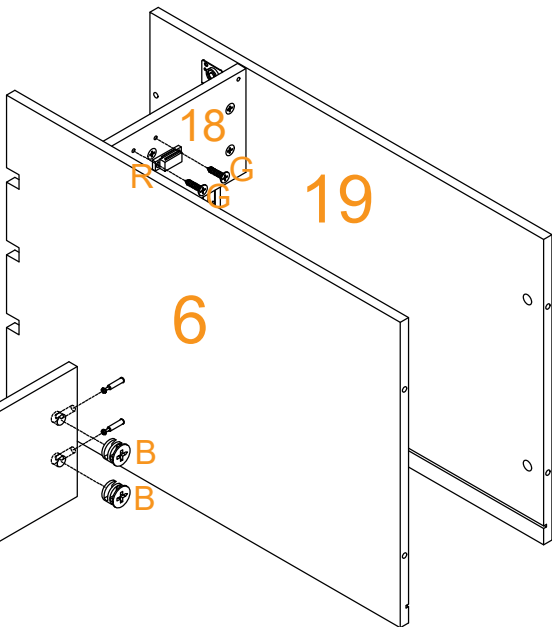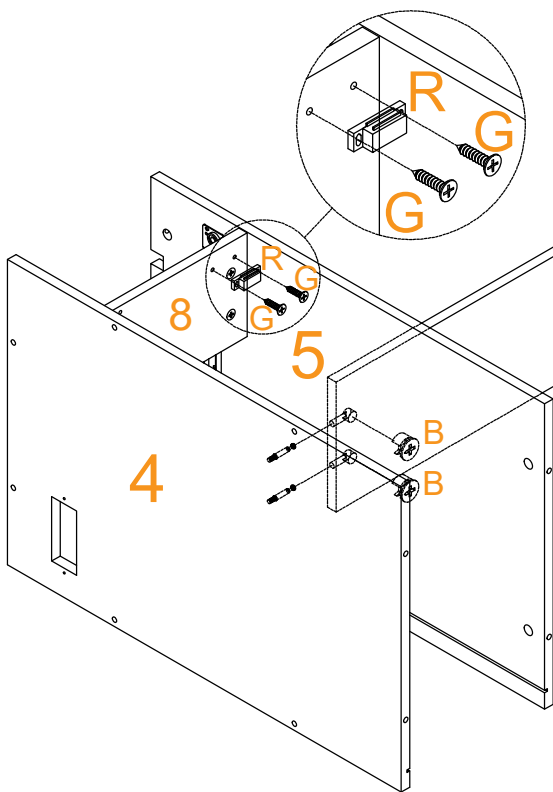


STEP 6



Ø15

B	8PCS
---	------

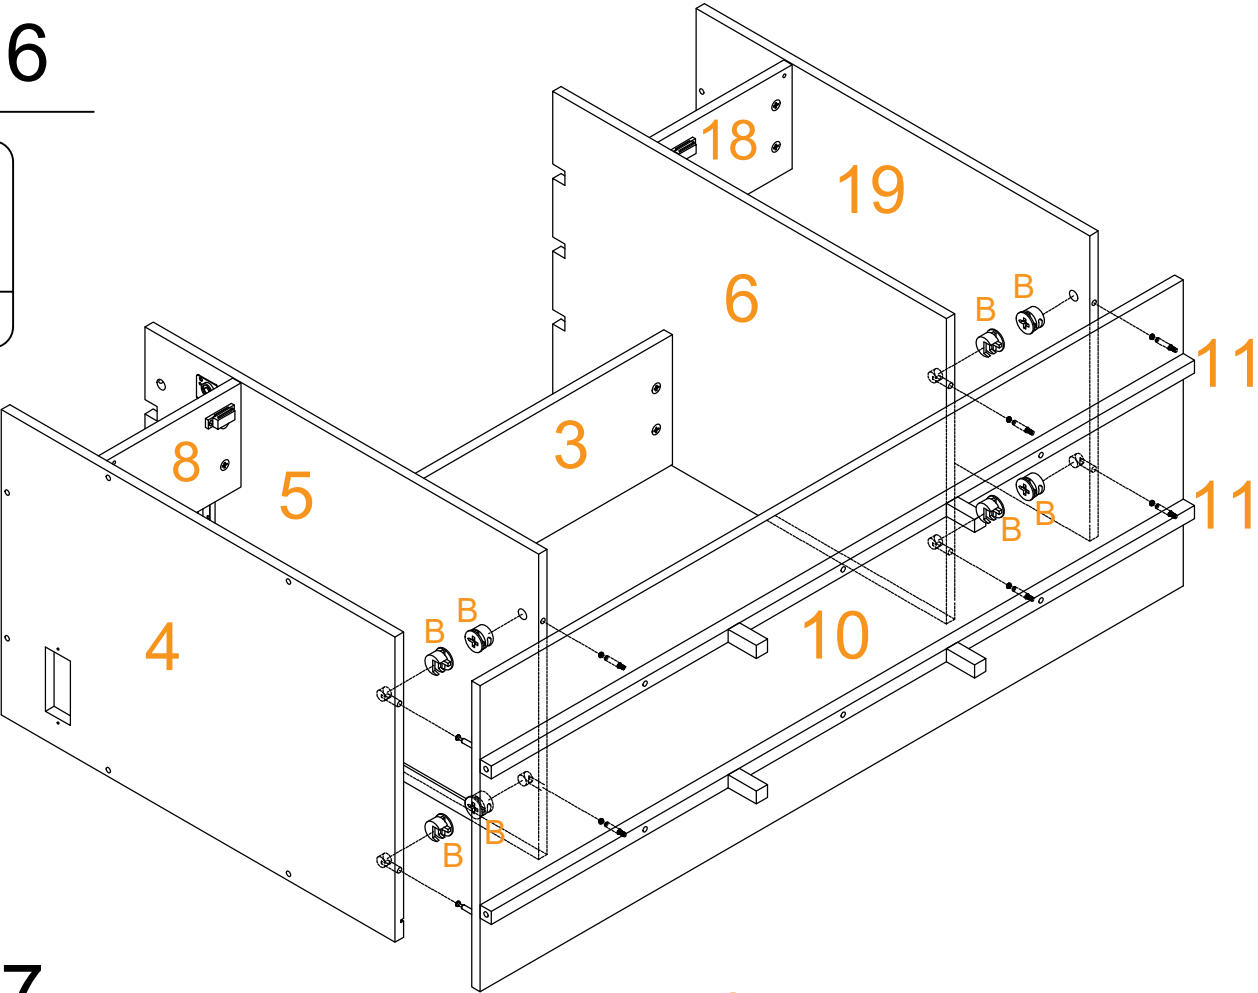

STEP 7




M6*30MM

C	8PCS
---	------




M6*50MM




P	4PCS
---	------

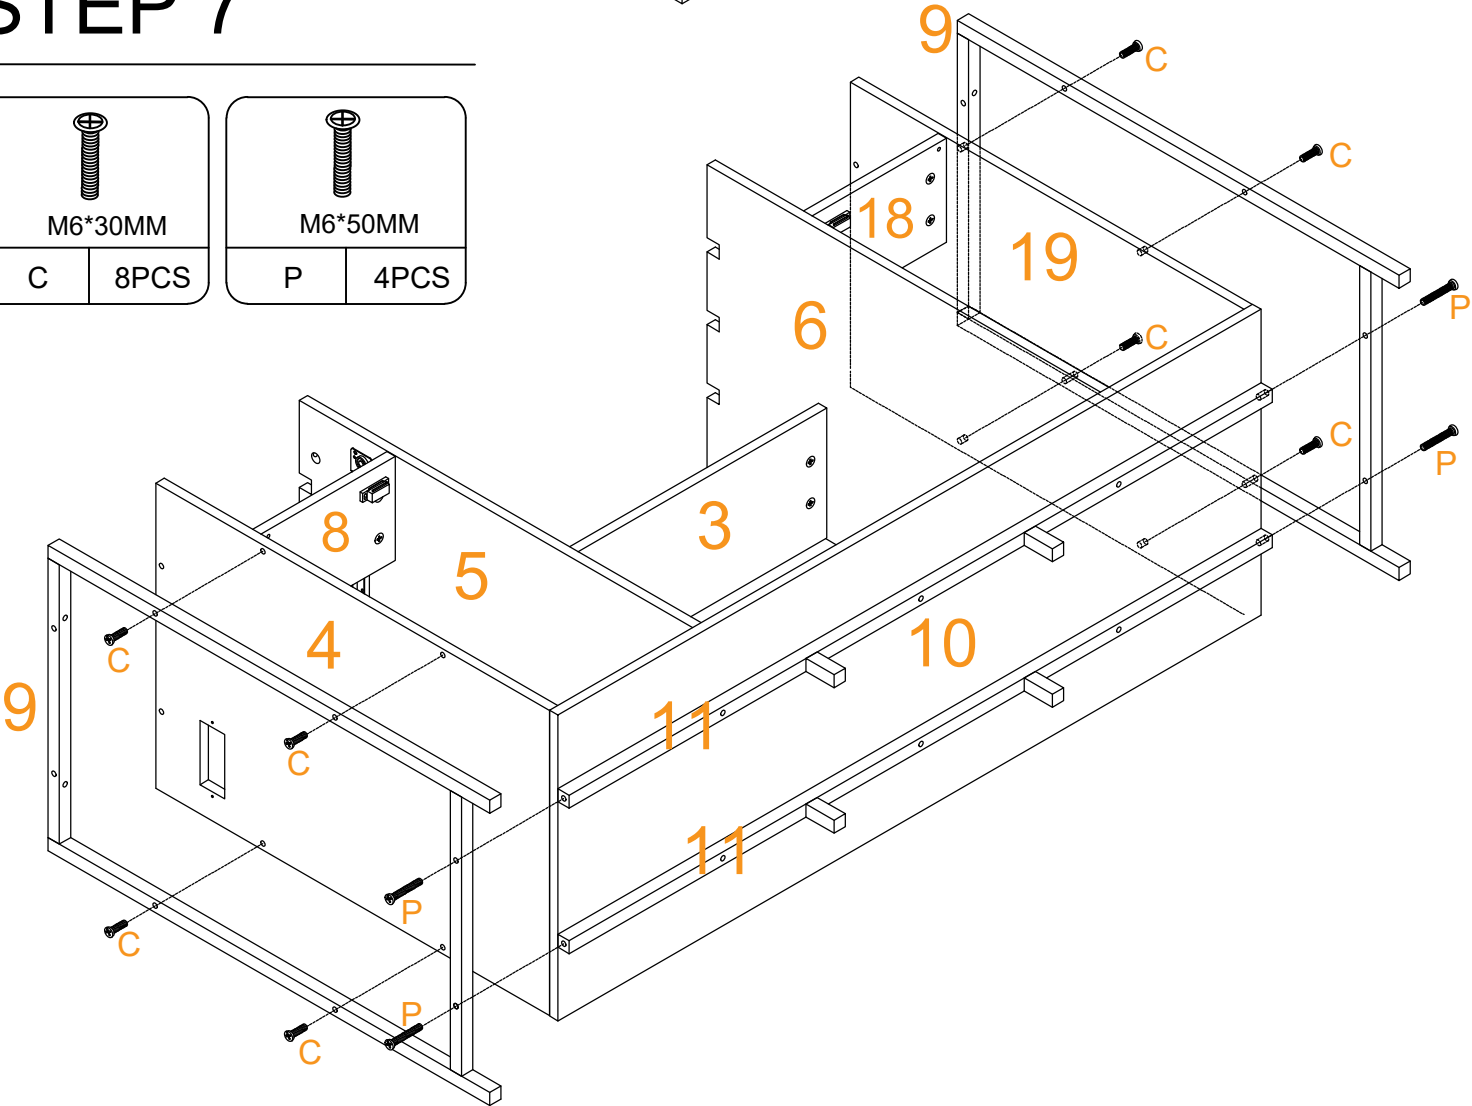




STEP 8

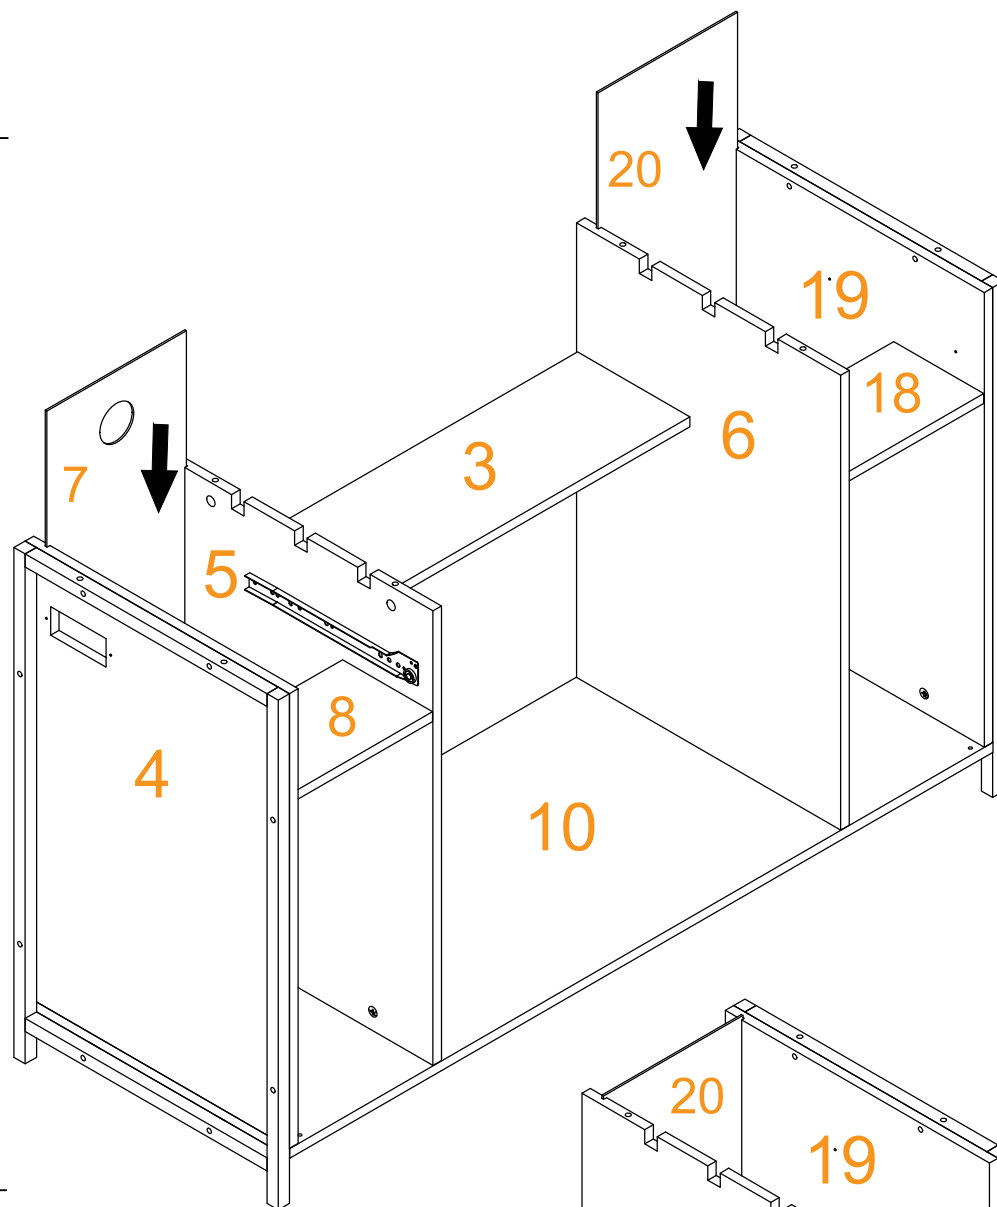



STEP 9

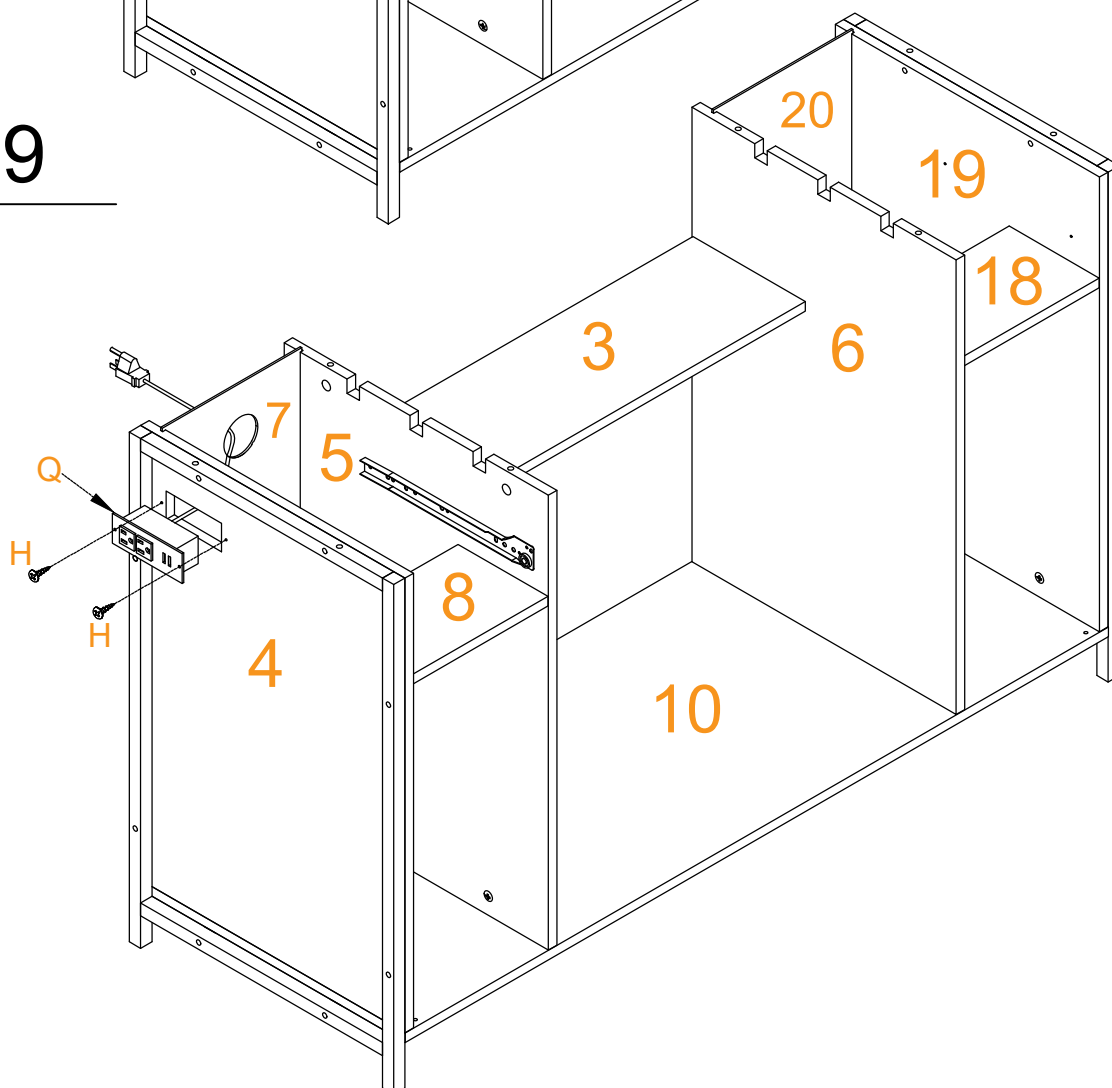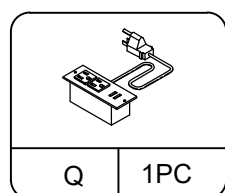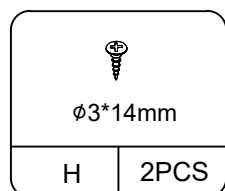

STEP 10

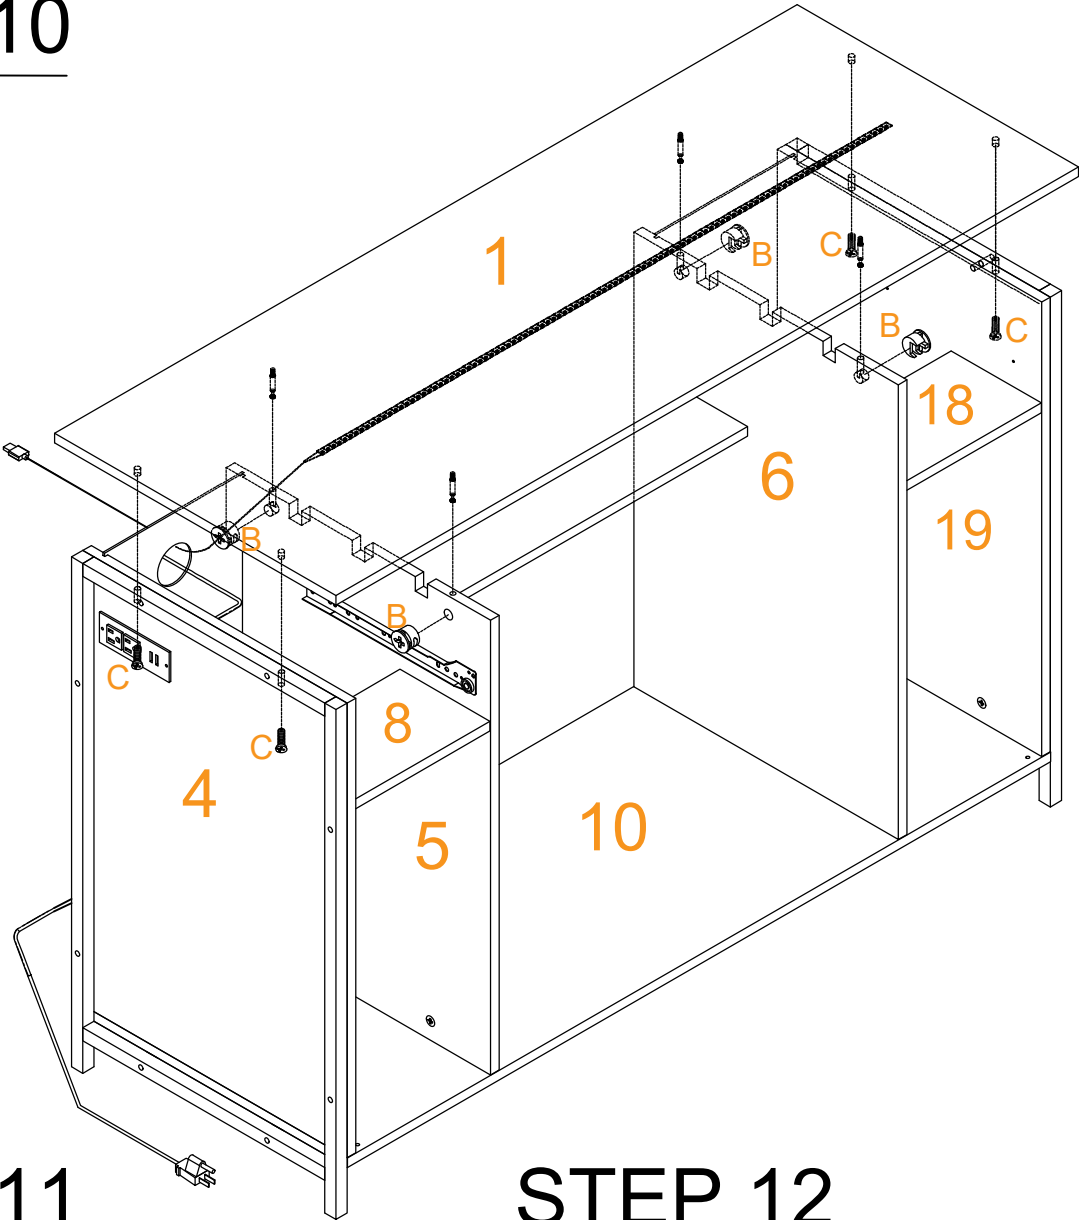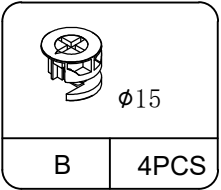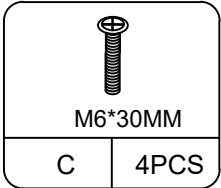


STEP 11

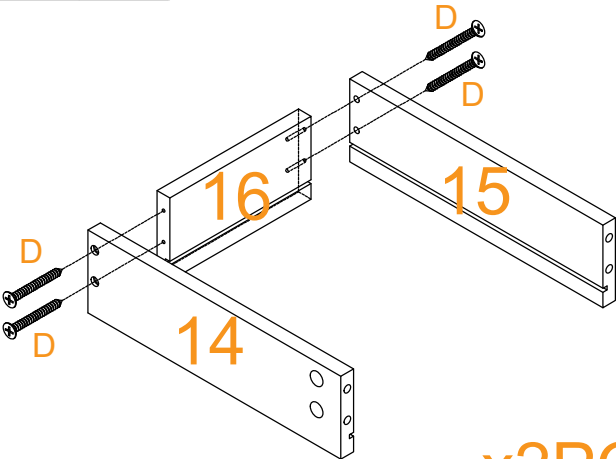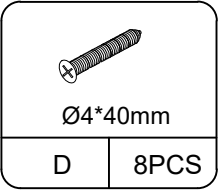


x2PCS

STEP 12

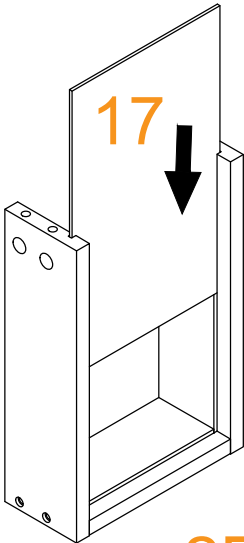


x2PCS


STEP 13

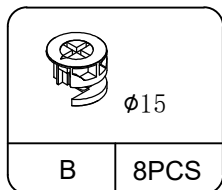


B 8PCS

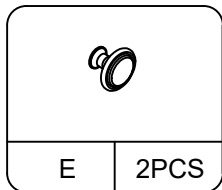


E 2PCS

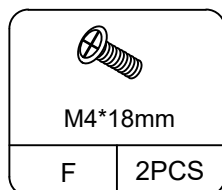


F 2PCS

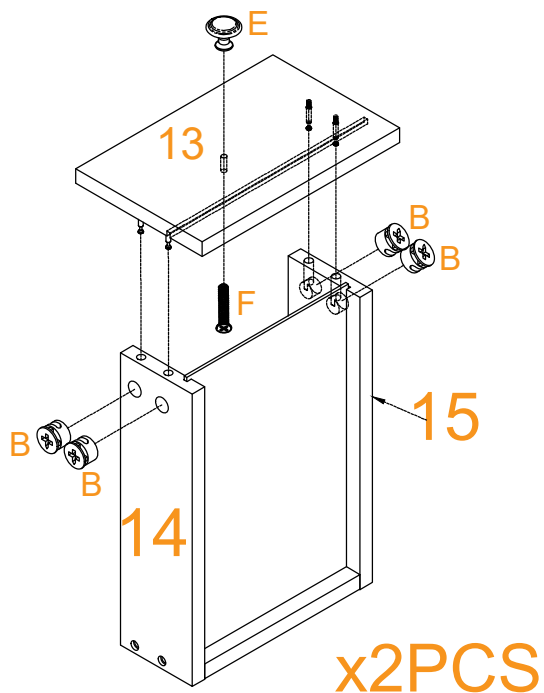


STEP 14

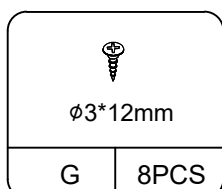


G 8PCS

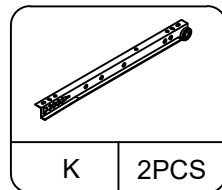








K 2PCS

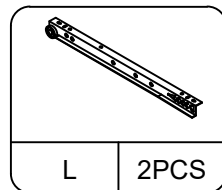



L 2PCS

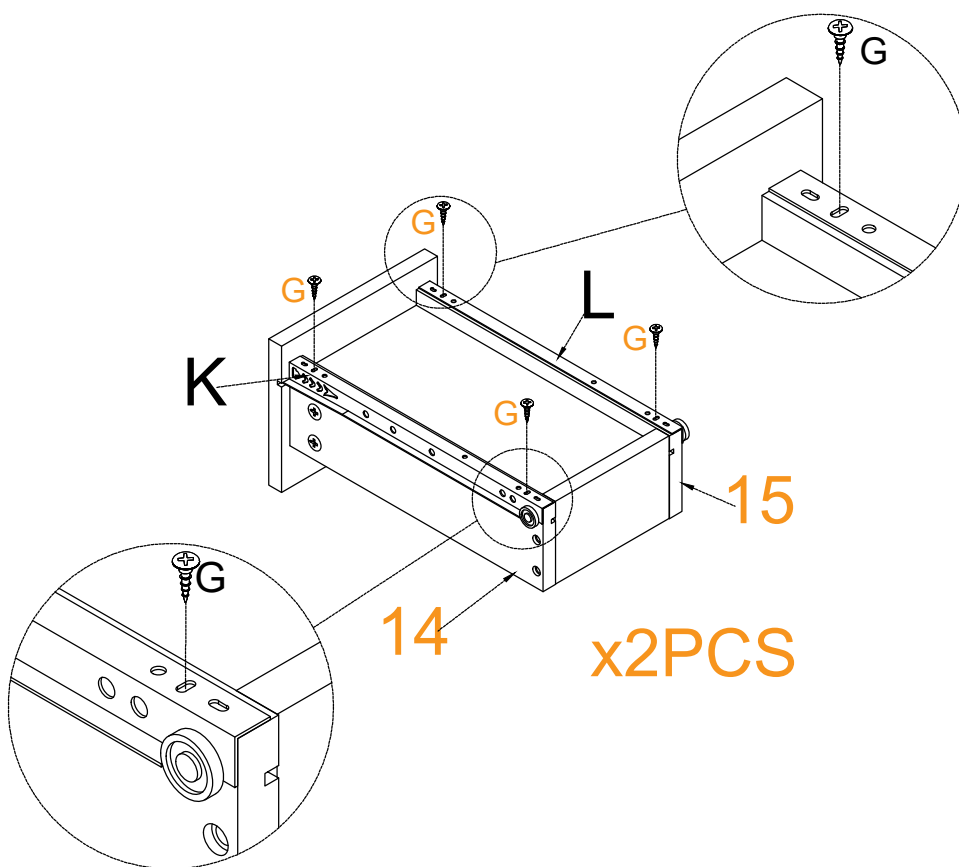

STEP 15

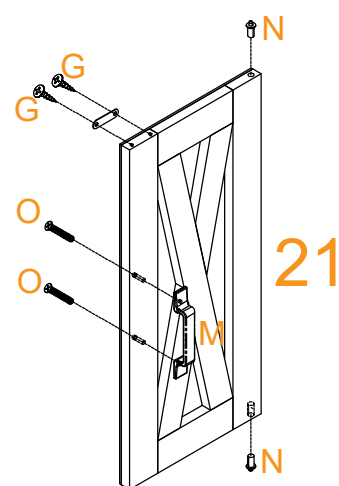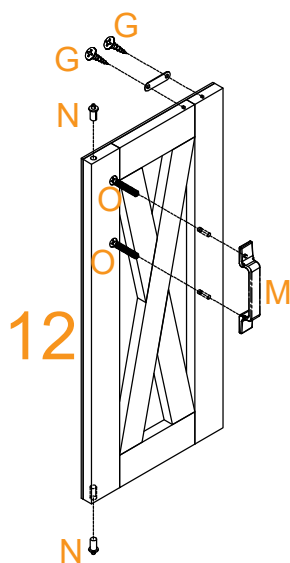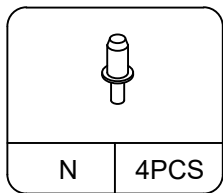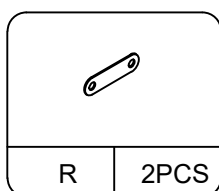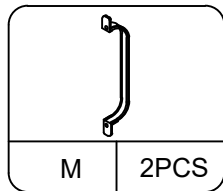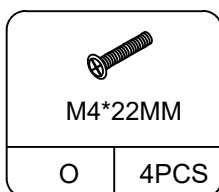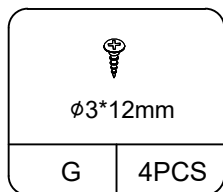

STEP 16

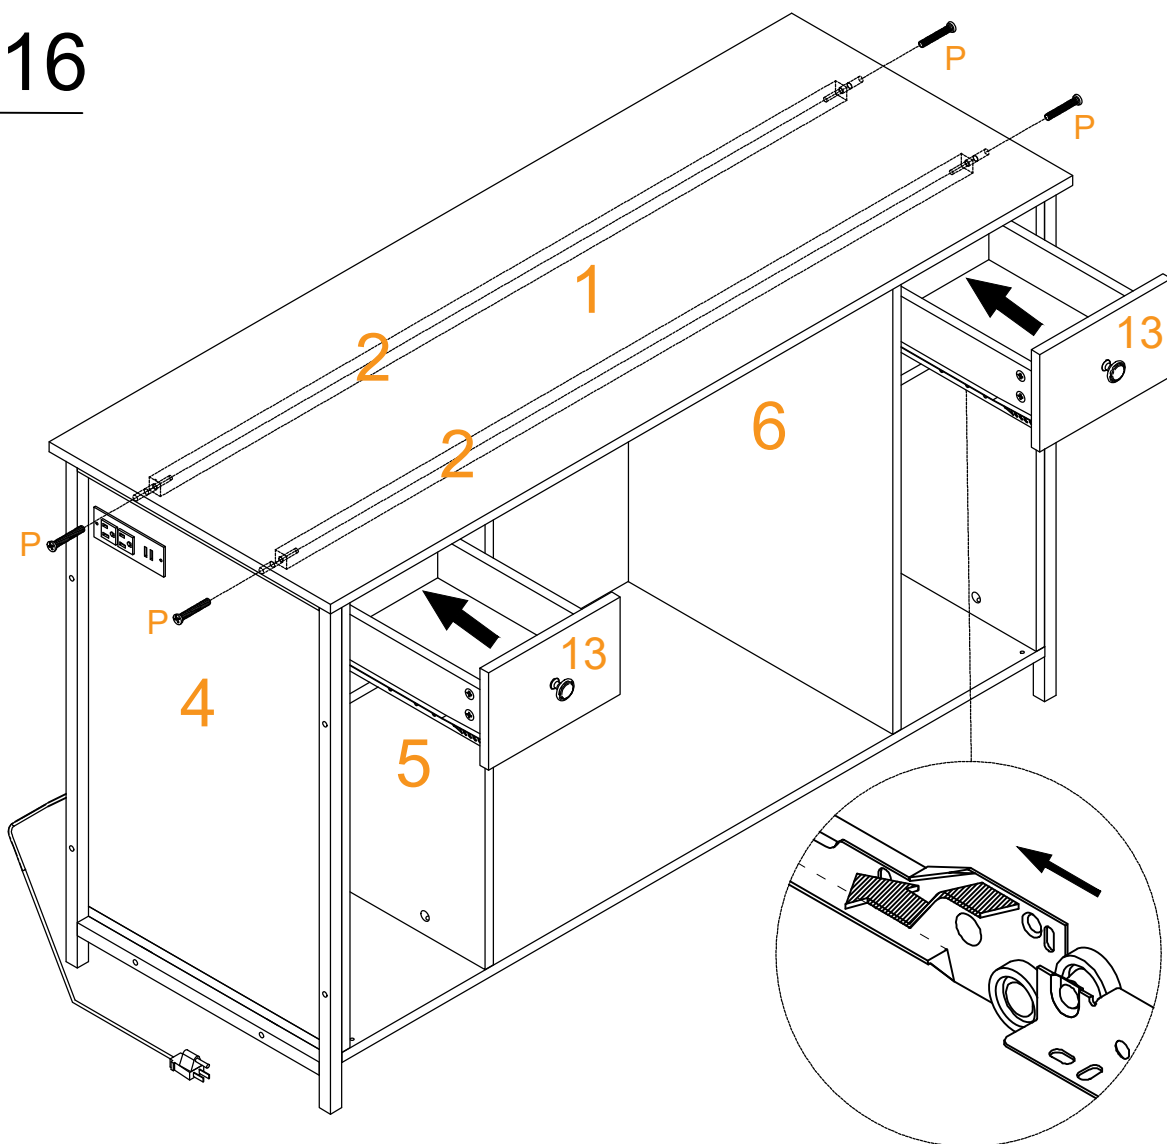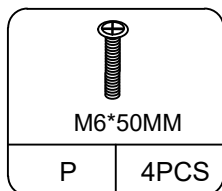

STEP 17

