

ASSEMBLY INSTRUCTION



SKU CODE:

(N709P469672-N709P469673-N709P469674-N709P469675)

INSTRUCTION DE MONTAGE


CODE SKU:

(N709P469672-N709P469673-N709P469674-N709P469675)

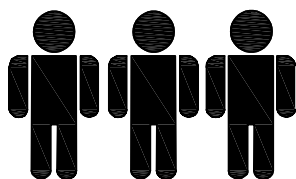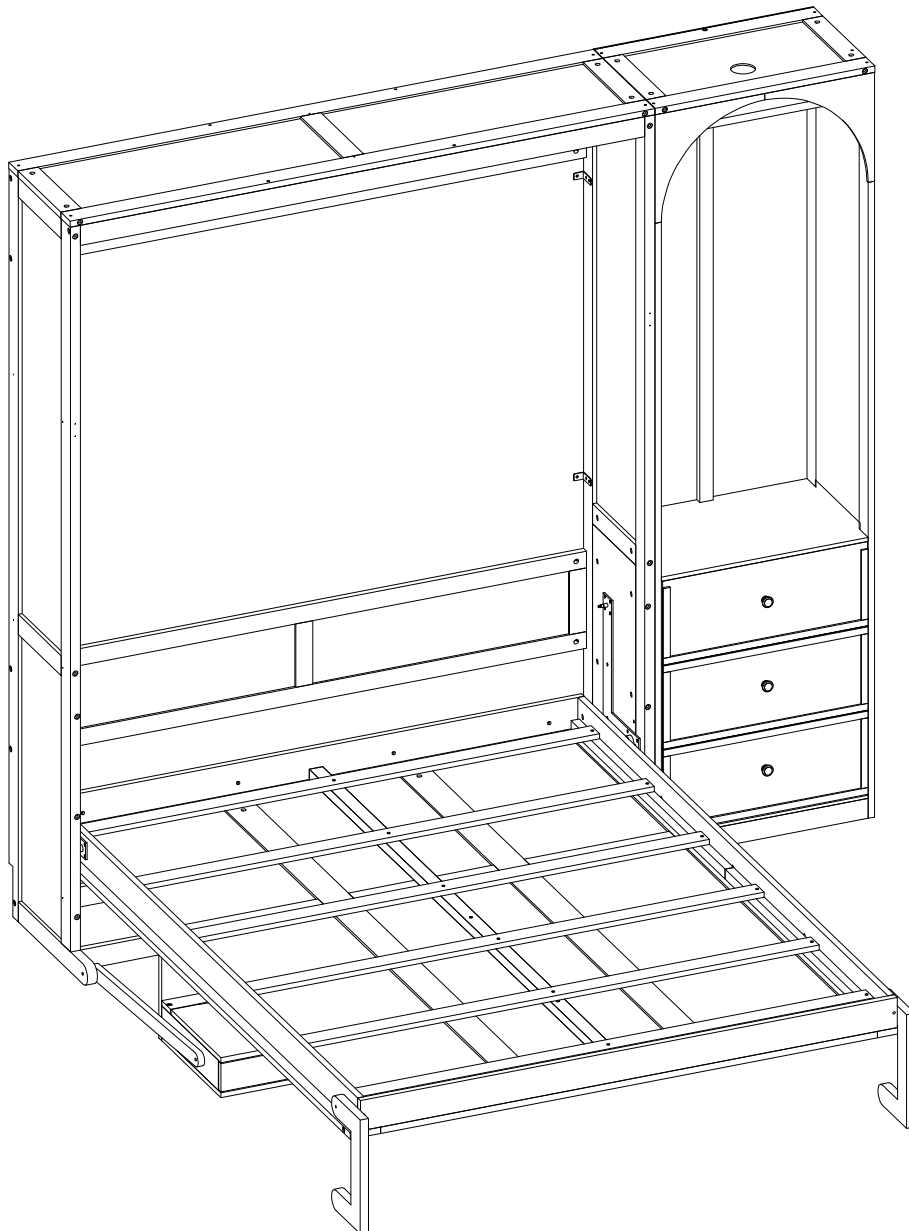


Three people are required to
assemble and move this model.

OPTION 1:

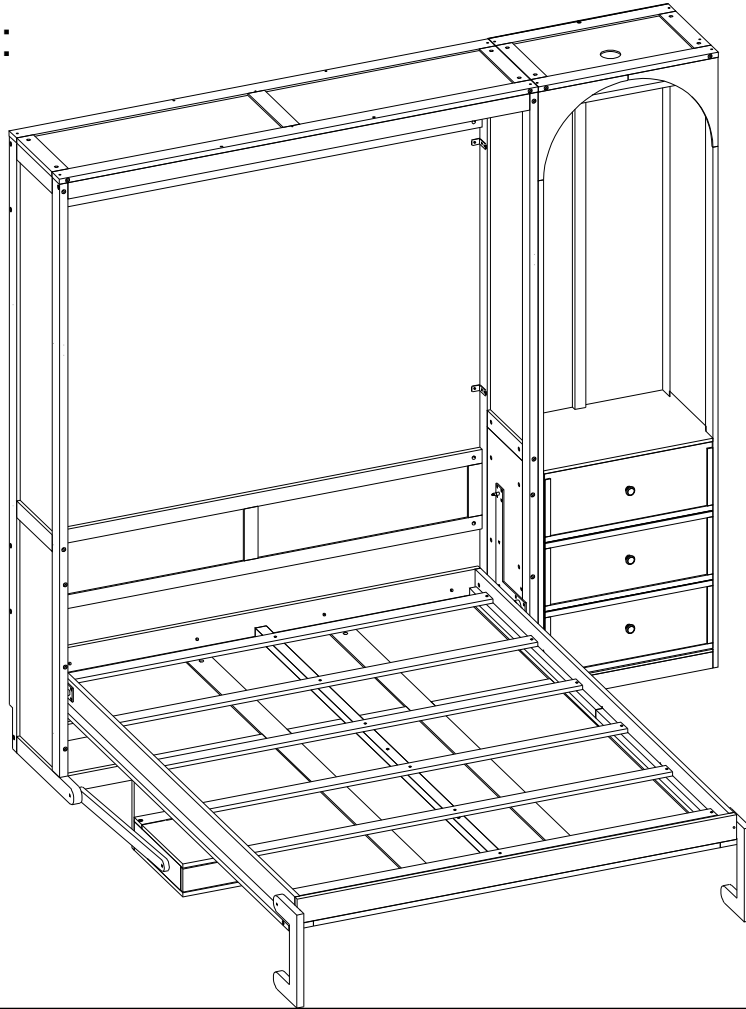

OPTION 2:

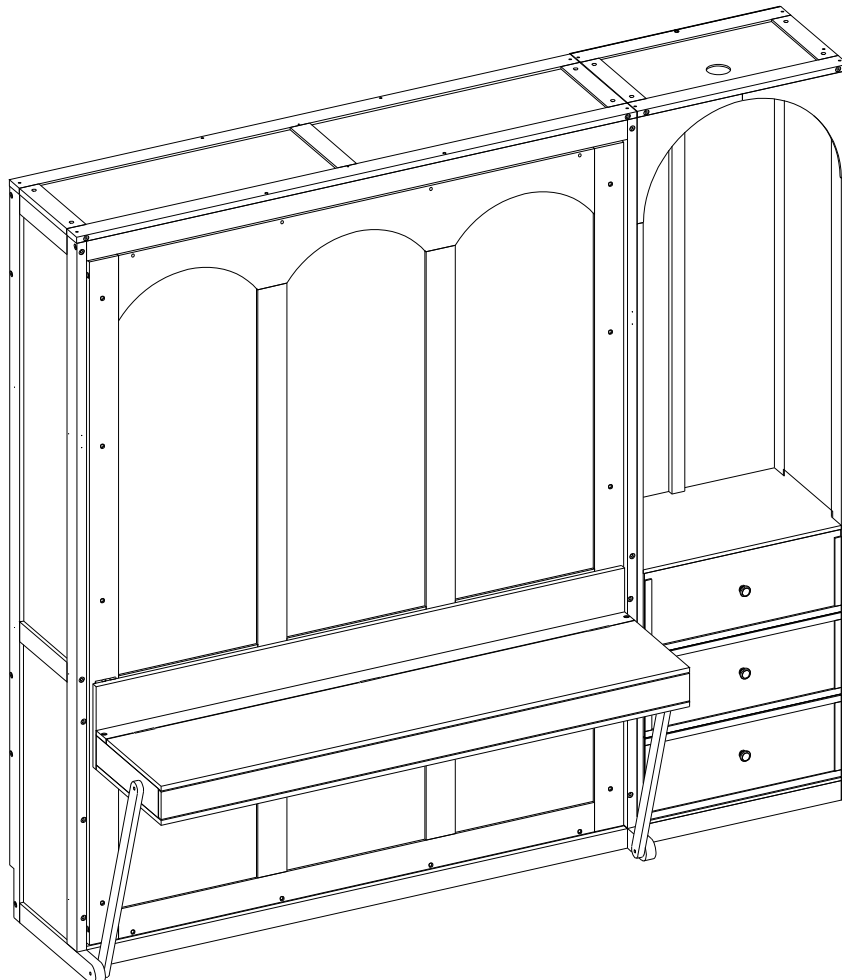

SAFETY FIRST: WALL ANCHORING IS NON-NEGOTIABLE

MURPHY BEDS MUST BE SECURELY ANCHORED TO STRUCTURAL MEMBERS. NEVER MOUNT SOLELY TO DRYWALL. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH.

ABSOLUTELY FORBIDDEN HARDWARE



PLASTIC ANCHORS - WILL FAIL

A. WOOD STUD WALL


HOW TO IDENTIFY



KNOCK ON A
HOLLOW WALL



STUD FINDER
TOOL (MITS)

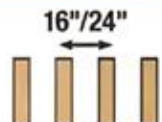


STUDS SPACED
IS 16" STUD

REQUIRED HARDWARE



HEAVY-DUTY SCREWS (MIN. 5/32" DIA., 2.5" LONG)

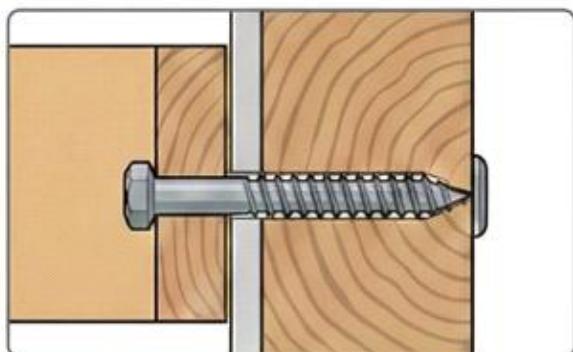

MUST PENETRATE WOOD STUD CENTER AT LEAST 2.5"

B. MASONRY/CONCRETE WALL

HOW TO IDENTIFY



KNOCK ON A
SOLID WALL




DRILL BIT CREATES
GREY/RED DUST

REQUIRED HARDWARE




ALL-METAL EXPANSION BOLTS
(MIN. 5/32" DIA., 2.5" LONG)

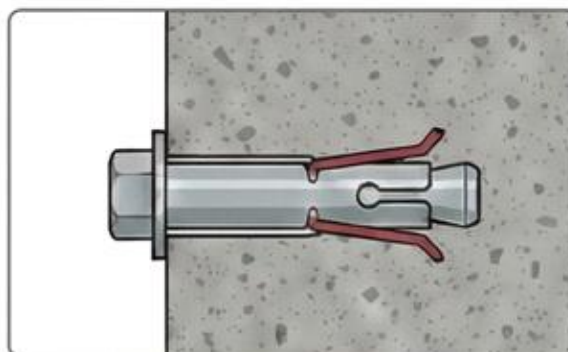

CLEAN HOLE OF DUST. **DO NOT** USE PLASTIC.

FINAL SAFETY CHECKLIST



VERIFY STUD CENTER BEFORE DRILLING



ENSURE FLUSH WALL FIT (ADJUST BASEBOARD)



PERFORM PULL TEST BEFORE MATTRESS LOAD



AVOID HIDDEN WIRES/PIPES BEFORE DRILLING



REGULARLY INSPECT AND MAINTAIN WALL ANCHORS



CONSULT A PROFESSIONAL FOR WALL ASSESSMENT
AND OPTIMAL HARDWARE; CUSTOMER ASSUMES
ALL INSTALLATION LIABILITY

IMPORTANT INFORMATION PACKAGE.



THIS INFORMATION PACKAGE CONTAINS WARNING AND PRODUCT SAFETY INFORMATION. DO NOT PROCEED WITHOUT REVIEWING THOROUGHLY.

A. WARNING LABELS.

Your purchased Murphy Bed is delivered to you with WARNING LABELS to constantly remind you to take and adopt Safety Measure throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.


These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.

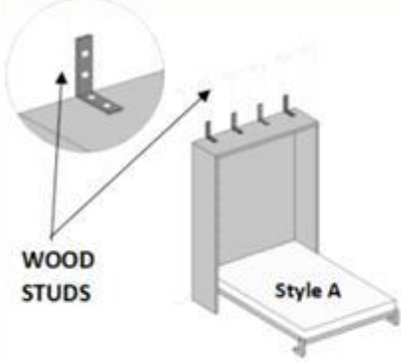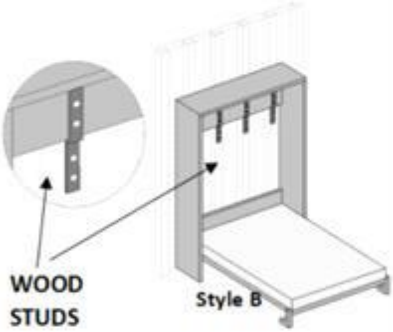 WARNING.	
<u>IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall.</u> <u>For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.</u> Seek Certified Professional Consultant / Contractors for their Services to: 1.) DETERMINE the WALL Type in Your Home; 2.) PRECISE HARDWARE that suits to the Wall Type in Your Home; 3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home; 4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached. The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls and hardware fittings suitable for fixing on CONCRETE SOLID walls. Please select the correct wall-fixing hardware. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS or CONCRETE SOLID WALLS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material. Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attachment of the Murphy Bed to the Wall. <u>FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.</u> <u>SAFETY PRECAUTION :</u> 1.) MAXIMUM Mattress Weight suited to your Murphy Bed : <u>77 lbs (35 kg)</u>; MAXIMUM mattress thickness: <u>8 inches (20 cm)</u>; 2.) ENSURE ADULTS ONLY throughout the entire assembly and attachment. 3.) KEEP ALL Children, Non-Ambulatory persons and Pets at bay during the entire assembly and attachment.	 WOOD STUDS Style A  WOOD STUDS Style B WOOD STUDS walls - Locking wall illustration LINE ART for Reference only and NOT DRAWN TO SCALE.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

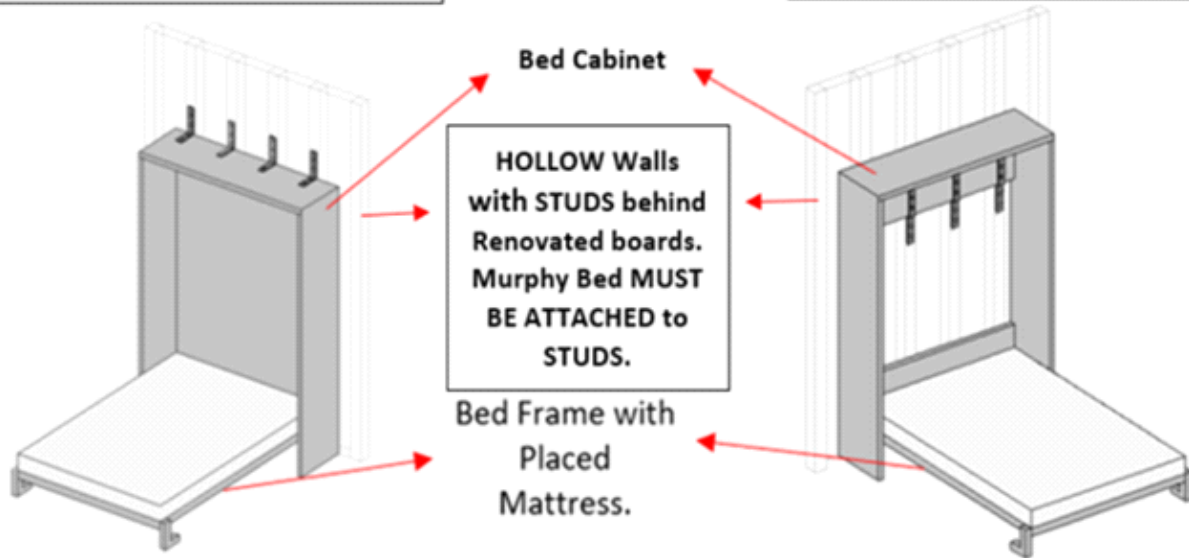

B. SAFETY REMINDERS. **MARKINGS in WALL - WHERE TO ATTACH the MURPHY BED.**

Irrespective of the wall type, whether Solid Concrete Walls OR Decorative Walls with WOODEN Studs OR Decorative Walls with Metal Studs, ensure that

- a.) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.
- b.) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.
- c.) the relevant and appropriate Hardware with Metal Brackets are READY for this attachment and are within easy access for prompt and efficient attachment.

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.

To have your Murphy Bed fully assembled and to achieve its intended functionality - you MUST READ through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.

2.) CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.

3.) PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly. Ensure at least 3 (three) ABLE BODIED PERSONS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.

4.) CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely at bay.

5.) SAFETY REMINDER on / to : Personal, Family Members and Pets. The Murphy Bed may be shipped to you in 3 to 5 packages and are HEAVY. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small* in size.

*. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and /or Pets do not play or ingest these.

6.) This Murphy Bed is intended for ADULT USE ONLY.

7.) This Murphy Bed is delivered with pre-installed hardware for the wood studs and the concrete solid wall - please choose the appropriate hardware according to the type of the wall.

8.) Your Home's Wall Type - Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :

- a.) SEEK and CONSULT Professional Services to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;
- b.) ENSURE the Consultant-Contractor specifically INFORMS you of the WALL TYPE in the designated spot where you intend to attach the Murphy Bed.
- c.) ENSURE the Consultant INFORMS you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.


9.) WARNING - YOU MUST HEED THE INSTRUCTIONS given by your appointed Consultant-Contractor on the :

- a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS or NOT CONCRETE SOLID WALL, the pre-packed hardware not match/ not fit.
- b.) Number of Mounting Points for the Murphy Bed to the Wall.

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.

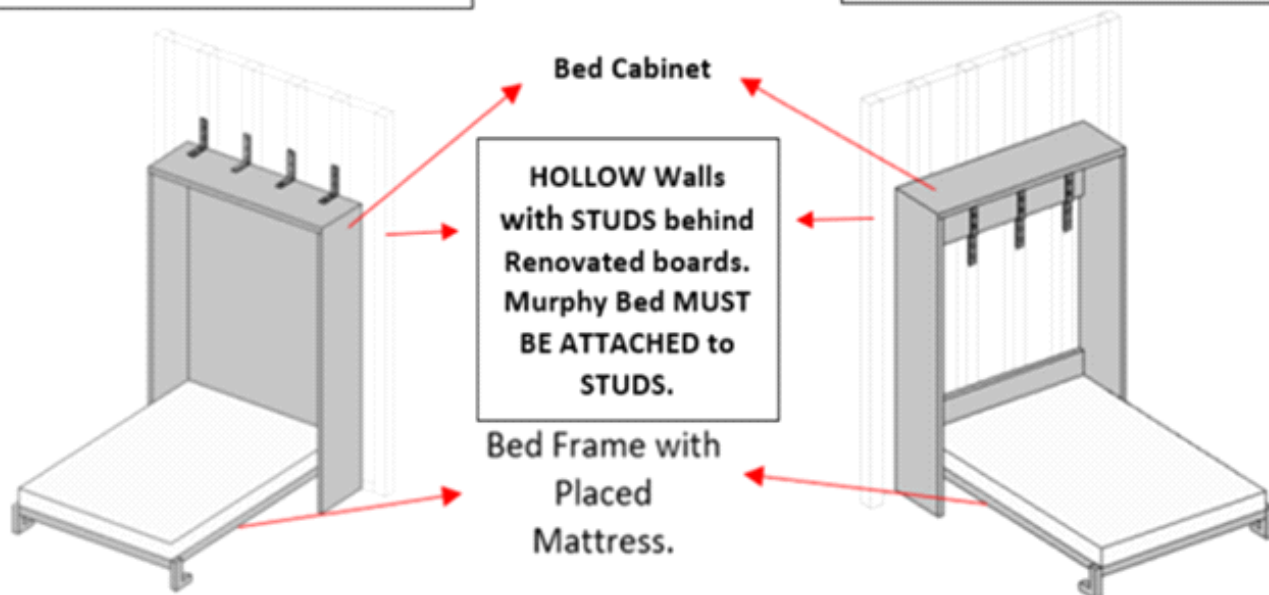

11.) This Murphy Bed is designed for home use and not intended for commercial use.

12.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

C.) MOUNTING INFO & HARDWARE.


1.) REMINDERS :

- a.) In the event, that this pre-packed Screws Set does not match to the walls in your home - DO NOT USE / DISCARD these hardware.
- b.) ADHERE to the Professional Consultant-Contractor instructions and information on the RELEVANT mounting hardware that suits your wall.
- c.) Procurement of these RELEVANT hardware is an arrangement made between your Consultant-Contractor and you.


2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. DO NOT lean against the Top of the Murphy Bed, it may cause sagging.

Murphy Bed Style A

L-Bracket Fixture to Wood Studs

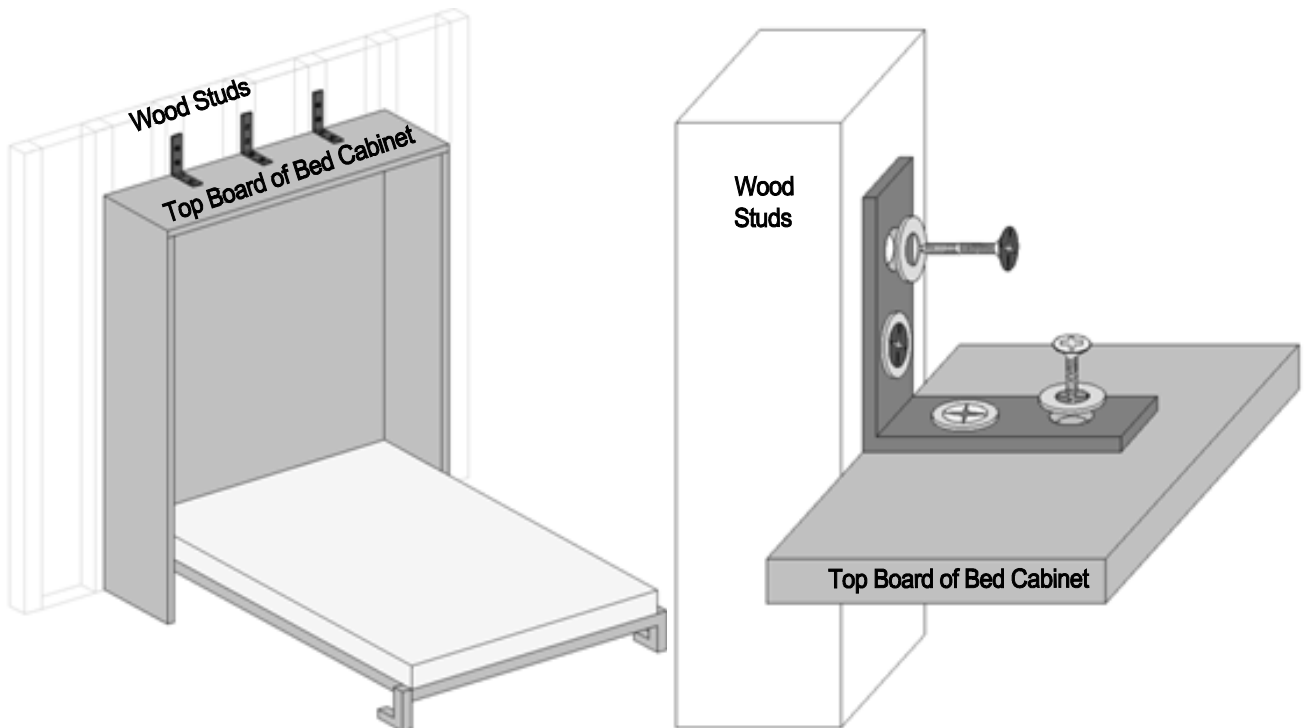

Z-Bracket Fixture to Wood Studs

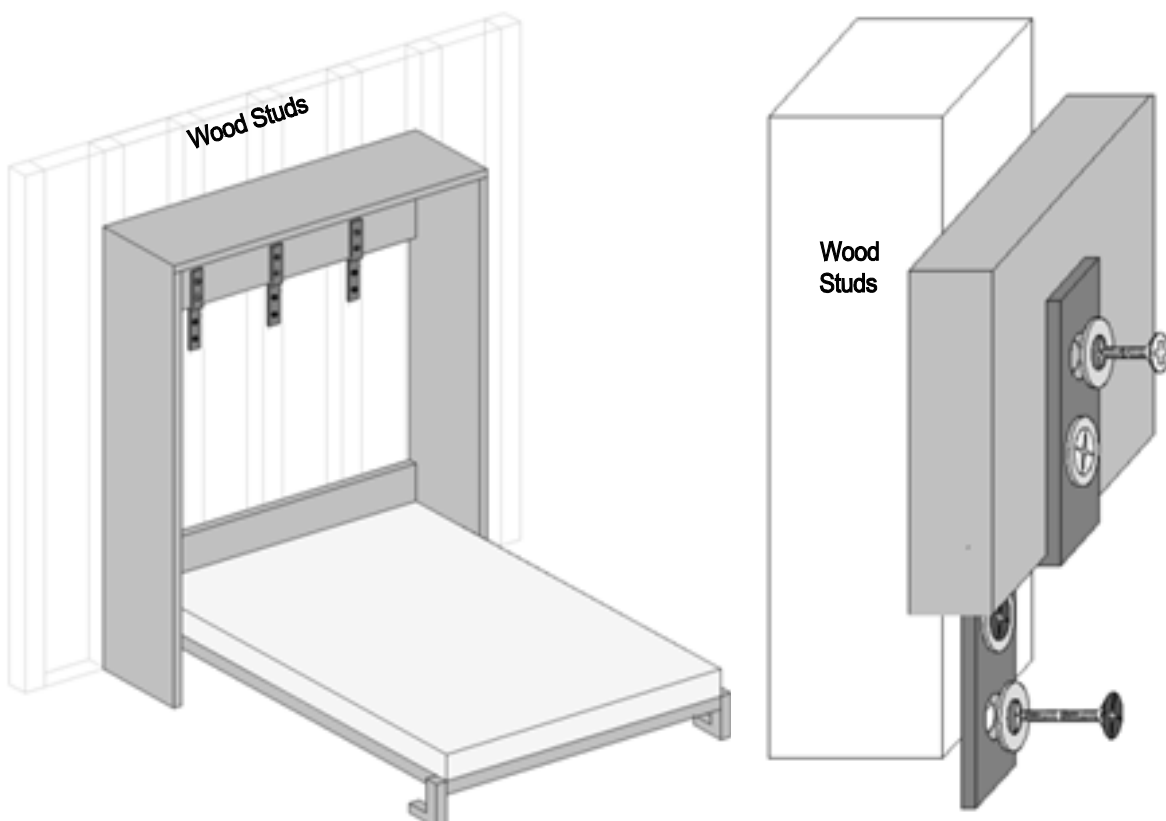

D.) IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions with attention.

For an efficient assembly, after opening the cartons shipped to you :

- a.) open and layout all parts and components in sequence;
- b.) account for every part, hardware and component;
- c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Bed Frame and Bed Cabinet to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner - proceed to tighten each bolt & nut & screw gradually.

CAUTION :

- 1.) The METAL PLATES to the sides of the Side Rails - MUST BE FULLY and SECURELY TIED to the SIDE RAILS.
- 2.) The Piston L-Brackets that are attached to the INNER WALL of the Bed Cabinet - MUST BE FULLY and SECURELY TIED to these Inner Walls.
- 3.) These Metal Plates and the L-Brackets - are the components that are holding the Pistons that allow your Bed to “travel” to an OPEN or CLOSED position.
- 4.) Frequent Inspections of these Metal Plates / Brackets and Pistons Bolts, up to Once a Month - to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Bed Frame and or Bed Cabinet or Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.

REMINDER : NEVER FULLY TIGHTEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E. ALL ASSEMBLY WORKS REQUIRES A TEAM OF NO LESS THAN 3 ADULTS.

Reminder : Per above info, the cartons and products are heavy - therefore exercise CAUTION at all times and ENSURE YOUR TEAM OF 3 for the entire ASSEMBLY.

F.) ASSEMBLY OF BED CABINET.

Identify all parts and components for the Bed Cabinet.

Assemble the Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED BED CABINET and position this BED CABINET some 2feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER - The Cabinet is NOT ATTACHED TO THE WALL, YET. From here on - YOU MUST HAVE 2 ADULT to HOLD and STABILISE this BED CABINET, to prevent the Bed Cabinet from TIPPING OVER.

G.)THE FIXATION OF THE BED CABINET

Fix the bed cabinet to the wall using wall-mounted hardware, and check to ensure that the bed cabinet is securely fastened to the Wood Studs or Concrete Solid Wall.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

H.) ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.

Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

I. ATTACHMENT OF BED FRAME TO BED CABINET.

Using the lifting hardware (compressed pneumatic/hydraulic rods and other hardware fitting), follow the installation instructions to securely connect the bed frame and the bed cabinet together. This process requires at least 3 (three) adults.

You may need to - LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pistons to be hooked to both ends of the hanging bolts in the Inner Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pistons.

J.) Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Cabinet is fully and securely attached as ONE UNIT - affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5feet (1.5m) from ground.

K.) Warning for Selecting a Mattress

Recommended Mattress weight (55)lb or (25)kg / Recommended Mattress thickness (6)in or (15)cm - Your Murphy Bed is made having taken into consideration the Bed Frame Weight and Mattress weight to pair with the Pistons Newton Force.

Therefore, load your bed with the RECOMMENDED MATTRESS Weights, Size and Thickness as stated here in the assembly instructions.

DO NOT LOAD any heavier and or LARGER and or LIGHTER Mattress than what is recommended here.

L.) MATTRESS PLACEMENT.

Have 1 to 2 persons - place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons - carry and place the Mattress (within the recommended weight and thickness) and gently place the Mattress on to the Bed Frame.

M.) PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a STRONGER force to be pulled down before you can place the Mattress.

This RESISTANCE to be PULLED DOWN is a normal characteristics of the Pistons Newton-Load force is "in action".

N.) BED STRAP - GUIDE STRAP

Your Murphy Bed may or may not come equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame some 6 inches or so off its resting position. Then use both hands to FULLY LIFT HOIST the Bed Frame to its closing position.

SAFETY REMINDER :

1.) DO NOT USE THE BED STRAP to PULL DOWN TO OPEN the BED FRAME from its CLOSED POSITION.
2.) DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPENED-HORIZONTAL position, to the CLOSED POSITION.

Both the above may cause injury and or unnecessary strain to your arm(s).

O.) USING YOUR MURPHY BED.

For EVERY USE - exercising Safety Precautionary Measures to ensure the safety of your family members and pets are IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are at bay.

KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.


P.) CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.

Every time you Pull to OPEN the Murphy Bed from its closed position OR Lift-Pull to CLOSE the Murphy Bed to stow it into the Bed Cabinet -

- . give these actions your focused and dedicated attention.
- . DURING EVERY OPENING and CLOSING of your Murphy Bed - always ensure you have an Adult Partner close by for added assistance, where necessary.
- . DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bedframe. For if you do, the resistance of the Piston will only make it harder for you to complete the task.
- . TO CLOSE the Murphy Bed : depending on your height - stand some 6inches to 10inches away from the FootBoard edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - GENTLY LIFT-PULL to Close your Murphy Bed.
- . TO OPEN the Murphy Bed : using equal force - place your hands to the installed grab handle and GENTLY PULL towards you to Open. As you pull Open the Murphy Bed - proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.
- . During EVERY OPENING or CLOSING of the Murphy Bed - at about your hip level - you may find that you need to rotate your hand / wrist - take caution here to prevent injury.

- . During EVERY OPENING and CLOSING, keep Children and Pets and Non Ambulatory Persons at bay.
- . NEVER allow your children to treat this Murphy Bed as a Hide and Seek place of fun or jump on the bed.
- . Care & Maintenance - Depending on the frequency of use of your Murphy Bed, it is recommended that you take precautionary Care and Maintenance. It is advisable to conduct NO LESS THAN 2 to 3 checks annually on these mounting points & pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

Safety Latches - Your Murphy Bed comes with the Safety Latch. These are to be attached at, both the TOP LEFT and TOP RIGHT hand upper portion, minimum of 5 feet (1.5m) from ground, of the Bed Frame / Bed Cabinet. Monitor and Inspect these frequently.

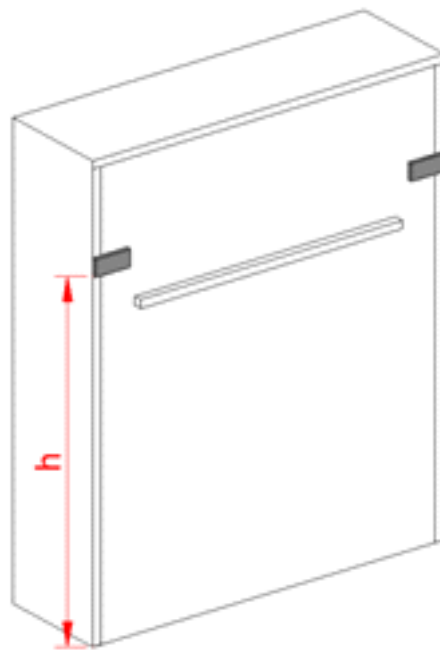

- Whenever NOT in use and after the Murphy Bed has been LIFTED and stowed in its CLOSED POSITION - ALWAYS LATCH UP.

Frequently Asked Questions. Malfunctioned Pistons.

How do you know when the Murphy Bed's Piston has malfunctioned?

It would be quite evident in that :

- a.) the Bed Frame may become LOPSIDED and
- b.) the Lift-PULL force to CLOSE may be "heavier" than before.

IMMEDIATELY - STOP USING YOUR MURPHY BED.

SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pistons changed.

ASSEMBLY INSTRUCTION


SKU CODE:


(N708P416498-N708P416499-N708P416500-N708P416501)

INSTRUCTION DE MONTAGE

CODE SKU:










(N708P416498-N708P416499-N708P416500-N708P416501)

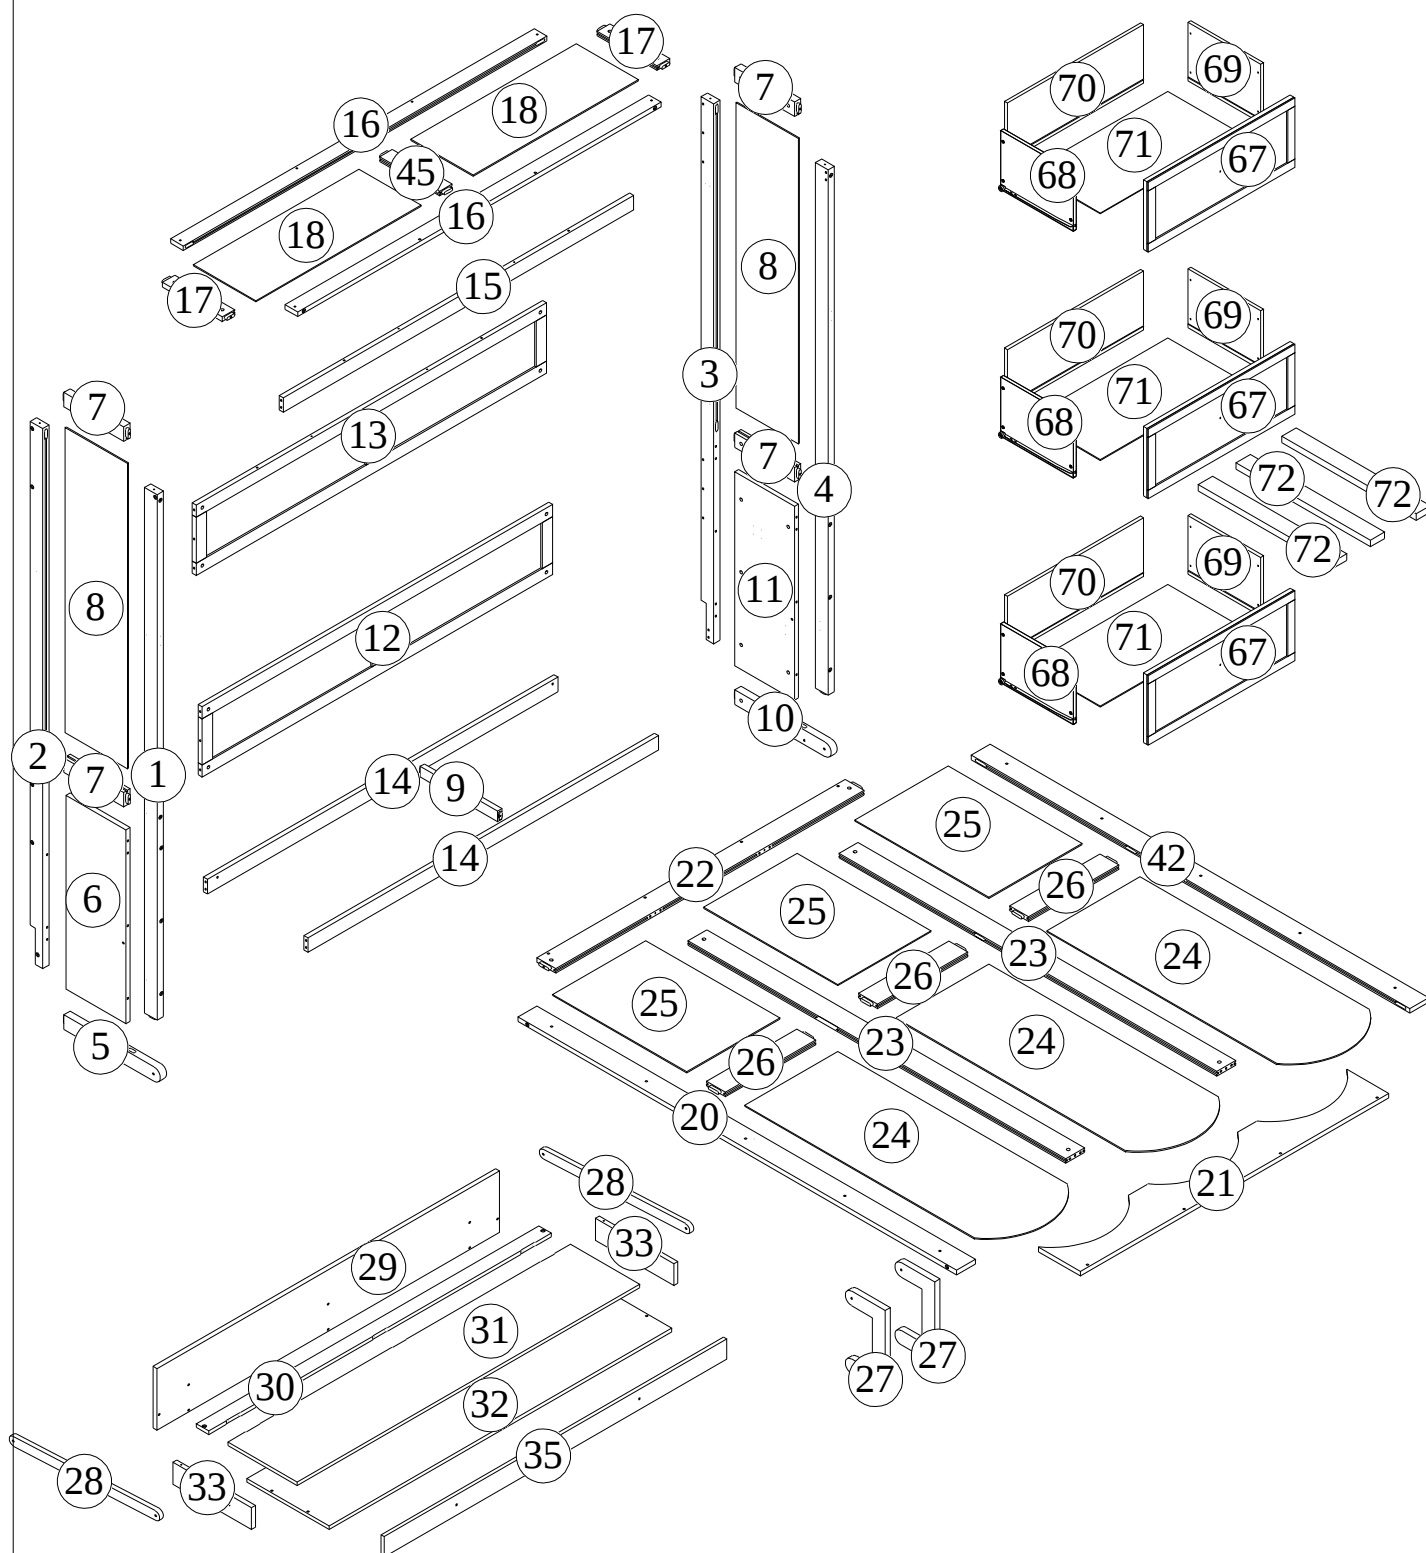

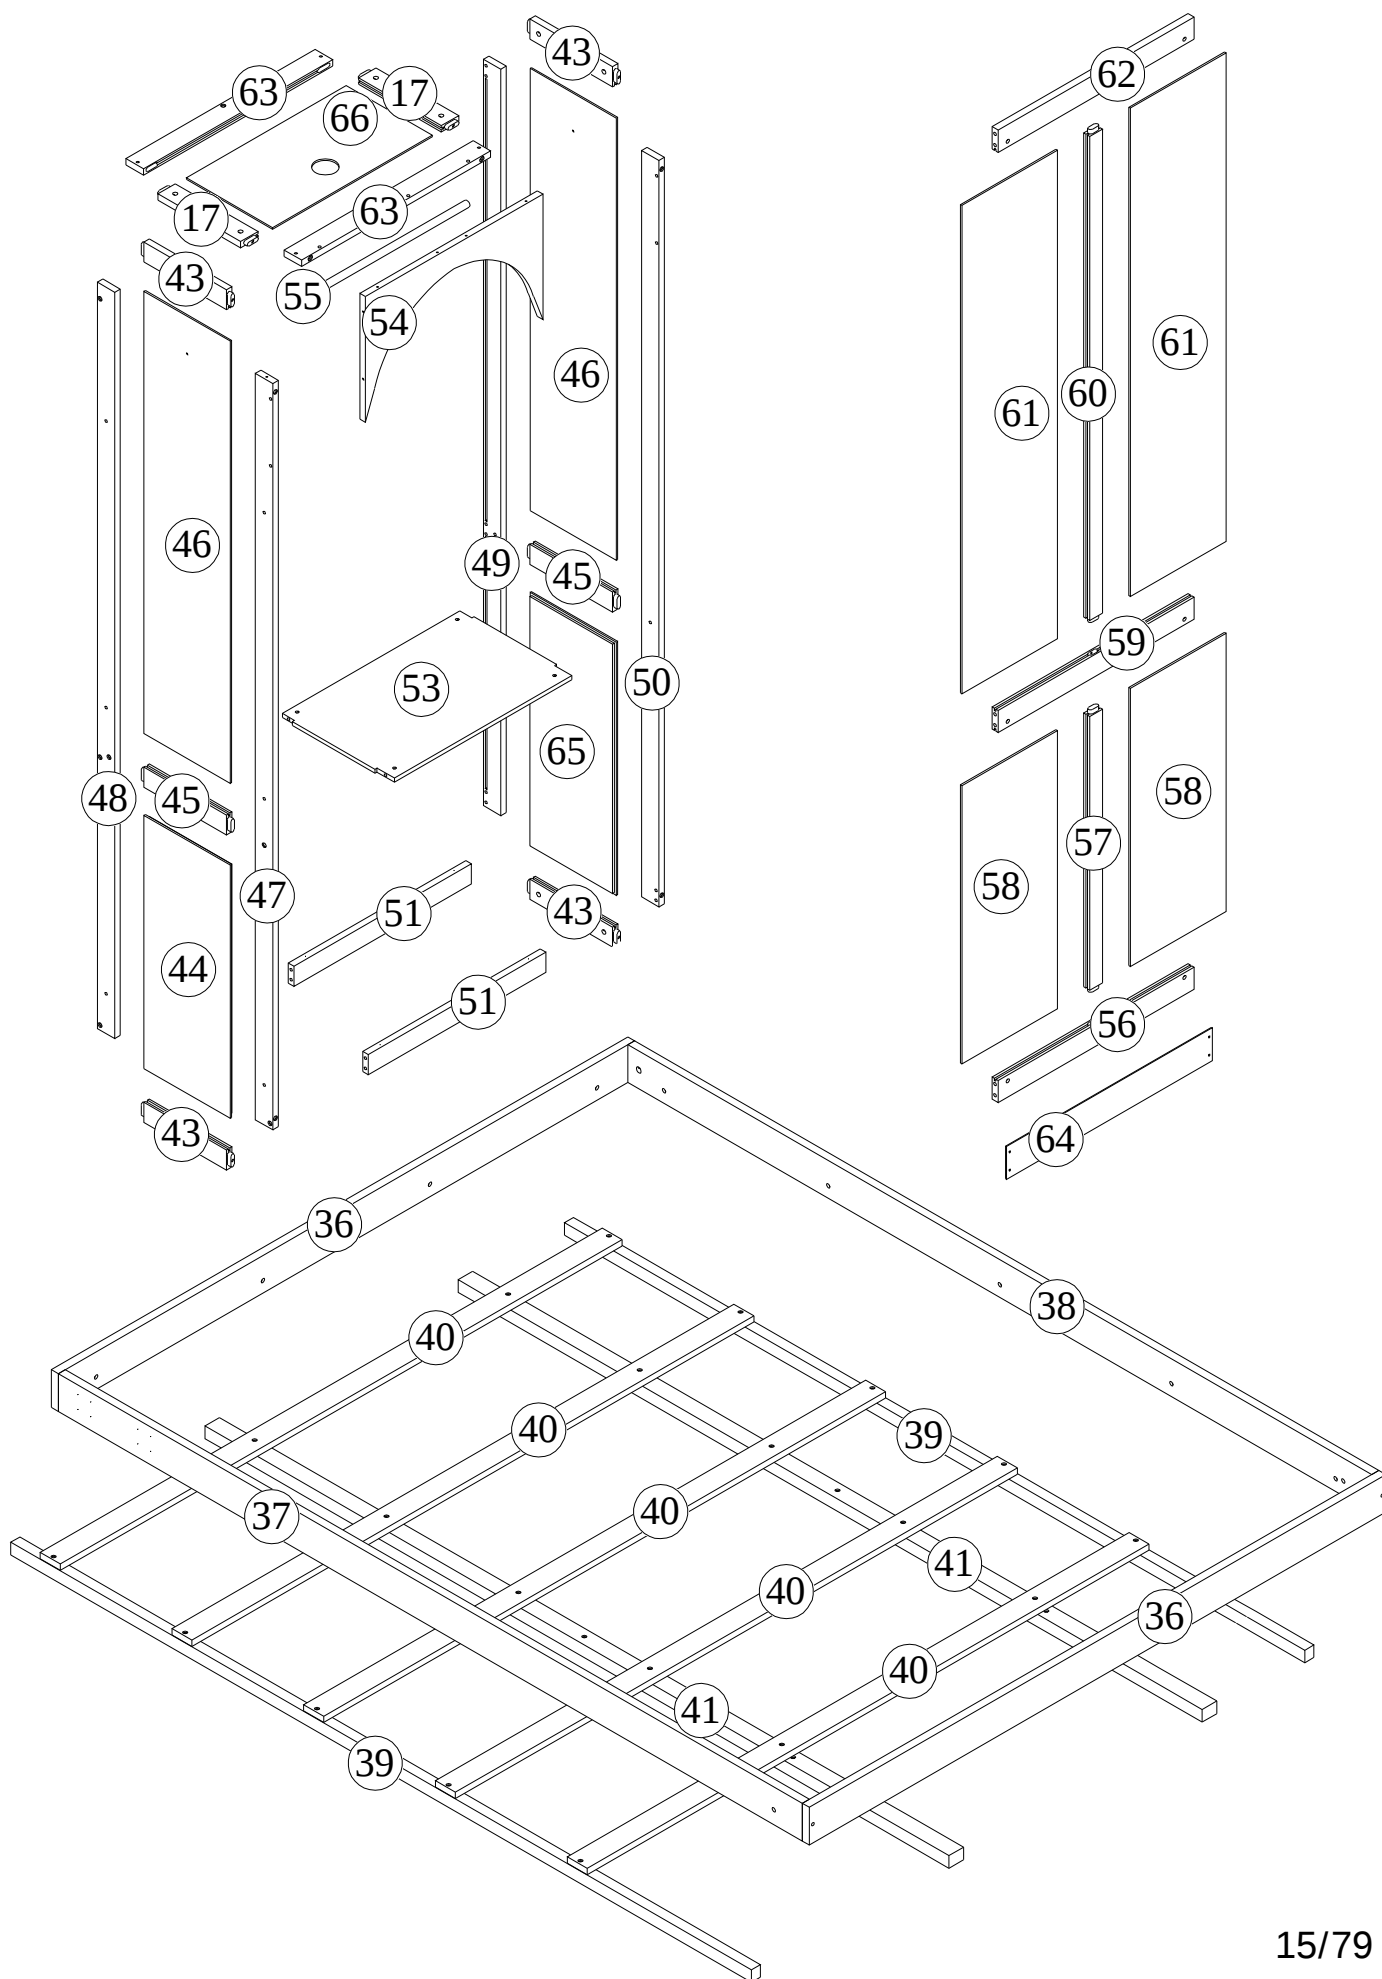








Part List (Box 1-N709P469672)

Liste des pcs

9  Lower horizontal rail- 1 pc Traverse inférieure- 1 pc	8  Middle left side brace- 2 pcs Renfort latéral gauche central- 2 pcs	12  Lower rear frame- 1 pc Cadre arrière inférieur- 1 pc
13  Upper rear frame- 1 pc Cadre arrière supérieur- 1 pc	14  Lower crossbar- 2 pcs Traverse inférieure- 2 pcs	15  Upper front crossbar- 1 pc Traverse avant supérieure- 1 pc
16  Top crossbar- 2 pcs Traverse supérieure- 2 pcs	17  Top rail- 2 pcs Traverse supérieure- 2 pcs	45  Top rail- 1 pc Traverse supérieure- 1 pc
22  Top panel- 1 pc Panneau de toit- 1 pc	23  Lower middle crossbar- 2 pcs Traverse inférieure centrale- 2 pcs	29  Back panel - 1 pc Panneau arrière de la table - 1pc
30  Upper crossbar - 1 pc Traverse supérieure de la table - 1pc	35  Front panel - 1 pc Panneau avant - 1pc	36  Top crossbar- 2 pcs Traverse supérieure- 2 pcs
39  Slat Support Block - 2pcs Bloc de support de latte	55  Left top crossbar- 1 pc Traverse supérieure gauche- 1 pc	57  Lower rear vertical post- 1 pc Montant vertical arrière inférieur- 1 pc
60  Upper rear vertical post- 1 pc Montant vertical arrière supérieur- 1 pc	66  Top panel- 1 pc Panneau supérieur- 1 pc	72  Drawer bottom support rail- 3pcs Traverse de support du fond du tiroir - 3pcs






Part List (Box 2-N709P469673)

Liste des pcs

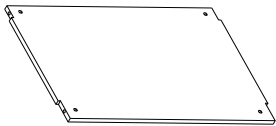7  Middle left side panel- 2 pcs Panneau latéral gauche central- 2 pcs	21  Curved lower crossbar- 1 pc Traverse inférieure courbée- 1 pc	24  Mattress frame panel- 3 pcs Panneau du cadre de matelas- 3 pcs
25  Mattress frame panel- 3 pcs Panneau du cadre de matelas- 3 pcs	26  Lower horizontal rail- 2 pcs Traverse inférieure- 2 pcs	28  Table support leg- 2 pcs Pied de support de table- 2 pcs
31  Top panel - 1 pc Panneau supérieur - 1 pc	32  Bottom panel - 1 pc Panneau inférieur - 1 pc	33  Left side panel - 2 pc Panneau latéral gauche - 2 pc
64  Back panel - 1 pc Panneau arrière de la table - 1pc	43  Side rail- 4 pcs Traverse latérale du meuble- 4 pcs	44  Lower side panel-1 pc Panneau latéral inférieur du meuble-1pc
45  Side rail- 2 pcs Traverse latérale du meuble- 2 pcs	56  Rear bottom crossbar - 1 pc Traverse inférieure arrière - 1 pc	53  Shelf panel- 1 pc Panneau d'étagère- 1 pc
58  Lower back panel- 2 pcs Panneau arrière inférieur- 2 pcs	65  Lower side panel-1 pc Panneau latéral inférieur du meuble-1pc	





Part List (Box 2-N709P469673)

Liste des pcs

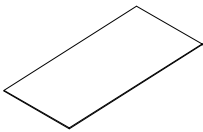59		62		17	
Middle rear crossbar- 1 pc Traverse arrière centrale- 1 pc		Upper rear crossbar-1 pc Traverse arrière supérieure-1 pc		Top rail- 2 pcs Traverse supérieure- 2 pcs	
68		70		71	
Left drawer side - 2pcs Côté tiroir - 2 pcs		Rear drawer - 2pcs Côté tiroir - 2 pcs		Bottom of the drawer - 3pcs Fond du tiroir-3 pcs	














Part List (Box 3-N709P469674)

Liste des pcs


















1  Front-left leg- 1 pc Pied avant gauche- 1 pc	2  Back-left leg- 1 pc Pied arrière gauche- 1 pc	3  Back-left leg- 1 pc Pied arrière droit- 1 pc
4  Front-right leg- 1 pc Pied avant droit- 1 pc	20  Lower left crossbar- 1 pc Traverse inférieure gauche- 1 pc	37  Left top crossbar- 1 pc
38  Right top crossbar - 1 pc	41  Slat support bar- 2 pcs Barre de support de lattes- 2 pcs	47  Front left vertical post- 1 pc Montant vertical avant gauche-1 pc
48  Rear left vertical post- 1 pc Montant vertical arrière gauche-1 pc	49  Rear right vertical post- 1 pc Montant vertical arrière droit du meuble 1 pc	50  Front right vertical post- 1 pc Montant vertical avant droit du meuble -1 pc
42  Lower right crossbar- 1 pc Traverse inférieure gauche- 1 pc		


Part List (Box 4-N709P469675)- hardware box

Liste des pcs

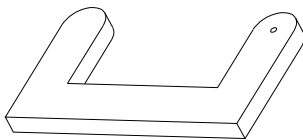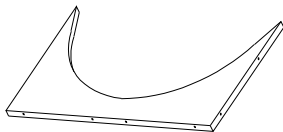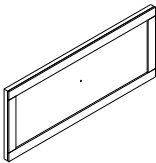5  Left bottom leg- 1 pc Panneau latéral gauche inférieur- 1 pc	6  Lower left side panel- 1 pc Panneau latéral inférieur gauche- 1 pc	7  Middle left side panel- 2 pcs Panneau latéral gauche central- 2 pcs
10  Right bottom leg- 1 pc Pied inférieur droit- 1 pc	11  Lower right side panel- 1 pc Panneau latéral inférieur droit- 1 pc	18  Top panel- 2 pcs Panneau supérieur- 2 pcs
26  Lower horizontal rail- 1 pc Traverse inférieure- 1 pc	27  U-shaped leg- 2 pcs Pied en U- 2 pcs	40  Slat- 5 pcs
46  Upper side panel- 2 pcs Panneau latéral supérieur du meuble- 2 pcs	51  Front bottom rail- 2 pcs Traverse inférieure avant du meuble 2 pcs	
54  Decorative panel- 1 pc Panneau décoratif- 1 pc	61  Upper rear back panel- 2 pcs Panneau arrière supérieur- 2 pcs	63  Front top crossbar- 2 pcs Traverse supérieure avant- 2 pcs
	67  Drawer surface- 3pcs Surface du tiroir - 3 pcs	68  Left drawer side - 1pc Côté tiroir - 1 pc
69  Right drawer side - 3pcs Côté tiroir - 3 pcs	70  Rear drawer - 1pc Côté tiroir - 1 pc	


















Hardware List (Box 1 - N709P469672)

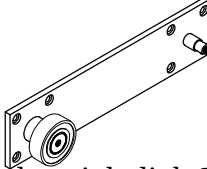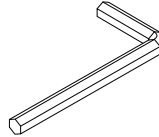
A  Ø1/4" x 100 mm Hex-Head bolts 36 pcs Boulons à tête hexagonale 36 pcs	B  Ø1/4" x 12 mm Horizontal-Hole bolts 99 pcs Boulons à trous horizontaux 99 pcs	C  Ø1/4" x 80 mm Hex-Head bolts 4 pcs Boulons à tête hexagonale 4 pcs
D  M4 x 25 mm Wood Screws 29 pcs Vis à bois 29 pcs	E  Ø8 x 30 mm Wood dowel 42 pcs Cheville en bois 42 pcs	F  M4 x 15 mm Wood Screws 66 pcs Vis à bois 66 pcs
G  Ø1/4" x 70 mm Hex-Head bolts 14 pcs Boulons à tête hexagonale 14 pcs	H  1/4" x 40 mm Screws 35 pcs Vis 35 pcs	I  M3 x 15 mm Wood Screws 83 pcs Vis à bois 83 pcs
J  M4 x 15 mm Wood Screws 48 pcs Vis à bois 48 pcs	K  Ø1/4" x 120 mm Hex-Head bolts 4 pcs Boulons à tête hexagonale 4 pcs	L  Ø1/4" x 60 mm Hex-Head bolts 40 pcs Boulons à tête hexagonale 40 pcs
M  M4 x 35 mm Wood Screws 32 pcs Vis à bois 32 pcs	N  Metal straight link-2pcs Maillon droit en métal - 2 pcs	O  Piston -2pcs Piston - 2 pcs
P  Metal corner link-1pc Lien d'angle en métal - 1 pièce	Q  Metal corner link-1pc Lien d'angle en métal - 1 pièce	R  Nut-4pcs Écrou - 4 pcs
S  M4 x 40 mm Wood Screws 25 pcs Vis à bois 25 pcs	AO  Allen Key 4pcs Clé Allen 4 pcs	



Assembly Tools Required (Not Included)
Outils d'assemblage requis (non inclus)

Hardware List (Box 1 - N709P469672)

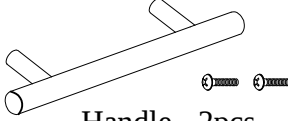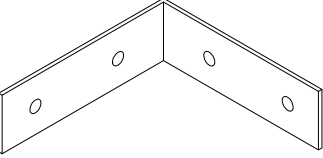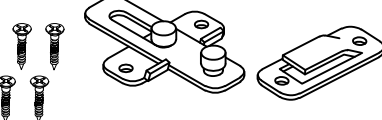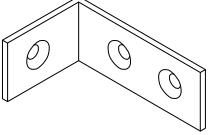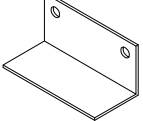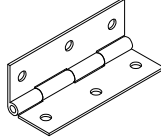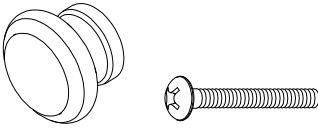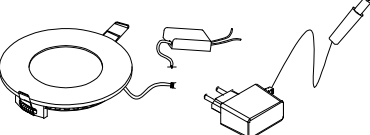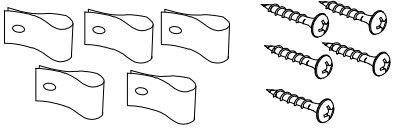T  Angle Metal- 6 pcs Angle en métal- 6 pcs	U  Handle - 2pcs Poignée	V  Ø1/3" x 40 mm Hex-Head bolts 2pcs Boulons à tête hexagonale 2 pcs
W  Ø1/4" x 40 mm Hex-Head bolts 4 pcs Boulons à tête hexagonale 4 pcs	AL  M5 x 65 mm Wood Screws 12 pcs Vis à bois 12 pcs	Y  Ø20 / Ø6 x 2 mm Washer 6 pcs Rondelle 6 pcs
AK  Angle Metal - 4pcs Angle en métal - 4 pcs	AJ  Metal link-2pcs Lien métallique - 2 pcs	AA  Angle Metal Ø 9 -4 pcs Angle en métal - 4 pcs
AC  Angle Metal-6 pcs Angle en métal-6 pcs	AB  L Angle pat- 2pcs Angle en L - 2 pcs	AE  Hinge 12 pcs Charnières 12 pcs
AF  Bolt Ø1/6" x 25 mm Wood Handle - 6 pcs Manche en bois - 6 pcs	AG  Ø1/4" x 30 mm Hex-Head bolts 2pcs Boulons à tête hexagonale 2 pcs	AH  Led Light - 1 set Lumière LED - 1 set
AI  Ø6 x 30 mm Wood dowel 3 pcs Cheville en bois 3 pcs	AM  L Angle pat- 1 set Angle en L - 1 set	AN  Screw mount - 1 set Collier de fixation-1 set




Assembly Tools Required (Not Included)
Outils d'assemblage requis (non inclus)

Hardware List (Box 1 - N709P469672)


DD Ø6 x 75mm Iron wall socket - 12pcs	EE K10 Wrench - 1pc	BB Ø18 / Ø6 x 1.5 mm Iron Washer 12 pcs
CC K13 Wrench - 1pc	FF 1/4" x 35 mm Screws 4 pcs Vis 4 pcs	GG Angle Metal Ø 5 -4 pcs Angle en métal - 4 pcs

STEP-ÉTAPE 1 :

E	B	A
		
2pcs	5pcs	5pcs

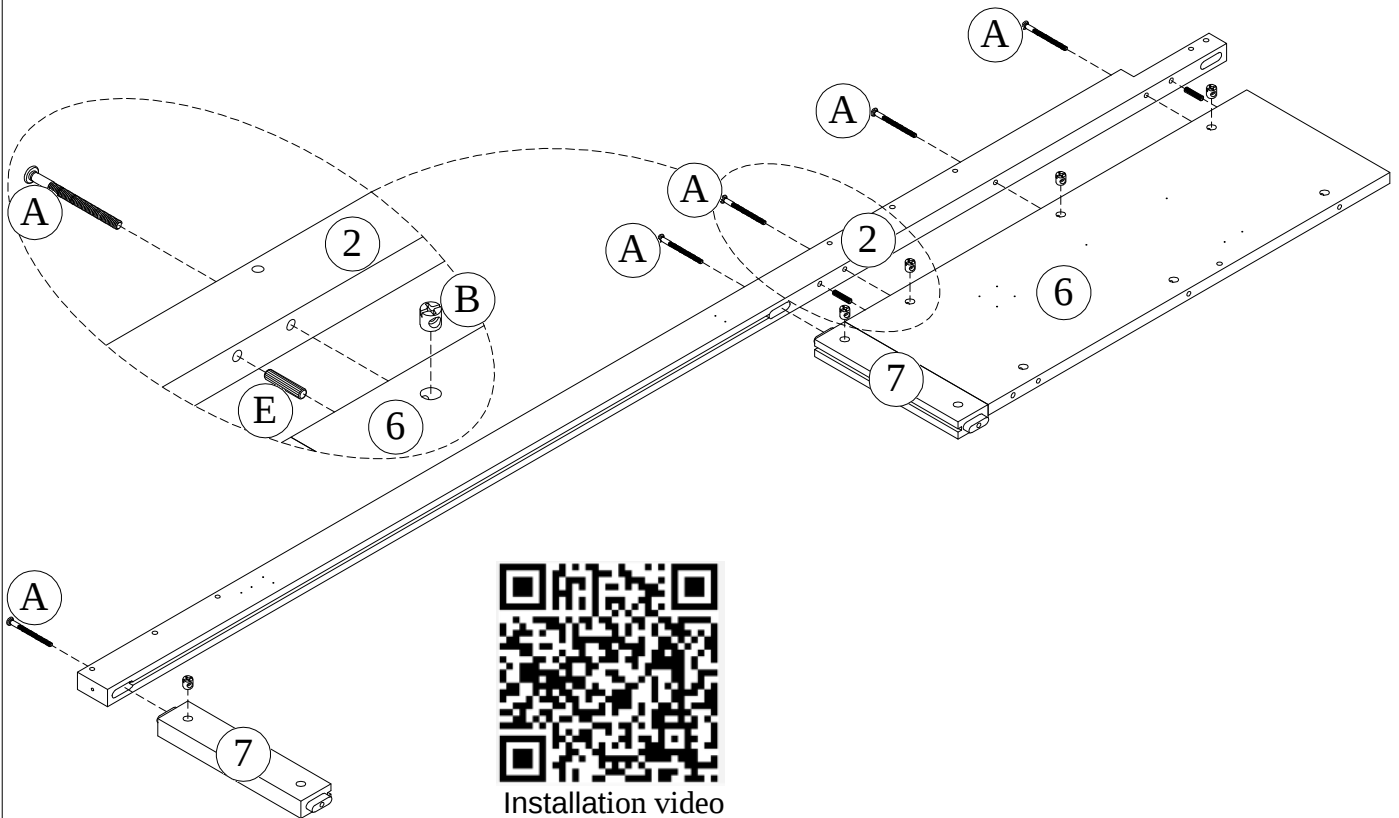


STEP-ÉTAPE 2 :

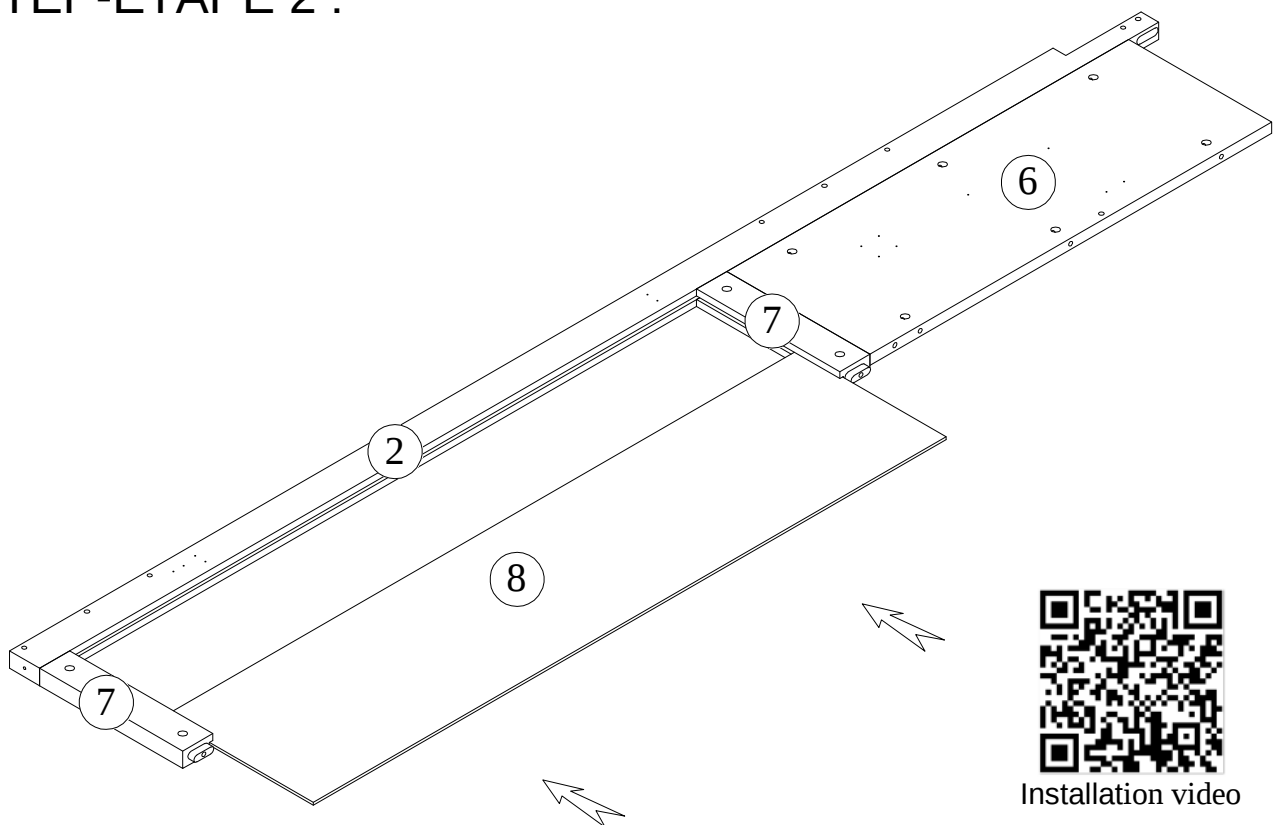

STEP-ÉTAPE 3 :


A	B
	
1pc	1pc

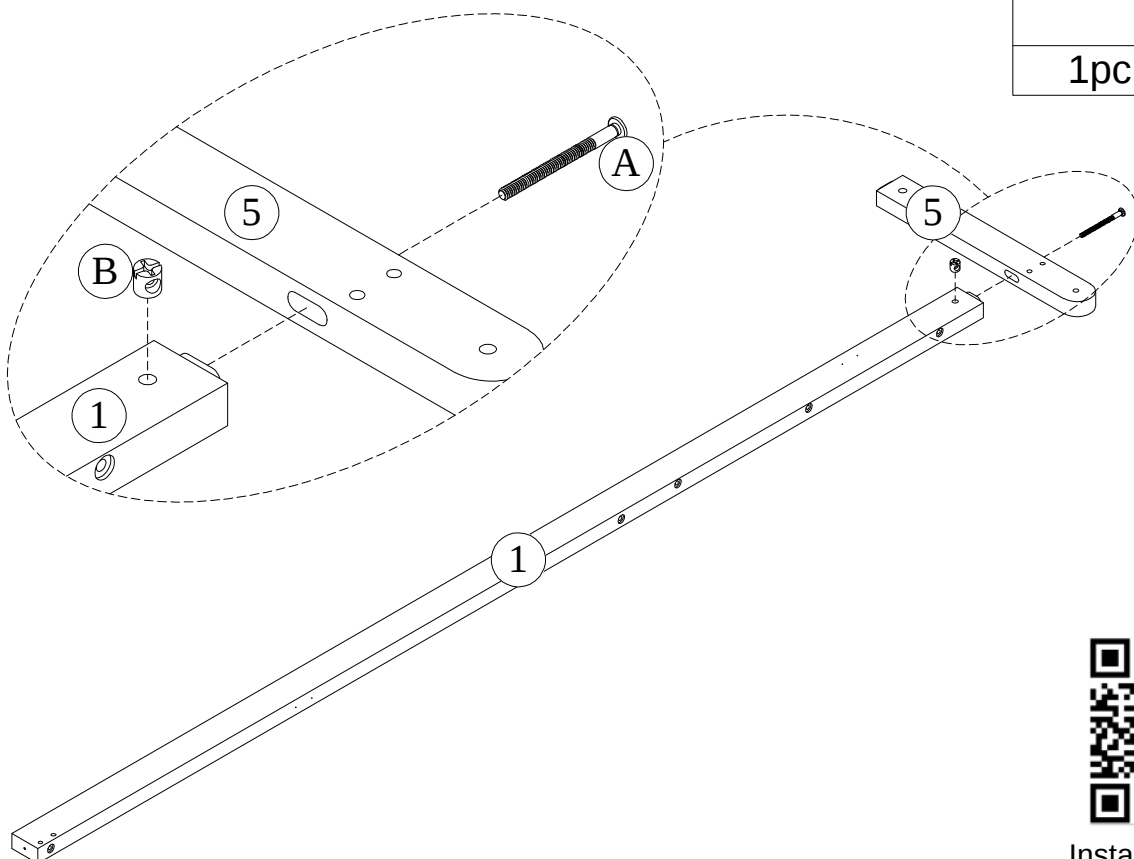

Installation video

STEP-ÉTAPE 4 :


A	B	C	E
			
5pcs	6pcs	1pc	2pcs

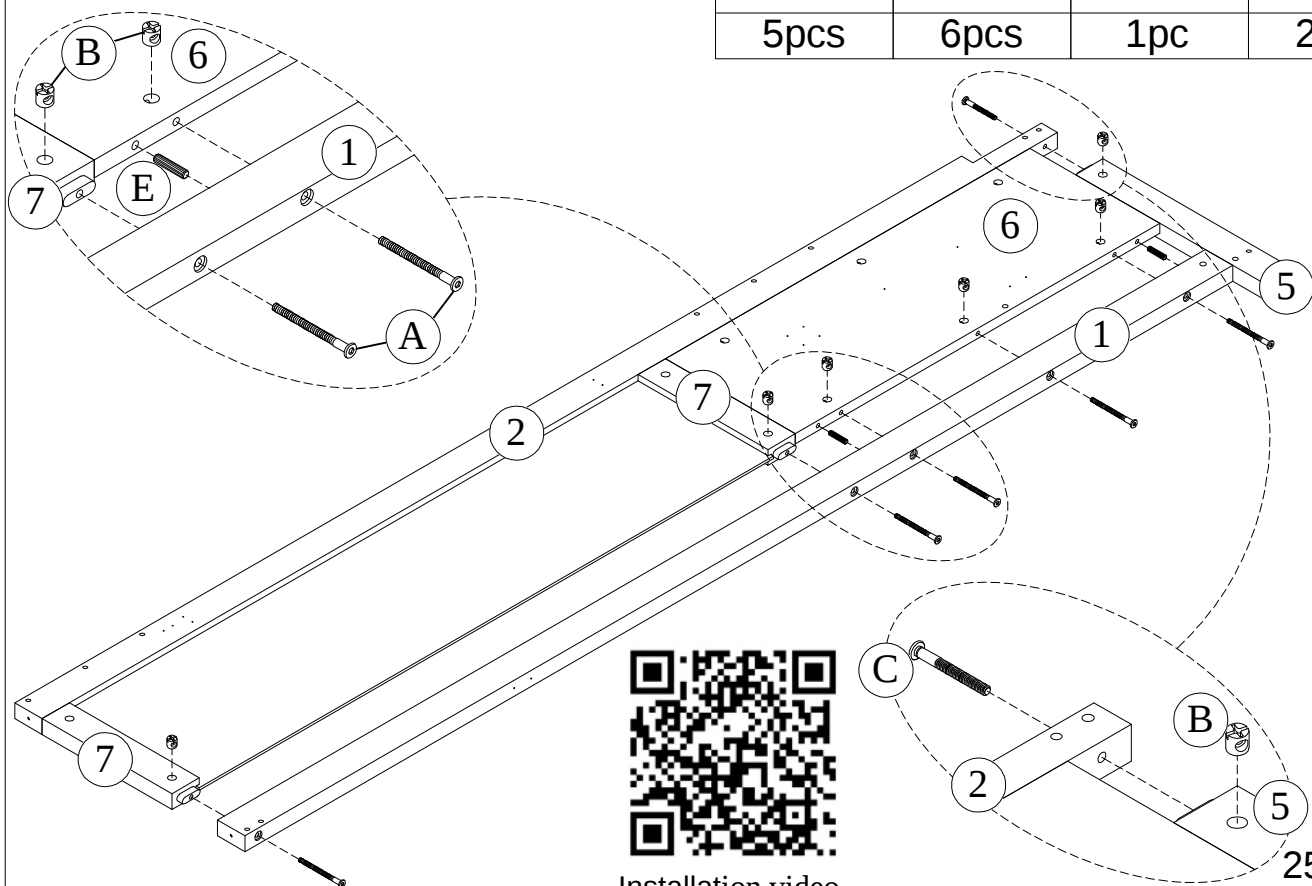


Installation video

STEP-ÉTAPE 5 :

E	B	A
		
2pcs	5pcs	5pcs

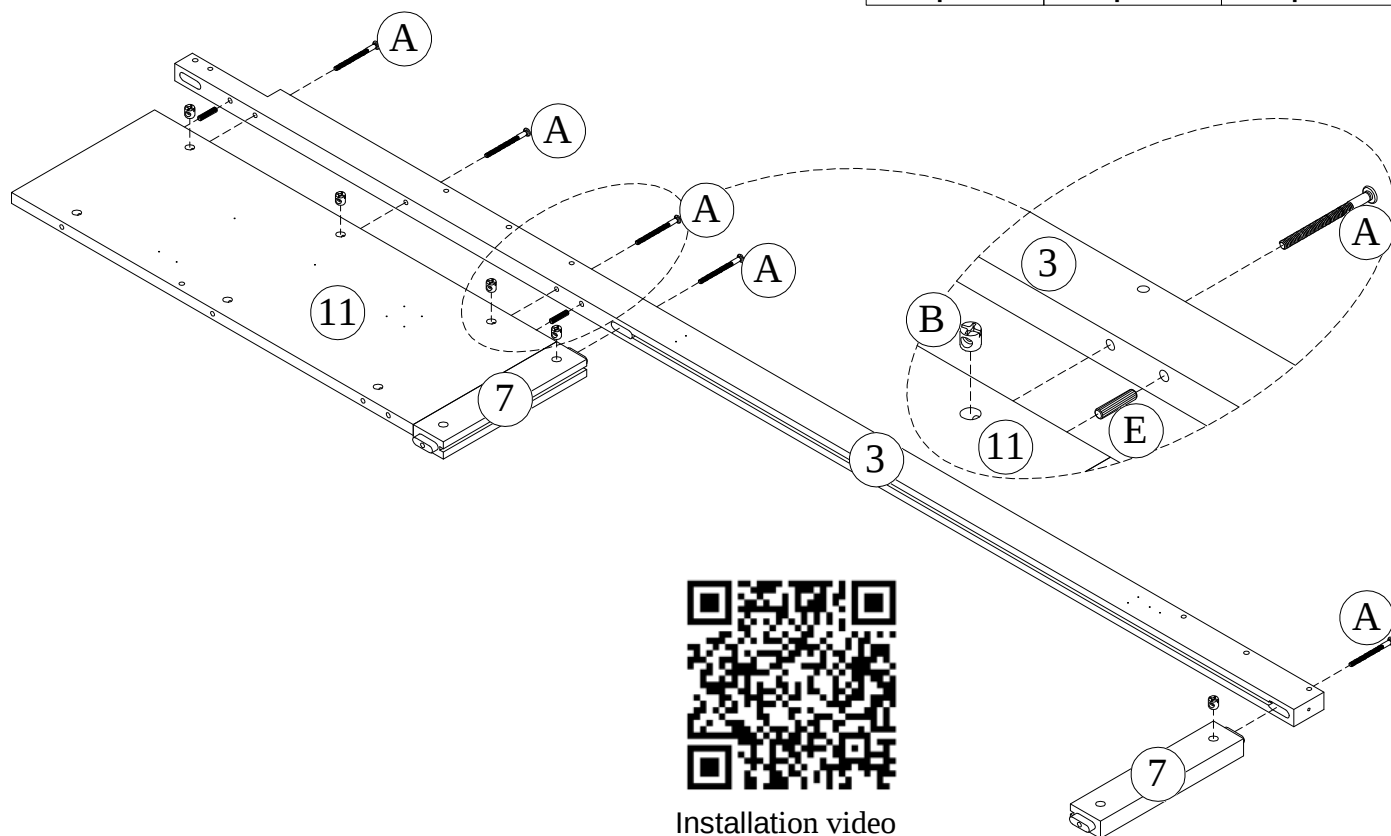


STEP-ÉTAPE 6 :

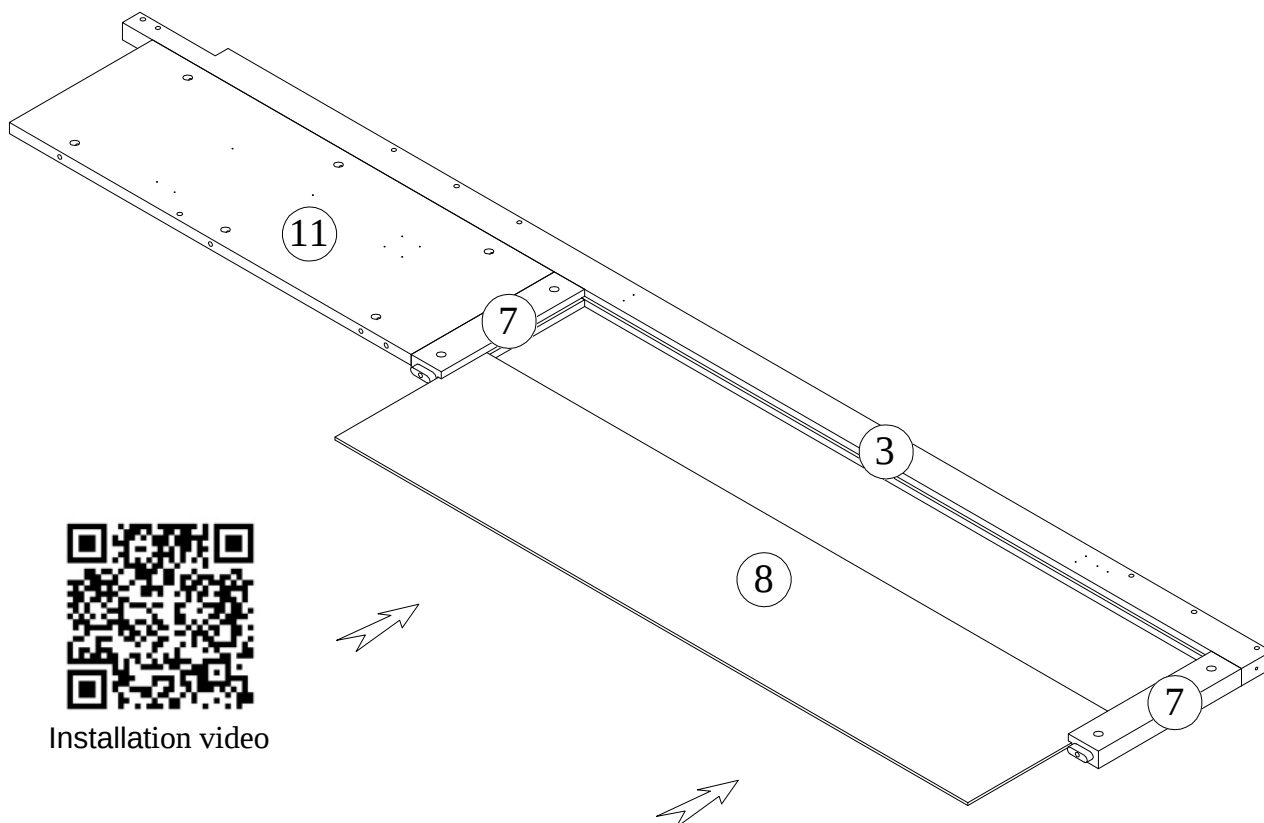

STEP-ÉTAPE 7 :


A	B
	
1pc	1pc

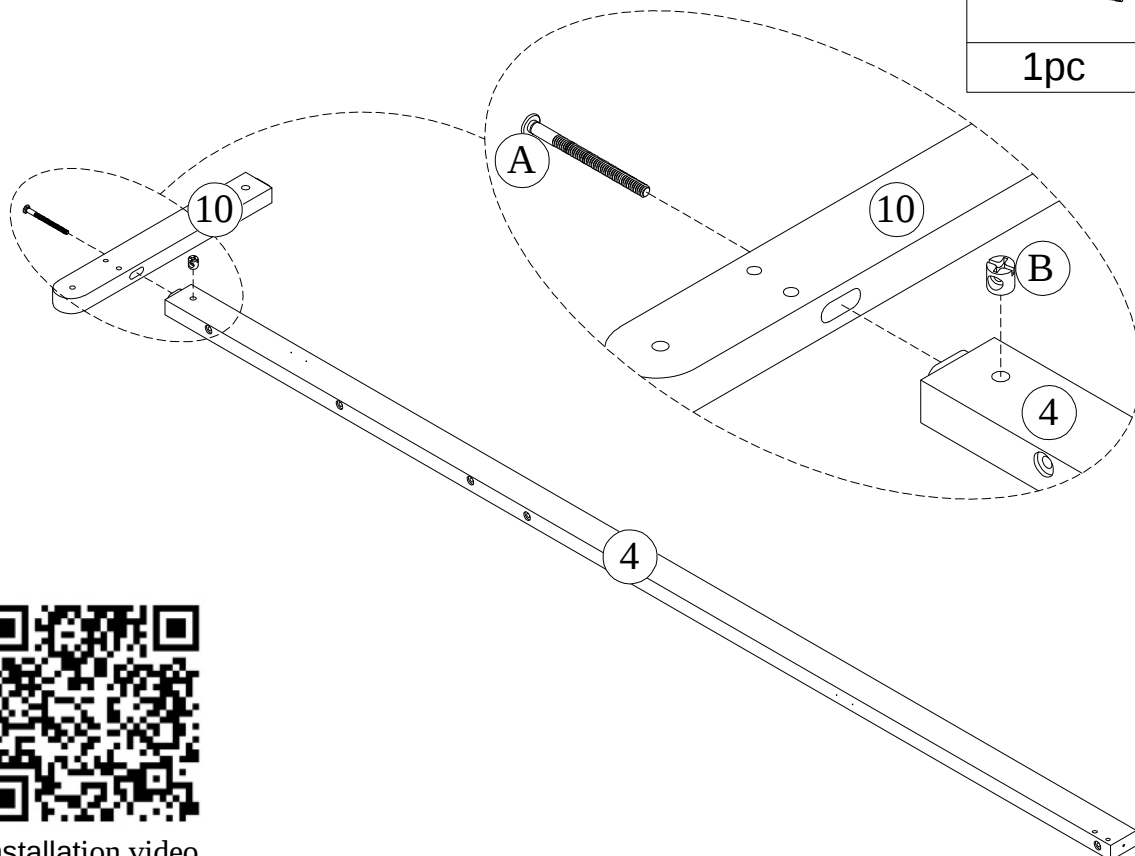

Installation video

STEP-ÉTAPE 8 :

A	B	C	E
			
5pcs	6pcs	1pc	2pcs

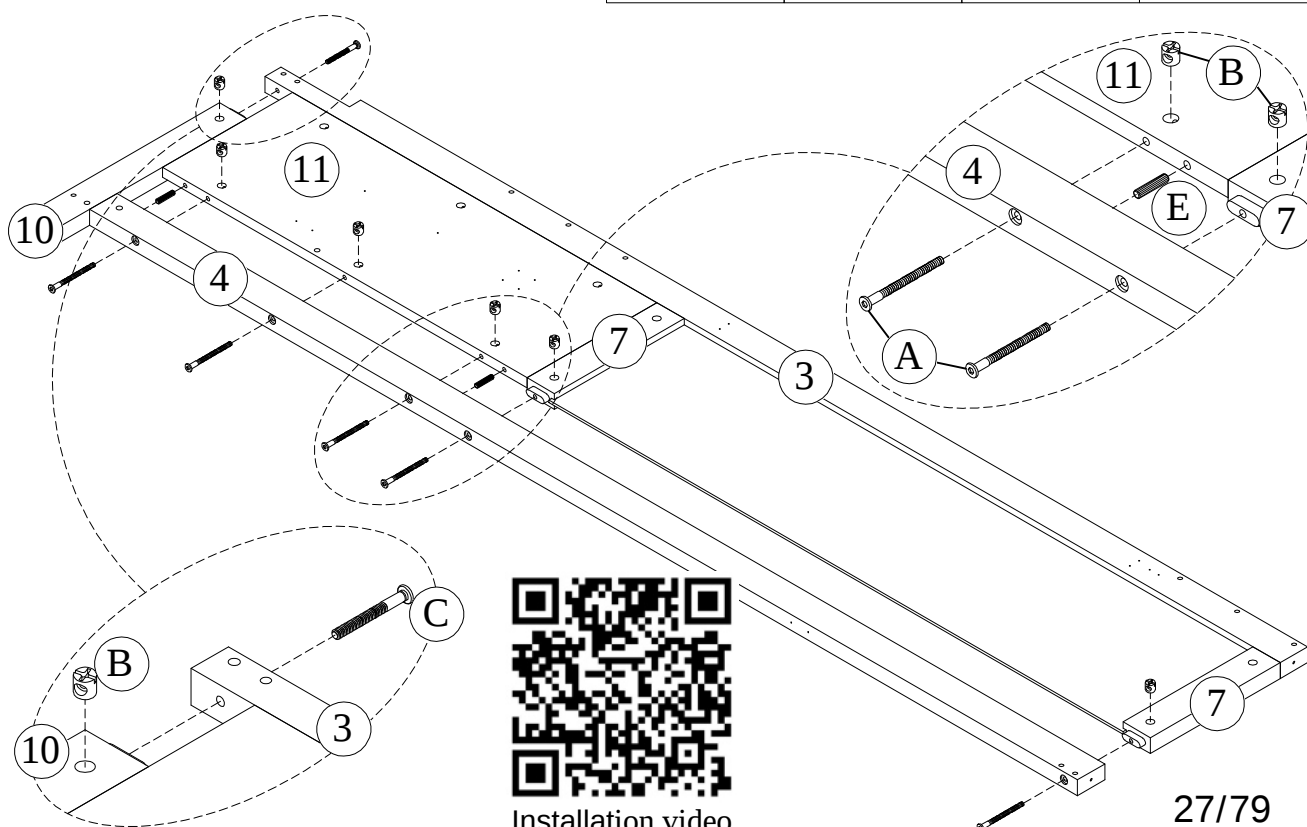

Installation video


27/79

STEP-ÉTAPE 9 :



Installation video


F	A	B
		
1pc	2pcs	2pcs

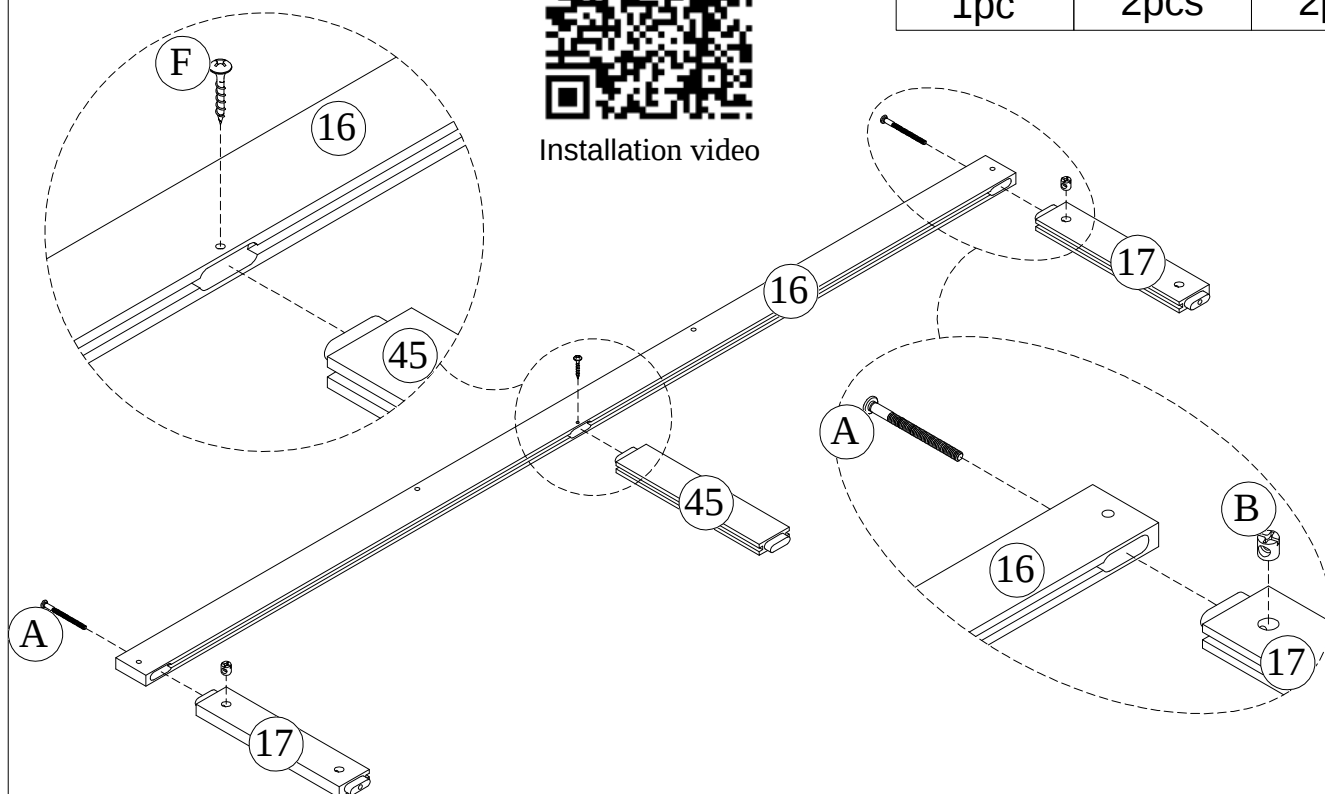

STEP-ÉTAPE 10 :




Installation video

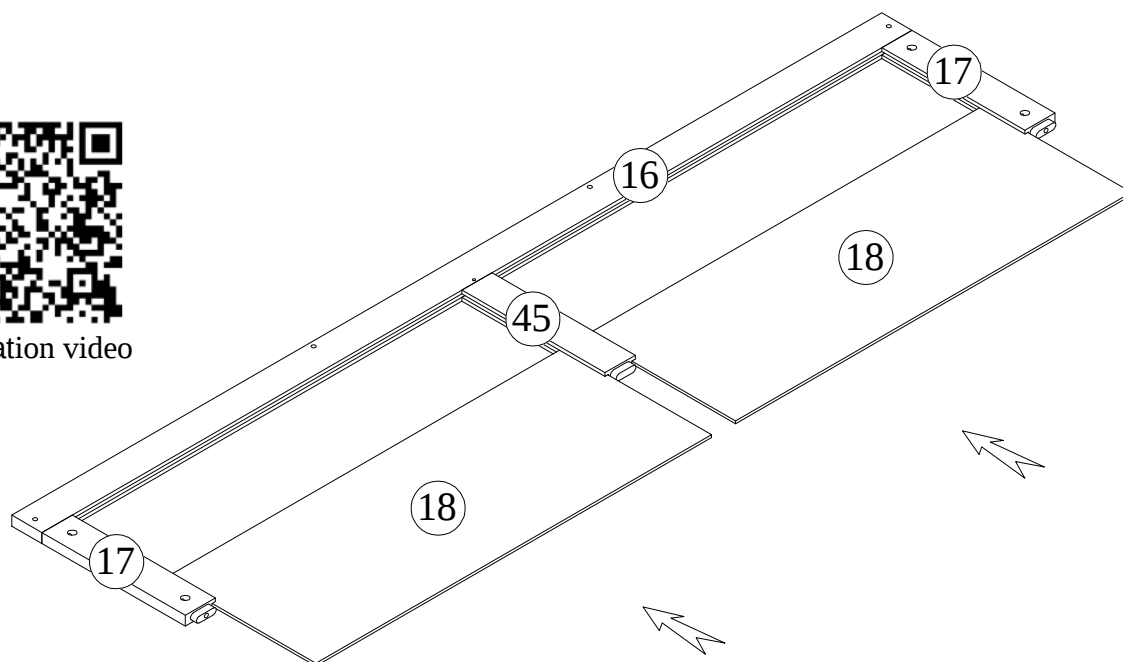


STEP-ÉTAPE 11 :



Installation video

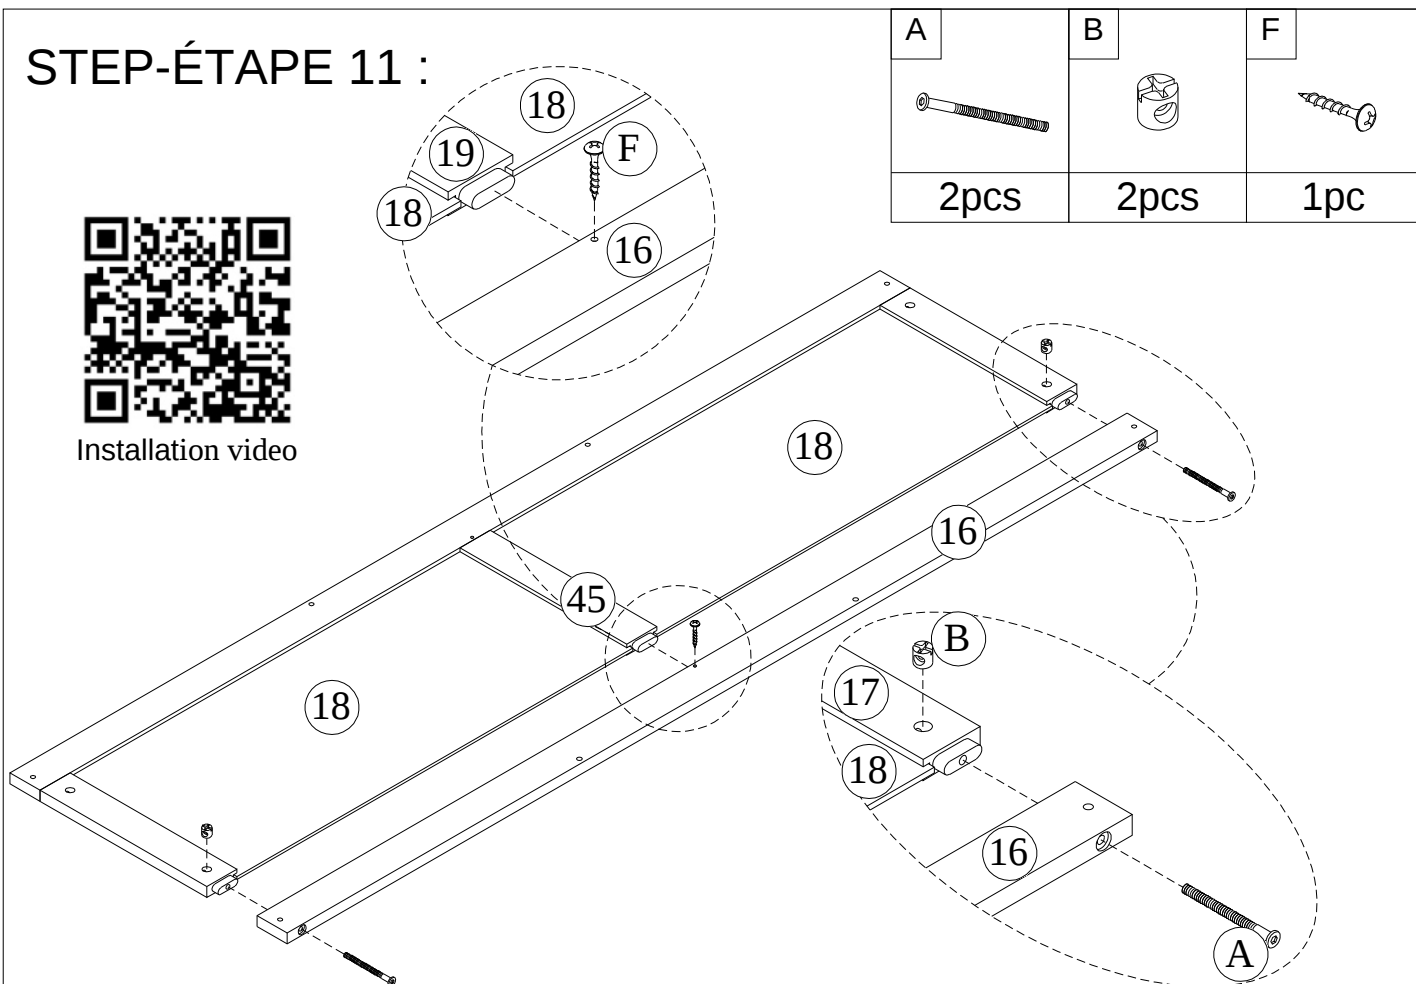

STEP-ÉTAPE 12 :

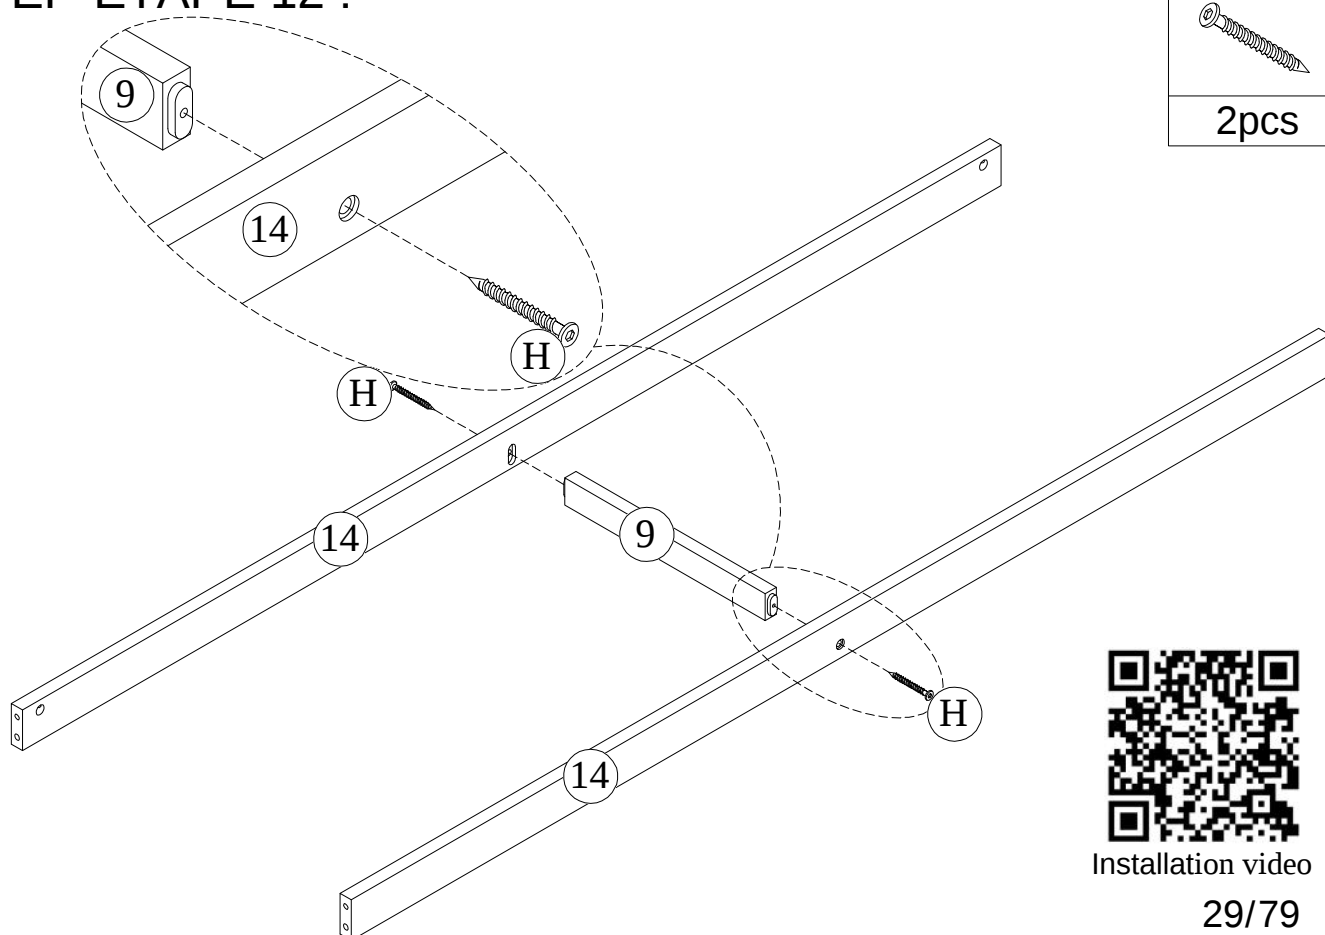


Installation video

STEP-ÉTAPE 13 :




Installation video

E	G	B
		
5pcs	7pcs	7pcs

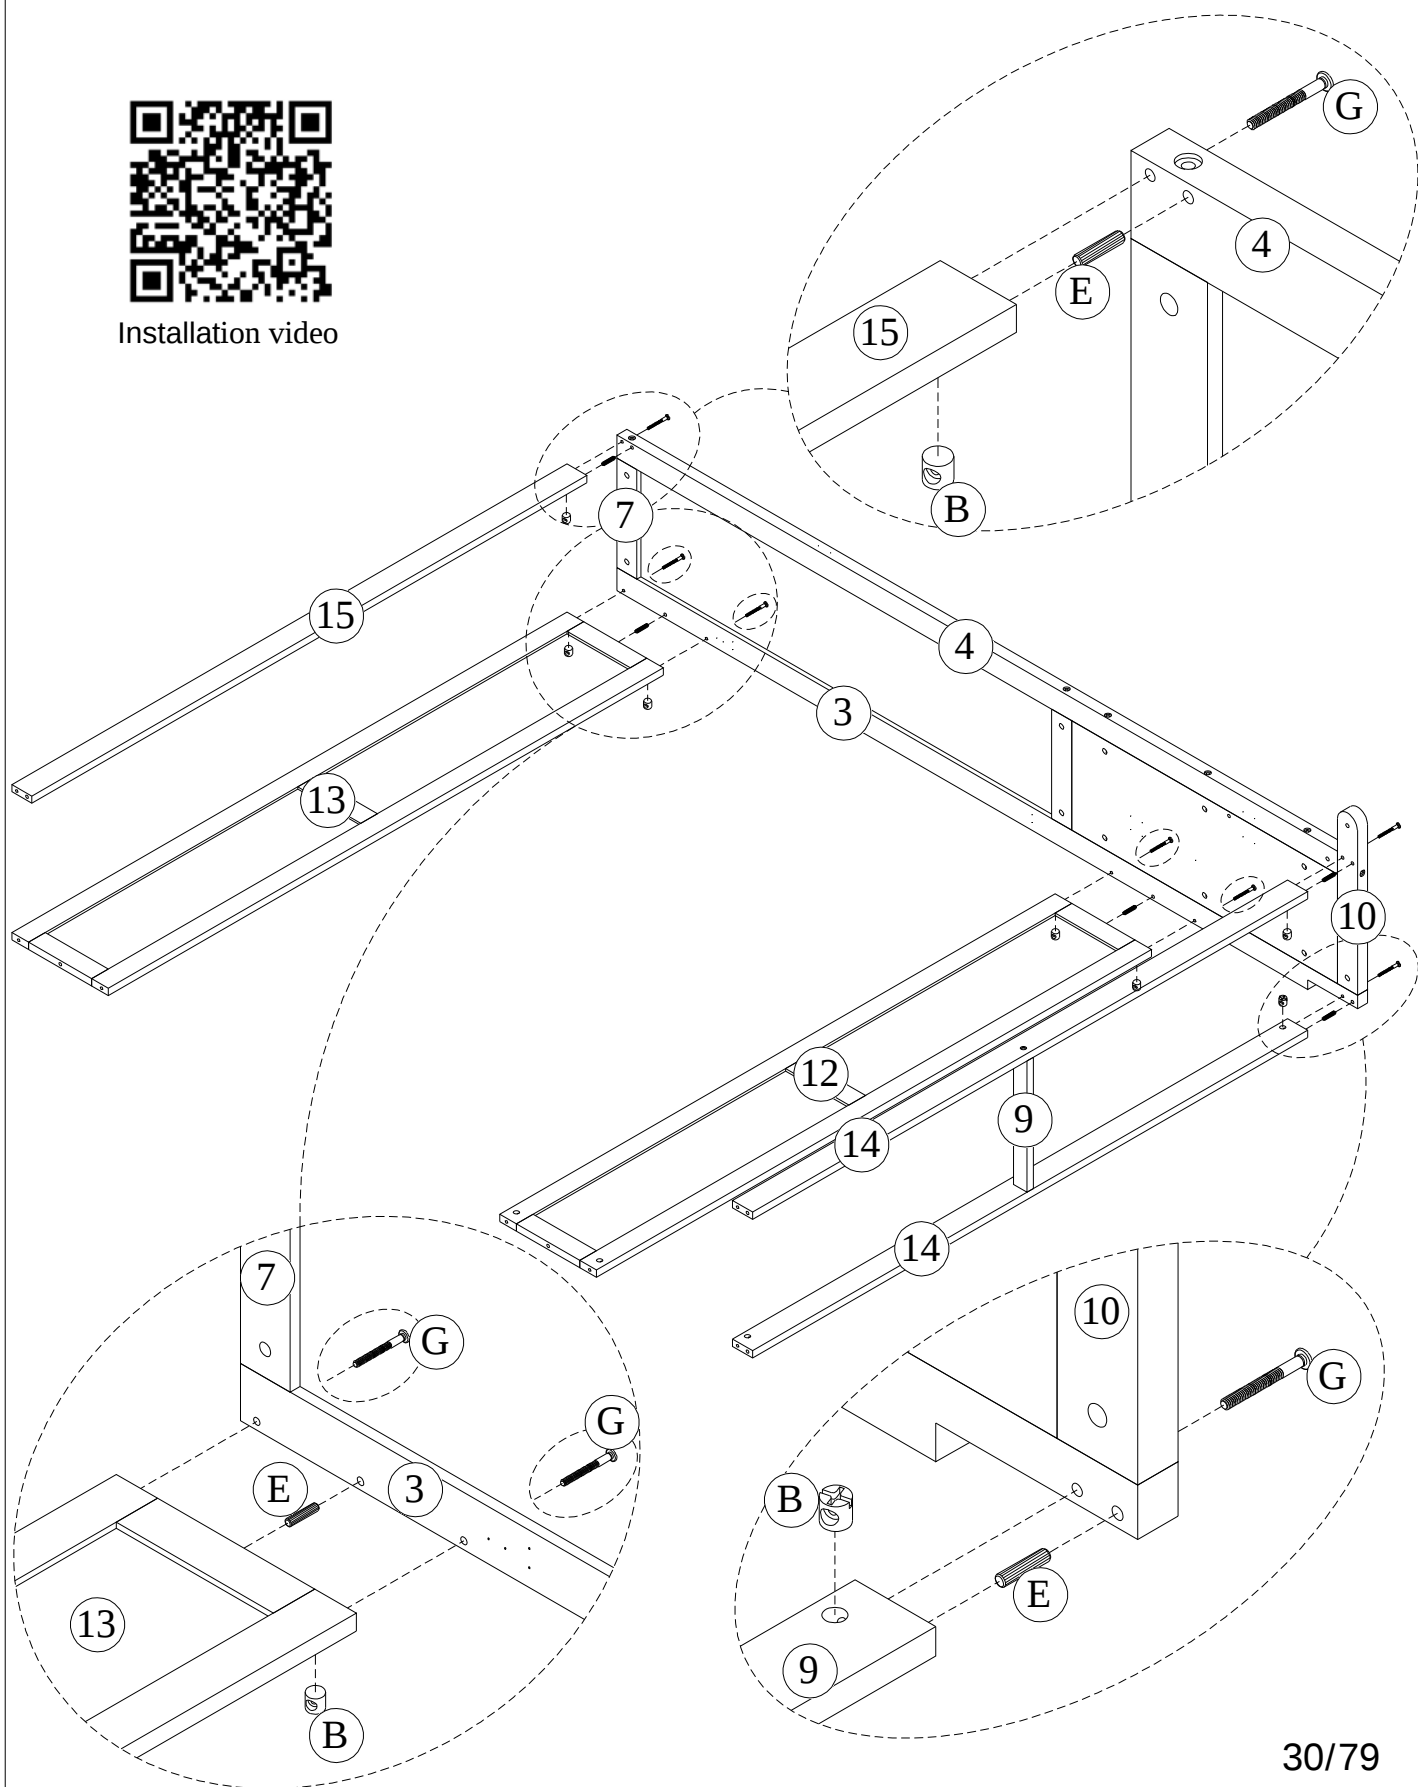

STEP-ÉTAPE 14 :

E	G	B
		
5pcs	7pcs	7pcs

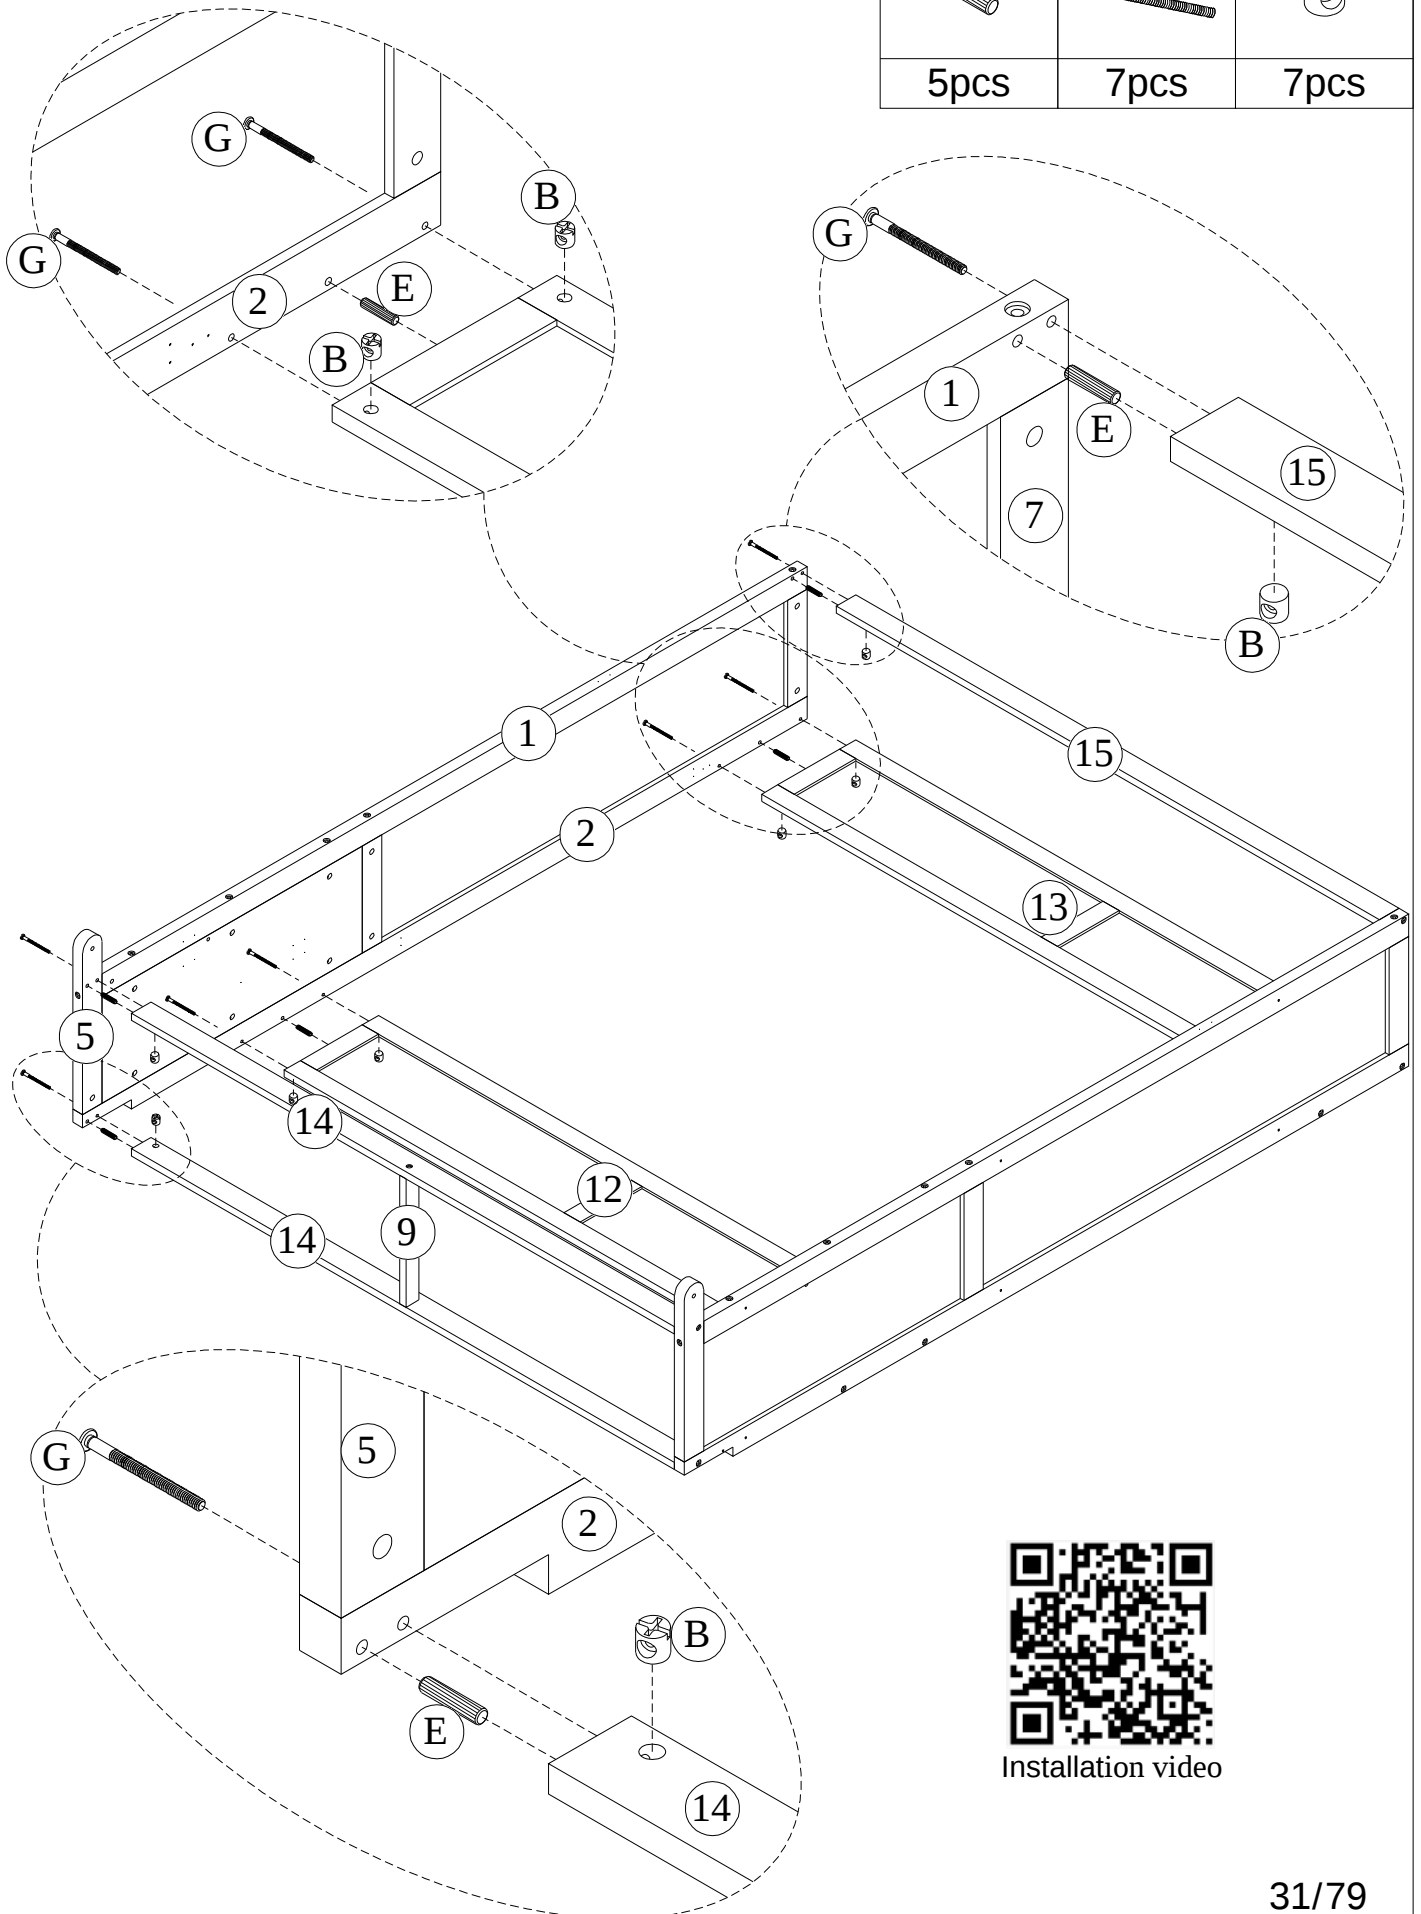


Installation video

STEP-ÉTAPE 15 :



Installation video



E	H
	
4pcs	8pcs

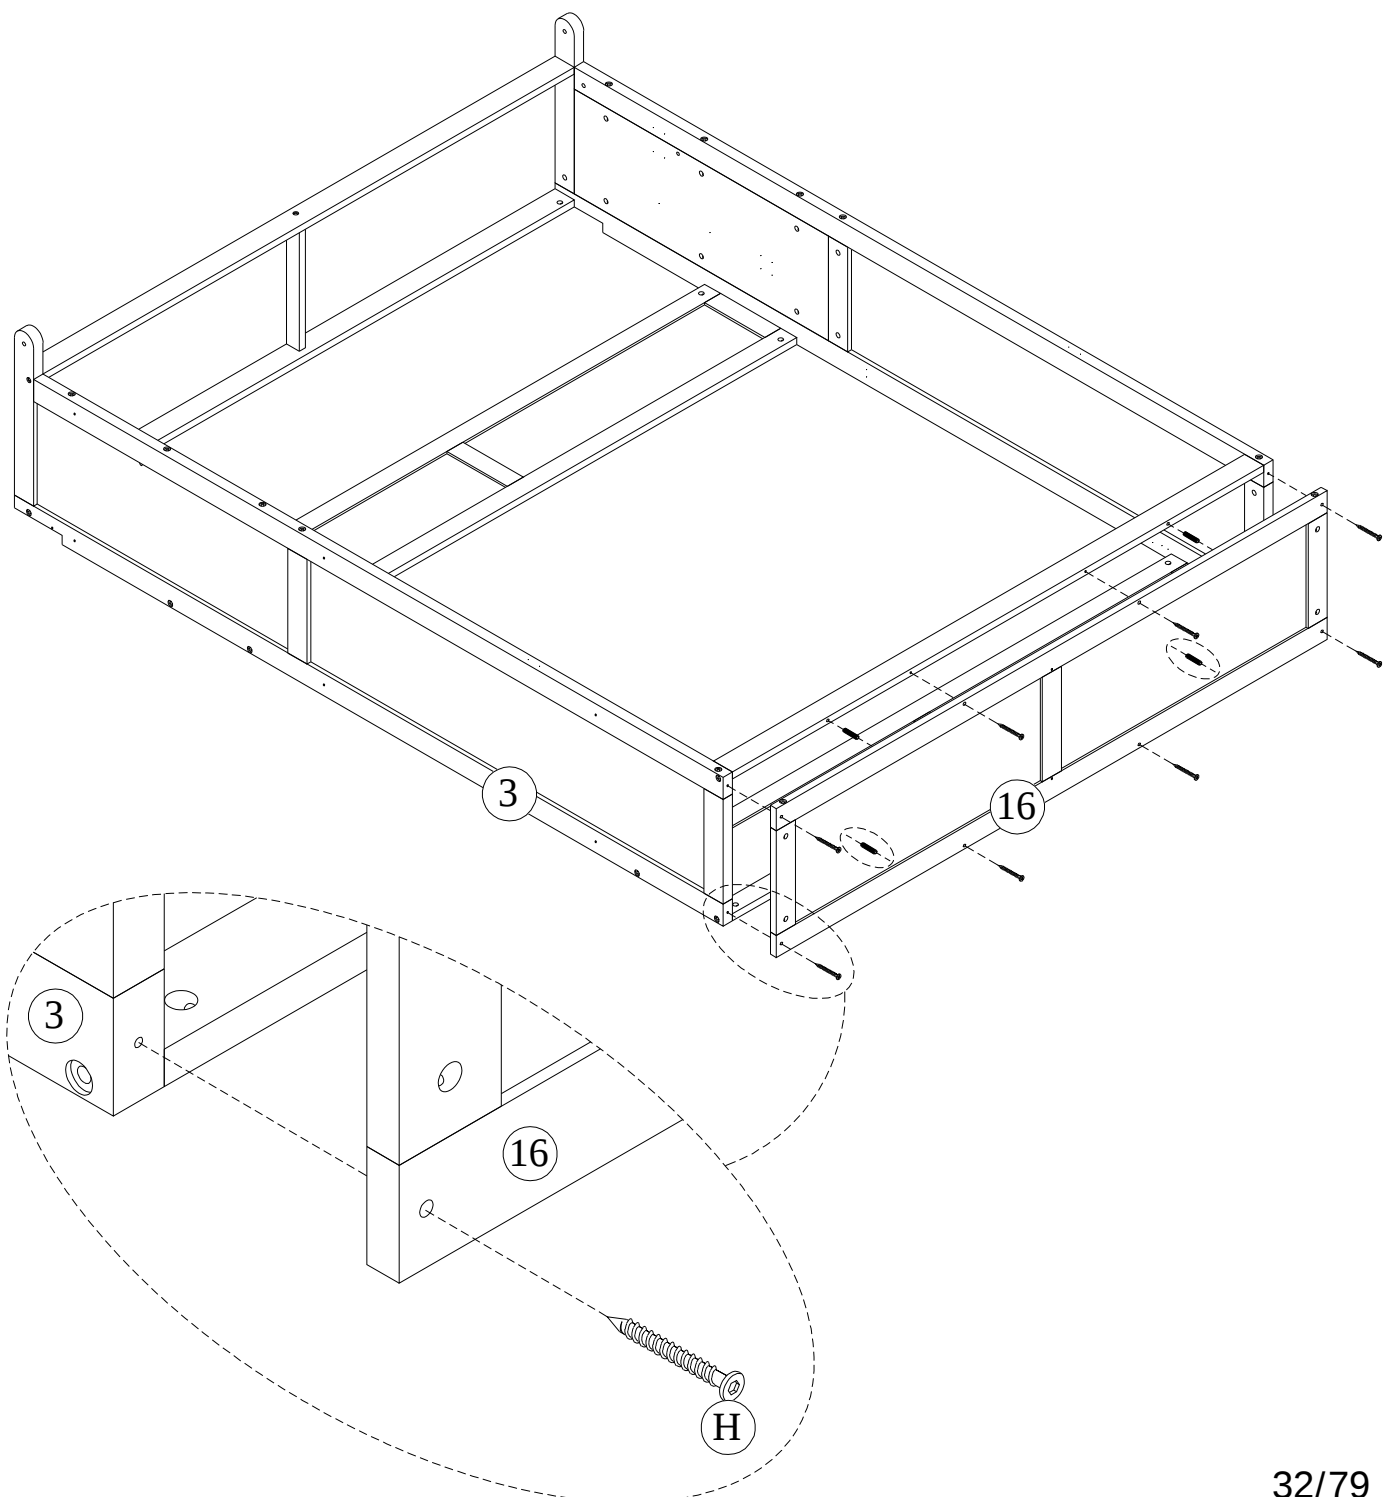


STEP-ÉTAPE 16 :



Installation video



Q	J	AA	AB
			
1pc	16pcs	2pcs	1pc

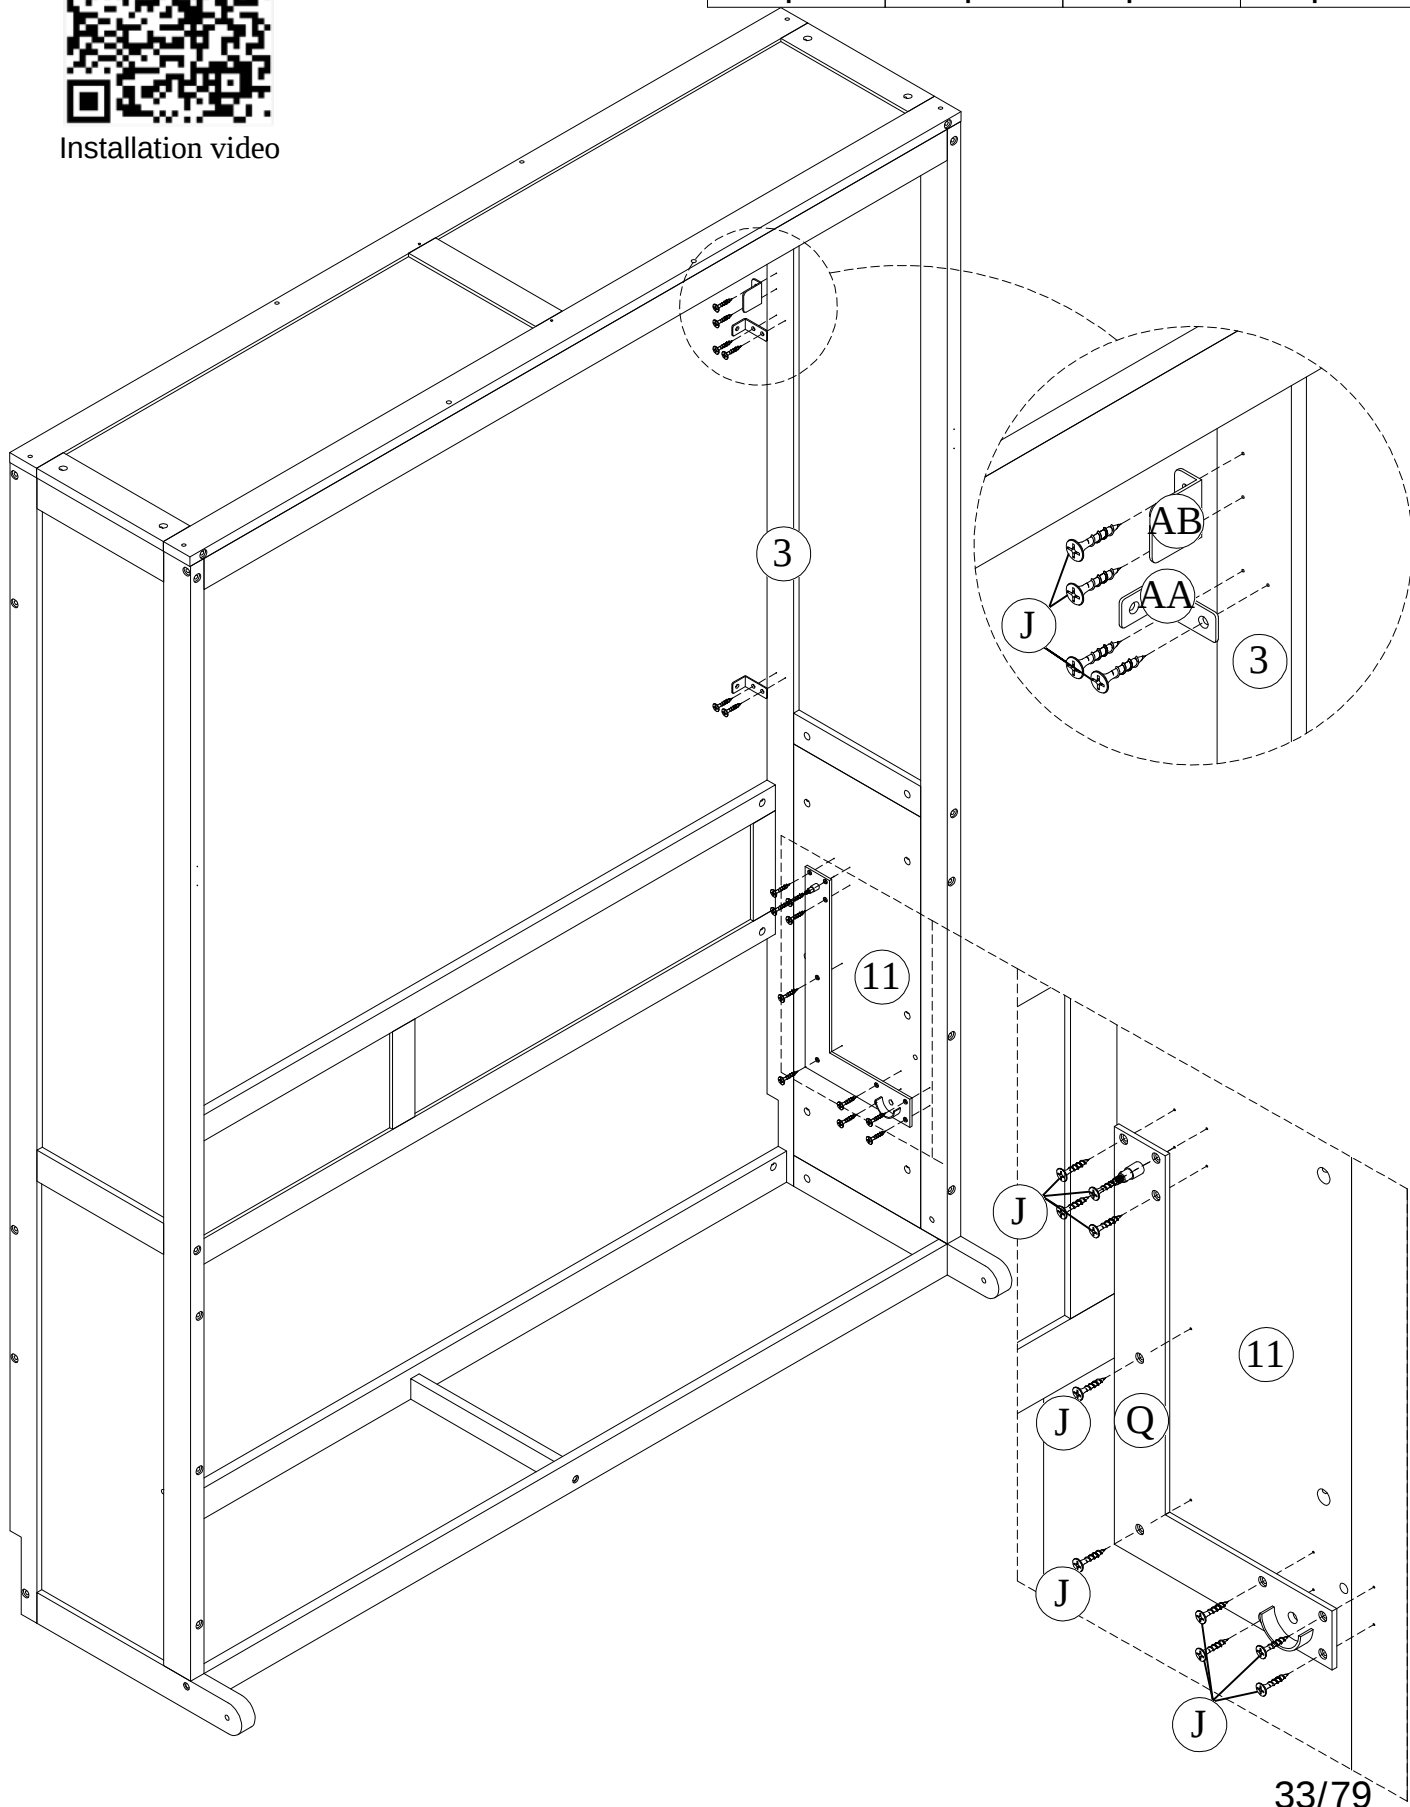


STEP-ÉTAPE 17 :




Installation video

P	J	AA	AB
			
1pc	16pcs	2pcs	1pc

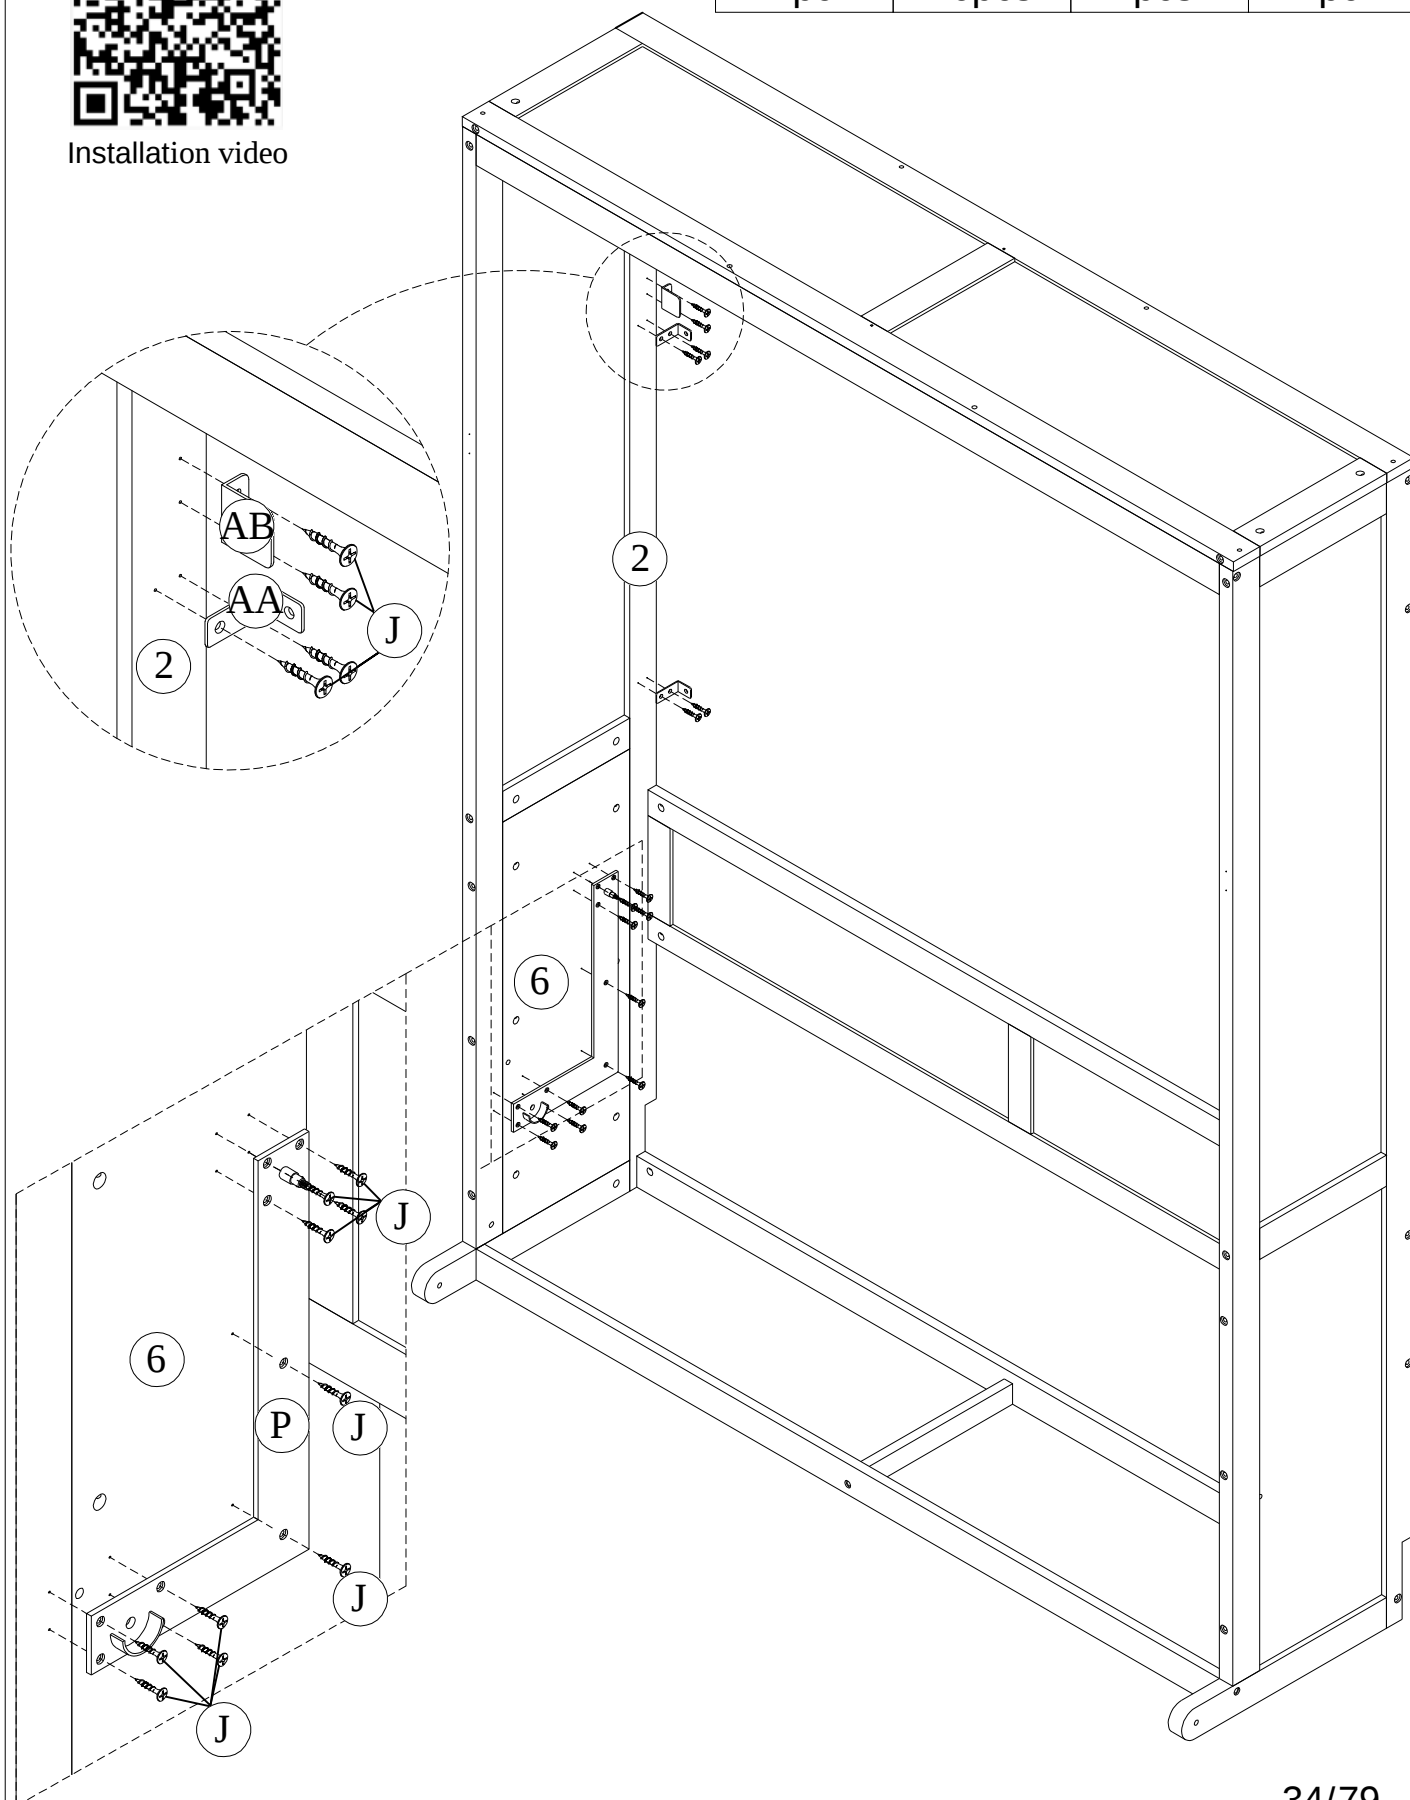

STEP-ÉTAPE 18 :

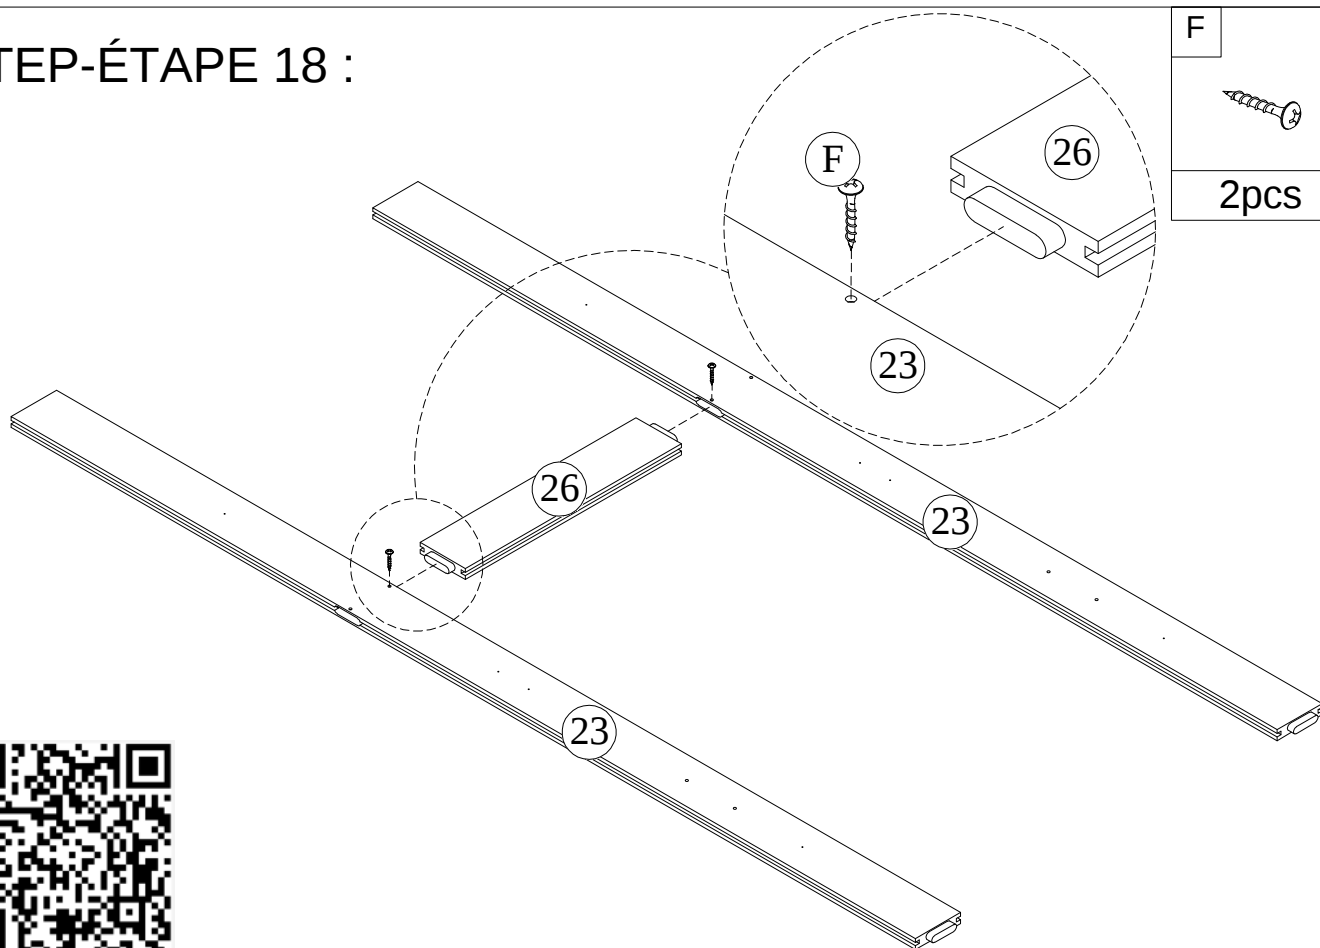

F




2pcs



Installation video

STEP-ÉTAPE 19 :

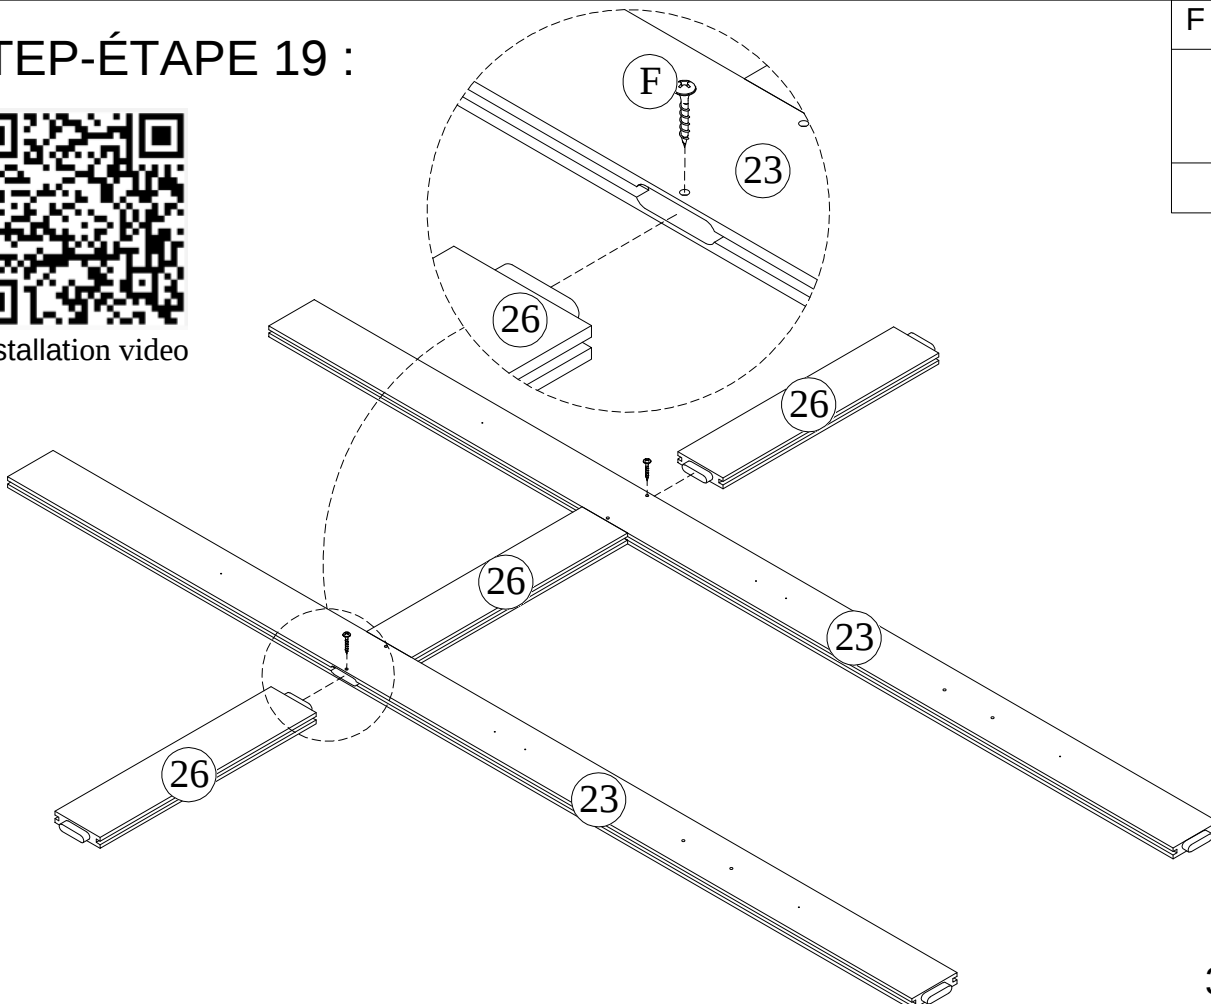

F




2pcs




Installation video

STEP-ÉTAPE 20 :

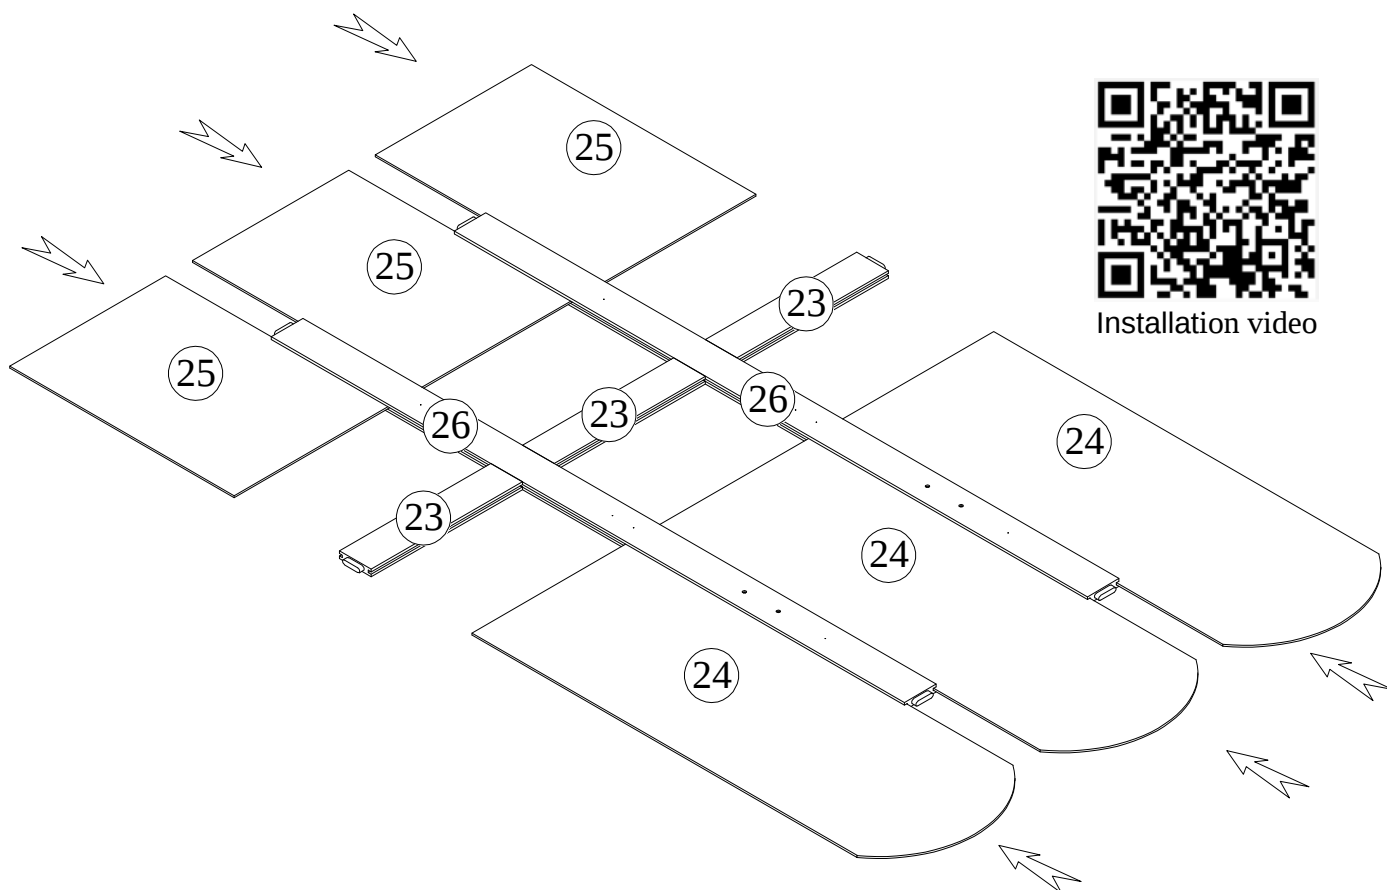

Installation video

STEP-ÉTAPE 21 :

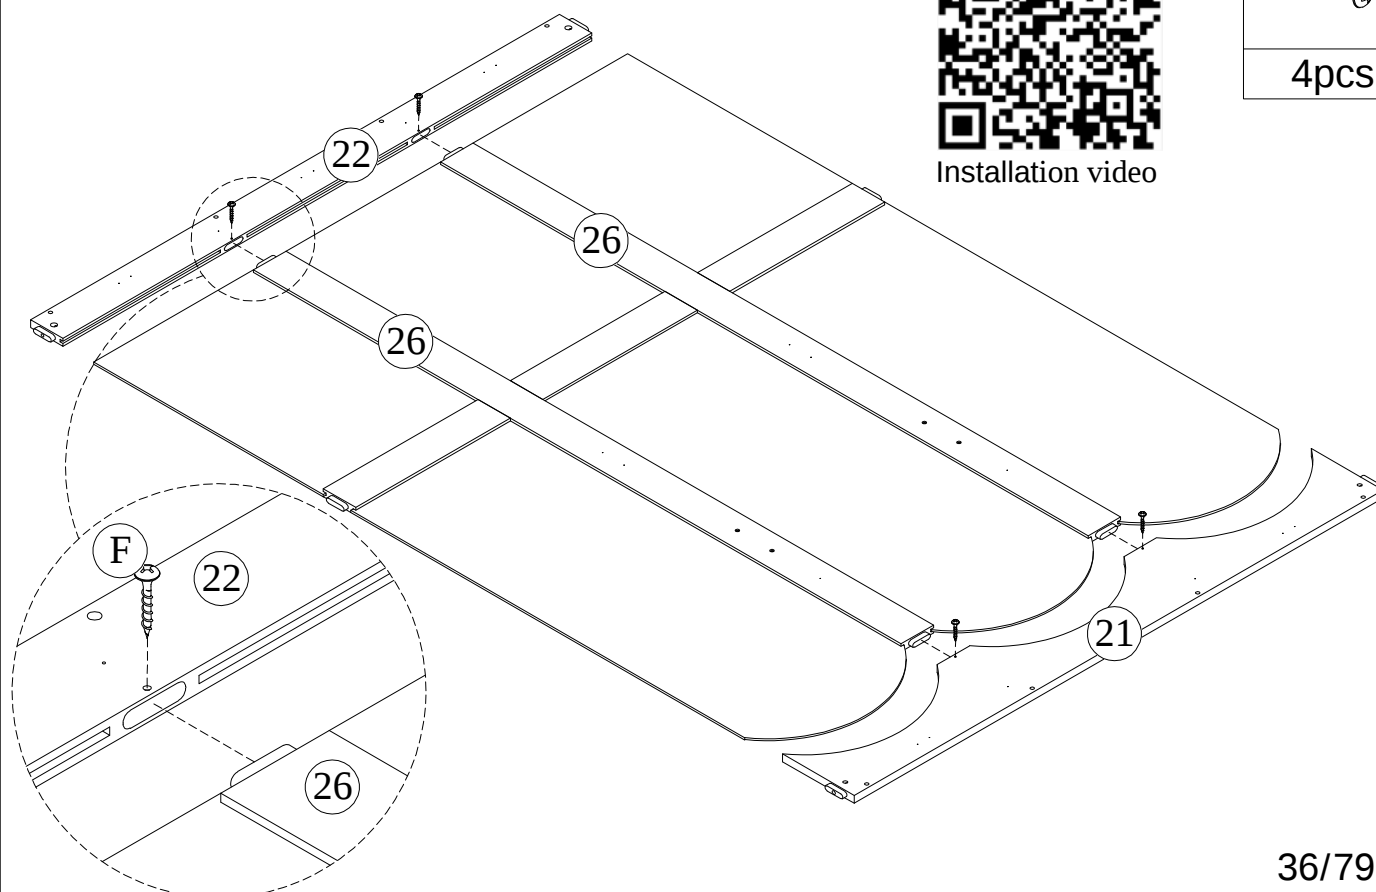


Installation video

F




4pcs

STEP-ÉTAPE 22 :

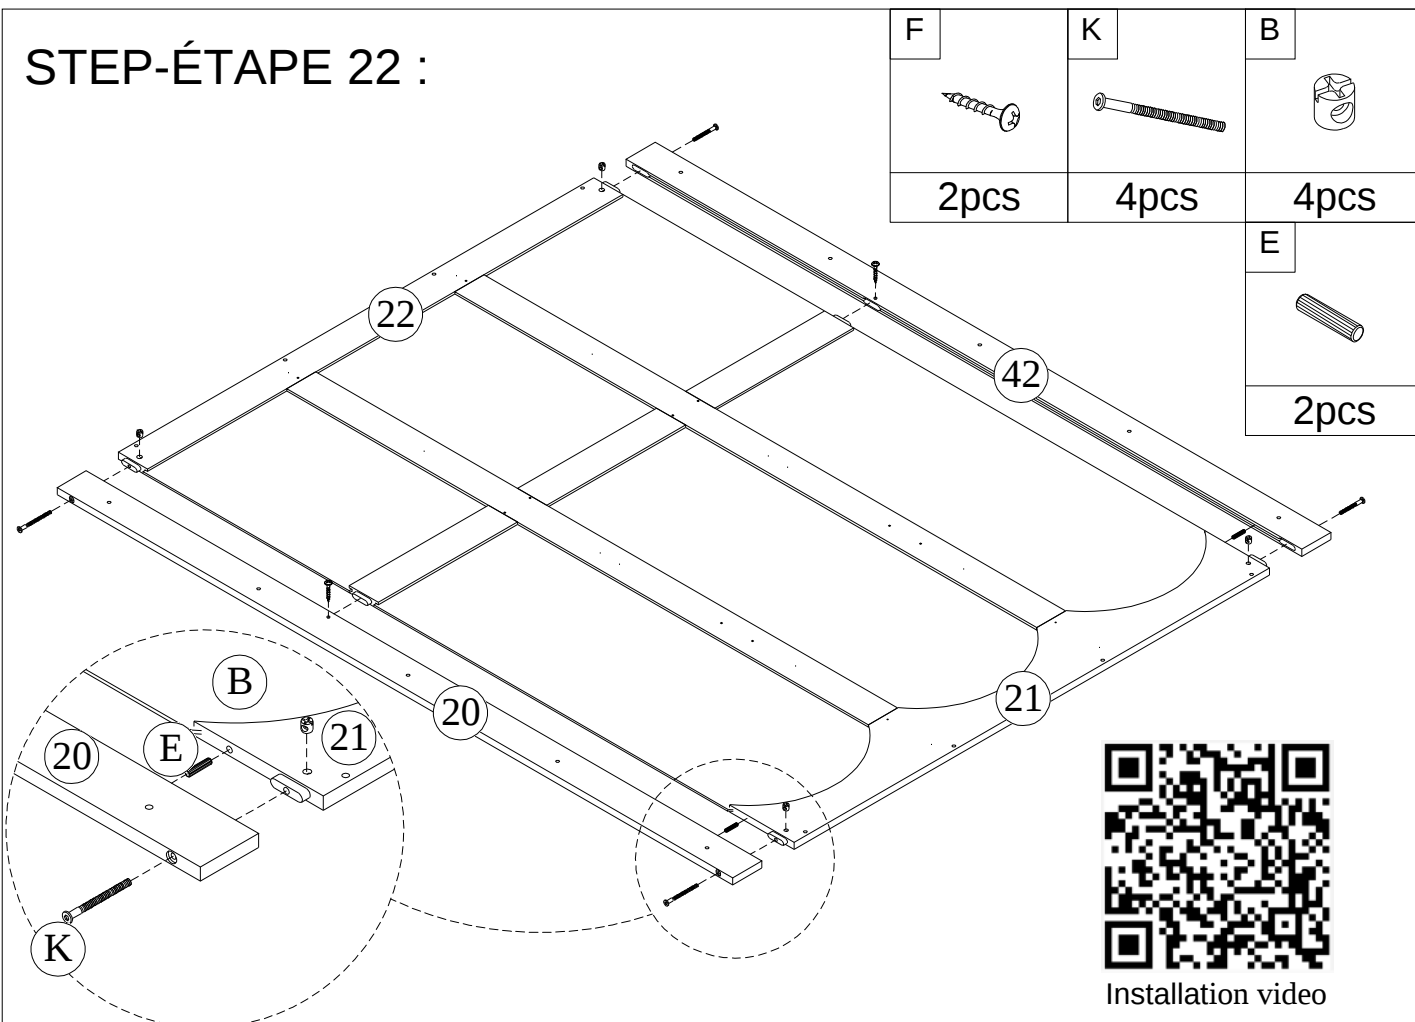


STEP-ÉTAPE 23 :

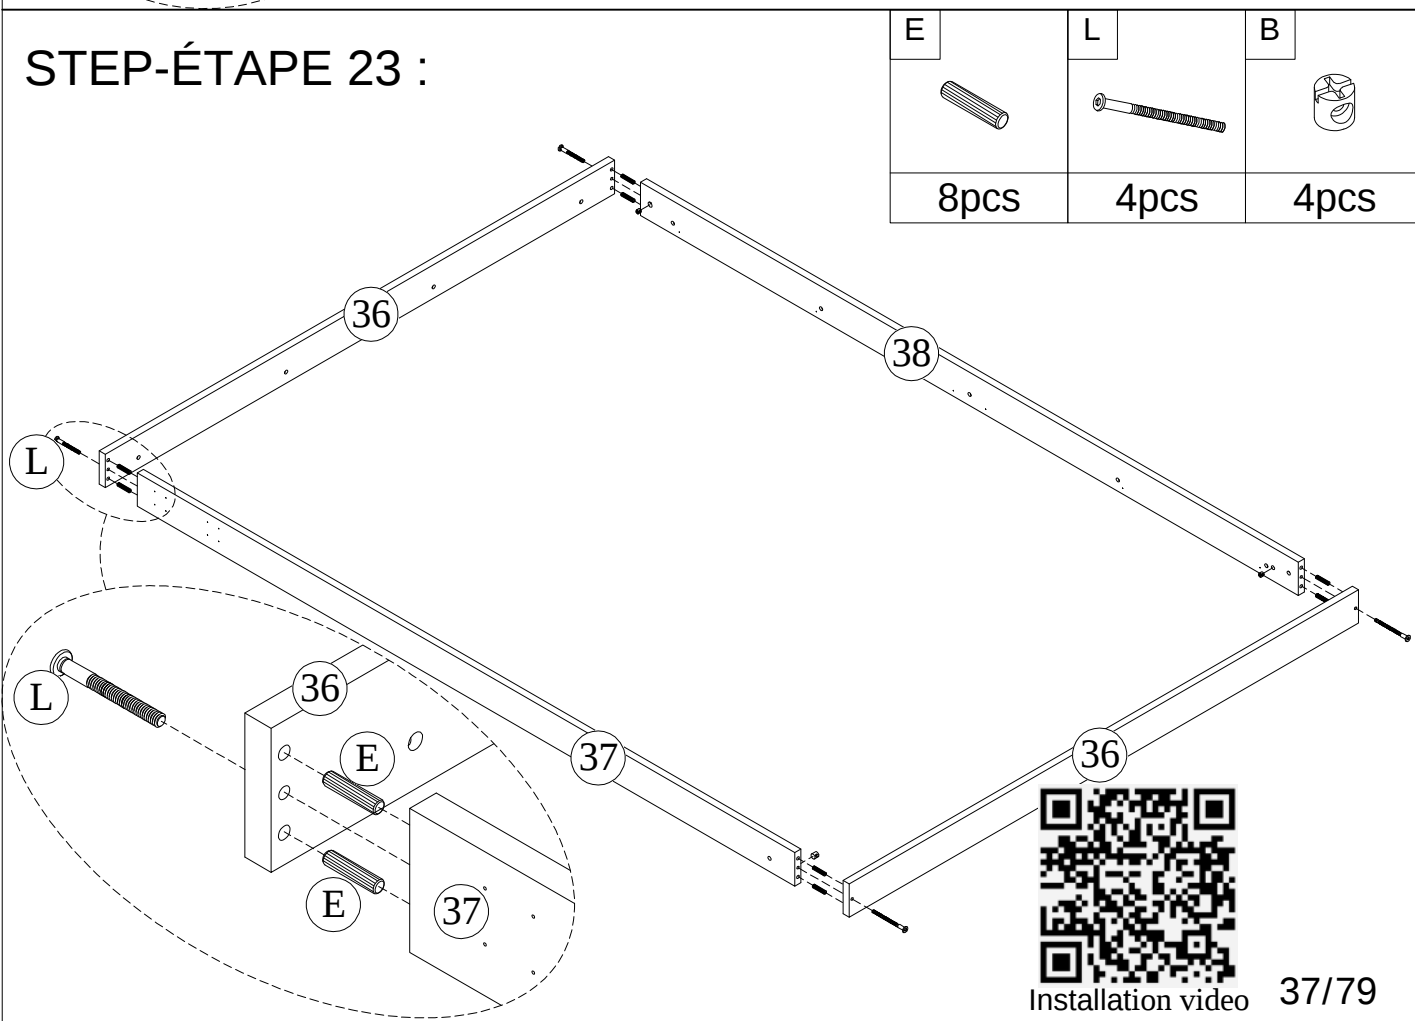


STEP-ÉTAPE 24 :


L	B
	
18pcs	18pcs

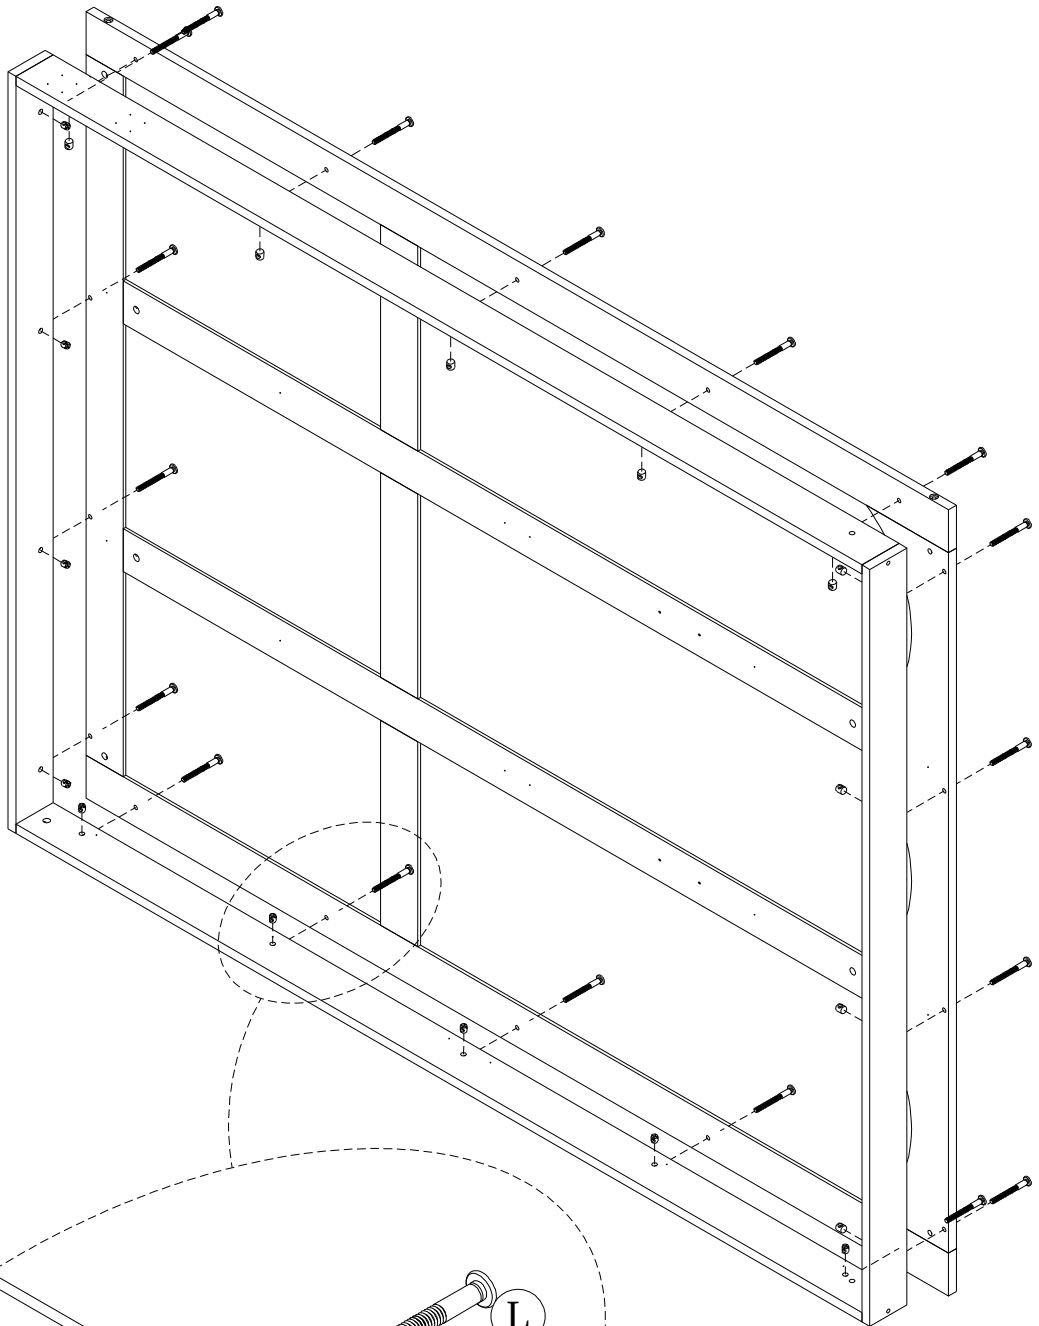

Installation video

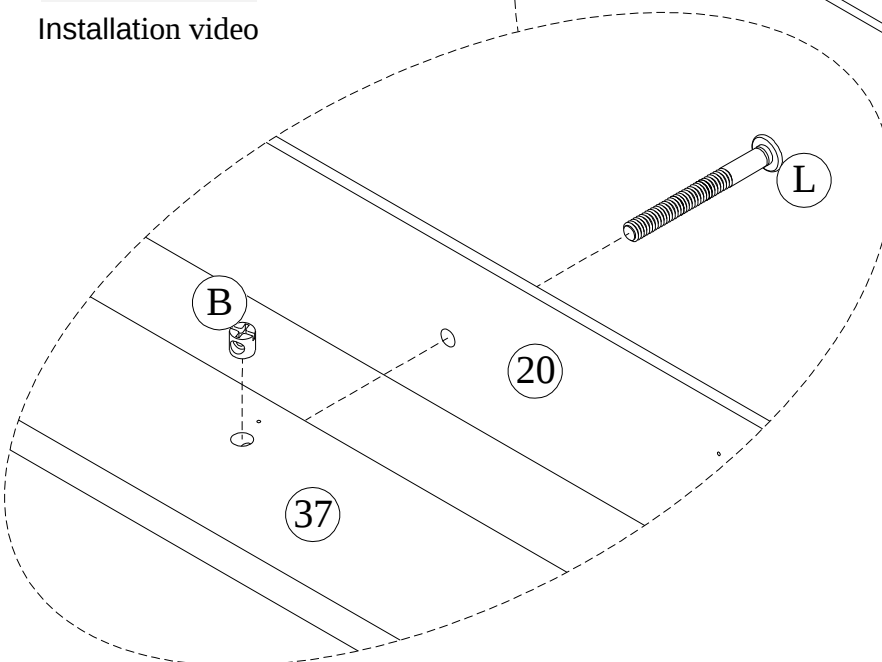


STEP-ÉTAPE 25 :




N	J
	
1pc	8pcs




Installation video

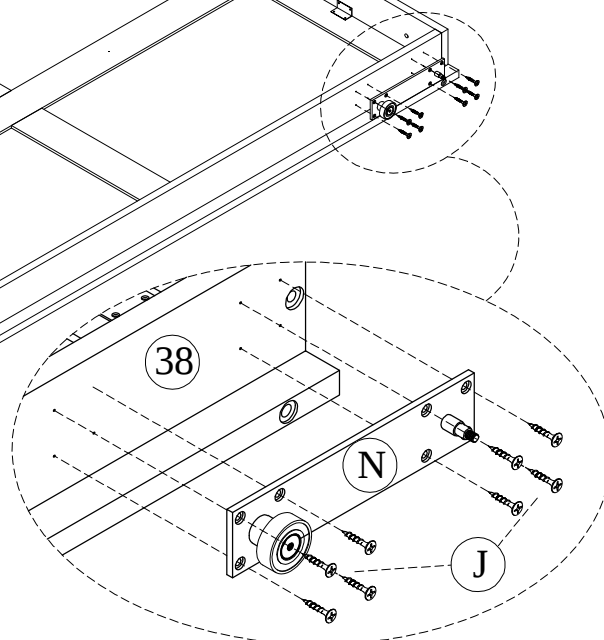

STEP-ÉTAPE 26 :


AC	N	J
		
6pcs	1pc	8pcs
		F
		
		24pcs


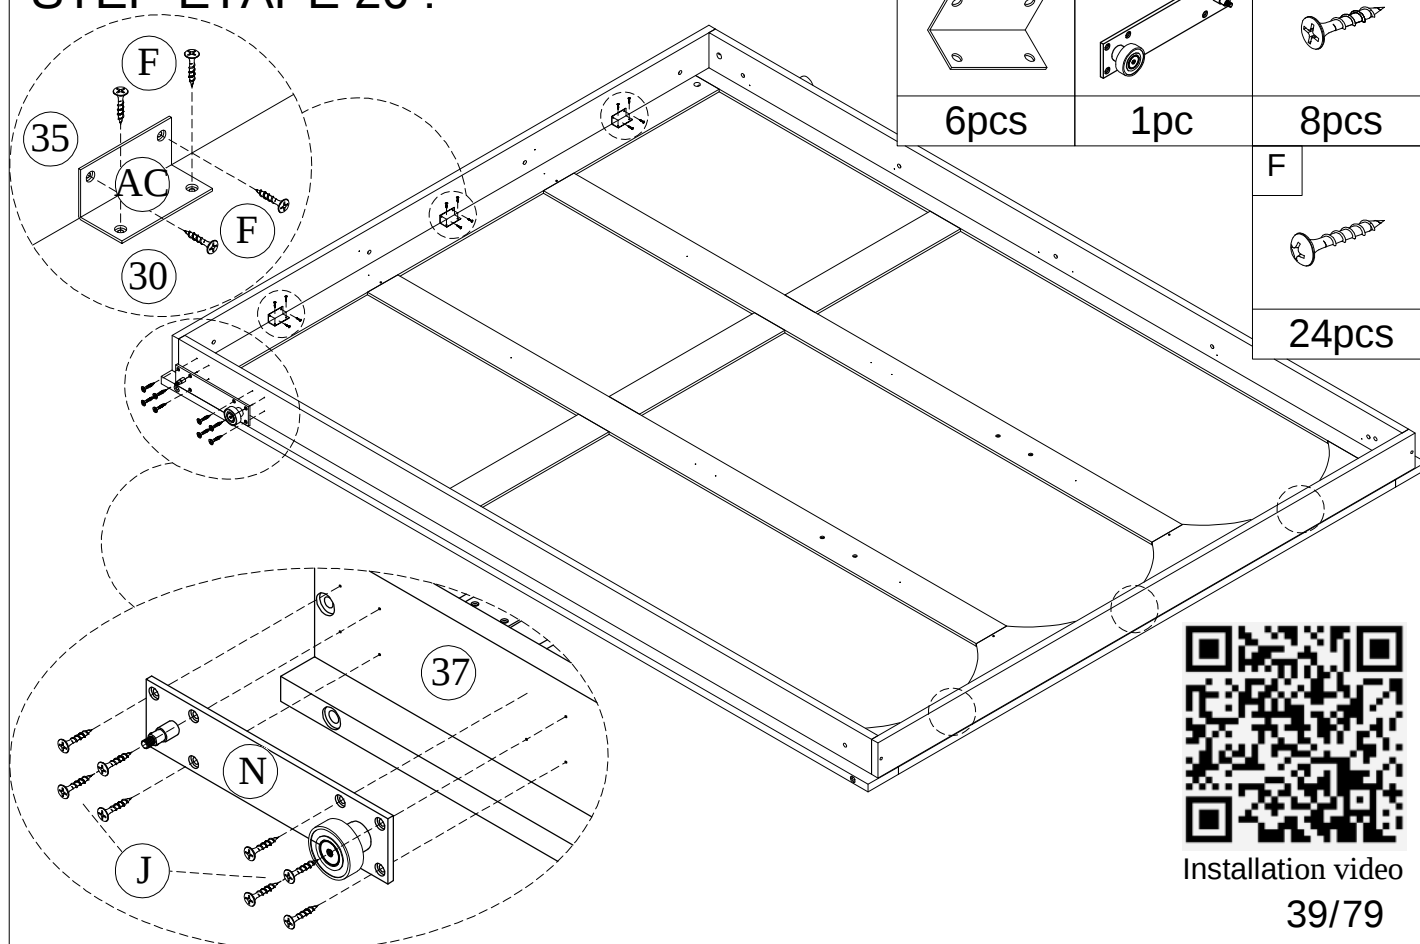


Installation video

39/79

STEP-ÉTAPE 27 :

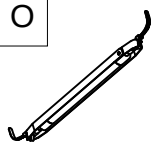O		R	
2pcs		2pcs	
		CC	
		1pc	

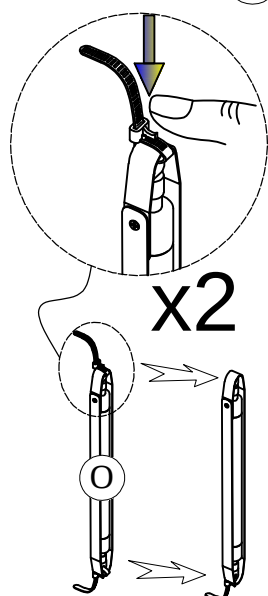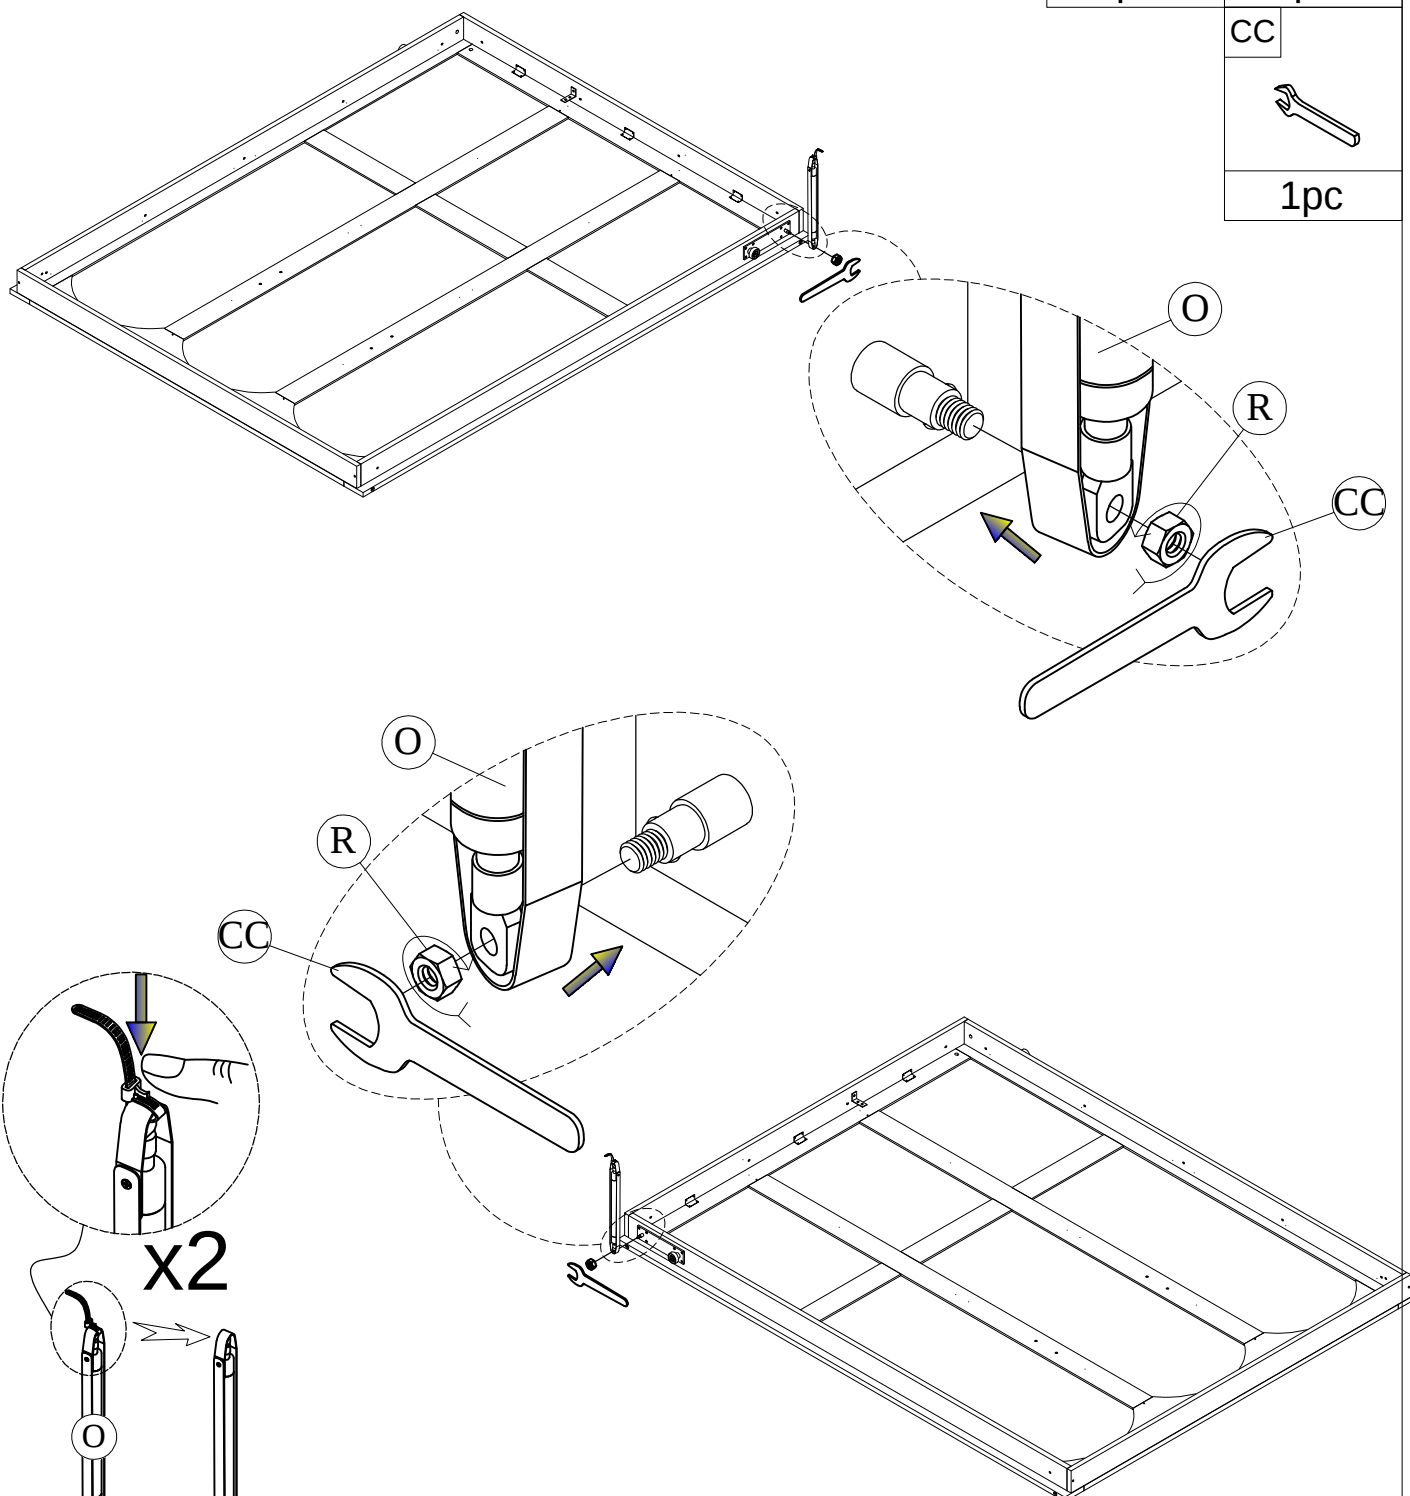


Remove the pulleys from both ends of the piston.




Installation video


- 1- Determine the position of the bed in the room.
- 1- Déterminer l'emplacement du lit dans la pièce.

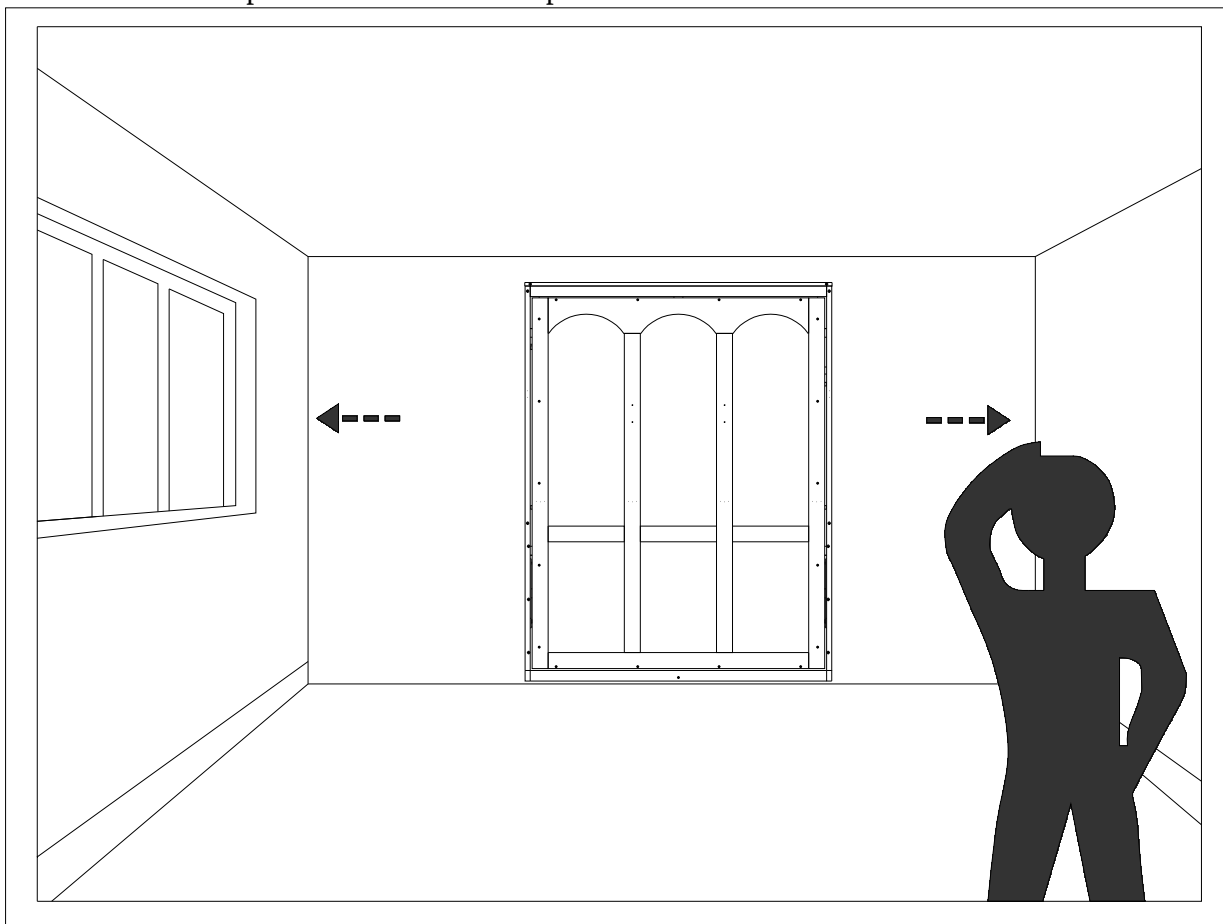


- 2- Put the bed back in its place. Please keep it vertical and horizontal.
- 2- Remettez le lit à sa place. Veuillez le garder bien vertical et horizontal.

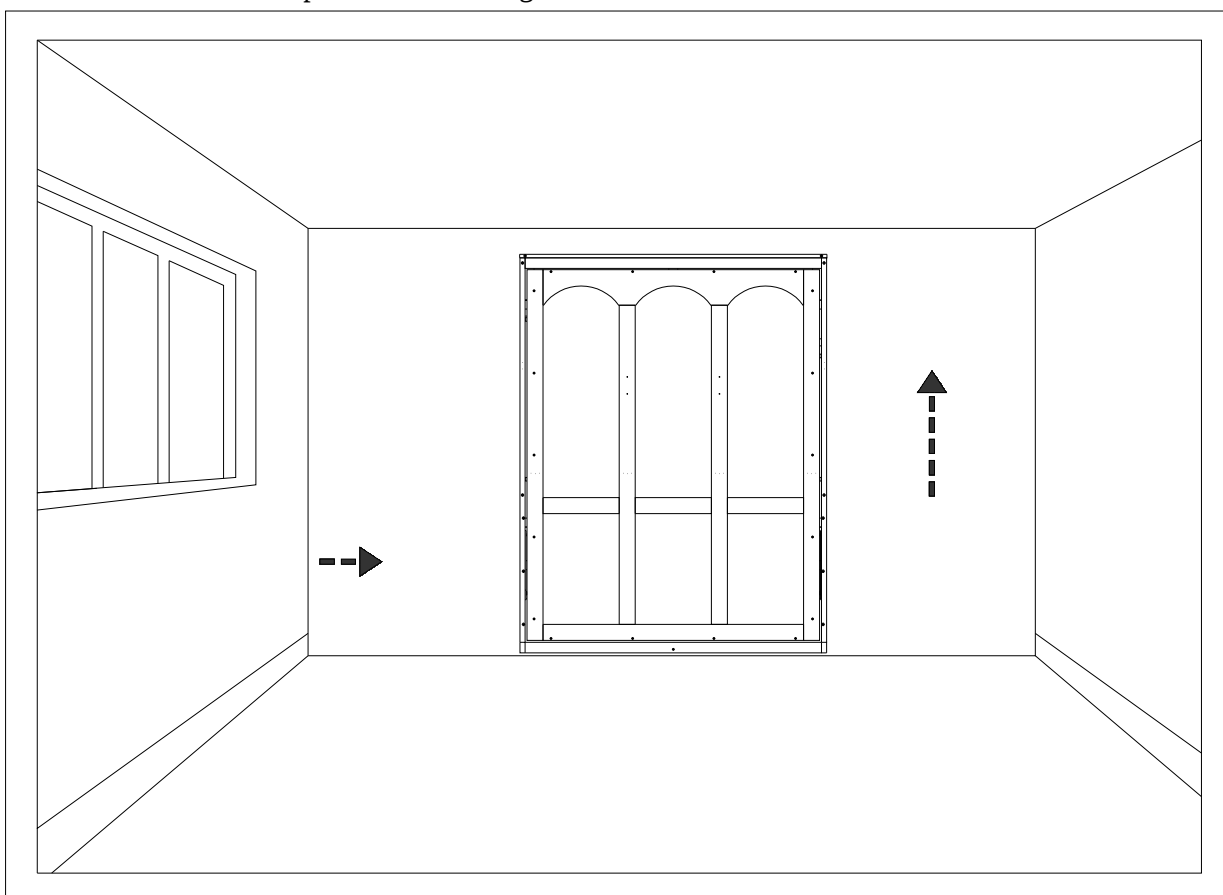



3- Mark the drilling points according to the actual product and the metal brackets already assembled onto the bed.

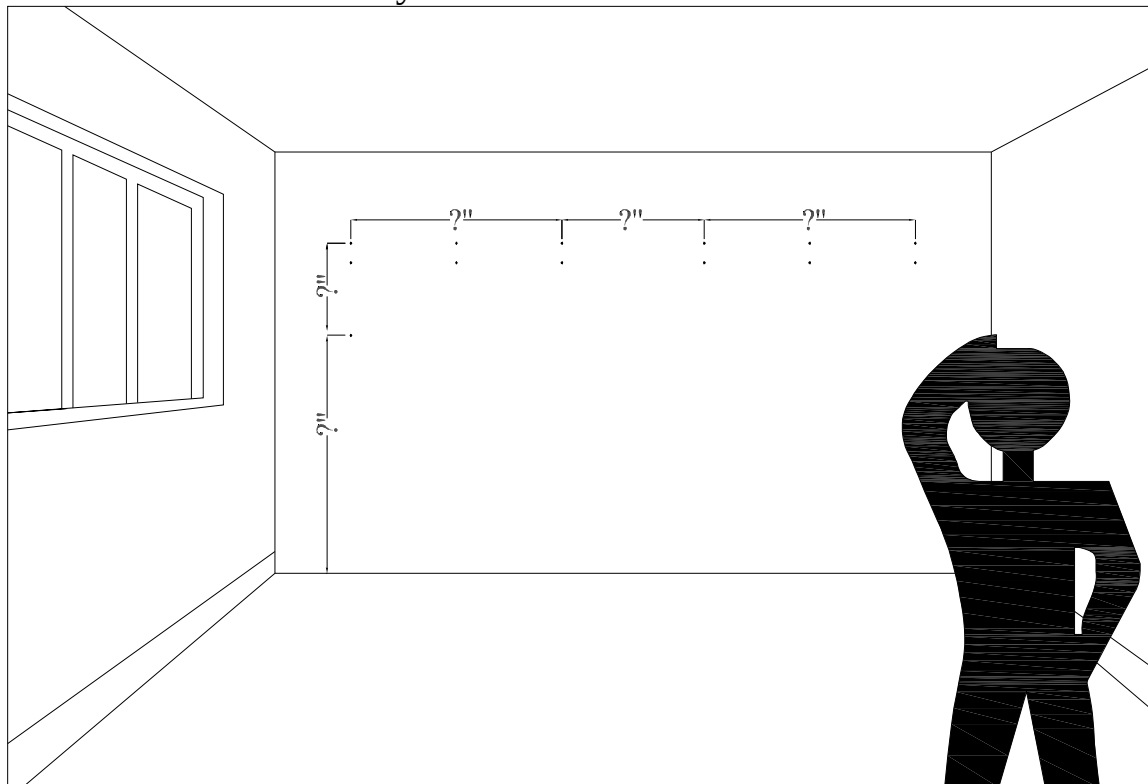


4- Drill holes at the marked points,
the holes must be sized to fit the metal anchors.

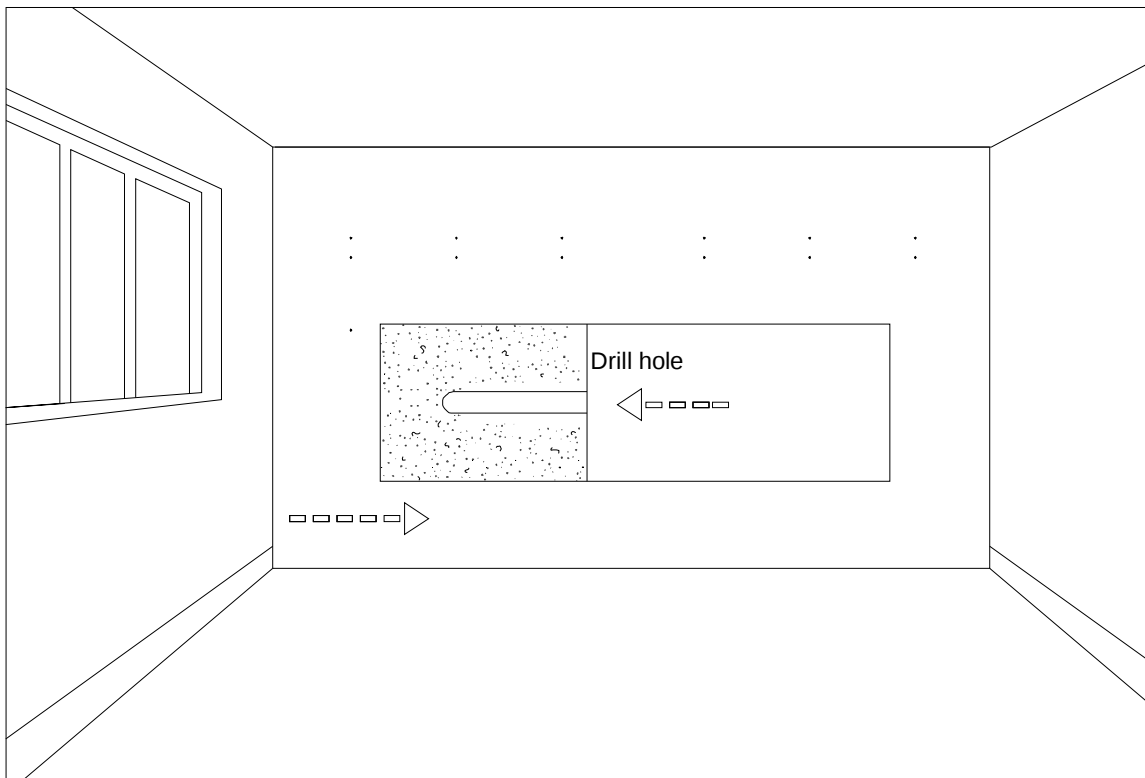

STEP-ÉTAPE 28:



F	AK
	
6pcs	3pcs


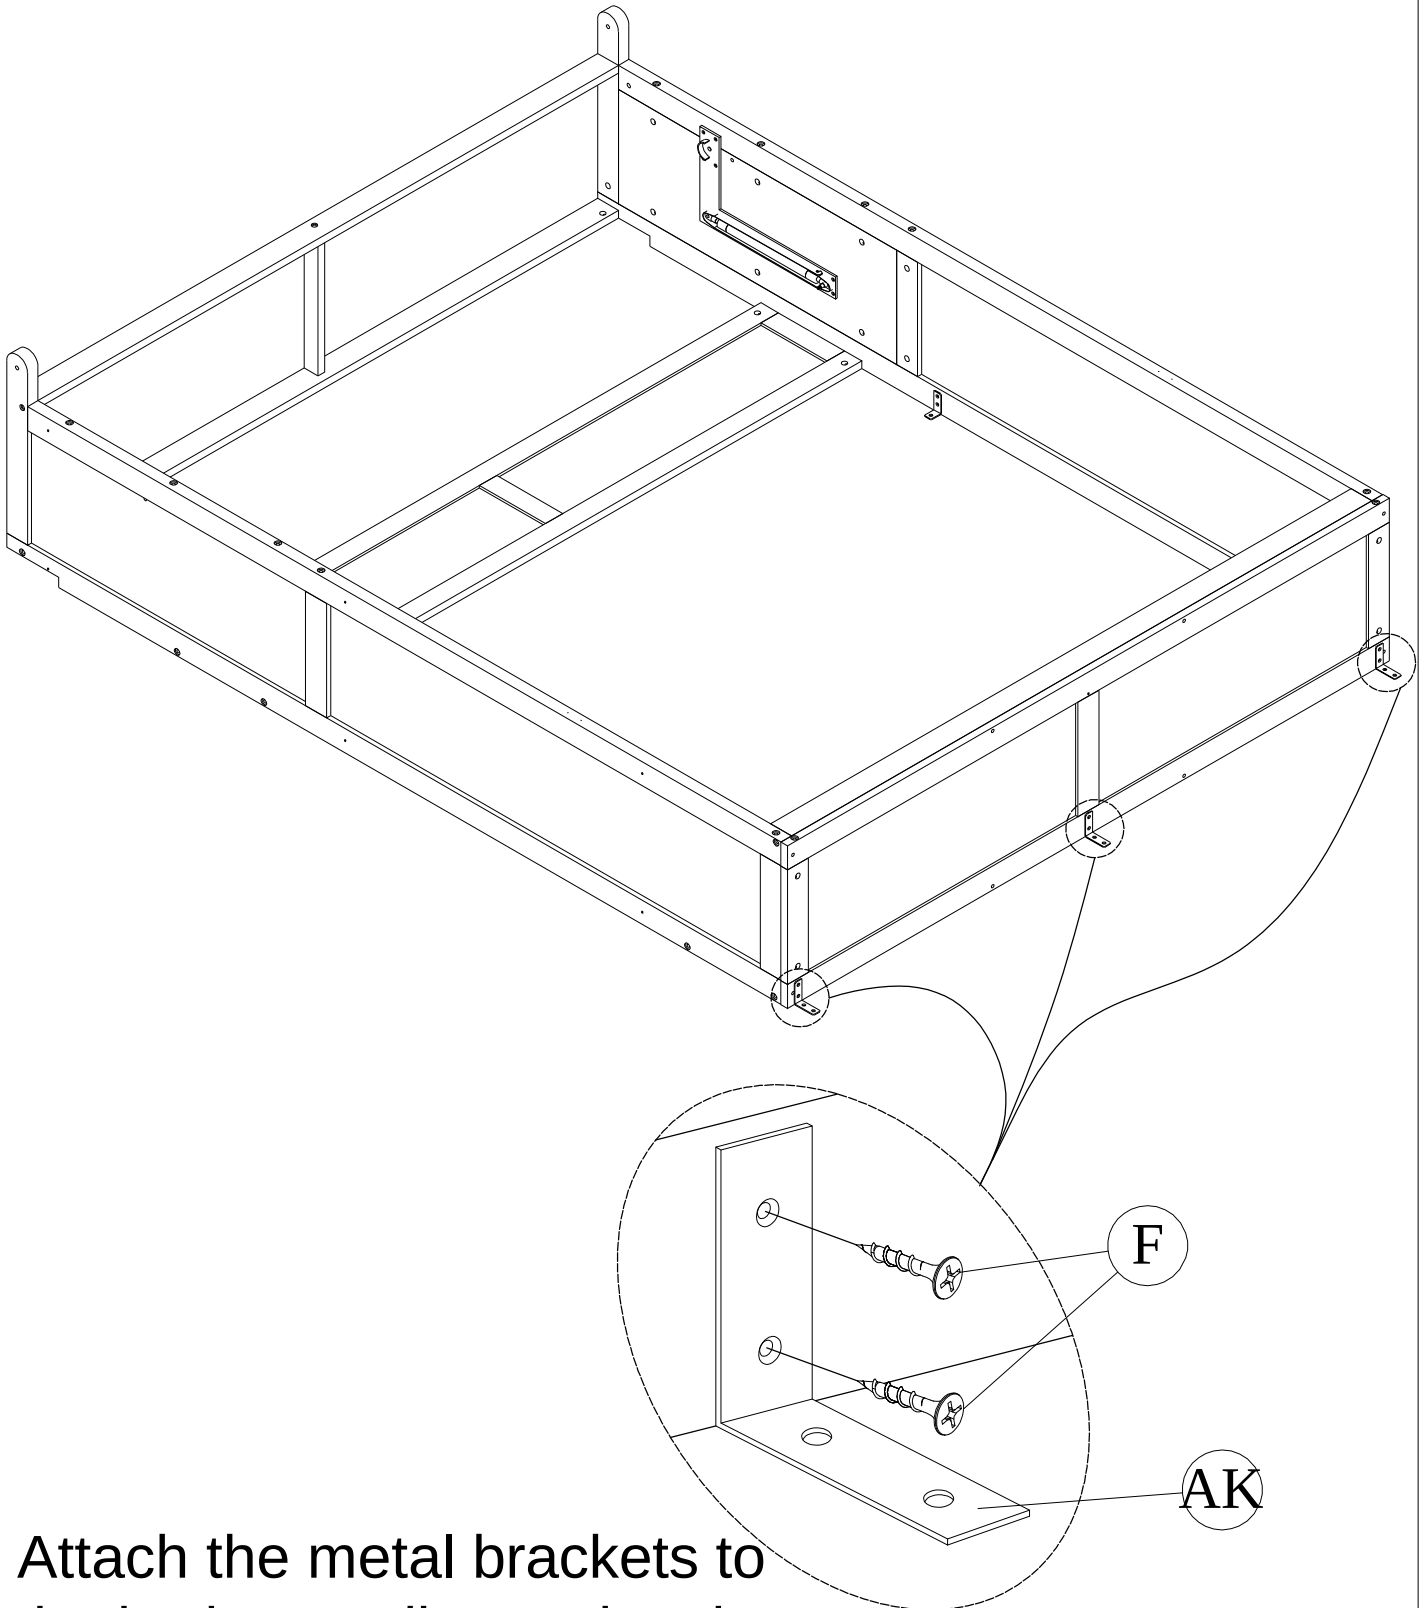


Attach the metal brackets to the bed according to the size of the drilled holes in the wall.

STEP29:

This accessory is for use on brick or concrete walls.

EE	DD
	
1pc	10pcs

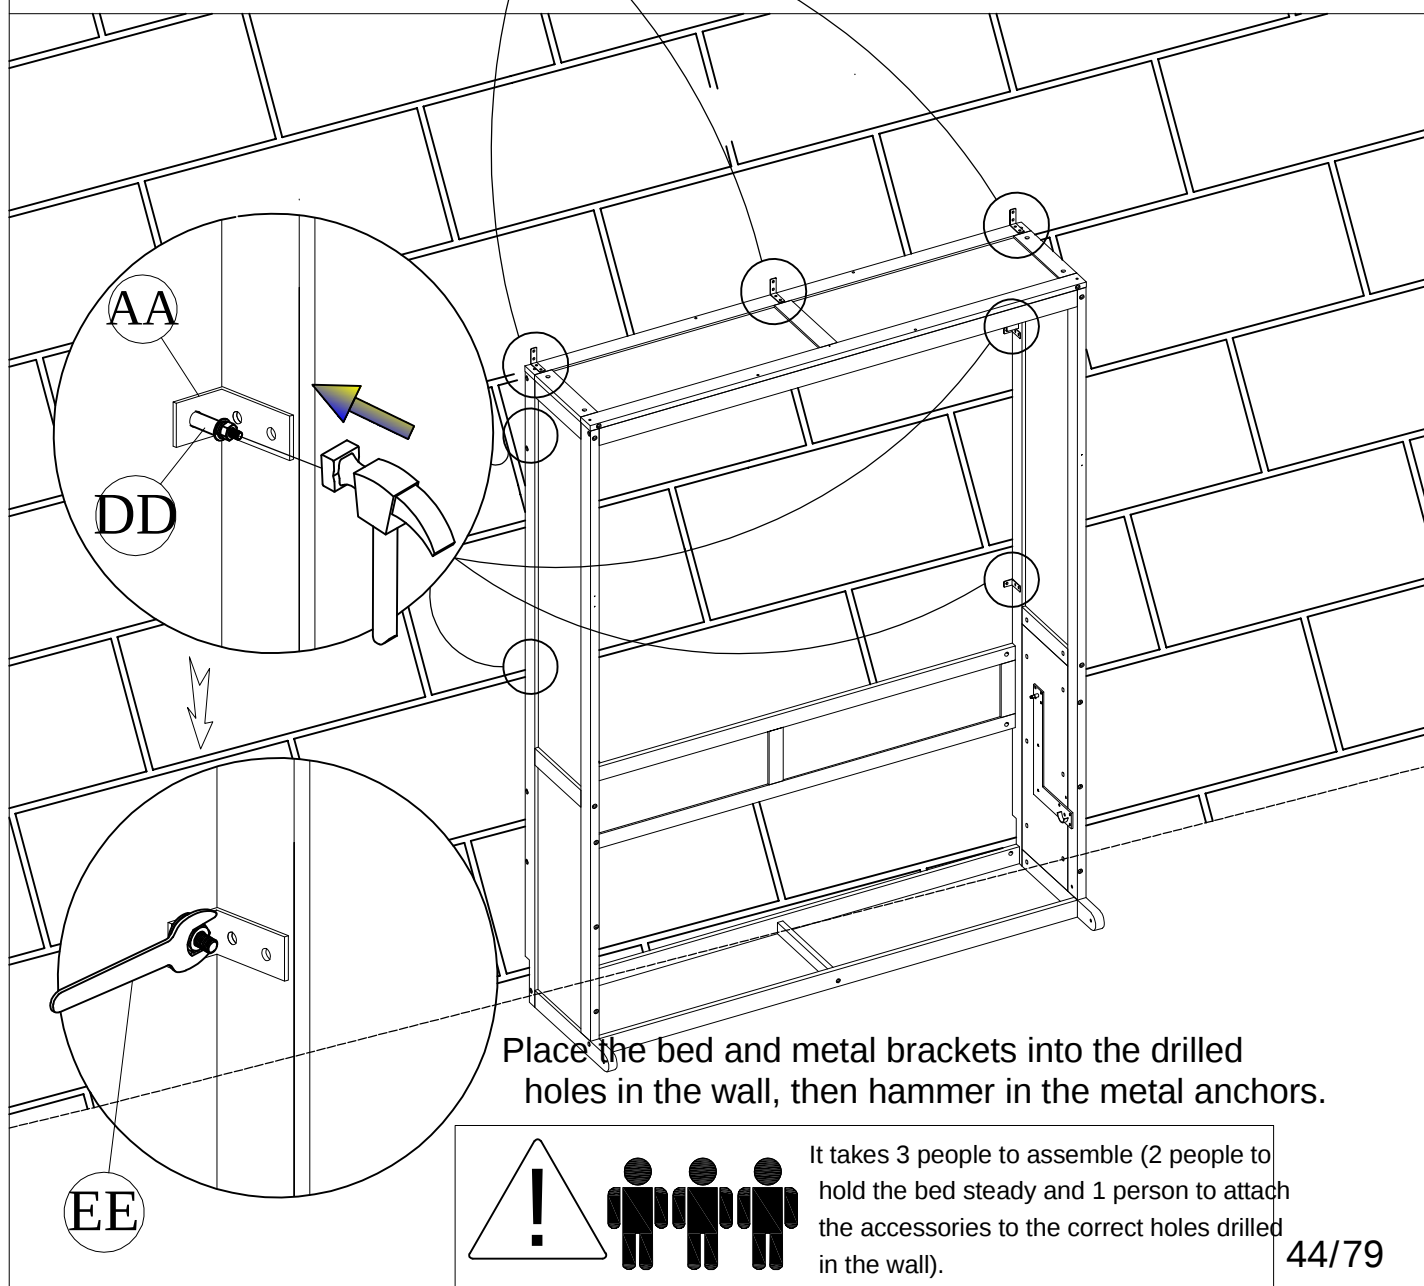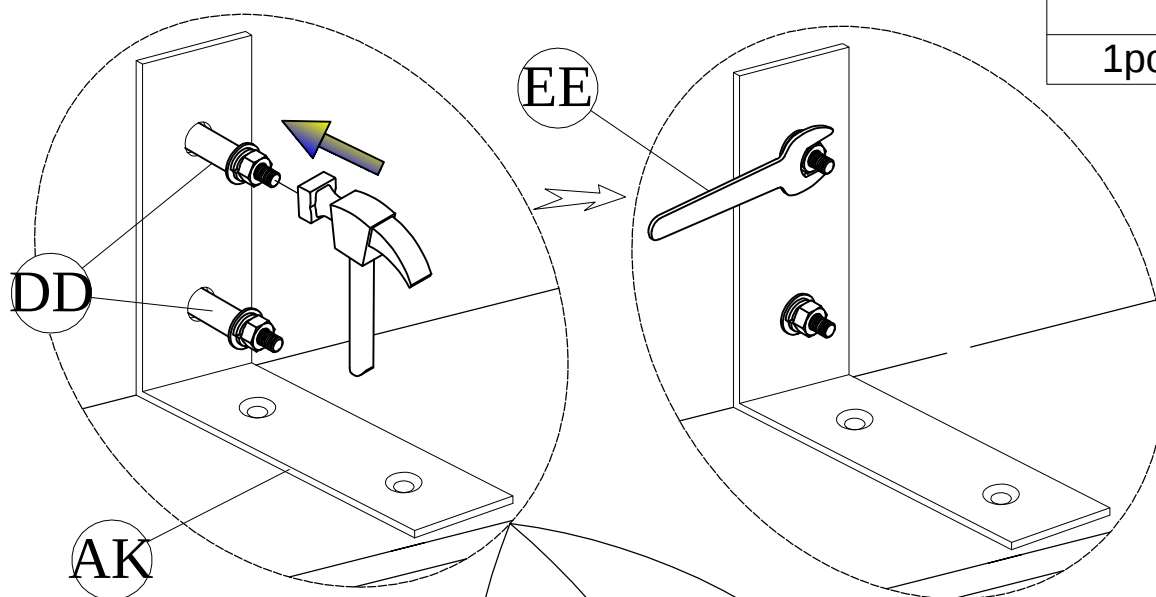




Place the bed and metal brackets into the drilled holes in the wall, then hammer in the metal anchors.



It takes 3 people to assemble (2 people to hold the bed steady and 1 person to attach the accessories to the correct holes drilled in the wall).

STEP30: This accessory is for wooden walls.

BB	AL
	
10pcs	10pcs

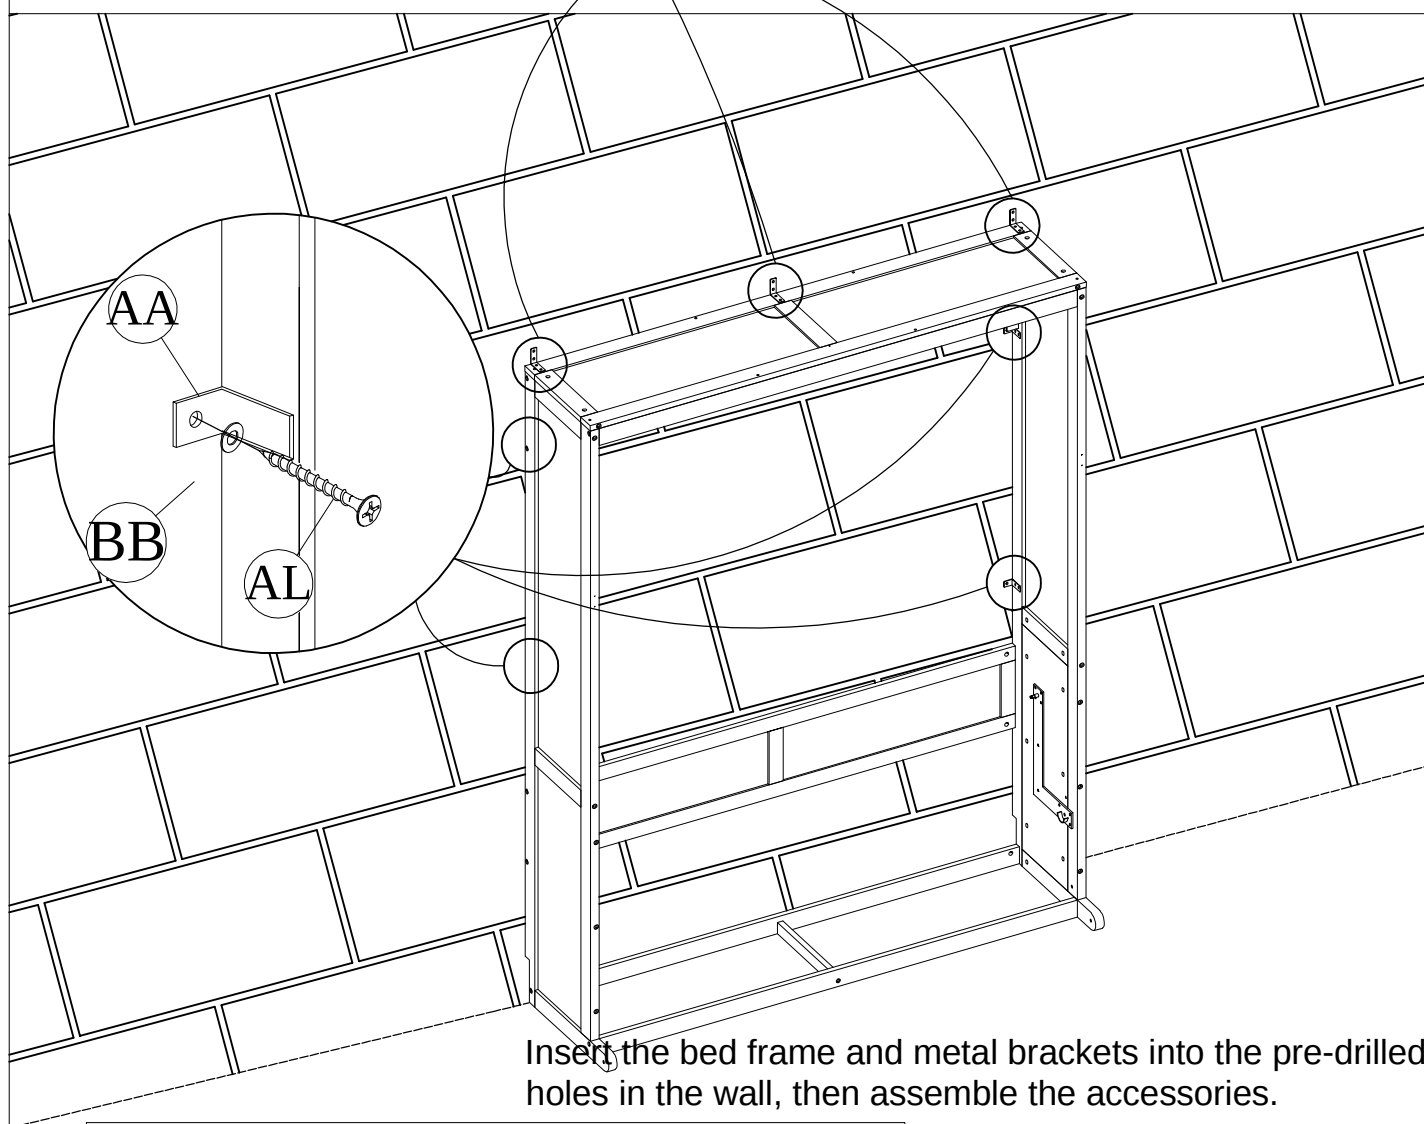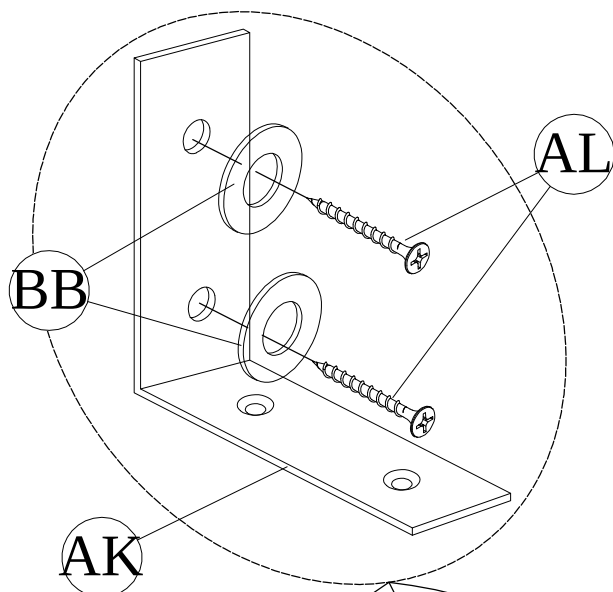


Insert the bed frame and metal brackets into the pre-drilled holes in the wall, then assemble the accessories.




It takes 3 people to assemble (2 people to hold the bed steady and 1 person to attach the accessories to the correct holes drilled in the wall).

STEP-ÉTAPE 31:

V







2pcs

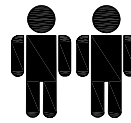


2 people tilt the bed
until accessories are in place)



Installation video

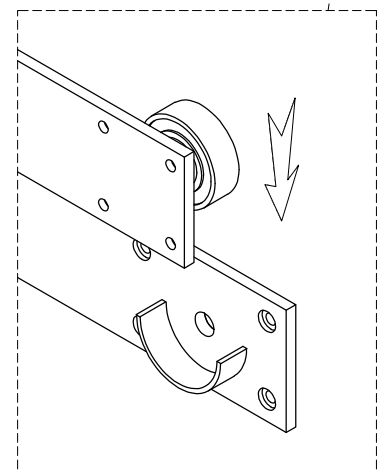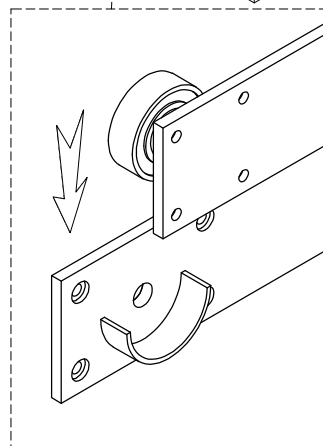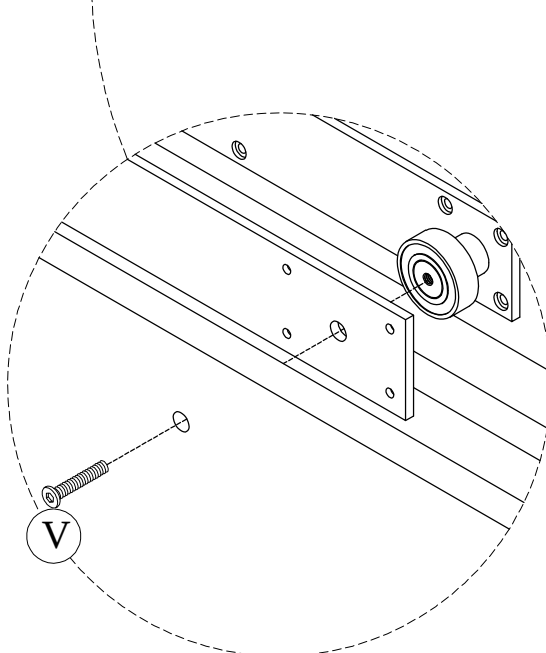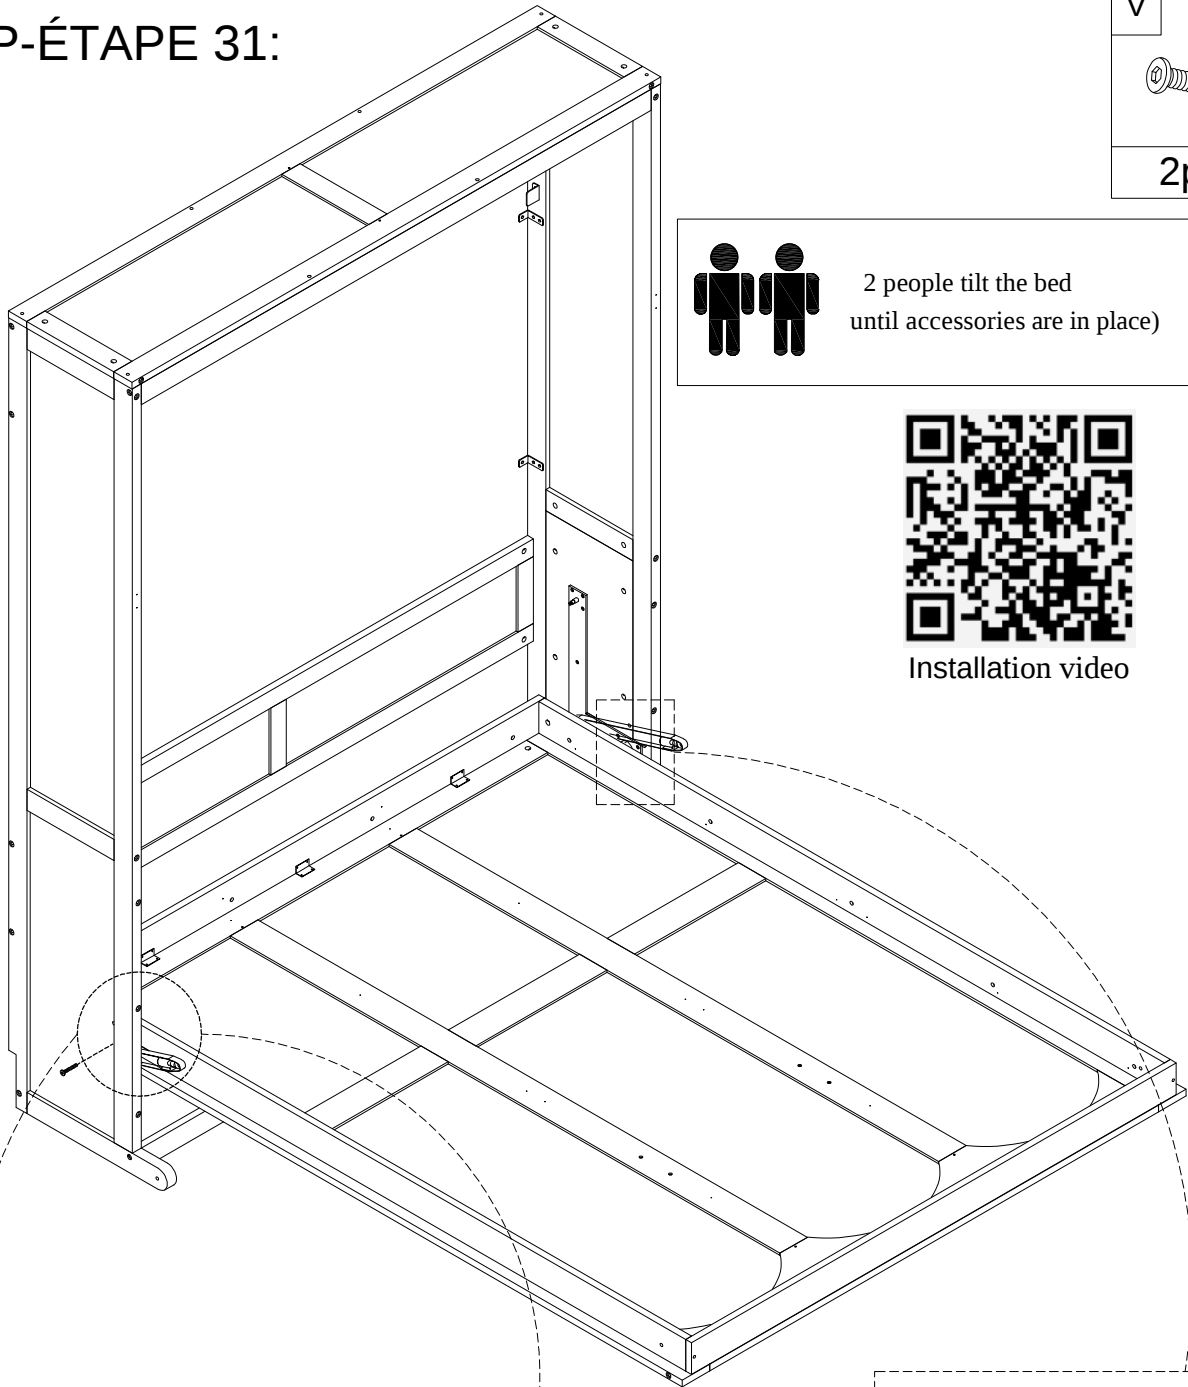


STEP-ÉTAPE 32 :

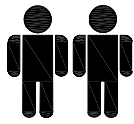

2 people tilt the bed
until accessories are in place)

U



2pcs




Installation video

STEP-ÉTAPE 33 :

W	Y
	
2pcs	2pcs
	T
	
	2pcs



Installation video

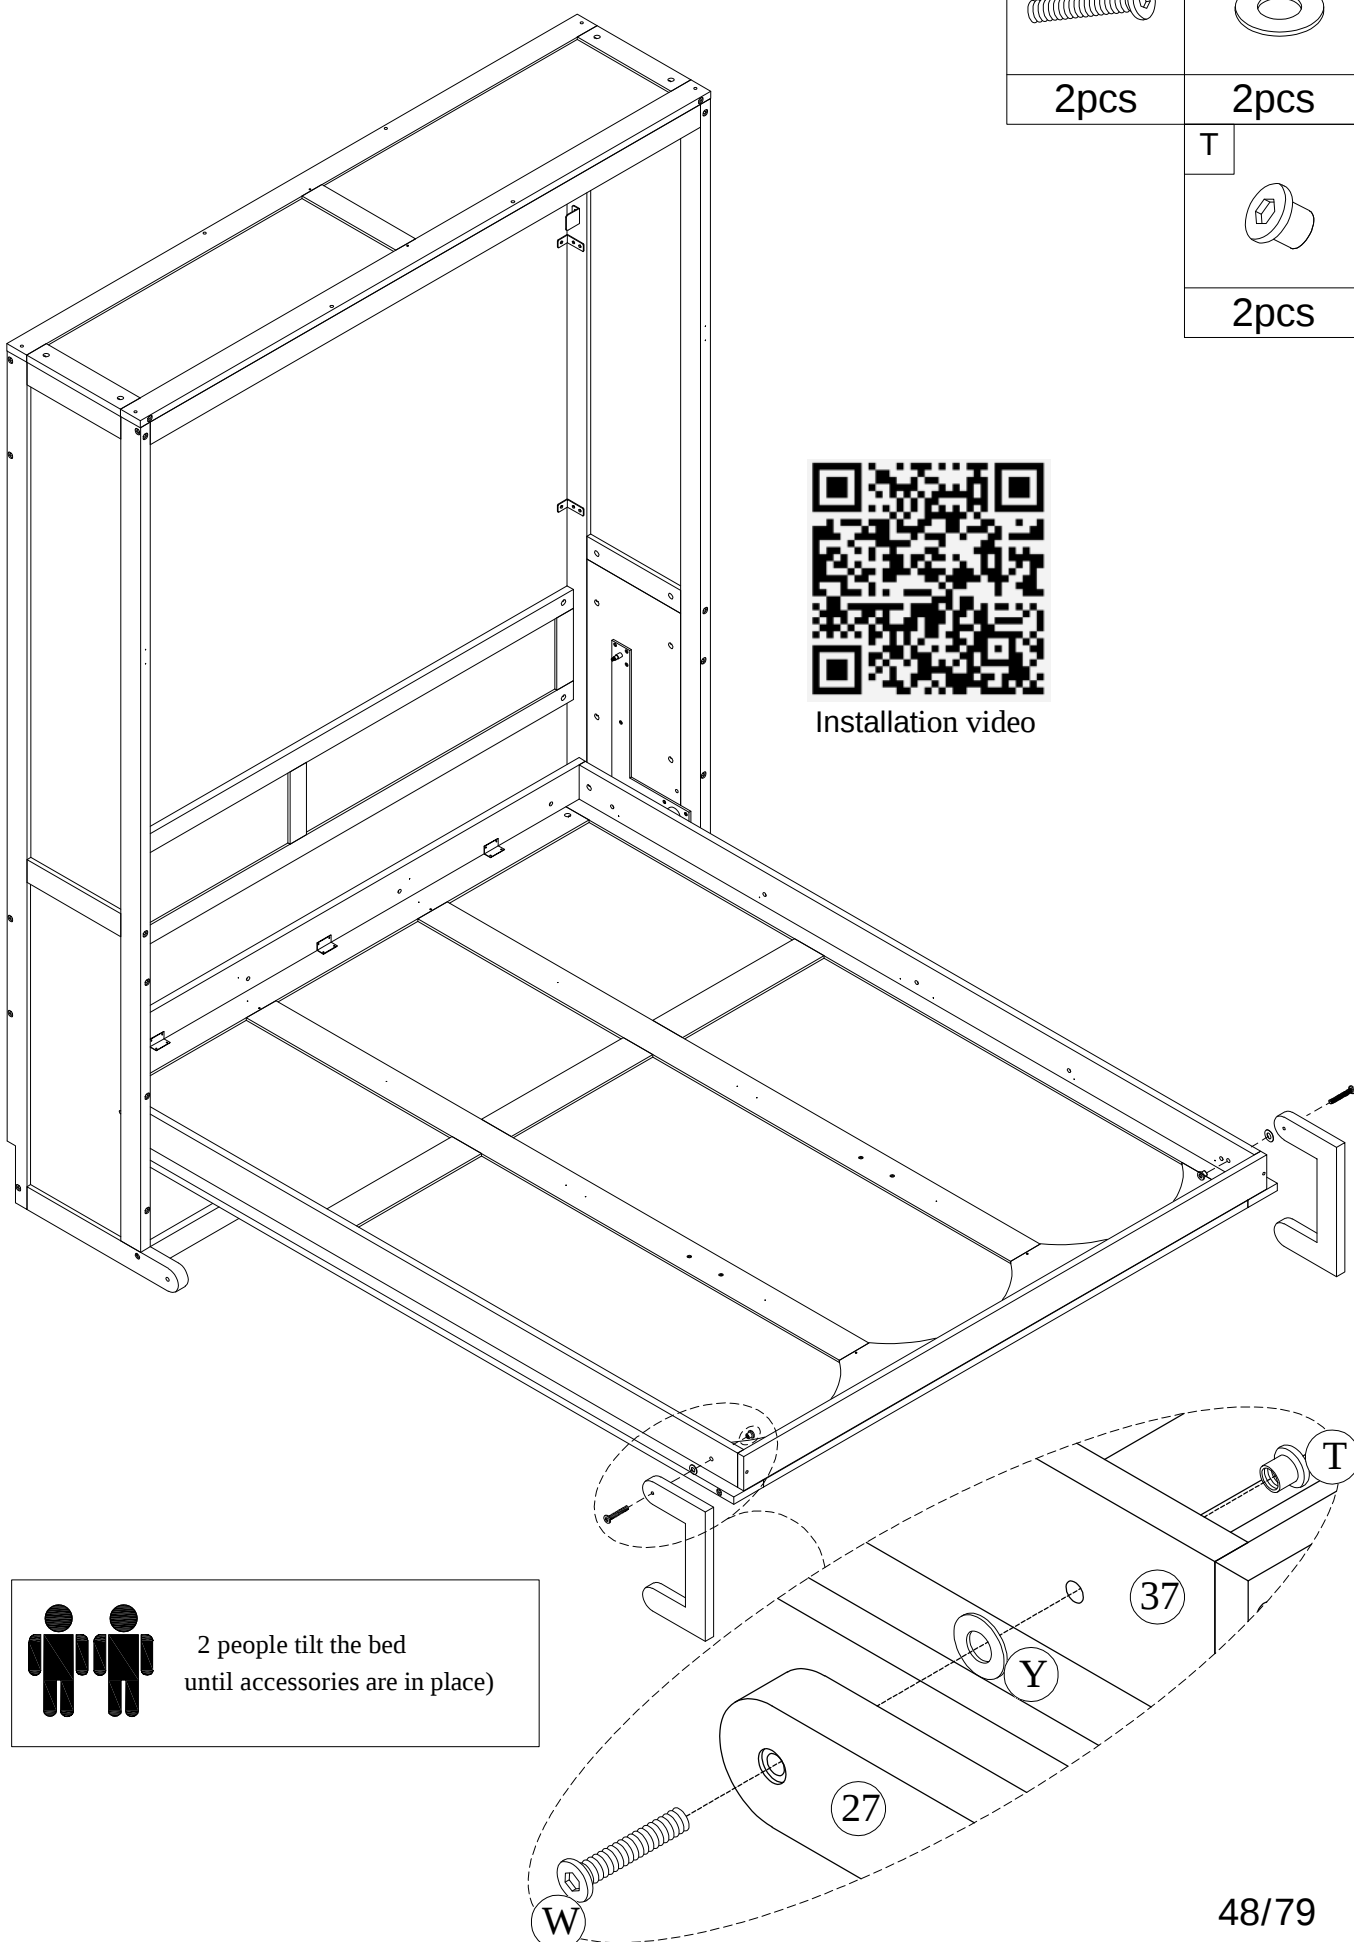




2 people tilt the bed
until accessories are in place)

STEP-ÉTAPE 34:

M	S
	
6pcs	10pcs





Installation video

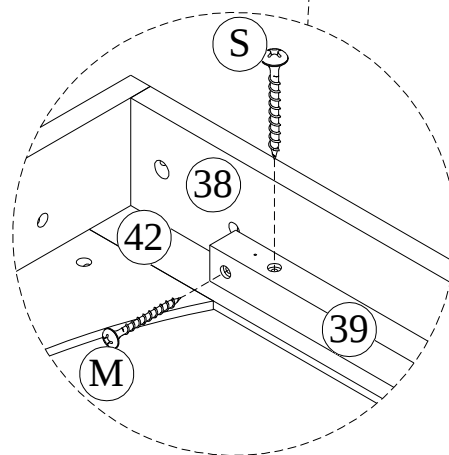
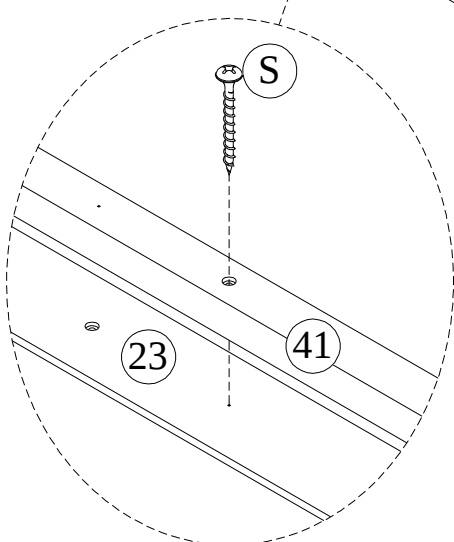
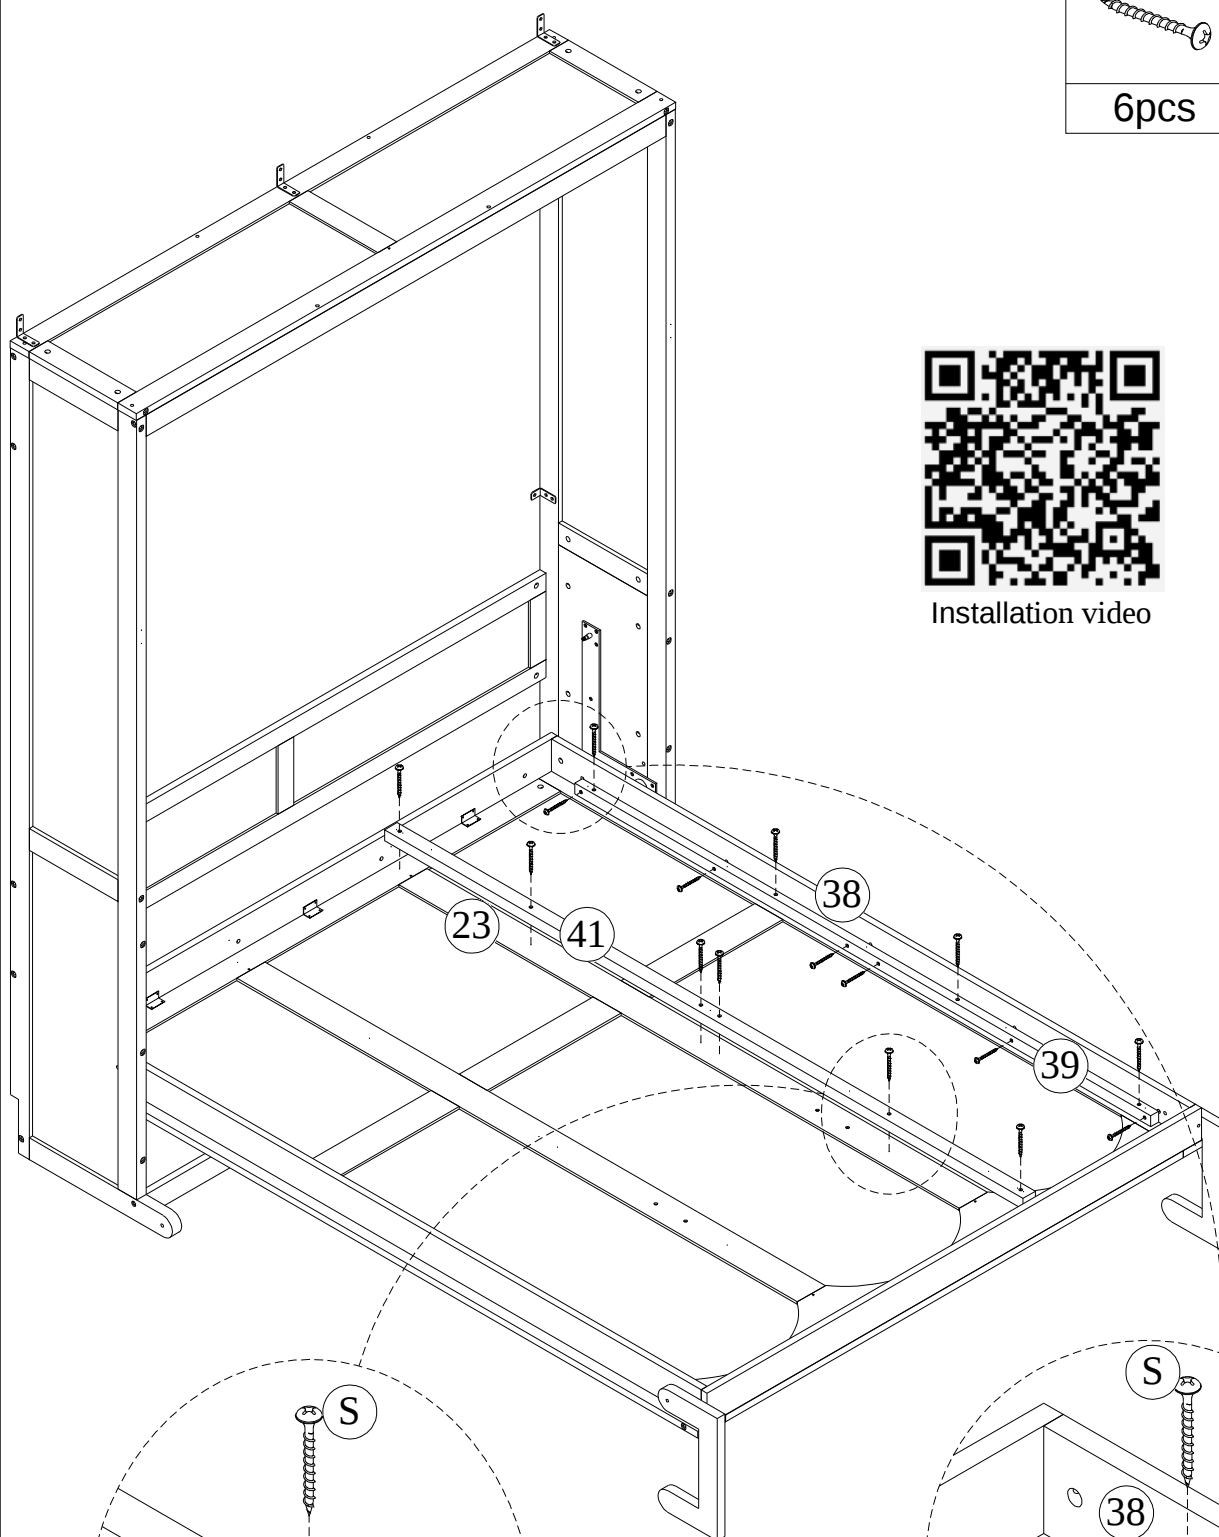


STEP-ÉTAPE 35 :




Installation video

M	S
	
6pcs	10pcs

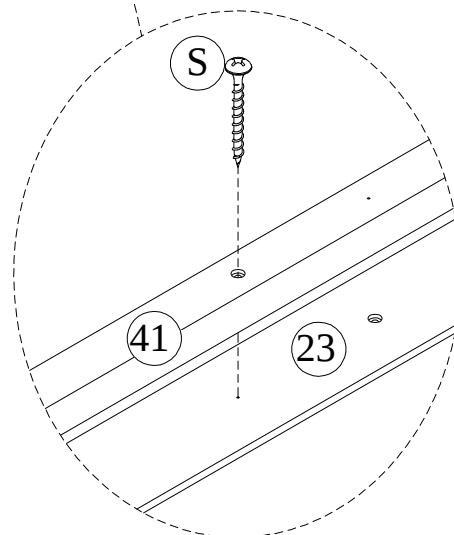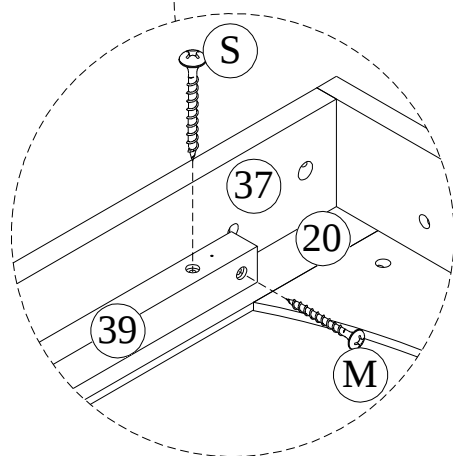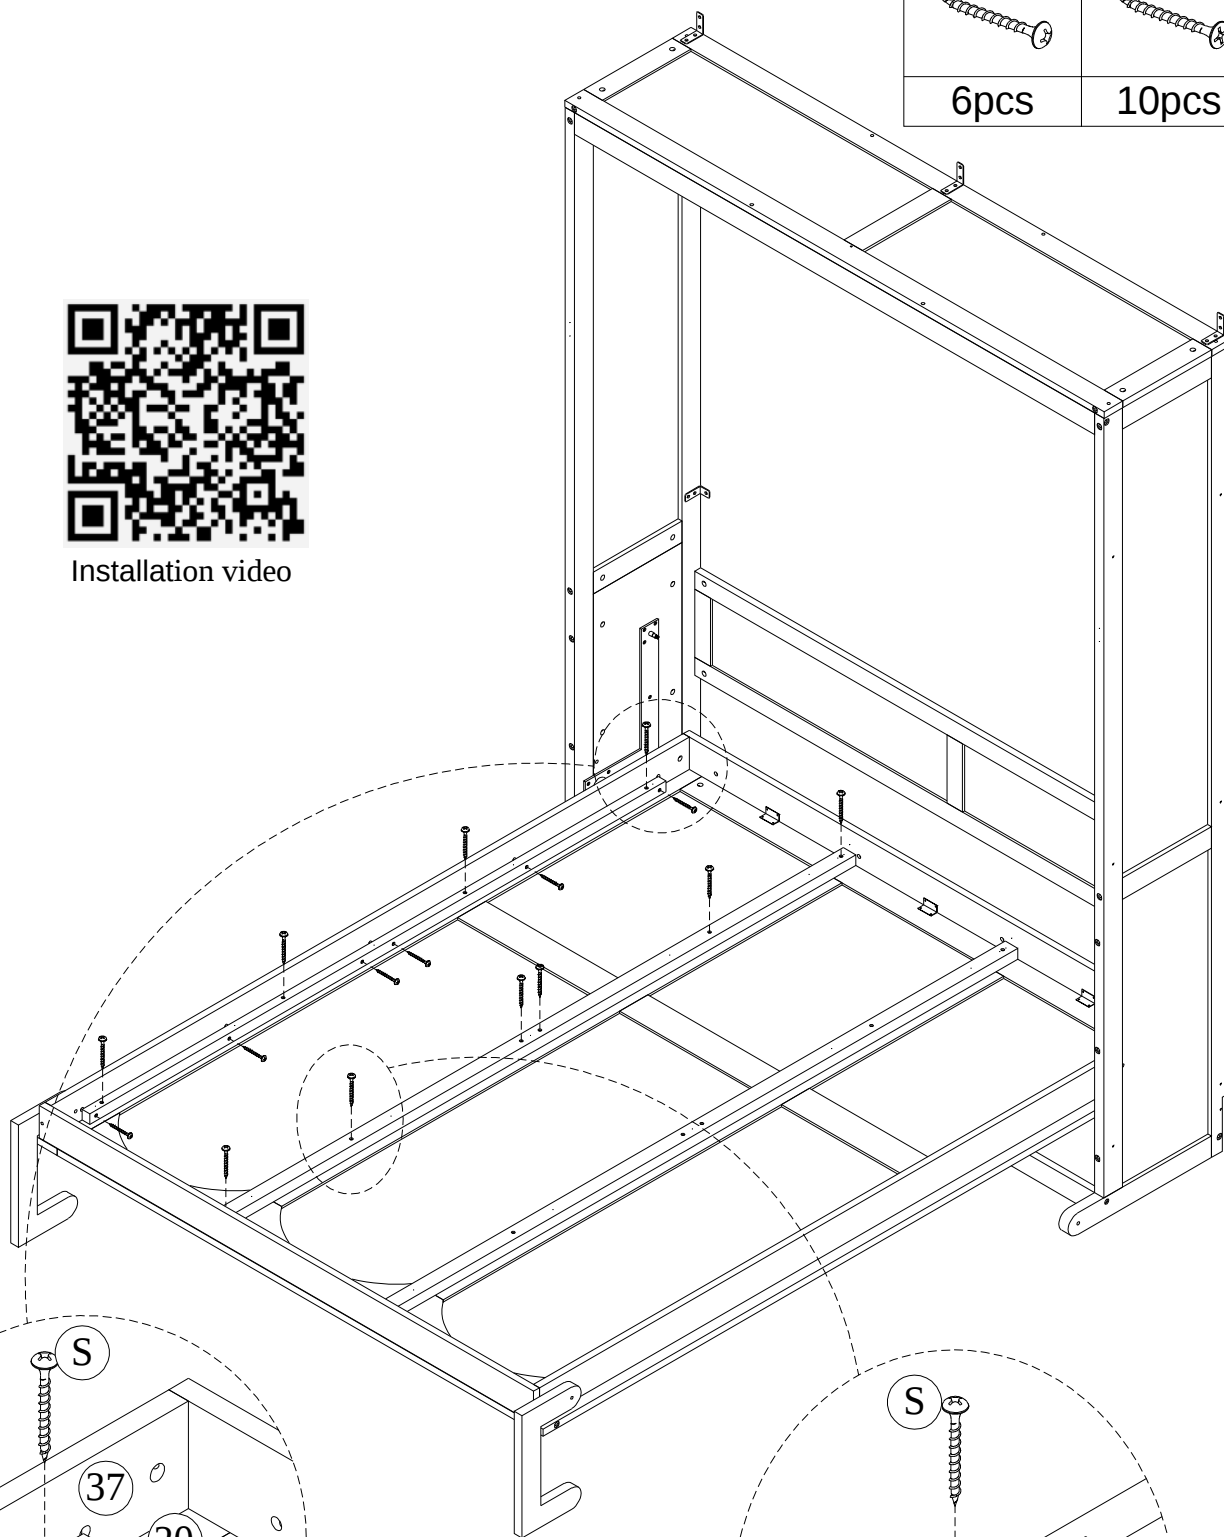


STEP-ÉTAPE 36 :

F	GG
	
12pc	4pcs




Installation video

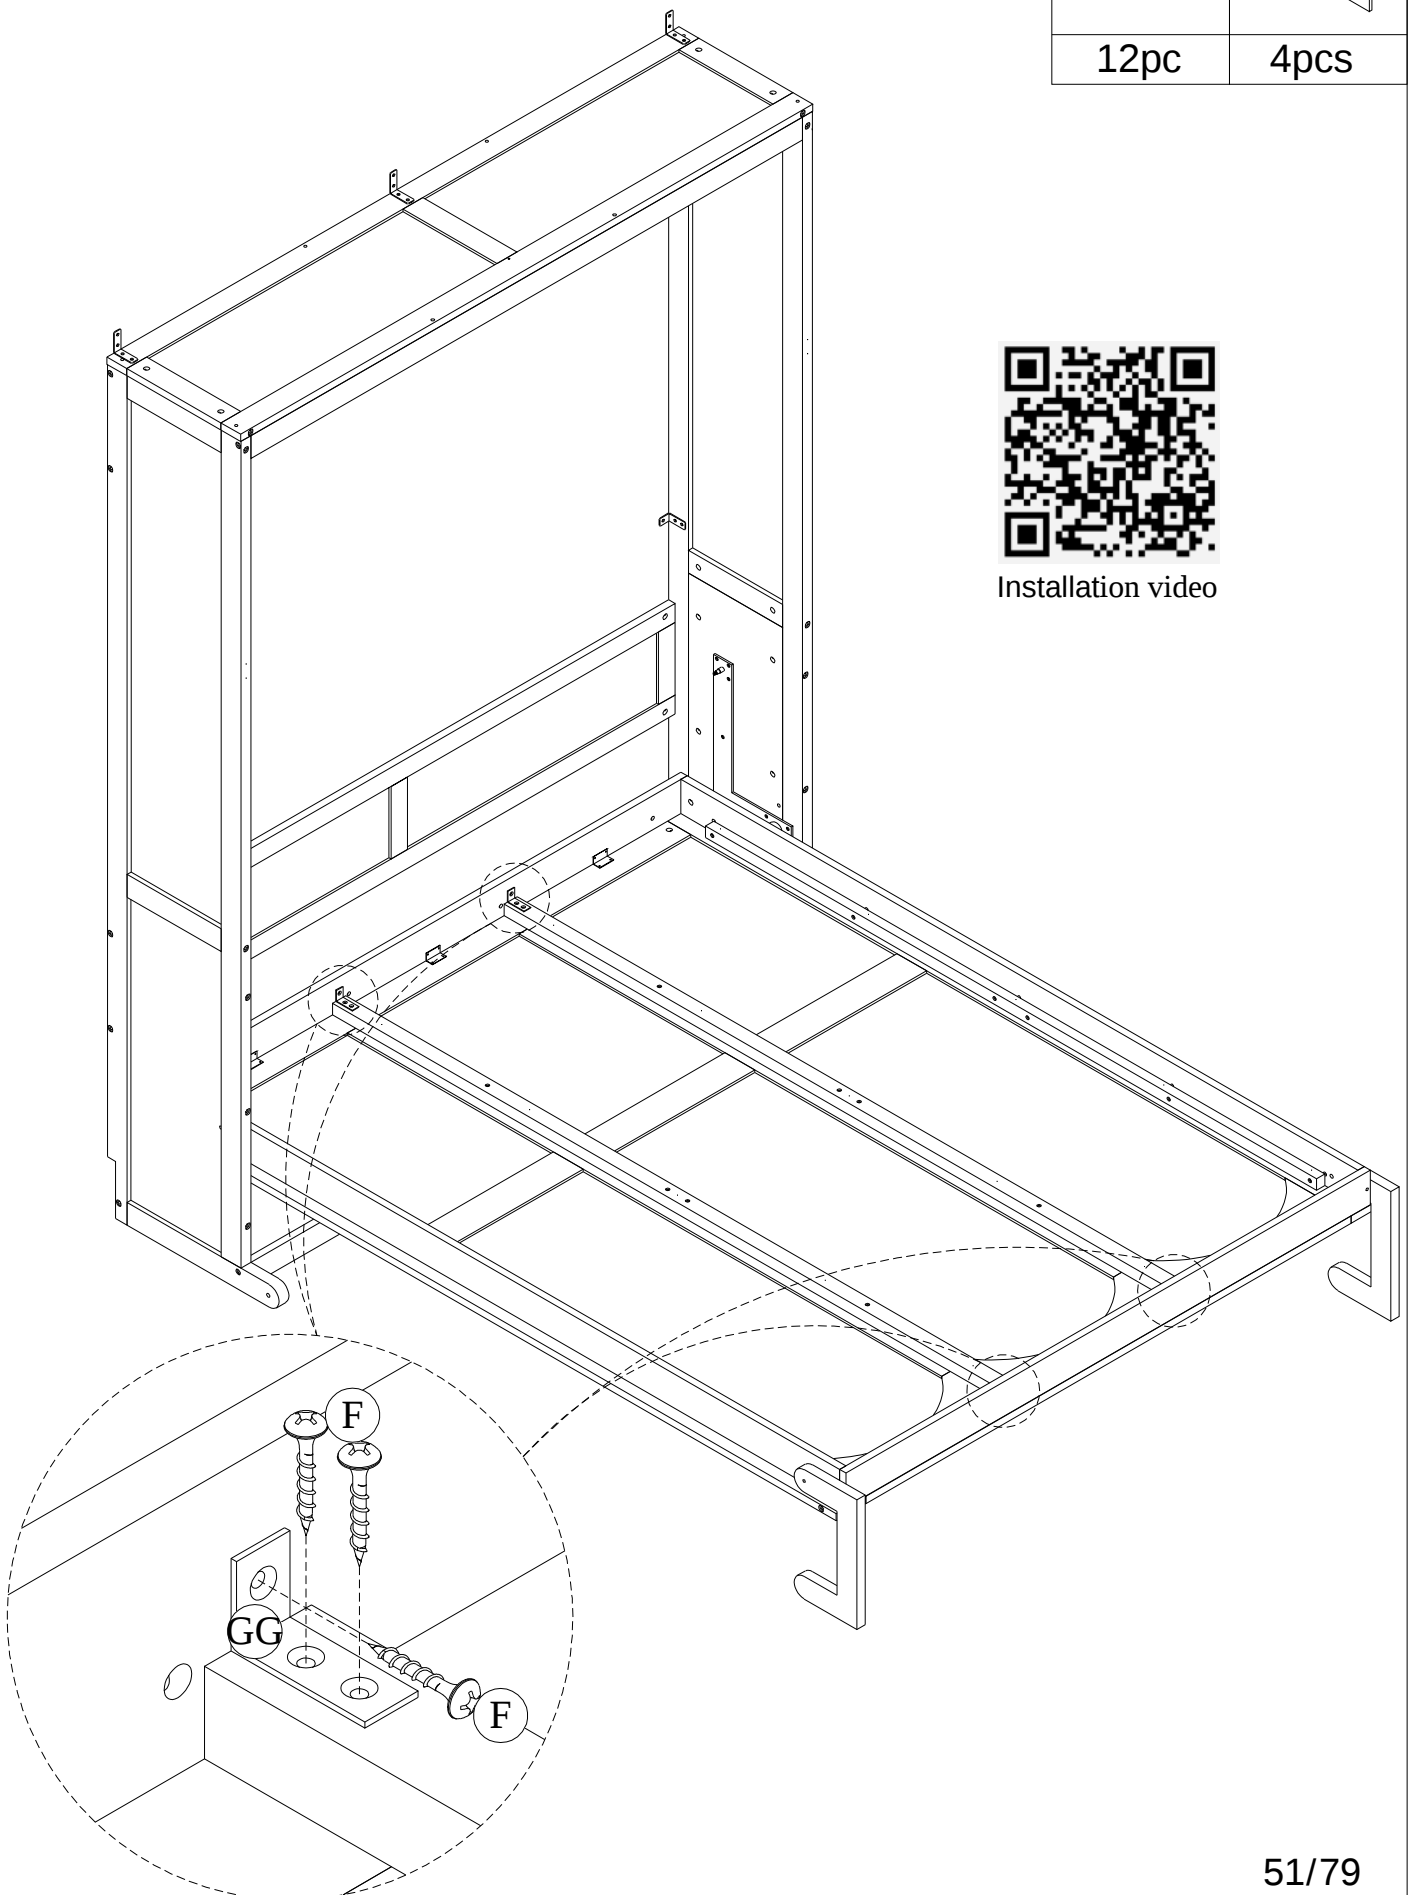


STEP-ÉTAPE 37 :

M



20pcs

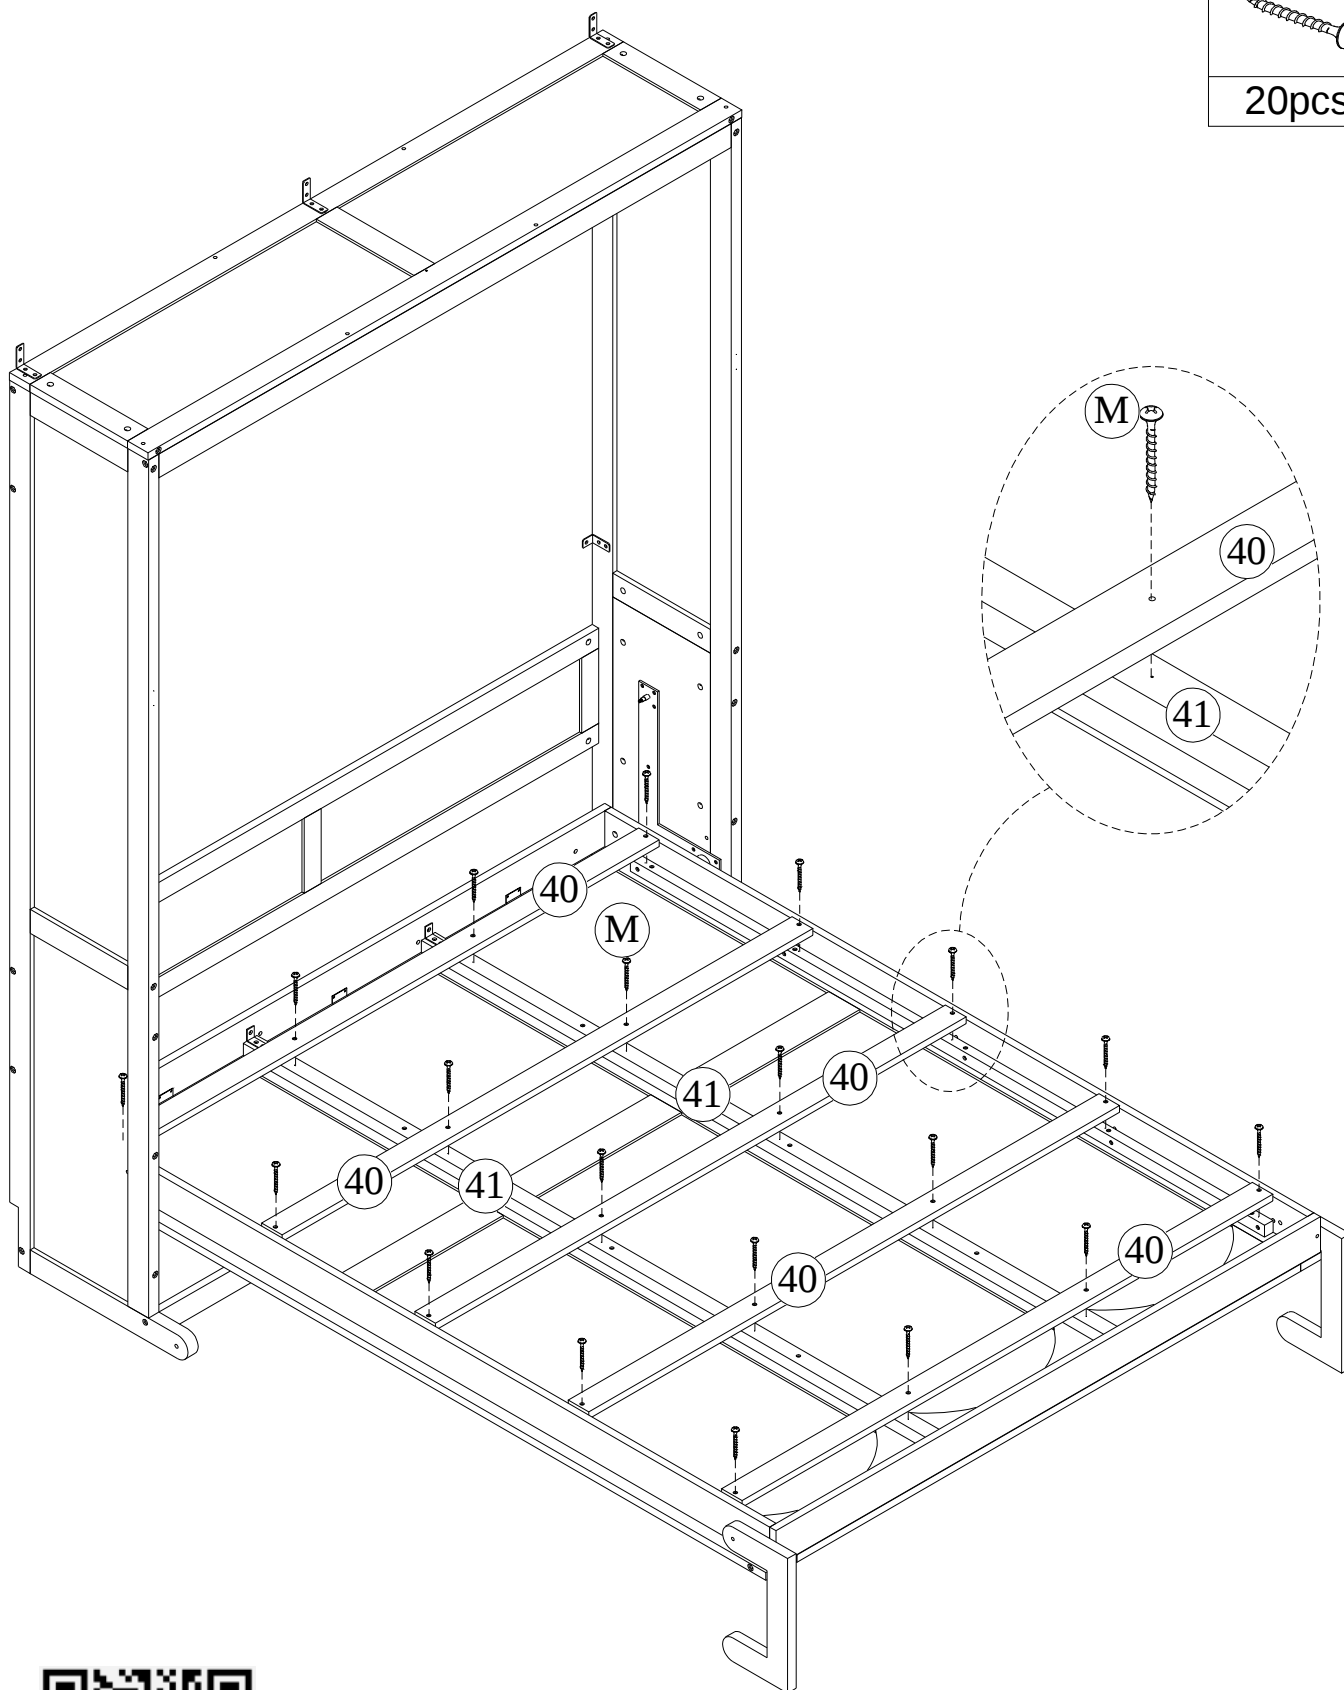

Installation video

STEP-ÉTAPE 38 :


FF



4pcs



Installation video

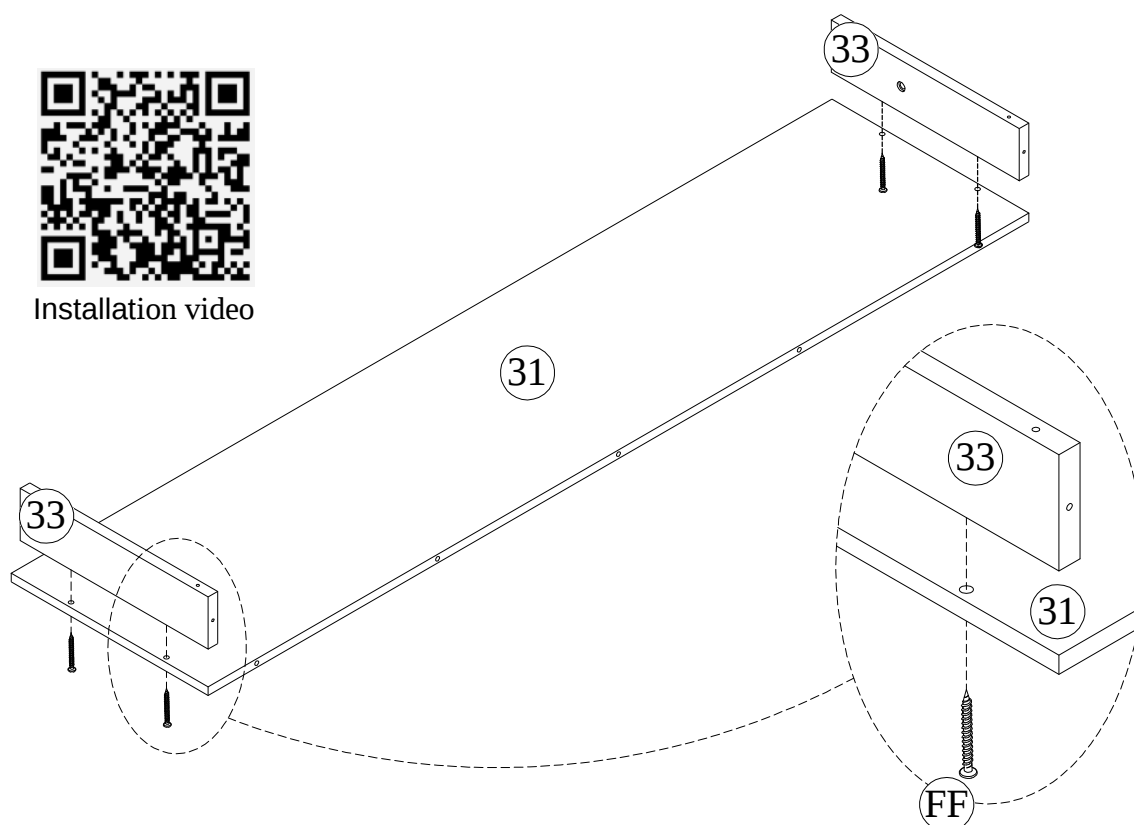

STEP-ÉTAPE 39 :

H



2pcs

B



4pcs


L



4pcs






Installation video

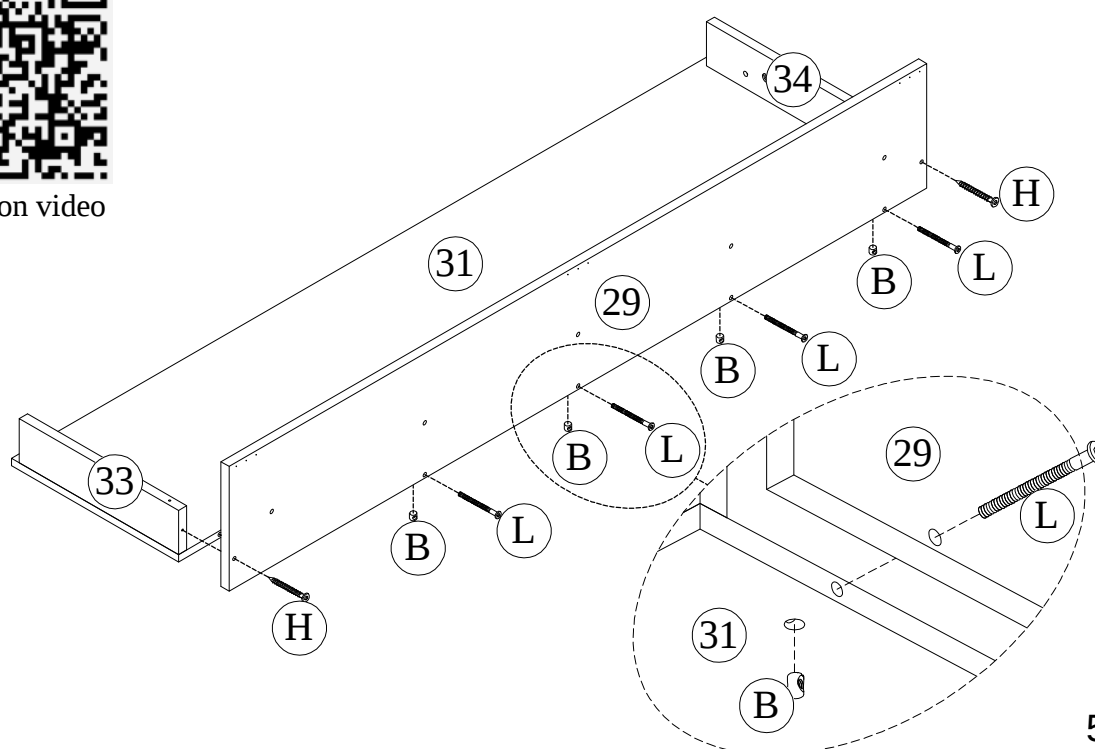


53/79


STEP-ÉTAPE 40 :

AE	I
	
4pcs	12pcs



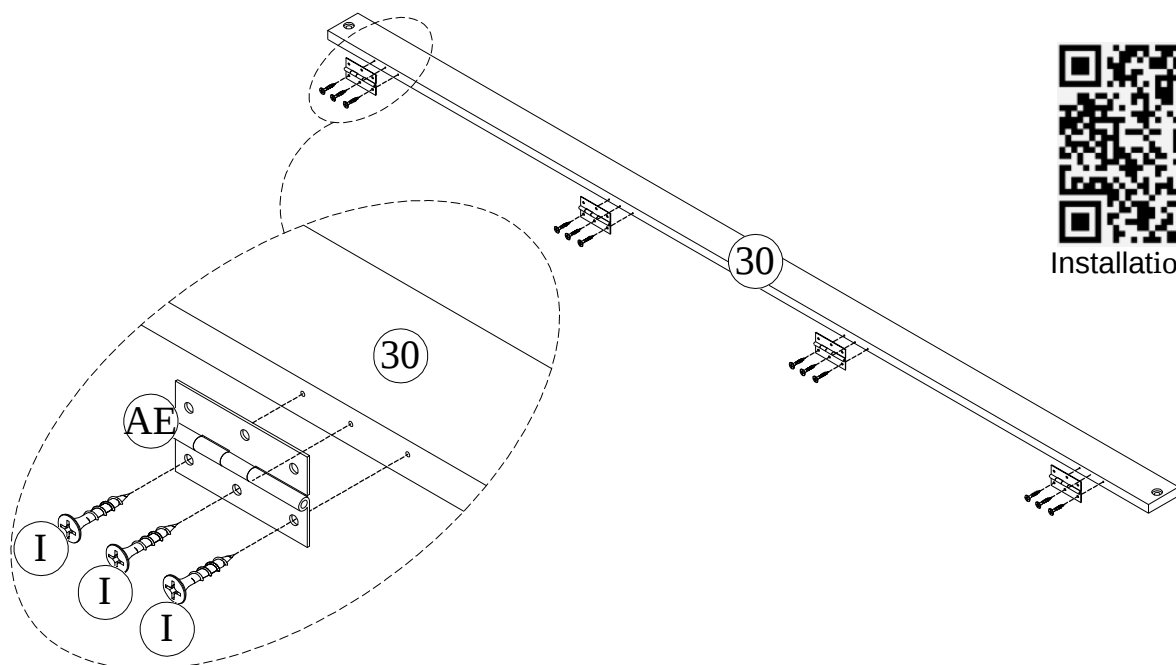



STEP-ÉTAPE 41 :

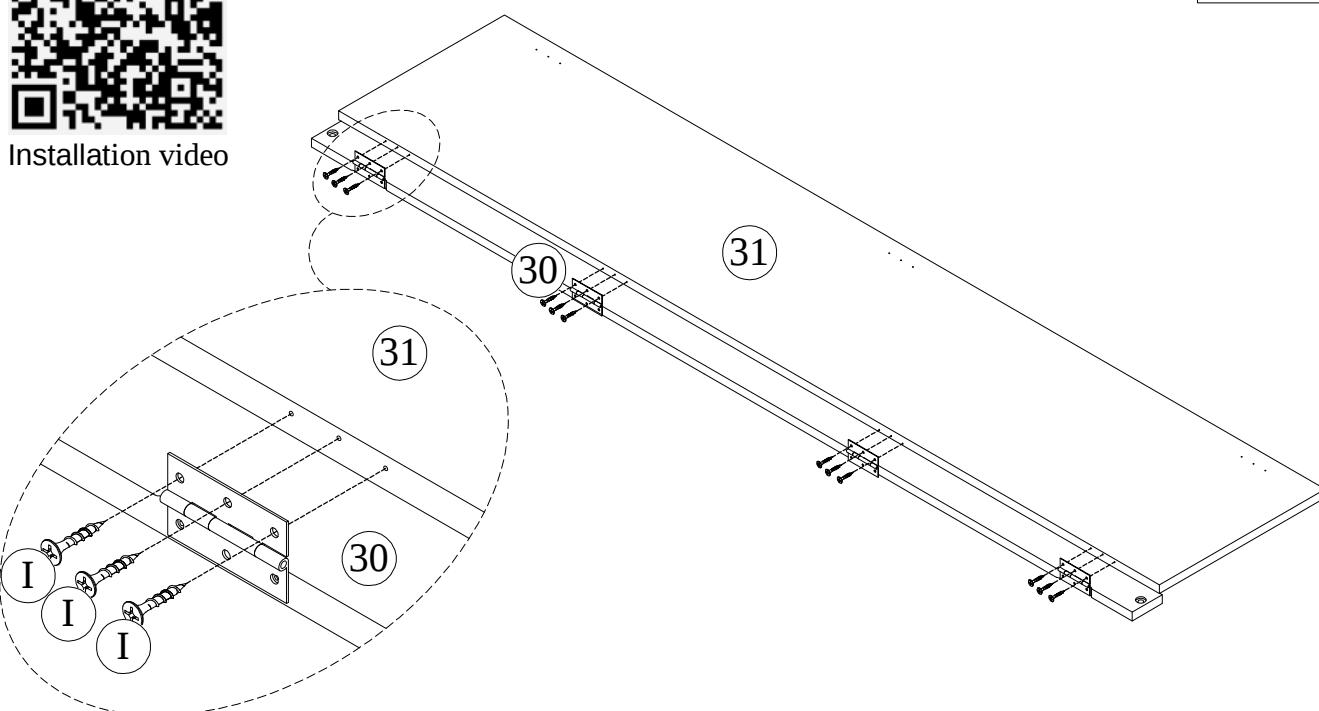


I

12pcs


STEP-ÉTAPE 42 :

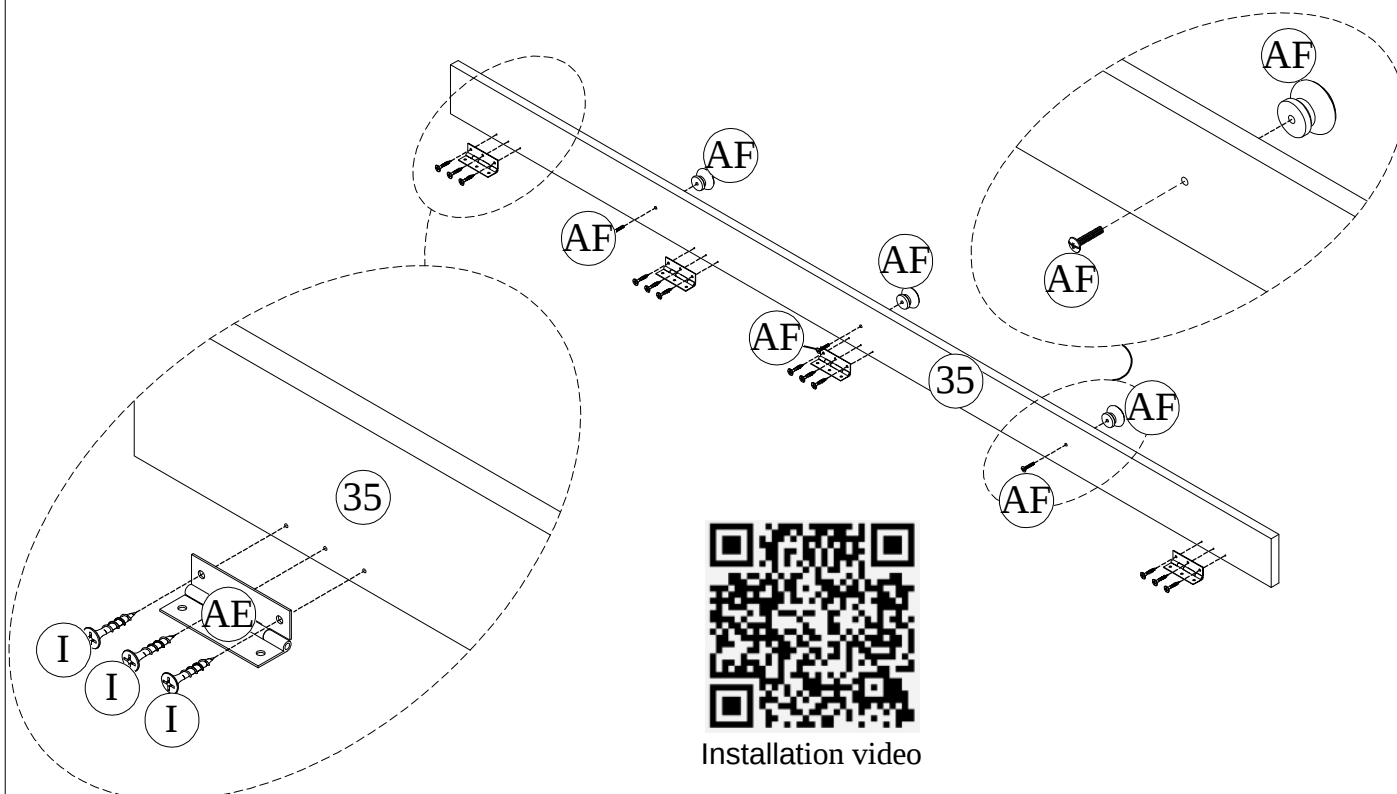AF	AE	I
		
3pcs	4pcs	12pcs



STEP-ÉTAPE 43 :

I

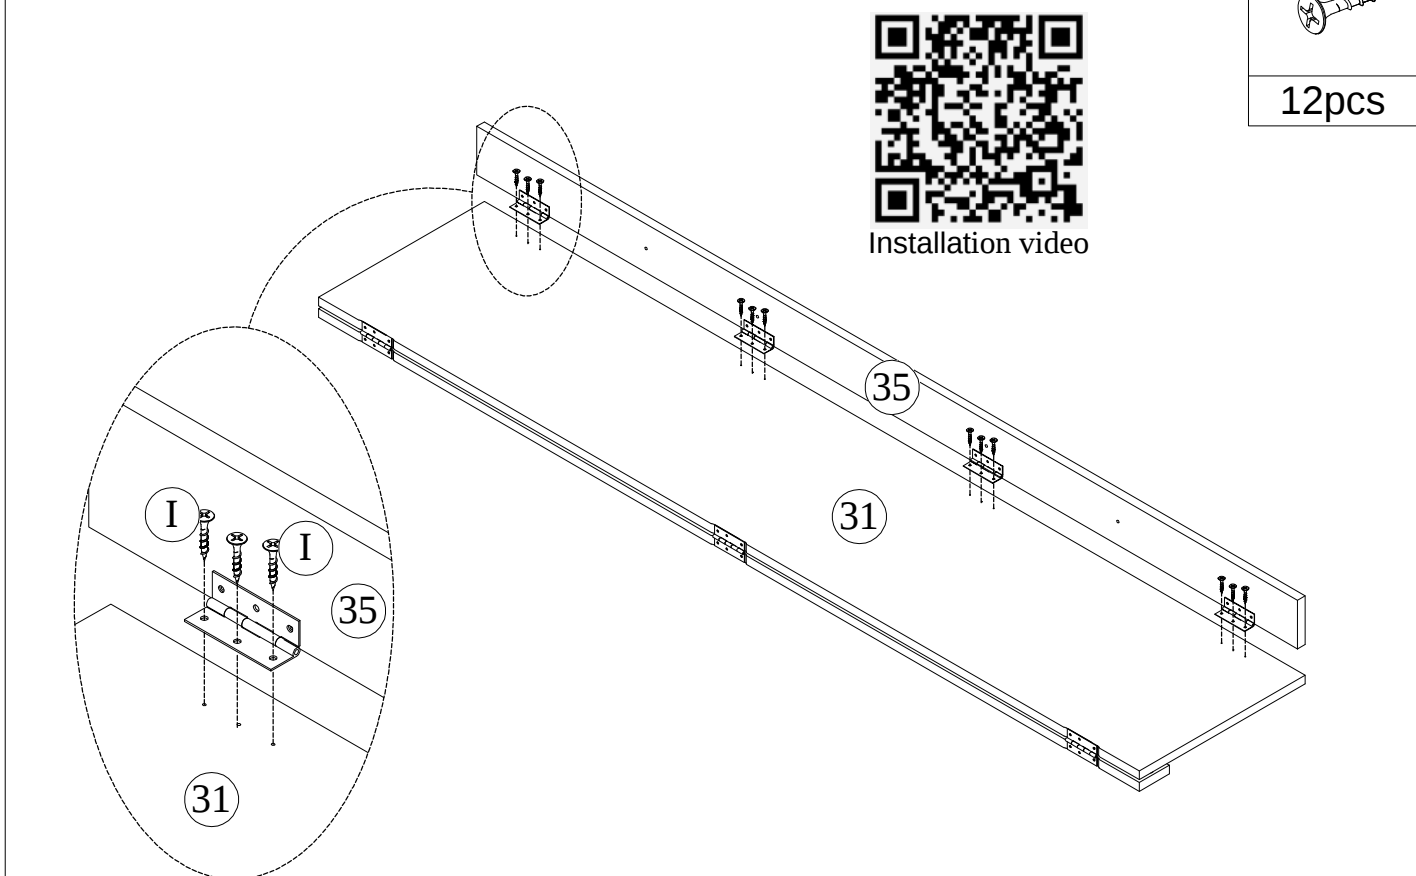12pcs




STEP-ÉTAPE-44

H



2pcs



Installation video

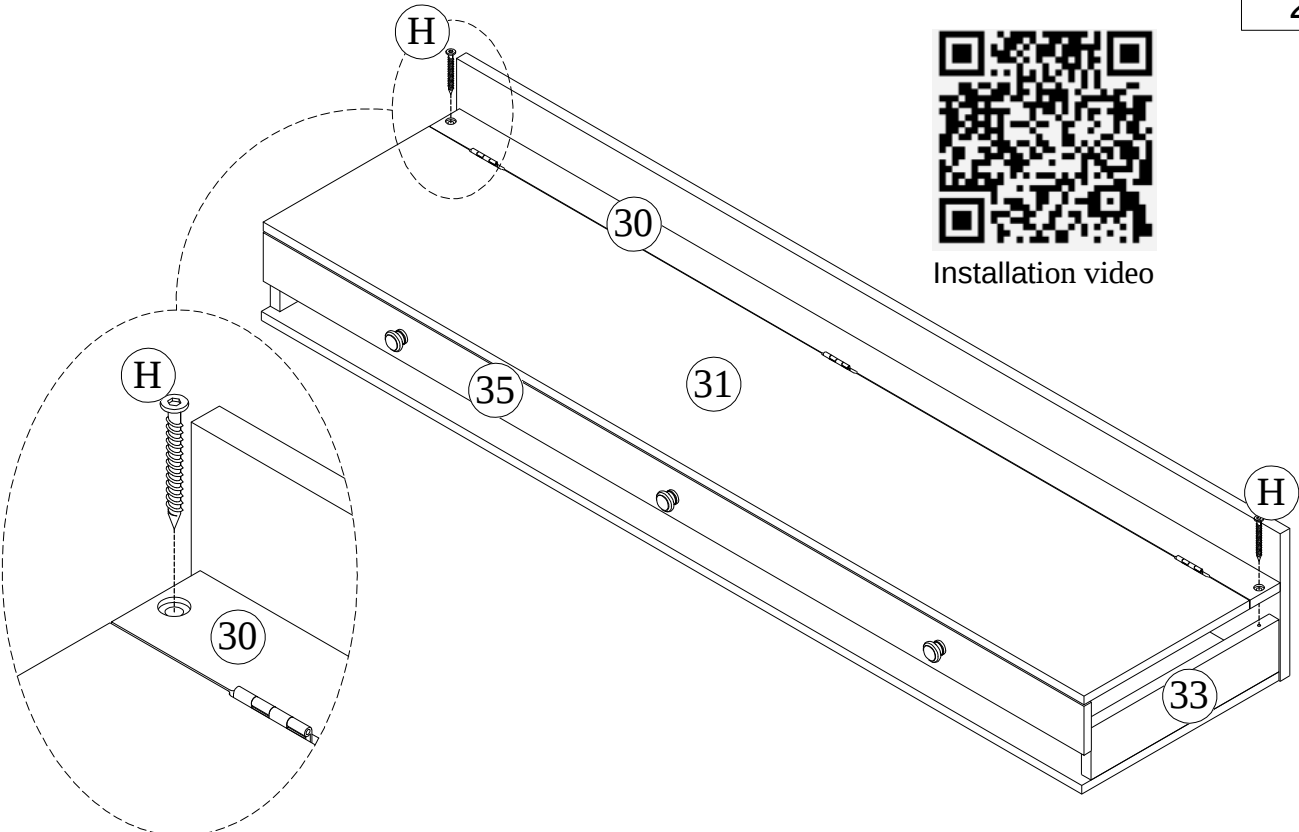


STEP-ÉTAPE-45




H	AE	I
		
4pcs	4pcs	12pcs



Installation video

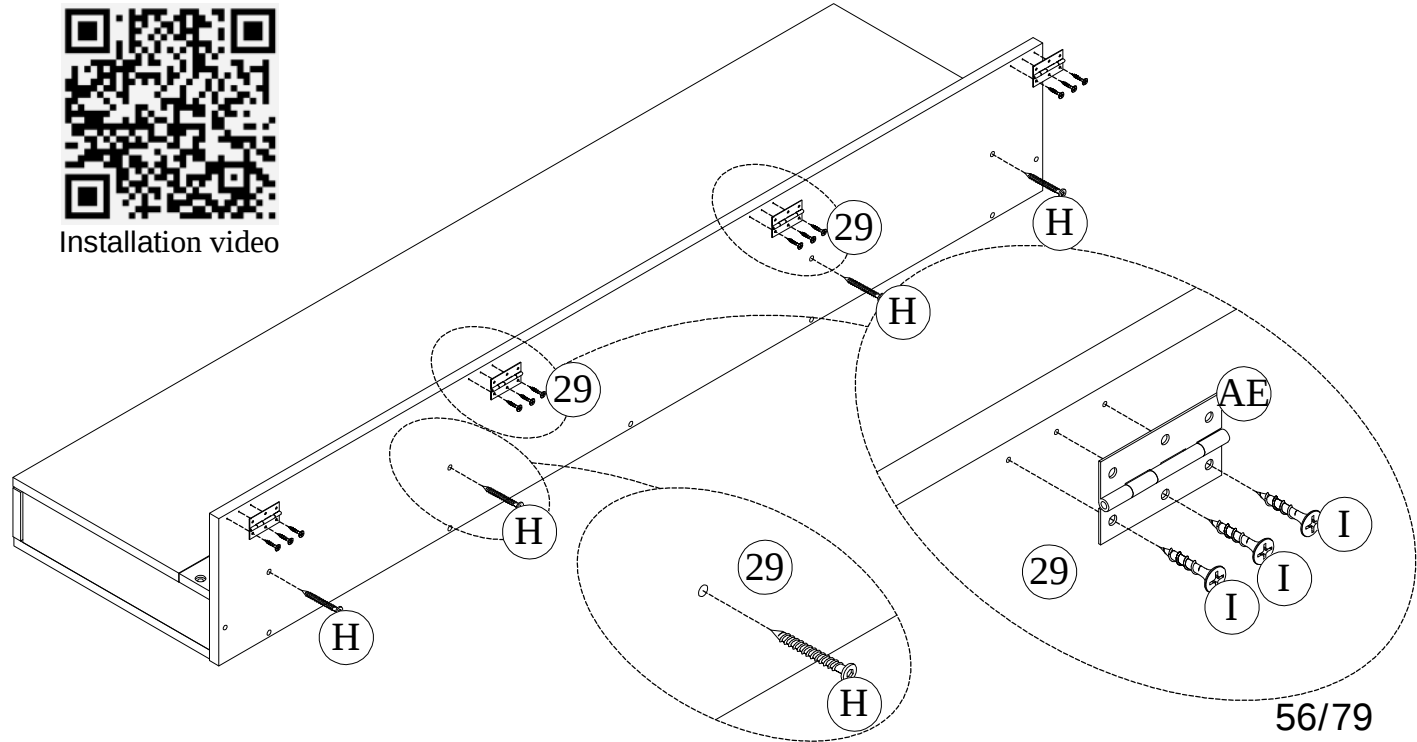

STEP-ÉTAPE 46 :

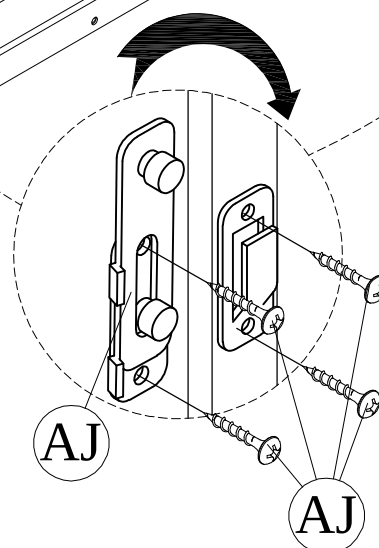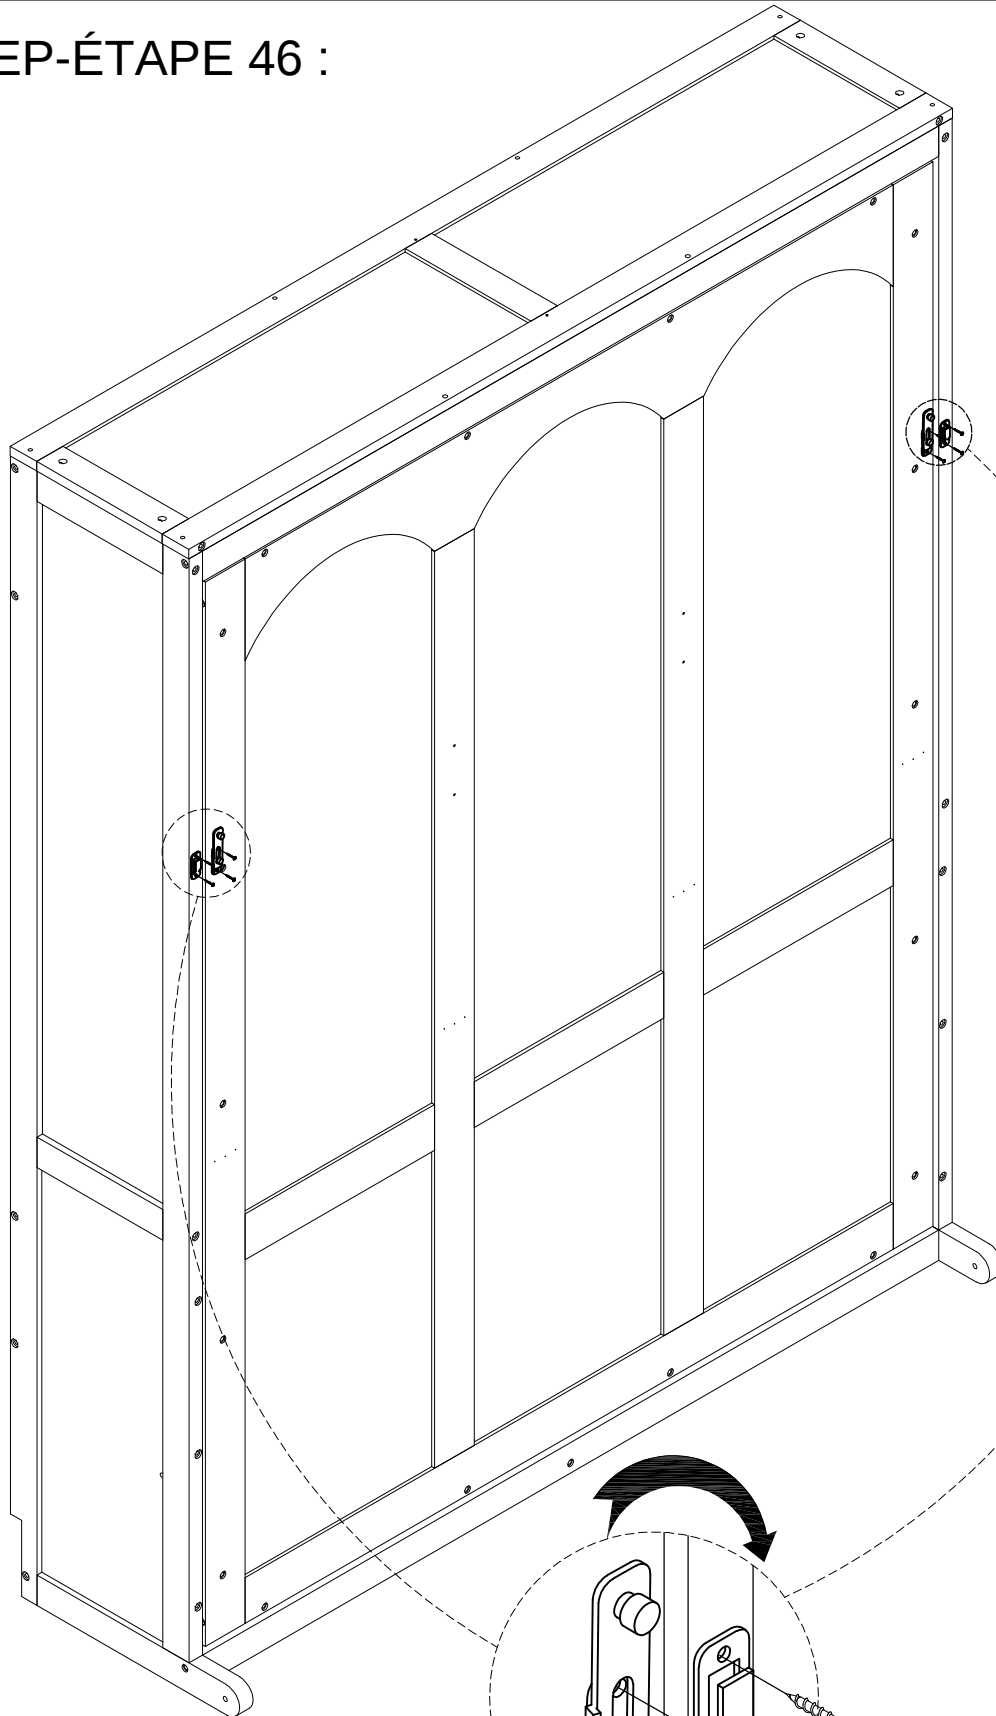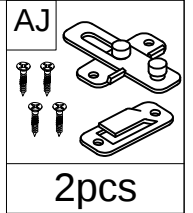


Installation video

STEP-ÉTAPE-47



Three people are required to
assemble and move this model.


I




12pcs



Installation video

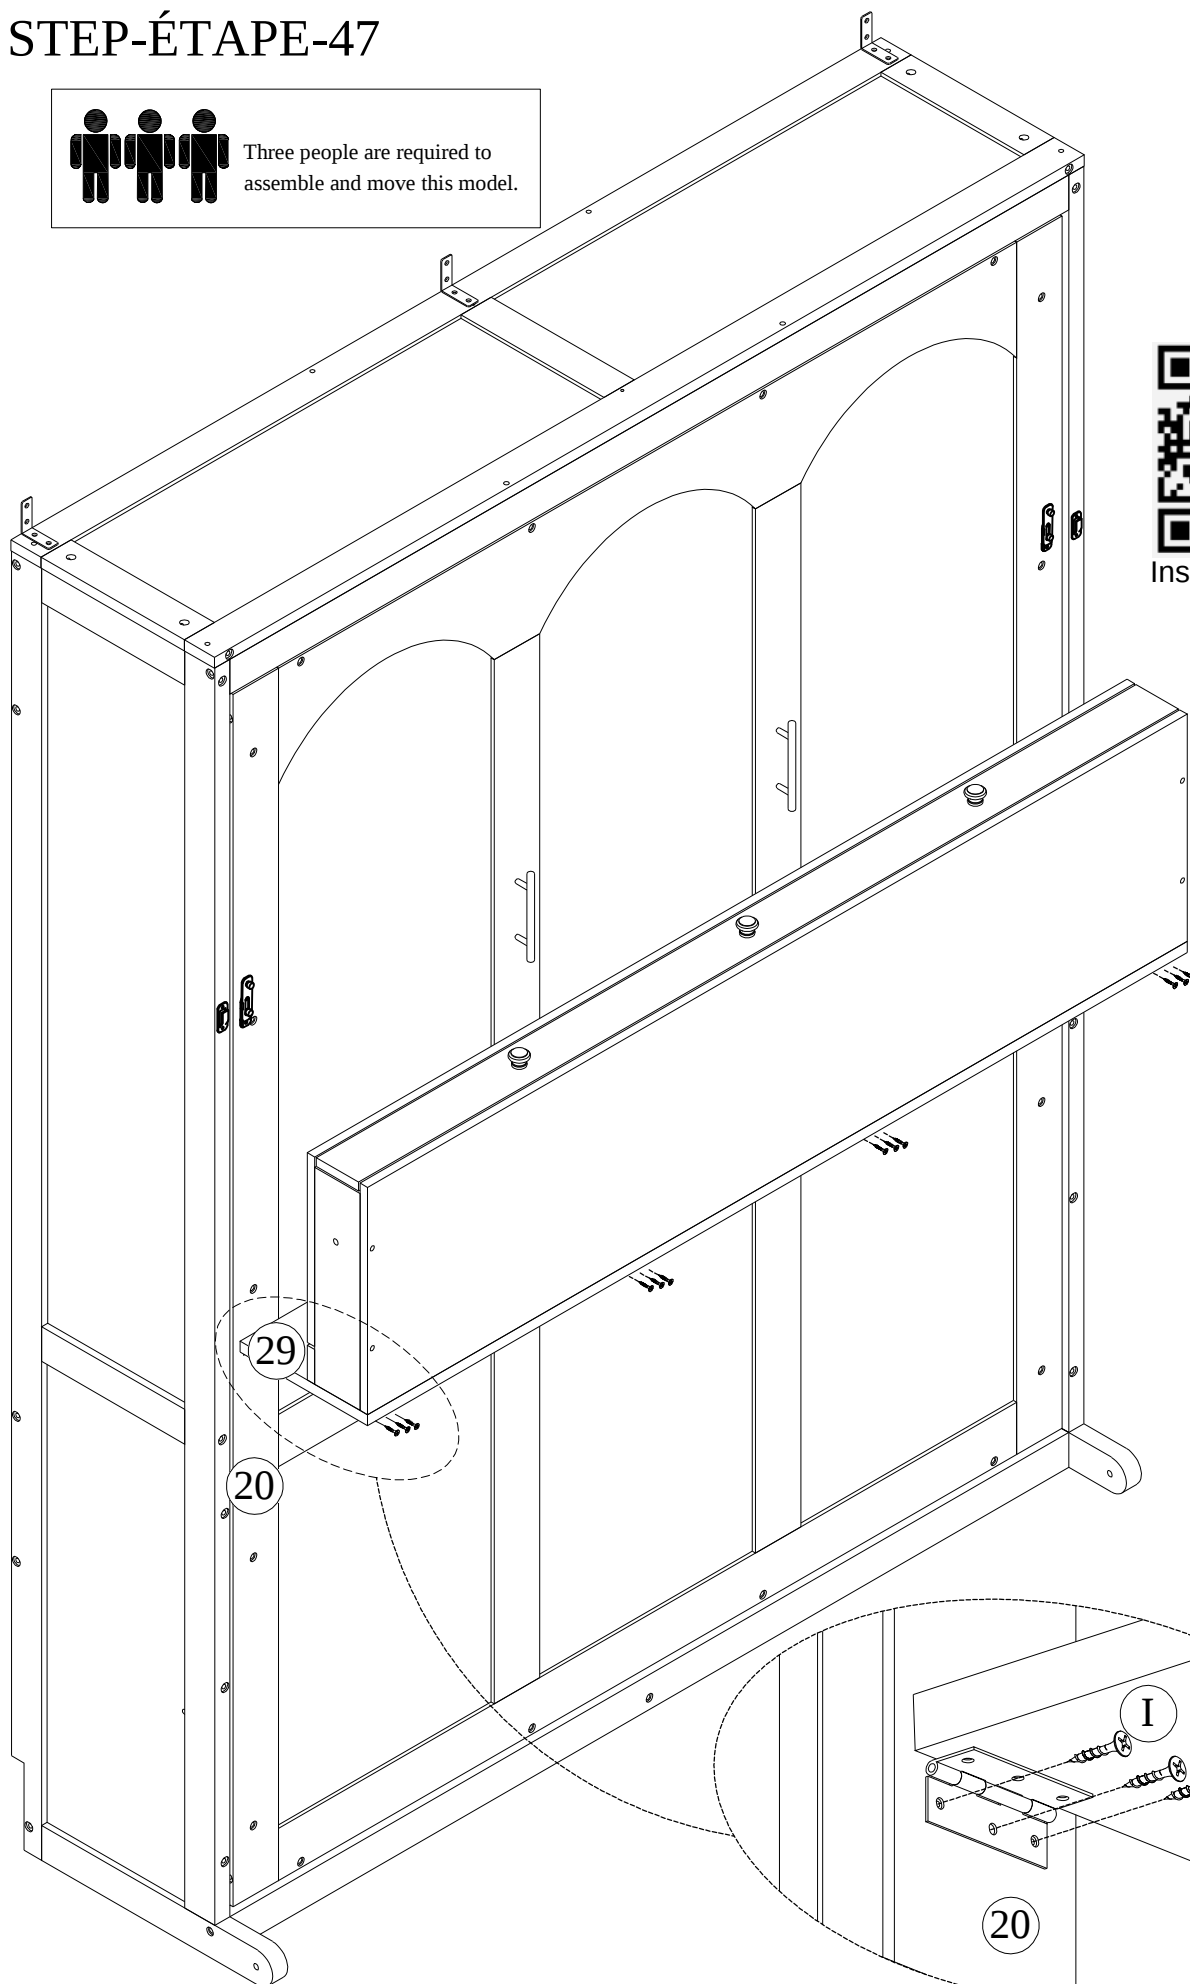

STEP-ÉTAPE-48

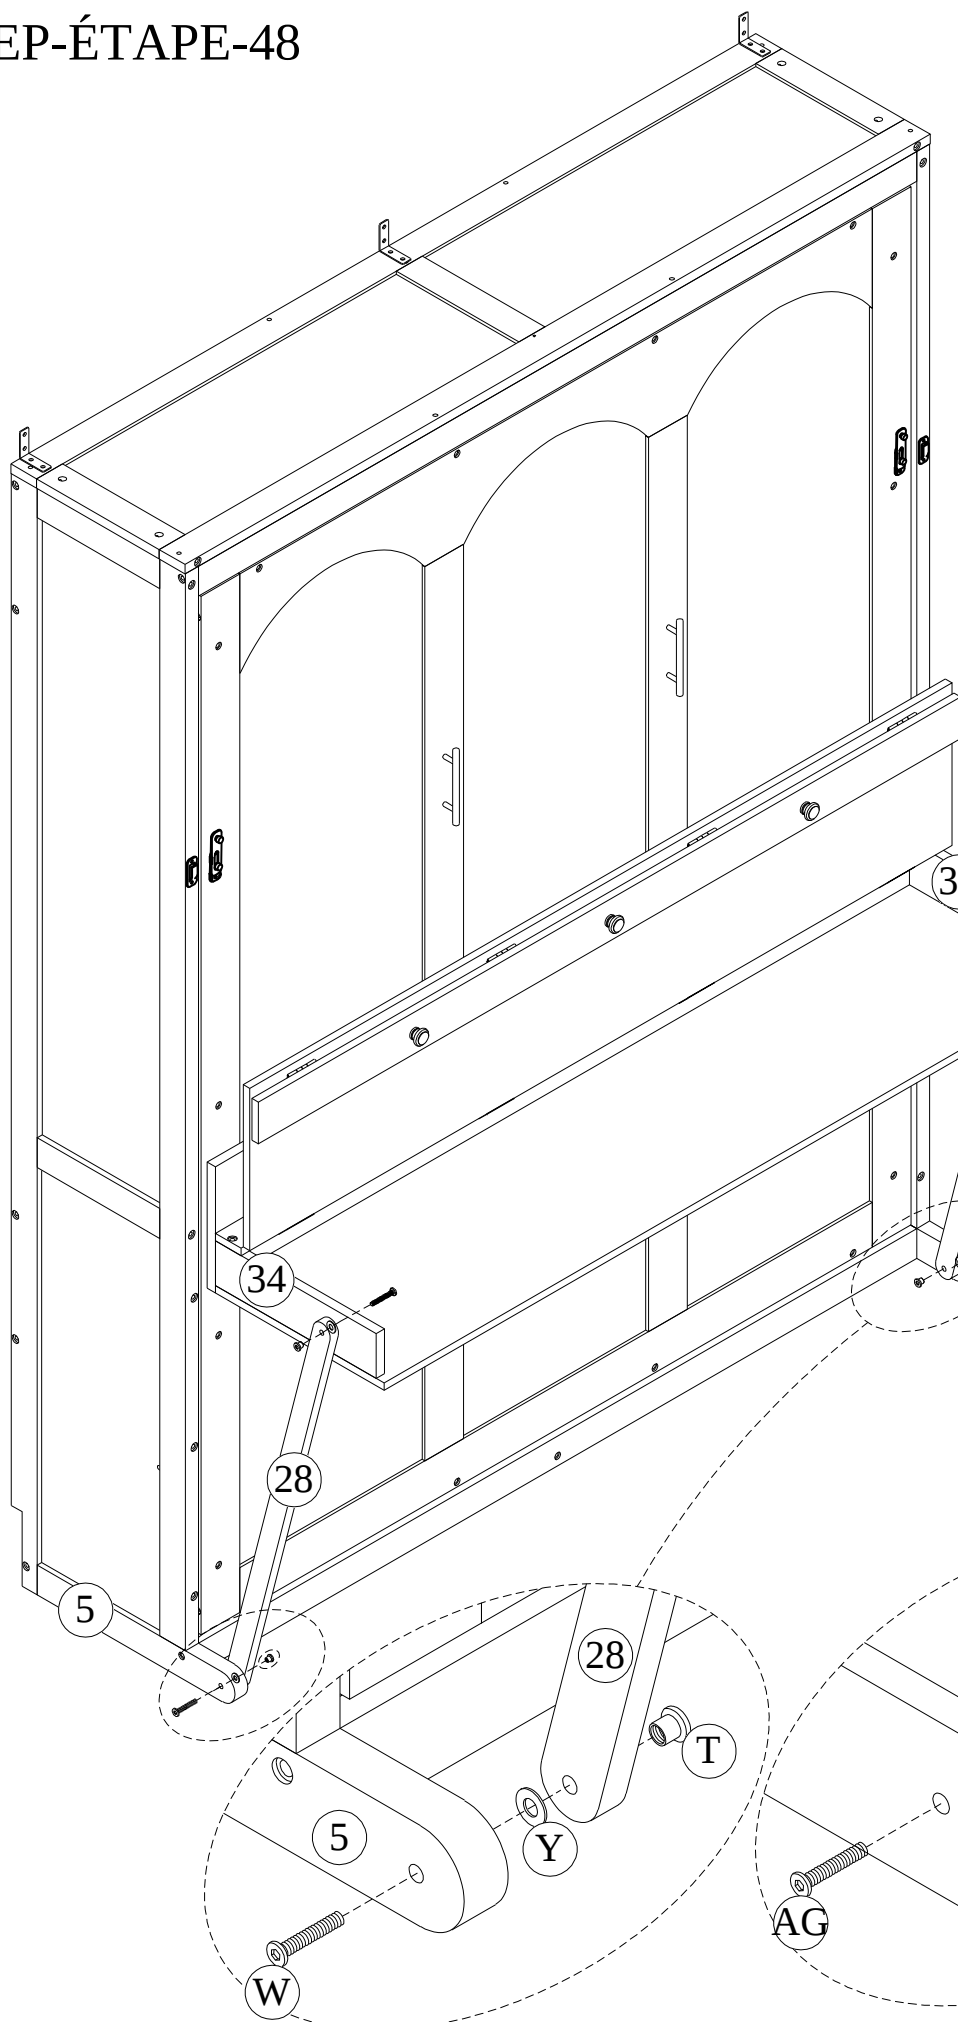


W	Y
	
2pcs	4pcs
AG	T
	
2pcs	4pcs

Installation video

STEP-ÉTAPE-49:



Installation video

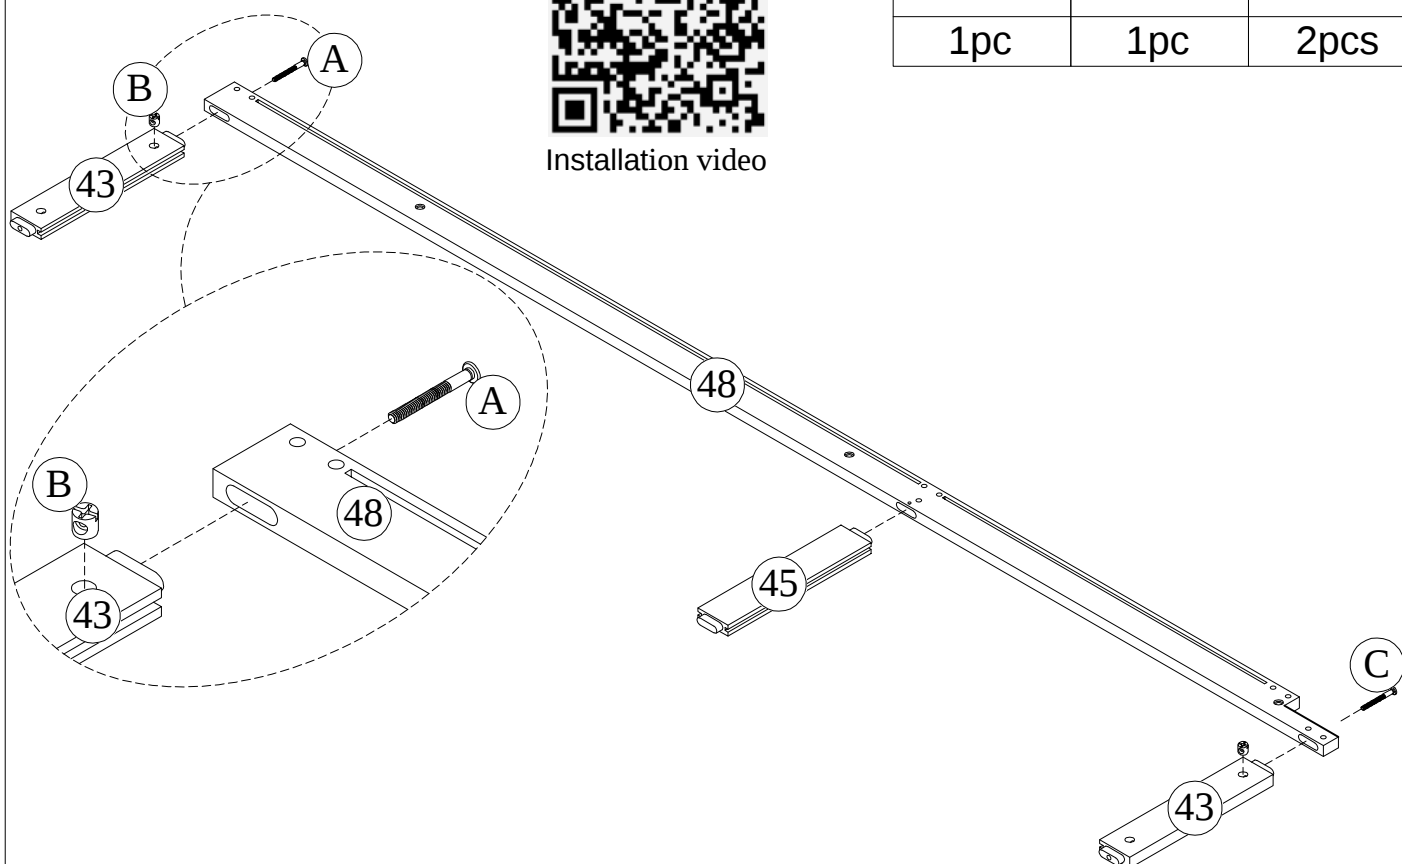


C	A	B
		
1pc	1pc	2pcs

STEP-ÉTAPE-50:



Installation video

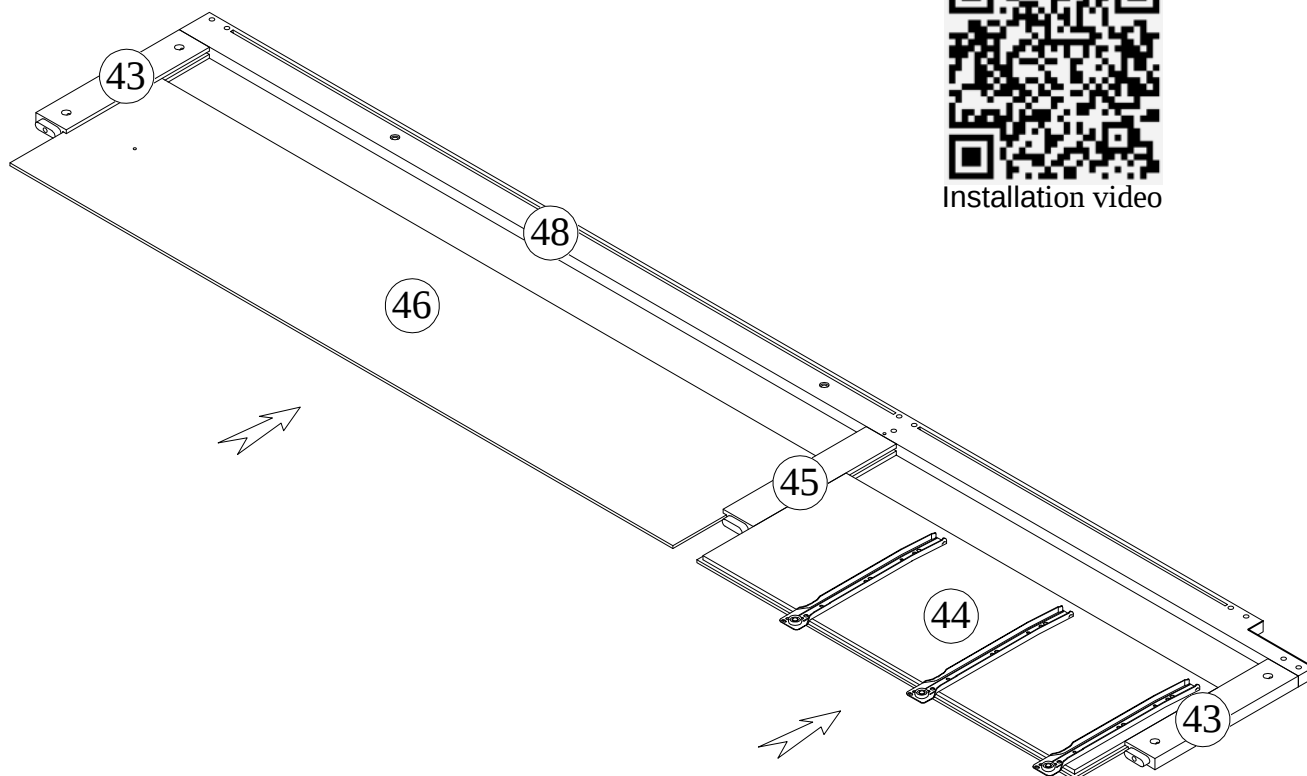


STEP-ÉTAPE-51 :



Installation video

A	B
	
2pcs	2pcs

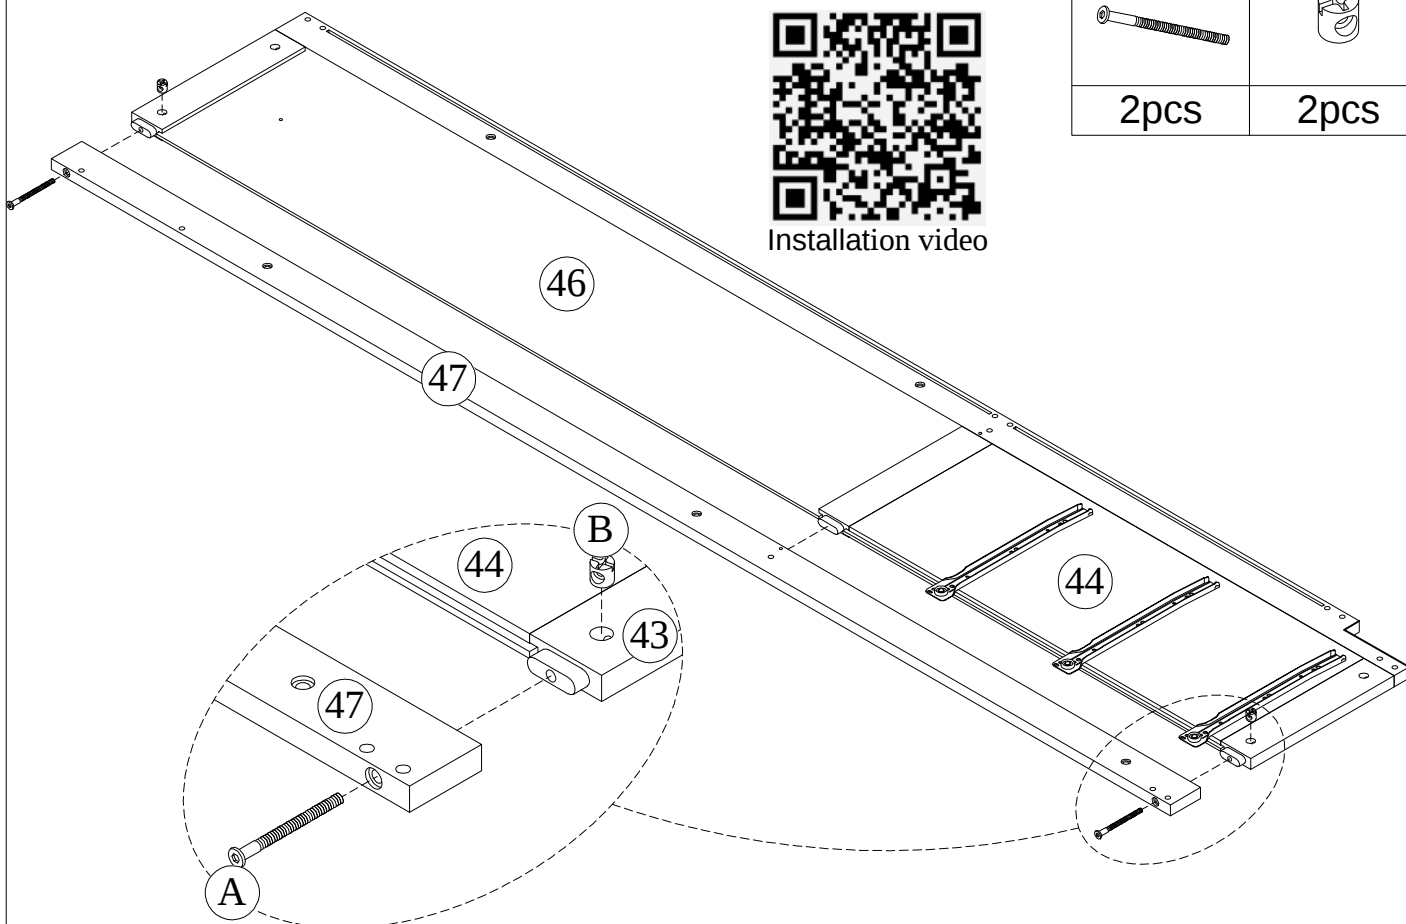


STEP-ÉTAPE-52 :



Installation video


I

3pcs

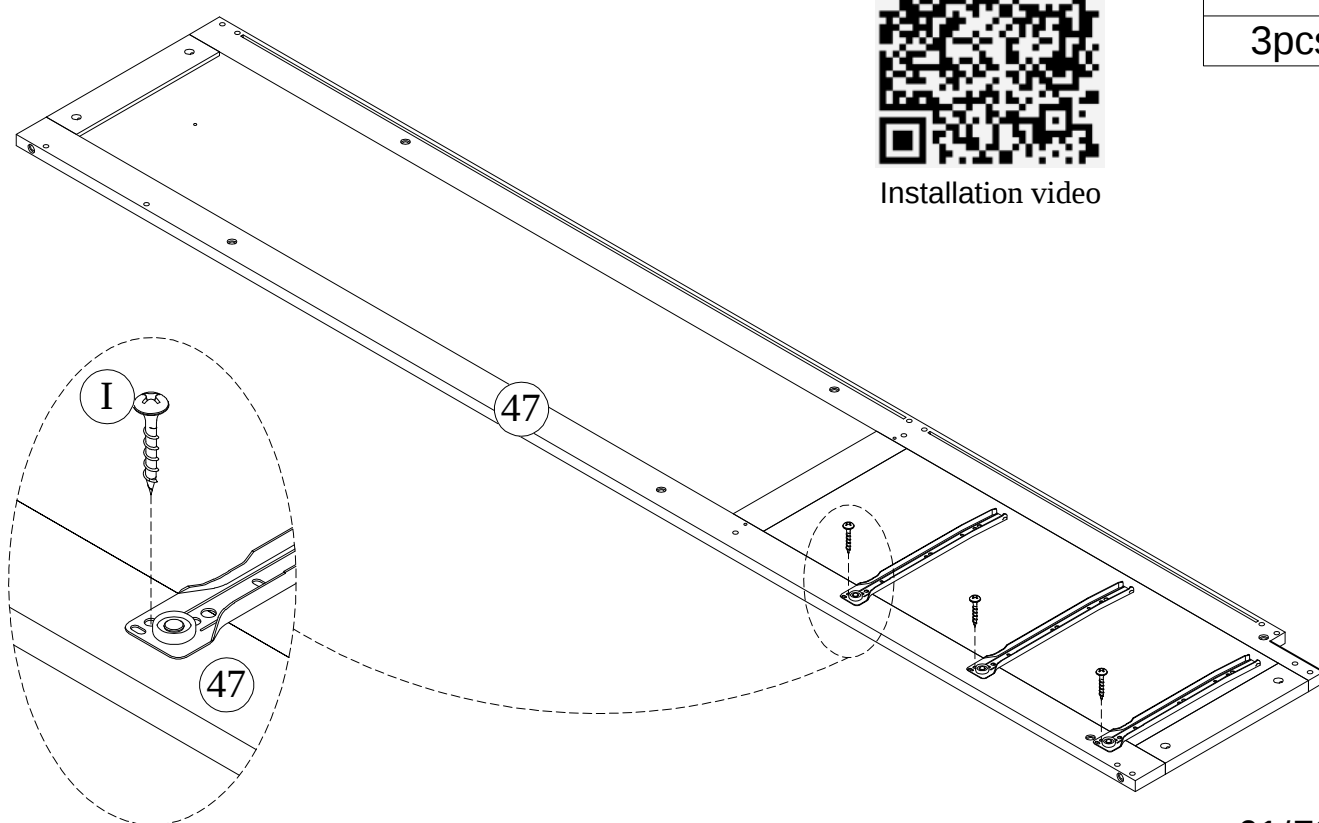

STEP-ÉTAPE-53 :


C	A	B
		
1pc	1pc	2pcs

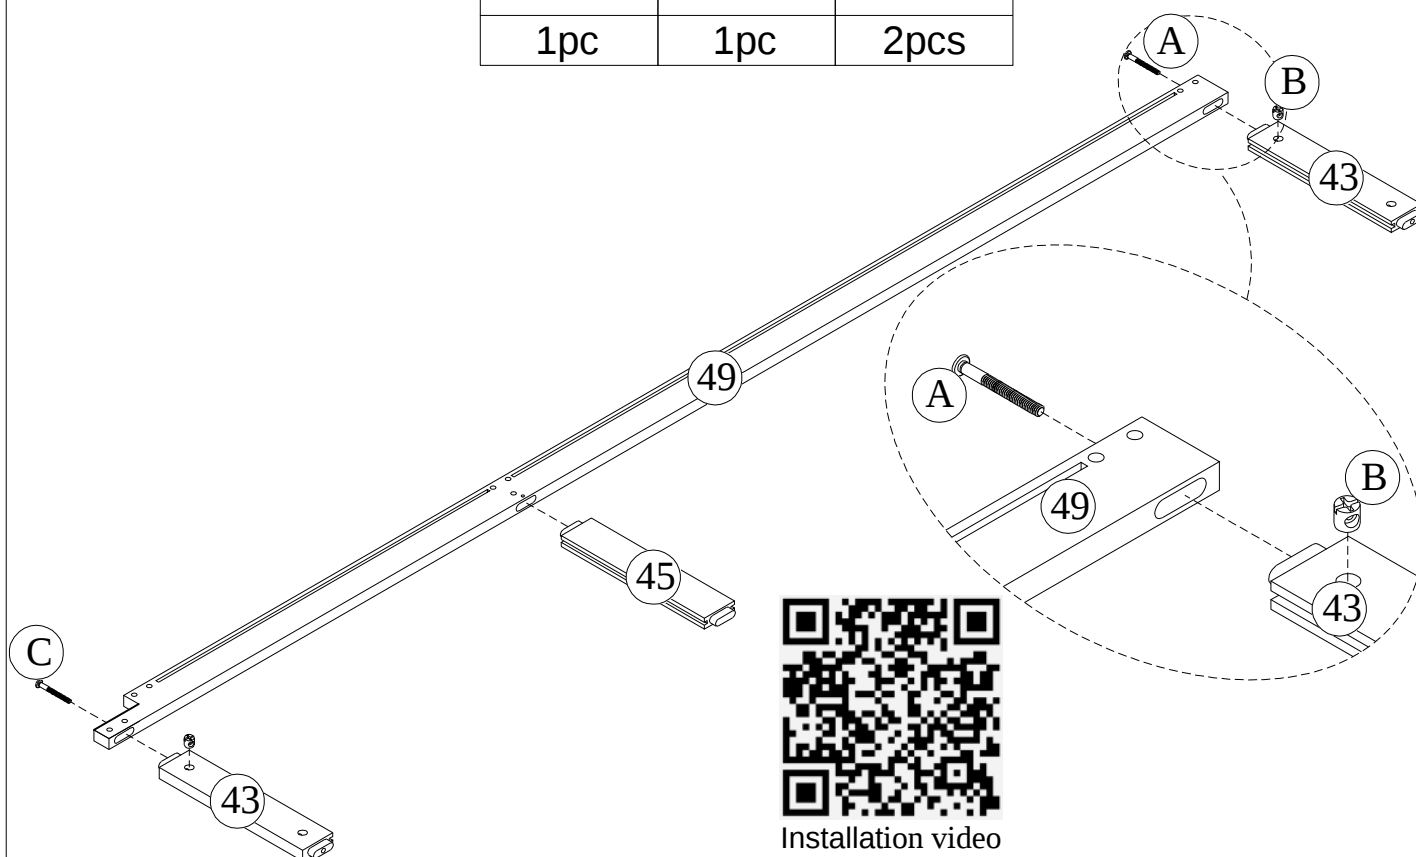

STEP-ÉTAPE-54 :



Installation video

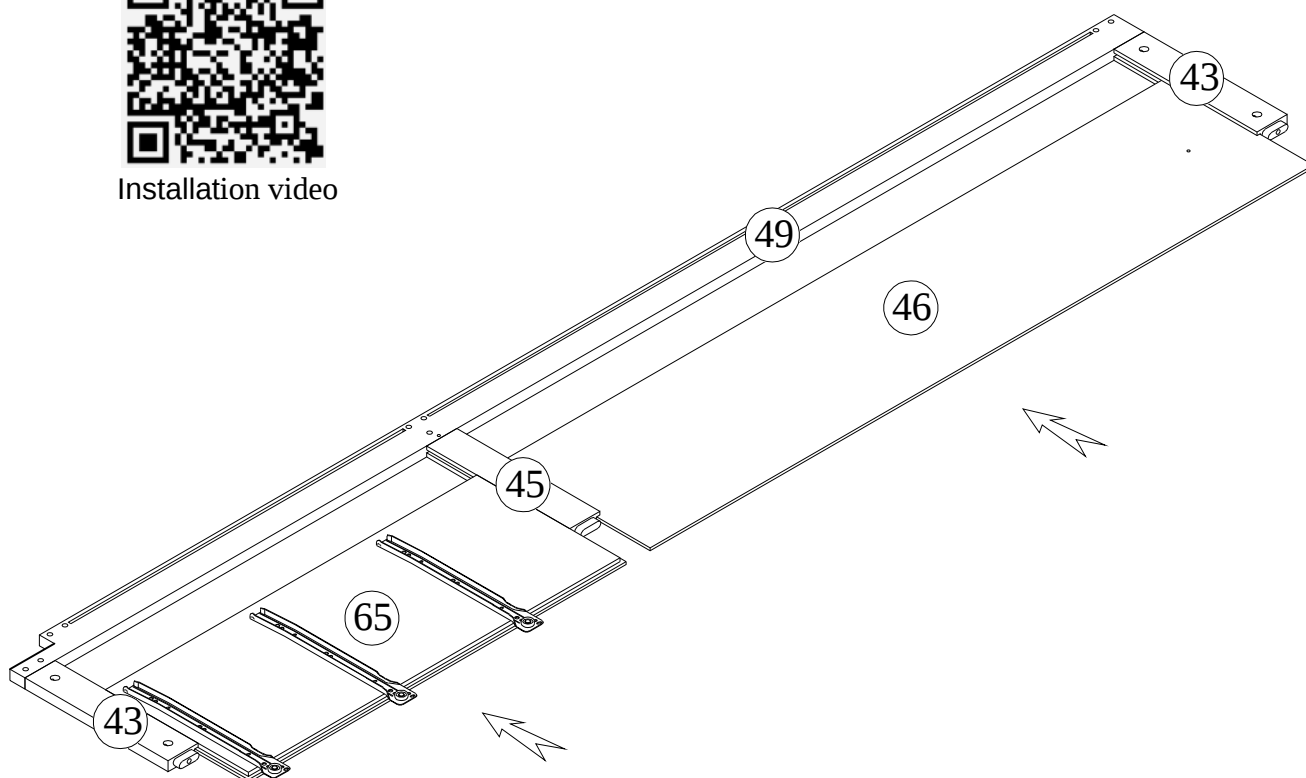


STEP-ÉTAPE-55 :



Installation video

A	B
	
2pcs	2pcs

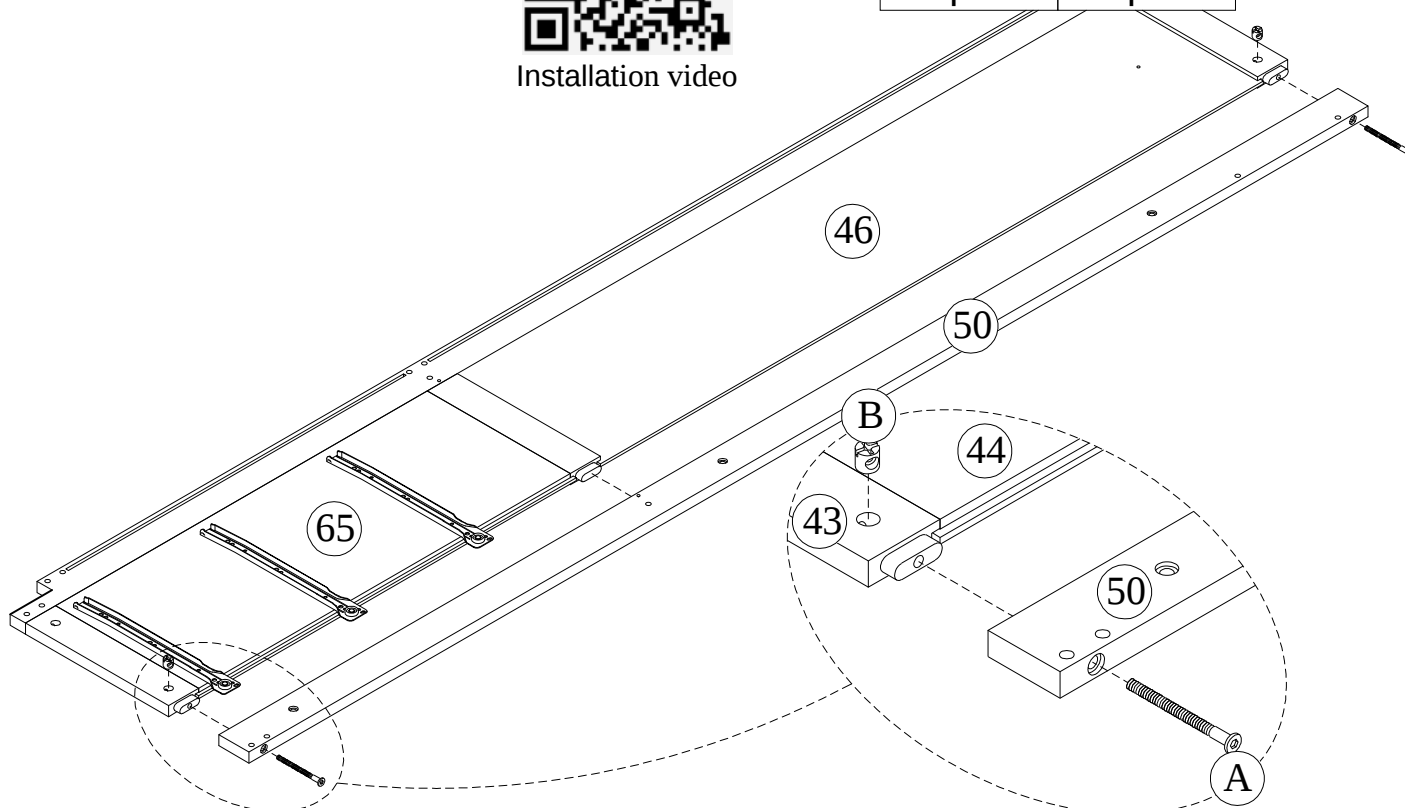


STEP-ÉTAPE-56 :




Installation video

I


3pcs

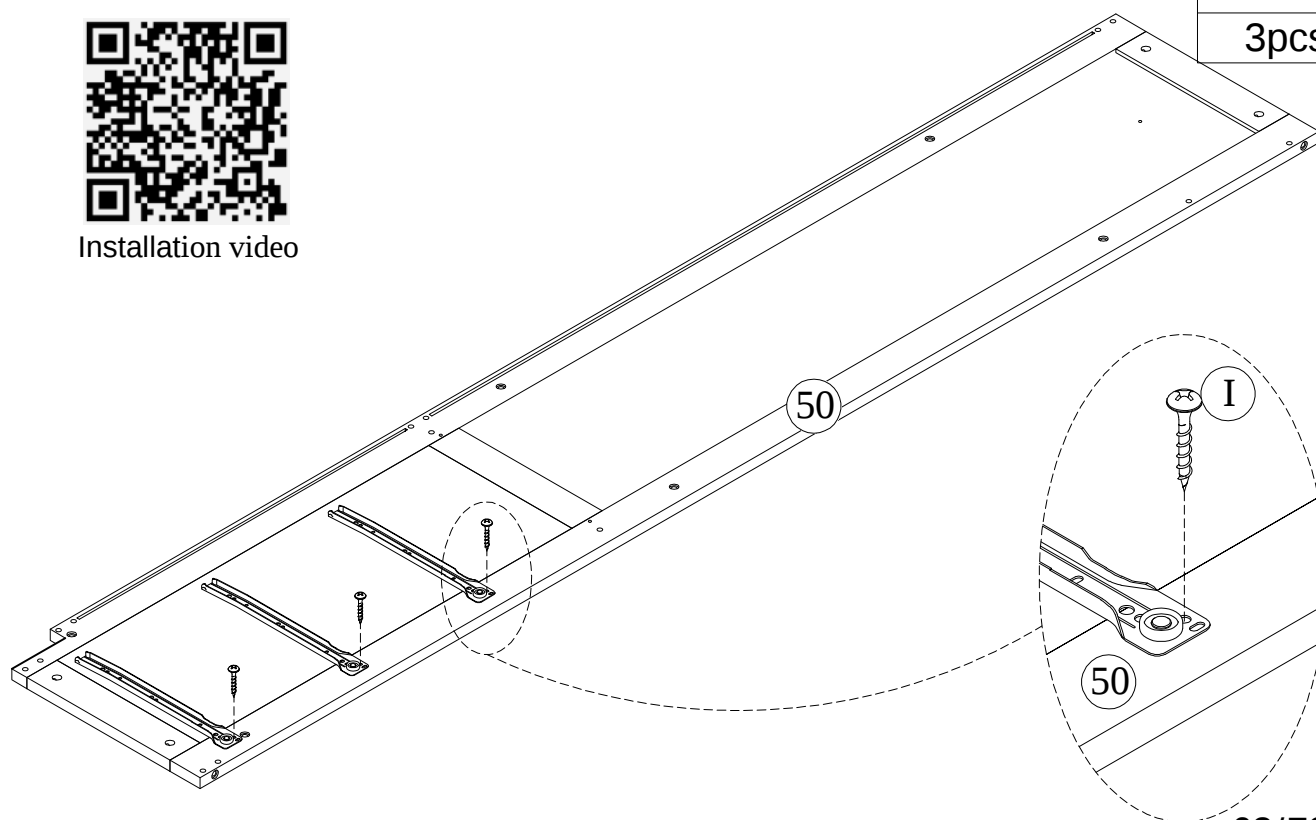

STEP-ÉTAPE-57 :

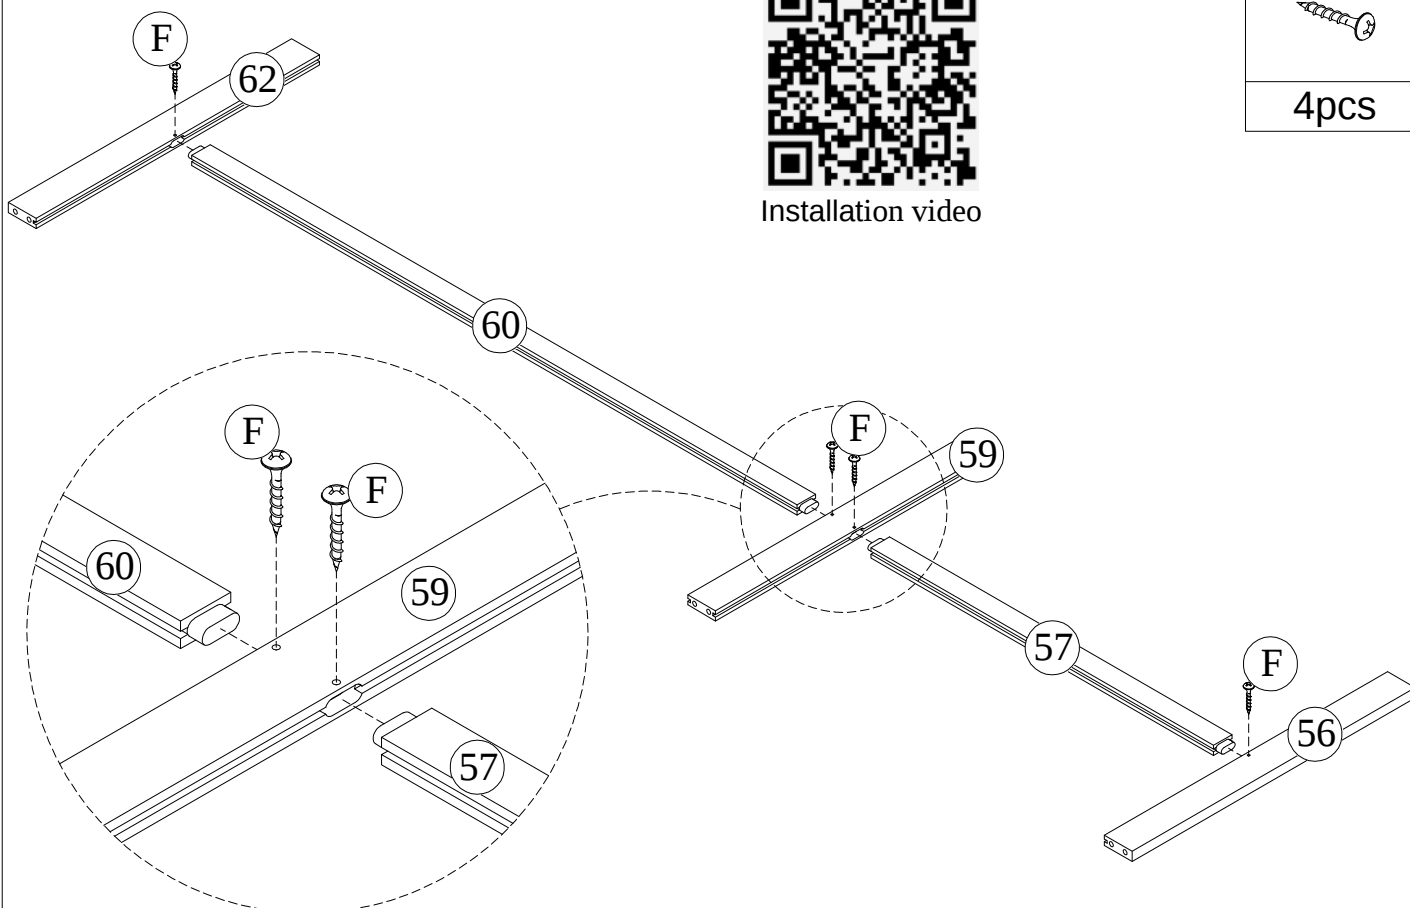


STEP-ÉTAPE-58 :

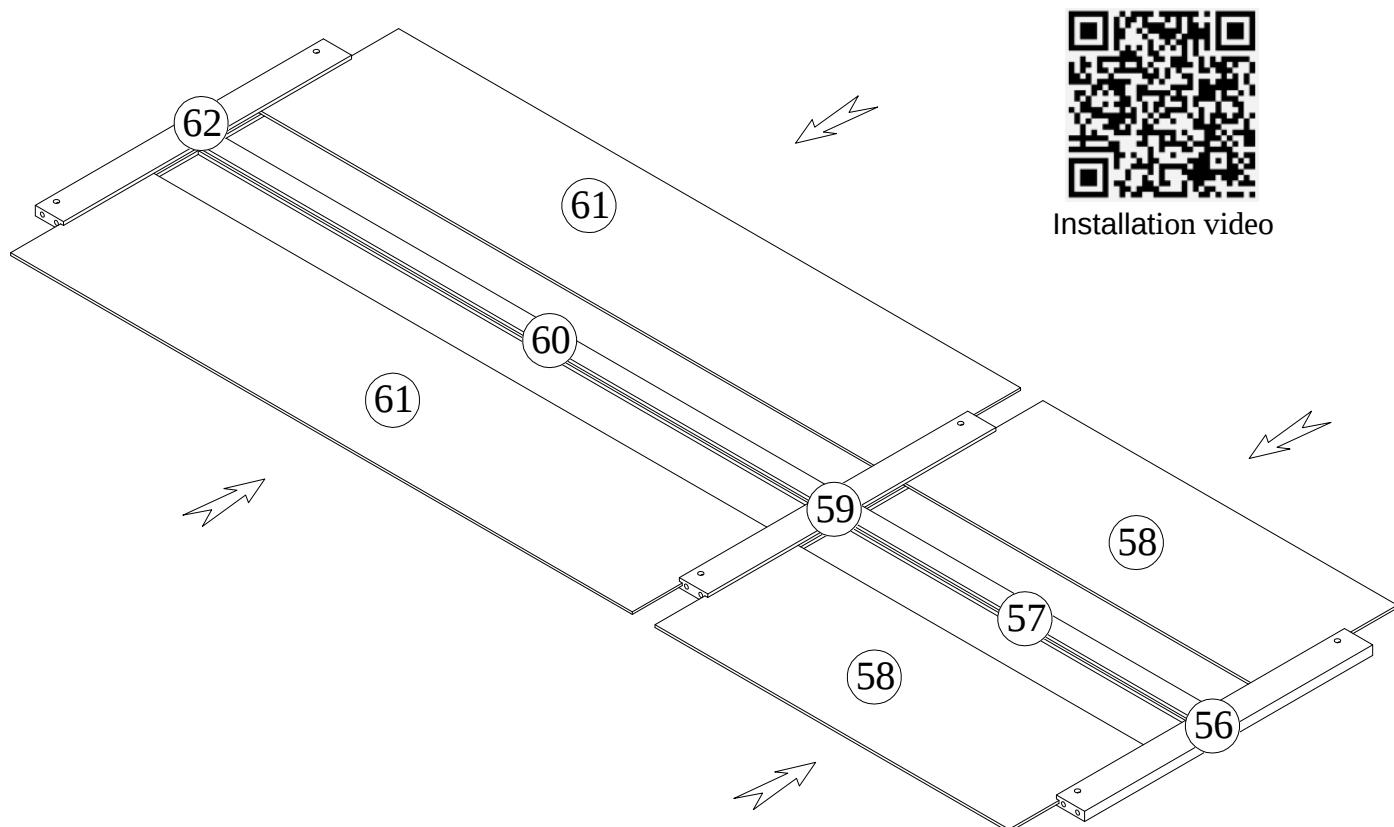


STEP-ÉTAPE-59 :

E	B	L
		
5pcs	5pcs	5pcs

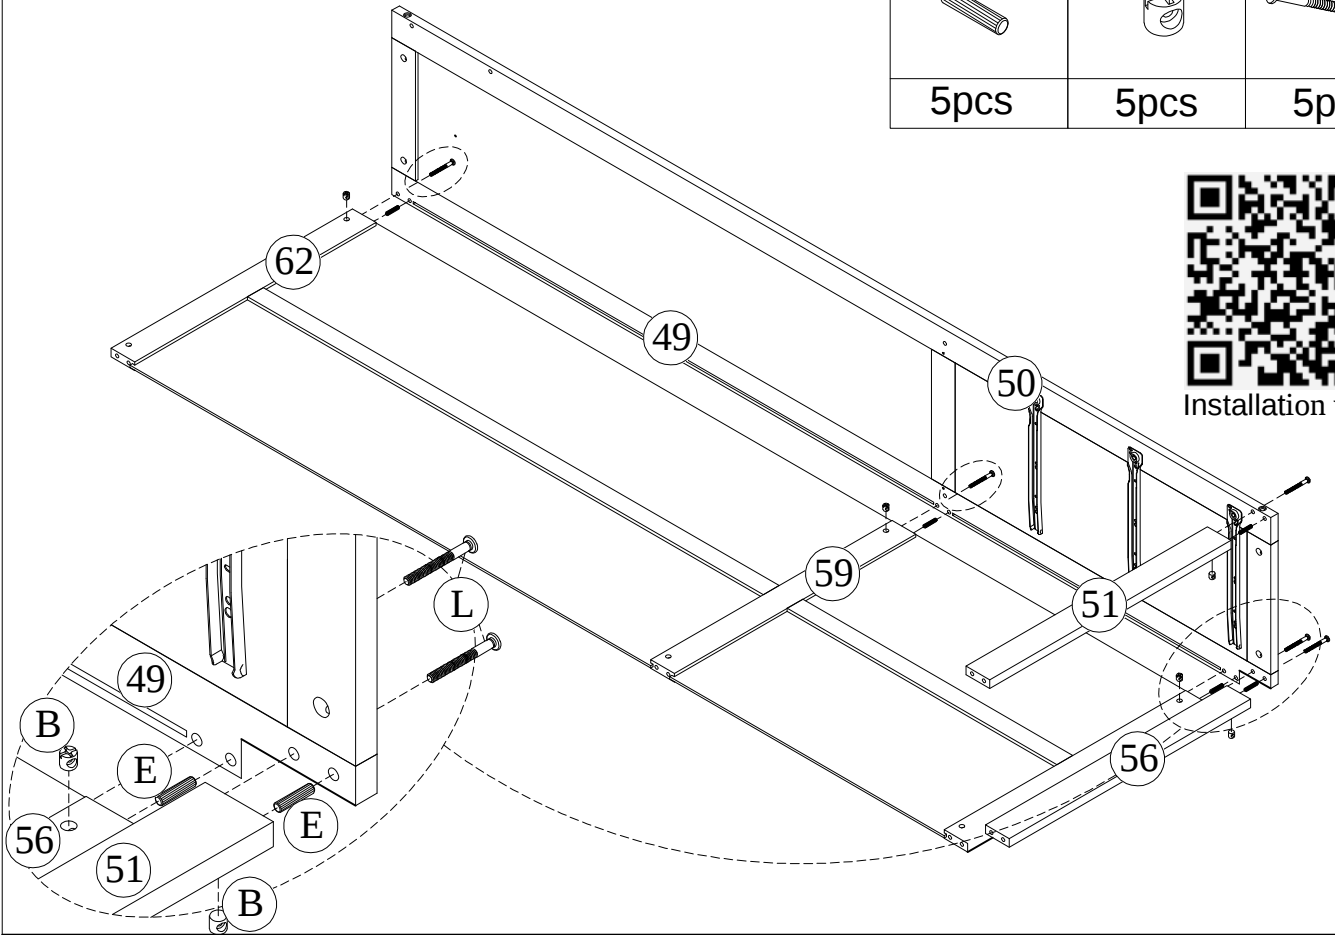

STEP-ÉTAPE-60 :


B	L
	
5pcs	5pcs
E	
	
5pcs	

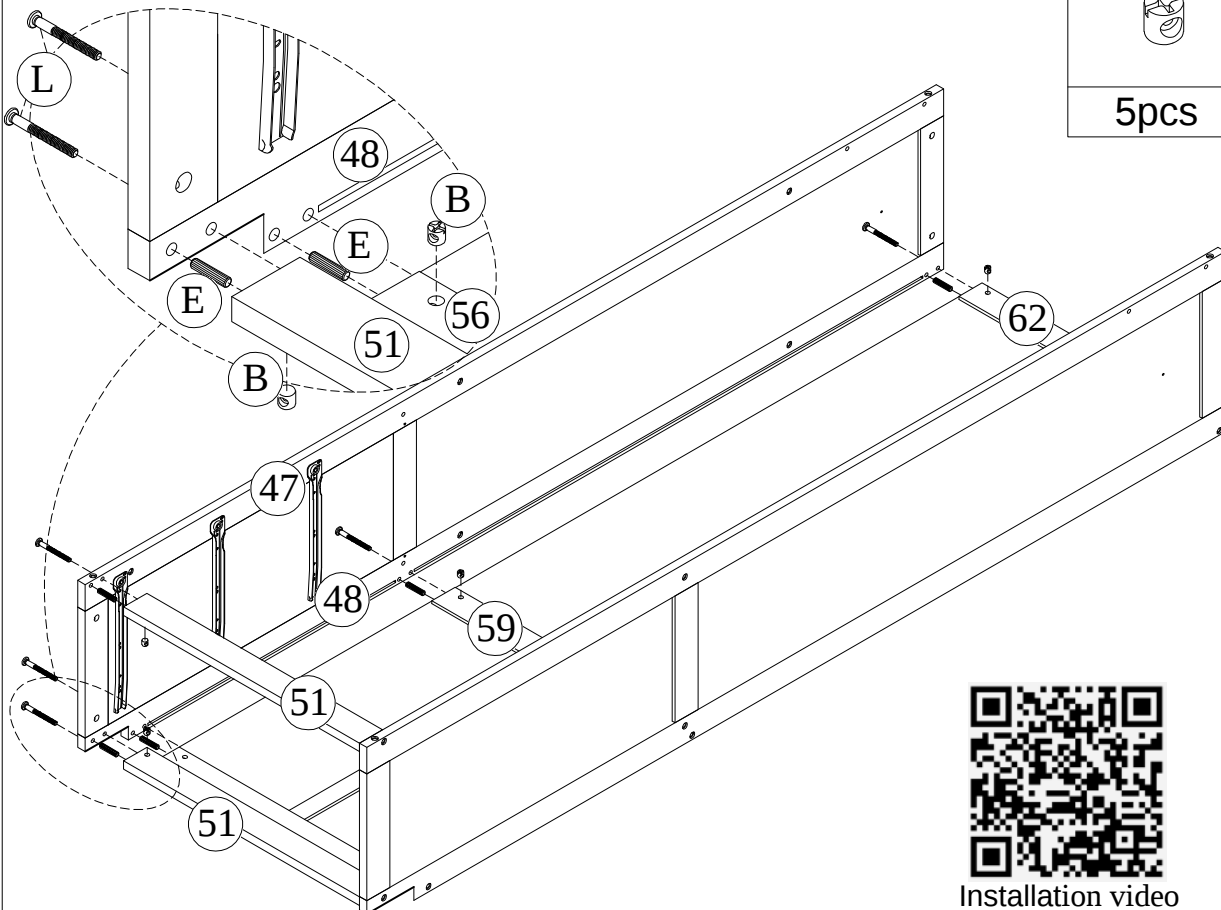

STEP-ÉTAPE-61 :




Installation video

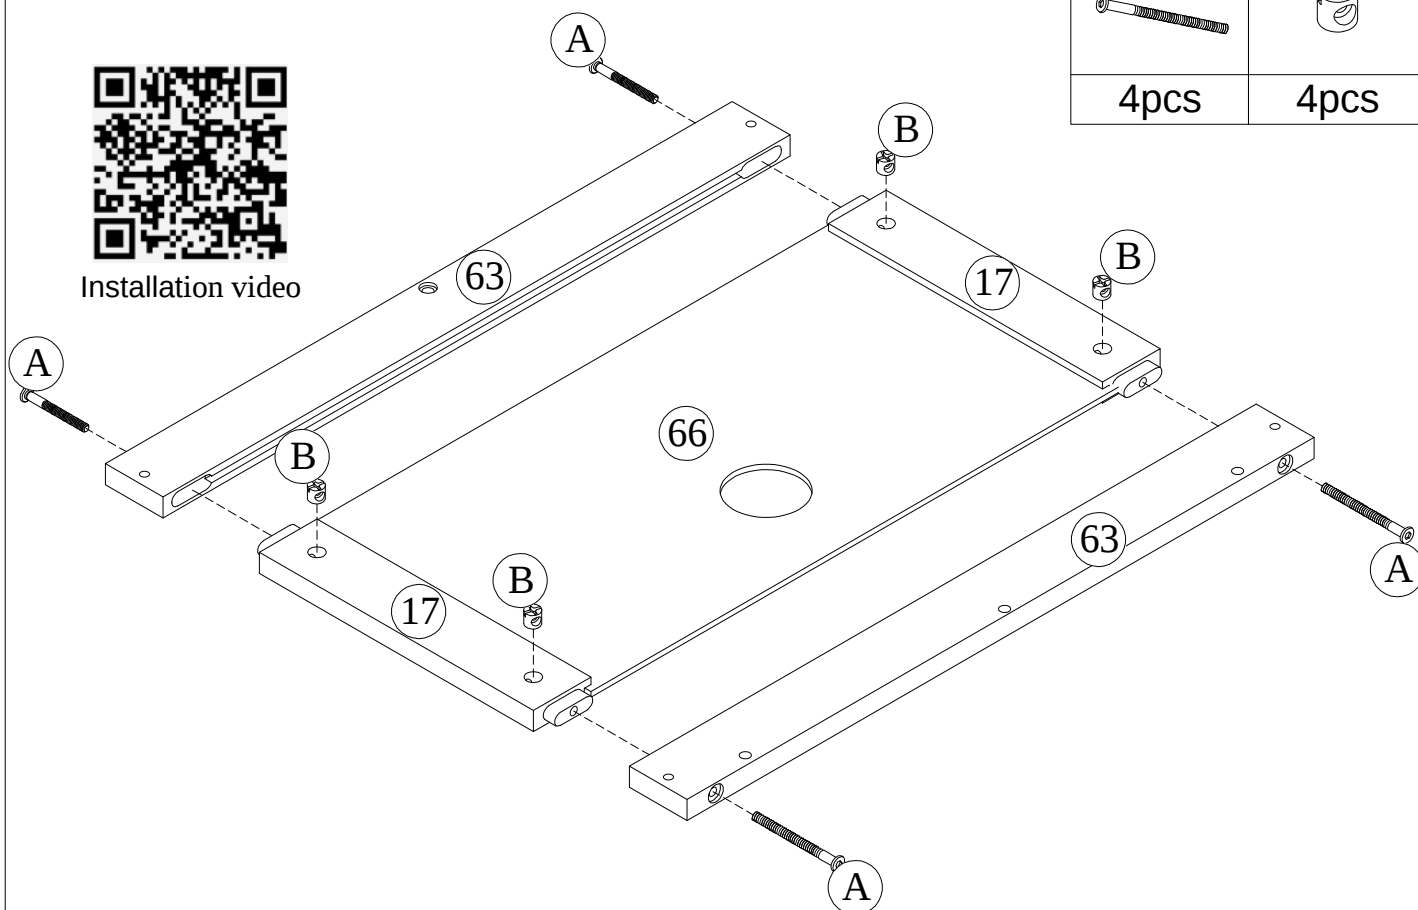


STEP-ÉTAPE-62 :



Installation video

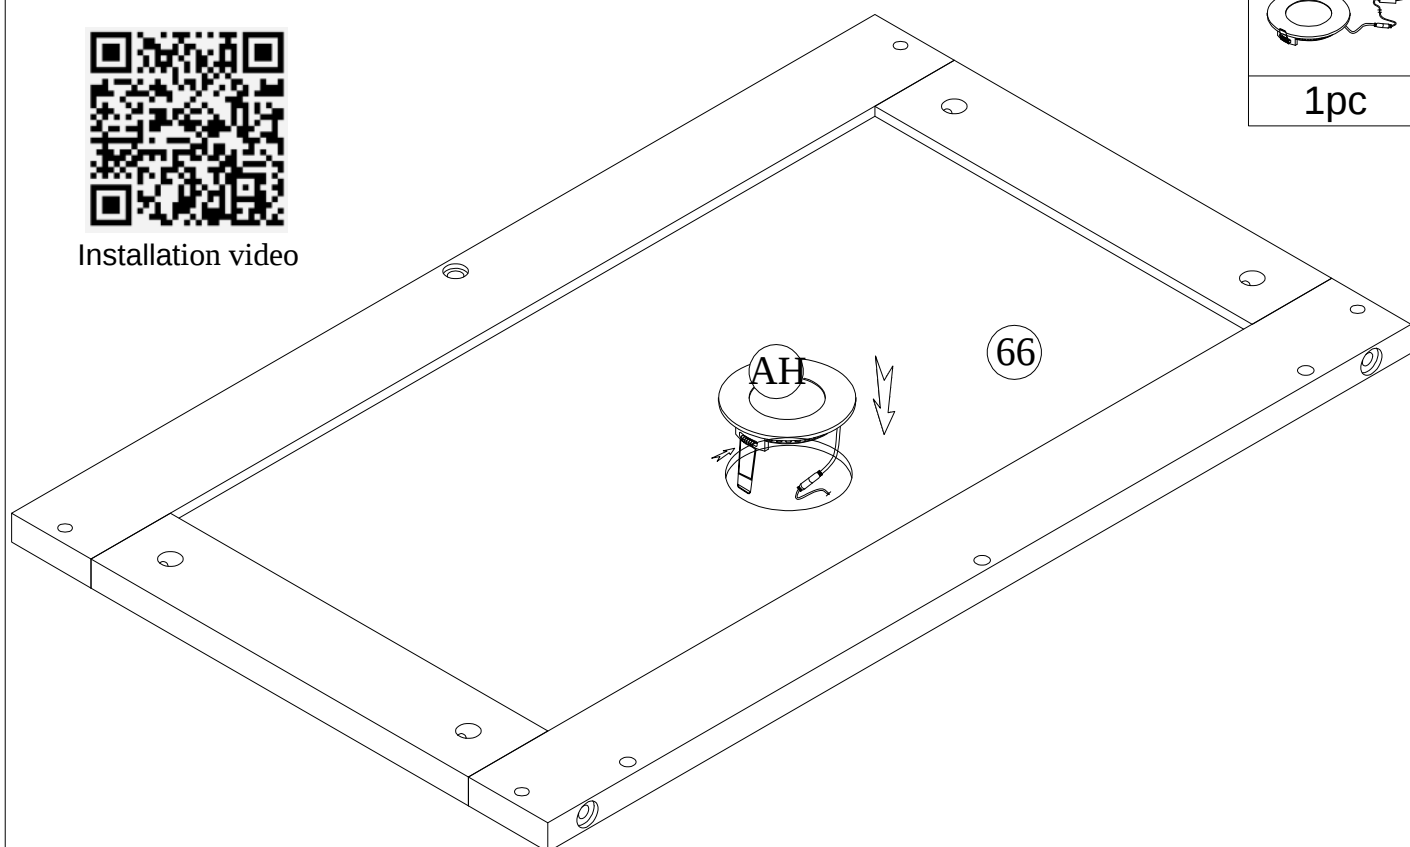

AH

1pc

STEP-ÉTAPE-63 :


H



5pcs



Installation video

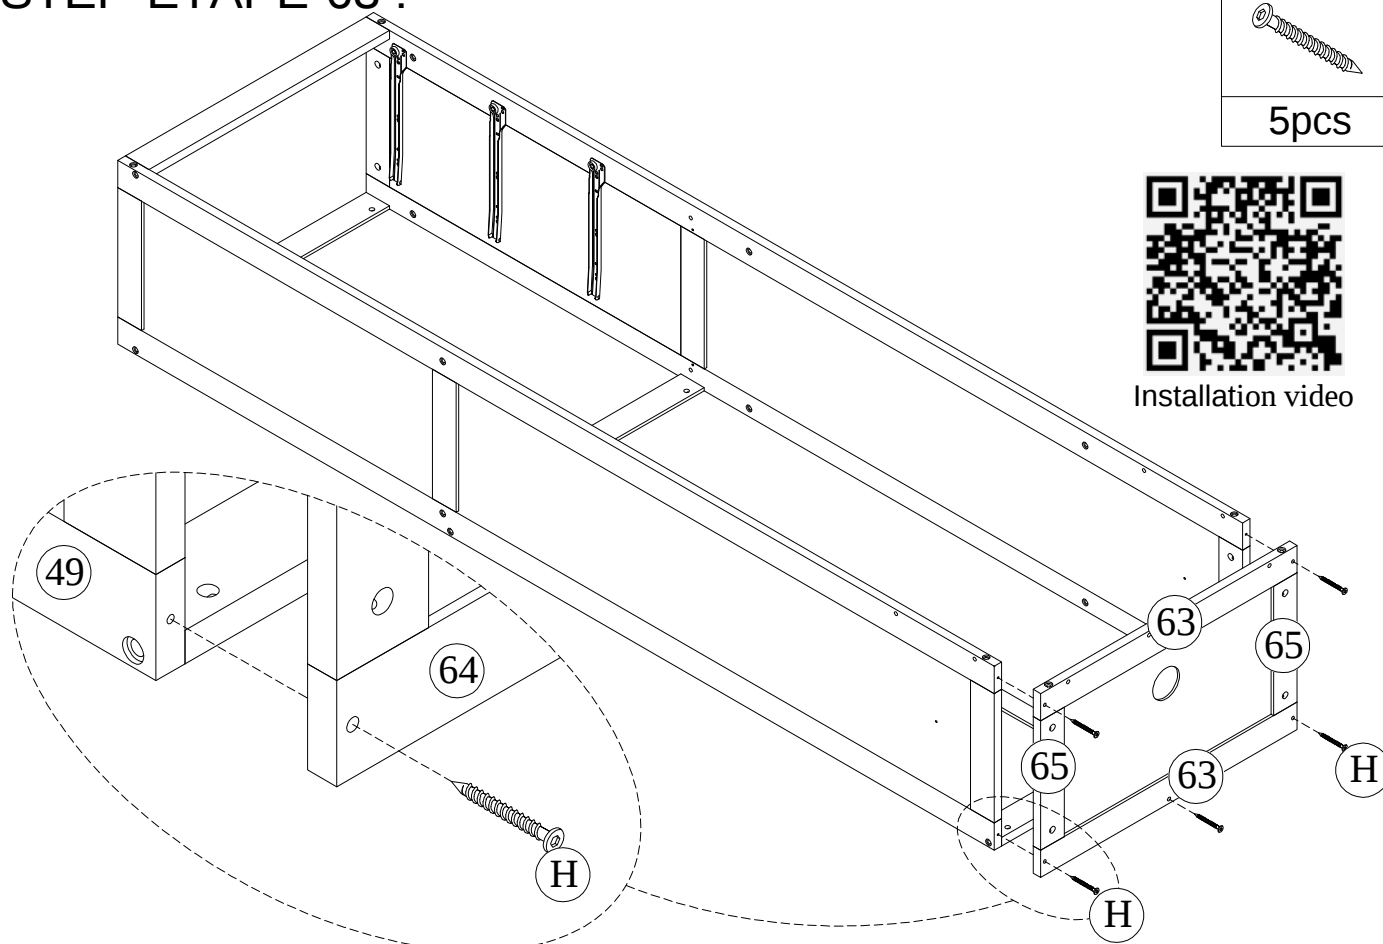

STEP-ÉTAPE-64 :


H



5pcs



Installation video

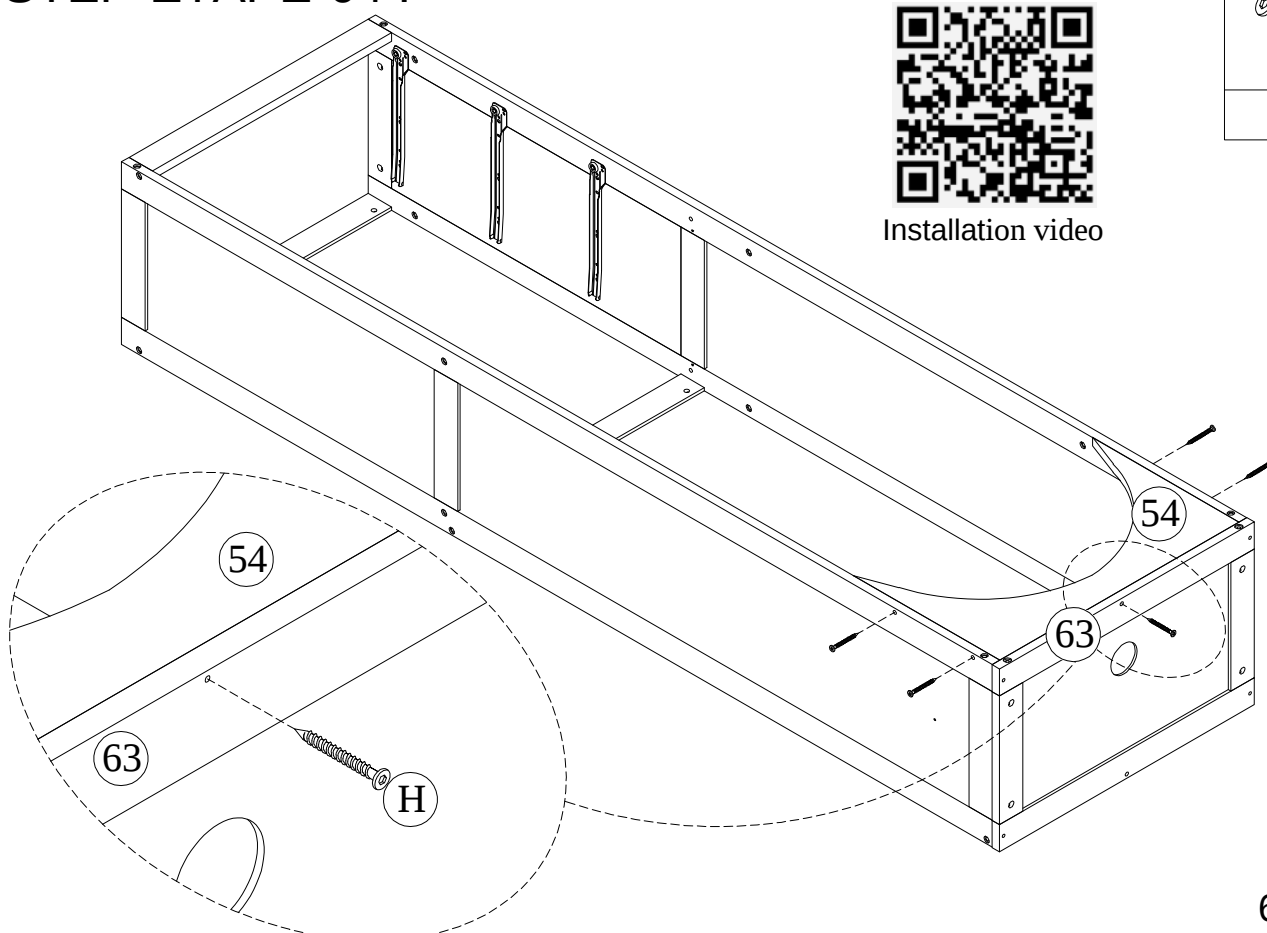

STEP-ÉTAPE-65 :



F



4pcs



Installation video

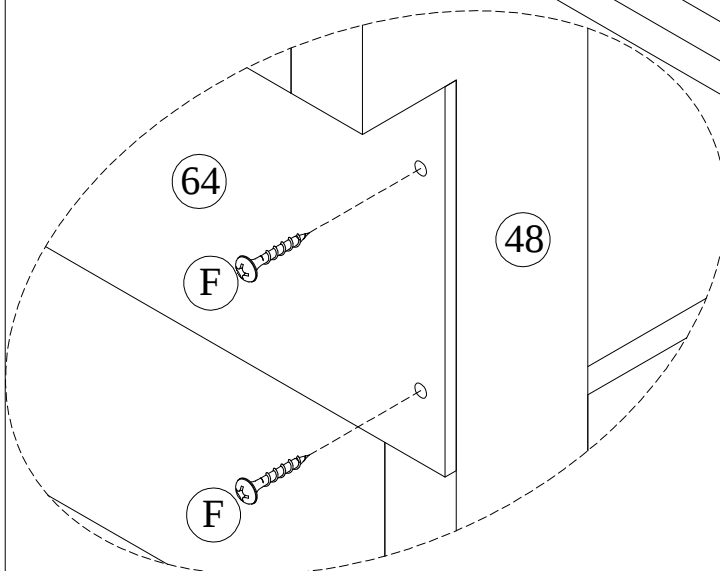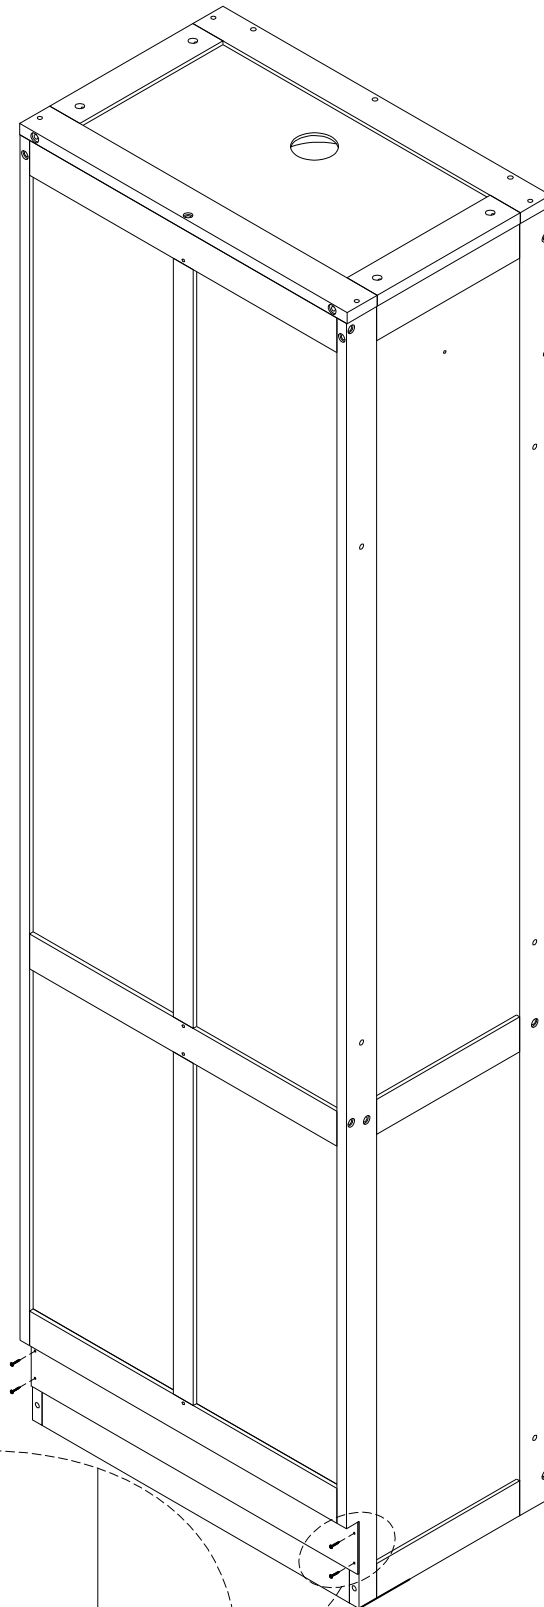

STEP-ÉTAPE-66 :


D



2pcs




Installation video

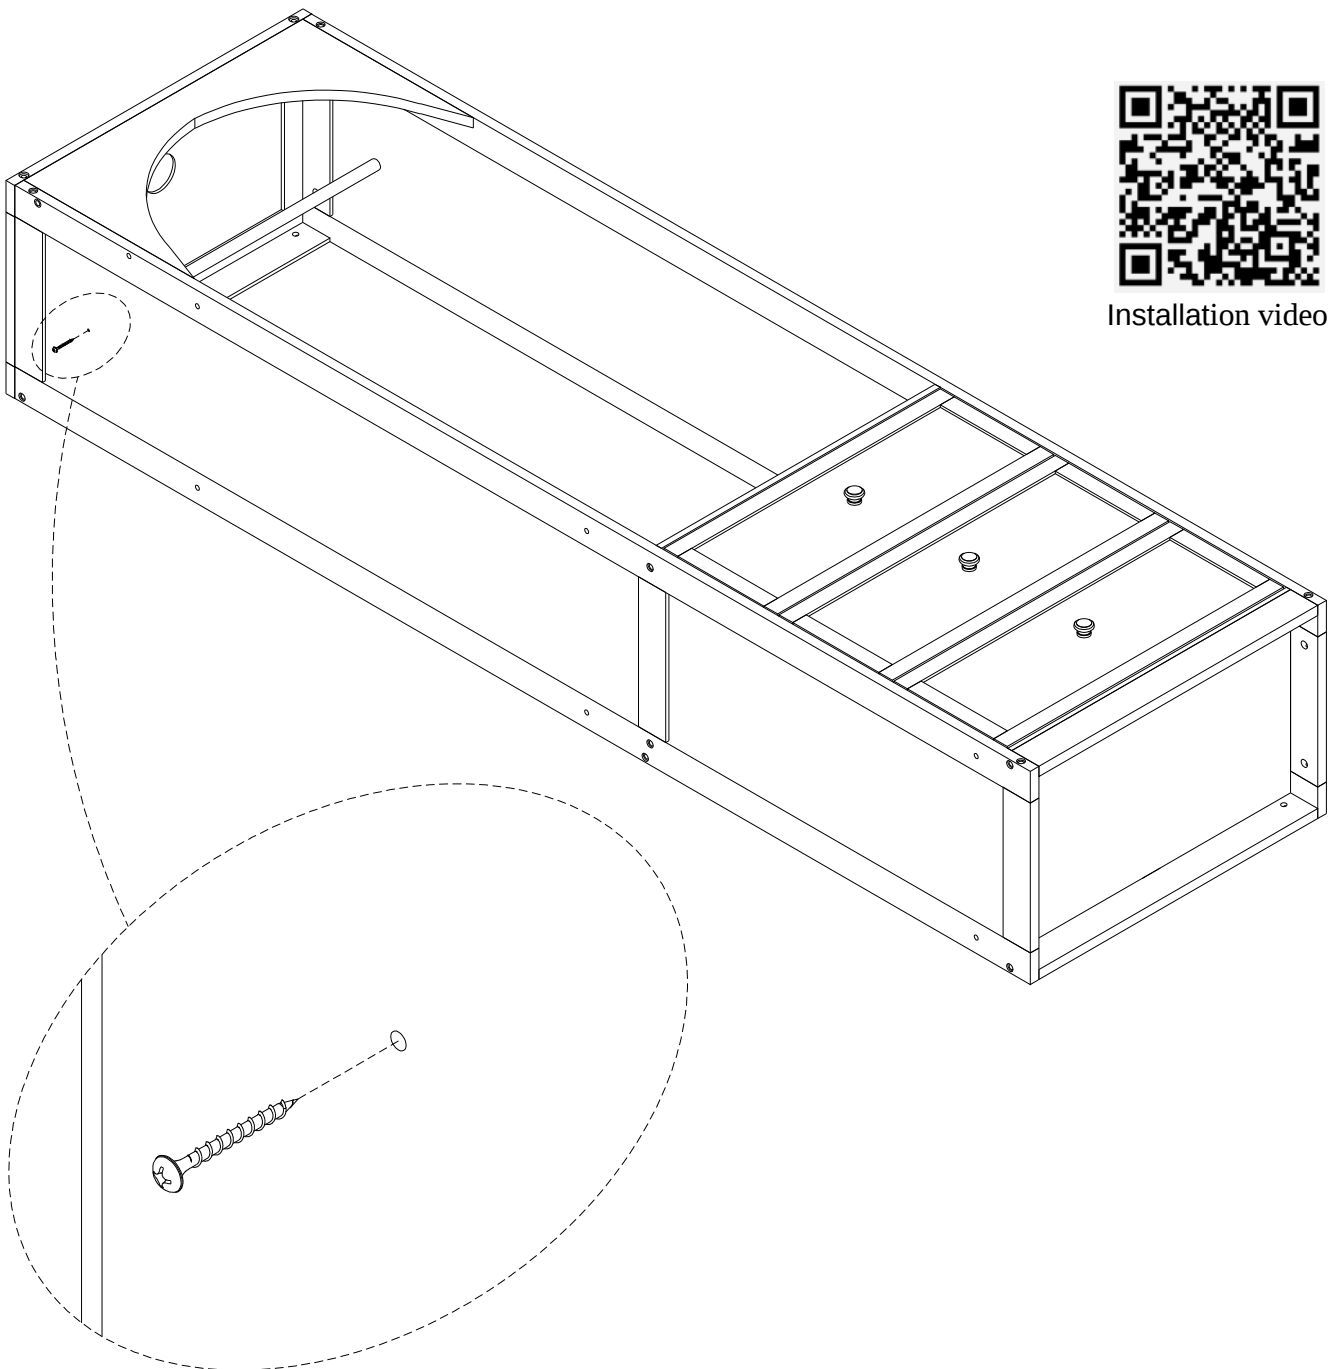


STEP-ÉTAPE-67:




Installation video

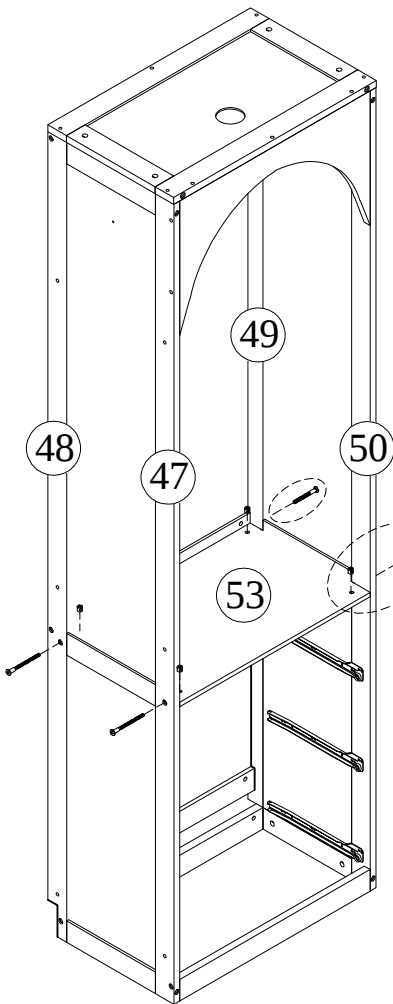


B	L
	
4pcs	4pcs

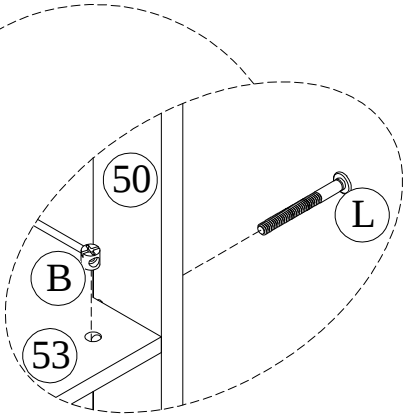

STEP-ÉTAPE-68 :

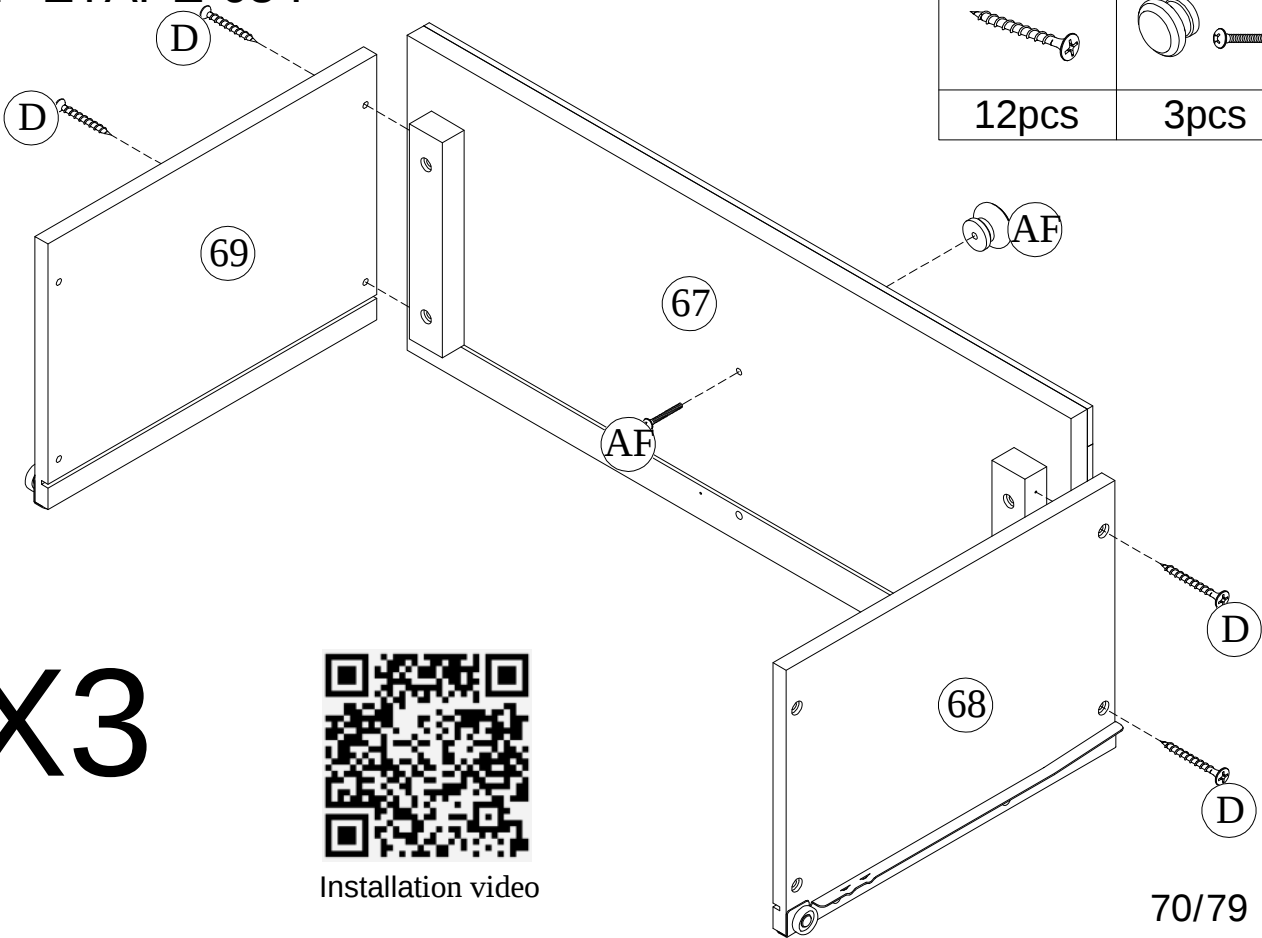


D	AF
	
12pcs	3pcs



Installation video

STEP-ÉTAPE-69 :


X3

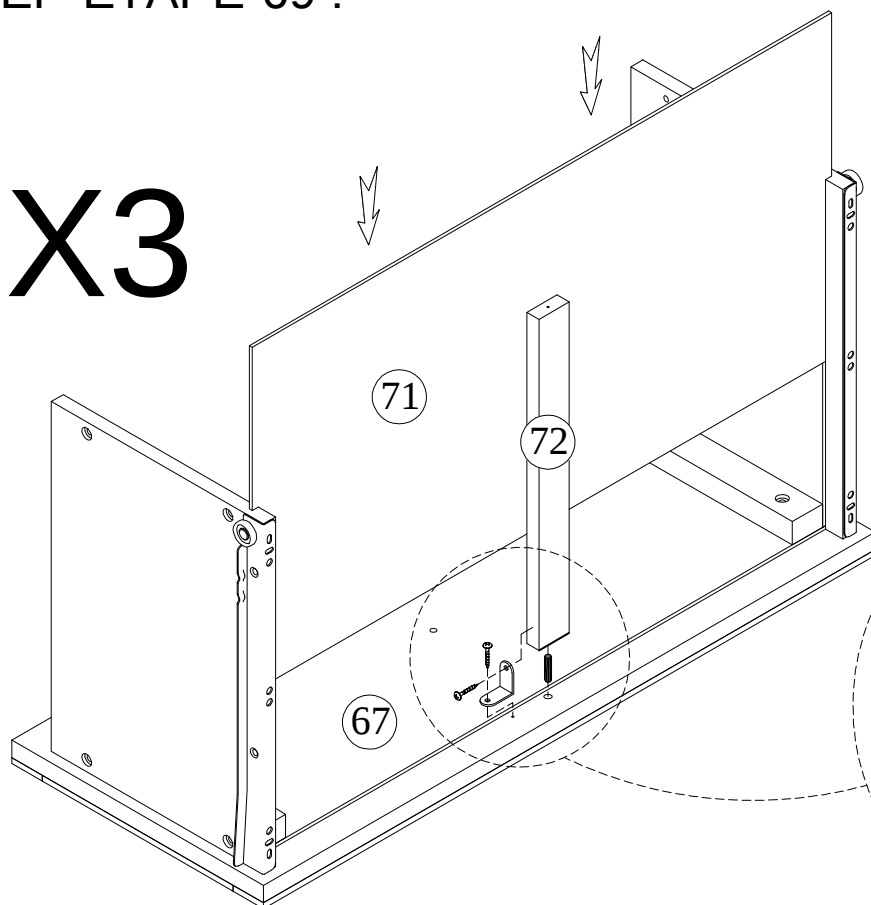

AM	AI
1set	3pcs




Installation video

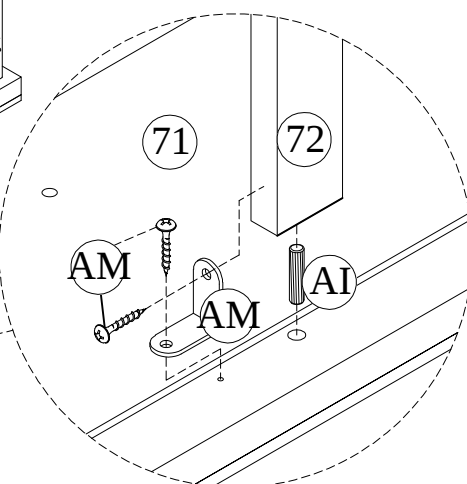

STEP-ÉTAPE-70:


X3

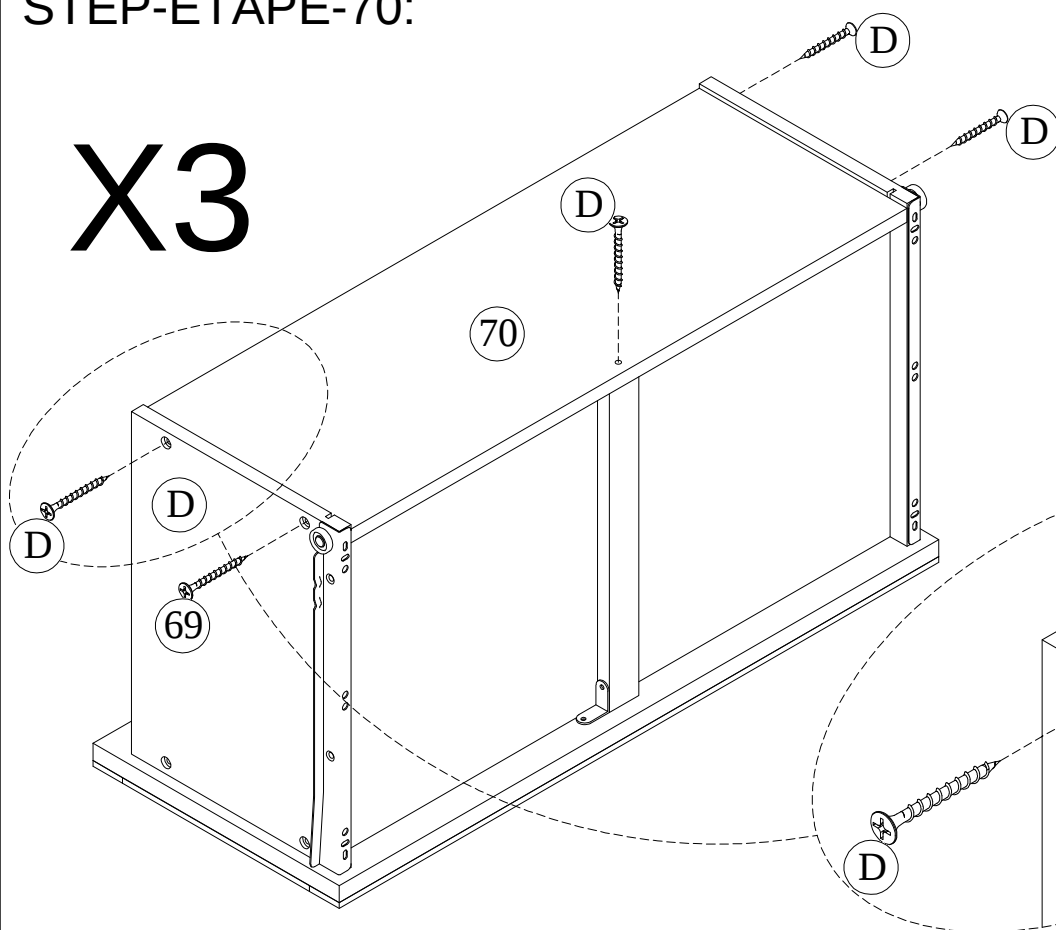

D
15pcs



Installation video

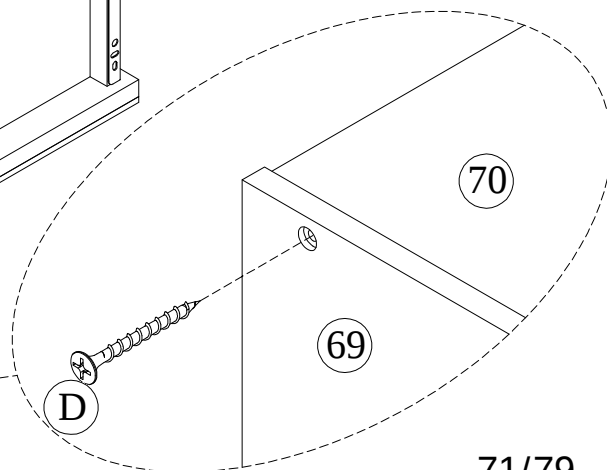

STEP-ÉTAPE-71:


H




6pcs






Installation video

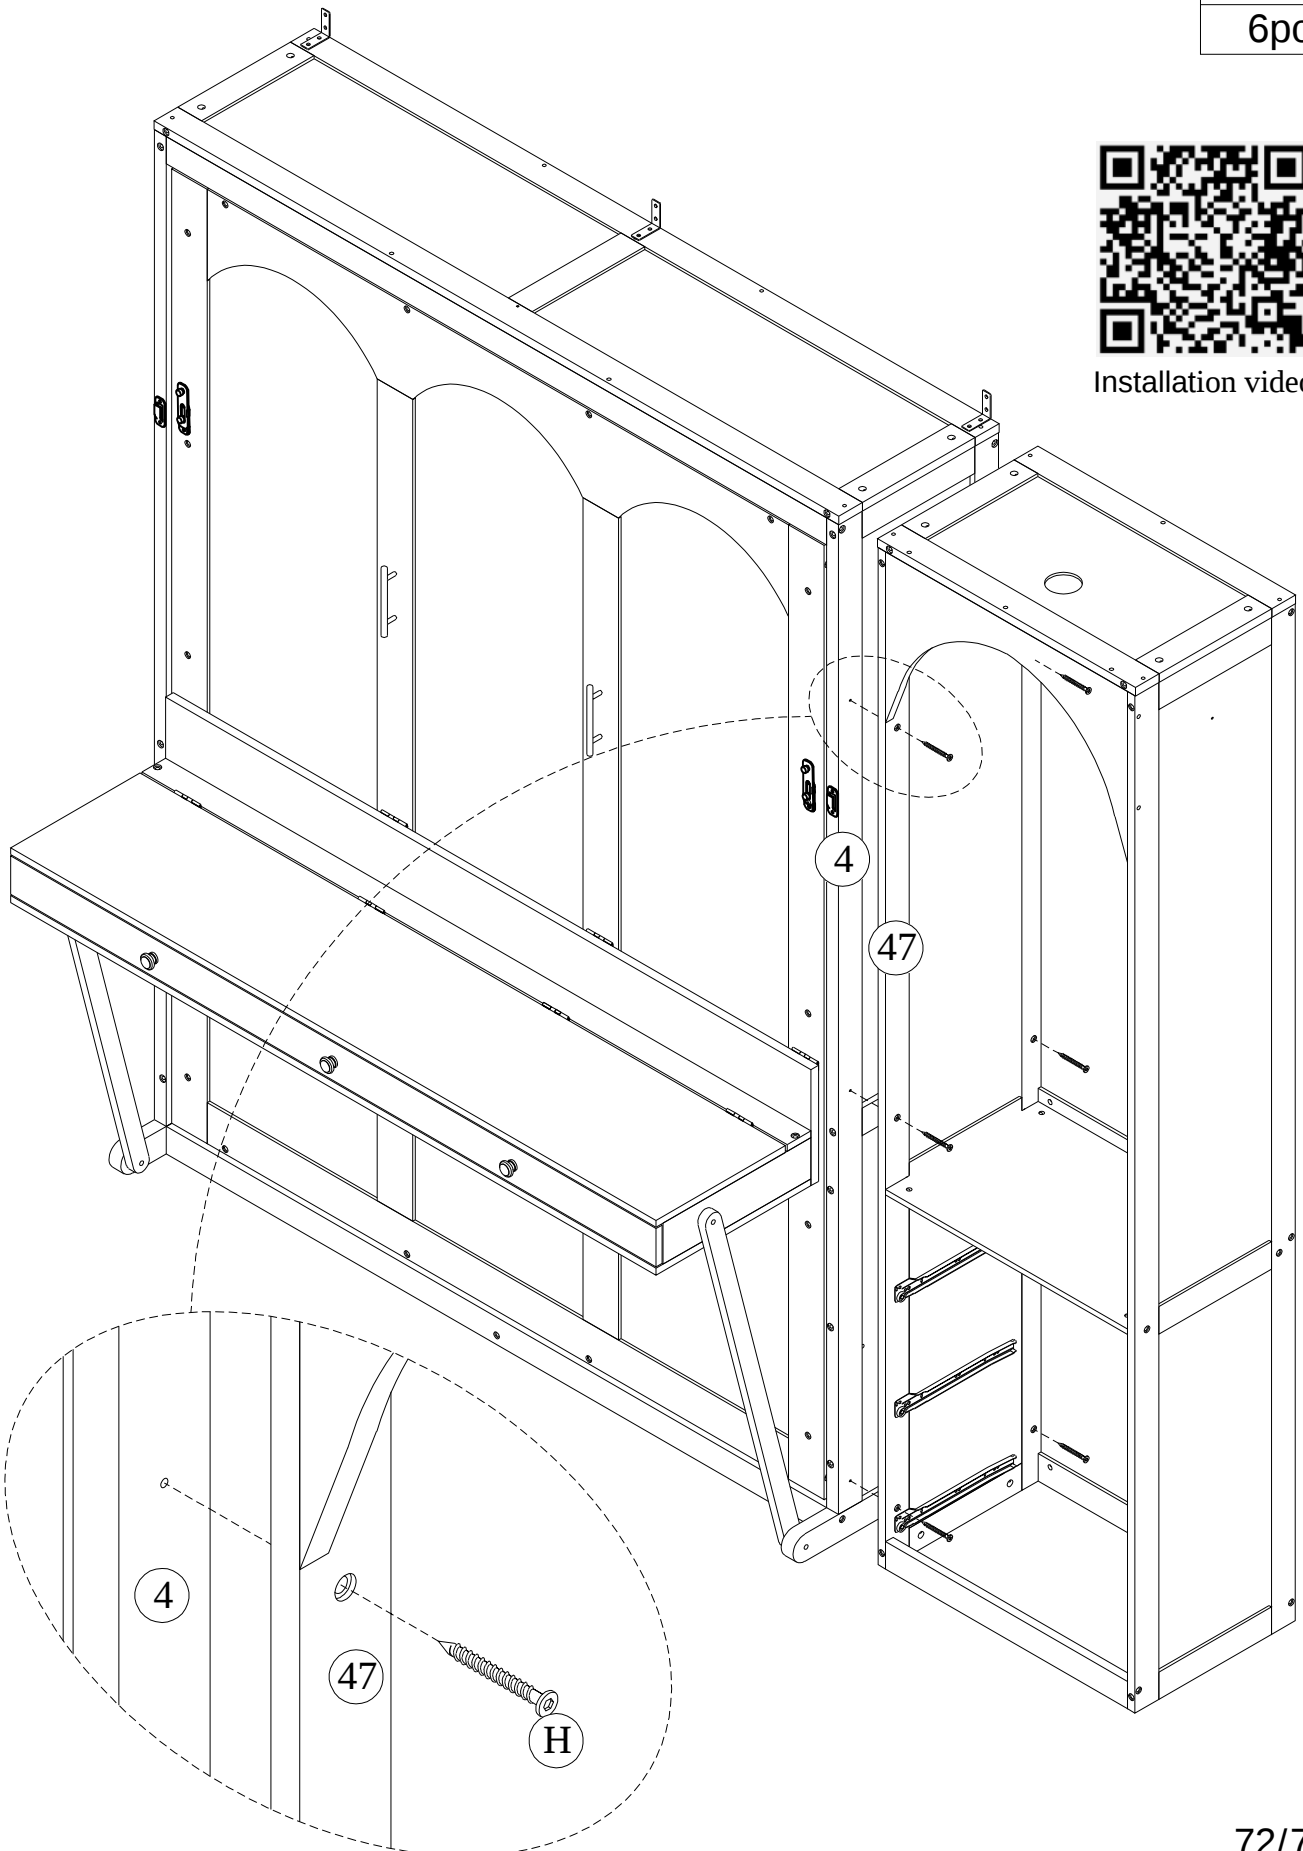


STEP-ÉTAPE-72 :

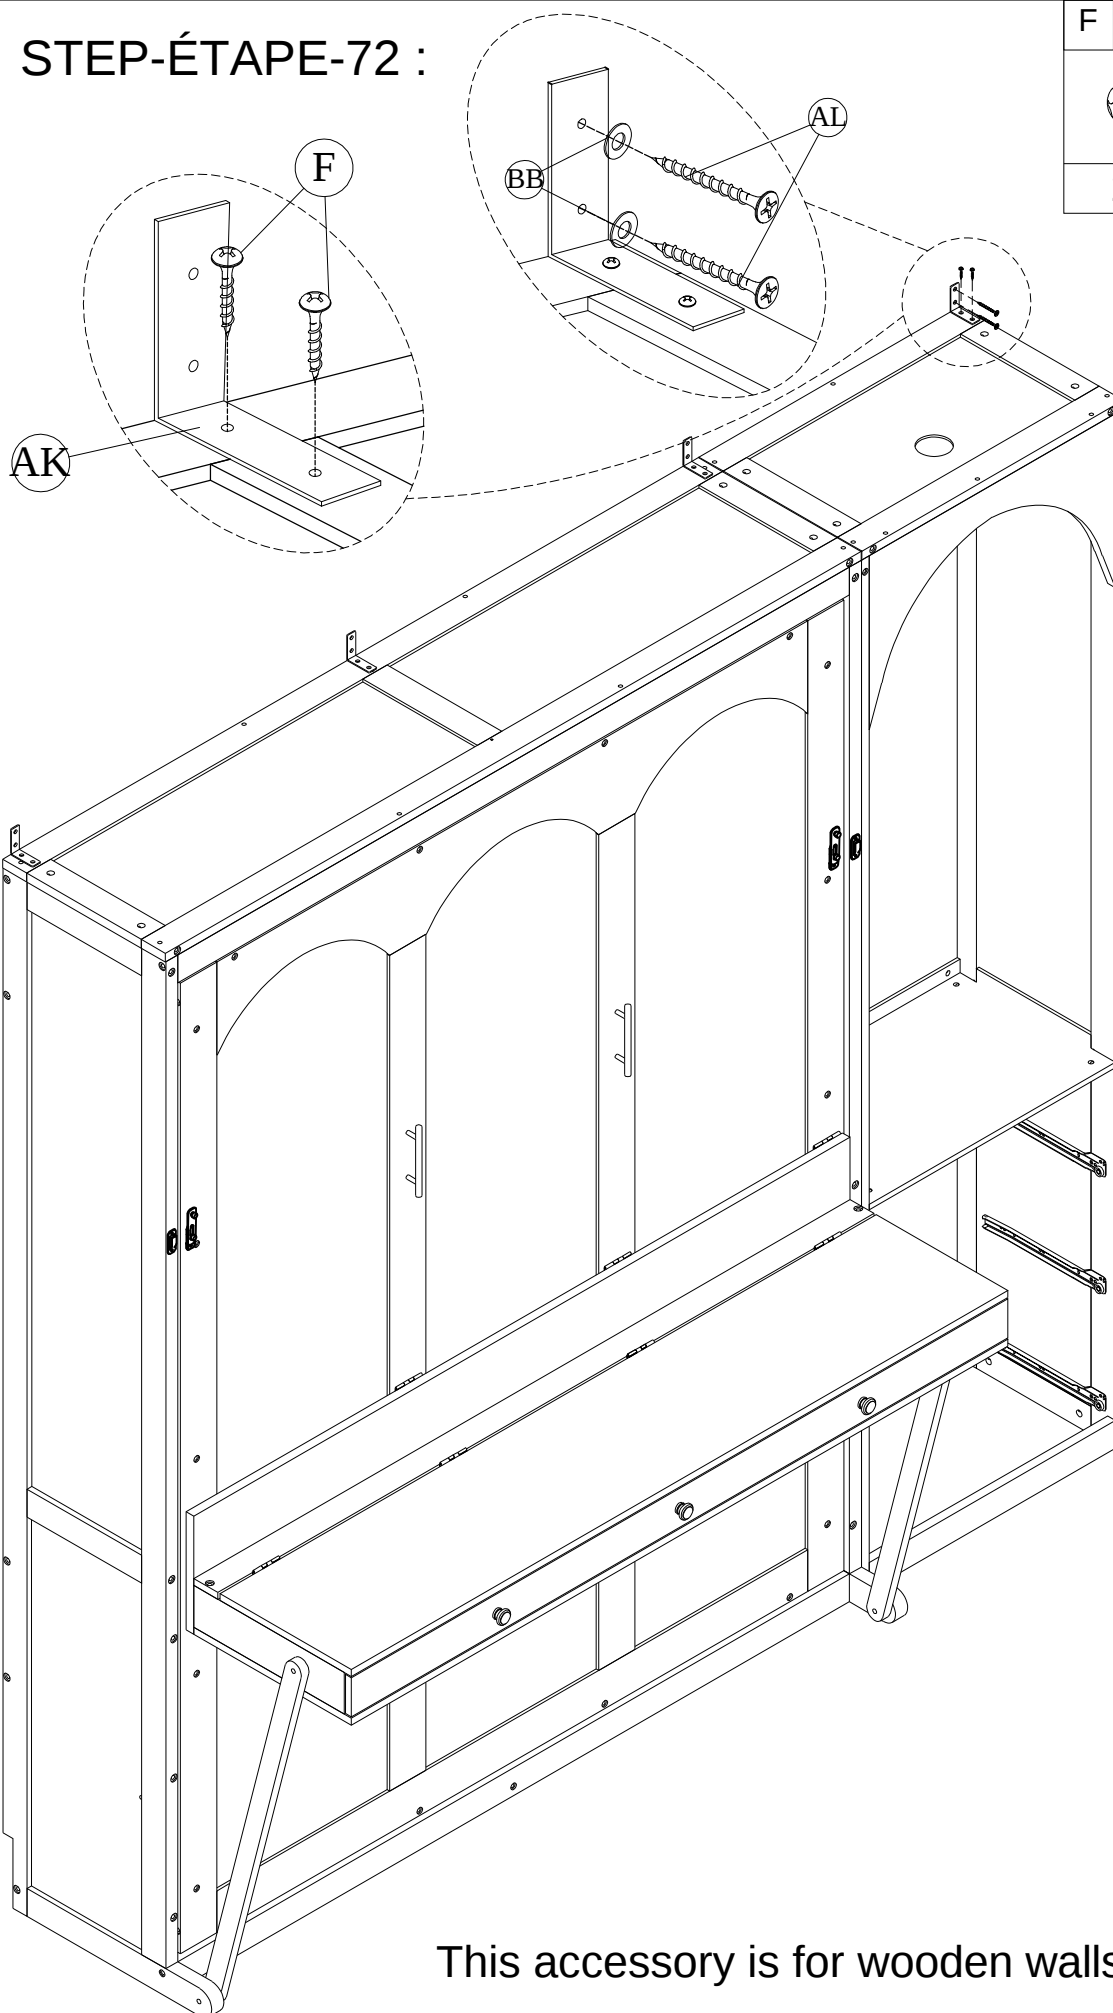


F	AK
	
2pcs	1pcs
	AL
	
	2pcs
	BB
	
	2pcs

This accessory is for wooden walls.


STEP-ÉTAPE-73 :

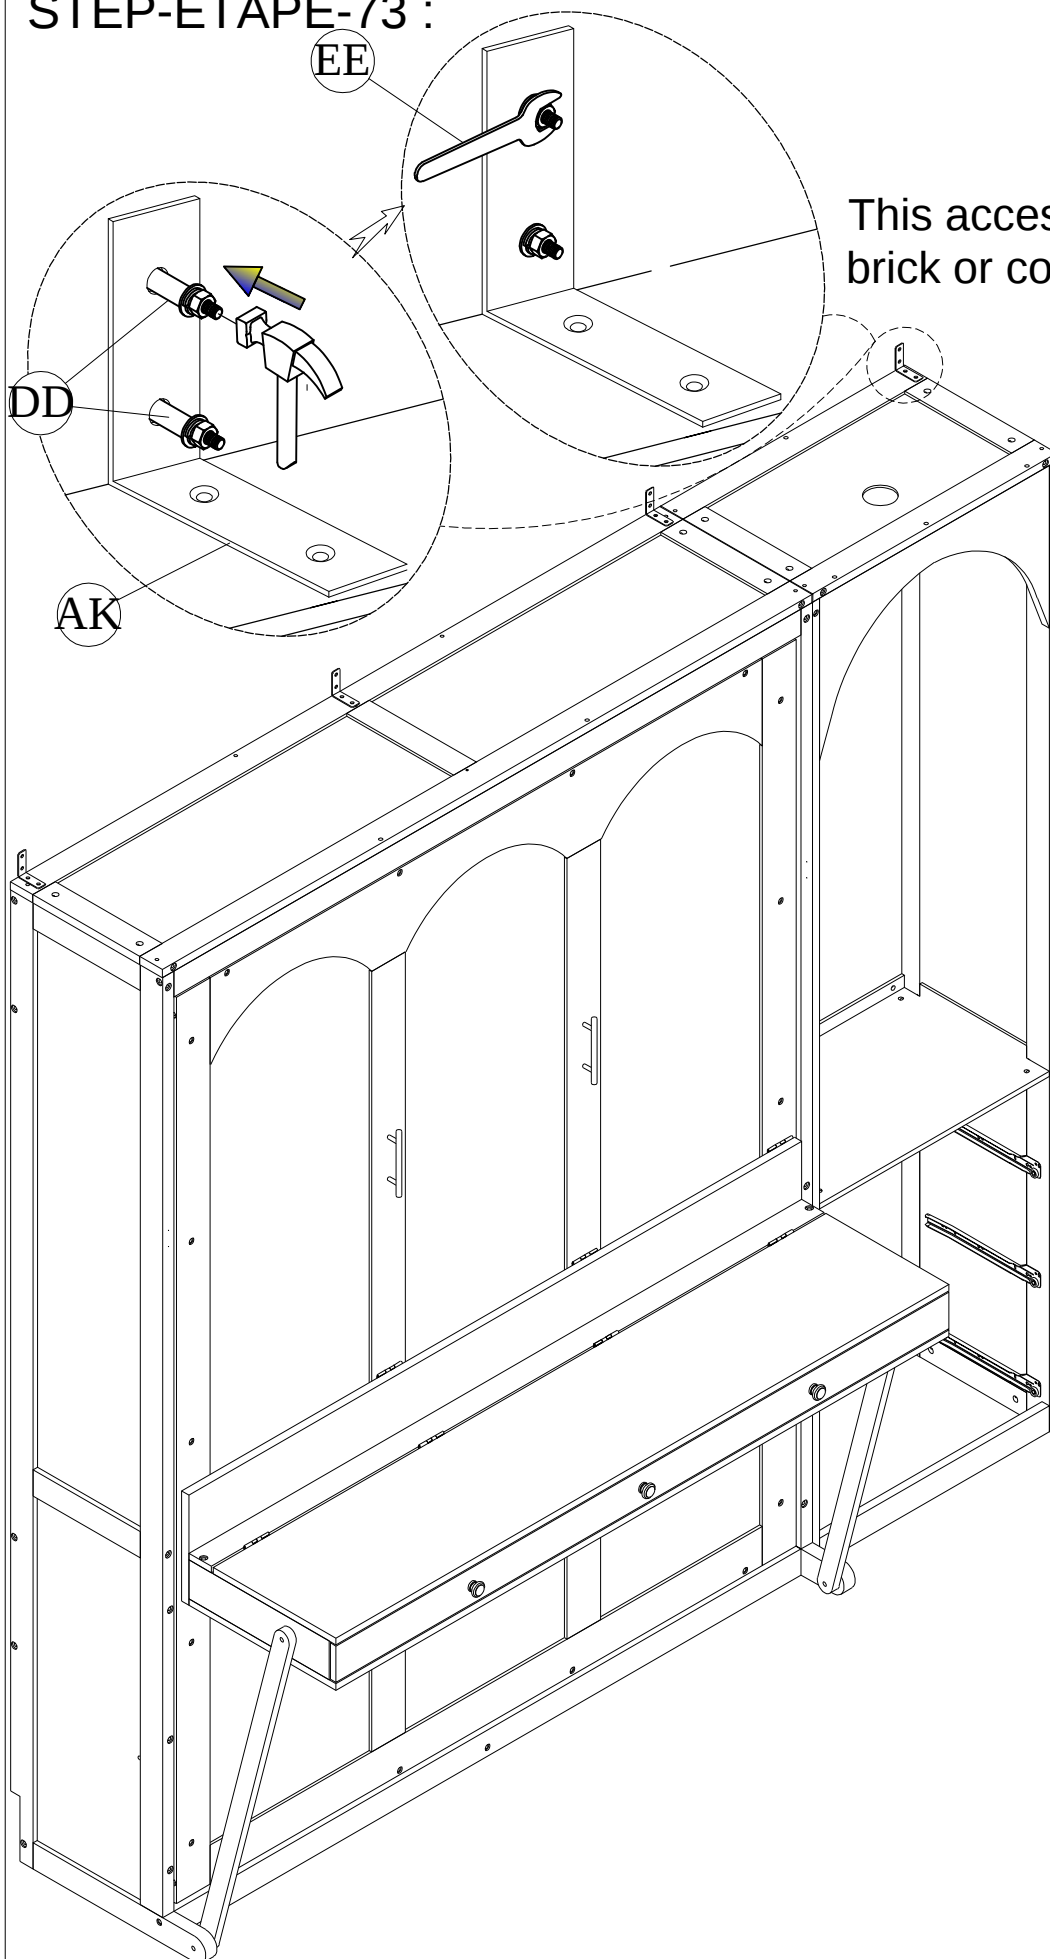

EE	DD
	
1pc	2pcs



This accessory is for use on brick or concrete walls.





STEP-ÉTAPE-74 :

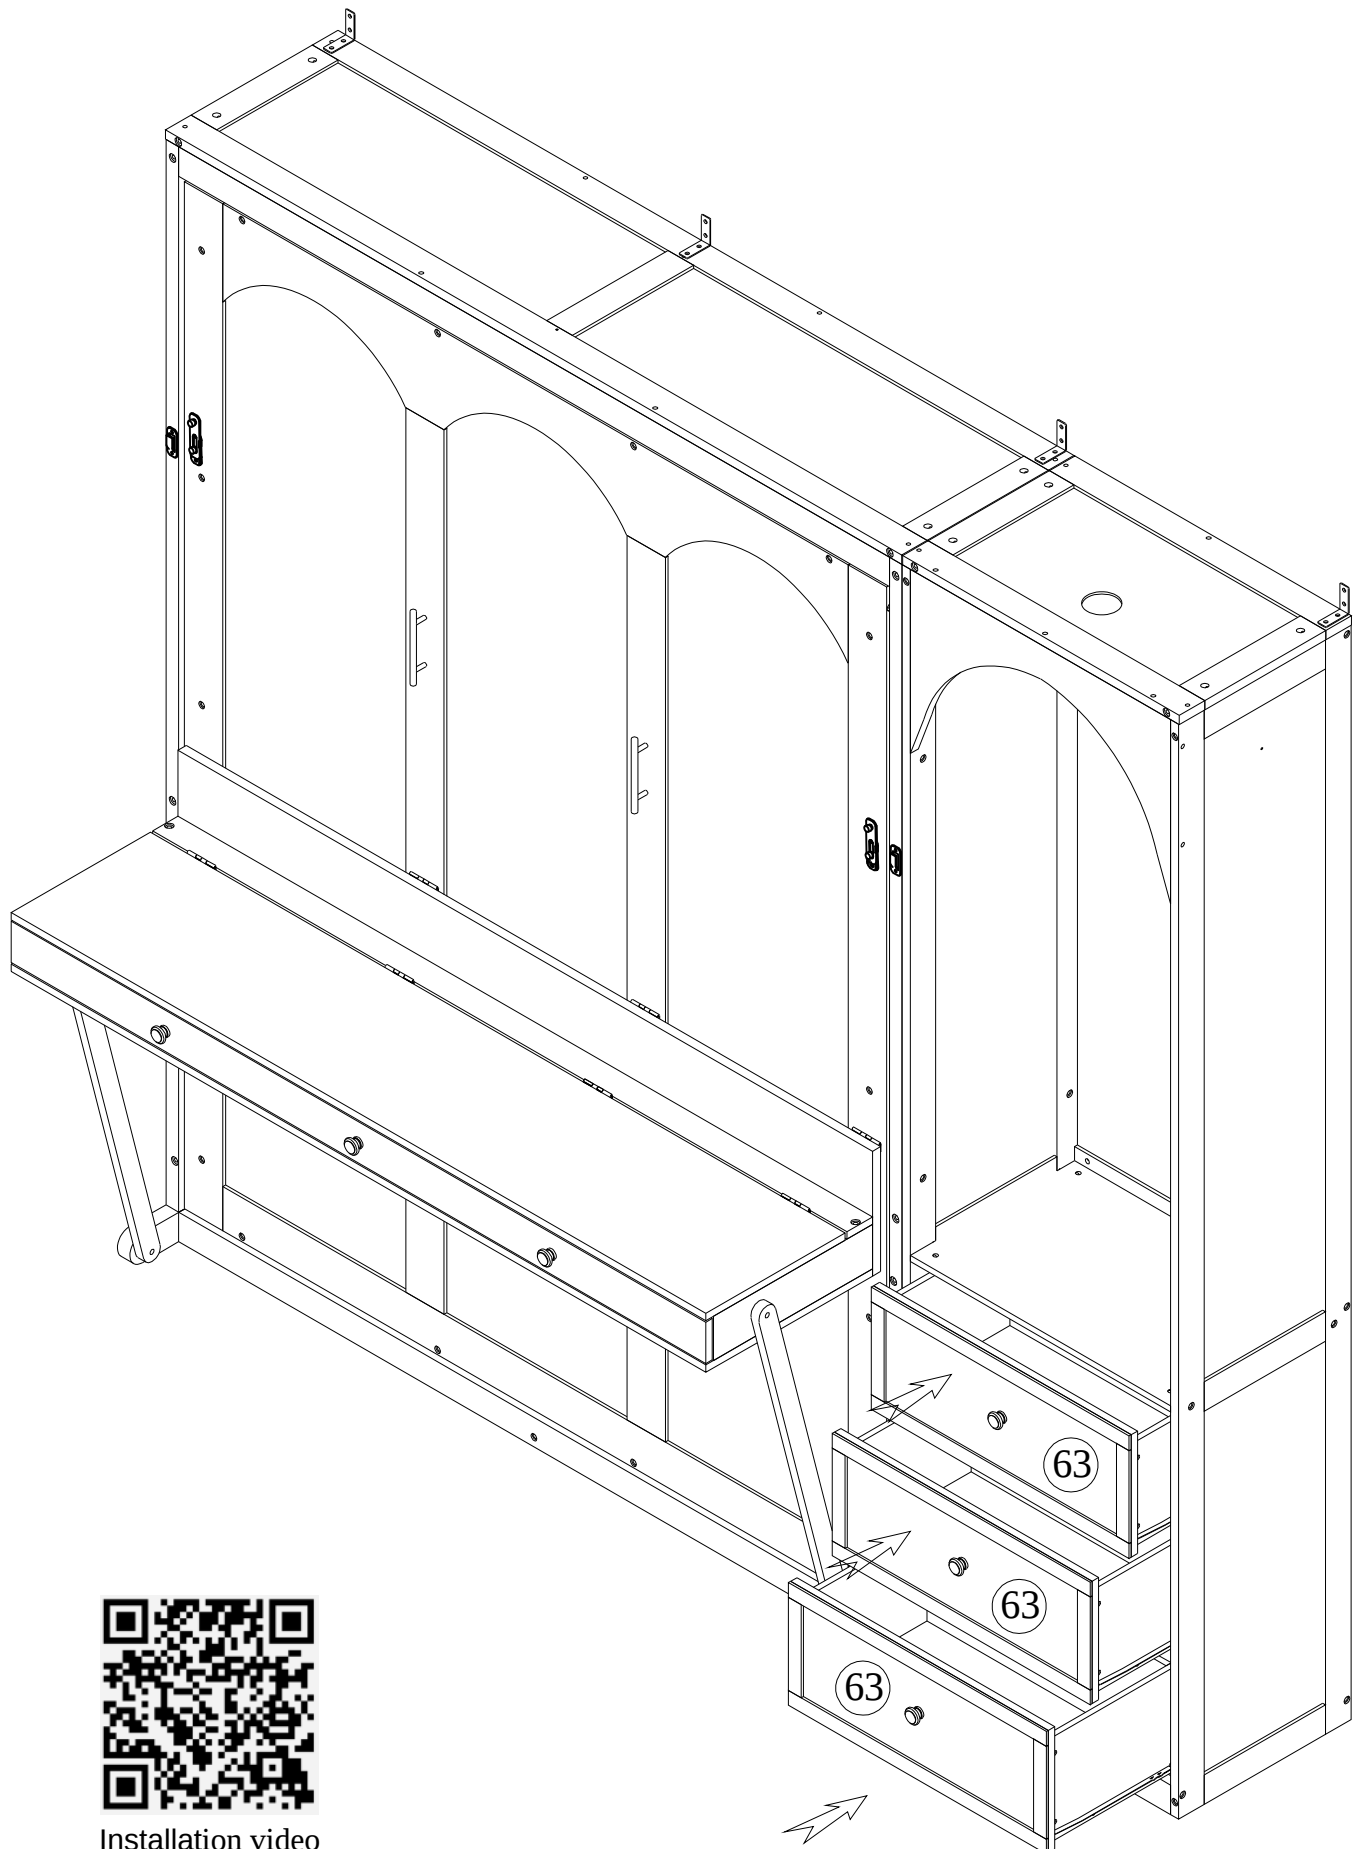

Installation video


STEP-ÉTAPE-75 :

I	AH	AN
		
2pcs	1pc	1set

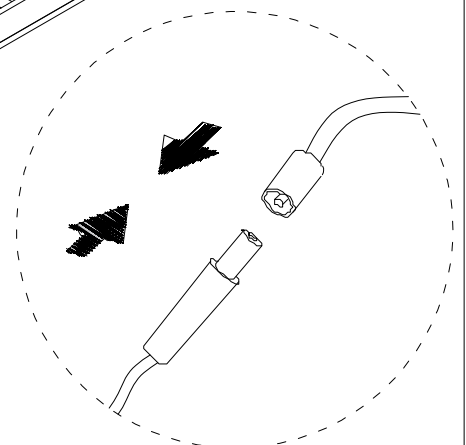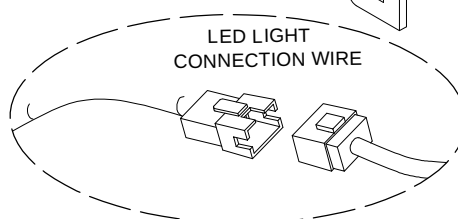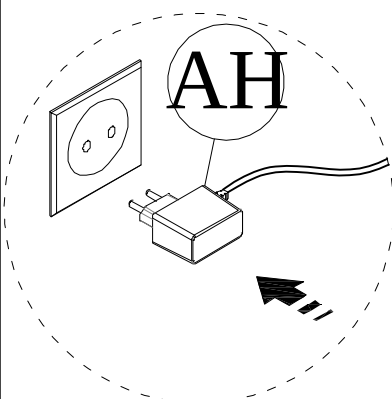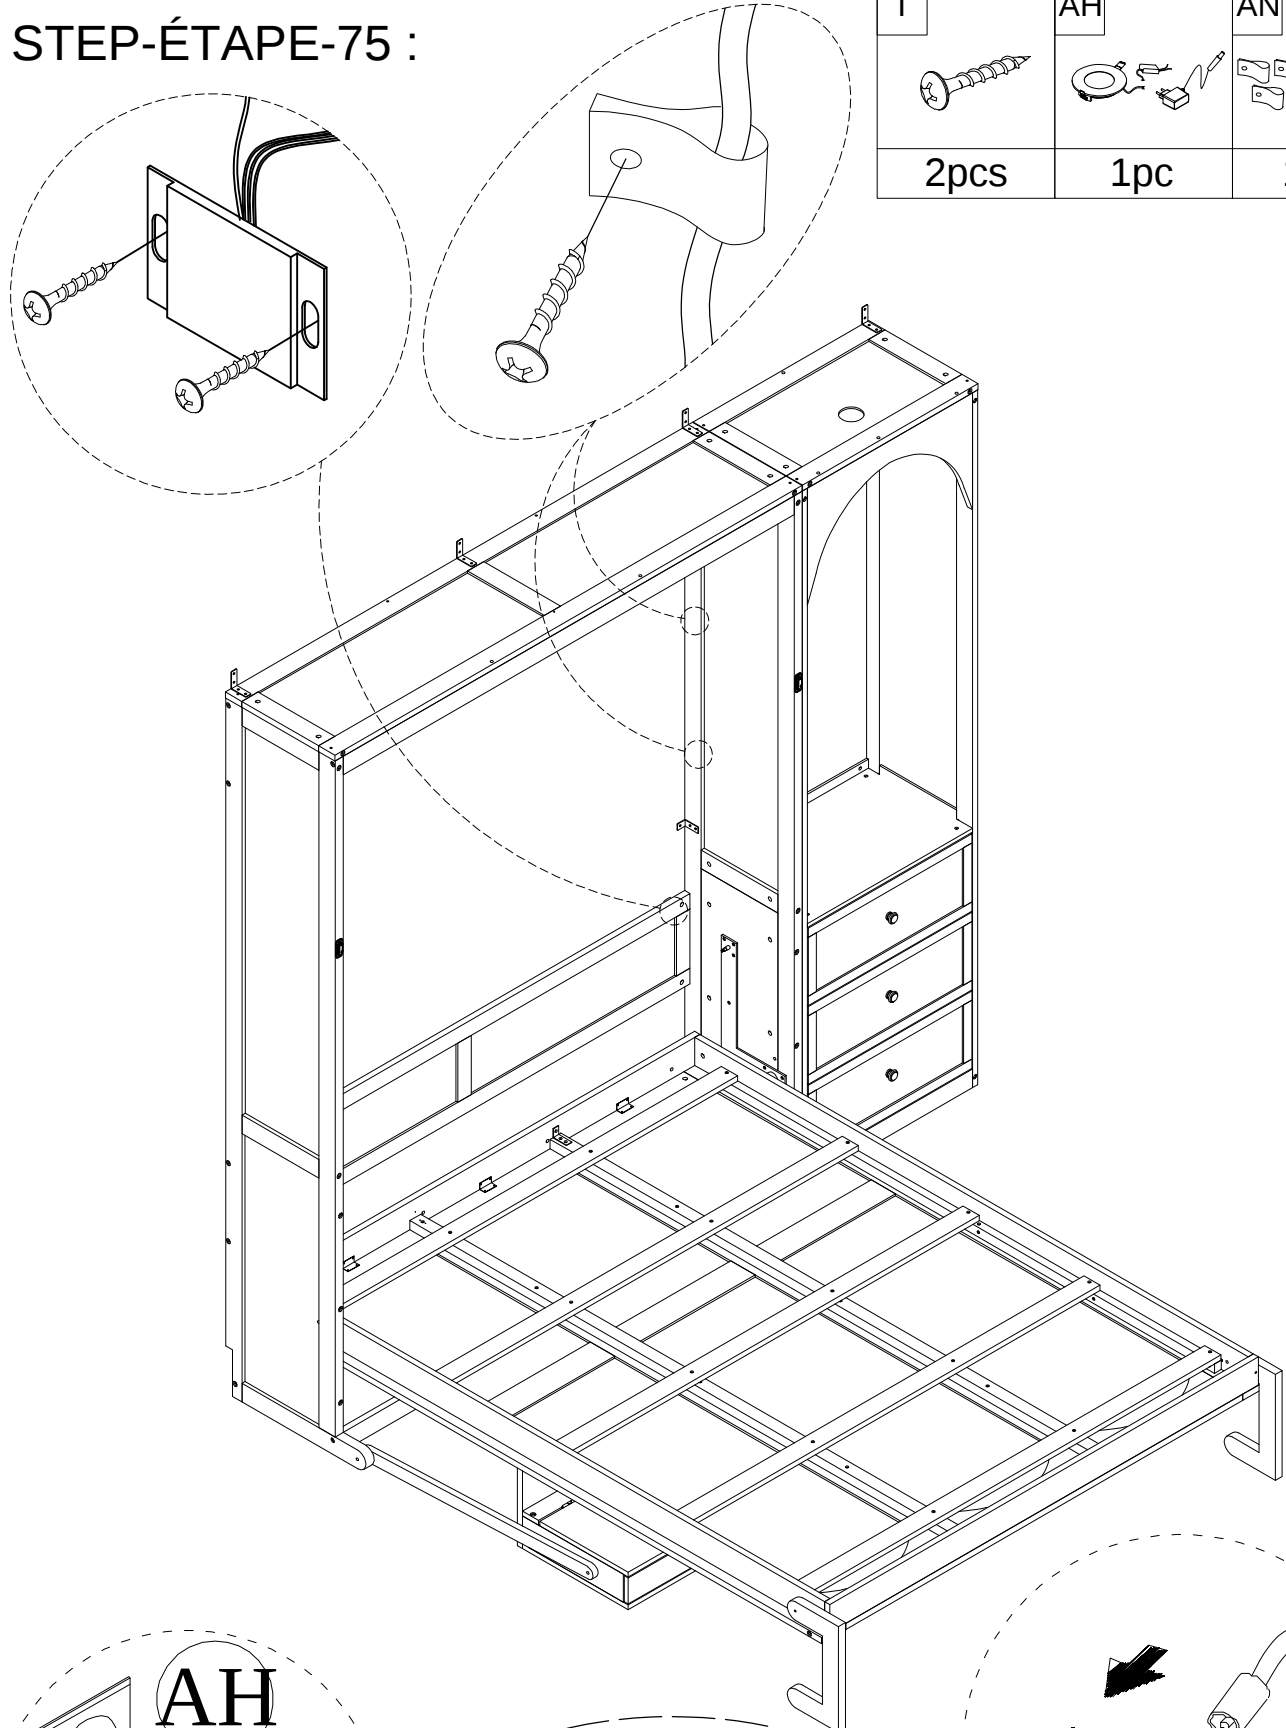


STEP-ÉTAPE-76:


CC	R
	
1pc	1pc

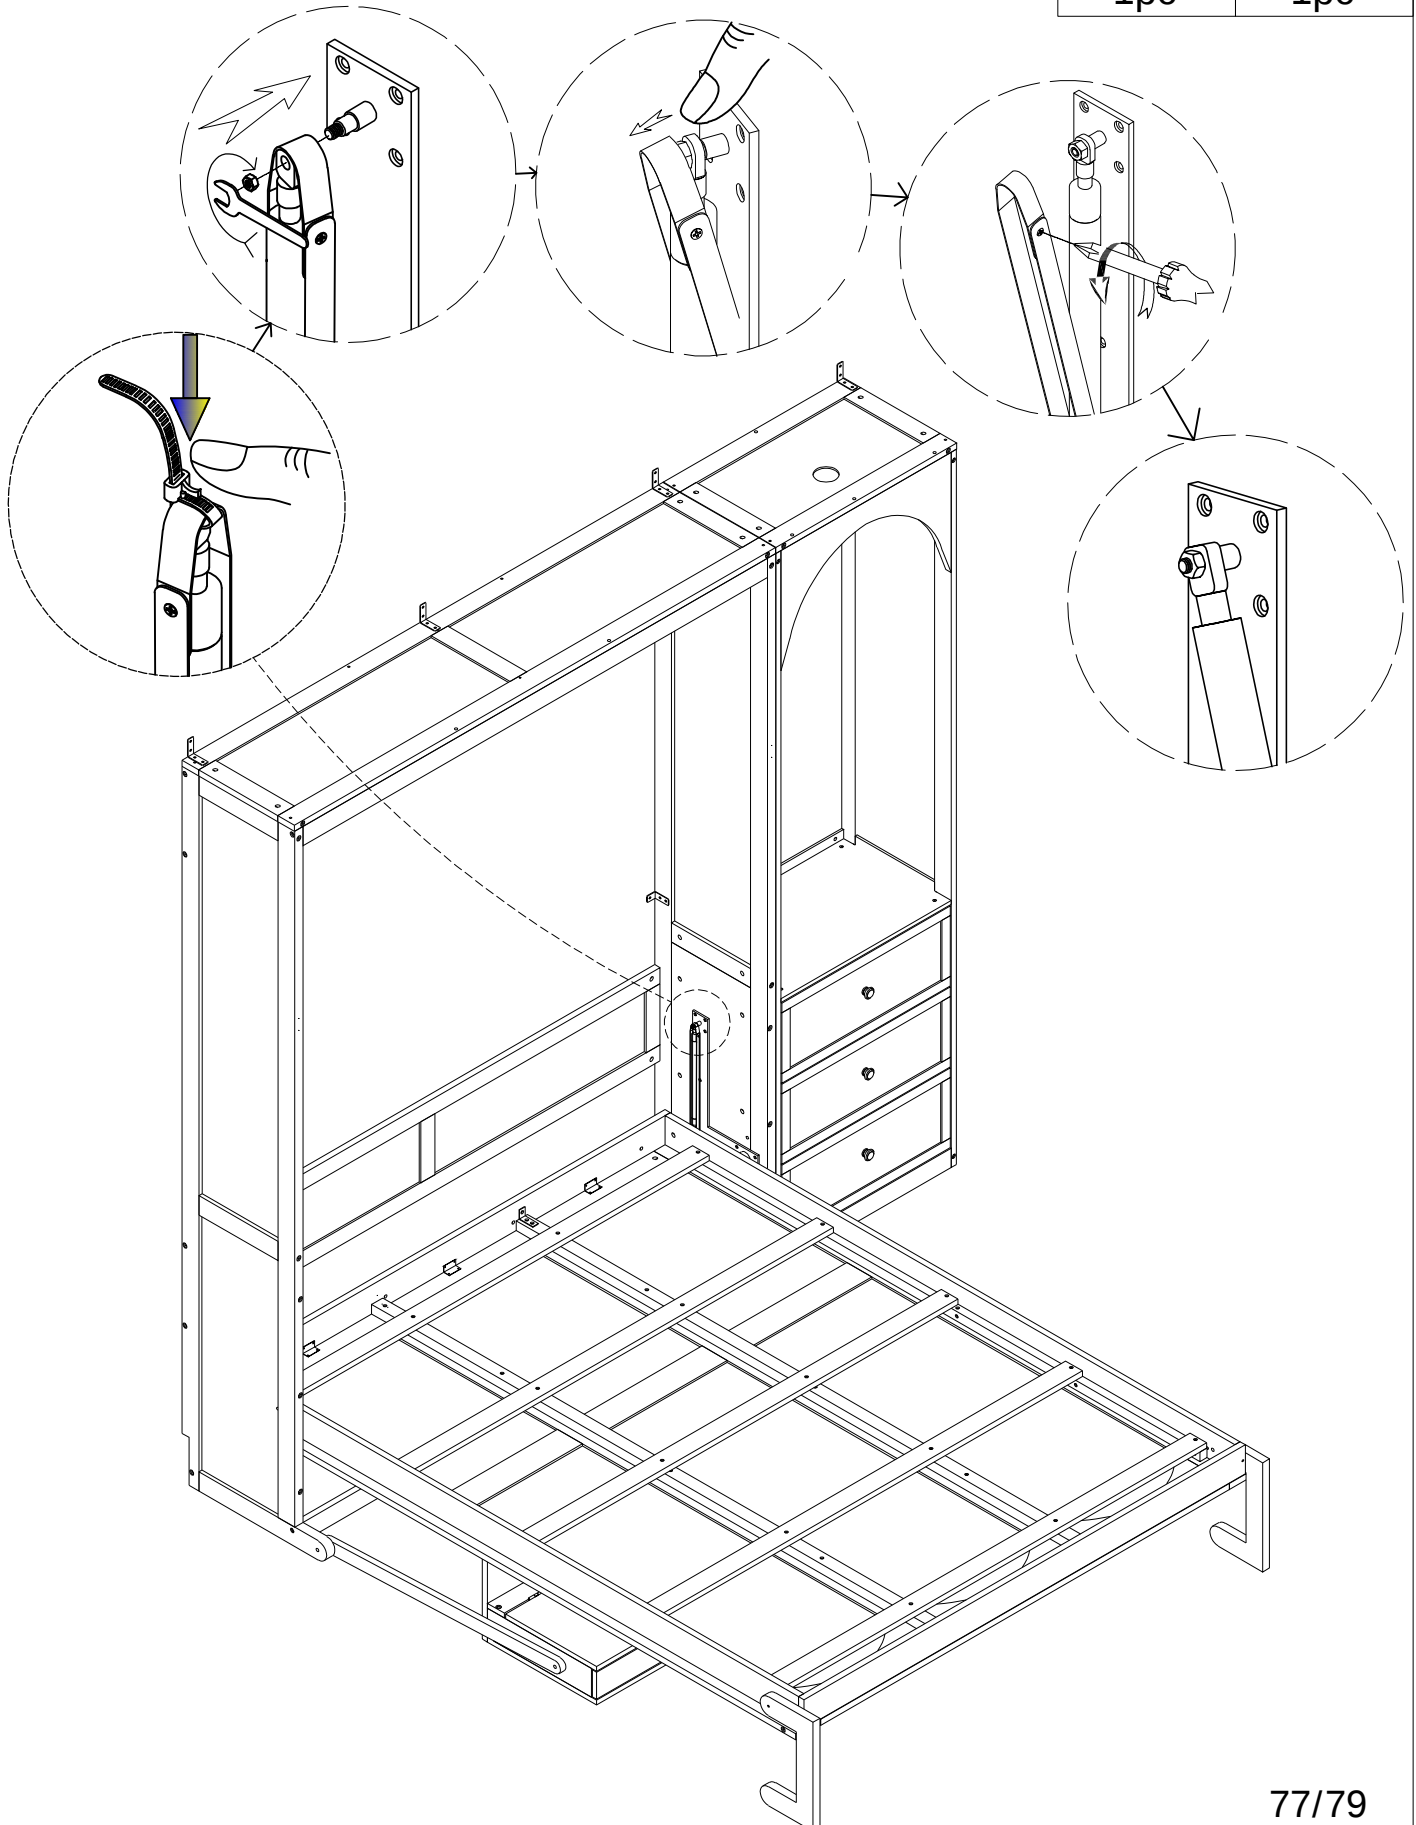

FINISH OPTION 1:
FINITION OPTION 1:

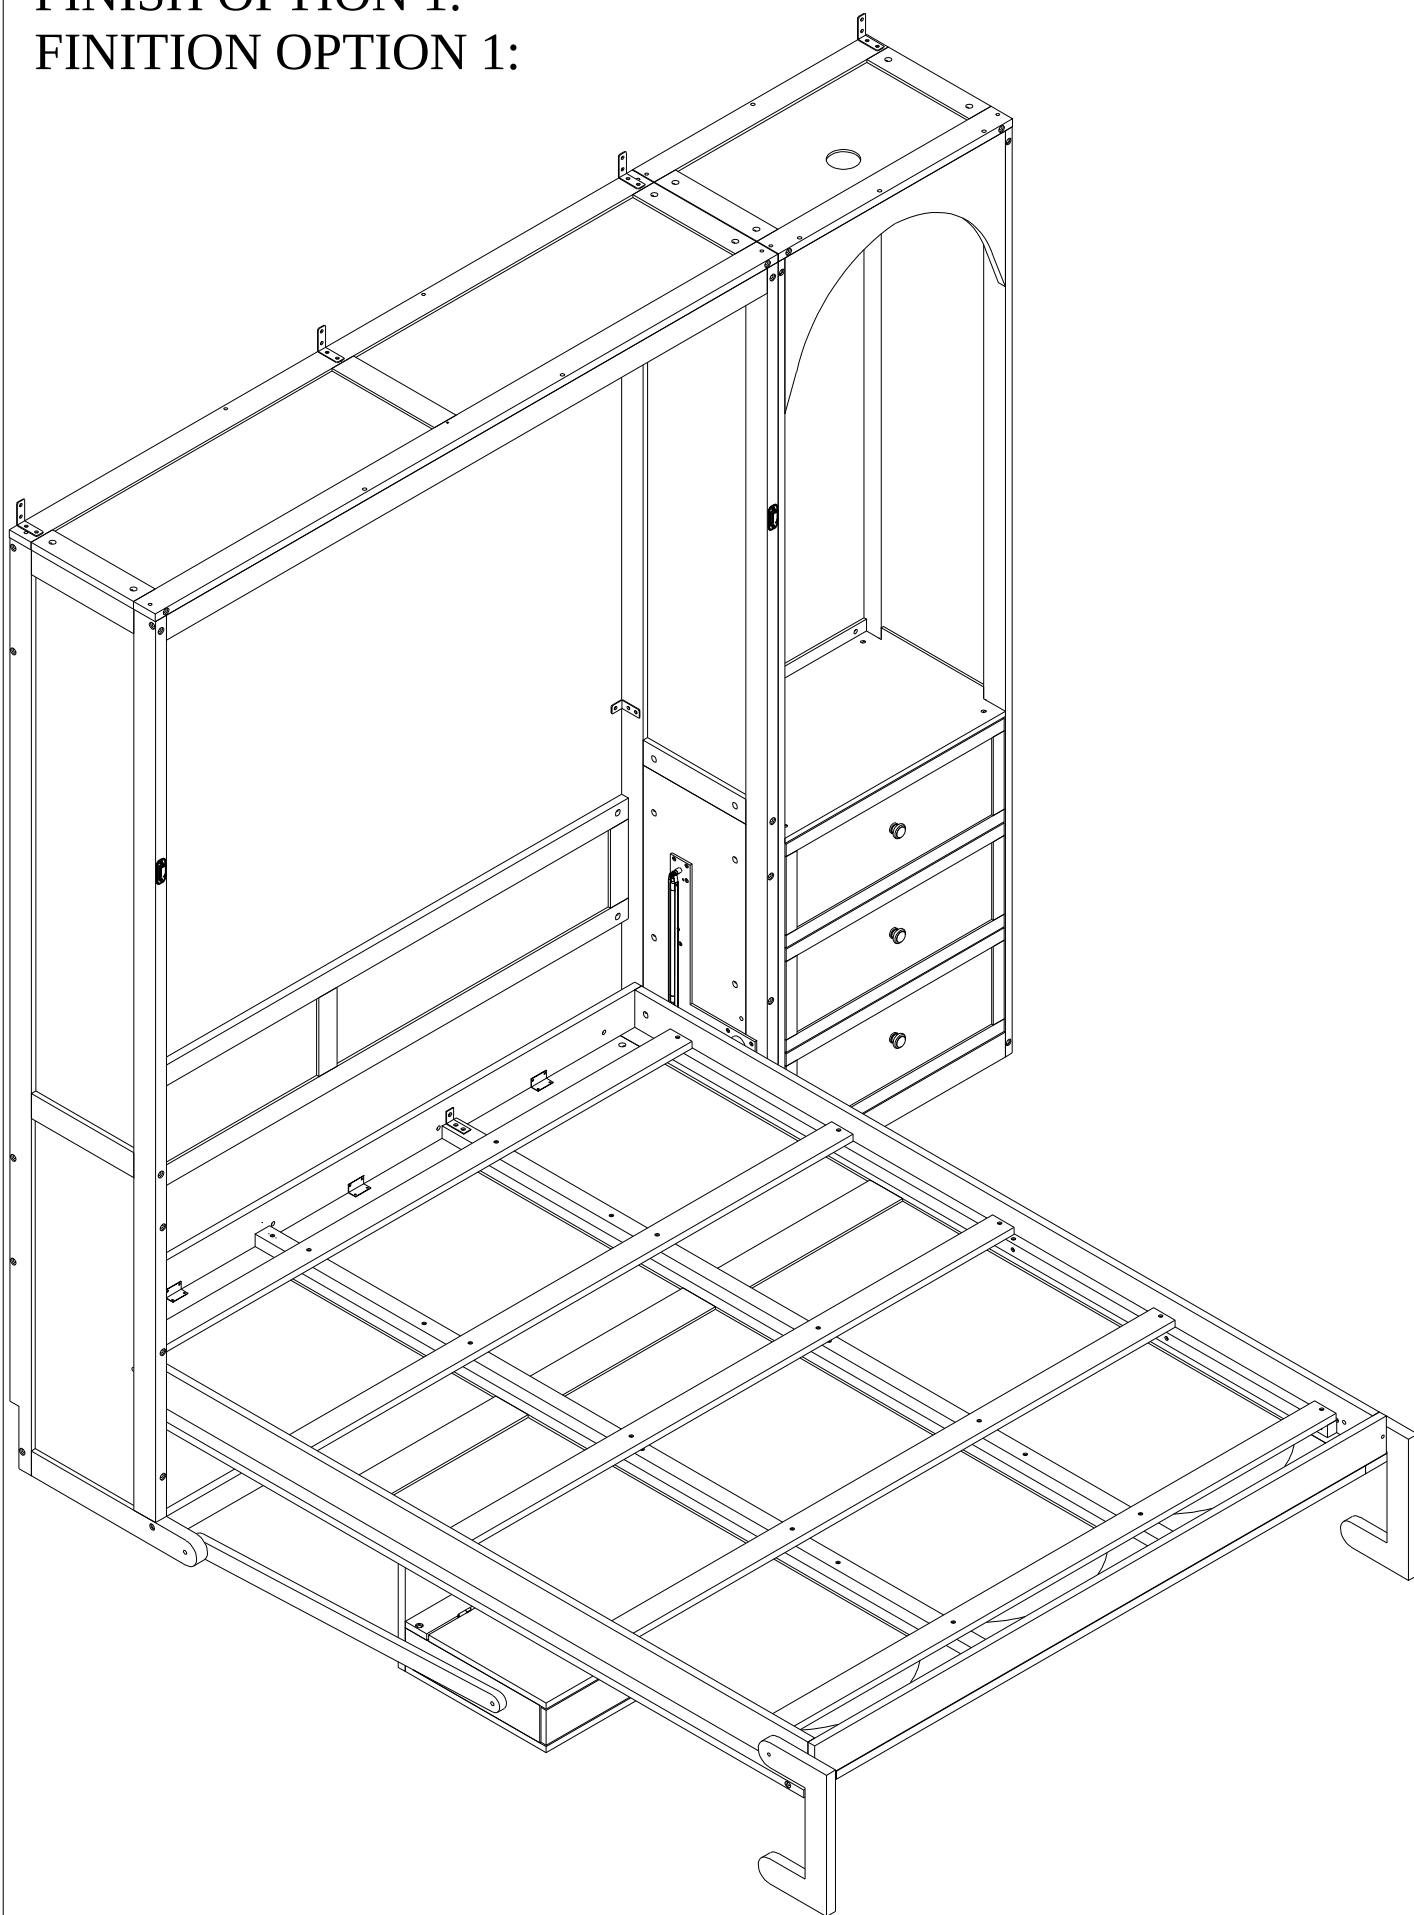

STEP-ÉTAPE-77 :

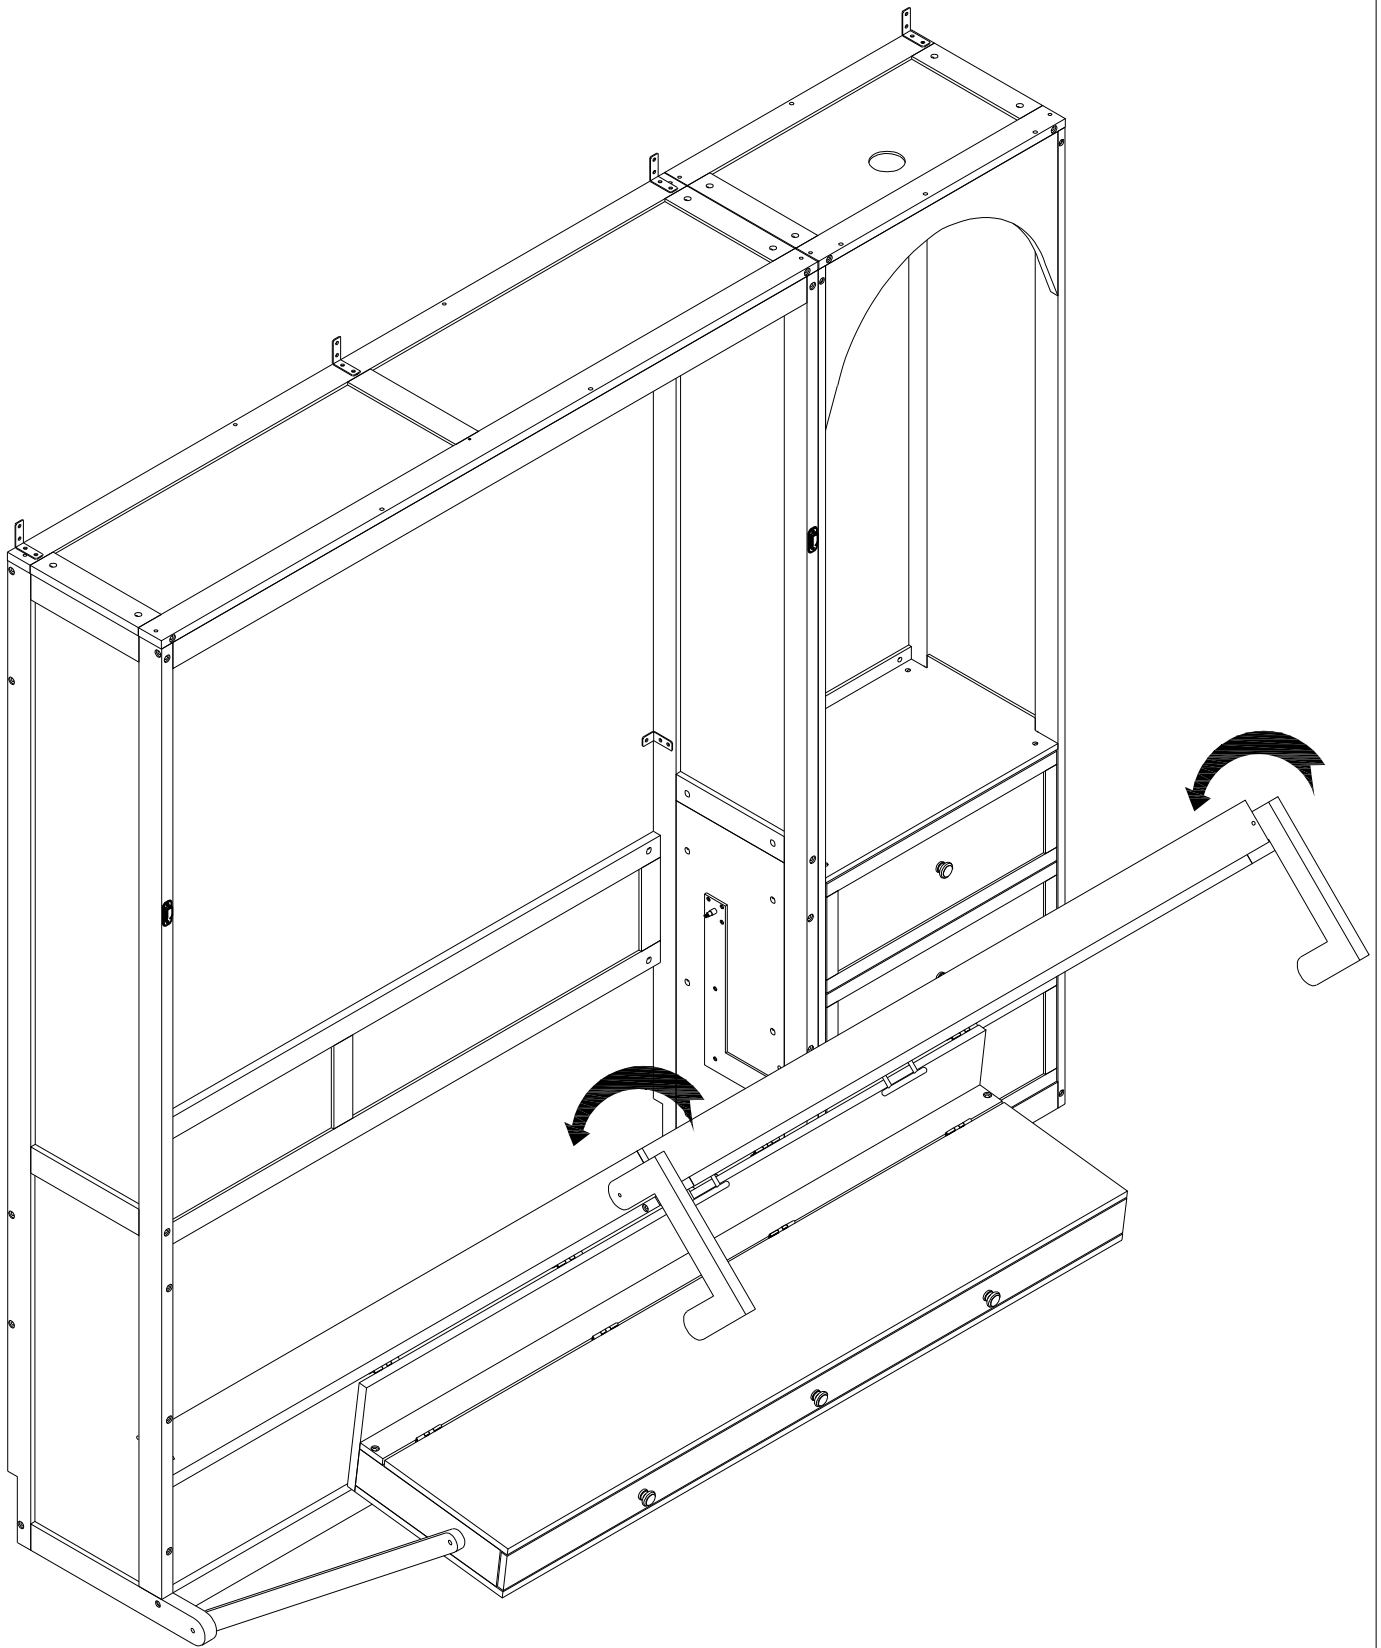

FINISH OPTION 2:
FINITION OPTION 2:

