


PRODUCT DRAWING

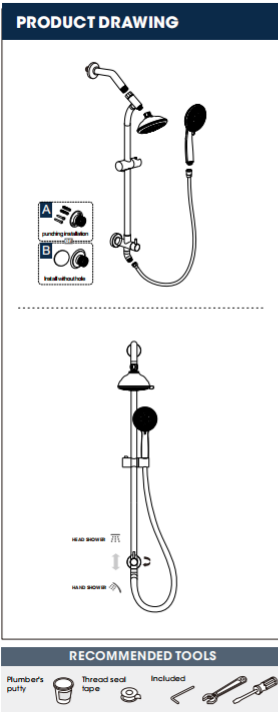

RECOMMENDED TOOLS

Plumber's putty Thread seal tape Included tools

INSTALLATION STEPS

BEFORE YOU BEGIN

MAIN WATER VALVE OFF

1. Remove the old showerhead by turning the nut counter-clockwise.
2. Mark the wall for the new showerhead installation.
3. Mount the showerhead bracket to the wall. **Correct installation:** (checkmark) **Incorrect installation:** (crosses)
4. **A PUNCHING INSTALLATION** OR **B INSTALL WITHOUT HOLE**.
 - A PUNCHING INSTALLATION:** Use a punch bit to create a hole in the wall. **do a vice rotation**.
 - B INSTALL WITHOUT HOLE:** Use a suction cup to attach the bracket to the wall.
5. Attach the showerhead to the bracket and adjust the height.

HANDHELD SHOWERHEAD & RAIN SHOWER COMBO
Installation instruction



Not include valve
MB / BN / BG / CH / ORB

CARE INSTRUCTIONS
Rinse the product with clear water. Dry the product with a soft cloth.

DO NOT:
Use abrasive cleansers, cloths, or paper towels. Use any cleaning agents containing acids, polish, wax, alcohol, ammonia, bleach, solvent or any other corrosive or harsh chemical cleansers.