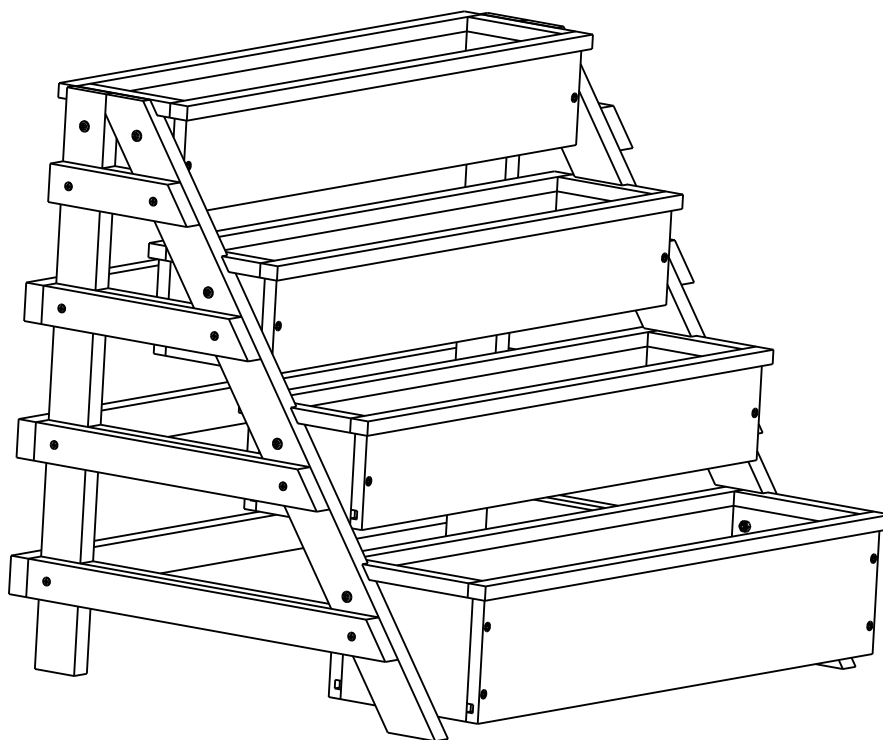


Installation & Assembly



12
STEPS


1 HR



Tools Recommended

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.











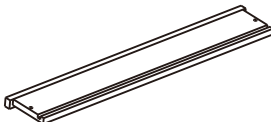
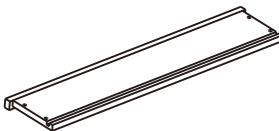
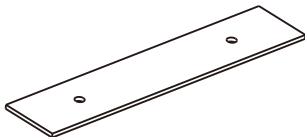
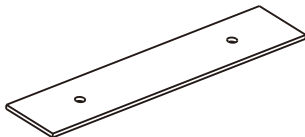

FR_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION ULTÉRIEURE.





ES_IMPORTANTE, LEA Y GUARDE PARA FUTURAS REFERENCIAS.


PT_IMPORTANTE, RETER PARA REFERÊNCIA FUTURA: LEIA ATENTAMENTE.

DE_WICHTIG! SORFGFÄLTIG LESEN UND FÜR SPÄTERES NACHSCHLAGEN AUFBEWAHREN.

IT_IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E LEGGERLO ATTENTAMENTE.


 A x03	 B1 x01	 B2 x01	
 B3 x01	 B4 x01	 B5 x01	
 B6 x01	 C1 x01	 C2 x01	
 C3 x01	 C4 x01	 C5 x01	
 C6 x01	 D x06	 E x02	
 F x03	 G x01	 H x01	
 I x01	 J x01	 K x01	
 L x01	 M x01	 N x01	 P x01

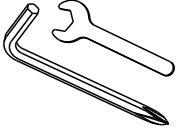Q x10 M6*45 +1(spare) 	R x20 M7*40 +1(spare) 	S x22 M4*30 +1(spare) 	T x03 
U x01 	V x44 	W x10 M6 +1(spare) 	Y x01 M4 

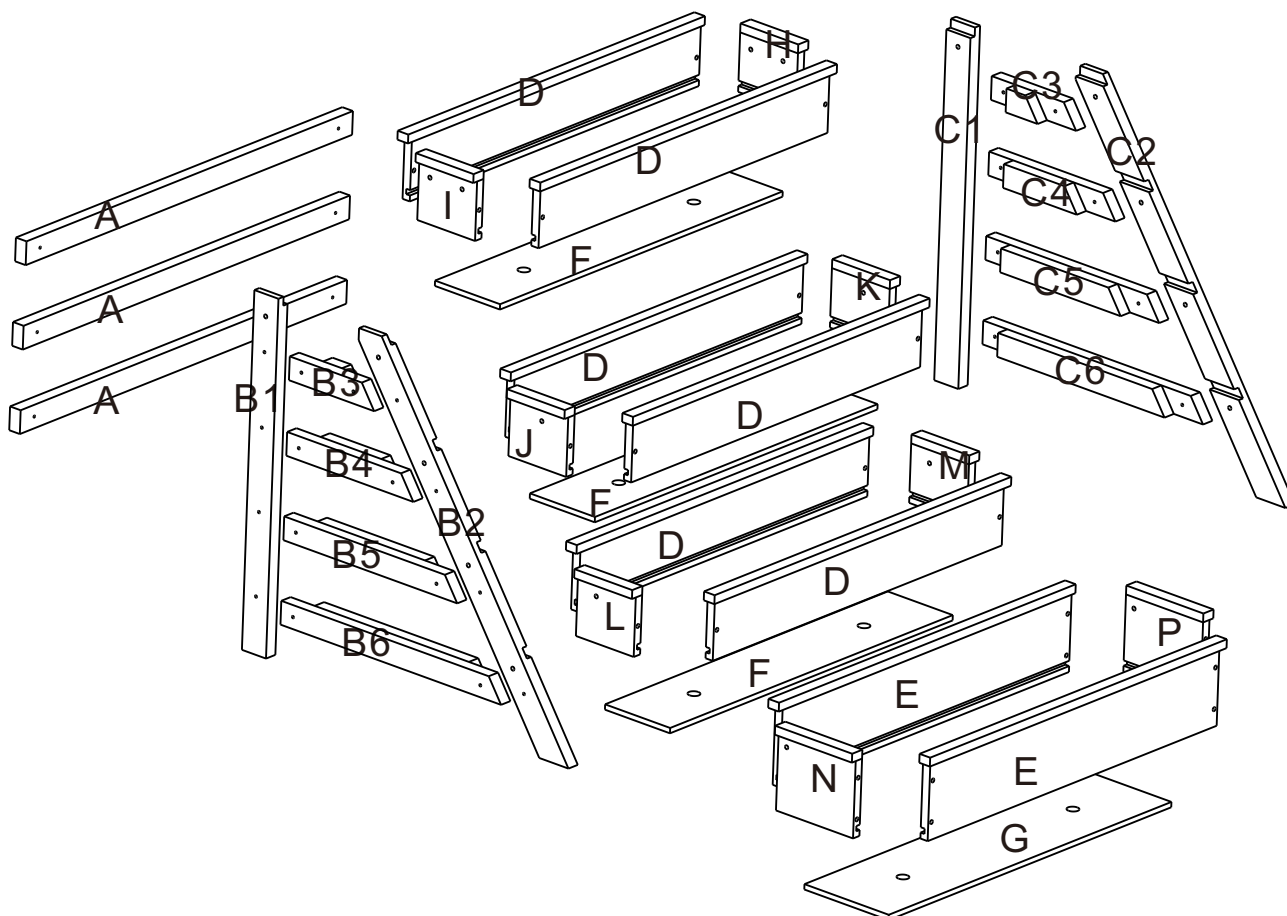


S x08
M4*30

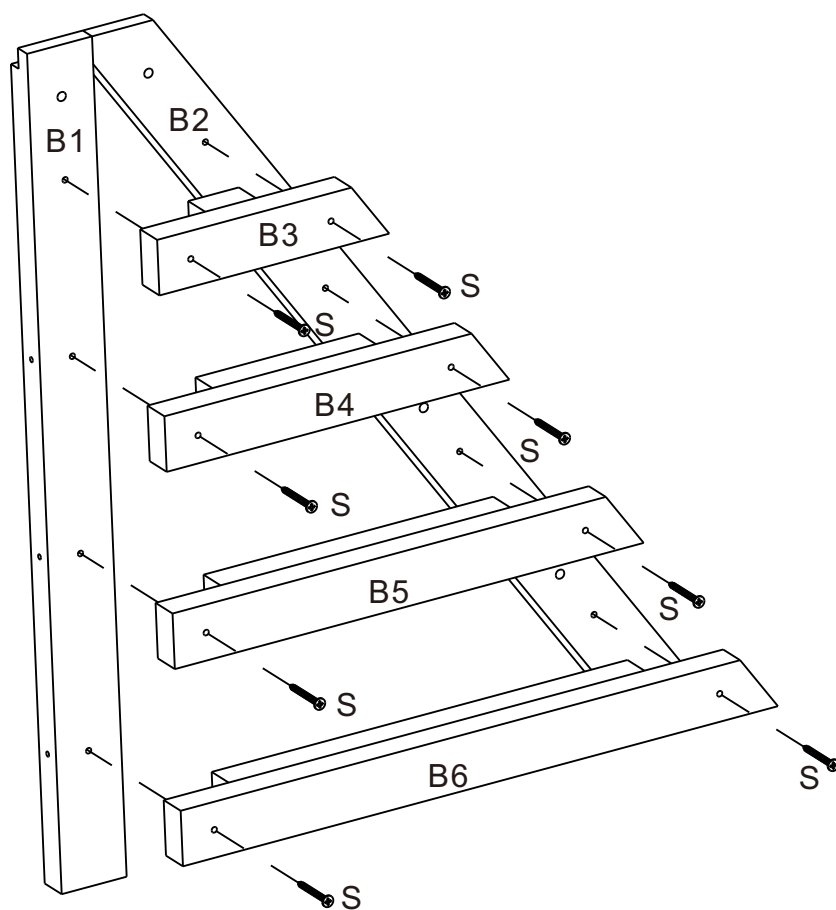01




S x08
M4*30

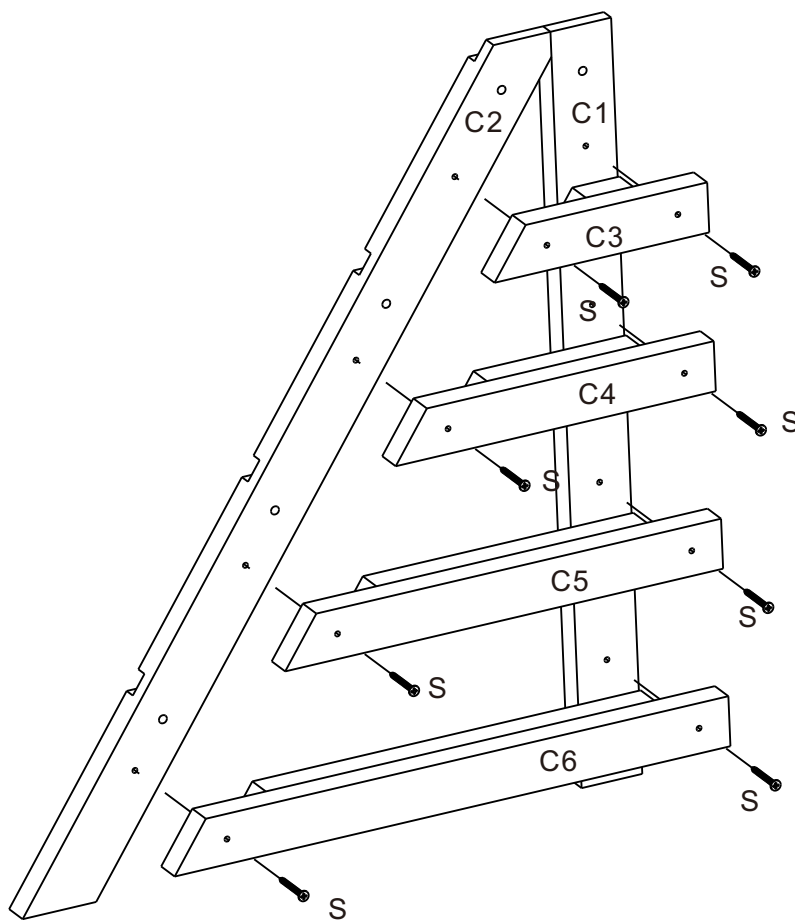02




R x10
M7*40

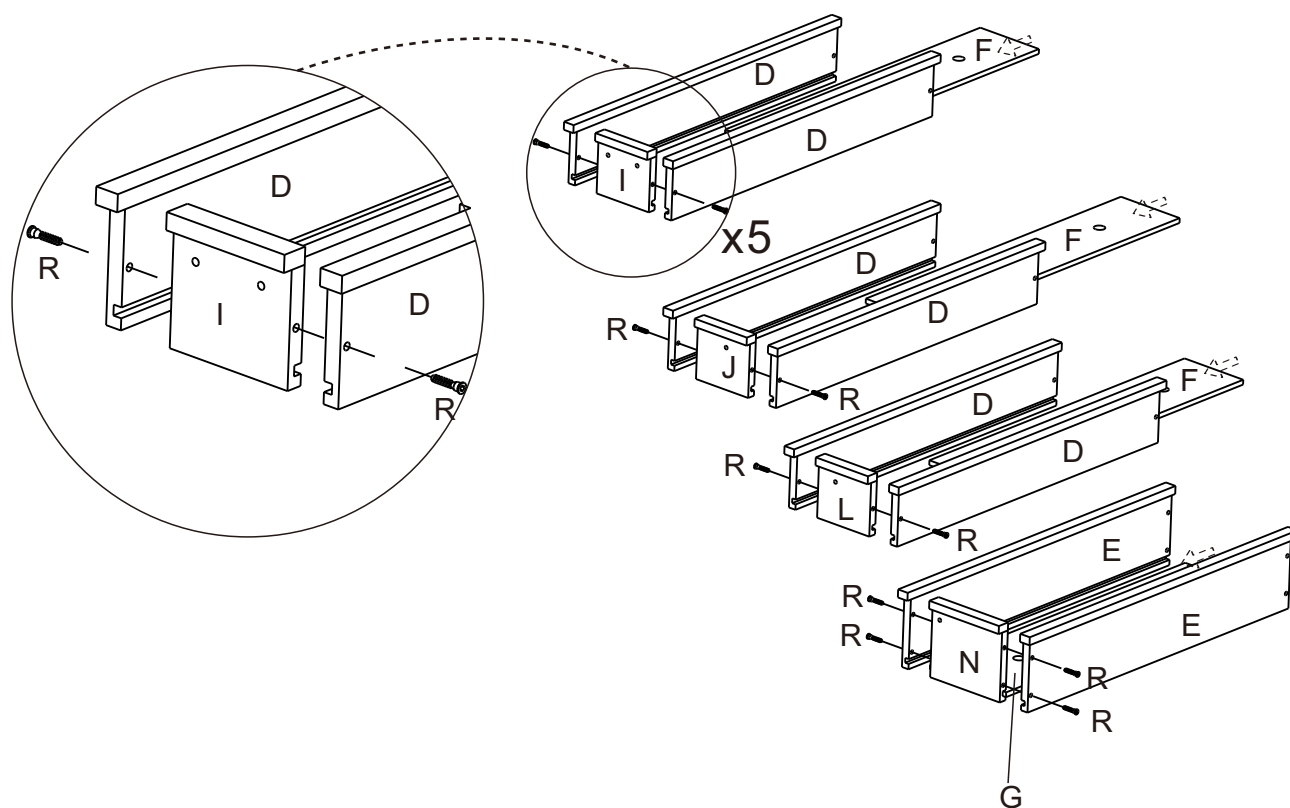03




R x10
M7*40

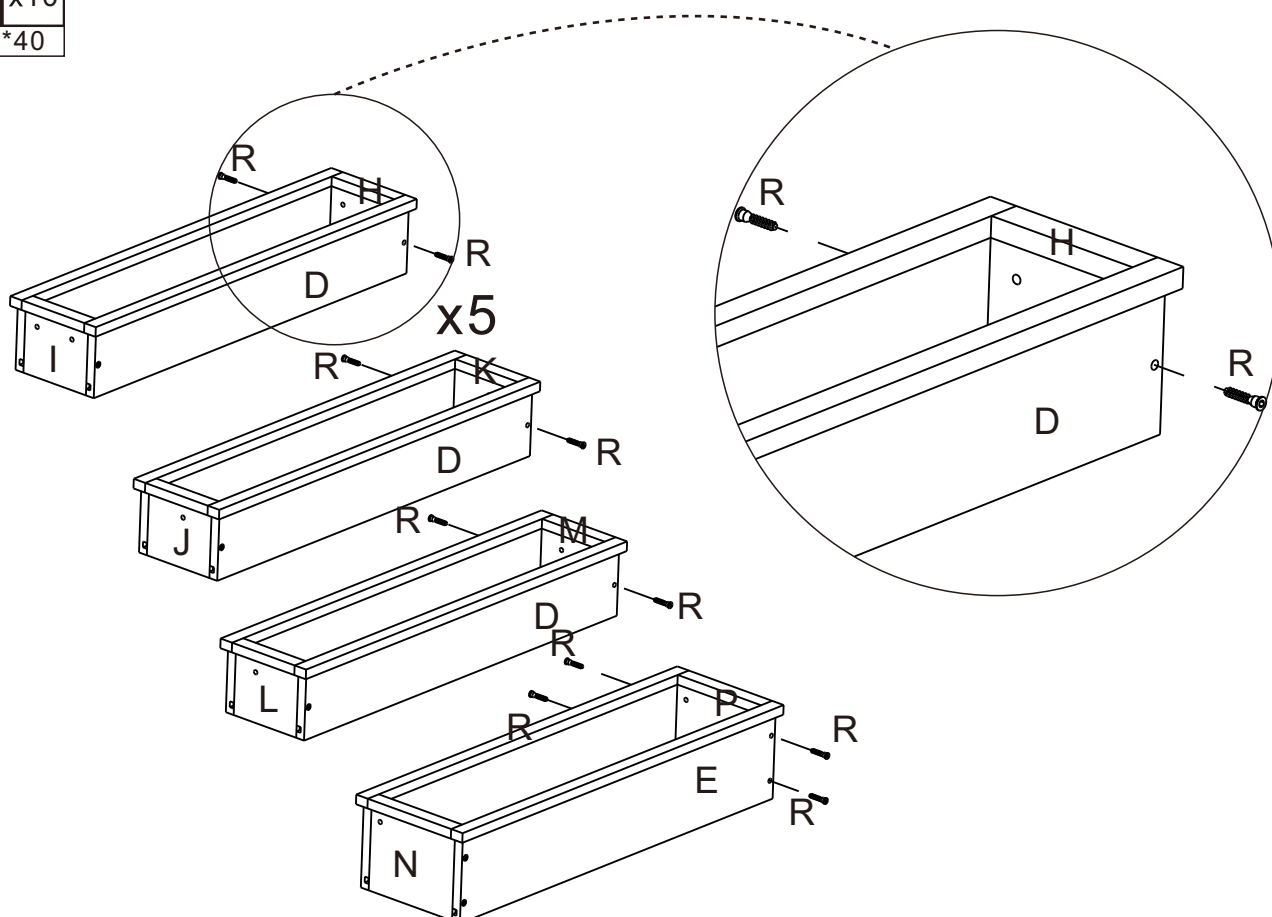04




Q x05
M6*45

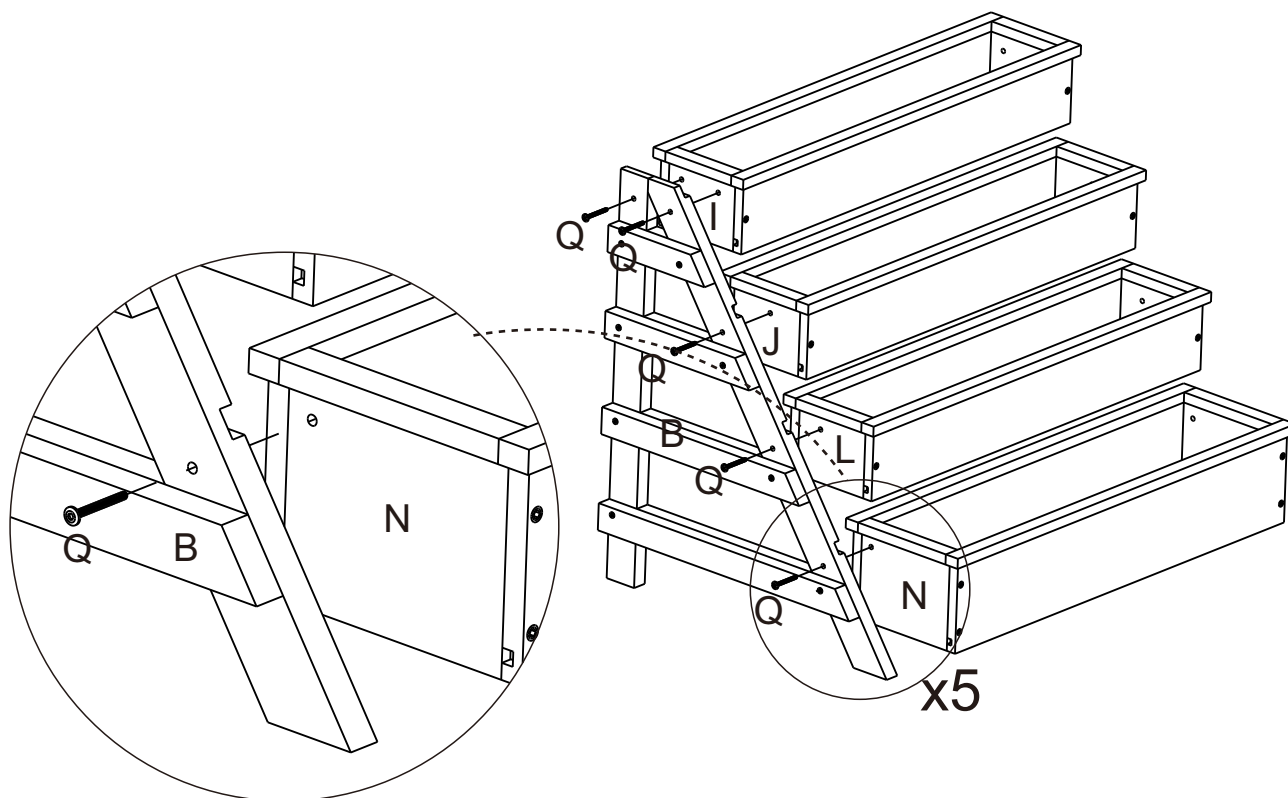05




W x05
M6

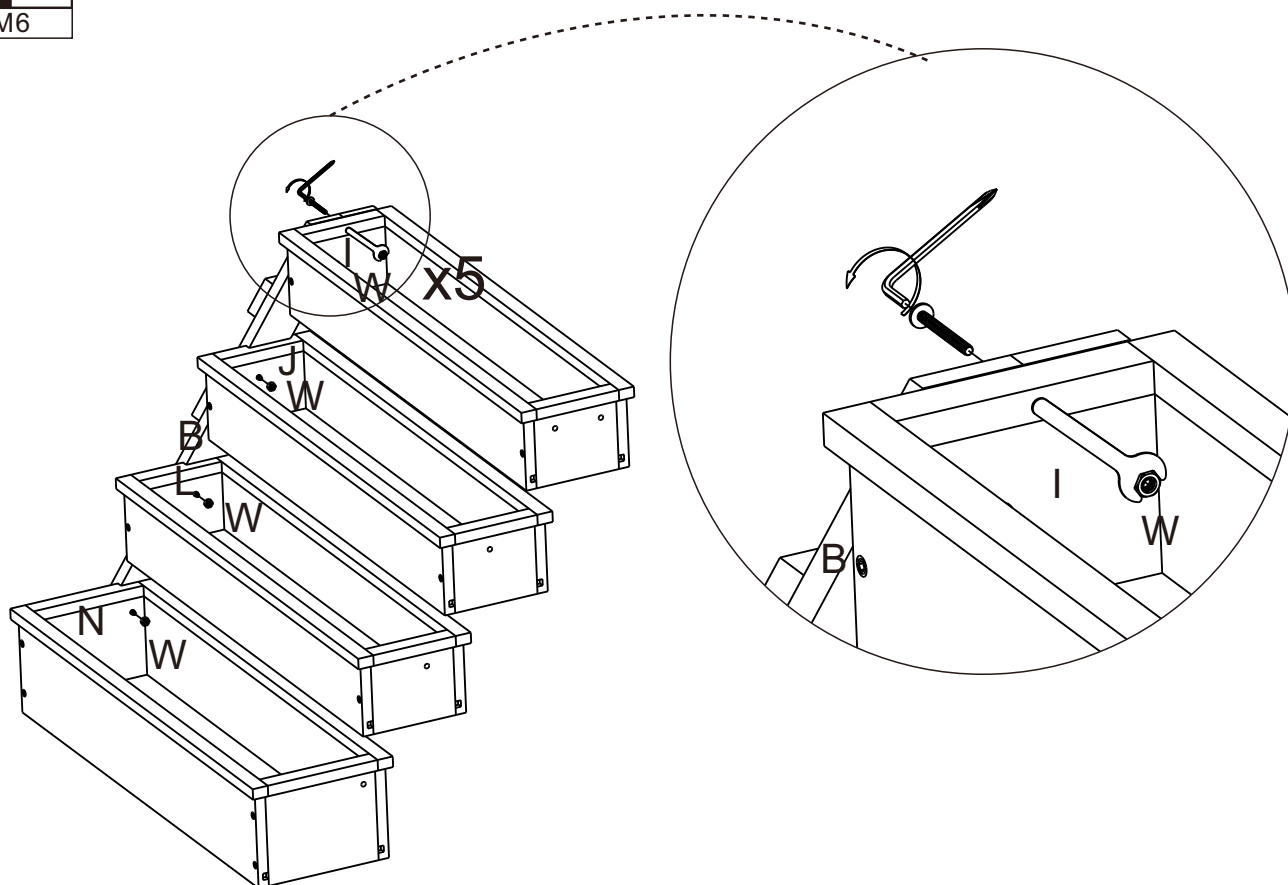
06



M6*45

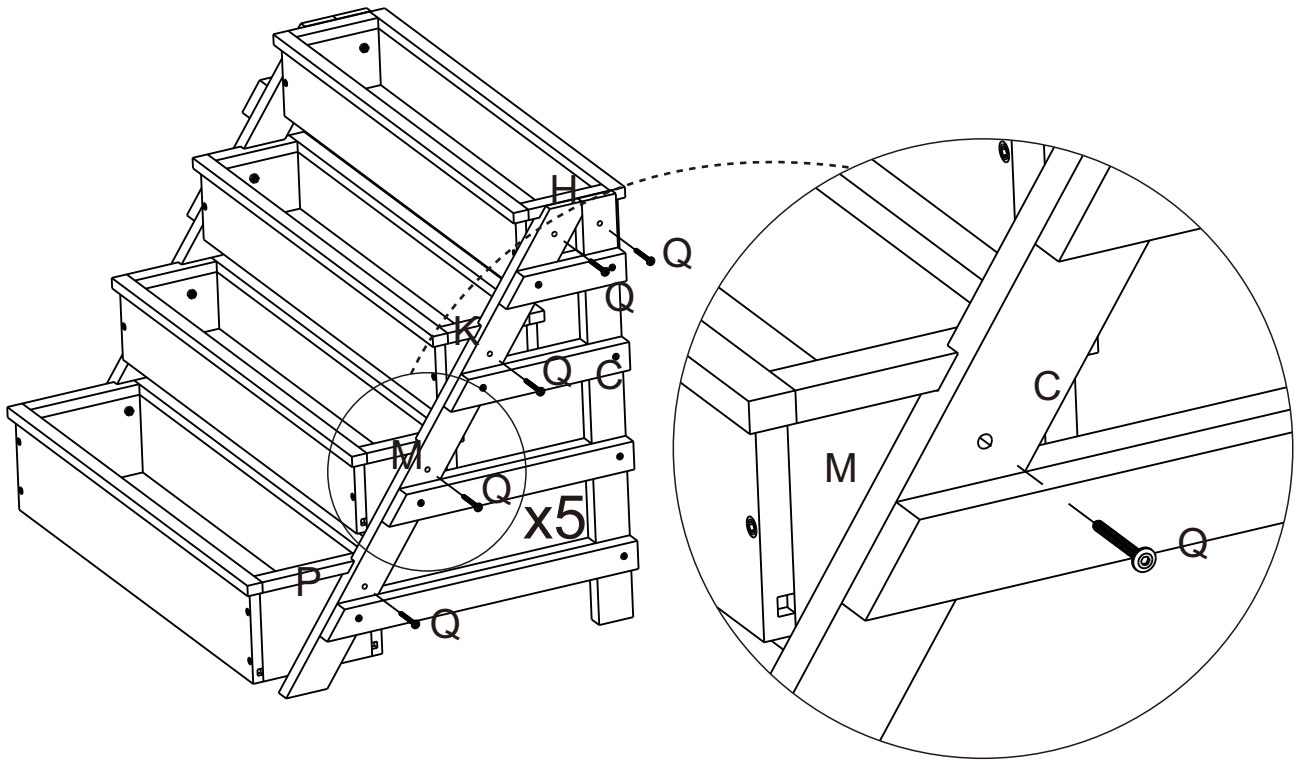


M6

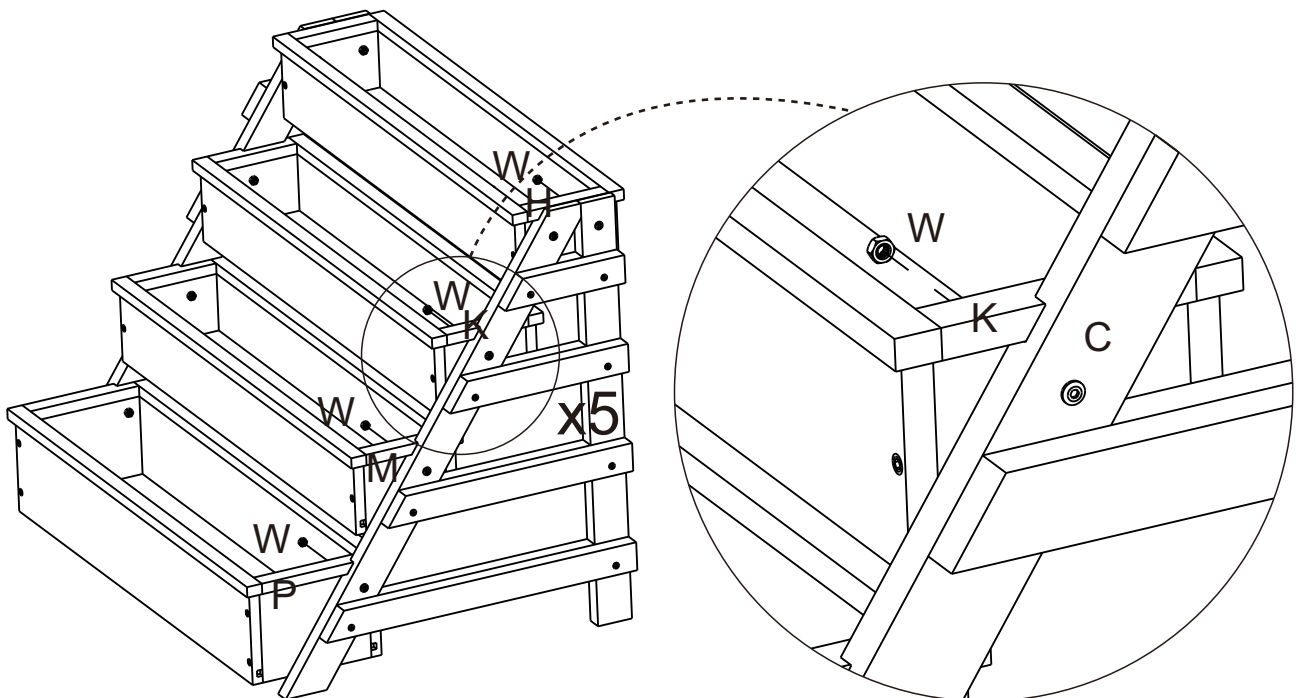

S x06
M4*30

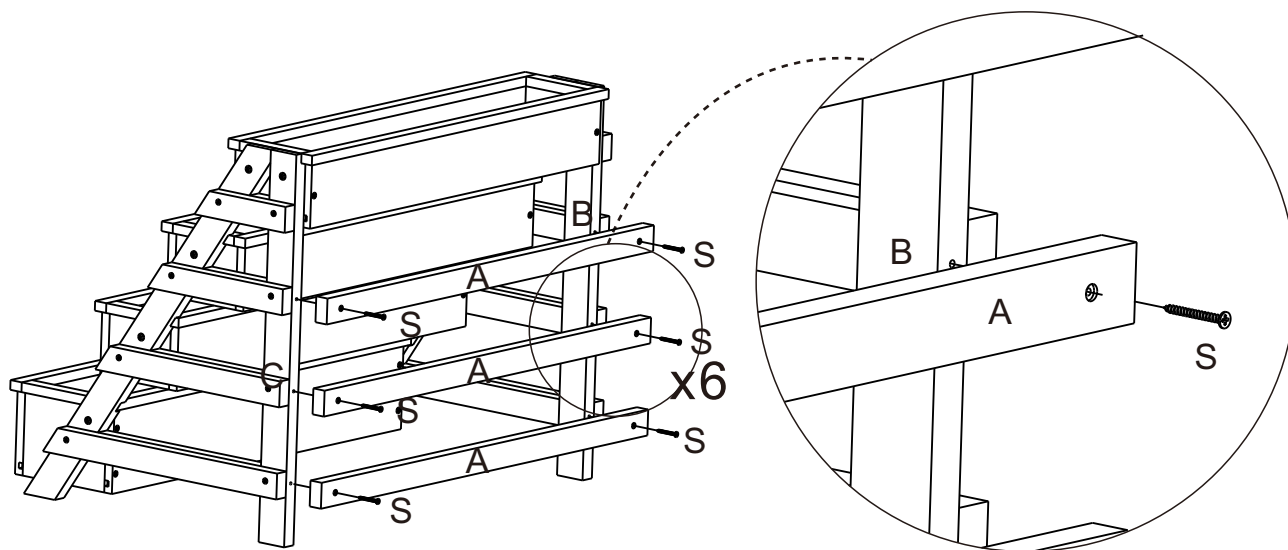09



T x03

U x01

10

