

RAYNE 

RAYNE 

You may contact us with any questions by e-mail at:

[\*\*ORDERS@RAYNEMIRRORS.COM\*\*](mailto:ORDERS@RAYNEMIRRORS.COM)

WINONA, MISSOURI

(573)325-1344




WINONA, MISSOURI

(573)325-1344

# YOUR HARDWARE KIT WILL CONTAIN

## 4 X LAG BOLTS

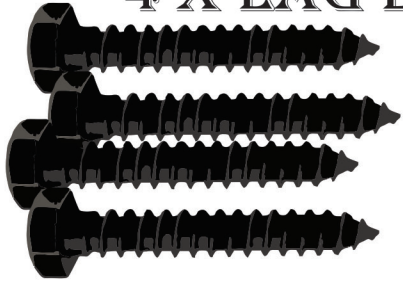

## 4 X MACHINE SCREWS



## 4 X HOLLOW WALL ANCHORS



## TOOLS


- \* LEVEL
- \* STUD FINDER
- \* PENCIL
- \* TAPE MEASURE
- \* 7/16" WRENCH
- \* DRILL



INSERT THE ANCHOR AND TIGHTEN THE SET SCREW WITH A #2 PHILLIPS UNTIL YOU FEEL IT BECOME SNUG. BE CAREFUL NOT TO OVER TIGHTEN. BACK OUT 1/8".

YOU MAY USE A COMBINATION OF ANY 2 INCLUDED FASTENERS, HOWEVER LAG BOLT DIRECTLY INTO STUD IS THE PREFERRED METHOD.

- DRAW LEVEL LINE
- DECIDE & MARK CORBEL LOCATION
- CUT OUT TEMPLATE AND APPLY TO THE WALL AT DESIRED CORBEL LOCATION
- MARK FASTENER LOCATION\* (POKE THROUGH THE TEMPLATE)
- INSTALL REQUIRED FASTENER FOR YOUR APPLICATION INTO THE WALL
- YOU WILL NEED TO LEAVE APPROX. 1/8" OF THREAD EXPOSED
- MOUNT CORBELS, IF NEED ADJUST FASTENER DEPTH
- INSTALL SHELF INTO DESIRED LOCATION

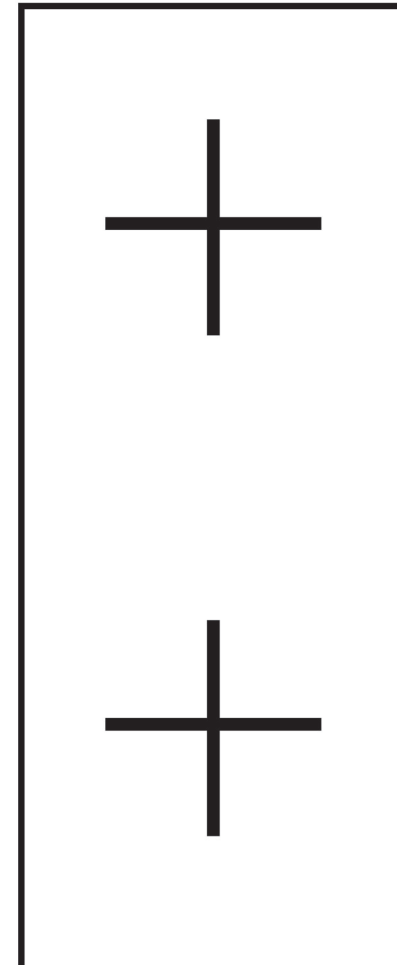

TEMPLATE