



Room to grow.

Manual for Modular Compost Bin

90"L x 30"W x 32"H

Copyright © 2024 Vego



Contact Us

 +1 (866) 597-1888


 Vego Garden Academy

 hello@vegogarden.com




 vegogarden.com

 vego_garden

 Houston, TX

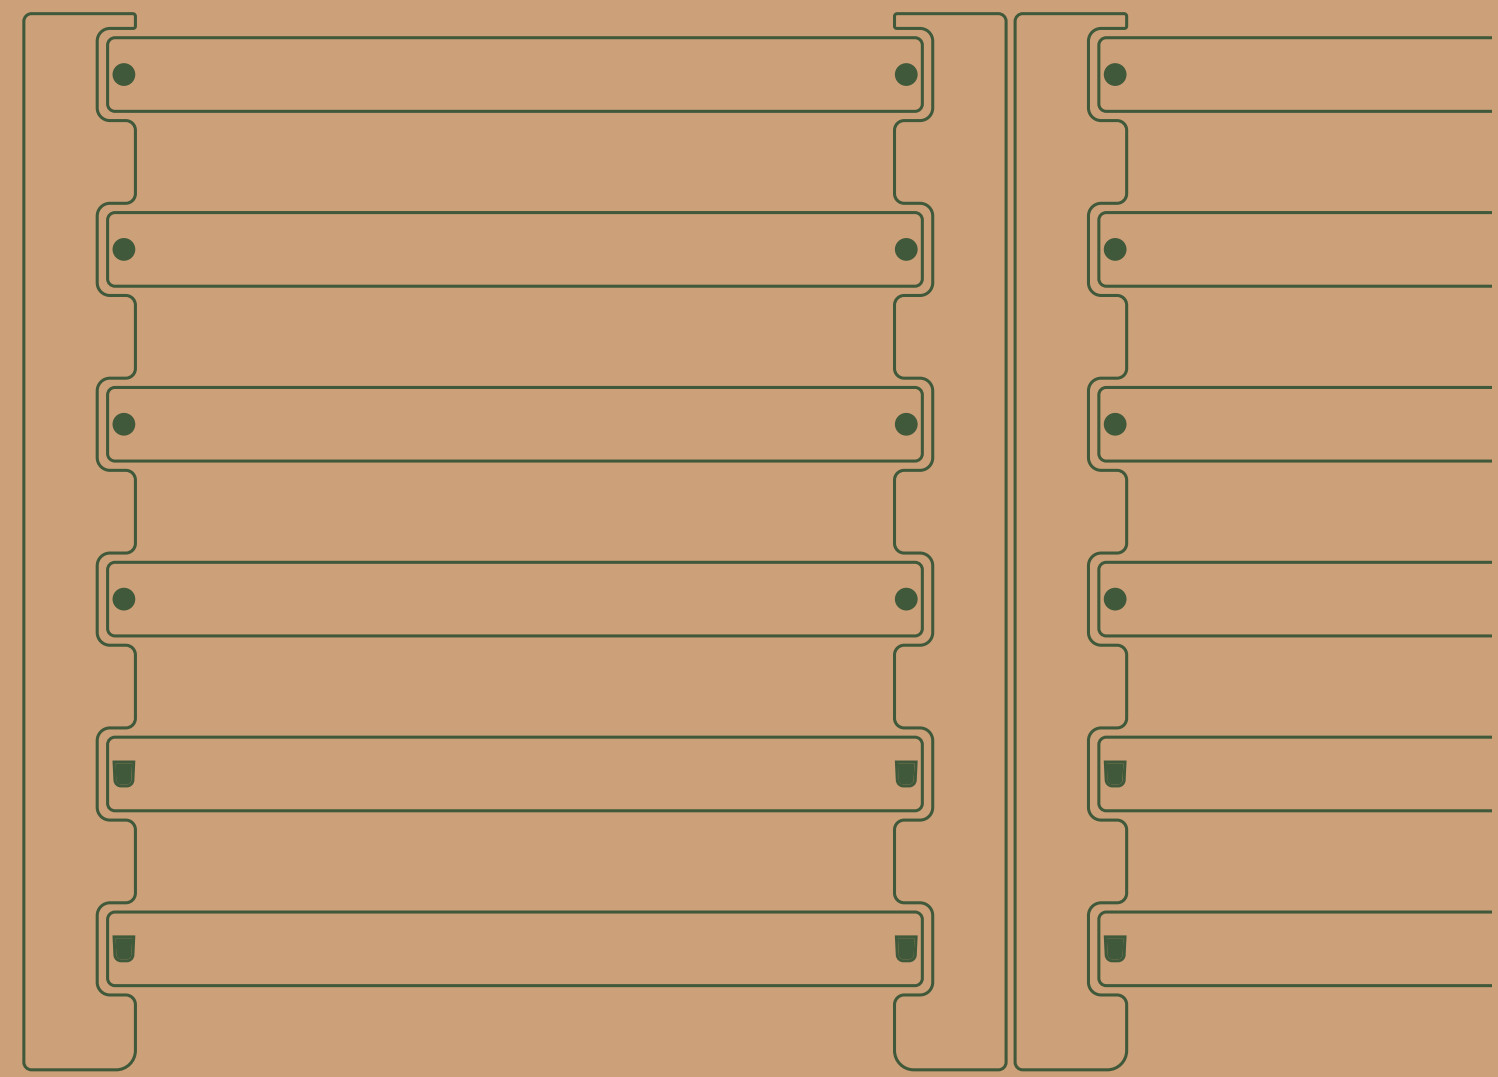


Parts List

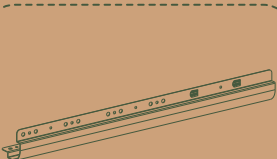			
A1 Qty: 12	B1 Qty: 40	C1 Qty: 20	F1A Qty: 104
			
F1B Qty: 80	F1C Qty: 12	Aluminum Logo Qty: 1	
		LWA Qty: 1	LWB Qty: 1

Assembly Guide


1 Connect A1 with four B1 pieces , and secure them in place with F1A and F1B.

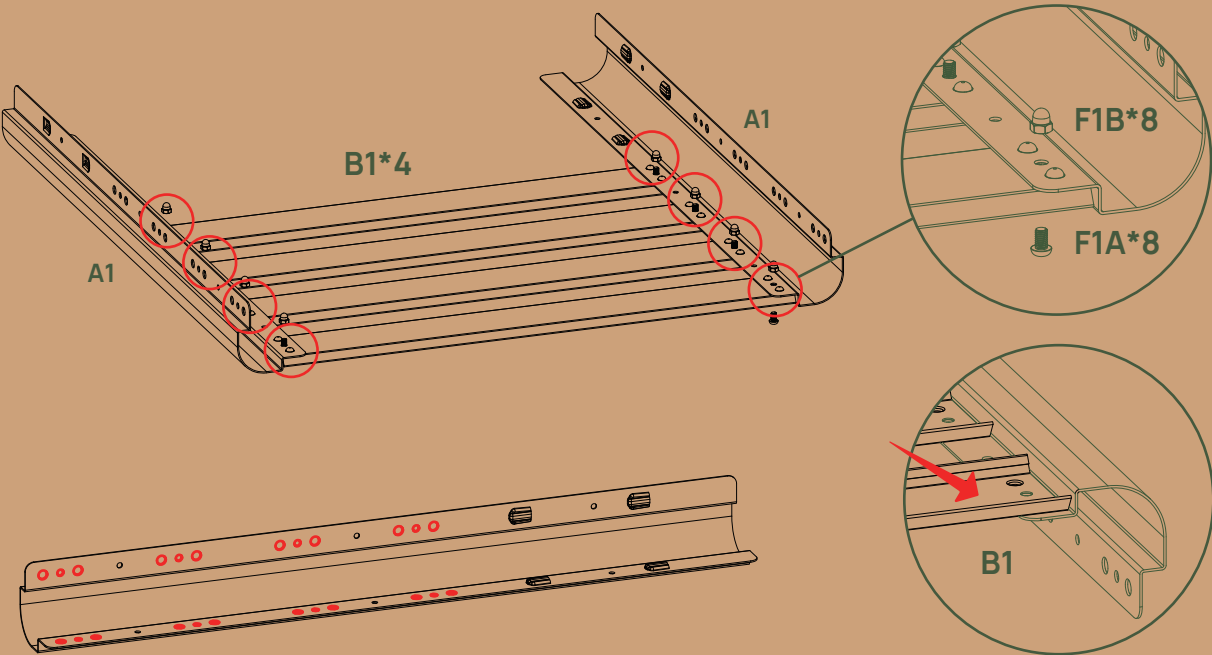


Install the slats in the areas marked in red.

Note: This side of the B1 should be facing outwards.


2 Connect the section completed in Step 1 with four B1 pieces on each side. Secure in place with F1A and F1B.

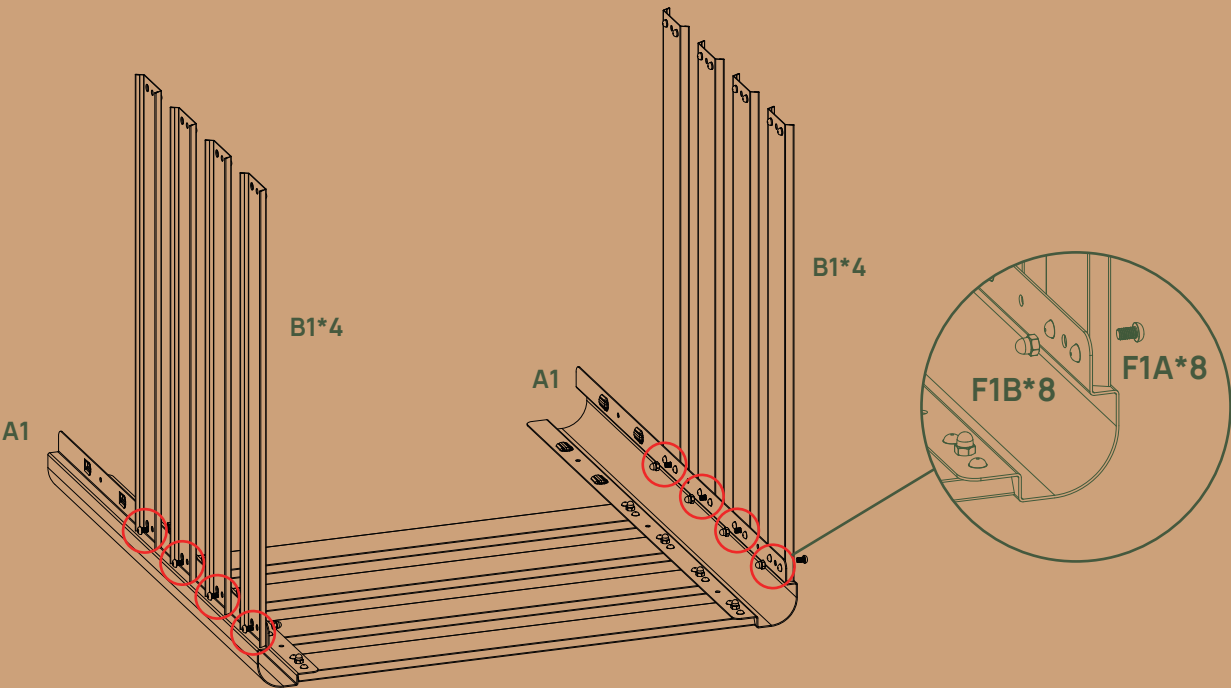


3 Connect A1 with the section completed in Step 2, and secure in place with F1A and F1B.

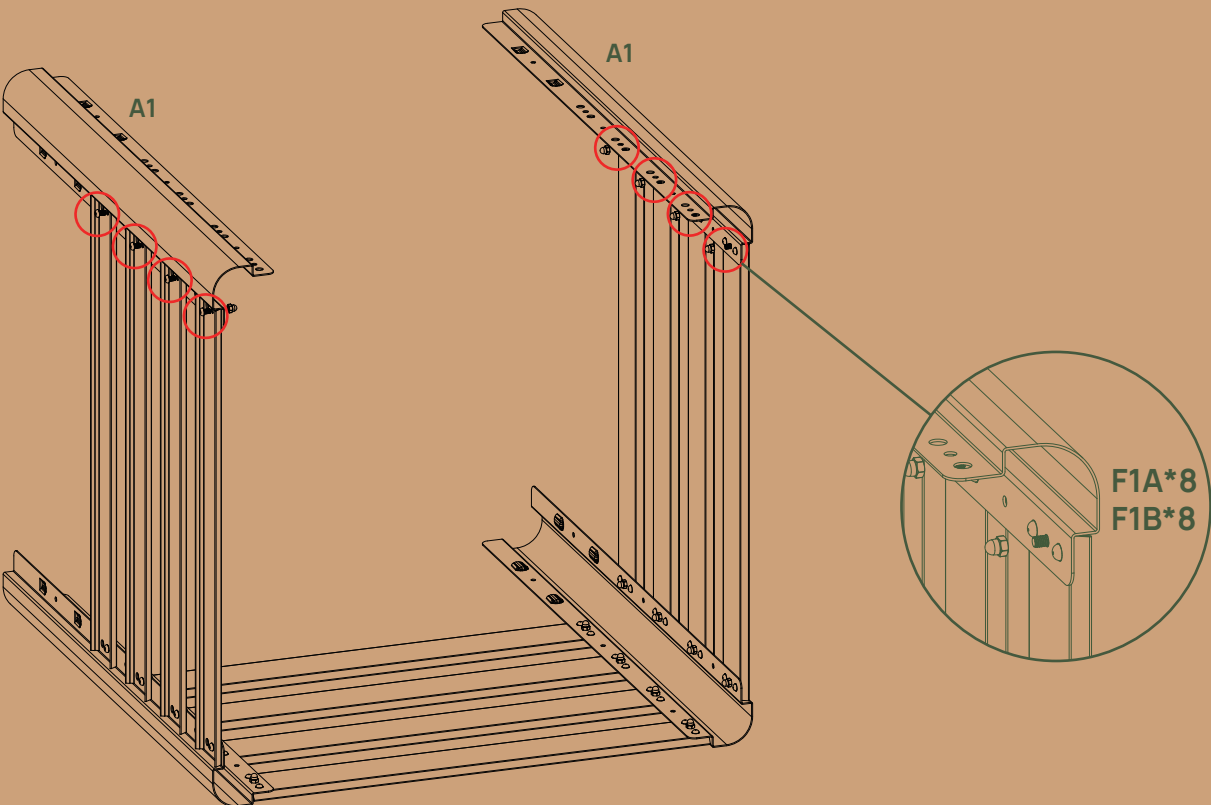


- 4** Connect the section completed in Step 3 with four B1*4 pieces. Secure in place with F1A and F1B.

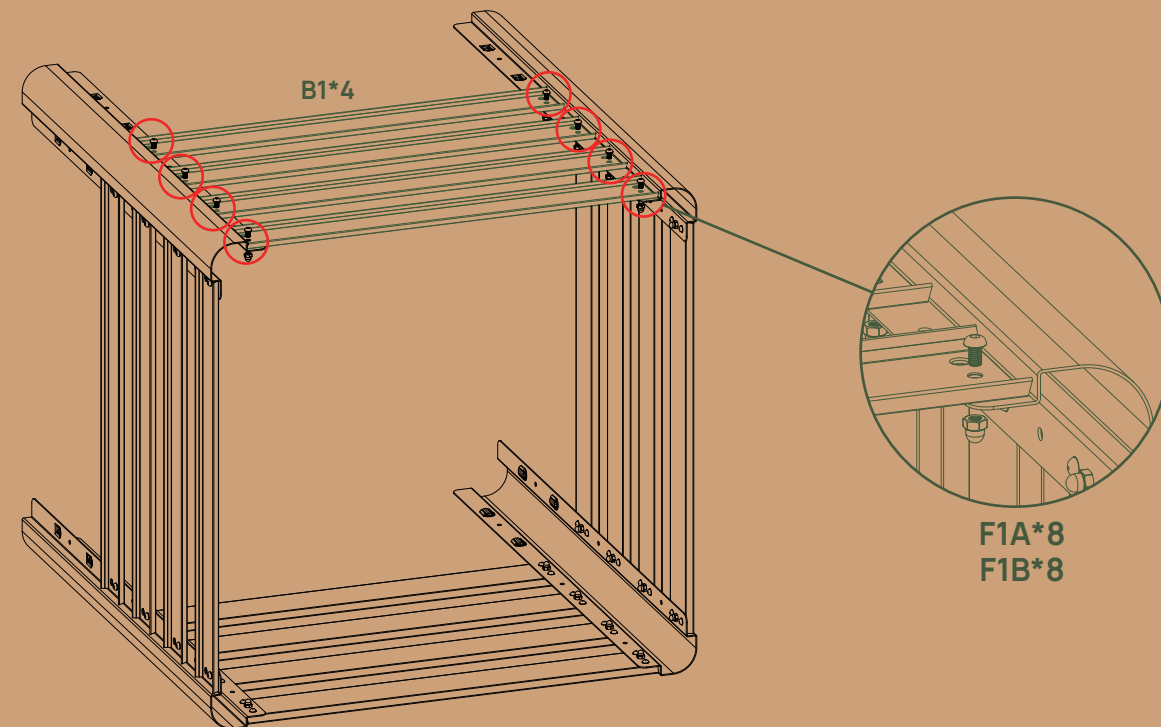


- 5** Insert C1 into the section completed in Step 4.

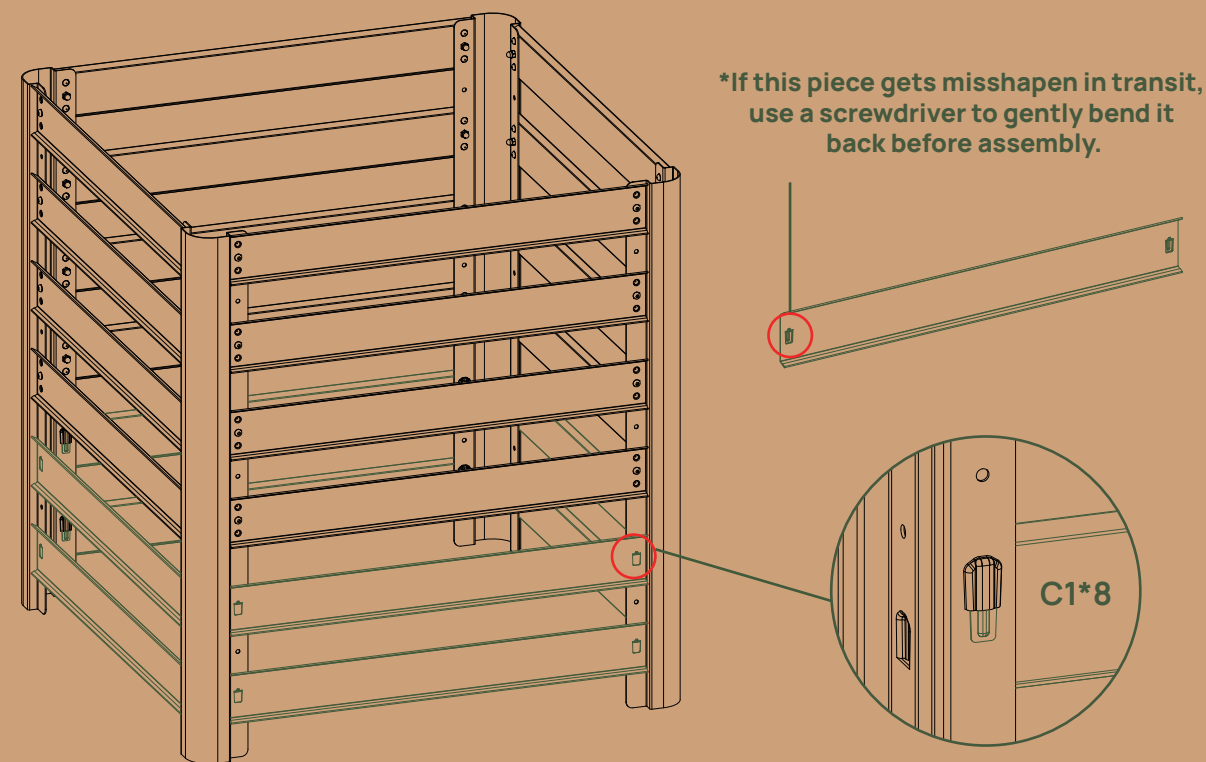


- 6** Repeat steps 1, 2, and 3.

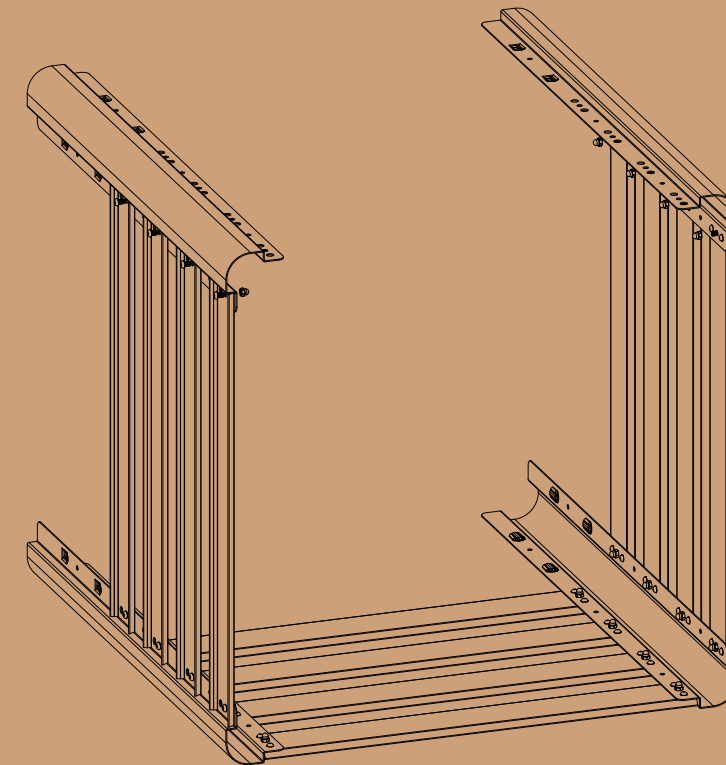


- 7** Connect F1C with the section completed in Step 6, and secure in place with F1A.

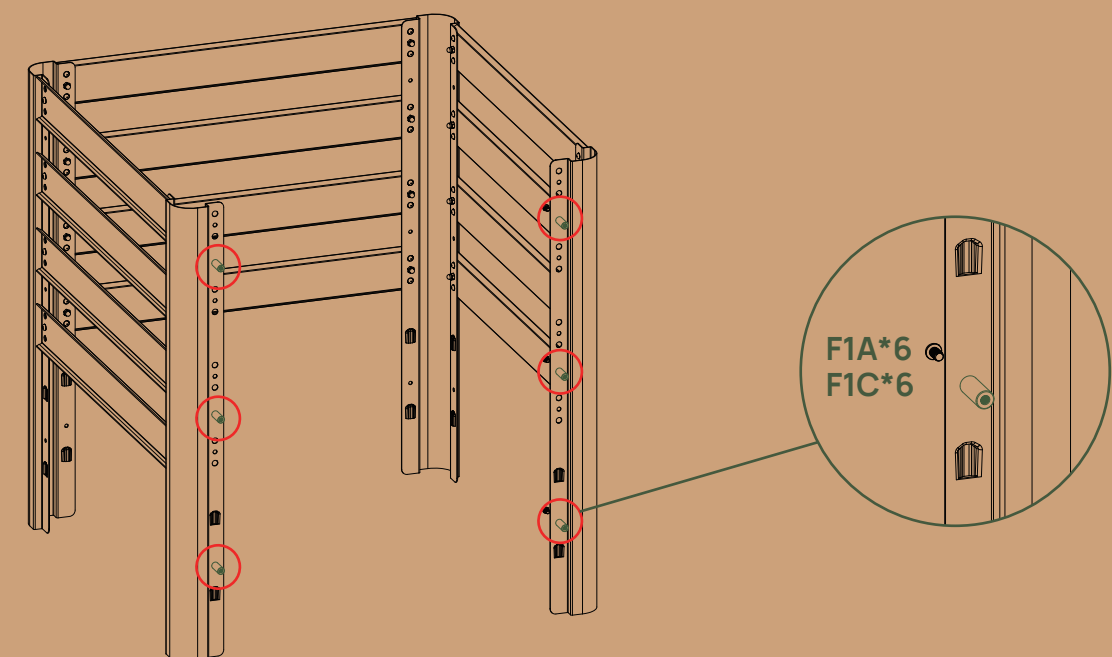


- 8** Connect the sections completed in Step 5 and Step 7 together, and secure in place with F1A.

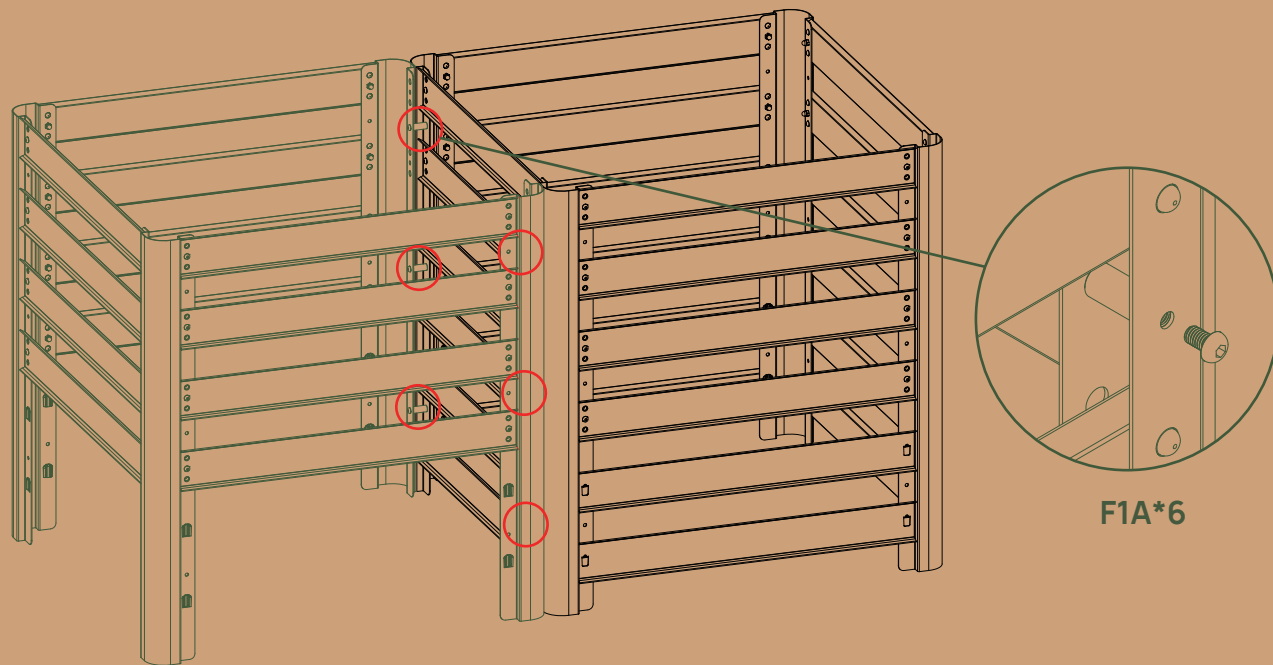


- 9** Insert C1 into the section completed in Step 8.

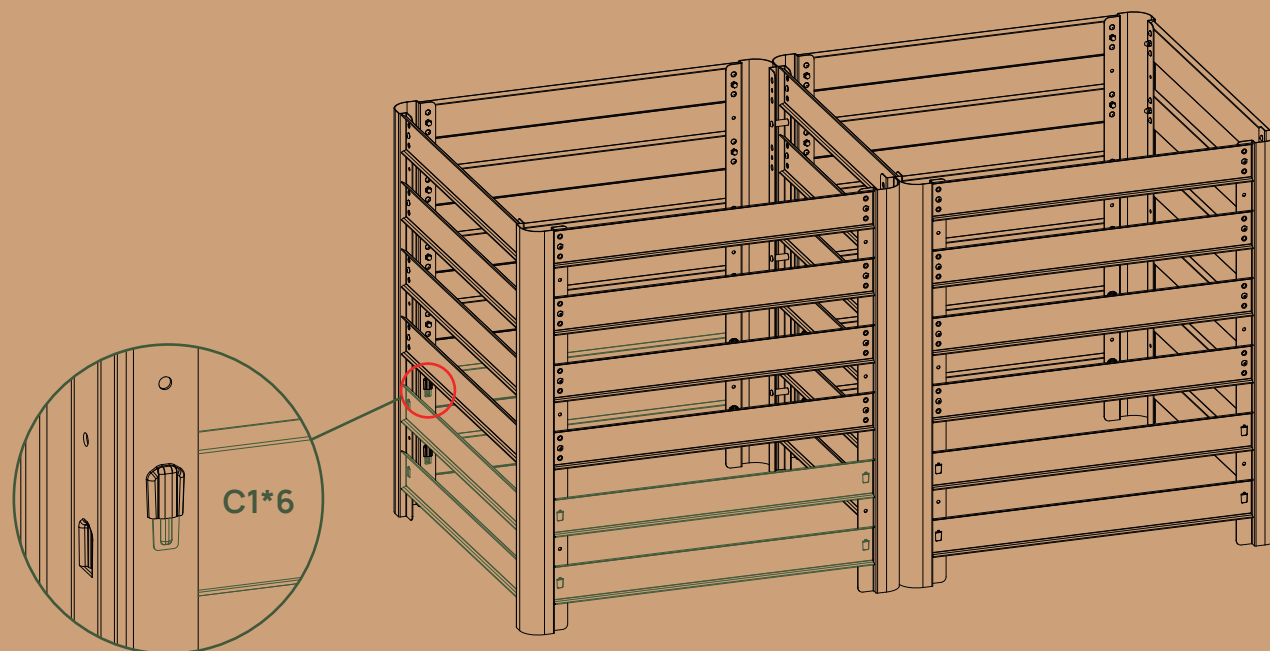

- 10** Repeat Steps 6 through 9. Tighten all the screws using LWA and LWB.

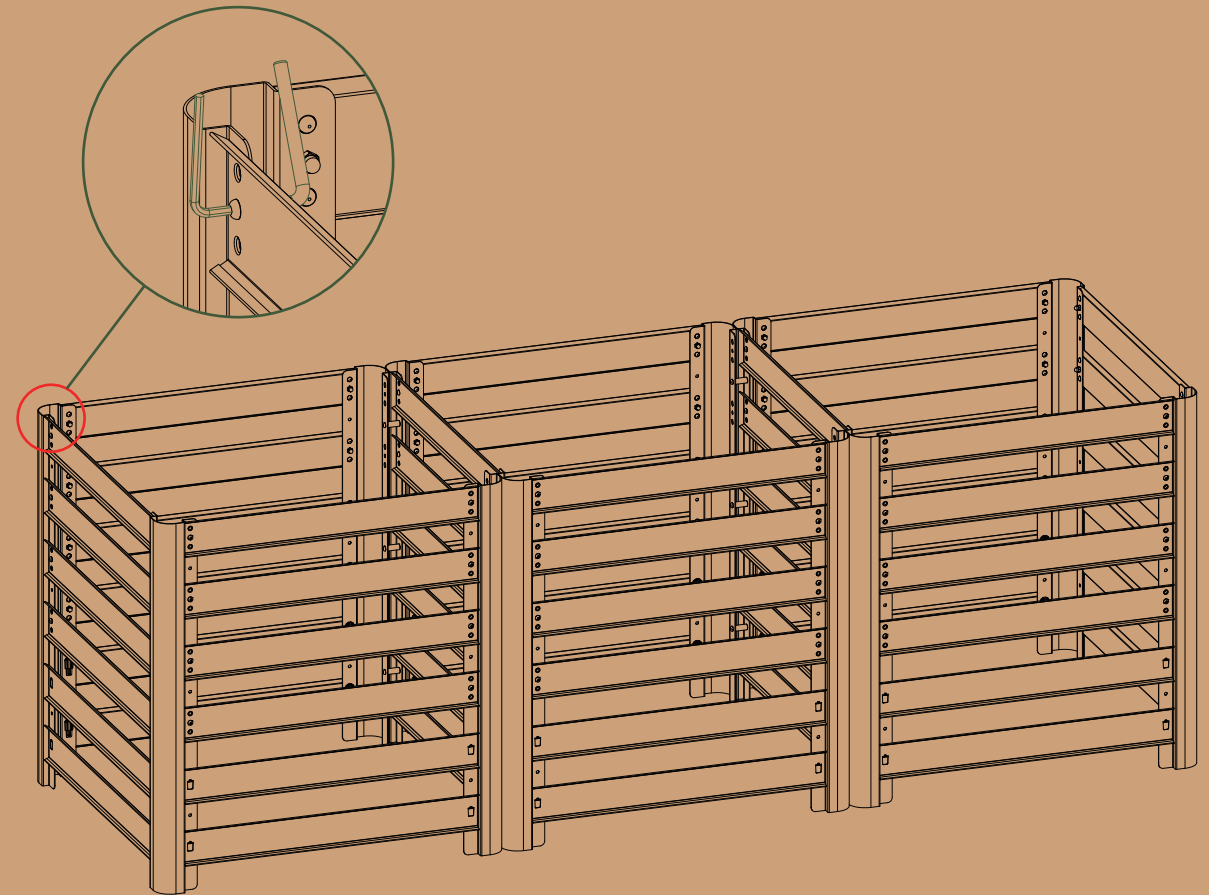

- 11** Remove the film from the back of the logo and affix it to your new Modular Compost Bin!

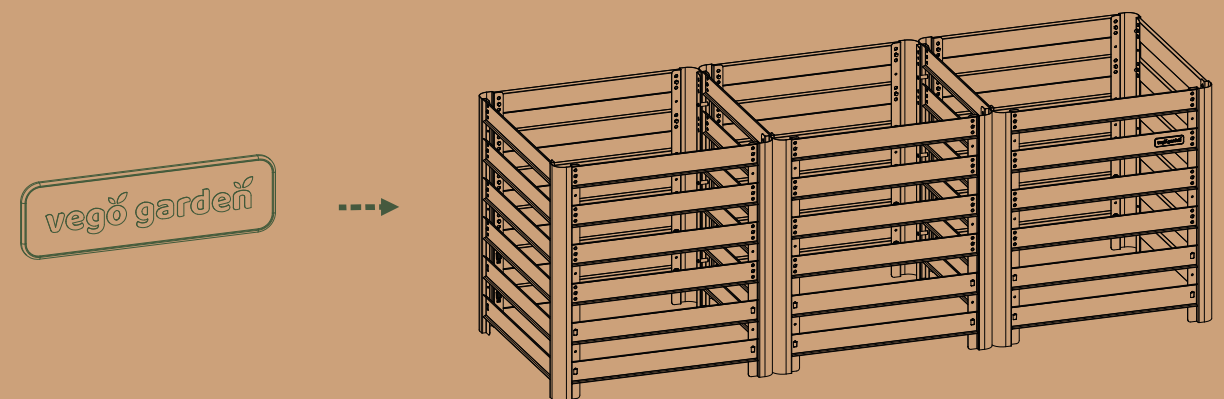

Extracting the Finished Compost

Pull upwards to remove two slats, and remove the compost with a shovel.
Then, secure the slats back into place.

