



ASSEMBLY INSTRUCTION


STEP1

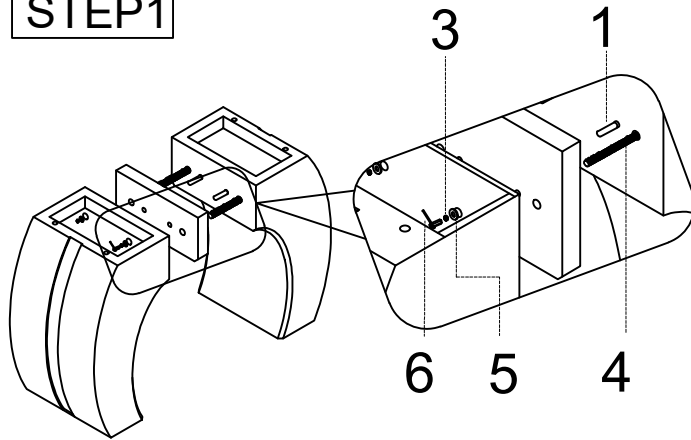



STEP2

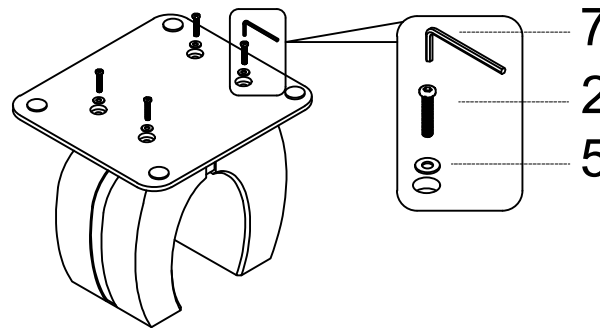

STEP3

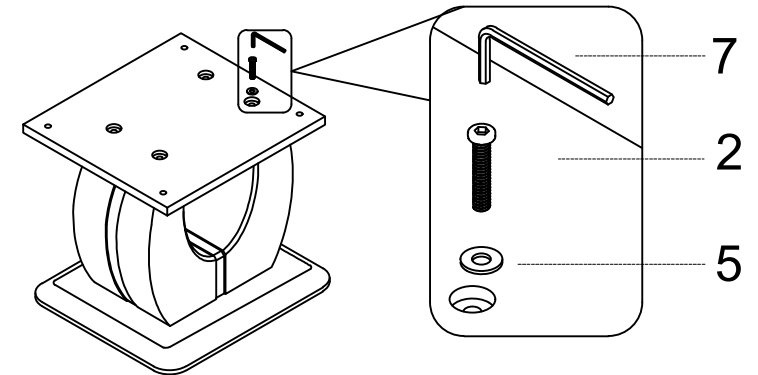

STEP4

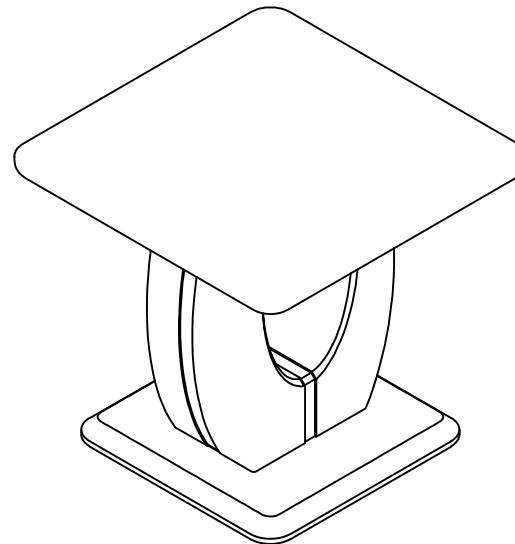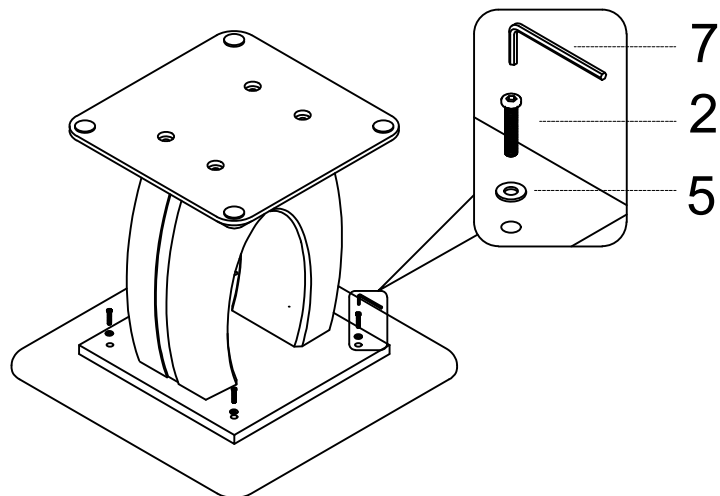

B-3021-1

1		2pcs	Wooden dowel ø8*40mm
2		12pcs	bolt M8*40mm
3		2pcs	Nut M8
4		2pcs	bolt M8*75mm
5		16pcs	Washer ø22mm
6		1pc	DRIVEPE 17*47mm
7		1pc	Allen Wrench 5mm