




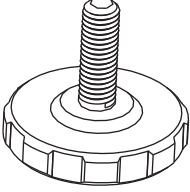




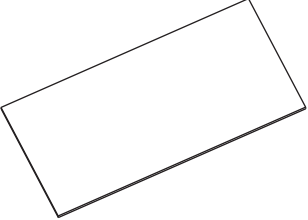
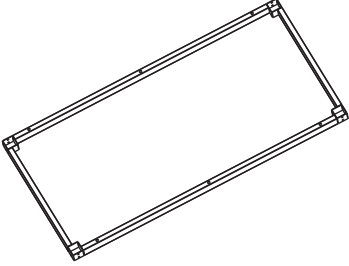
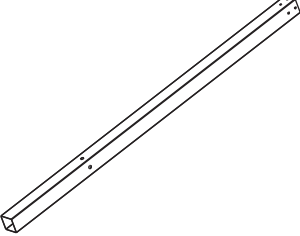



① X1 	② X1 	③ X4 	④ X2 
⑤ X1 	EX4 	BX4  M6X60	CX10  M6X50
DX16  M8X12	FX8 	KX4  M6	

Installation tips:

- 1, Align the fittings and accessories when installing the frame, then tighten the screws.
- 2, When installing the board, first screw all the screw holes and tighten them.

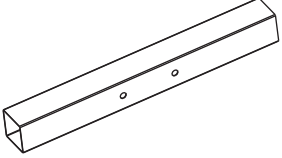


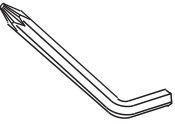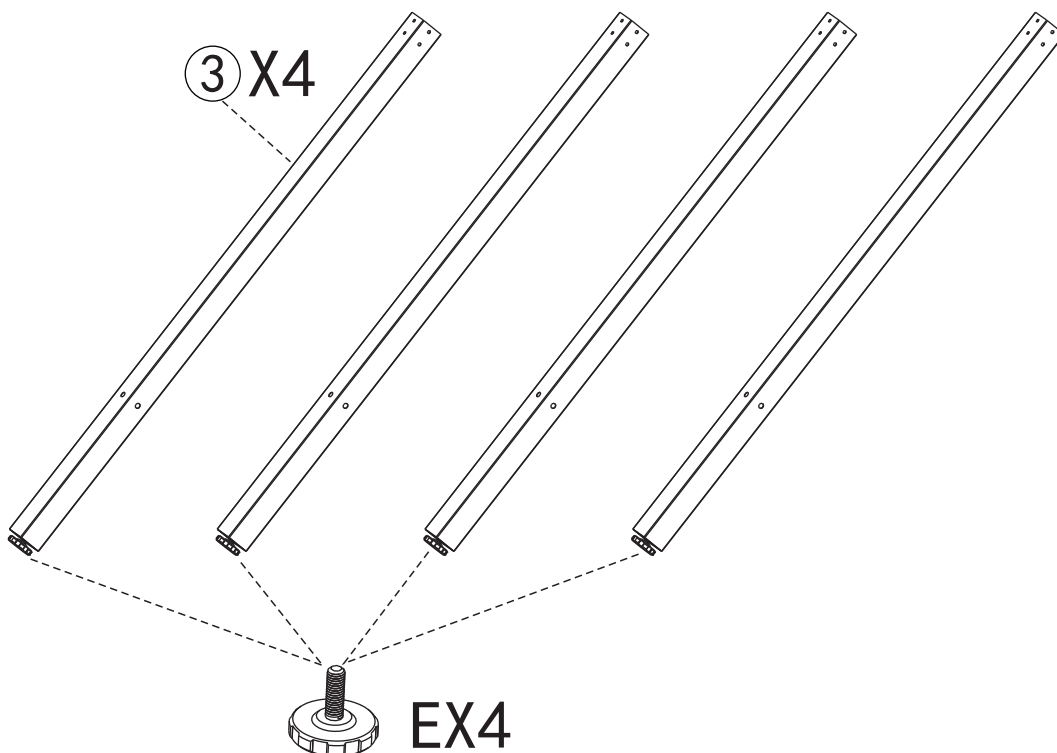1.

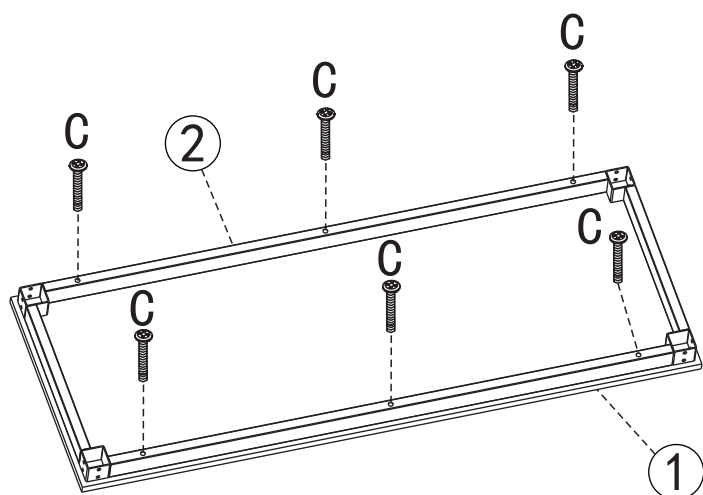


2.

Do not tighten!!!

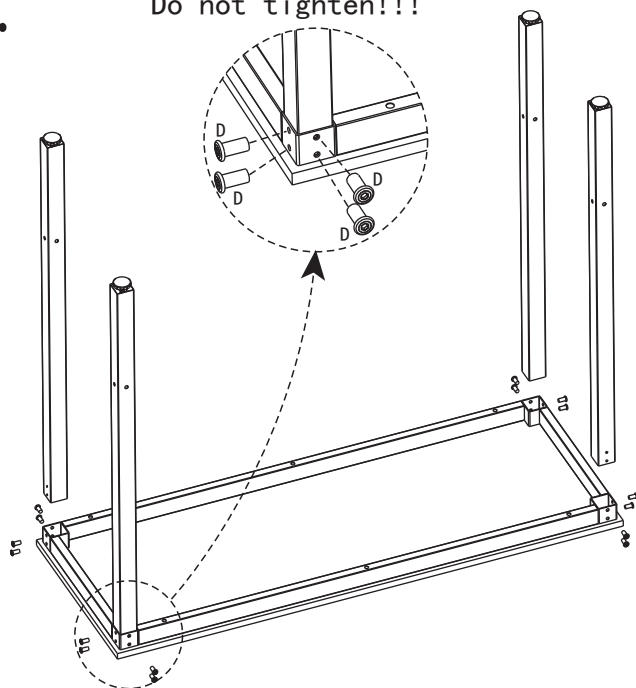


3.

Do not tighten!!!

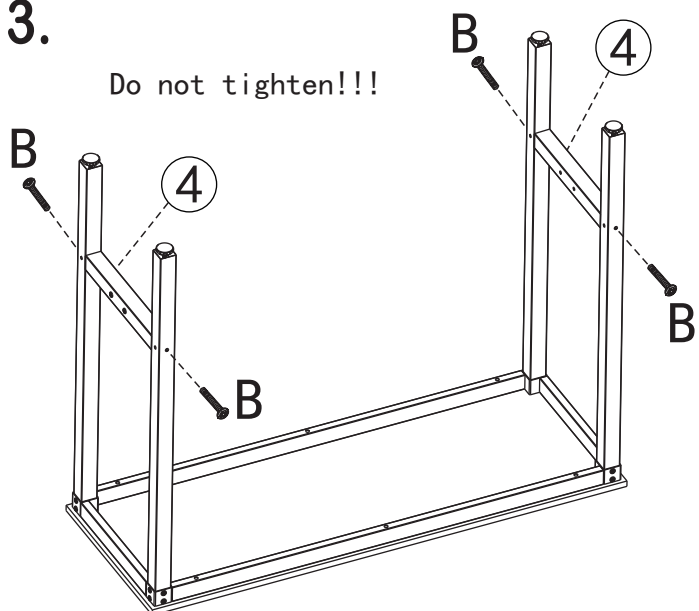


4.

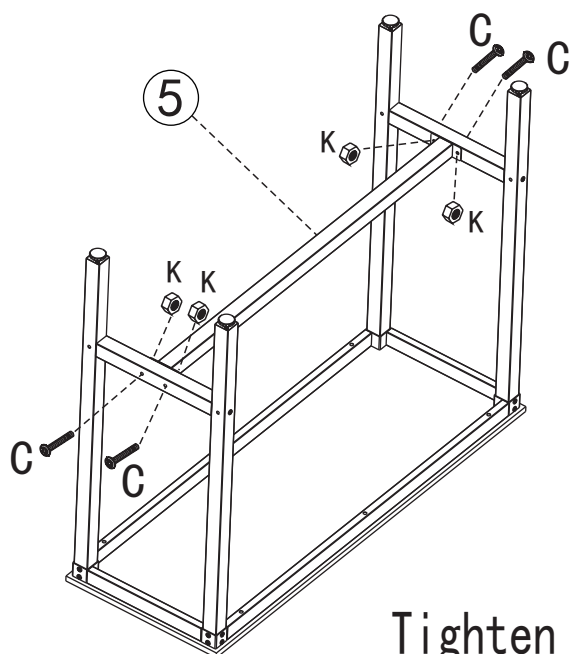

Tighten all.

5.

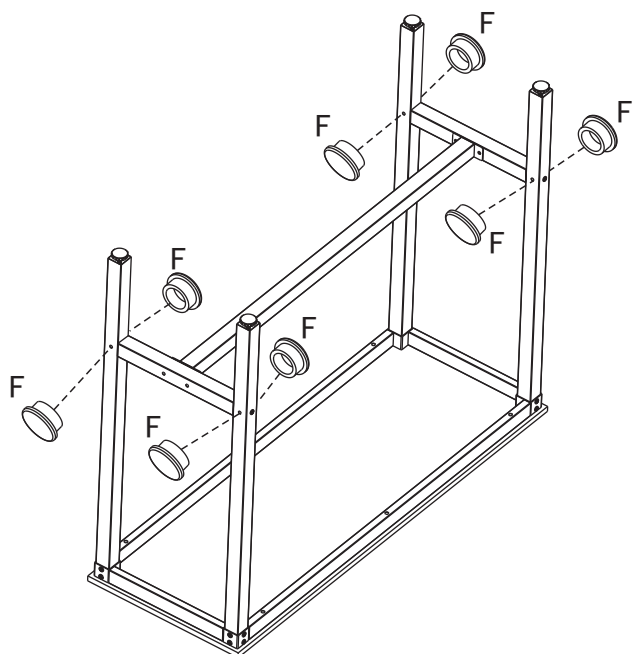

6.

