
INSTALLATION INSTRUCTIONS

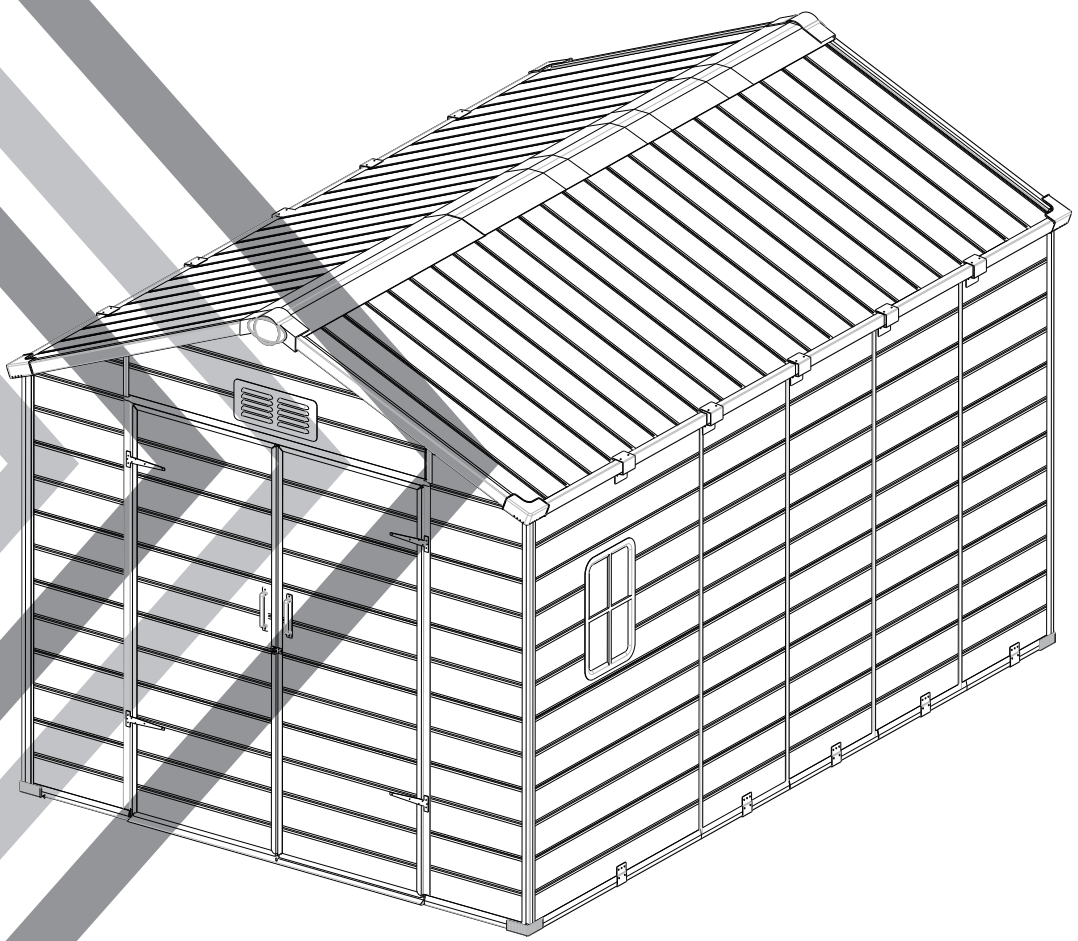

TOOL ROOM8x12

-INSTALLATION INSTRUCTIONS-

How to Use the Installation Manual

Read Thoroughly First

Before beginning assembly, carefully read all instructions and information in the manual. Verify that you have all the parts listed in the parts list.

Self-Drilling Required

Due to the ductility of the resin material, there are no pre-drilled holes on the panels. You will need to drill the holes yourself during assembly as per the instructions.

Understand the Diagrams

The manual includes diagrams and a parts list. Cross-reference the part numbers with the physical pieces to ensure all components are present.

Follow Step-by-Step

Do not skip ahead. Adhere strictly to the assembly instructions in the sequence provided to avoid errors.


Tools needed for installation


Scraper×1


Electric Drill×1


Ladder×1


Screw Driver×1

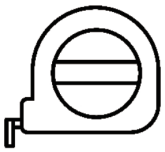
Tape Measure×1






















Small wrench×1


















Glove×1


Note:Due to the ductility of the resin,there are no pre-drilled holes on the panel,so please drill your own holes.





















Due to the large size of the product and for Safety,we recommend 2-4 people to work together on the installation,which is expected to be completed in 2-4 hours.

















Box A

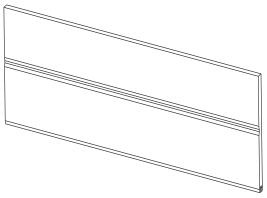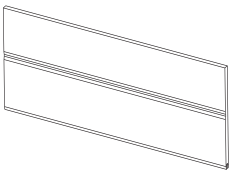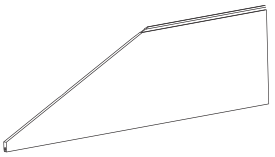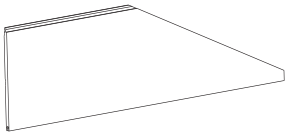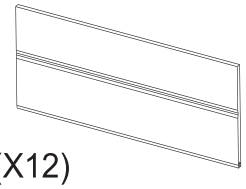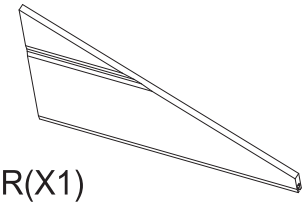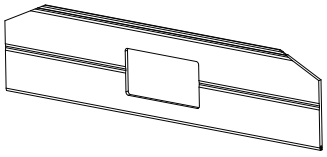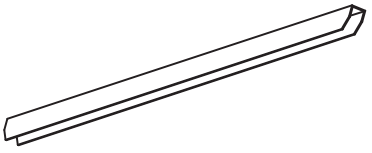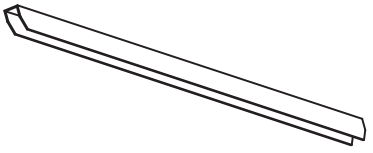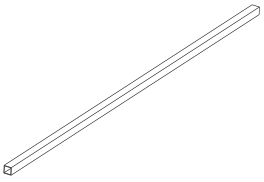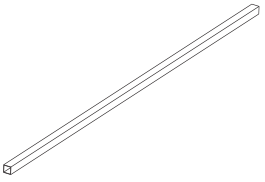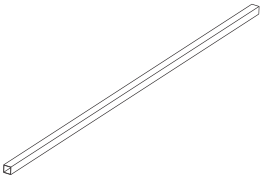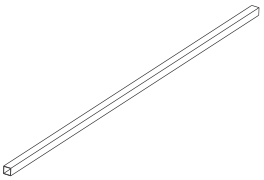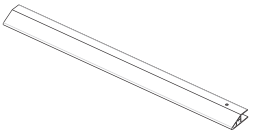
 E7(X12)	 E54(X12)	 E68-L(X1)
 E68-R(X1)	 E47(X12)	 E70-R(X1)
 E70-L(X1)	 E64-R(X1)	 E64-L(X1)
 E69(X1)	 H16-L(X1)	 H17(X4)
 F2(X2)	 F65(X1)	 F8(X1)
 F13(X4)	 J43(X8)	 J29(X3)
 J23(X2)	 J58(X2)	 F21(X1)

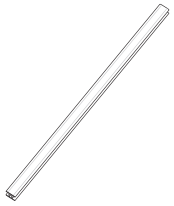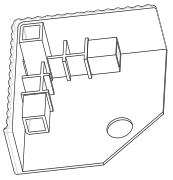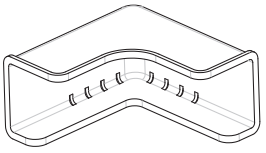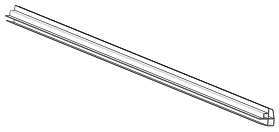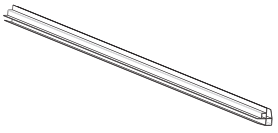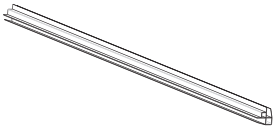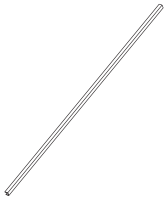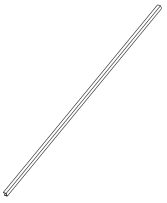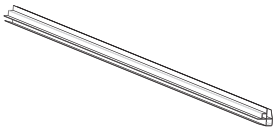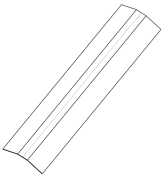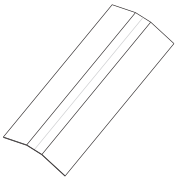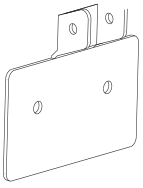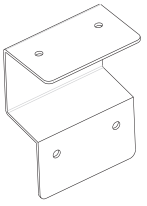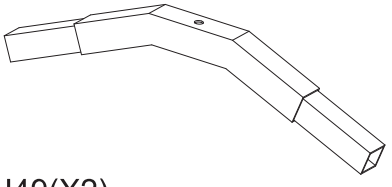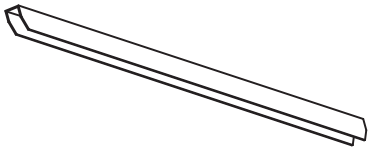 H6(X1)	 G1(X4)	 G9(X4)
 F28(X2)	 F27(X2)	 F33(X2)
 F71(X2)	 F70(X2)	 F26(X2)
 F47(X2)	 G10(X1)	 G12(X1)
 J3(X4)	 J4(X4)	 J49(X2)
 H16-R(X1)		







Box B

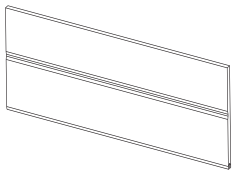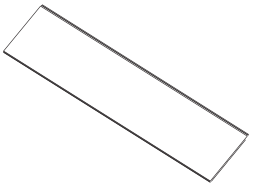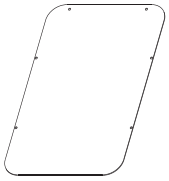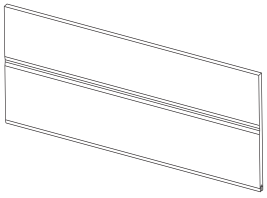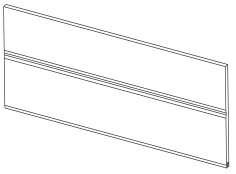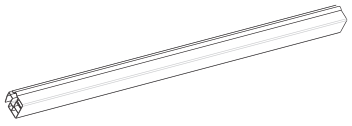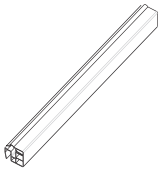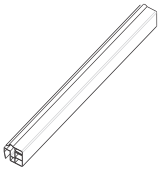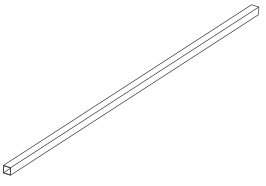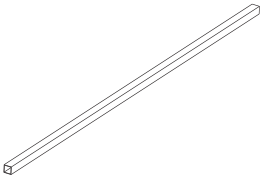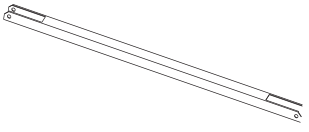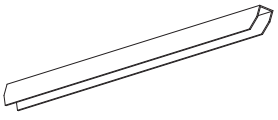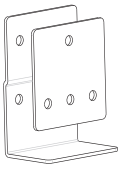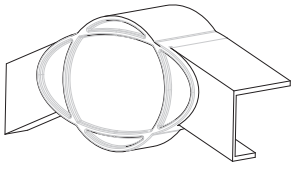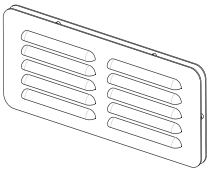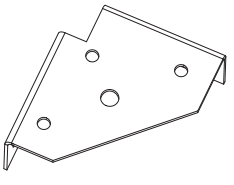 E59(X10)	 E58(X2)	 G18(X2)
 G5(X1)	 E13(X12)	 E3(X6)
 F44(X4)	 F43(X2)	 F12(X1)
 F39(X2)	 F11(X1)	 J37(X1)
 J46(X1)	 J48(X2)	 J47(X4)
 H15(X4)	 G21(X5)	 J6(X7)
 G8(X2)	 G3(X2)	 J2(X4)


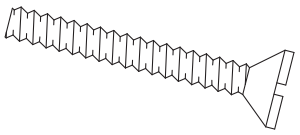
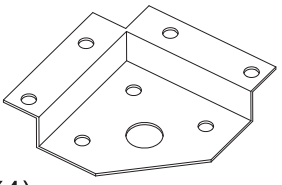
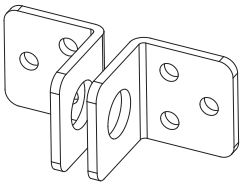
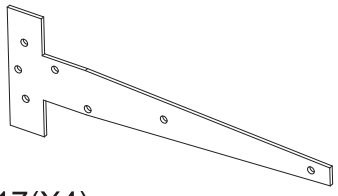


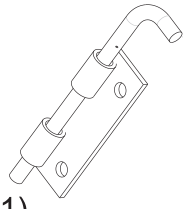
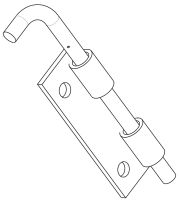
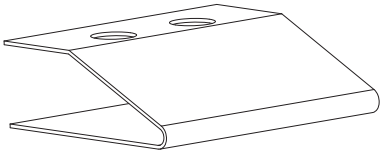

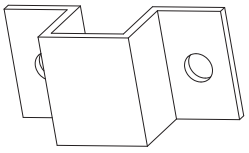
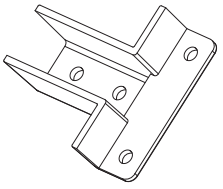
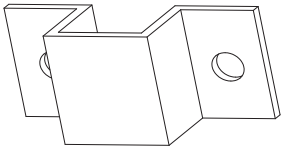
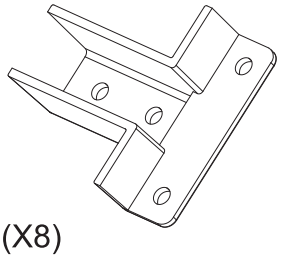


 J45(X2)	 J1(X4)	 J16(X2)
 J17(X4)	 J18(X2)	 J19(X17)
 J65(X22)	 J20(X253)	 J21(X126)
 J60(X16)	 J31(X1)	 J32(X1)
 J59(X1)	 D90(X4)	 D91(X4)
 G15(X6)	 G25(X4)	 G16(X11)
 G26(X8)	 G28(X6)	 G23(X2)





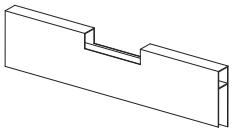
 J62(X1)		

Box C

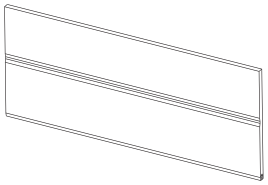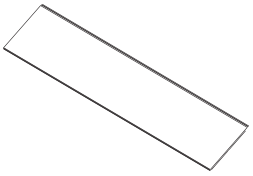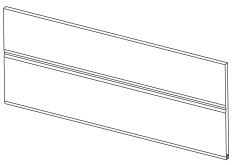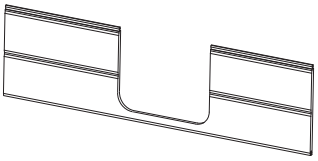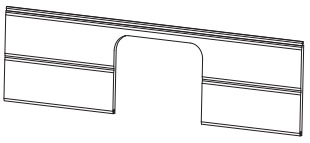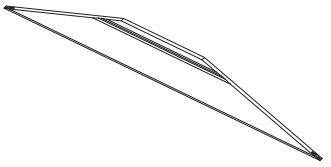 E7-G(X10)	 E6(X2)	 E3(X4)
 E74(X1)	 E75(X1)	 E4(X1)

Box D.E.F (8X2)

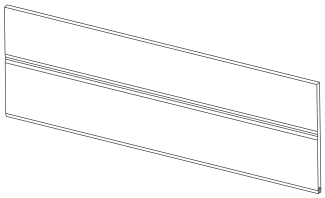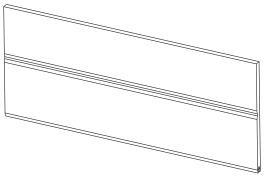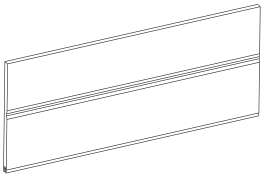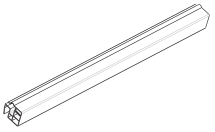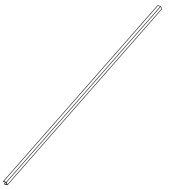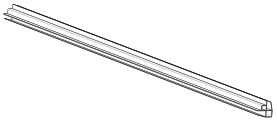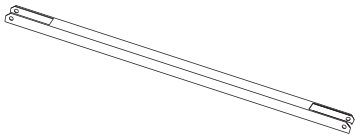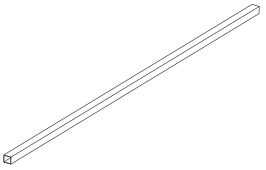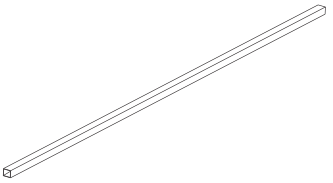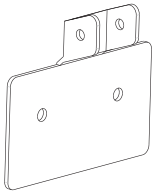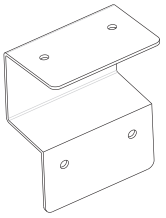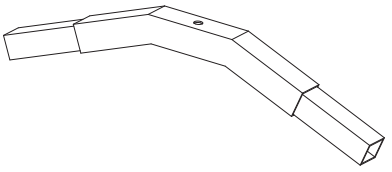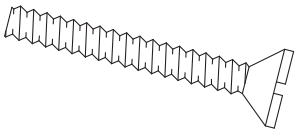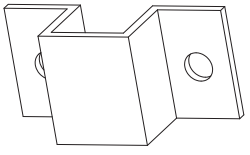
 E13(X4)	 E7-G(X4)	 E54(X12)
 F2(X2)	 F40(X2)	 F70(X2)
 F31(X2)	 F10(X1)	 J47(X2)
 J48(X1)	 J58(X2)	 J61(X1)
 J3(X2)	 J4(X2)	 J49(X1)
 J45(X1)	 G15(X4)	 G23(X2)

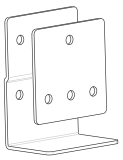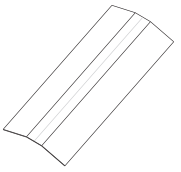 J6(X2)	 J19(X9)	 J65(X8)
 J20(50)	 J21(X10)	 G12(X1)


01

E6(×1) E7-G(×11)



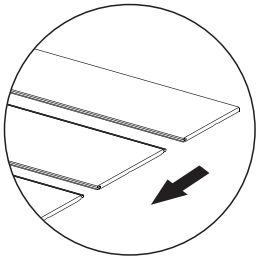



02




F12(×1) F11(×1)
F10(×3)



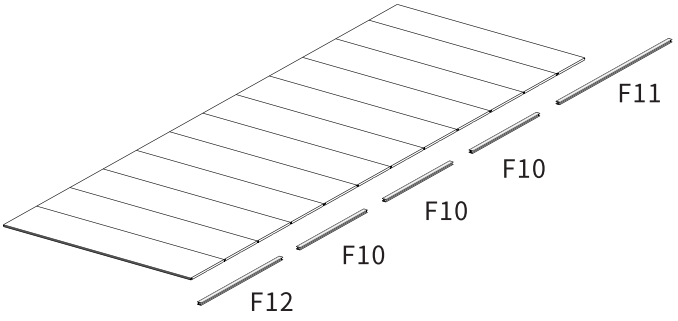

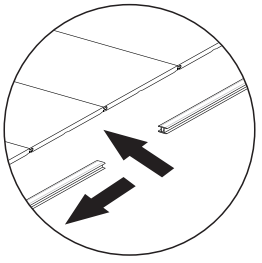


03



E6(×1) E7-G(×11)





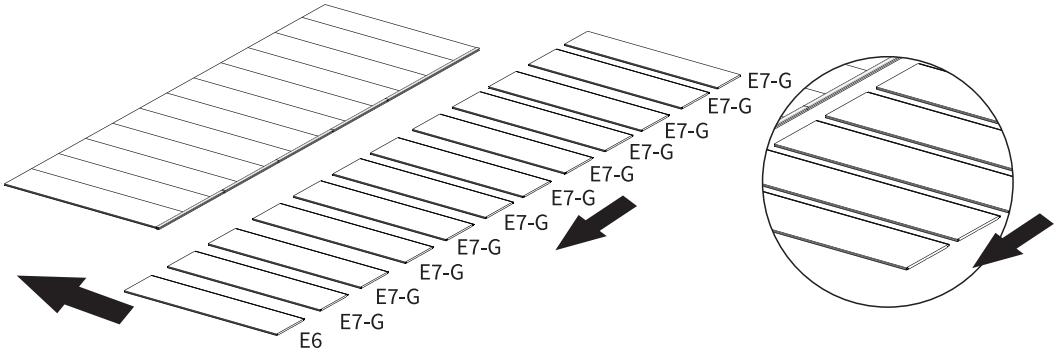



04




G1(×1)



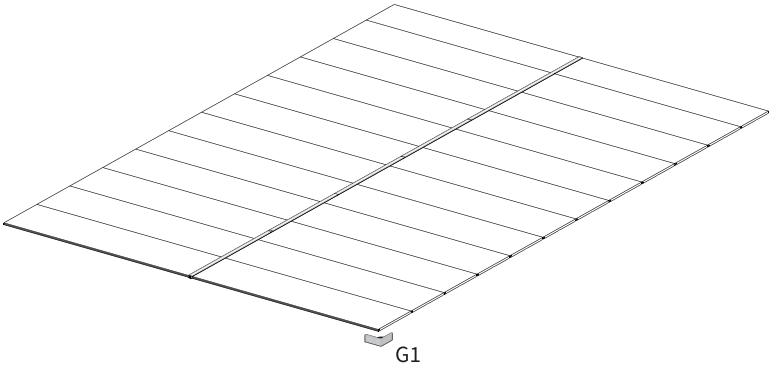

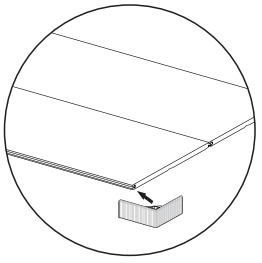



05



F26 (×2) F21 (×1)



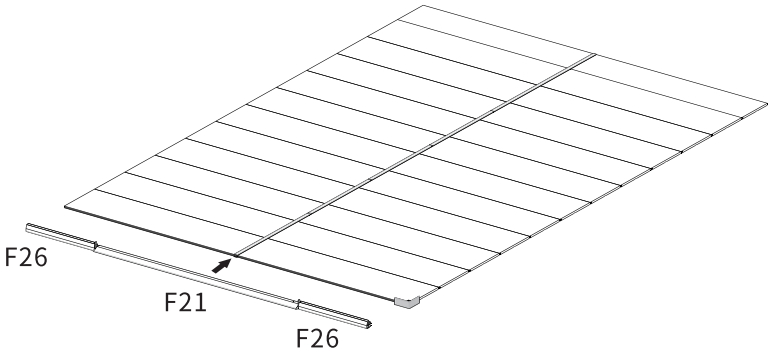

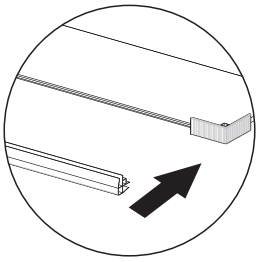



06




G1 (×1)



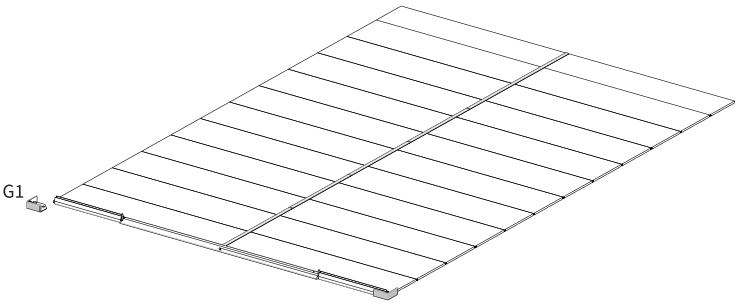

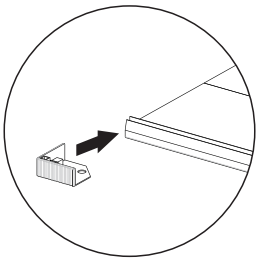


07




F28 (×1) F27 (×1)
F31 (×3)





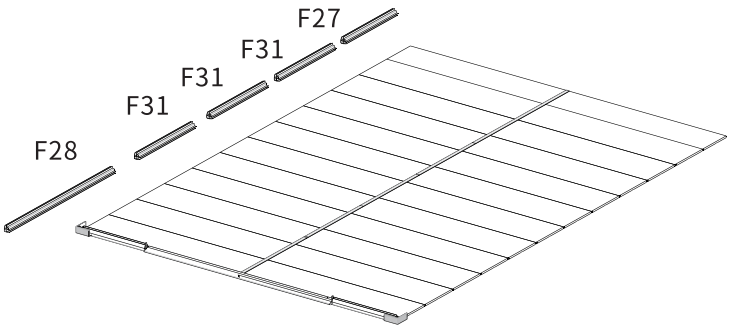

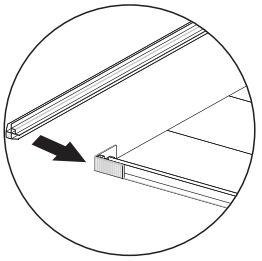



08




G1 (×1)



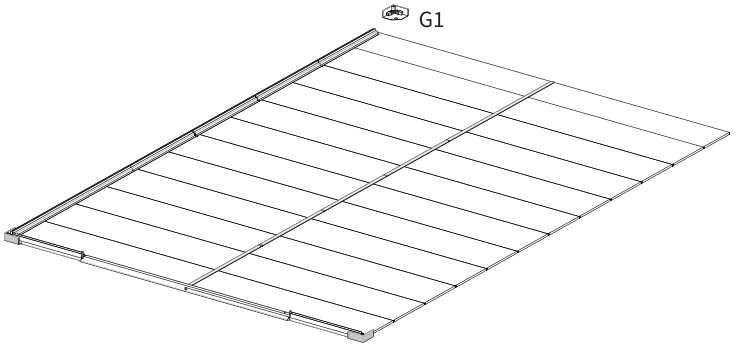

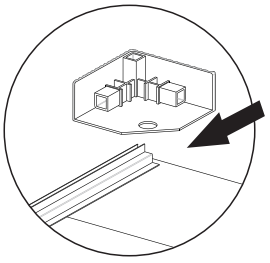


09




F33 (×2)




Cork Hammer

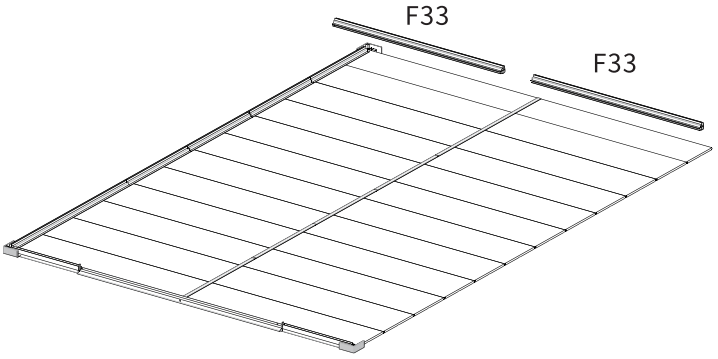

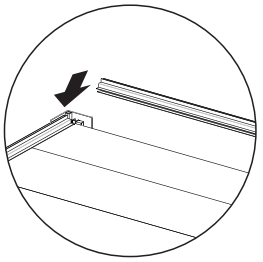


10




F28 (×1) F27 (×1)
F31 (×3)



Cork Hammer

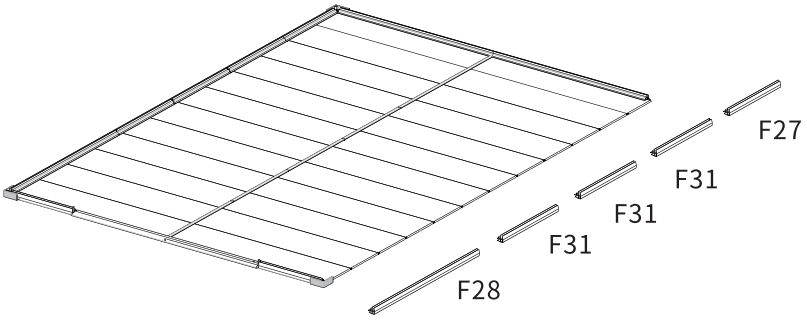

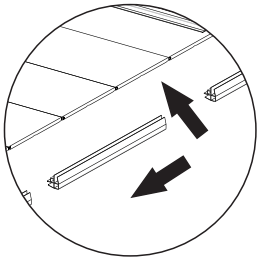


11




G1 (×1)



Cork Hammer

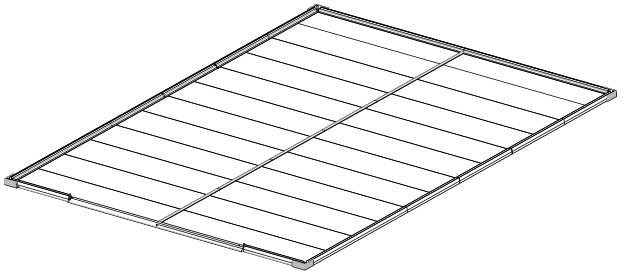

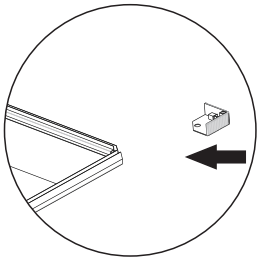

12




J20 (×56)




Cork Hammer




Electric Drill

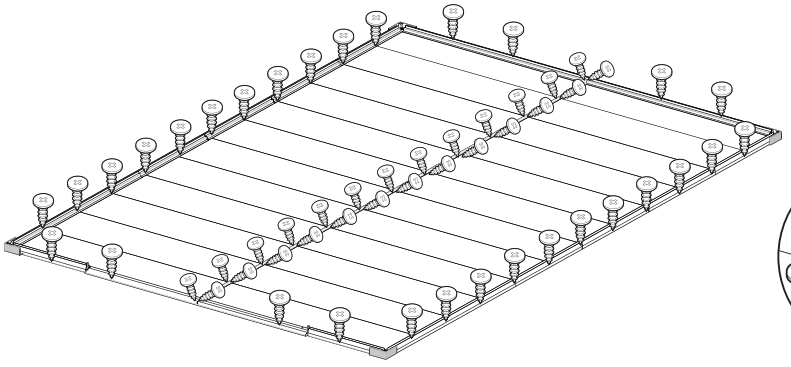


After the floor screws are tightened, proceed to the next installation step.

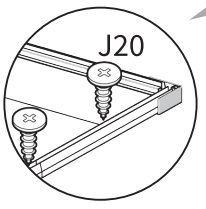


13 F13 (×1) Cork Hammer

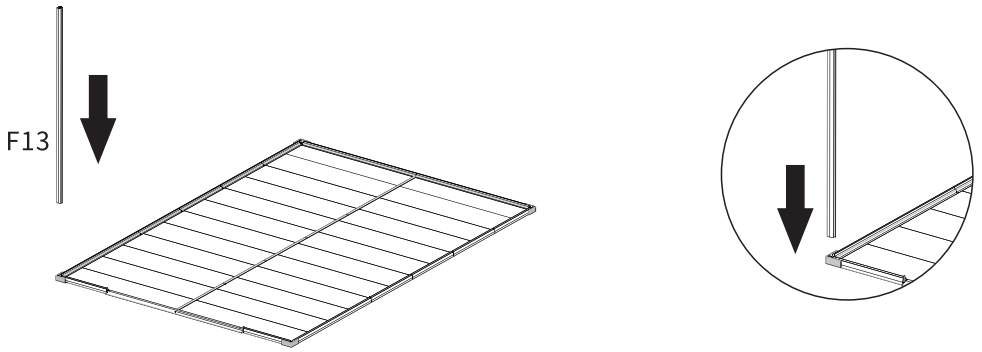


14 E3 (×3) Cork Hammer Scraper

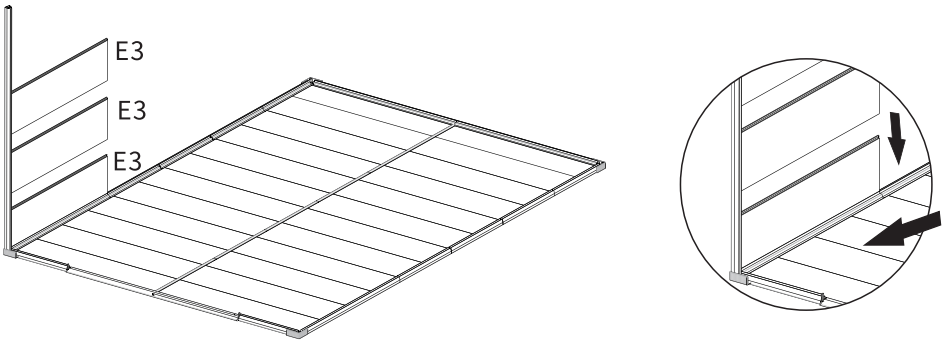



15 E47 (×2) Cork Hammer Scraper

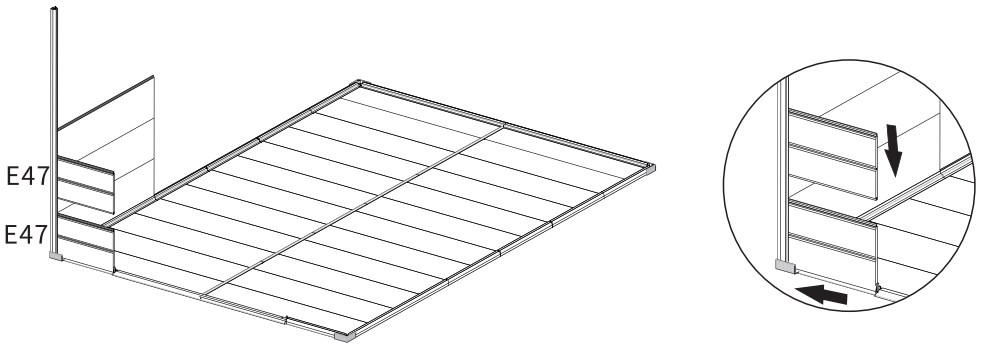



16 E3 (×3) Cork Hammer Scraper

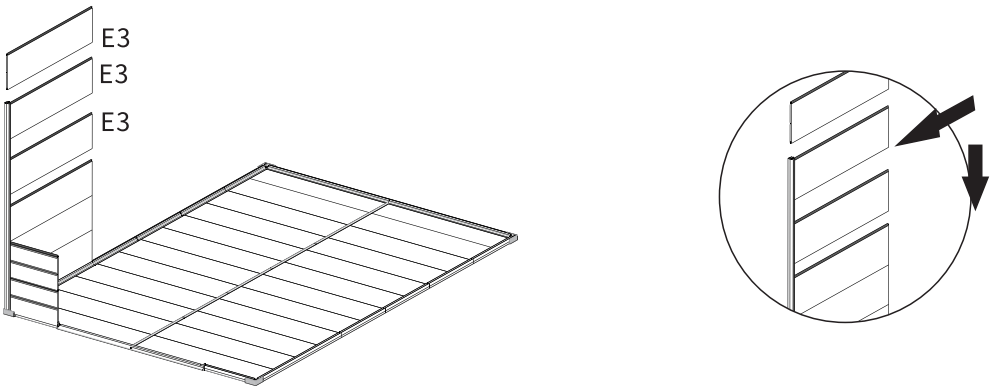



17  F2 (×1)  Cork Hammer

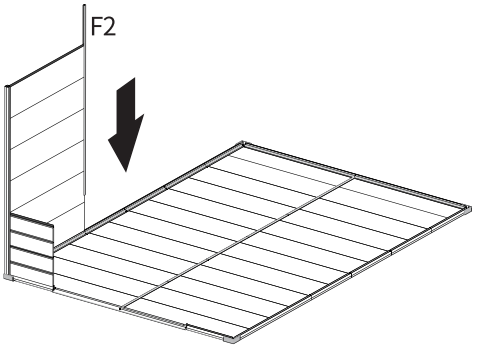


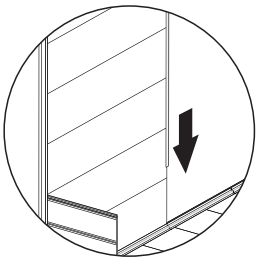



18  E54 (×6)  Cork Hammer  Scraper

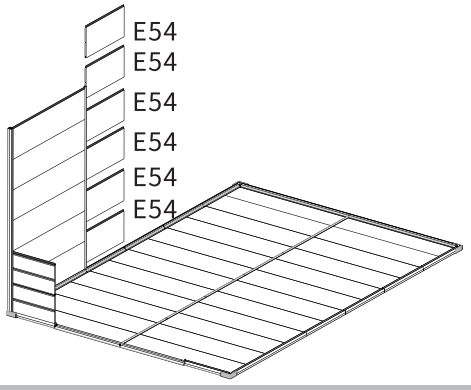


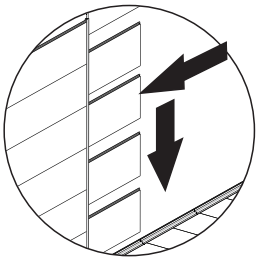



19  F2 (×1)  Cork Hammer

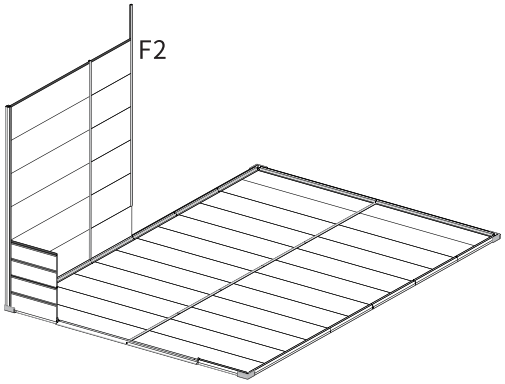


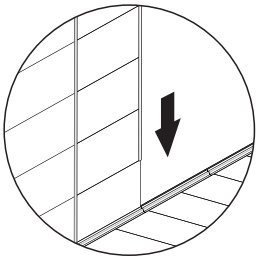



20  E54 (×6)  Cork Hammer  Scraper

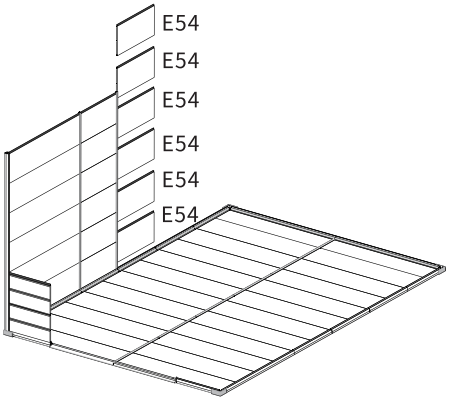


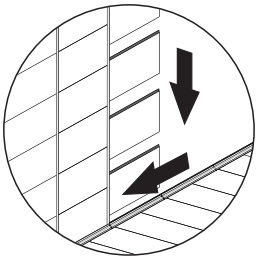



21  F2 (×1) Cork Hammer

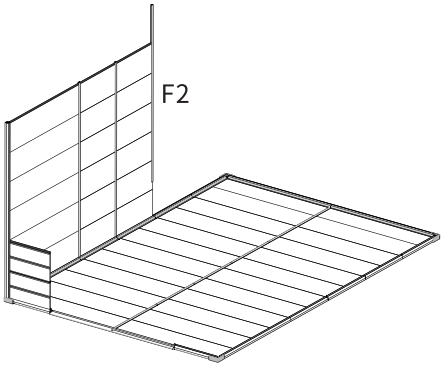


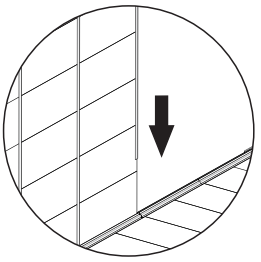



22  E54 (×6) Cork Hammer

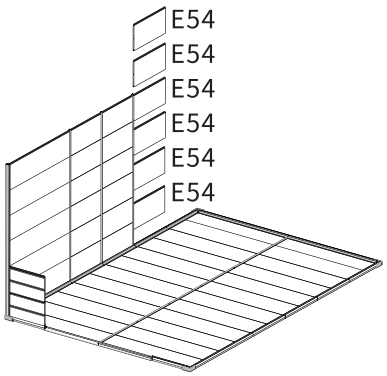


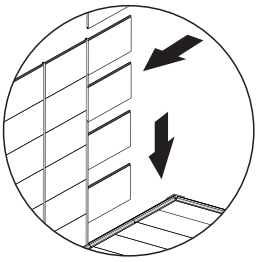



23  F2(×1) Cork Hammer

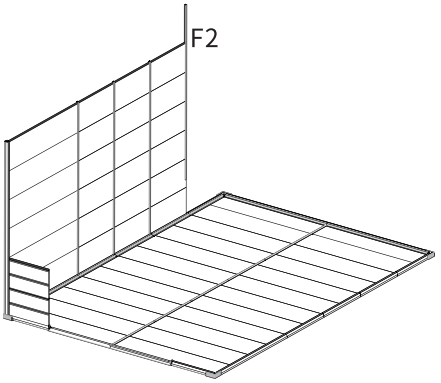

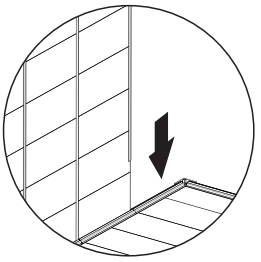



24  E54 (×6) Cork Hammer Scraper

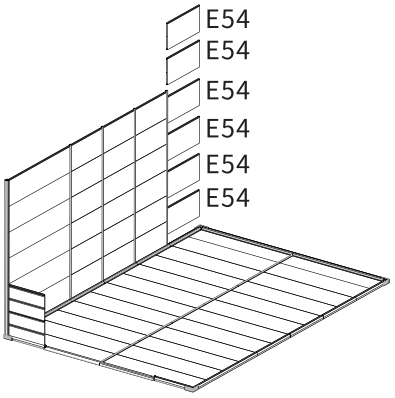

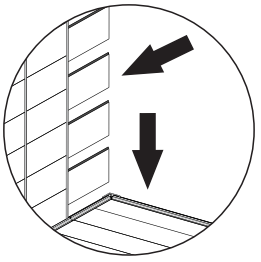



25 F13 (×1) Cork Hammer

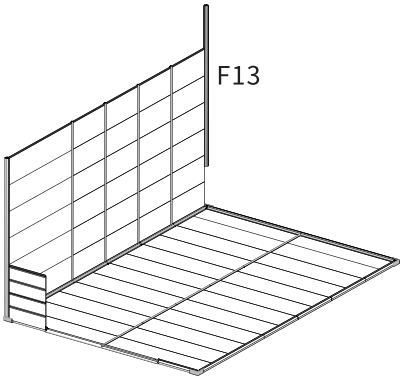

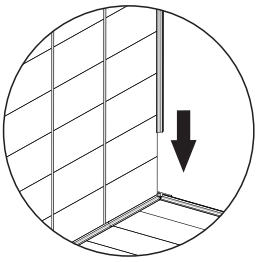



26 J20 (×62) Cork Hammer Electric Drill

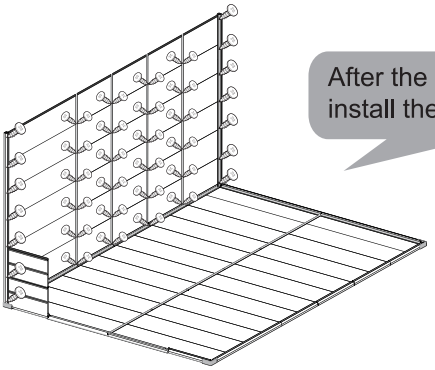

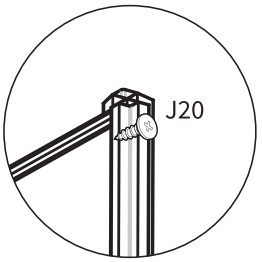



27 E7(×6) Cork Hammer Scraper

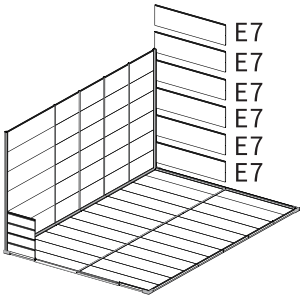

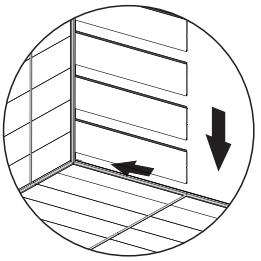


28 F65 (×1) Cork Hammer

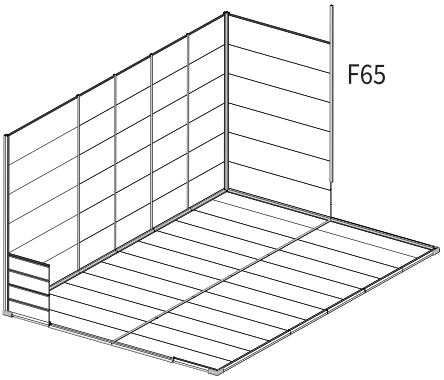


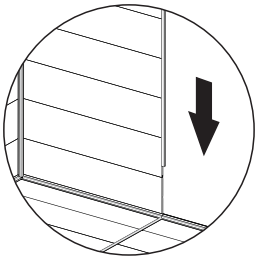

29


E7(×6) Cork Hammer Scraper

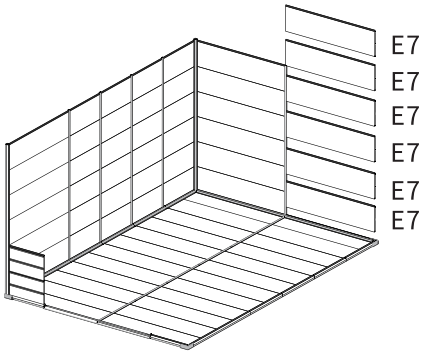


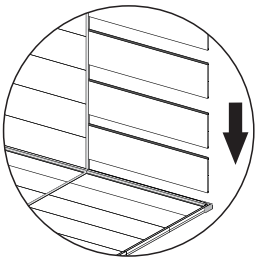

30


E68-L(X1) E68-R(X1) E70-L(X1) E70-R(X1) | F8(X1) J20(X4) Cork Hammer Electric Drill

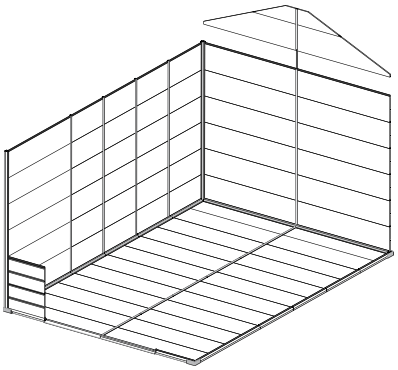


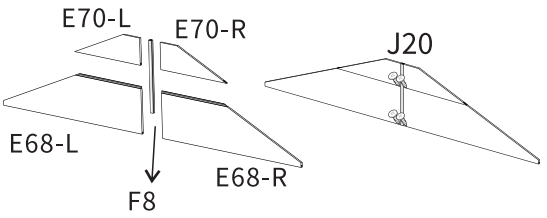

31


J62(X1) Cork Hammer

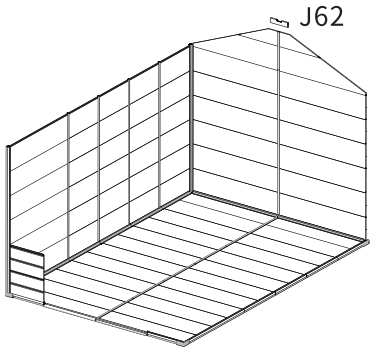


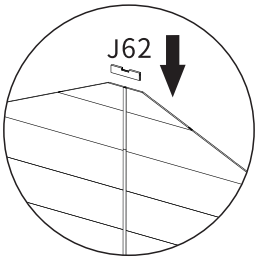


32

F13(X1) J20(X30) Cork Hammer Electric Drill

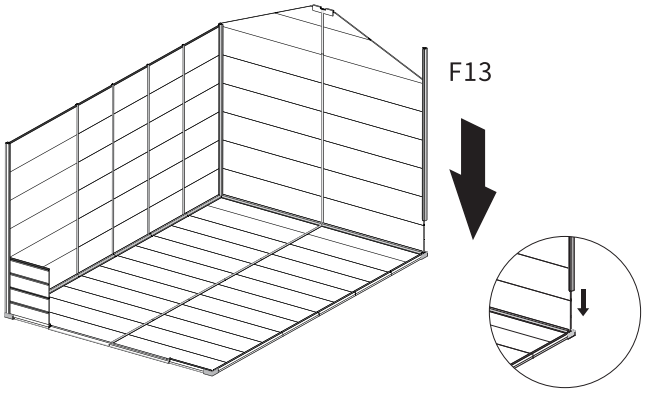

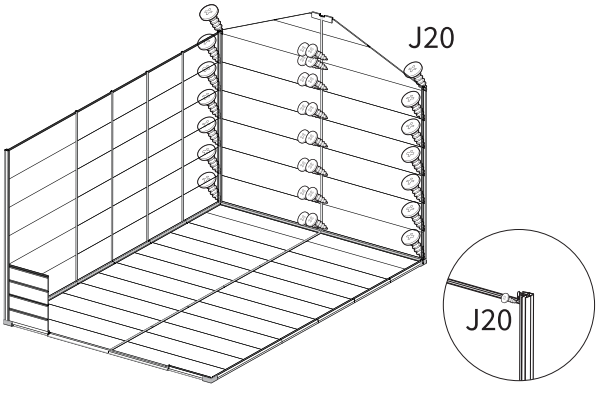

33




E54 (×6)




Cork Hammer



Scraper

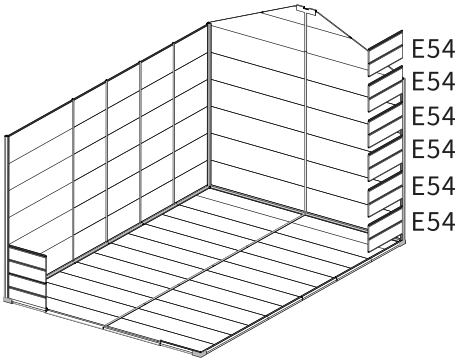


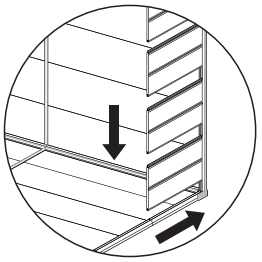

34





F2(X1)





E54(X6)

Cork Hammer

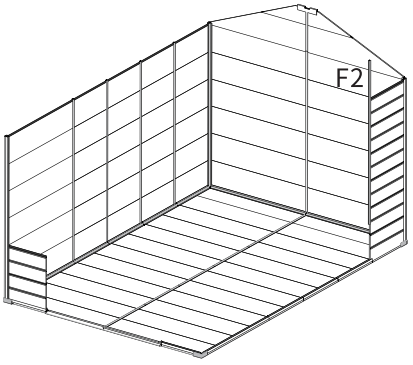

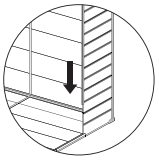

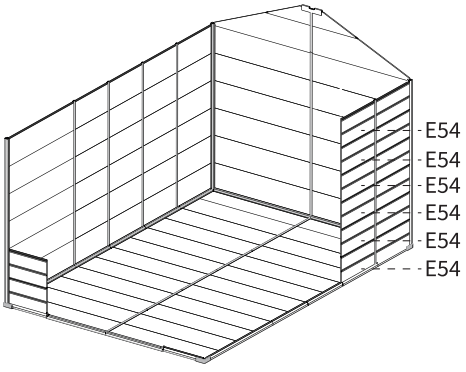

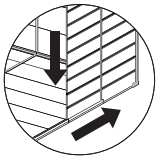


35




F2(X1)




Cork Hammer

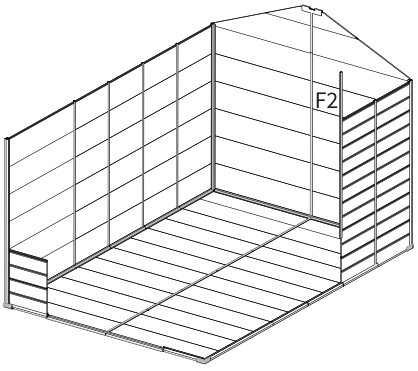

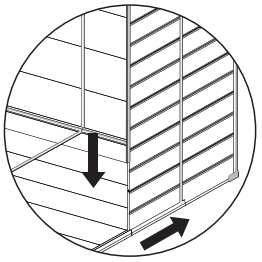

36




E54(X6)





F2(X1)



Cork Hammer

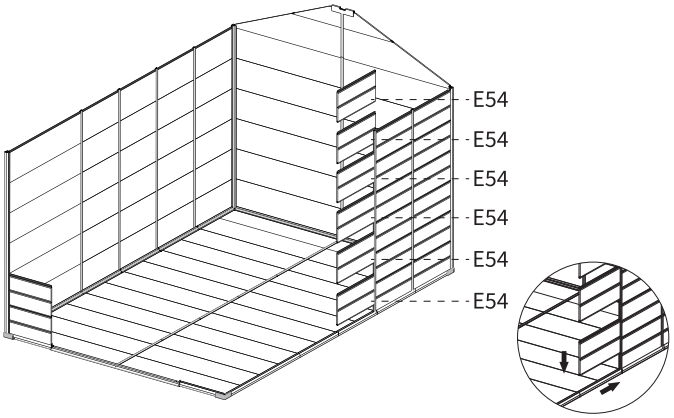


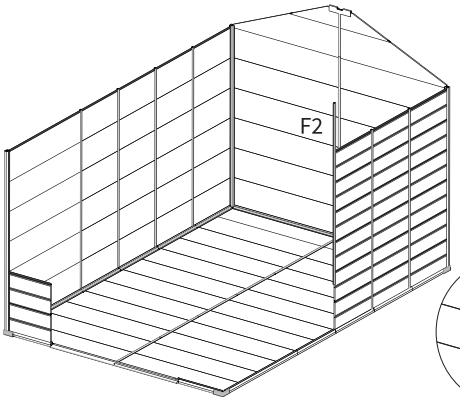

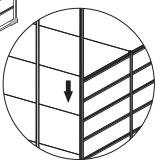


37

E54(X6) F2(X1) Cork Hammer

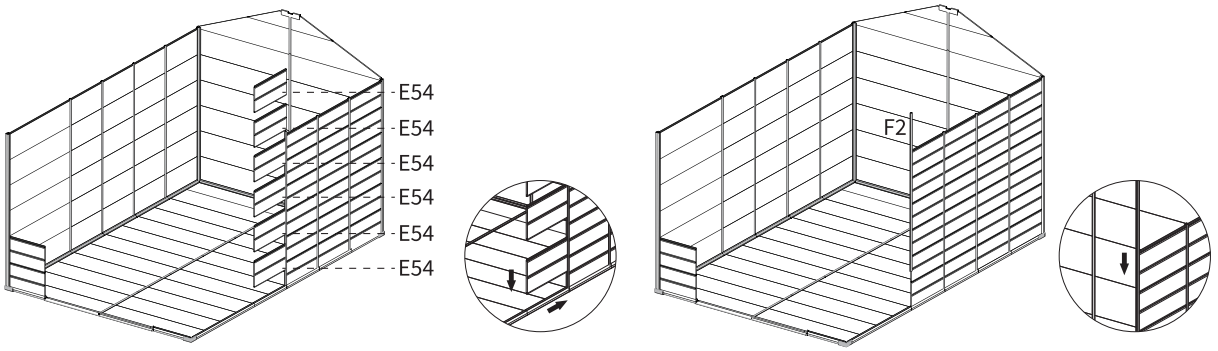


38

E3(X3) Cork Hammer

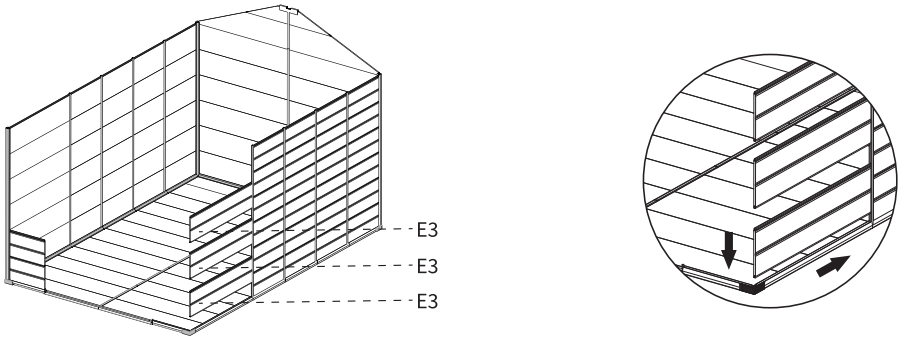


39

J20(X11) E74(X1) E75(X1) G18(X2) G5(X1) Cork Hammer Electric Drill

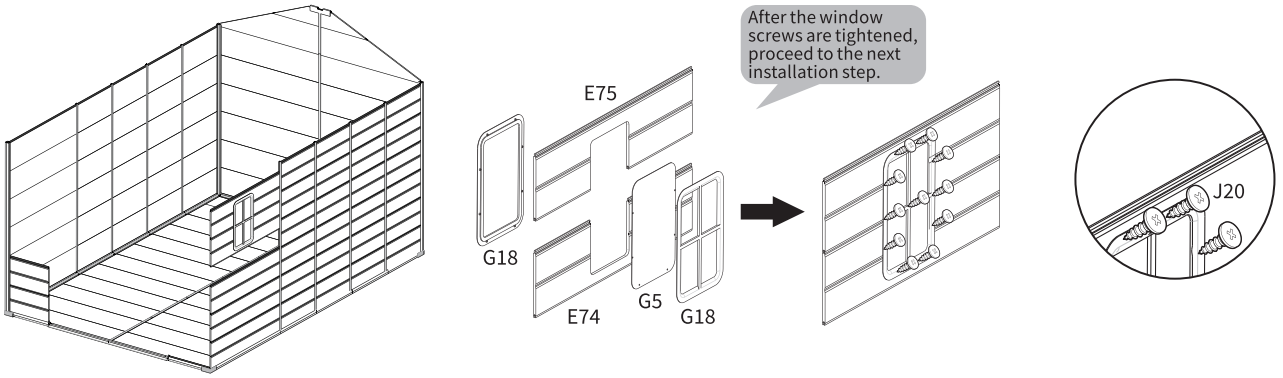


40

E3(X1) Cork Hammer

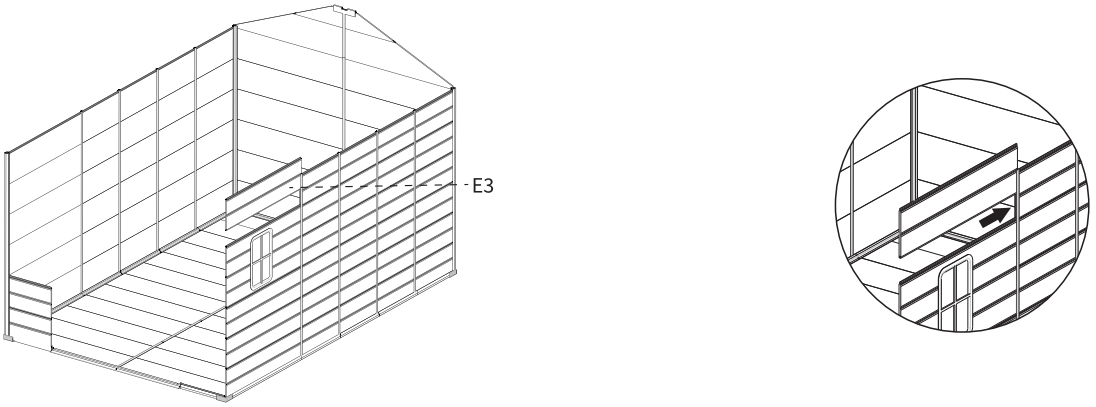


41

F13(X1) Cork Hammer J20(X62) Electric Drill

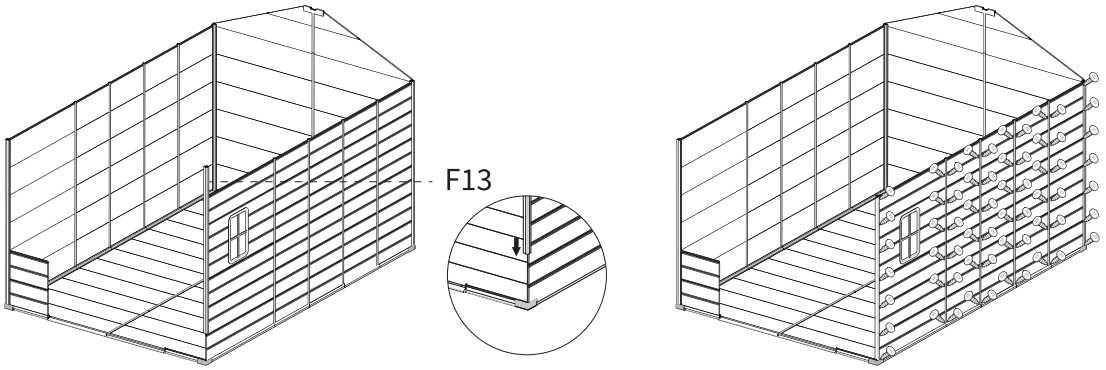


42

E47(X4) E64-L (X1) Cork Hammer

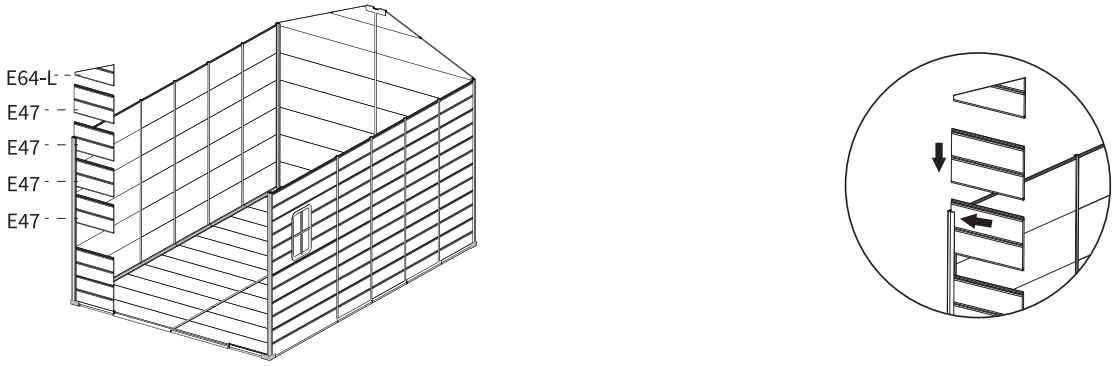


43

E64-R(X1) E47(X6) Cork Hammer

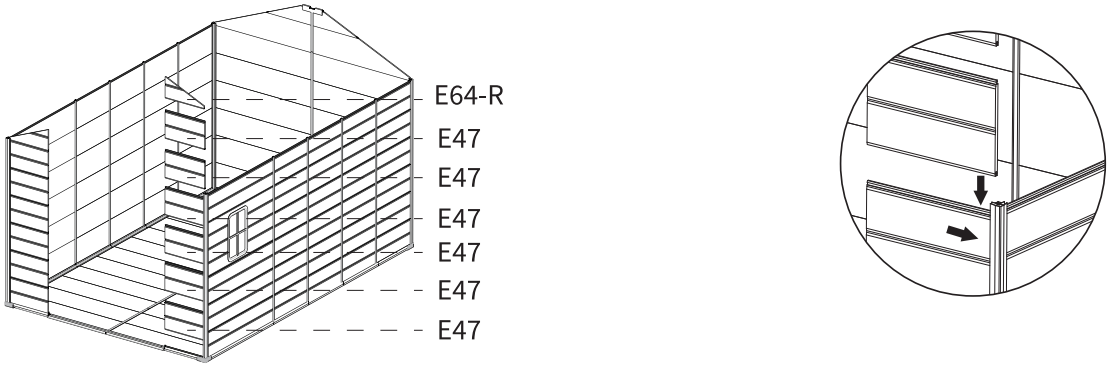


44

H16-L(X1) H16-R(X1) H6(X1) Cork Hammer

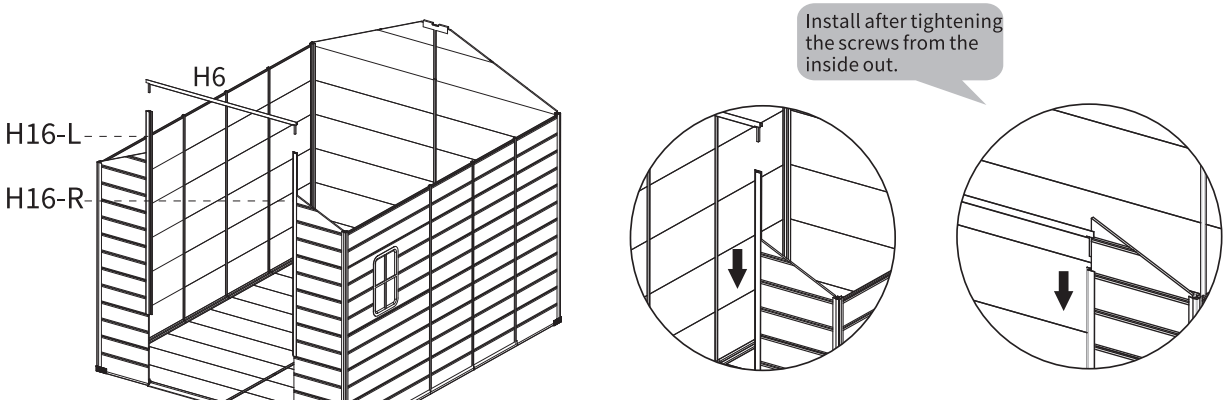


45

E69(X1) E4(X1) G3(X2) J20(X8) Cork Hammer

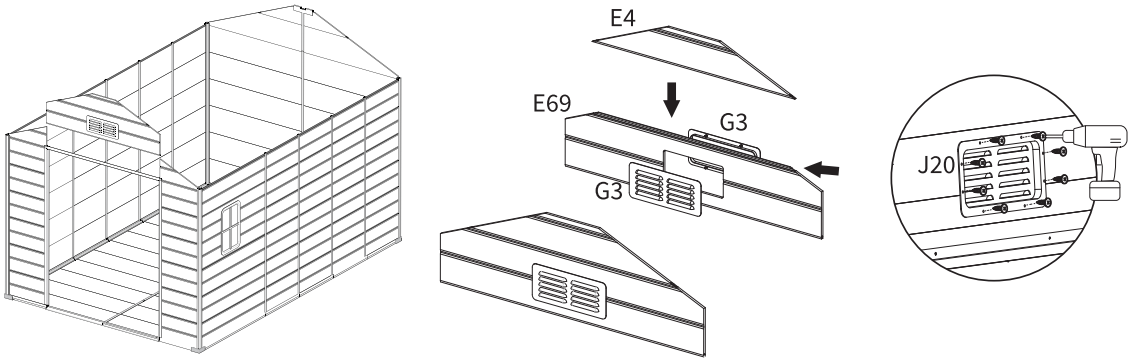


46

F47(X2) Cork Hammer

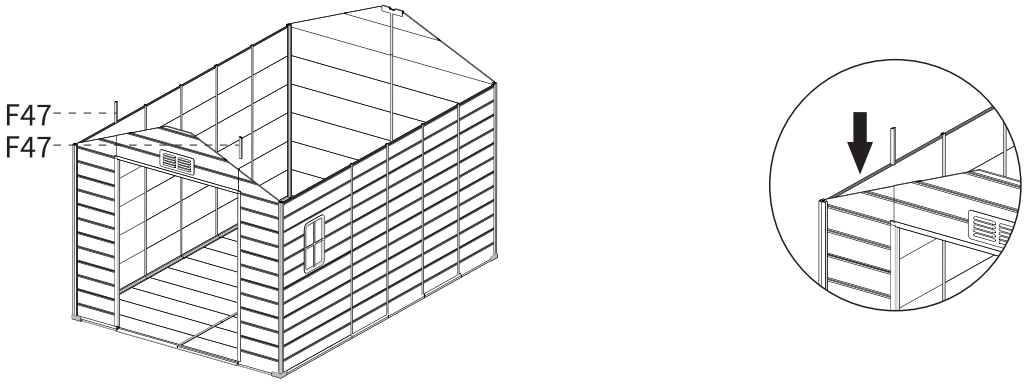

47


G21(X5) J20(X14) J21(X10) Cork Hammer Electric Drill

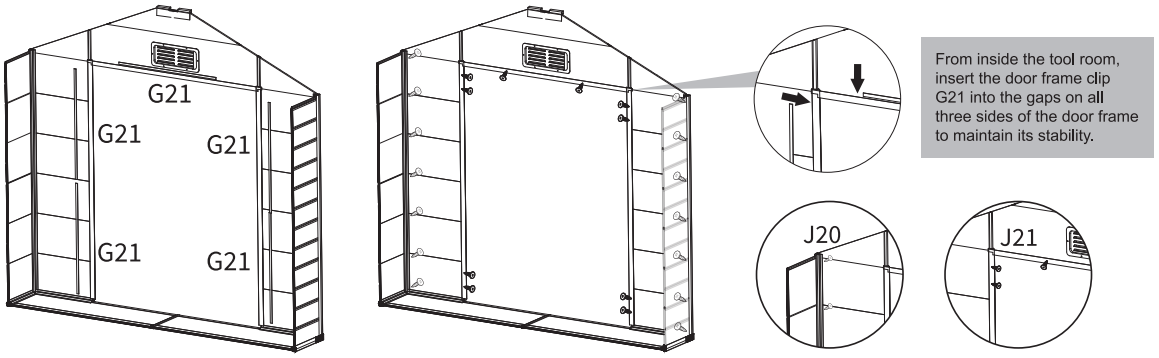

From inside the tool room, insert the door frame clip G21 into the gaps on all three sides of the door frame to maintain its stability.


48


F43(X2) F40(X6) F39(X2) J20(X22) Cork Hammer

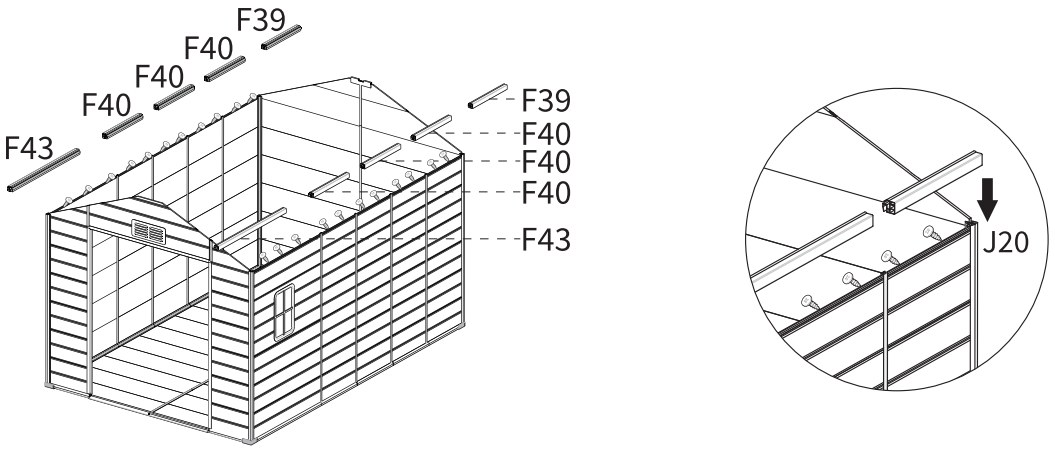



49

J3(X10) J4(X10) J65(X20) Small Wrench Allen key Cork Hammer Ladder

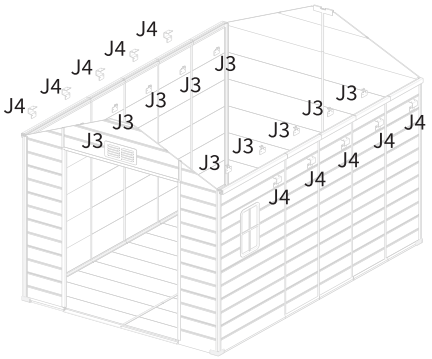

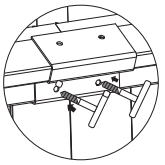

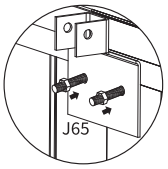

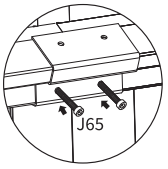



First, drill two holes on each side of the tool room, then install J3 and J4.

The screw passes through the holes of J3 and J4 and is locked with a nut.

50

J19(X40) J47(X10) J48(X5) J49(X5) Small Wrench Allen key Ladder

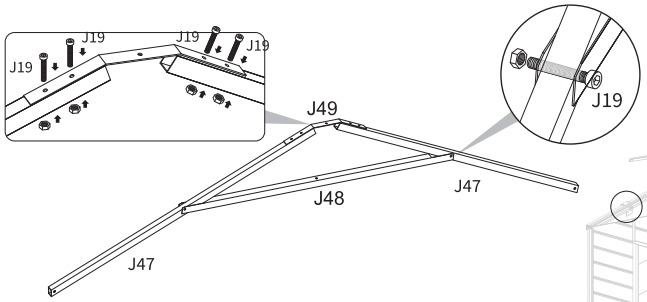


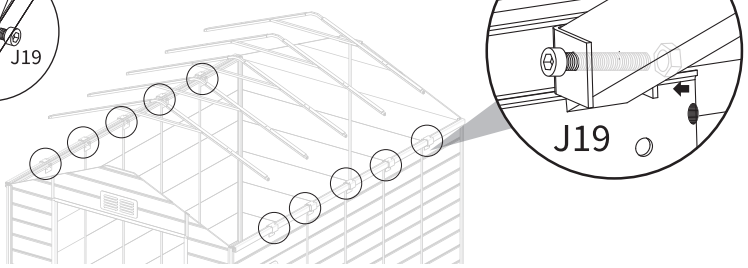



51

E13(X12) F71(X1) F70(X4) Cork Hammer Ladder Scraper



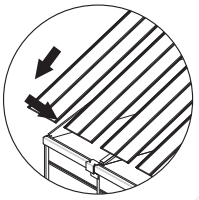


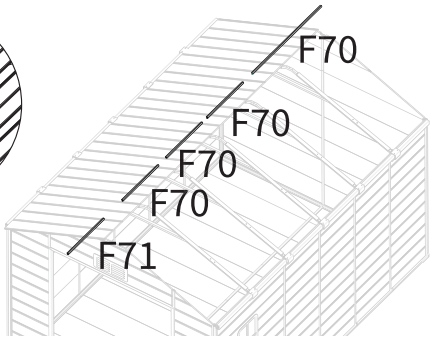


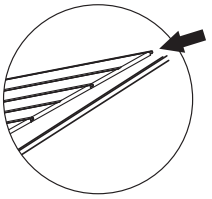

52


F44(X2) Cork Hammer Ladder

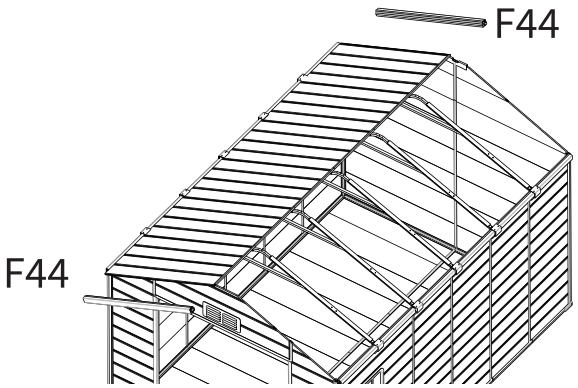

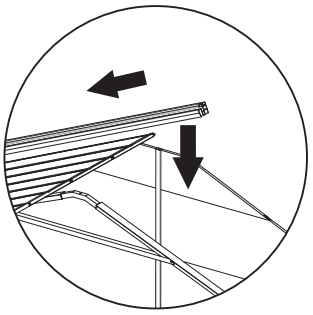


53

E13(X12) F71(X1) F70(X4) Cork Hammer Ladder Scraper

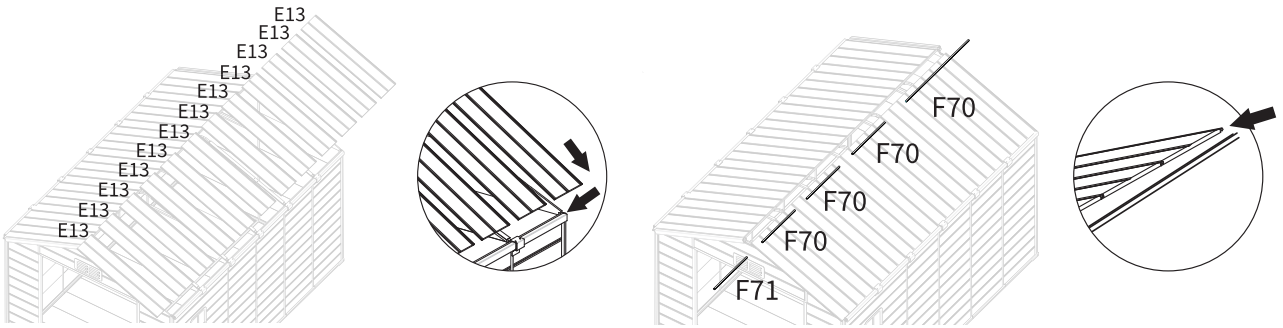


54

F44(X2) Cork Hammer Ladder

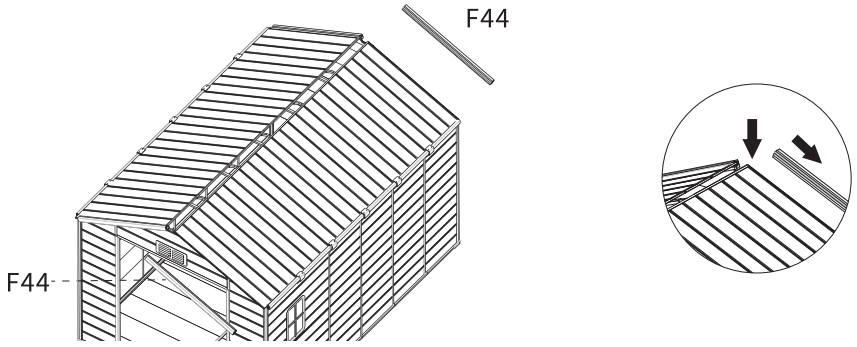


55

J37(X1) J61(X3) J46(X1) J19(X4) Cork Hammer Small Wrench Allen key Ladder

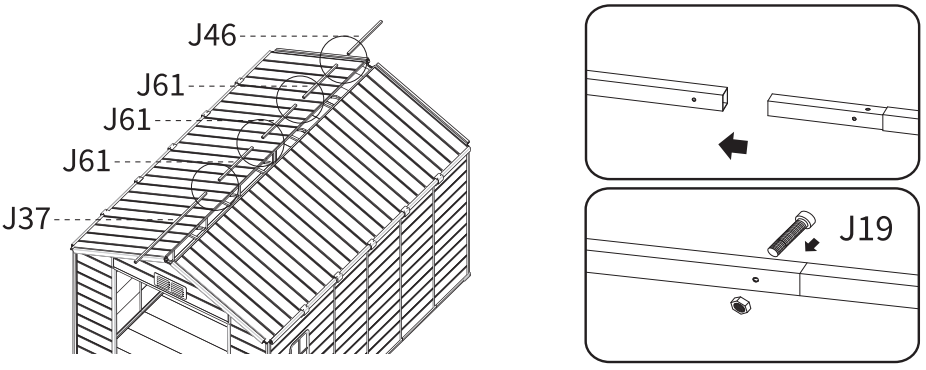



56

J45(X5) Cork Hammer Ladder

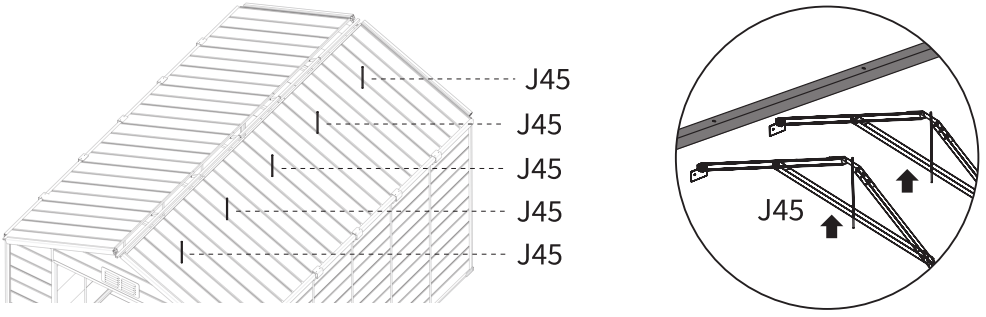



57 G10(X1) G12(X4) Cork Hammer Ladder

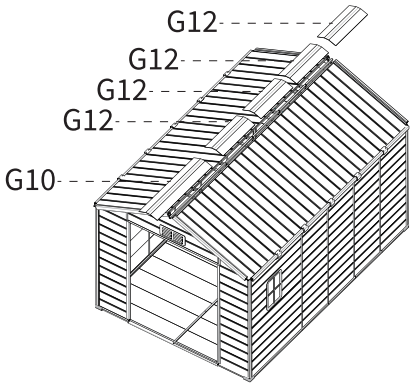

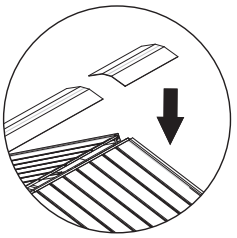



58 G8(X2) Ladder

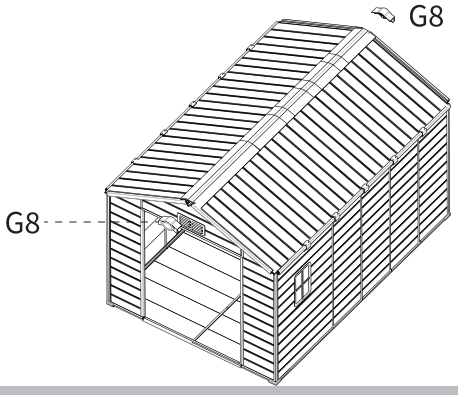

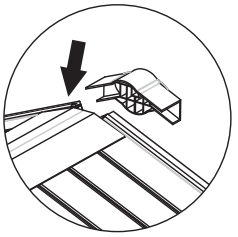



59 G9(X4) Cork Hammer Ladder

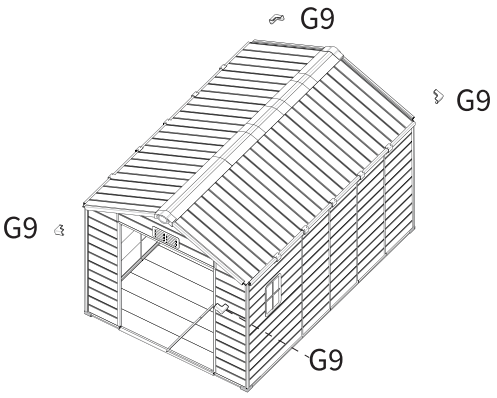

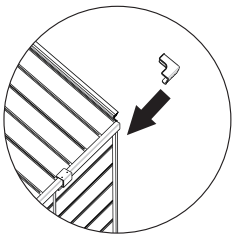


60 J20(X54) Cork Hammer Ladder

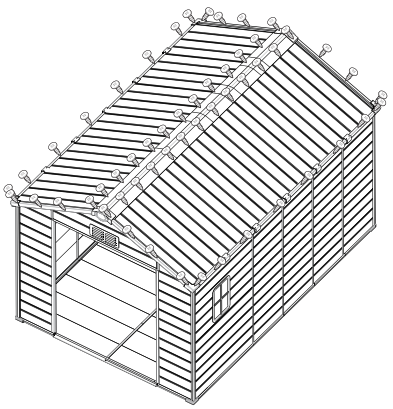

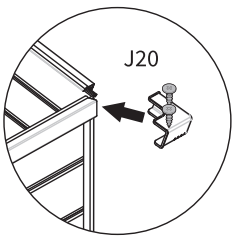


61

G16(X1) G26(X1) J43(X1) J21(X6) Electric Drill

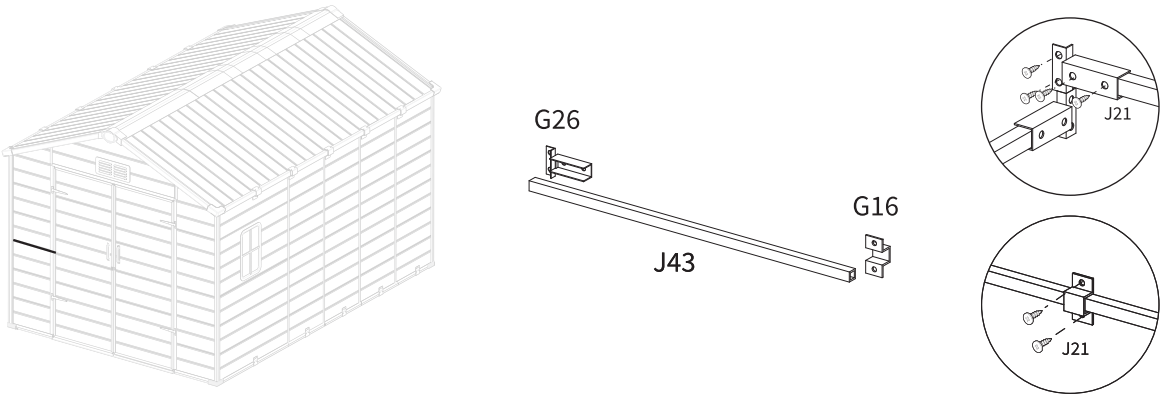


62

•G25(×2) •G23(×4) •J58(×4) •J20(×10)
•G15(×9) •J23(×1) •J21(×16)
Cork Hammer Electric Drill

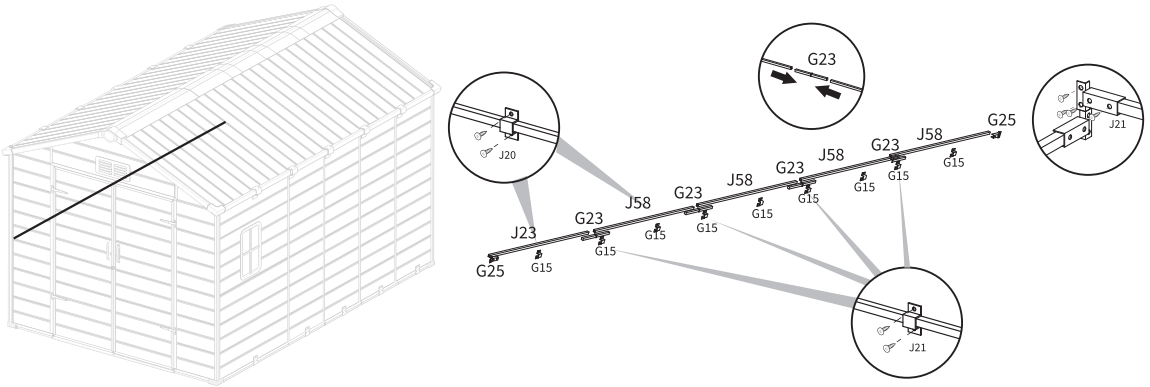


63

G16(X6) G26(X4) J43(X4) J29(X2) G28(X4) J20(X8) J21(X20) Electric Drill

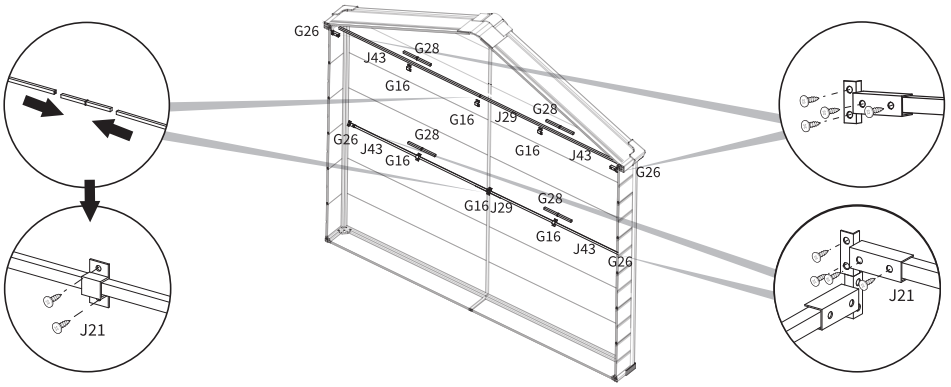


64

•G25(×2) •G23(×4) •J58(×4) •J20(×10)
•G15(×9) •J23(×1) •J21(×16)
Cork Hammer Electric Drill

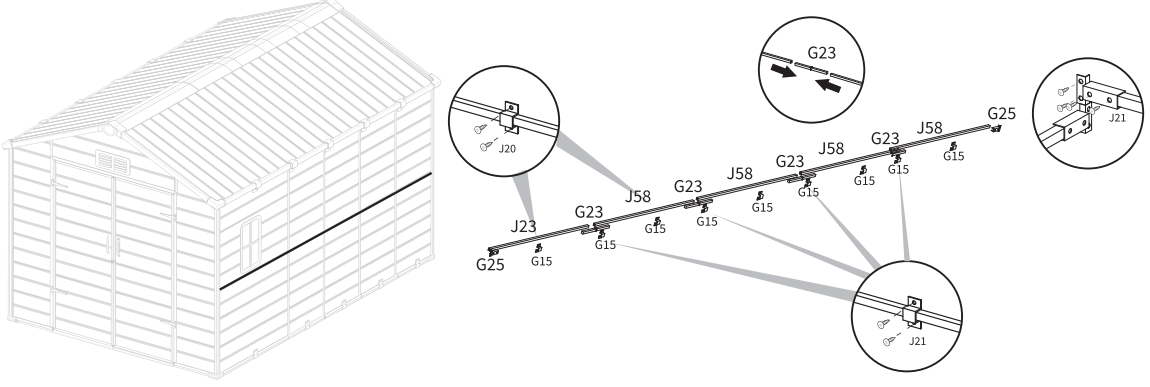


65

G16(X4) G26(X3) J43(X3) J21(X20) G28(X2) J29(X1) Electric Drill

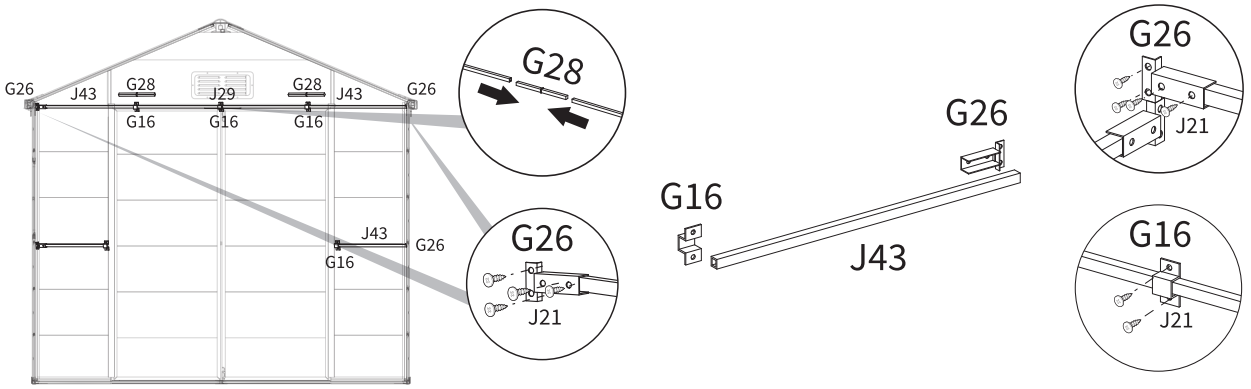

66


J21(×16) J2(×4) Electric Drill

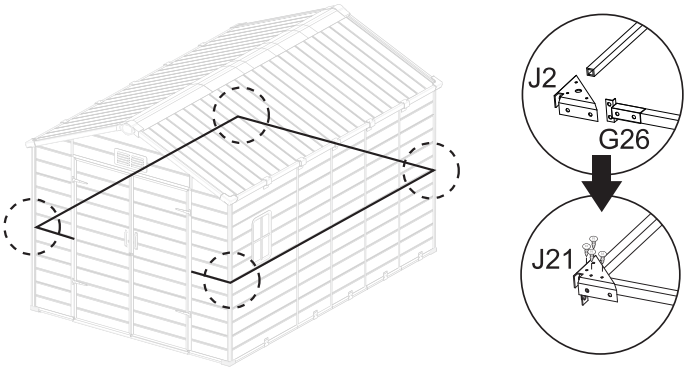

If you choose to install J2, remove a G26 at the corner, and then install the horizontal alignment screw.


67

•E58(×2) •E59(×10) •J60(×16) •H15(×4) •H17(×4) Cork Hammer Electric Drill

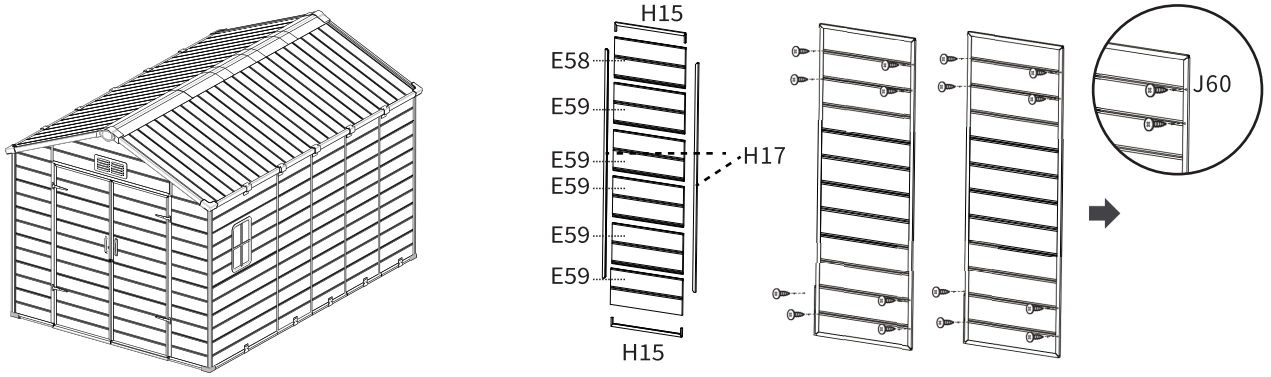


68


J17(X4) J21(X20) J20(X8) Electric Drill

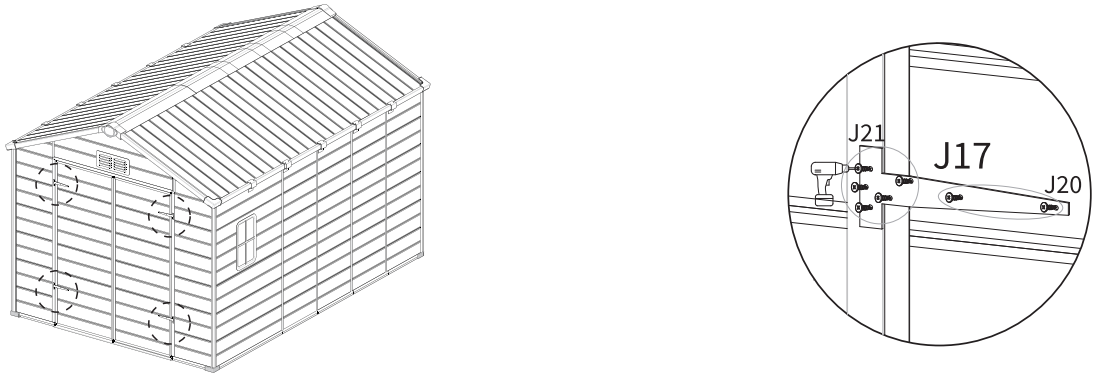


69

J16(X2) J21(X10) J18(X2) Electric Drill

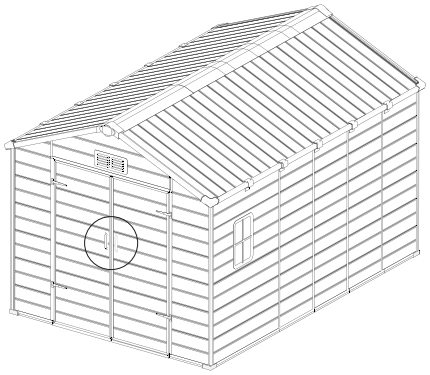


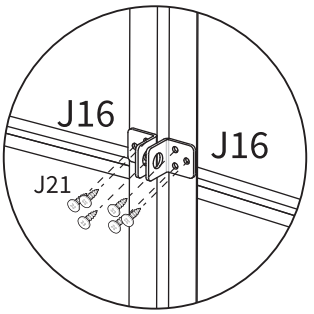


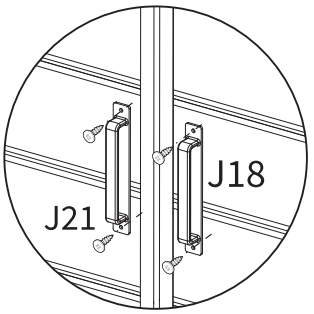



70

J31(X1) J32(X1) J59(X1) J21(X4) J20(X2) Electric Drill

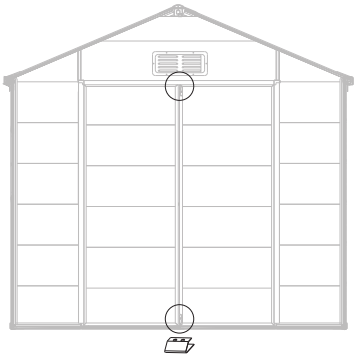

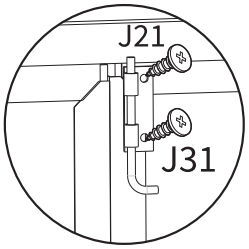


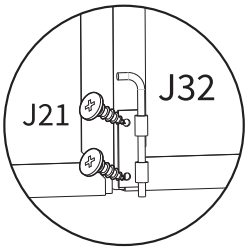


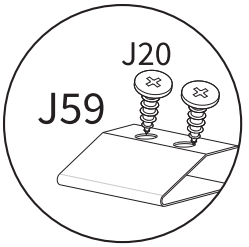


71


J1(X4) D90(X4) D91(X4) J20(X28) Electric Drill

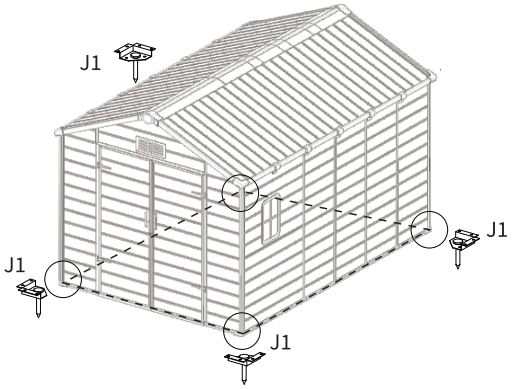

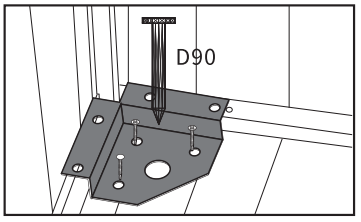


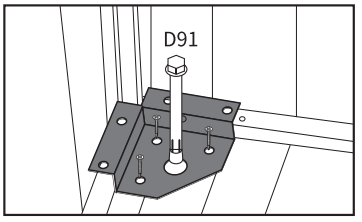



Install separately at the four corners inside the house

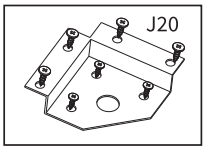


72 J6(X13) J65(X26) Small Wrench Allen key

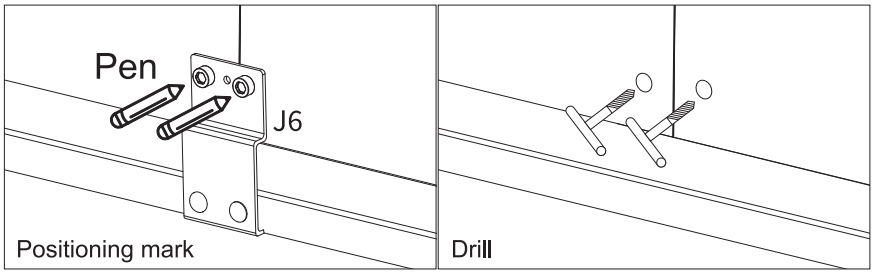

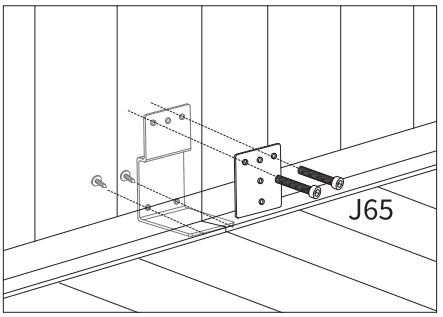

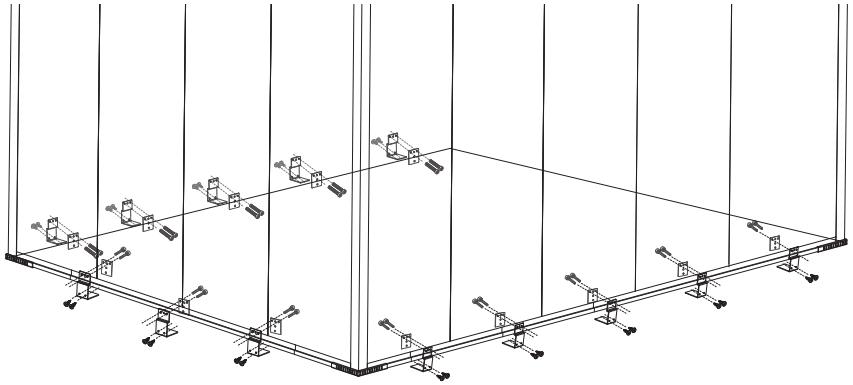

Bottom reinforcement, effective wind resistance

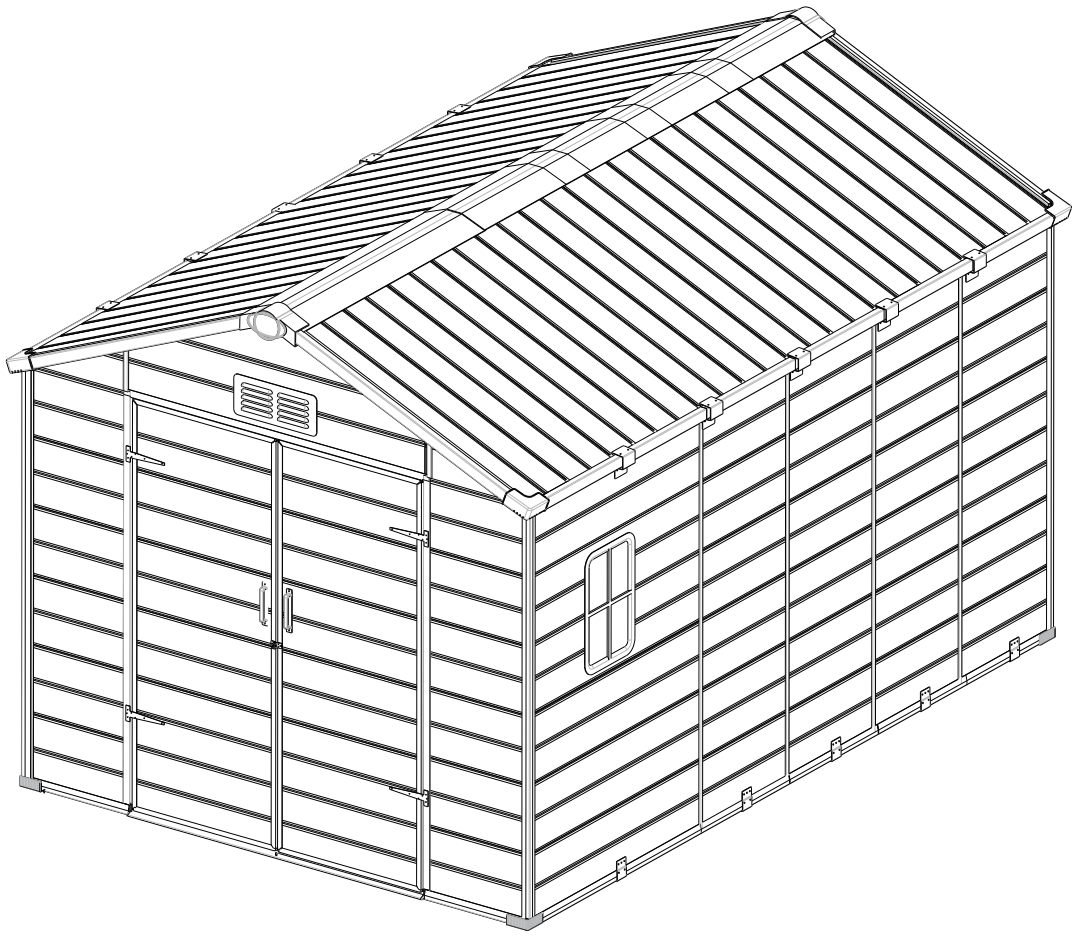

Key Installation Precautions
Adhering to safety and preparation steps is crucial for a successful installation.

Personal Safety
Wear protective gloves during assembly.
Personnel & Assistance
Assembly requires 2–3 people. Ensure the work area is clear of children and pets during the process.
Foundation & Securing
The plastic shed must be anchored to a stable base (not included) to prevent damage.
Product Limitations
This structure is designed for storage purposes only—not for habitation. Do not store hot items (e.g., recently used grills) or volatile chemicals inside.

Maintenance After Installation
Proper maintenance will extend the life of your plastic tool shed.
Cleaning
Clean the shed with a cloth and water.
Debris Removal
Remove leaves from the roof promptly to prevent staining. In snowy conditions, clear snow regularly to avoid structural damage from heavy load.
General Care
Keep the door closed and locked when not in use to prevent wind damage.