ASSEMBLE INSTRUCTIONS

Priority to Safety

•In case of a fire, do not use water to extinguish burning polypropylene.

•When using power tools, wear safety goggles and always follow the manufacturer's instructions.

•During installation, refer to the accessory guide to ensure the correct installation direction of the accessories.


Porper Use


•Weight Requirement: Ensure the item's weight is within the specified range.
Maximum weight recommendation: 600 lbs


•Storage Capacity: 260 gallons


•Safety Warnings:
Do not use any part of the product as a ladder.
Keep the product away from fire sources.
This is not a toy. Please keep children from playing inside the box.


Parts List:

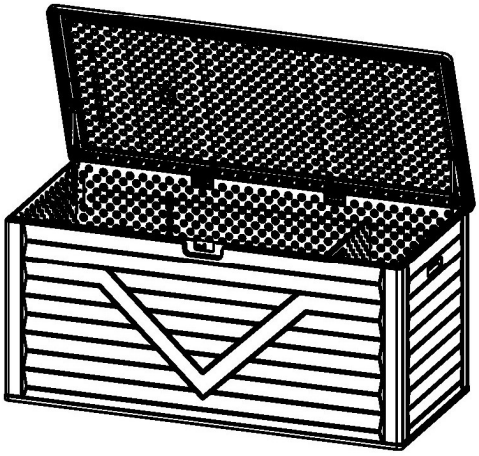

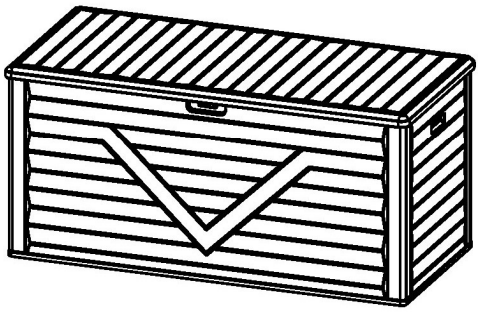


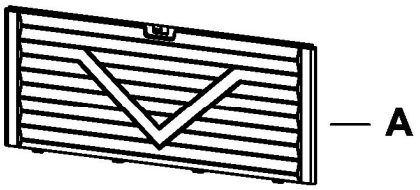

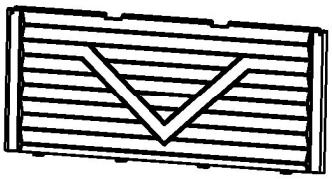


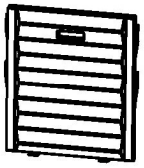








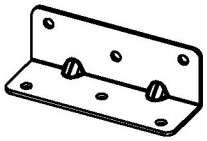


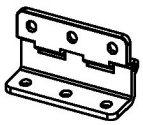






















Part	Description	QTY
A	Front Panel	1
B	Rear Panel	1
C	Side Panel	2
D	Bottom Plate	1
E	Top Plate	1
F	Partition	1
G	Connecting Iron Sheet	8
H	Hinge	2


Part	Description	QTY
I	Left Gas Spring	1
J	Right Gas Spring	1
K	Screw *18mm	58
L	Screw *16mm	12
M	Screw *15mm	7
N	Nut	1
O	L-Shaped Iron Sheet	1
P	Spanner	1

Step 1: ①Insert the side panels (C) into the bottom plate (D).
②Insert the rear panel (B) into the bottom plate (D).
③Insert the side panels (C) into the bottom plate (D).
④Insert the front panel (A) into the bottom plate (D).

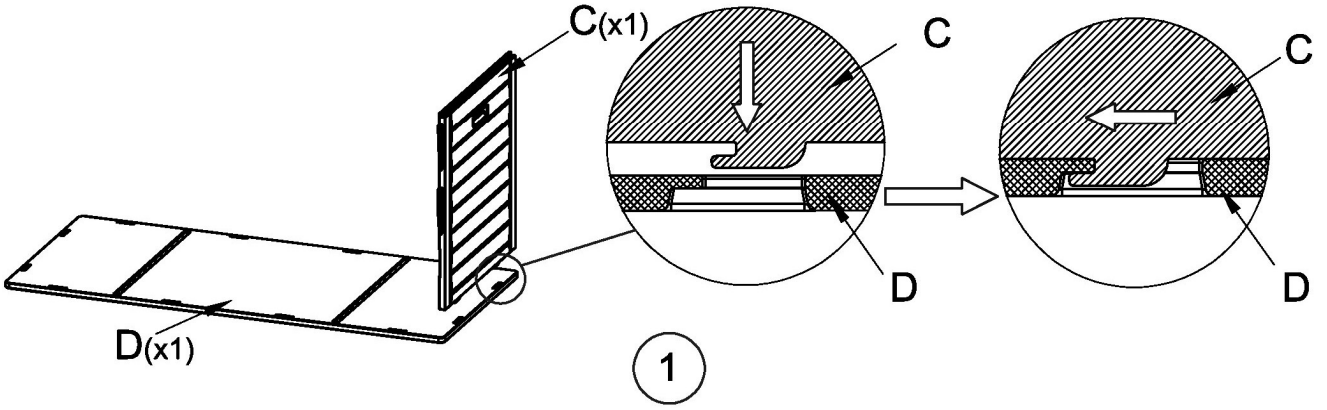


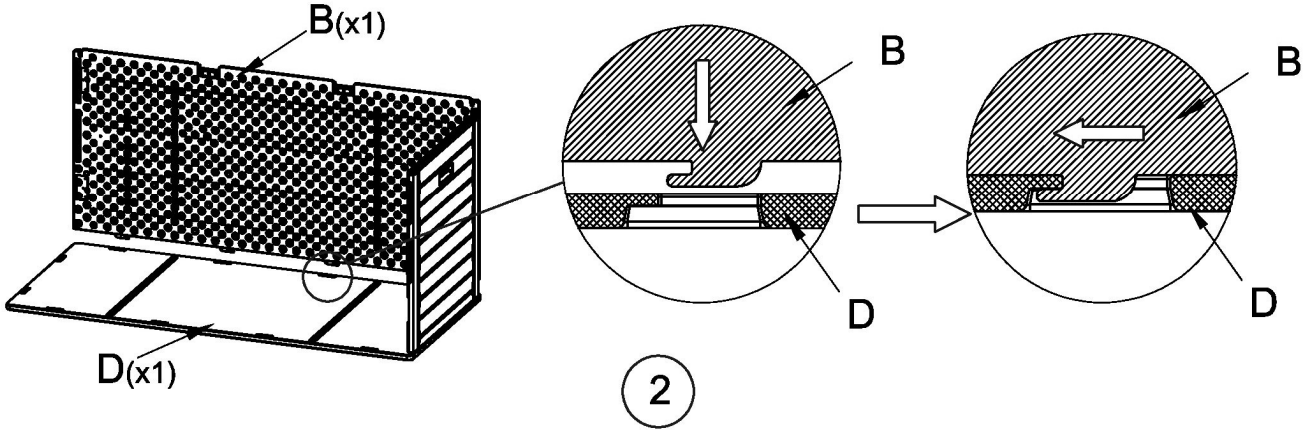

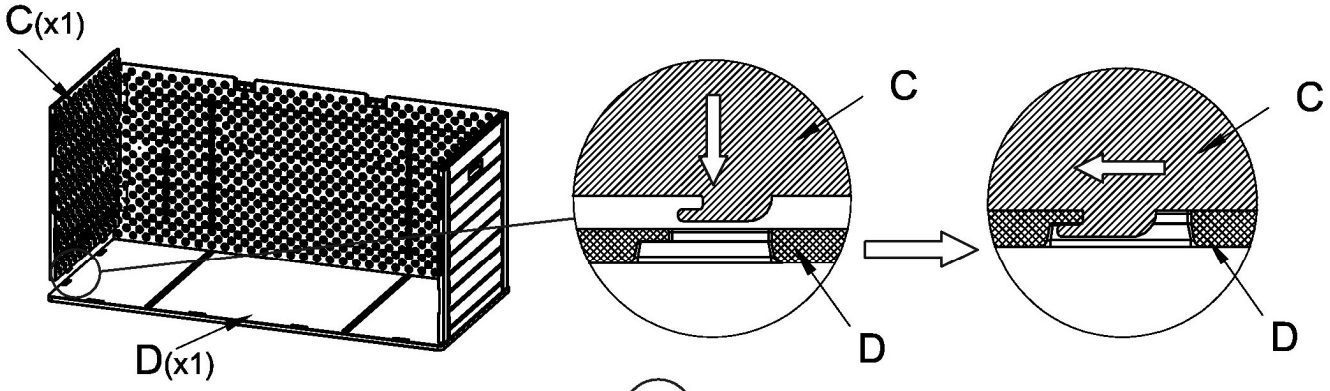


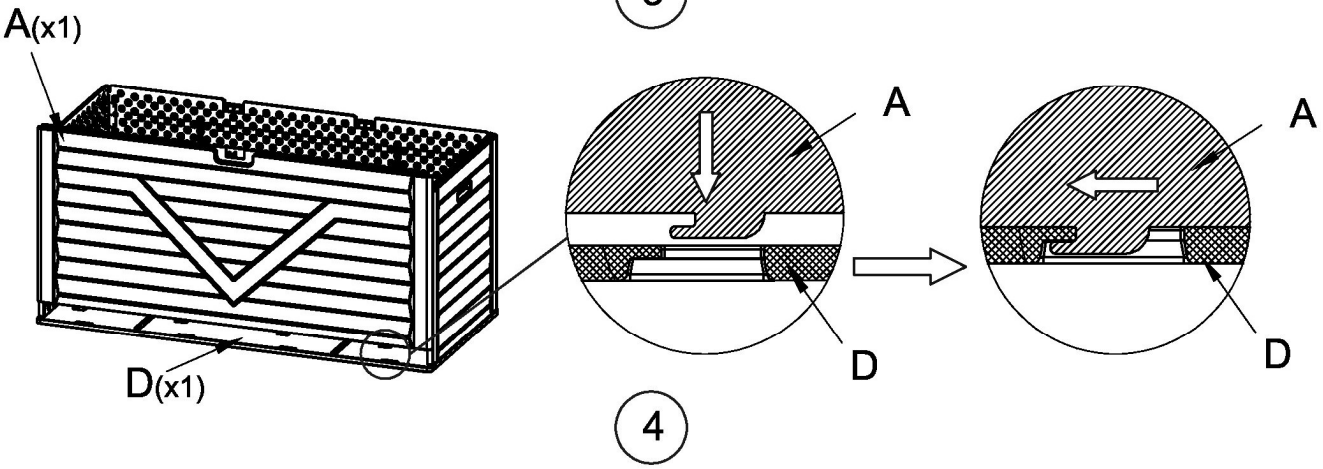


Step 2:Connect each panel with the connecting iron sheets (G) and secure them with screw*18mm (K).

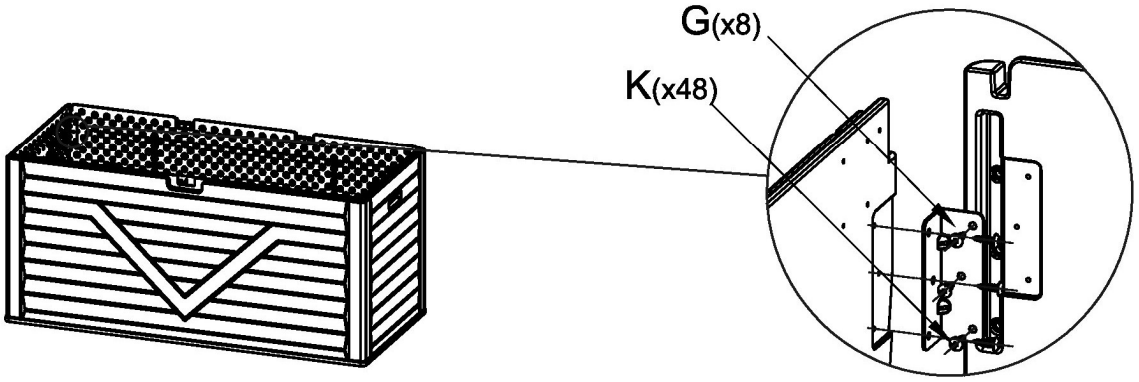


Step 3:Assemble the left gas spring (I) and right gas spring (J) onto the top plate (E) with the screw*15mm(M).

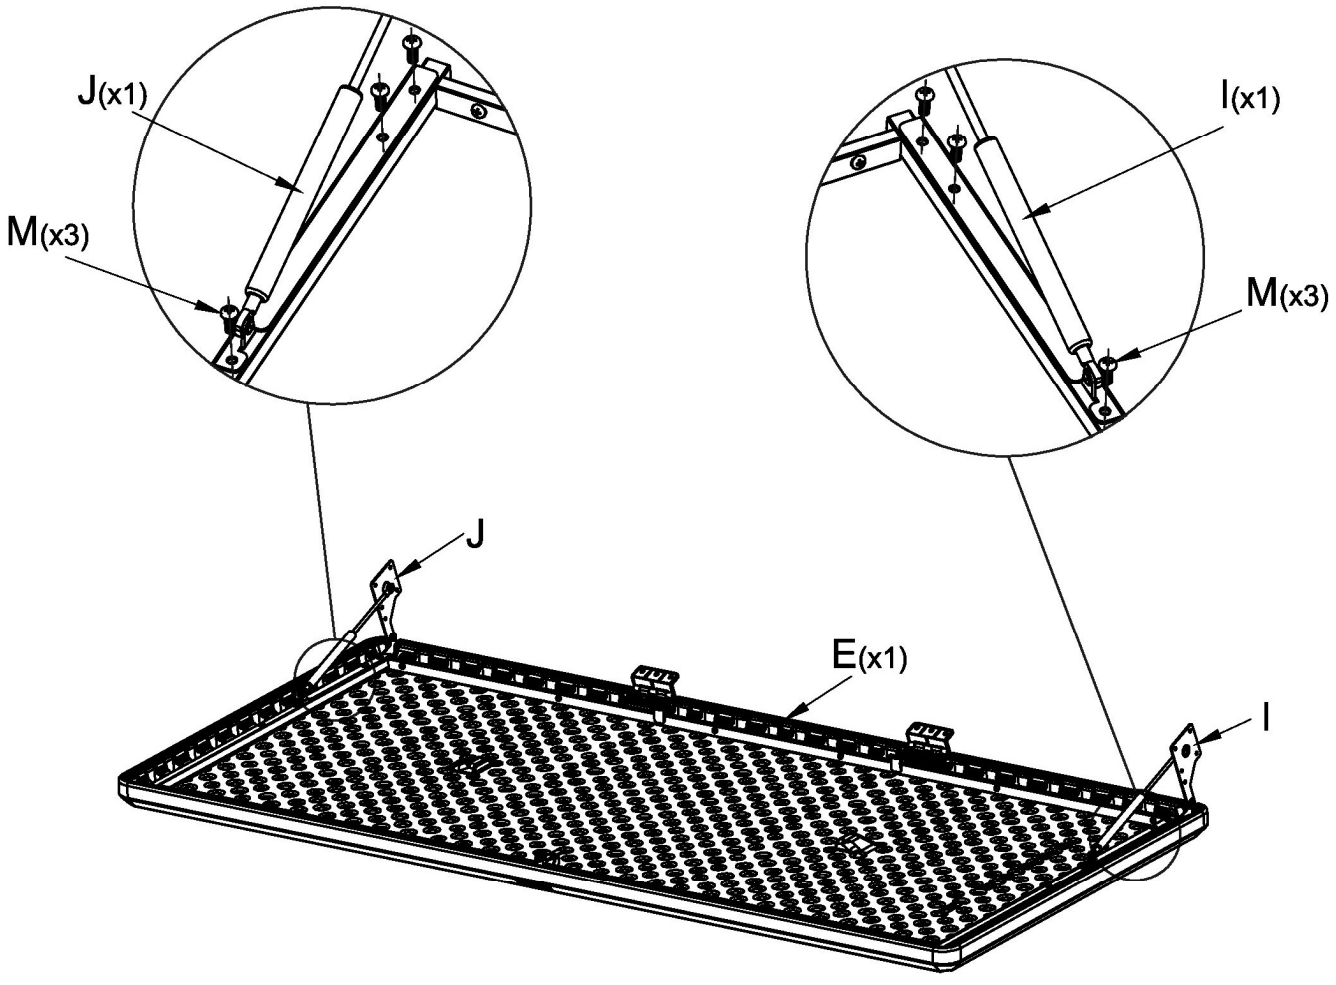


Step 4 :Assemble the hinges (H) onto the top plate (E) with the screw *16mm(L).

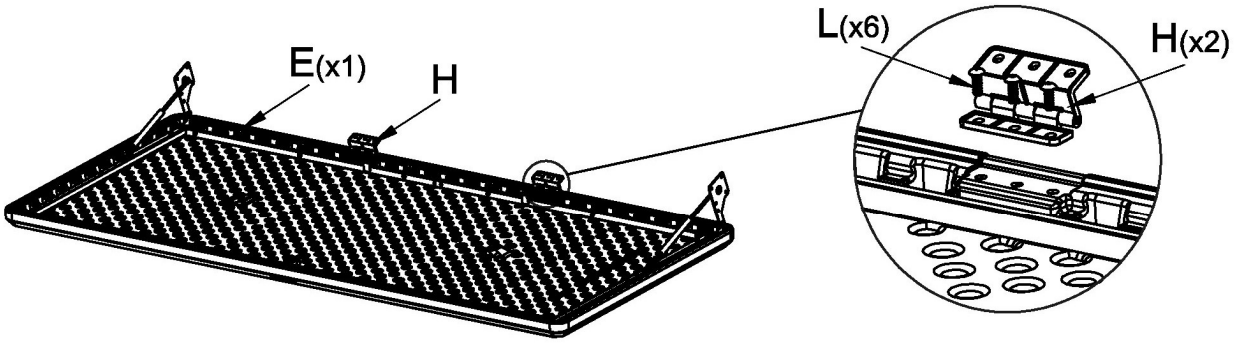


Step 5 :Assemble the left gas spring (I) and right gas spring (J) onto the box with the screw*18mm (K).

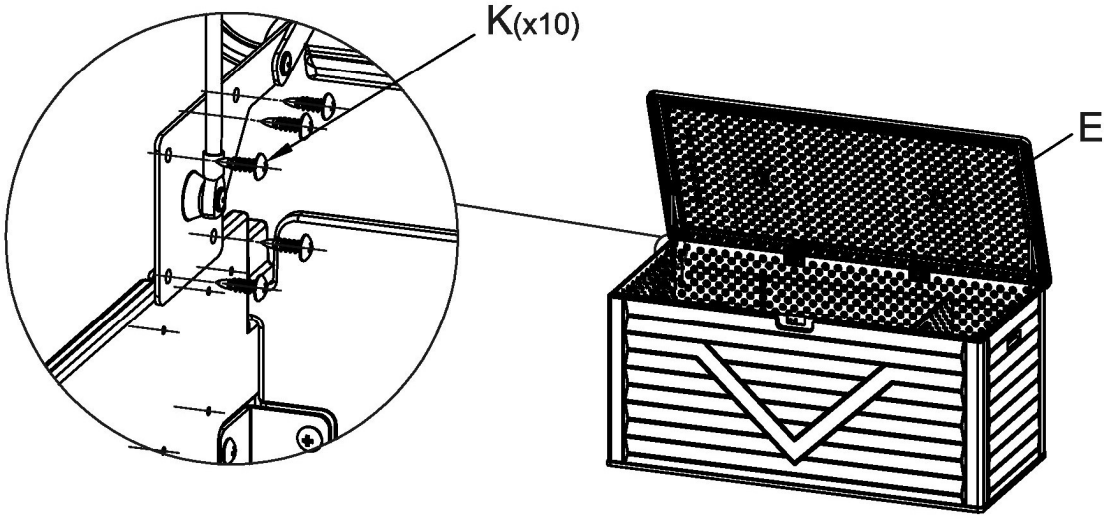

Step 6:Assemble the hinges (H) onto the box with the screw*16mm (L).

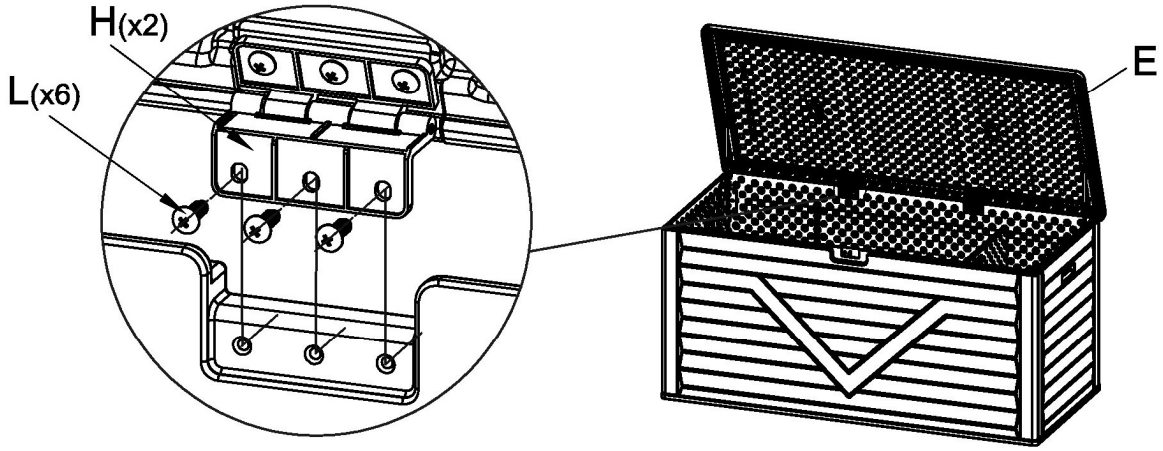

Step7:Assemble the L-shaped iron sheet (O)onto the front panel(A), and fasten it with the screw*15mm (M) and nut (N).

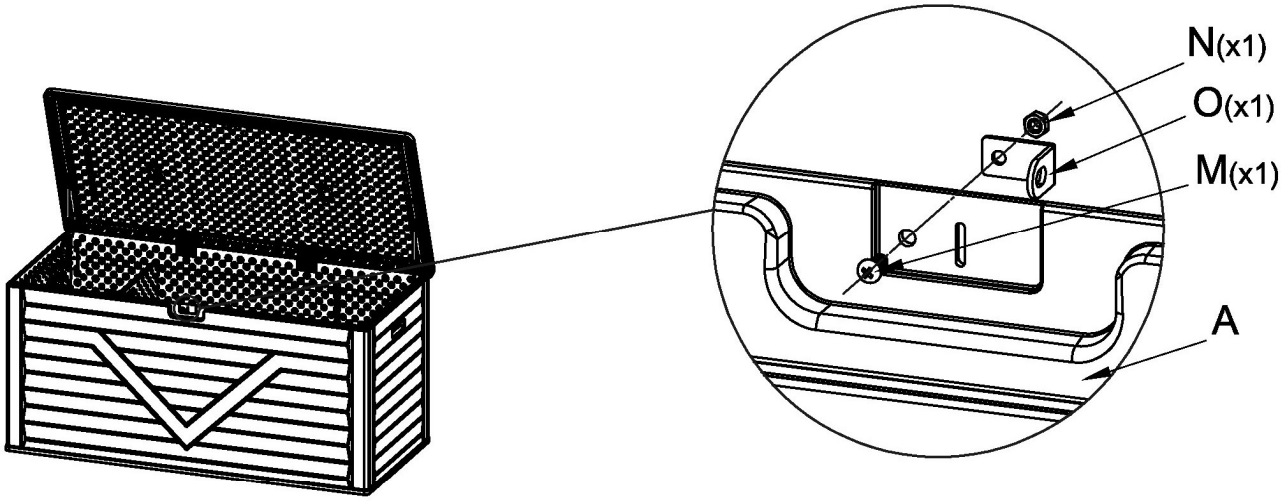

Step 8:Assemble the partition (F) onto the required position of the box.

