
LAMP TABLE

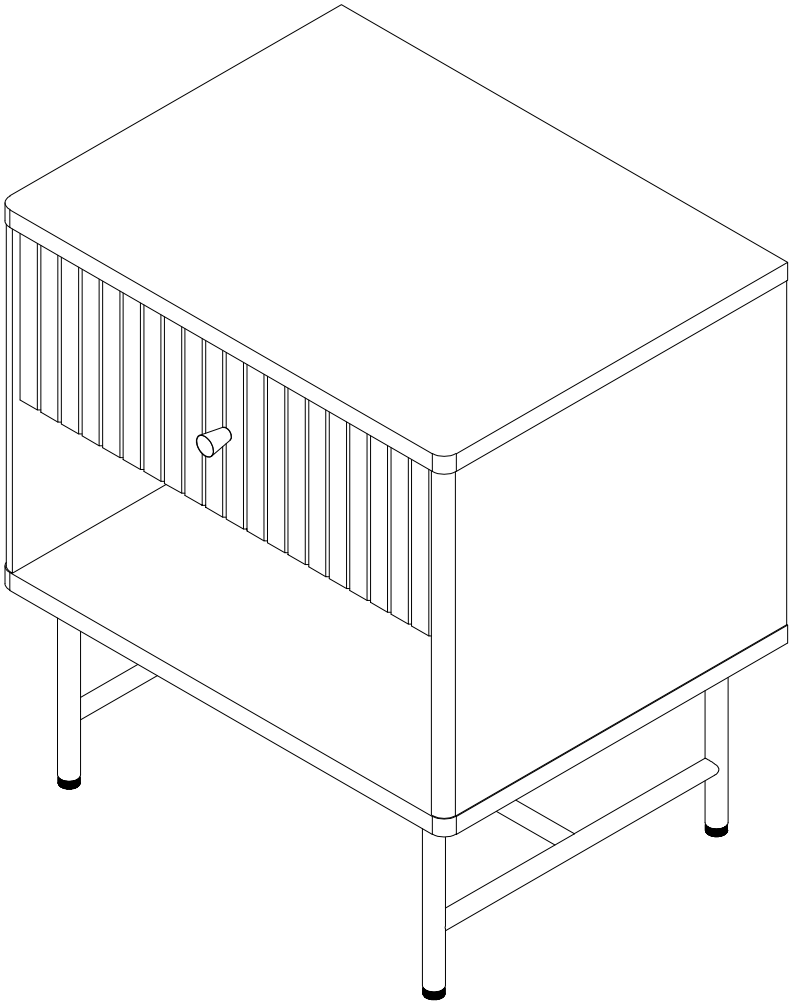

Dimensions	No. people	Assembly Time
Width: 52.0cm Depth: 40.0cm Height: 57.9cm		45 MINS (approx.)

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.



- Dispose of all packaging carefully and responsibly.
- Warning : Do not over tighten the handle screw that way break the mirror.


Care and Maintenance

- Please clean using cloth with glass cleaner, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

- **Assemble all parts and bolts loosely during assembly,only once the product is complete should you fully tighten the bolts**
- Regularly check and ensure That all bolts and fittings are tightened properly.



Exploded View

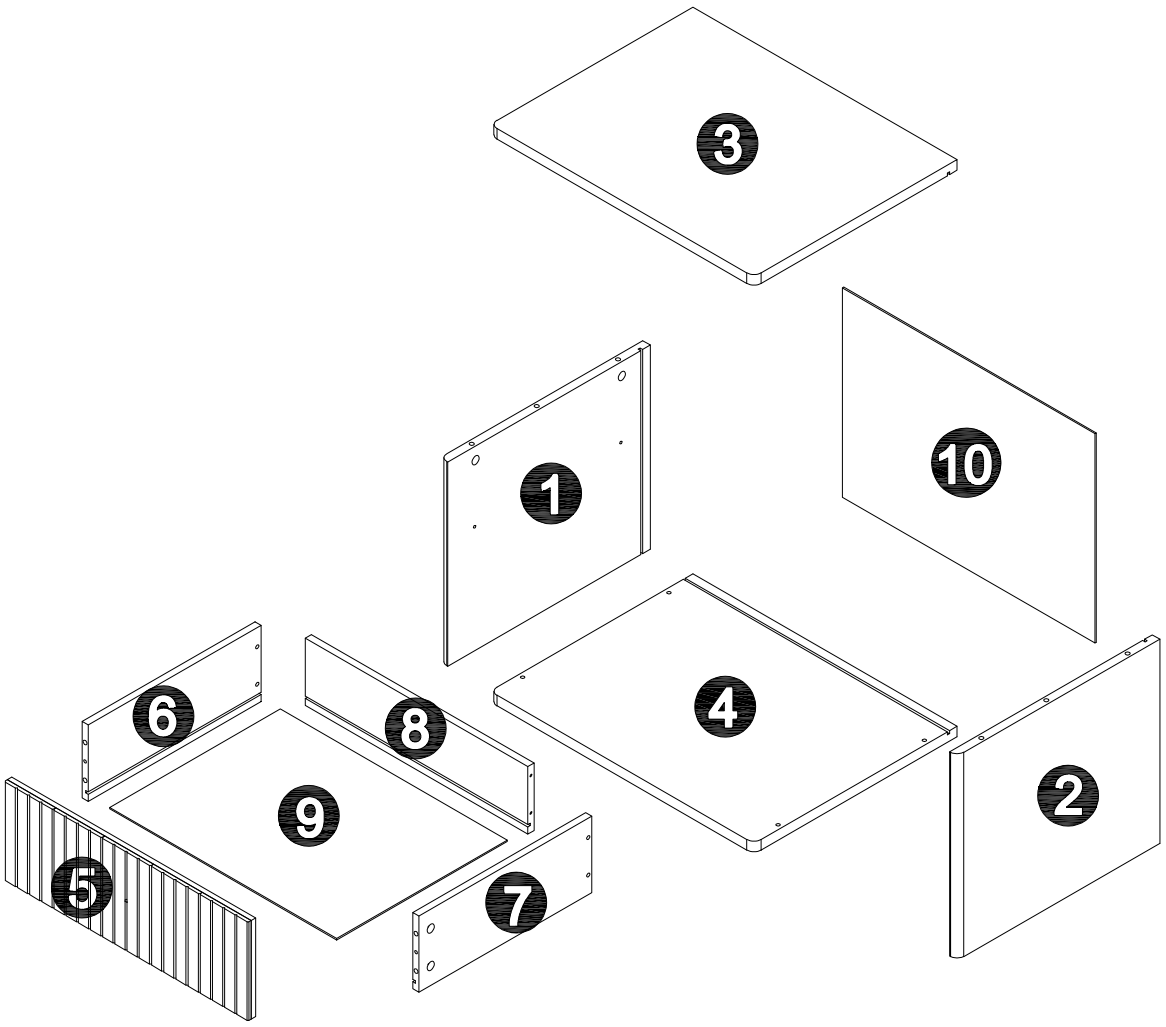

Components - Panels

Please check that you have all the components listed below before constructing your items.







Part No	Description	Qty
1	Side Panel (Left)	1
2	Side Panel (Right)	1
3	Top Panel	1
4	Bottom Panel	1
5	Drawer Front	1
6	Drawer Side (Left)	1
7	Drawer Side (Right)	1
8	Drawer Back	1
9	Drawer Bottom	1
10	Back Panel	1

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


***Hardware packed separately according to the code.**

(A)	**CSK M3.5 X 12MM**	**(B)**	**CSK M3.5 X 15MM**	**(C)**	**EURO SCREW M6 X 9MM**	**(D)**	**SCREW (HEAD 11MM) M6 X 13MM**
							
	4 unit		**4 unit**		**4 unit**		**12 unit**
(E)	**JCBC(W) M6 X 40MM**	**(F)**	**JCBC SCREW M6 X 12MM**	**(G)**	**WOOD DOWEL Ø6 X 20MM**	**(H)**	**WOOD DOWEL Ø8 X 25MM**
							
	8 unit		**2 unit**		**2 unit**		**2 unit**
(J)	**BOLT DOWEL 20 X 5MM**	**(K)**	**CAM 15/15**	**(L)**	**CAM 15/12**	**(M)**	**HANDLE (MC4 X 22MM)**
							
	8 unit		**4 unit**		**4 unit**		**1 set**
(N1) & (N2)	**DRAWER SLIDE (350MM)**	**(P1) & (P2)**	**DRAWER SLIDE (350MM)**	**(Q)**	**H SHAPE METAL LEG (358 X 195 X D19MM)**	**(R)**	**METAL CENTER ROUND SUPPORT BAR**
							
	1 set		**1 set**		**2 unit**		**1 unit**
(S)	**ALLEN KEY M4**	**(T)**	**BACKPLY STOPPER**				
							
	1 unit		**4 unit**				

Tools Required

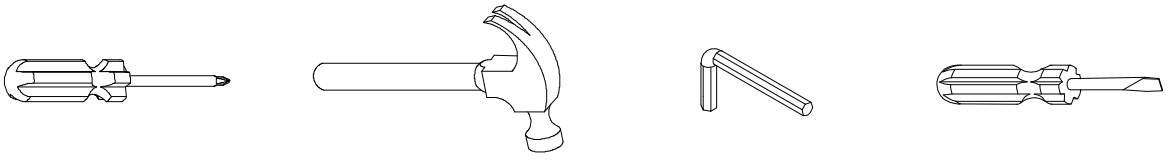


Ruler - Use this to measure your screws (mm)

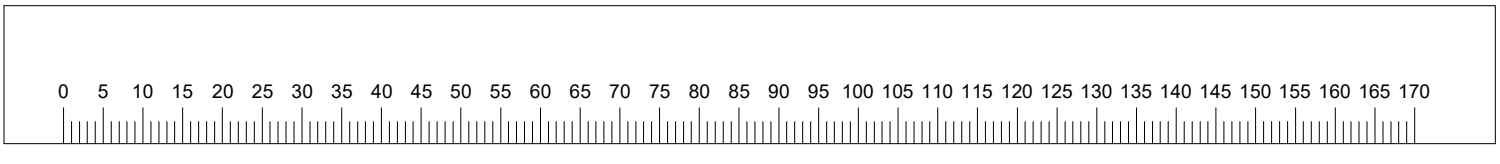


SPECIAL TIPS FOR FITTING CAM-LOCKS AND CAM-BOLTS

CAM-LOCK

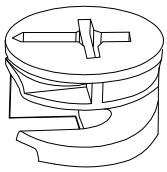


WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-BOLTS
TURN CLOCKWISE UNTIL SECURE

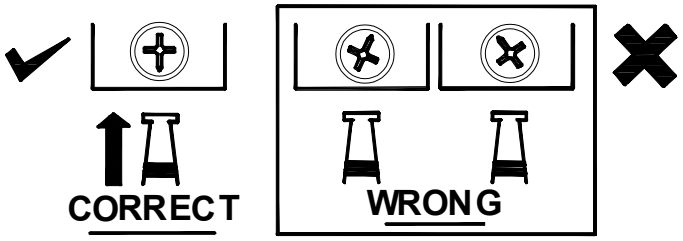



Align with long point of cross

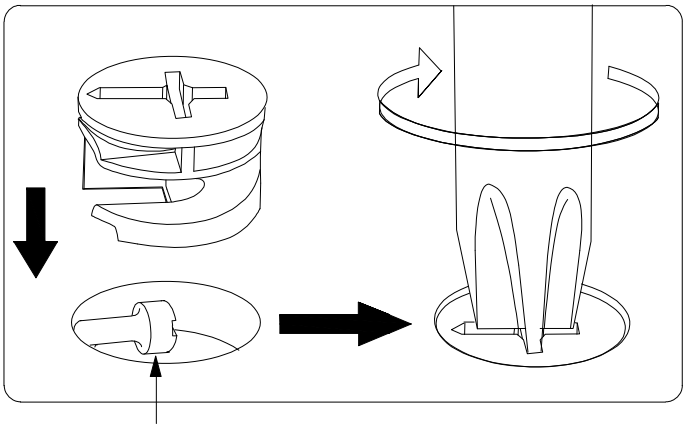


CAM-BOLT

Tighten until shoulder is flush with panel.Do not overtighten or undertighten (see example below)

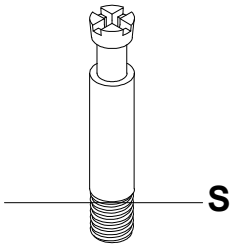


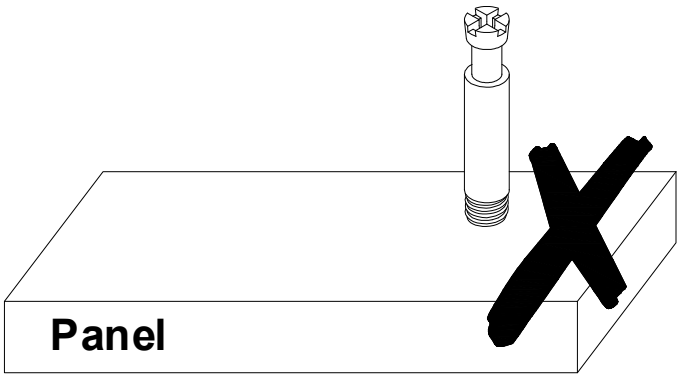

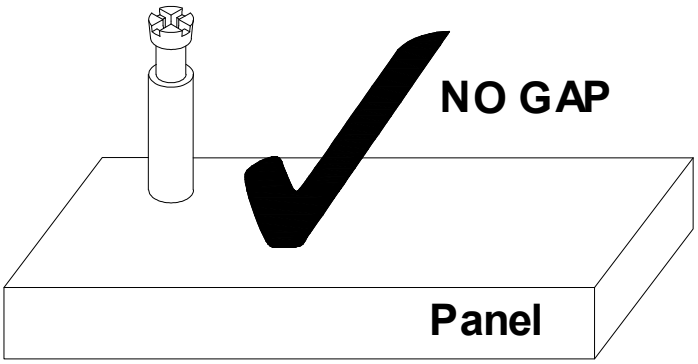



Assembly Instructions


Step 1



H X 2

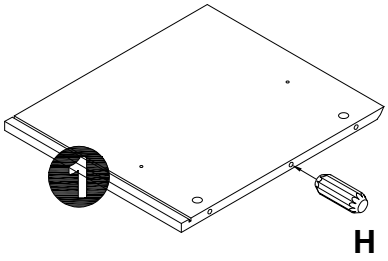

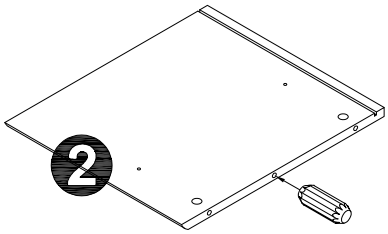

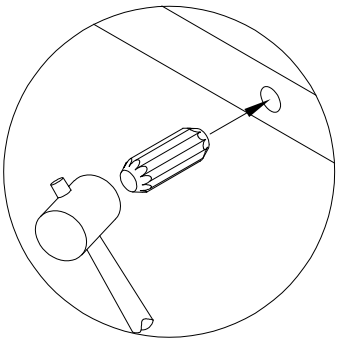


Step 2





C X 4





N1 & N2 X 1SET

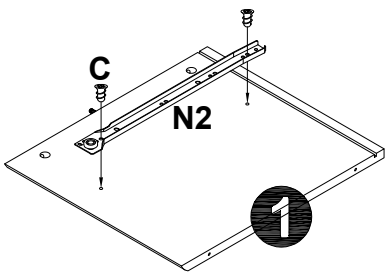

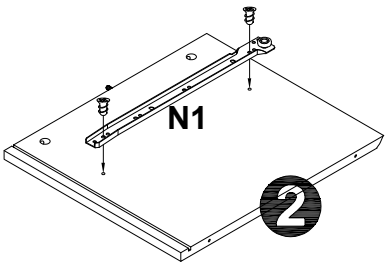

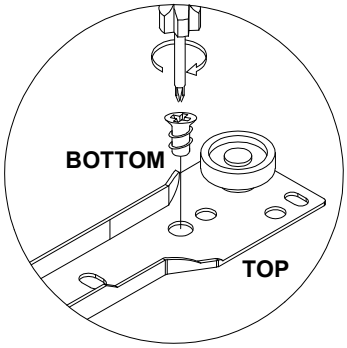


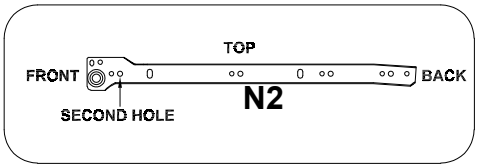


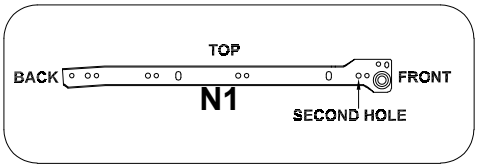


PLEASE ENSURE TO FIX THE SCREWS AS PER POINTED HOLES INSTRUCTION TO AVOID DISTORTION OF OVERALL LOOK OF PRODUCTS.

Step 3

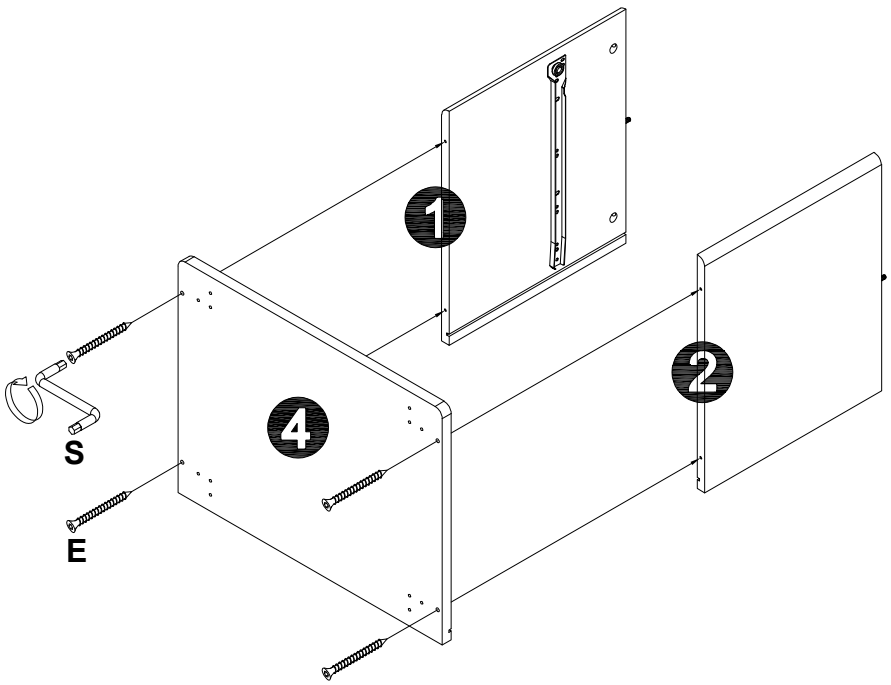


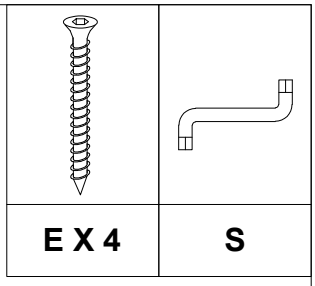



Step 4

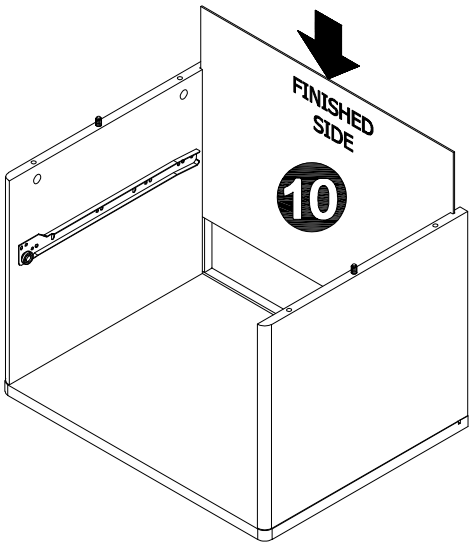


Step 5

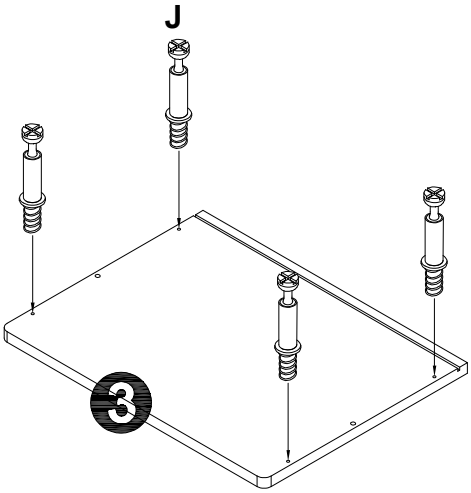

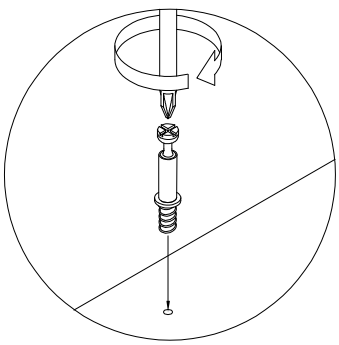


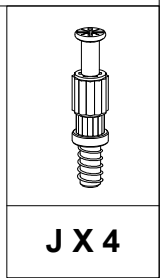


Step 6

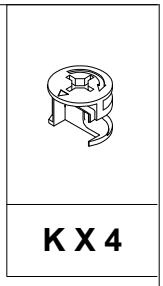


K X 4

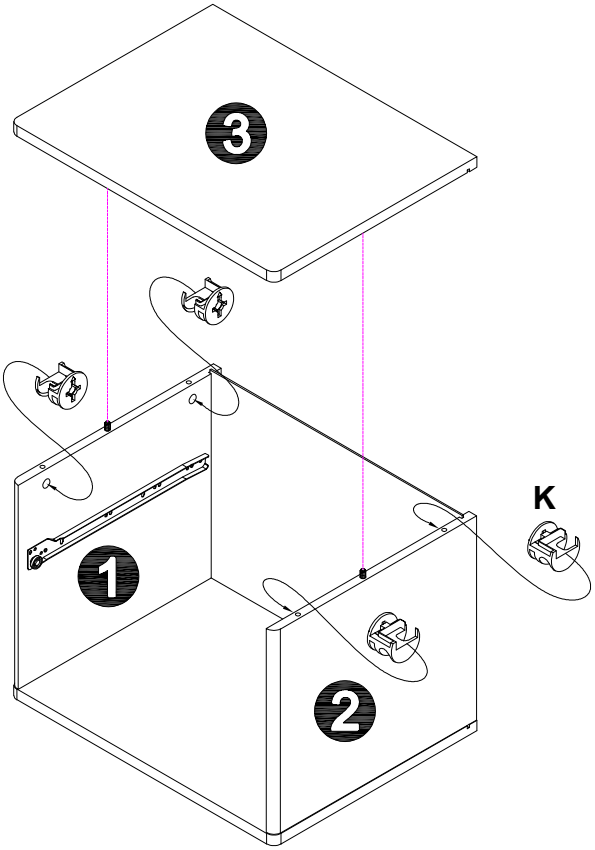


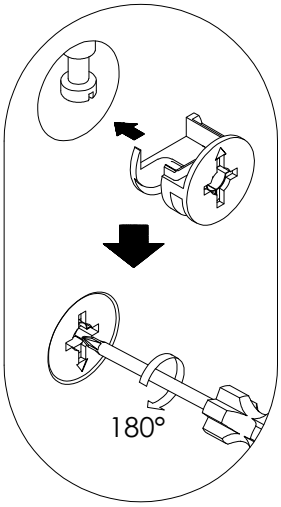


Step 7

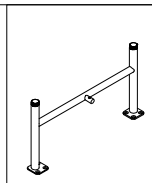


Q X 2

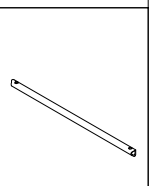


R X 1

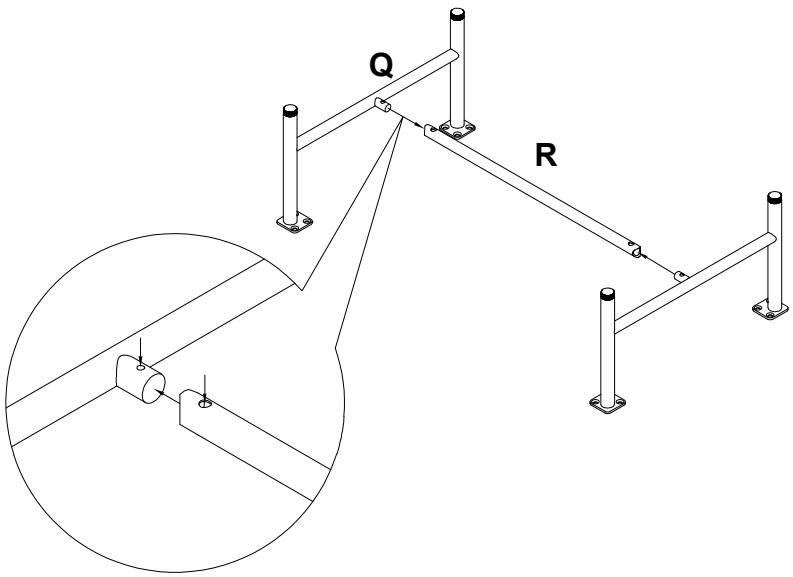

Step 8

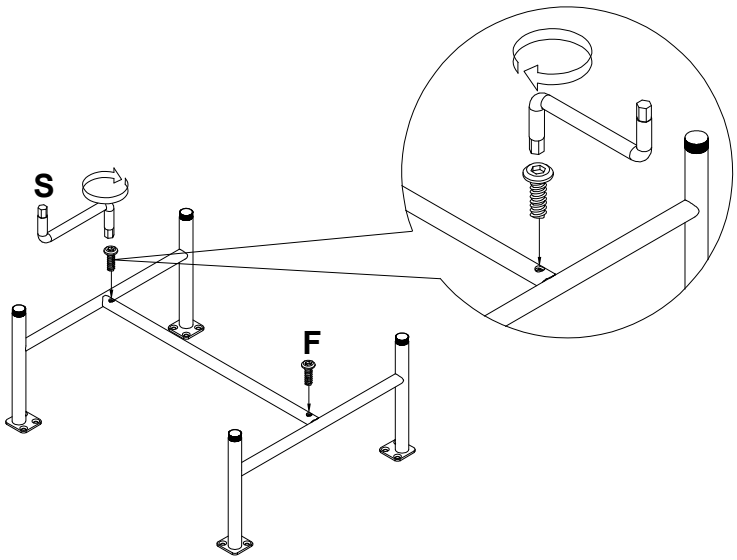




F X 2 | S


NOTE :
DO NOT FULLY TIGHTEN.

Step 9




D X 12

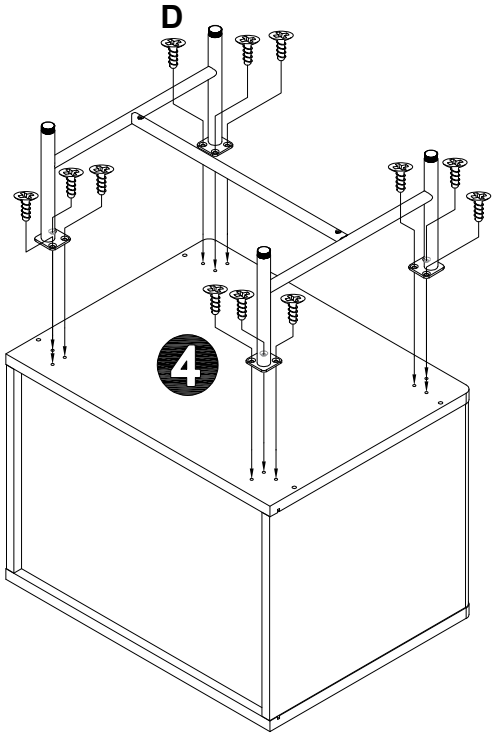

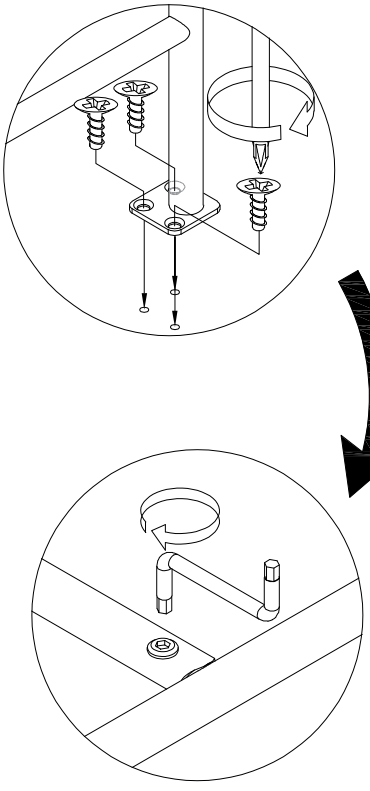


NOTE :
FULLY TIGHTEN ALL BEFORE CONTINUE TO STEP 10.


Step 10

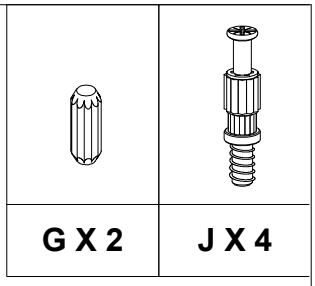


G X 2 | J X 4

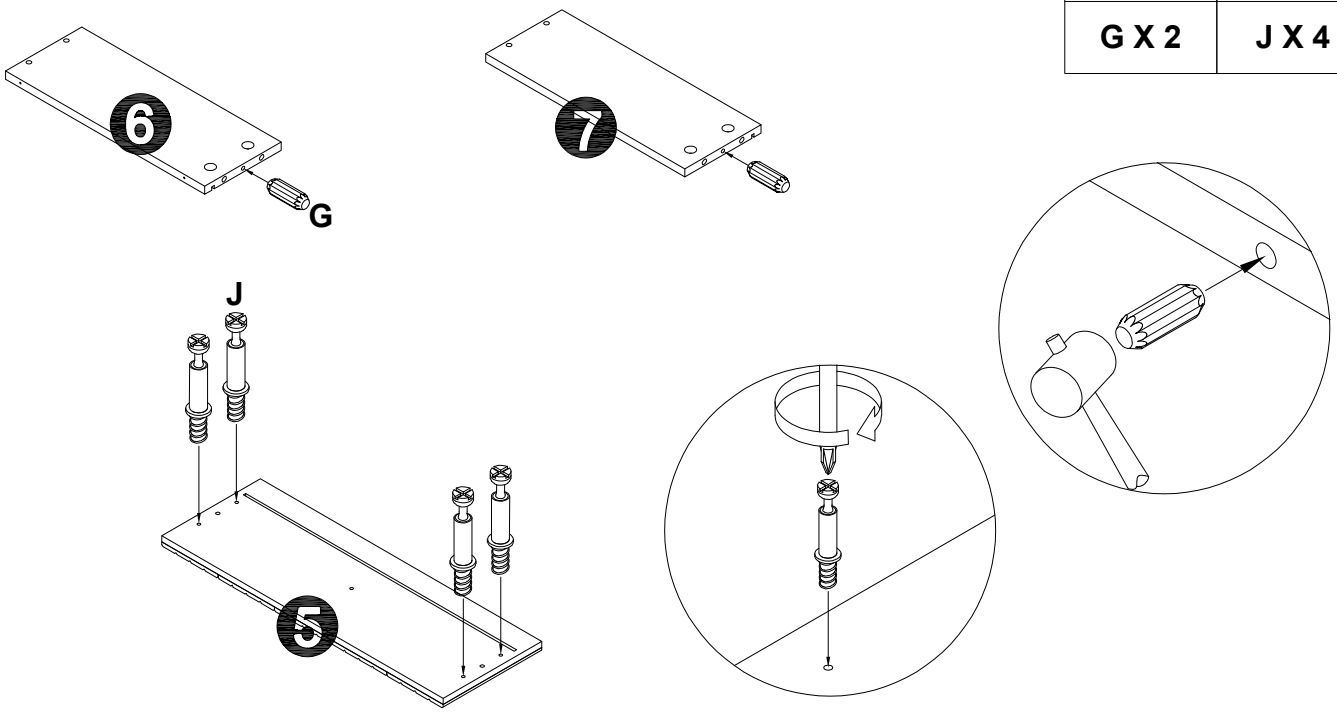

Step 11

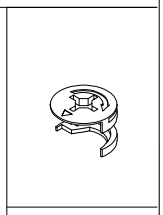


L X 4

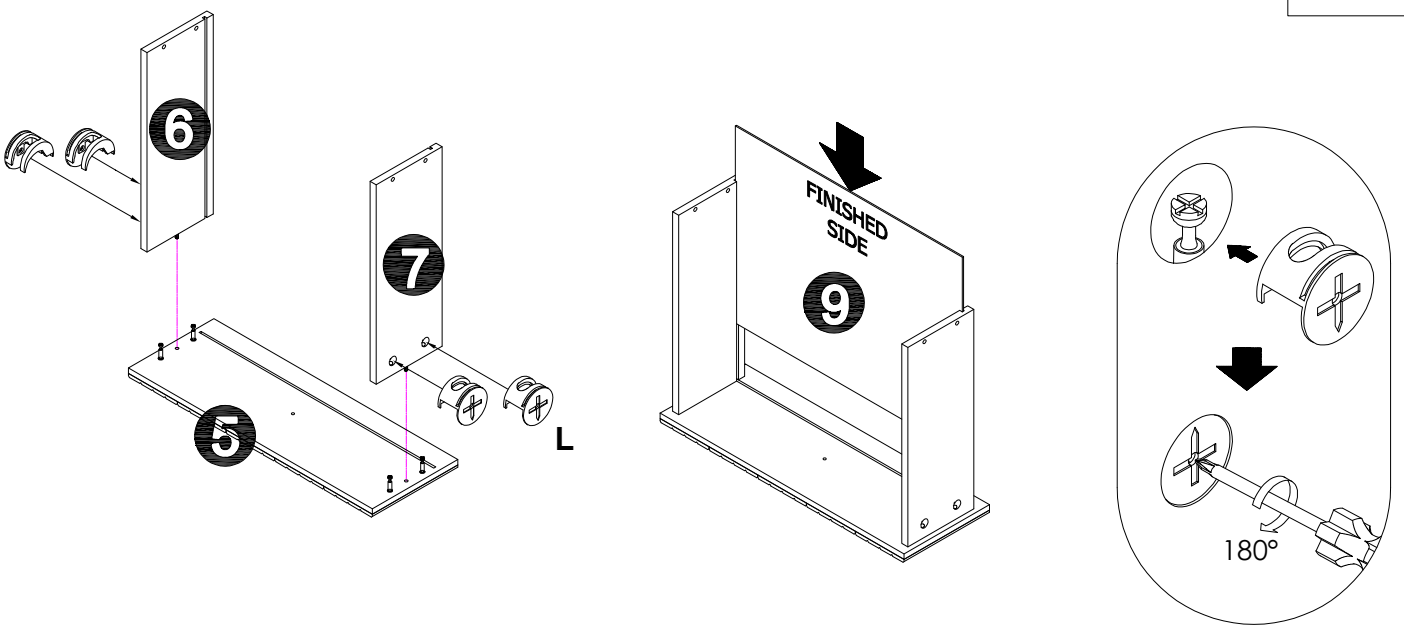

Step 12




E X 4	S

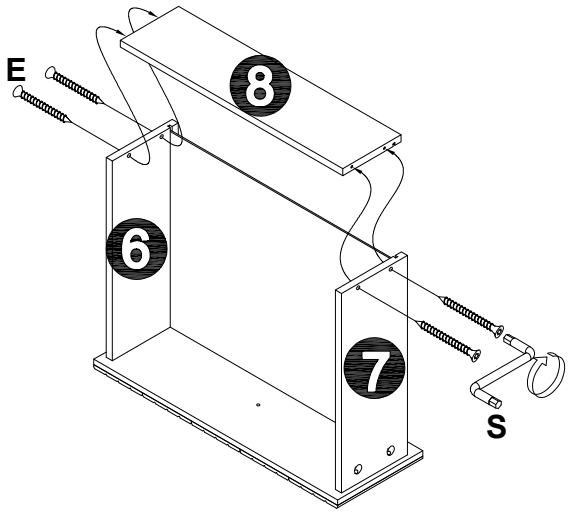


Step 13





M X 1

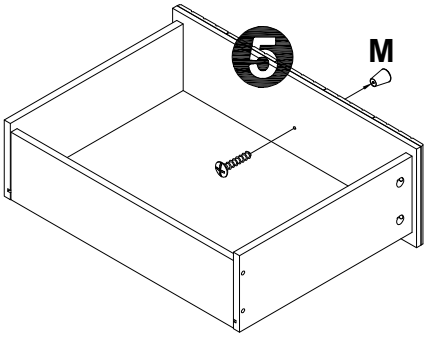


Step 14


	
A X 4	P1 & P2 X 1SET

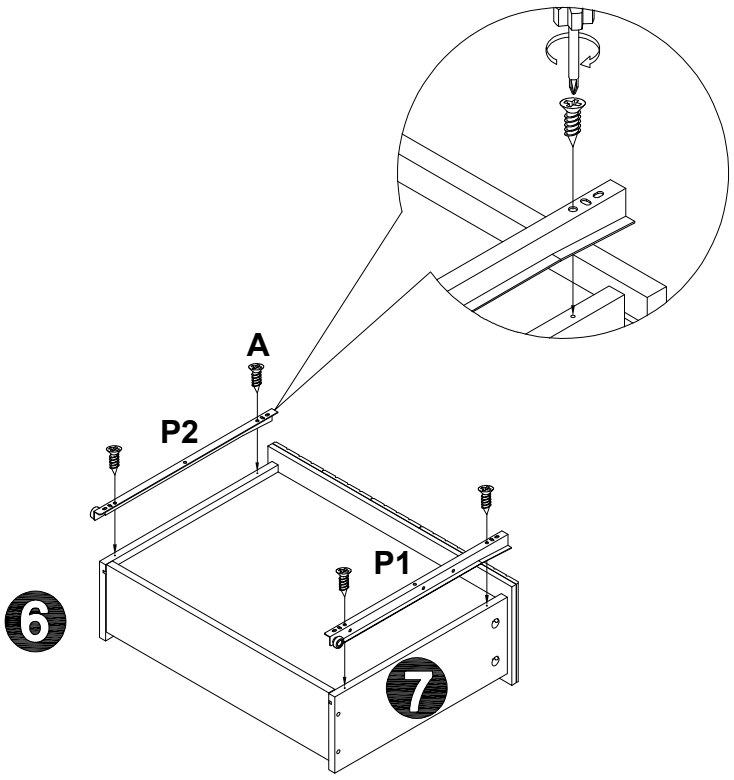

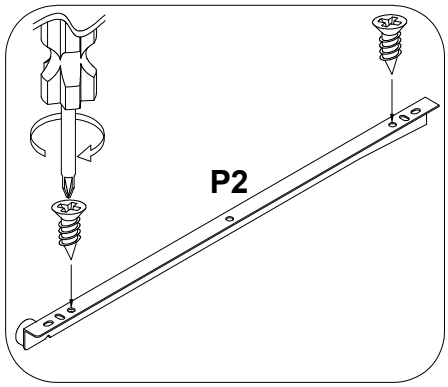

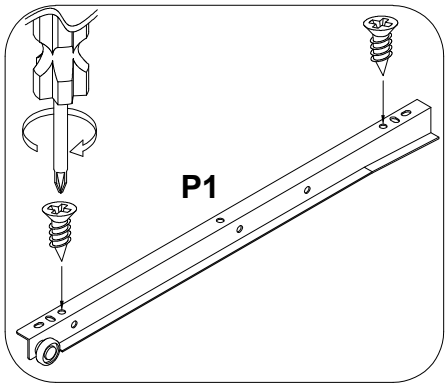



Step 15

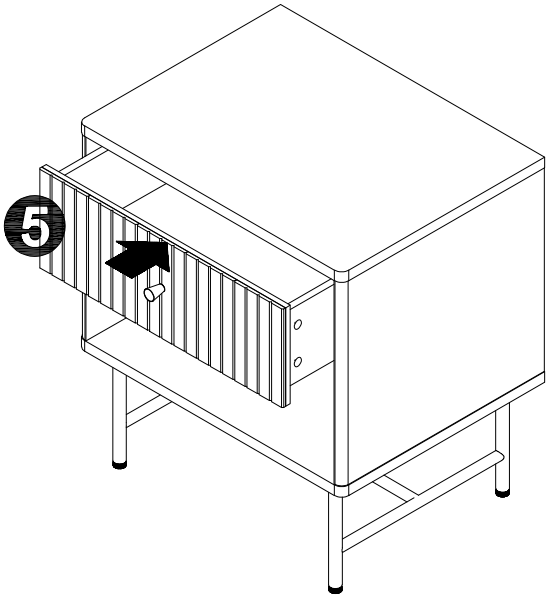

Step 16

	
B X 4	T X 4

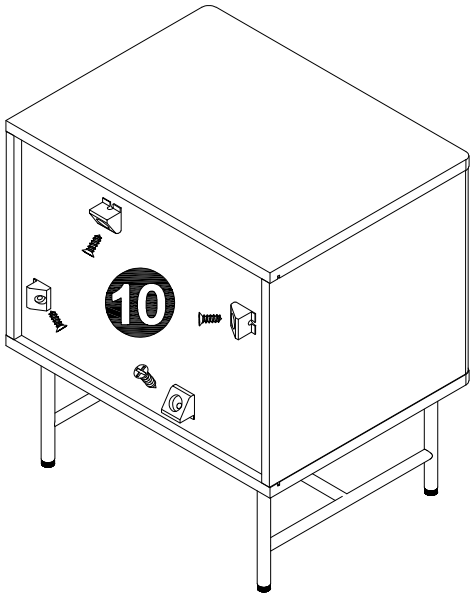

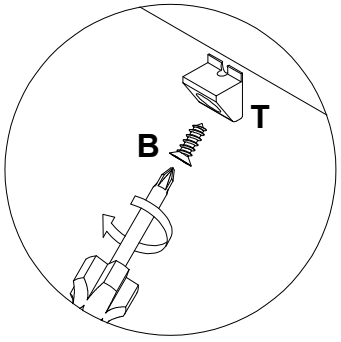

Step 17

