
## ASSEMBLY INSTRUCTIONS | CARMEL OUTDOOR 36" RD COUNTER TABLE

PARTS CHECKLIST			
1		Table Top (1 pc)	
2	The state of the s	Leg (4 pc)	
3		X-Base Stretcher (1 pc)	

HARDWARE CHECKLIST			
Α		Threaded Rod M6x75mm (4 pcs)	
В	6	Long Nut M6x15mm (4 pcs)	
С	I	Curved Washer (4 pcs)	
D	<b>©</b>	Nut M8 SS (8 pcs)	
Е	0	Spring Washer M6xø11mm (8 pcs)	
F	0	Flat Washer M6xø18mm (8 pcs)	
G		Wrench 10 (1 pc)	
Н	<u></u>	Wrench 13 (1 pc)	


## Step 1

Insert the threaded rod into the leg.

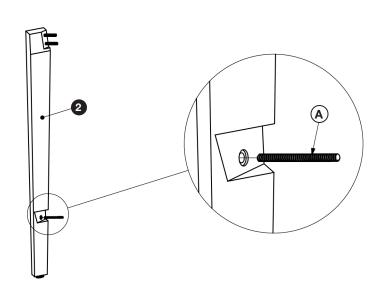


## Step 2

Attach two legs on opposite corners.

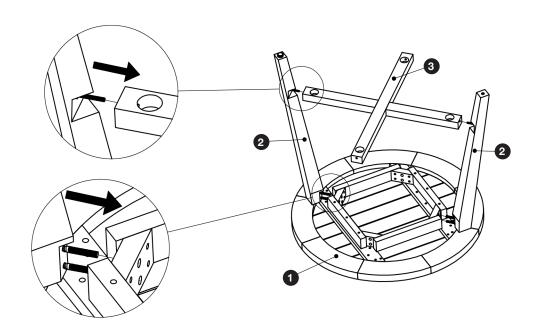


Step 3

Do not tighten the bolts until all pieces have been connected.

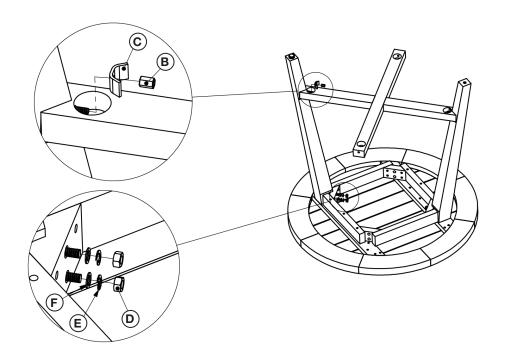


Step 4

Attach the remaining two legs on opposite corners. Do not tighten the bolts until all pieces have been connected.

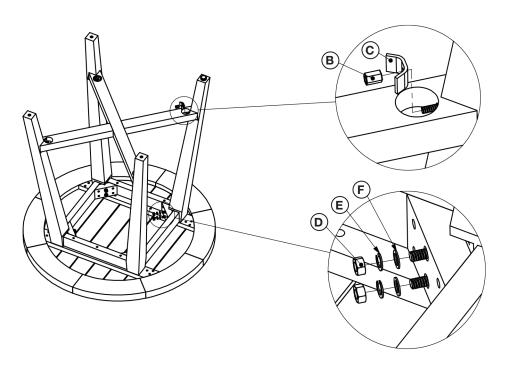

**Step 5** Tighten all bolts completely.

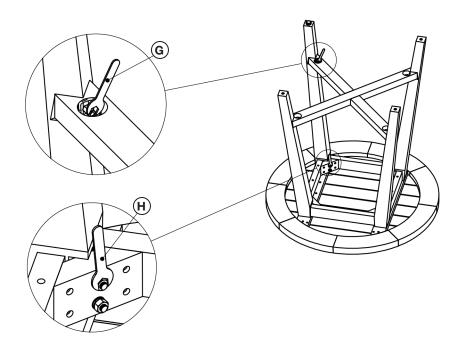

**Step 6** Adjust feet levelers.

