


ASSEMBLY INSTRUCTIONS

ZZGC-V1


FTLFCR-6008

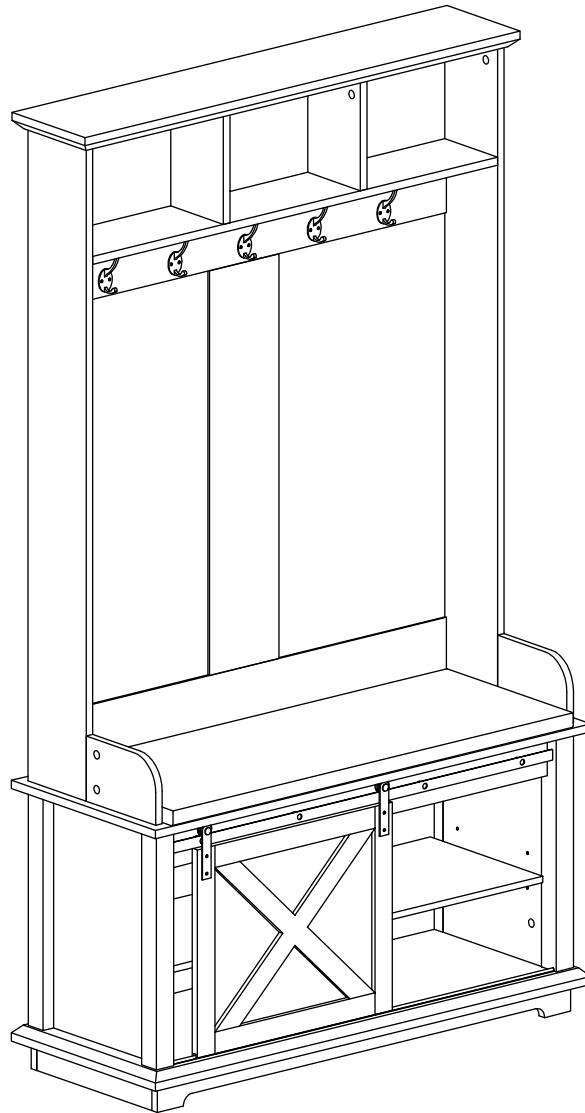

COAT RACK

Notice:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

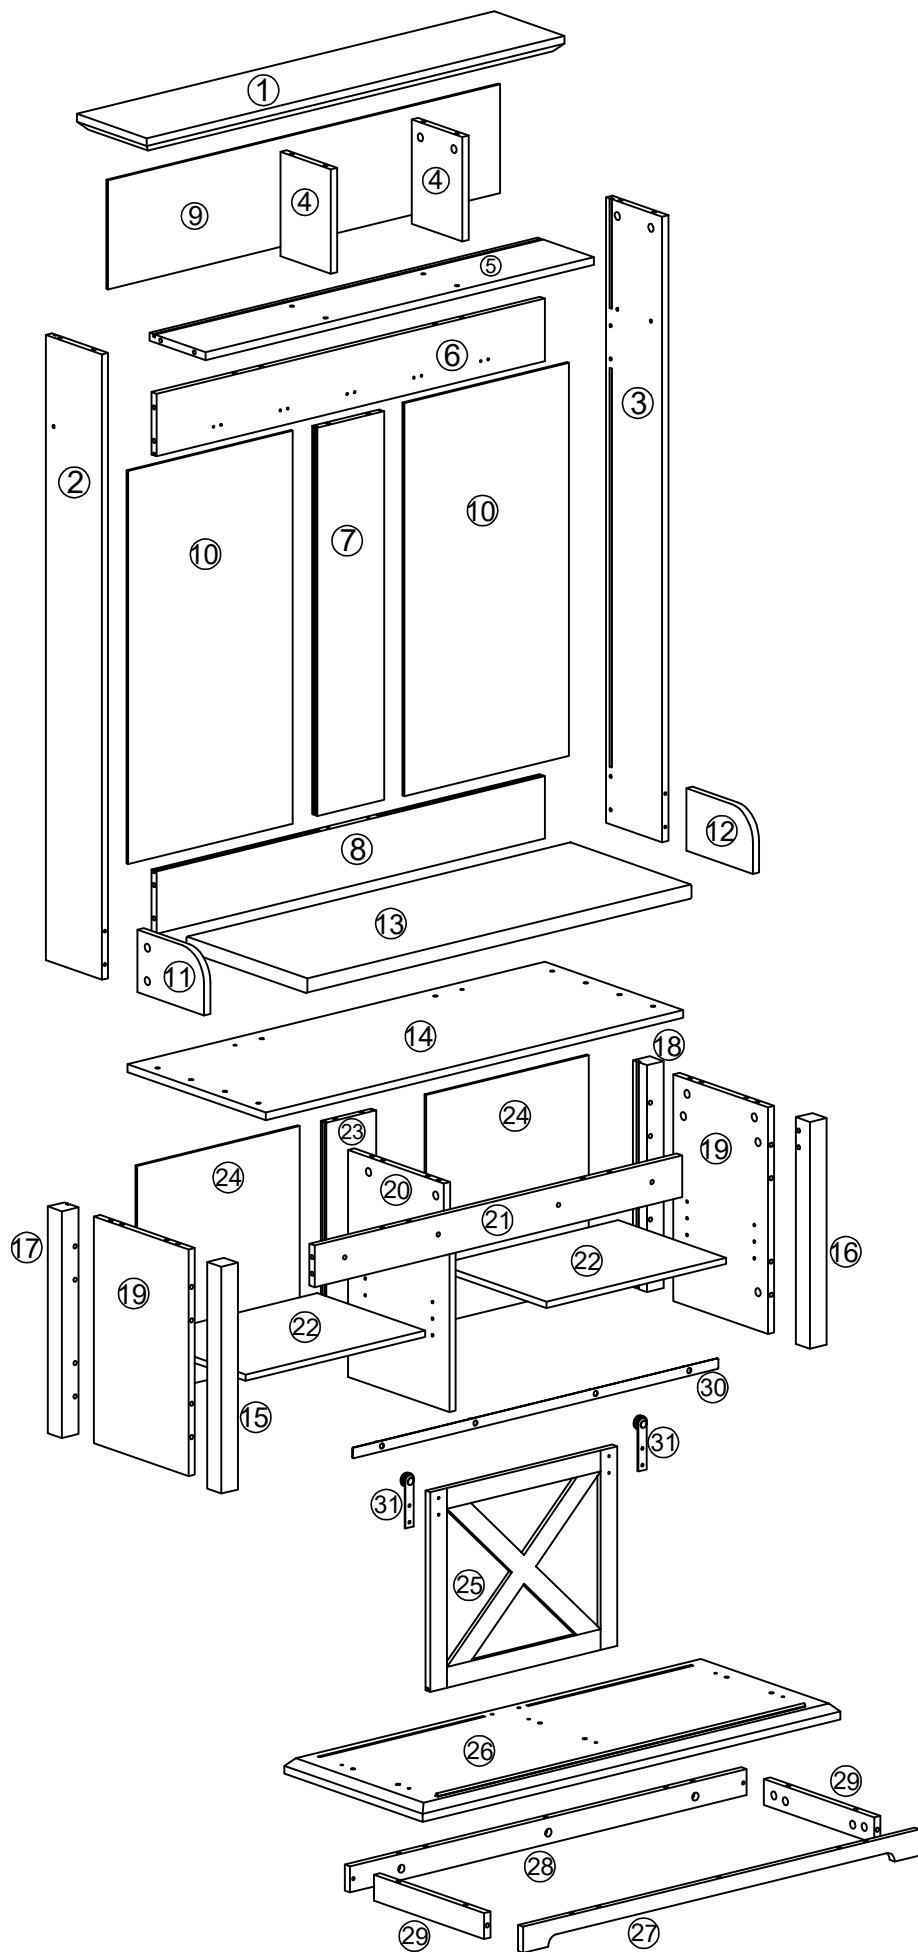




① X1



② X1




③ X1



④ X2



⑤ X1




⑥ X1




⑦ X1



⑧ X1

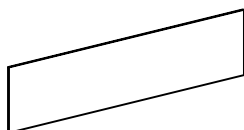

⑨ X1




⑩ X2




⑪ X1



⑫ X1



⑬ X1




⑭ X1



⑮ X1




⑯ X1




⑰ X1




⑱ X1



⑲ X2



⑳ X1




㉑ X1




㉒ X2



㉓ X1

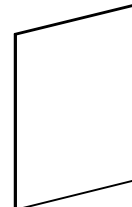

㉔ X2




㉕ X1




㉖ X1



㉗ X1



㉘ X1



㉙ X2



㉚ X1






㉛ X2

A	X67+3	B	X67+3	C	X30+3	D	X18+2	E	X1	F	X22+3	G	X4+1	H	X5+1
φ6X35mm		φ15X12mm		φ8X30mm		φ7X47mm		M4X55mm		φ3.5X14mm		φ3.5X14mm		φ4X35mm	


I	X4+1	J	X8	K	X5	L	X10	M	X2+1	N	X2	O	X4
M6X25mm		φ5X13mm				14X14X9mm		φ8X40mm		155X20mm		φ20mm	


STEP 1

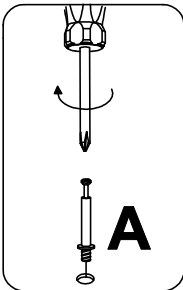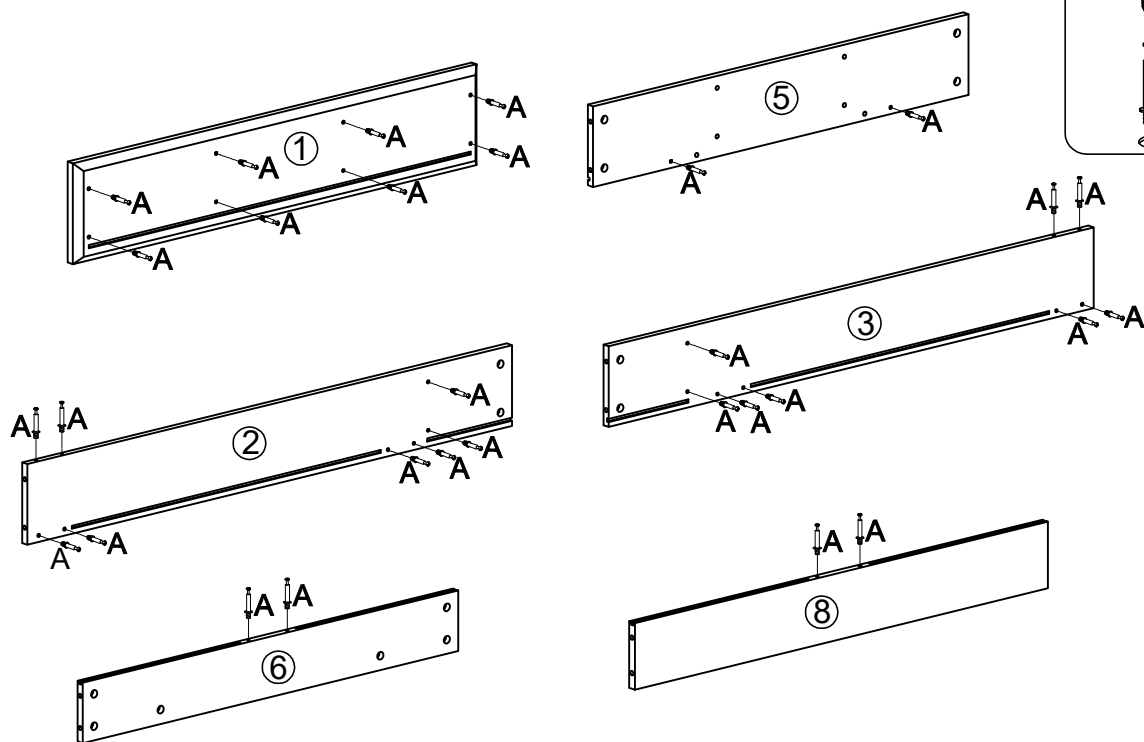


A	X30
	
φ6X35mm	

STEP 2

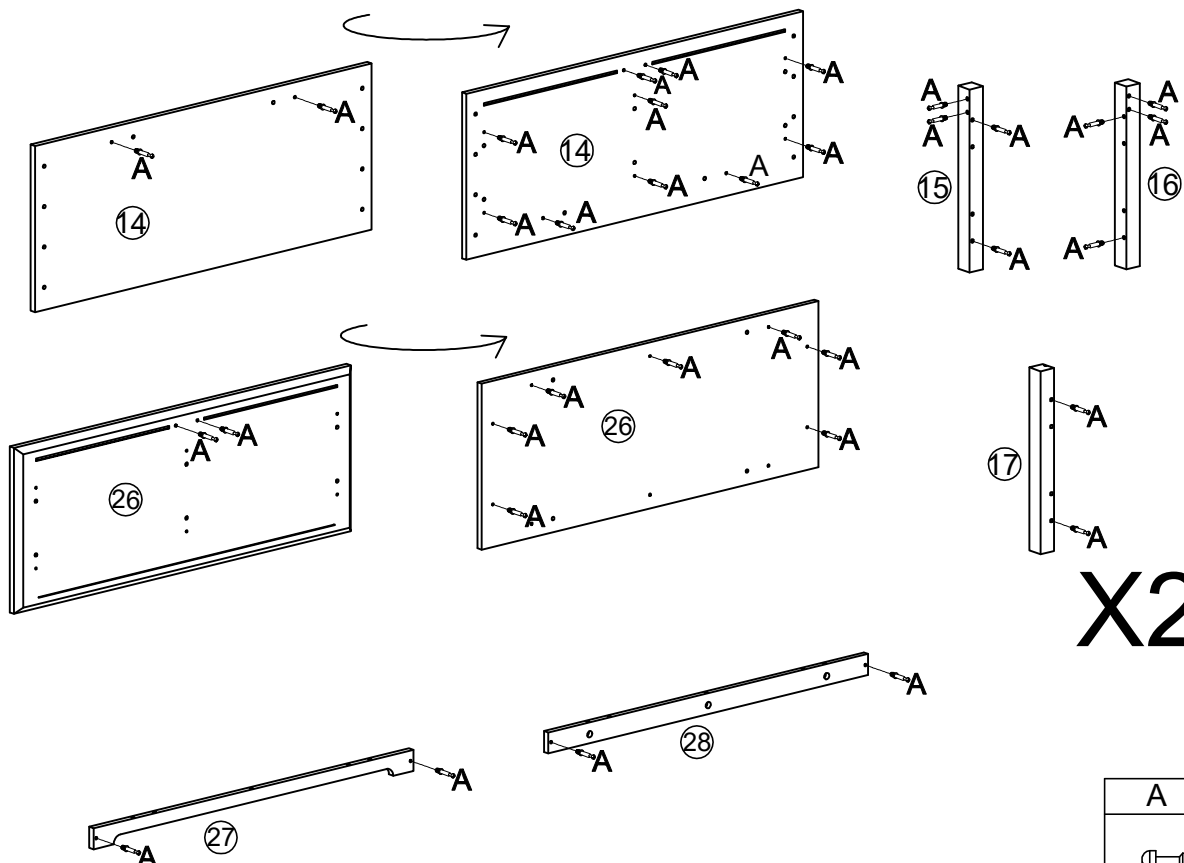


A	X37
	
φ6X35mm	

STEP 3

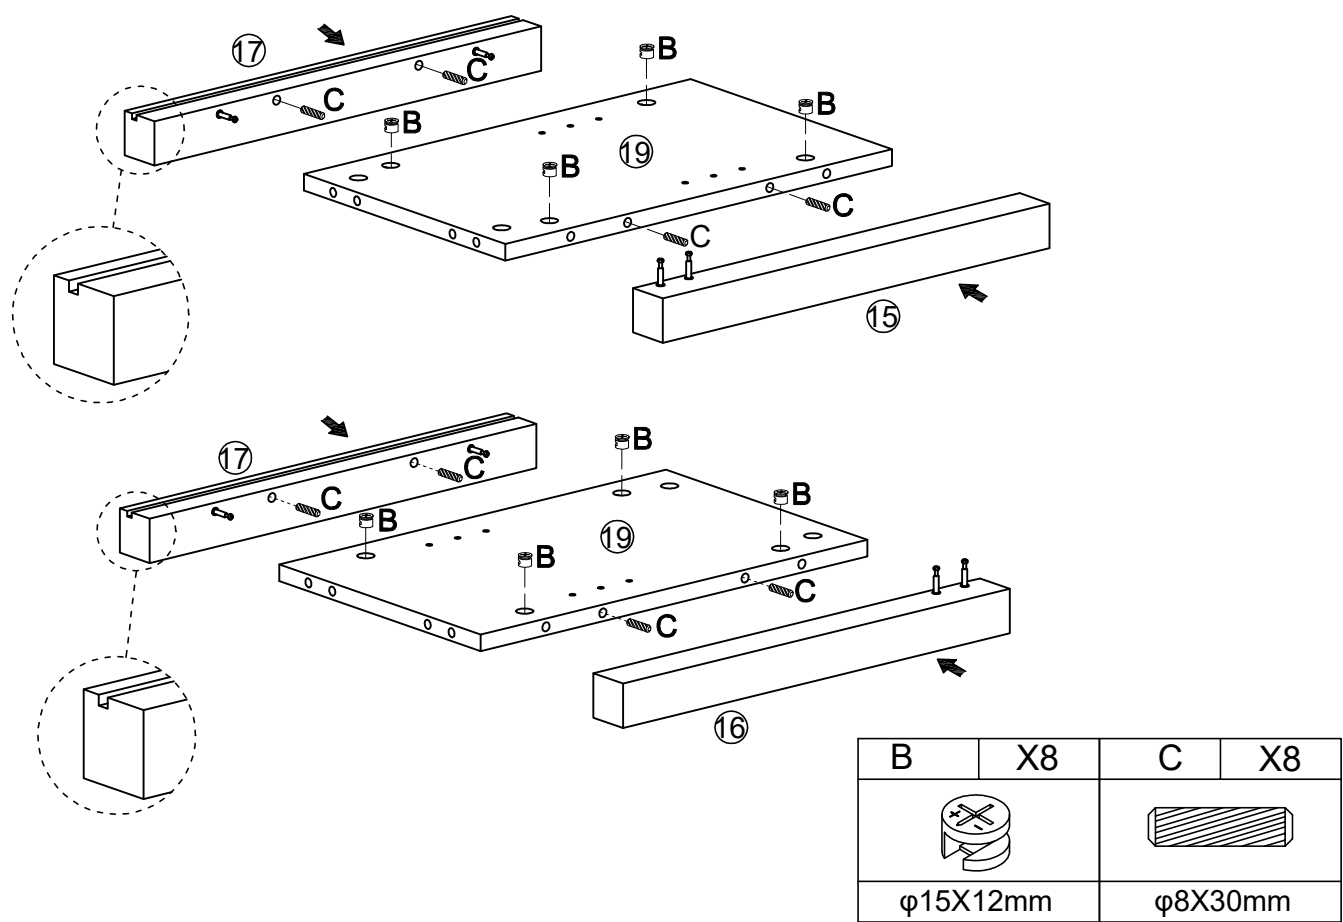


STEP 4


Pay attention to the orientation of the hole

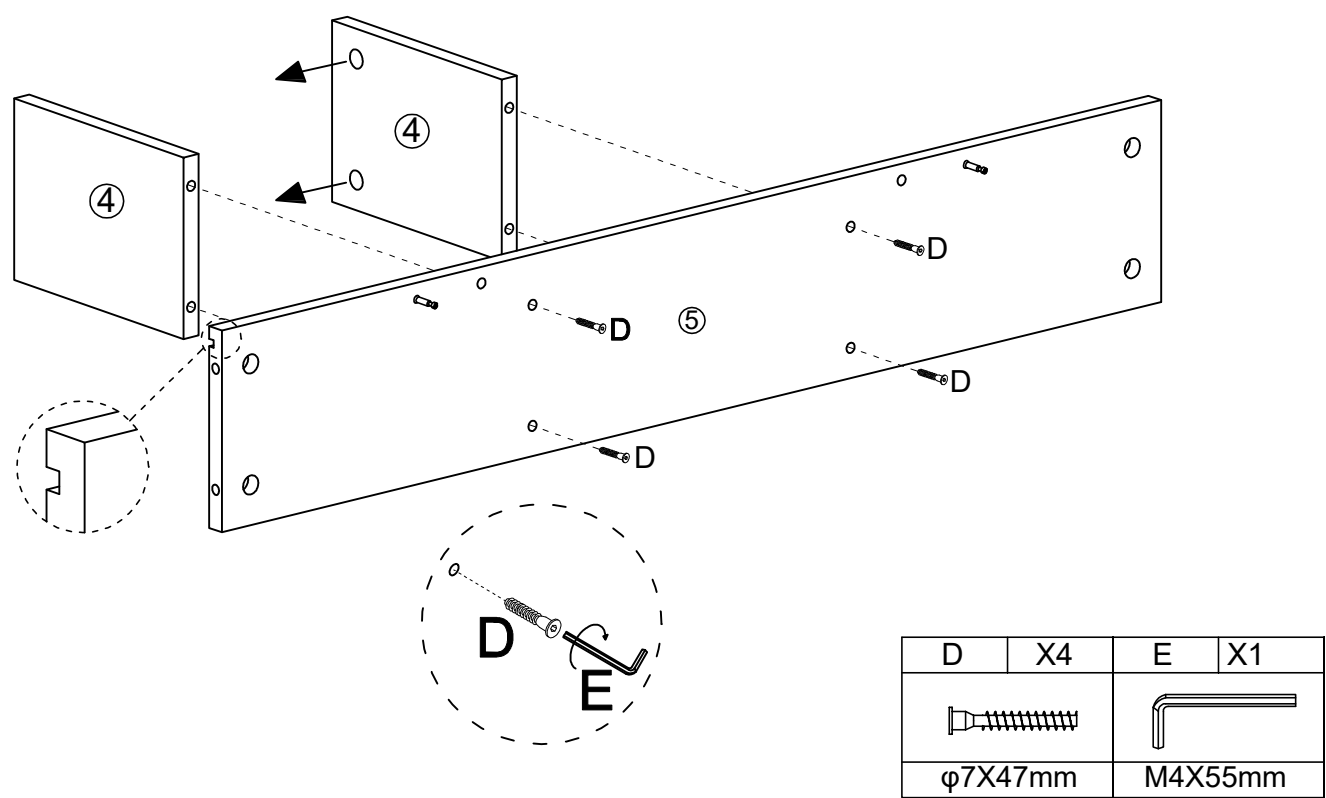


STEP 5

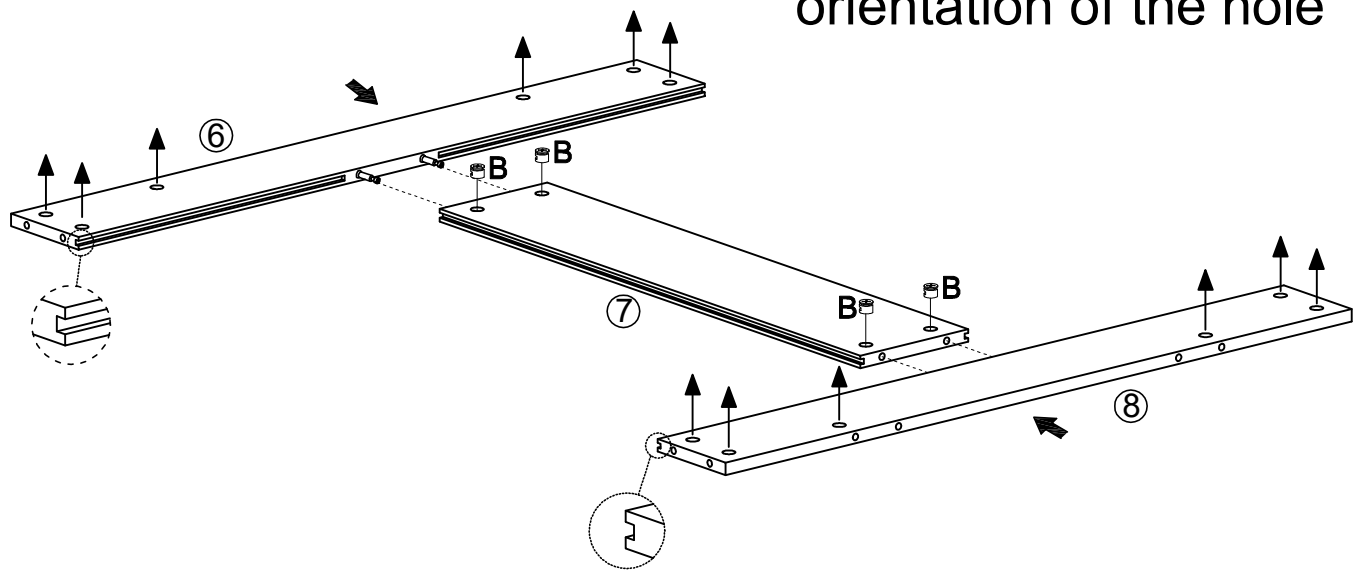

Pay attention to the orientation of the hole




B	X4
	
φ15X12mm	

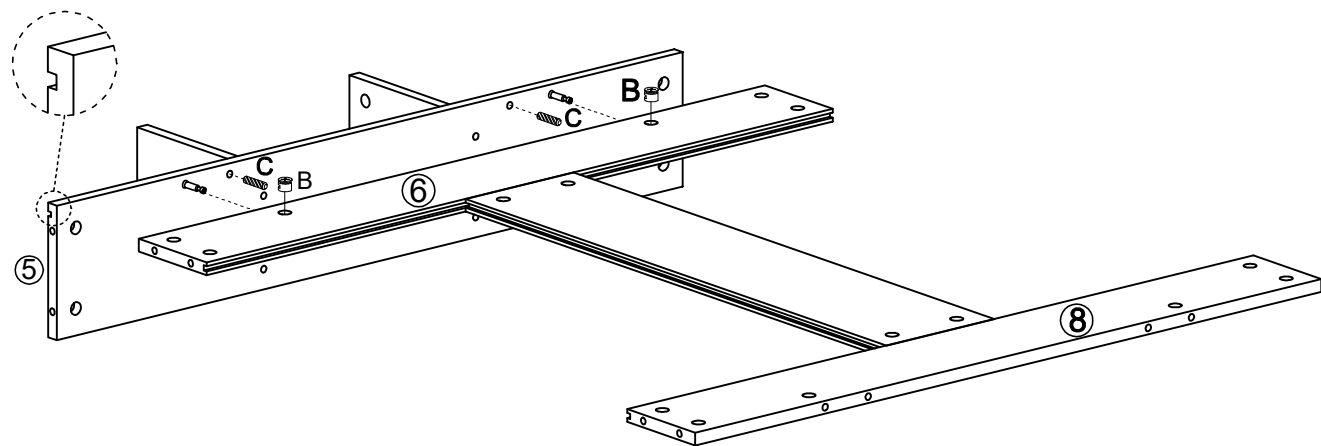STEP 6





B	X2	C	X2
			
φ15X12mm		φ8X30mm	

STEP 7

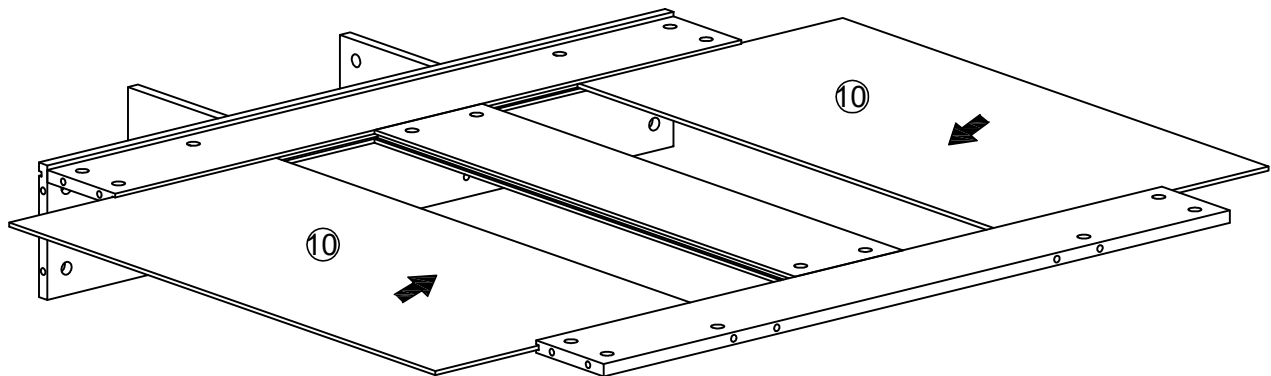


STEP 8

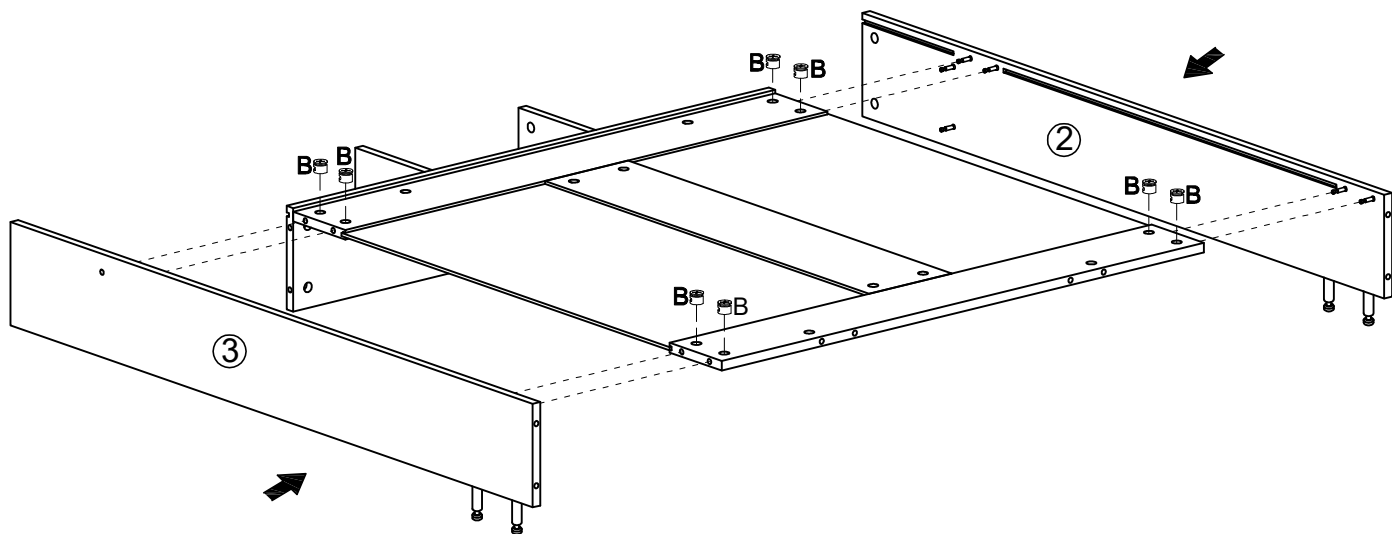


B	X8
	
φ15X12mm	

STEP 9

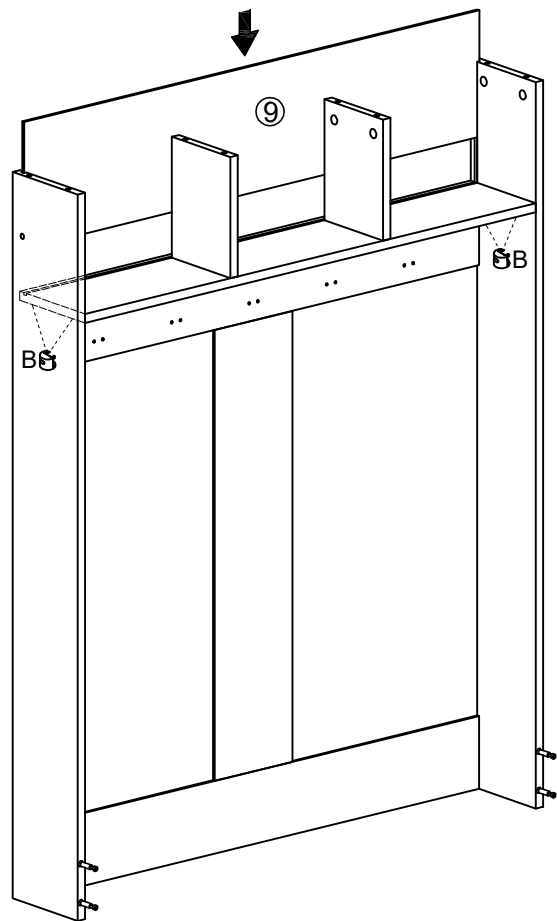


B	X4
φ15X12mm	

STEP 10

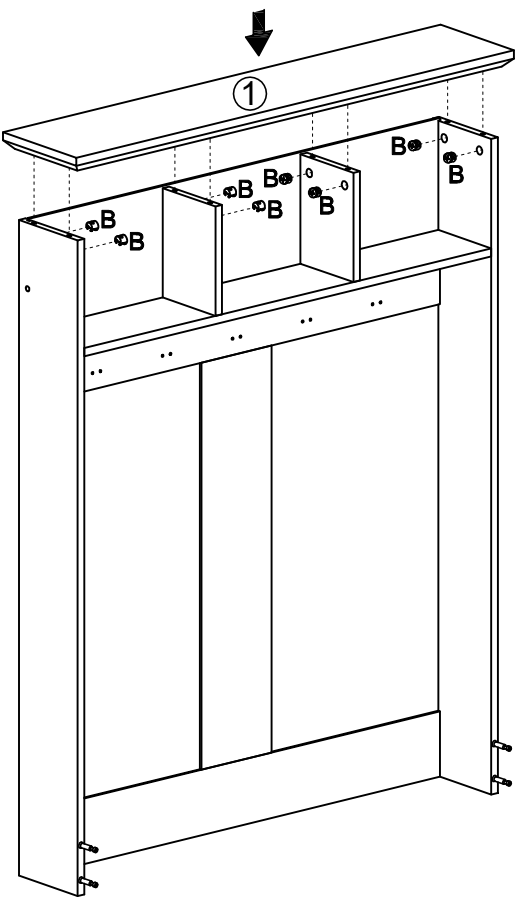


B	X8
φ15X12mm	

STEP 11

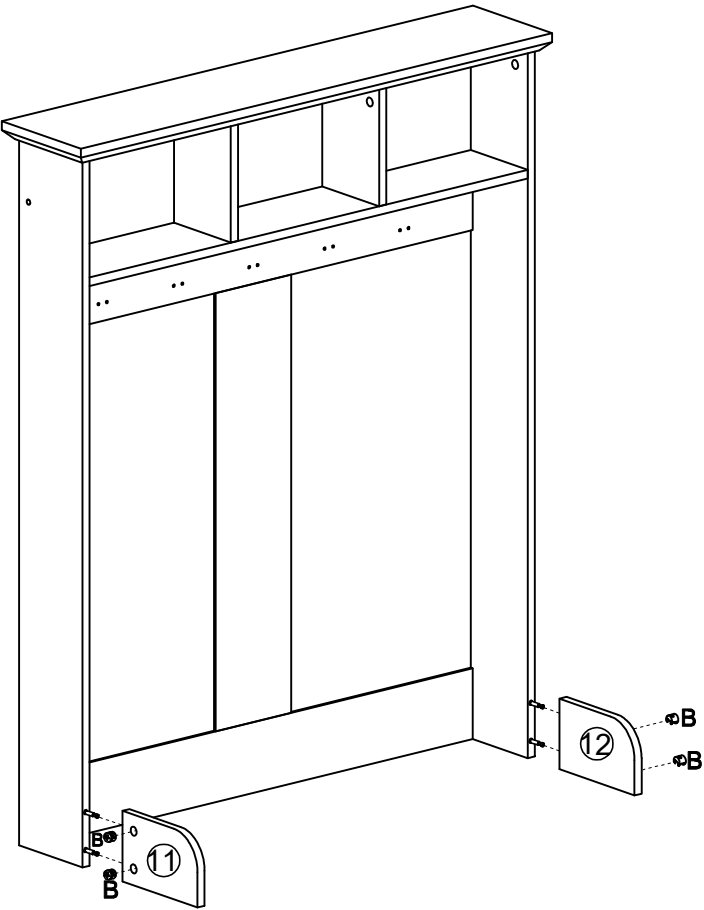


B	X4
φ15X12mm	

STEP 12

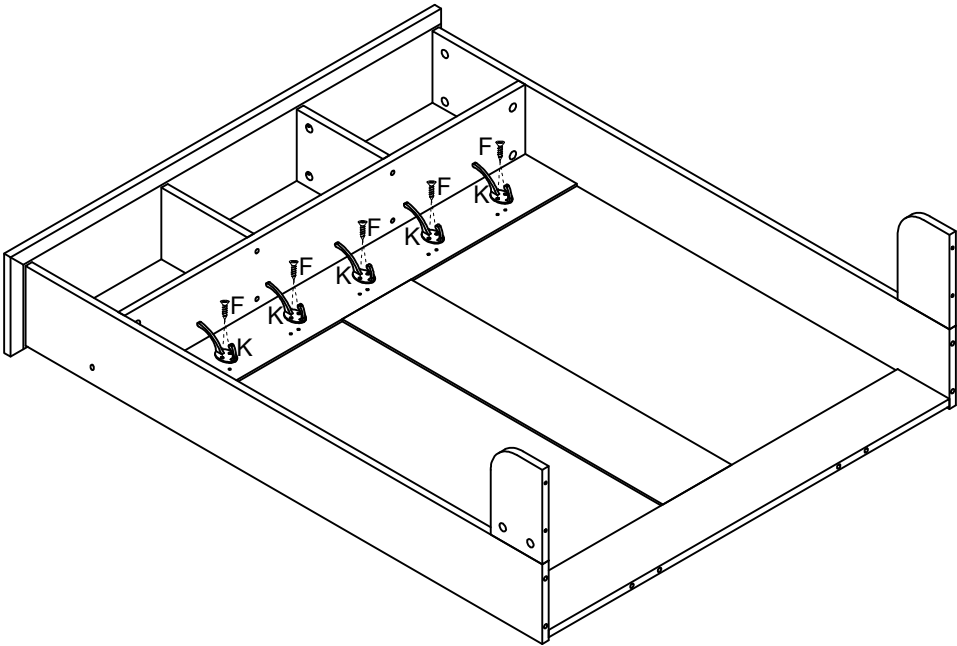

F	X10	K	X5
φ3.5X14mm			


STEP 13

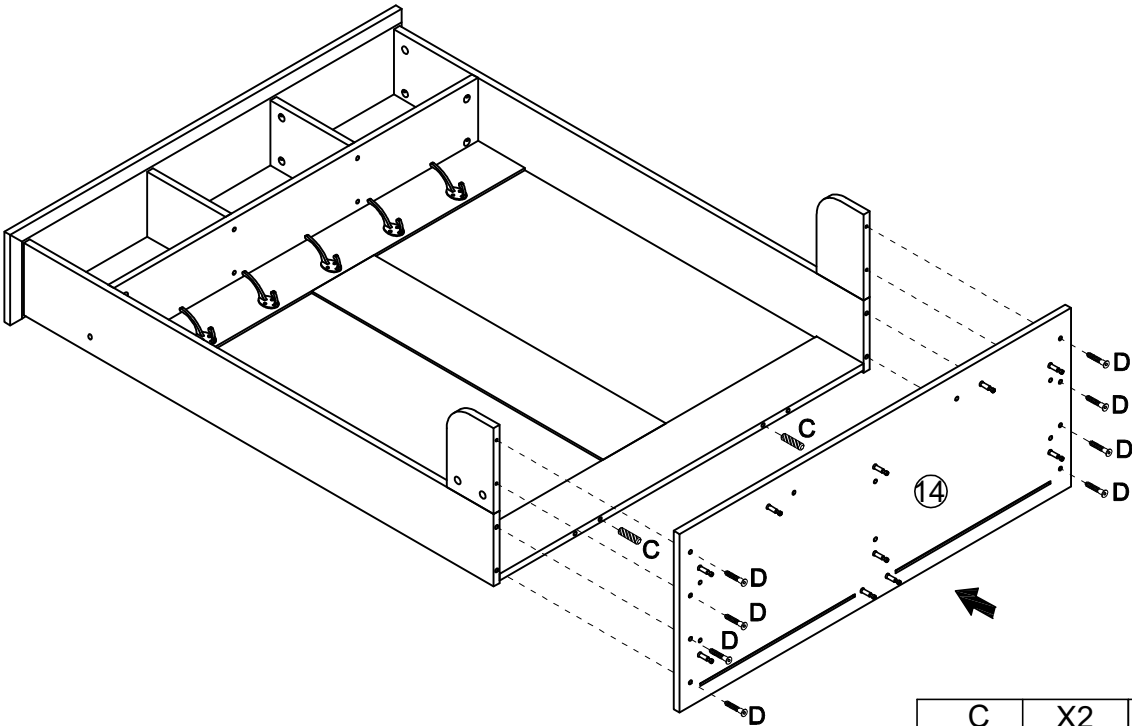

C	X2	D	X8
φ8X30mm		φ7X47mm	


STEP 14

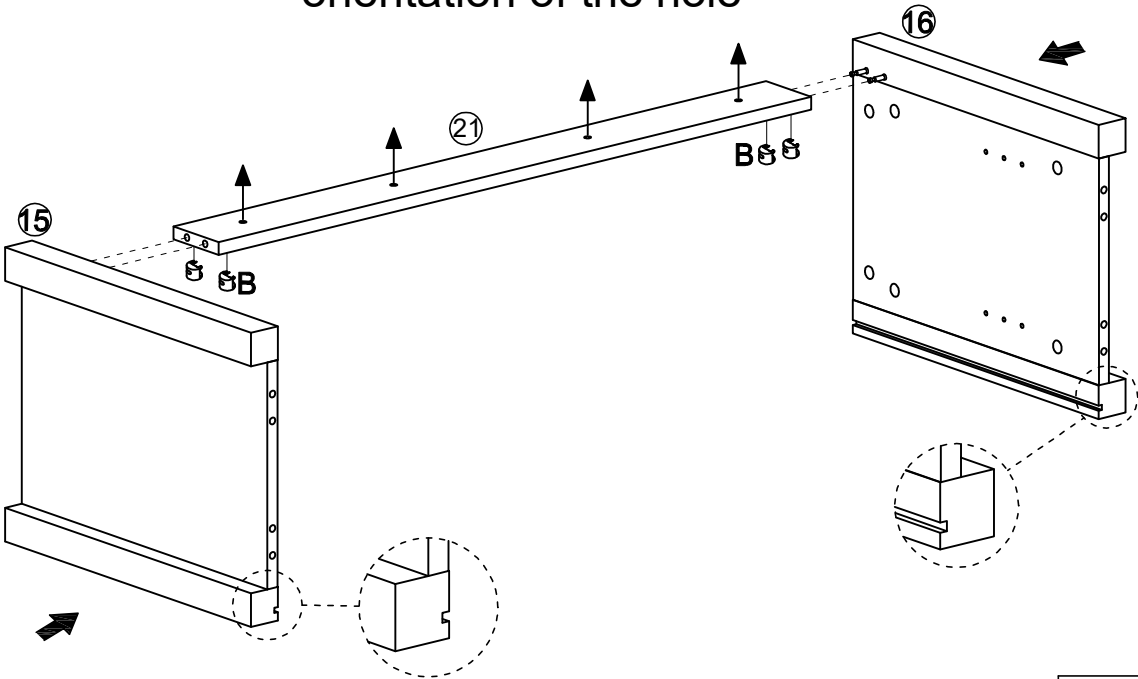

Pay attention to the orientation of the hole




B	X4
φ15X12mm	

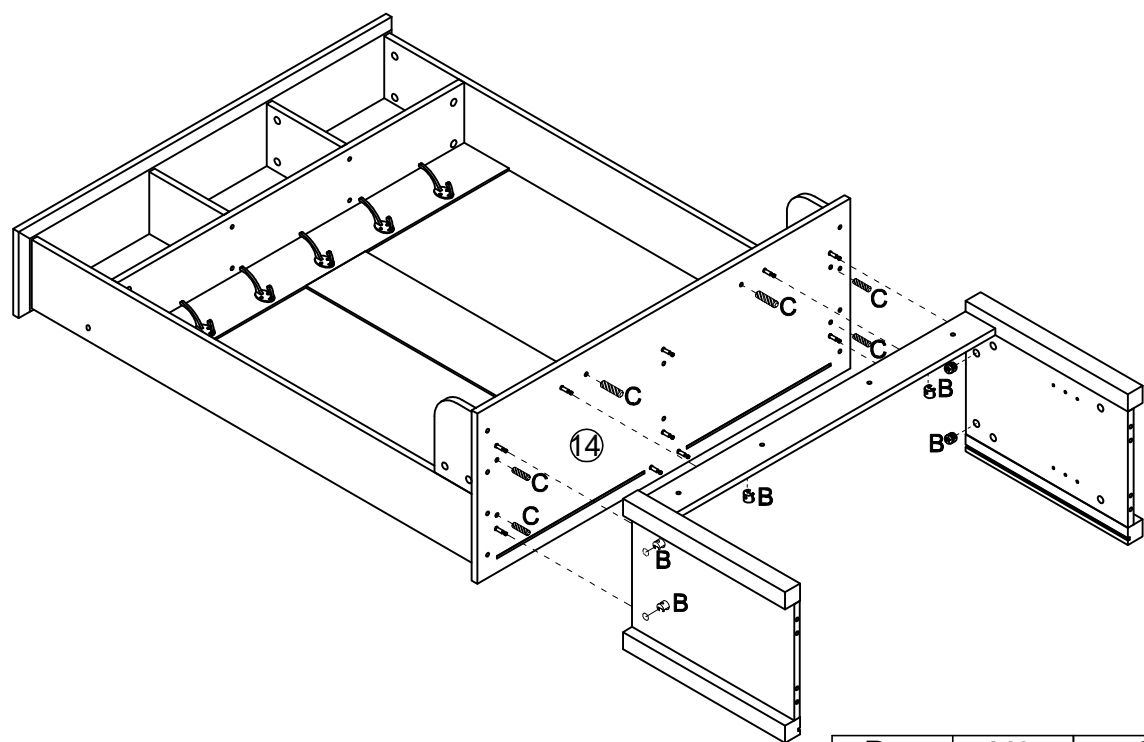
STEP 15




B	X6	C	X6
			
φ15X12mm		φ8X30mm	

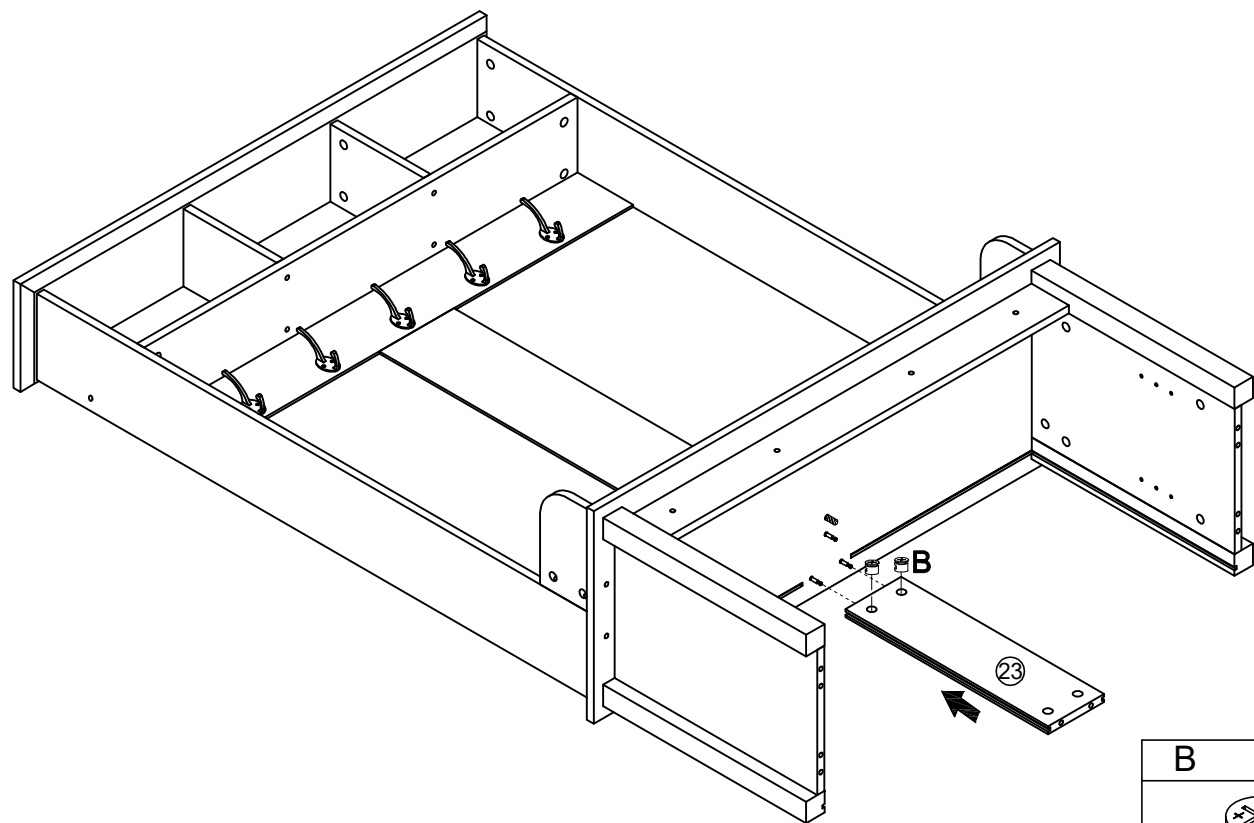

STEP 16




B	X2
	
φ15X12mm	

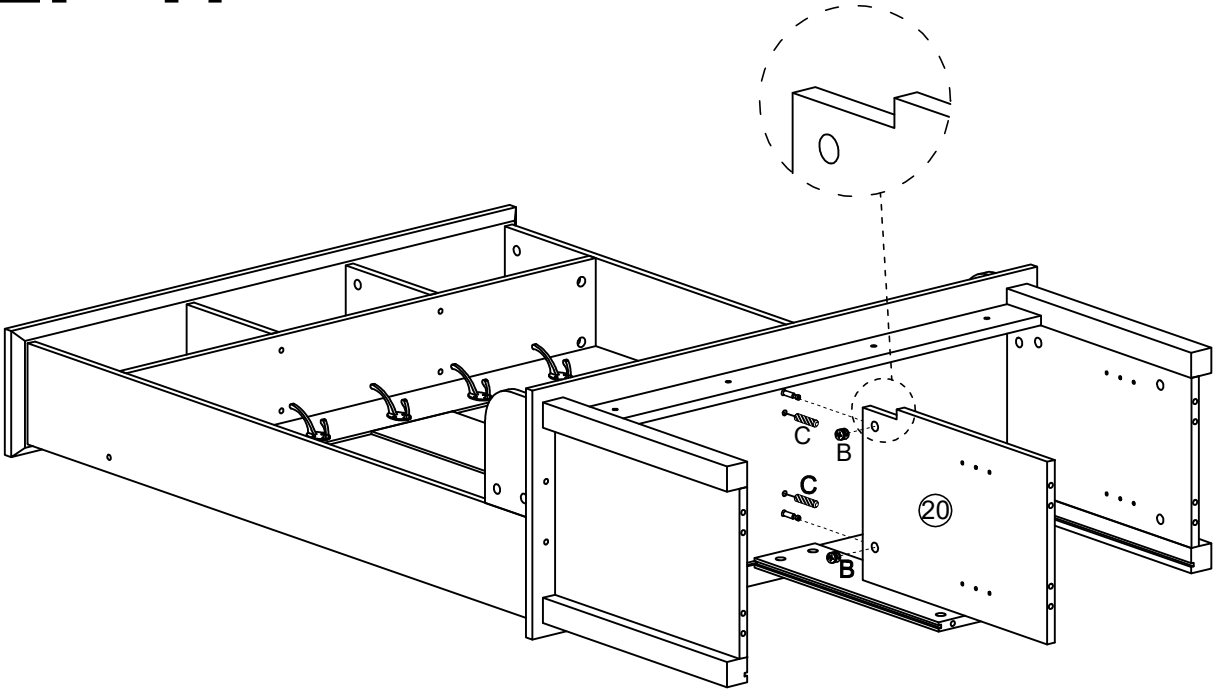STEP 17







B	X2	C	X2
			
φ15X12mm		φ8X30mm	

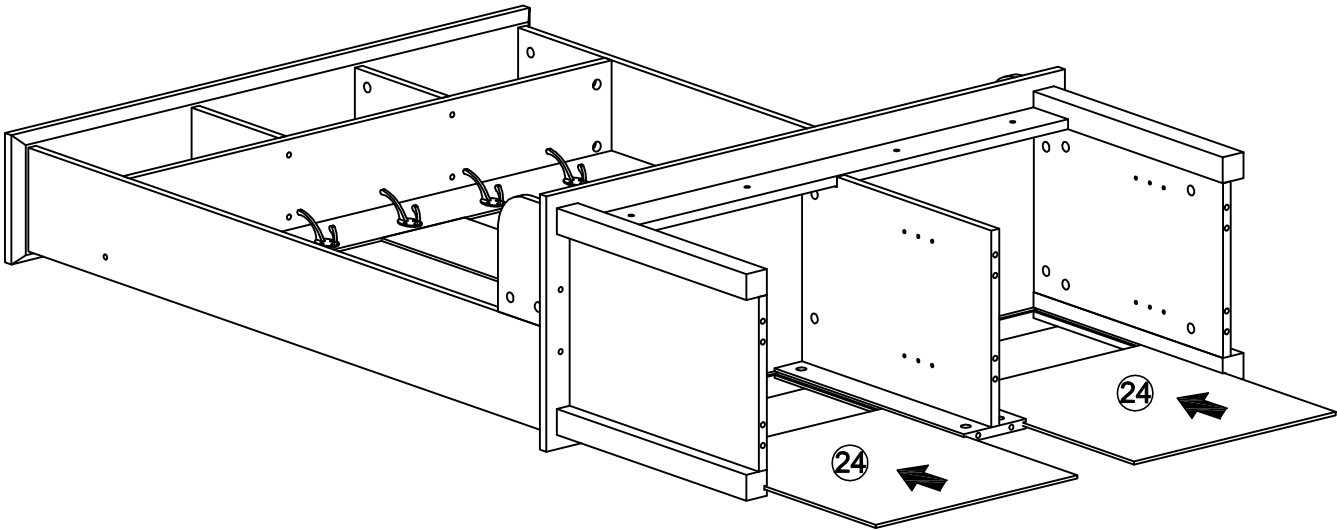STEP 18

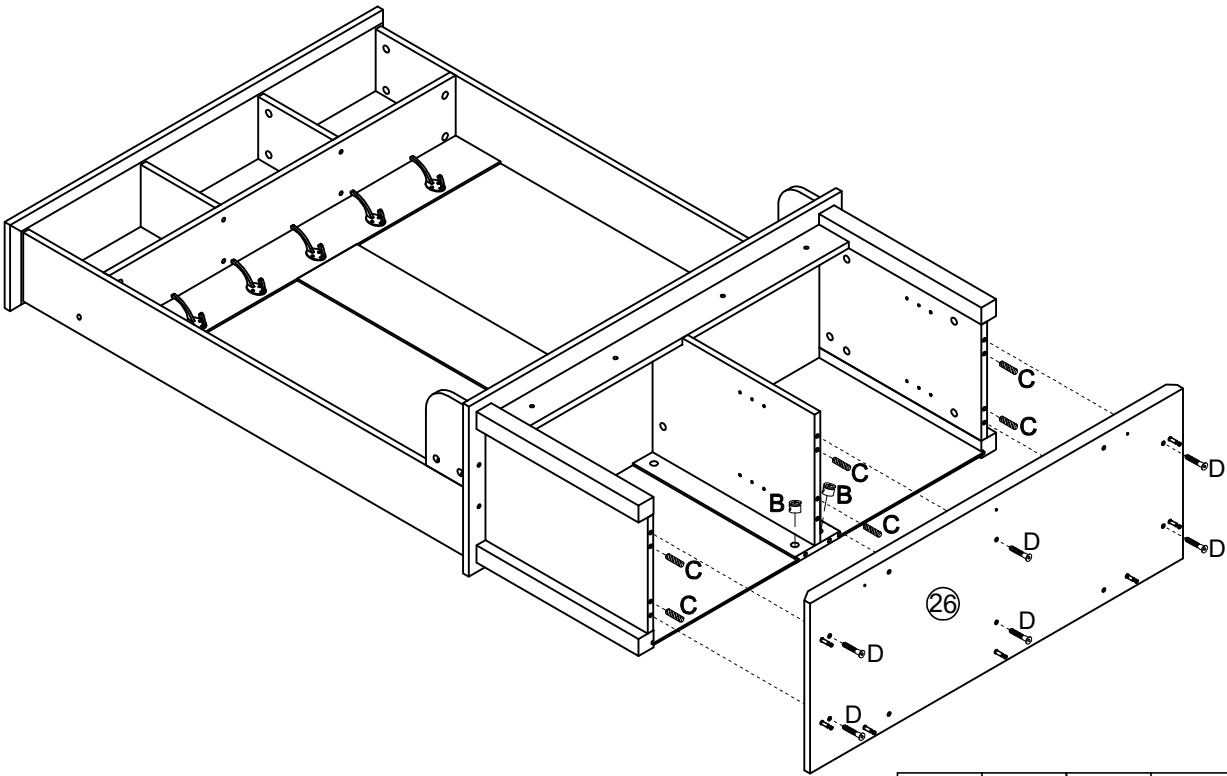


STEP 19




B	X2	C	X6	D	X6
					
φ15X12mm		φ8X30mm		φ7X47mm	


STEP 20

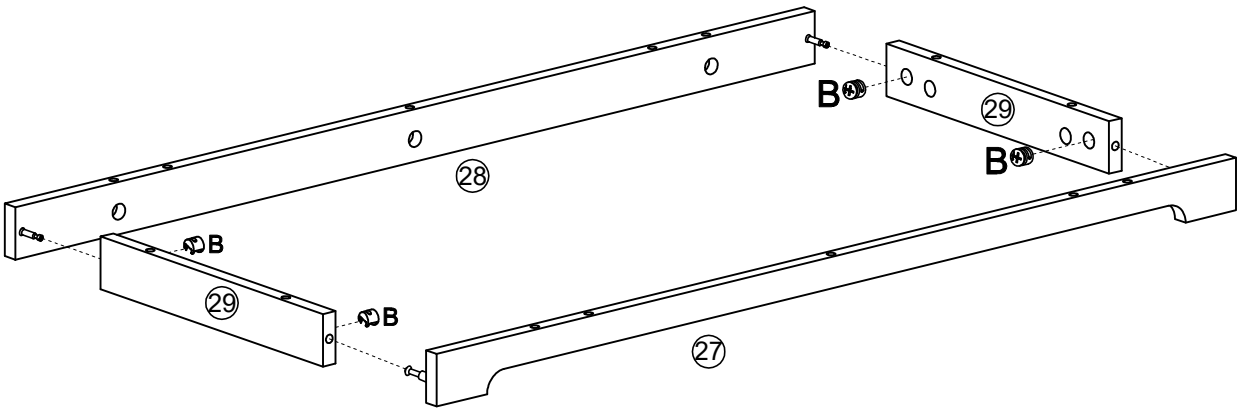

Please take note of the curved directiojs of parts ②7


B	X4
	
φ15X12mm	

STEP 21

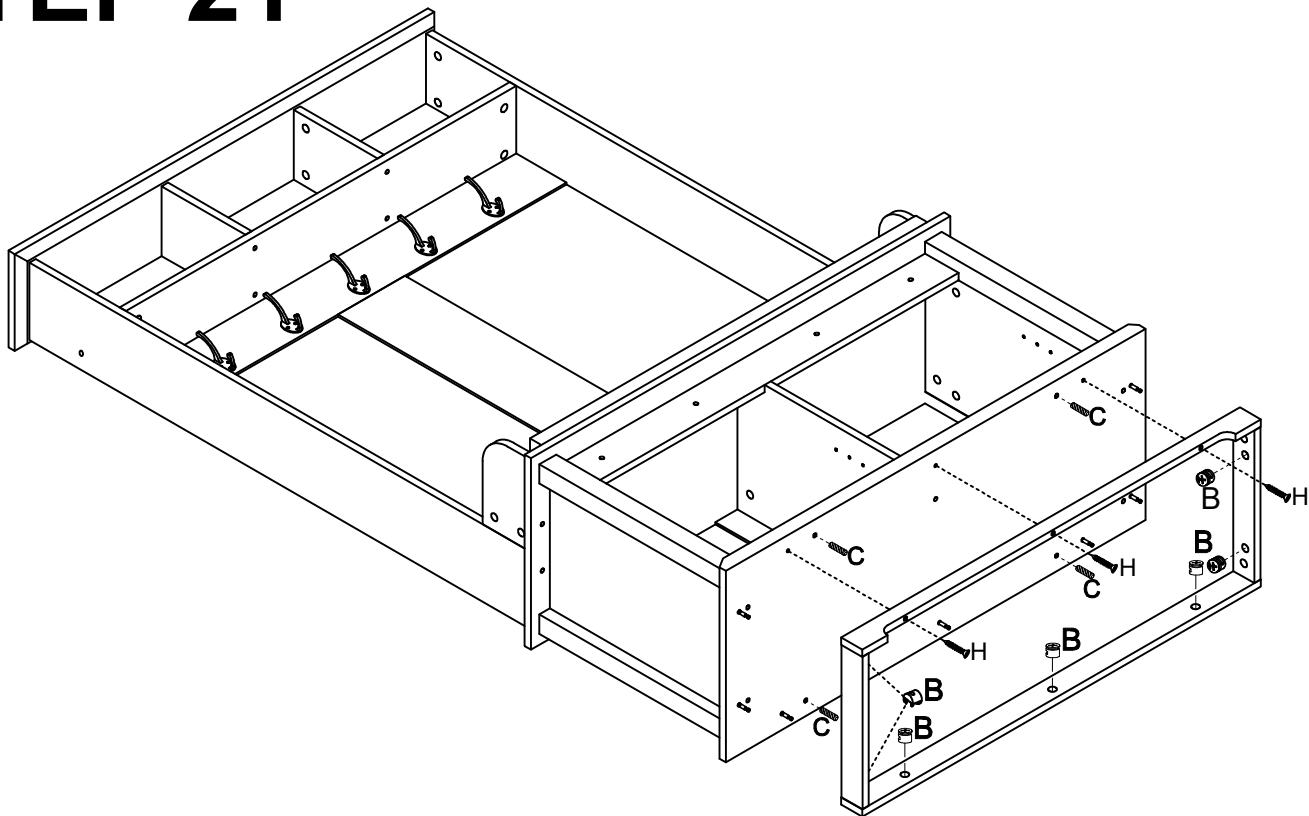


B	X7	C	X4	H	X3
φ15X12mm		φ8X30mm		φ4X35mm	

STEP 22

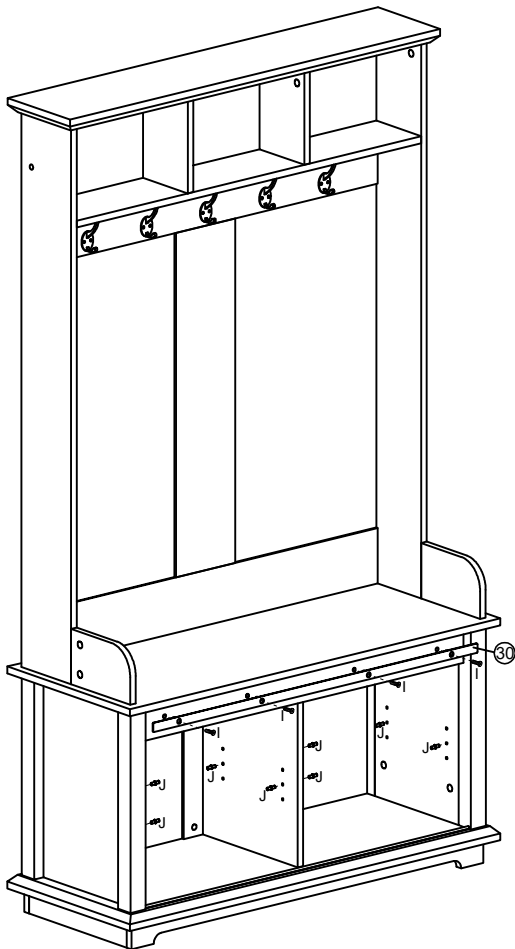



I	X4	J	X8
M6X25mm		φ5X13mm	

STEP 23

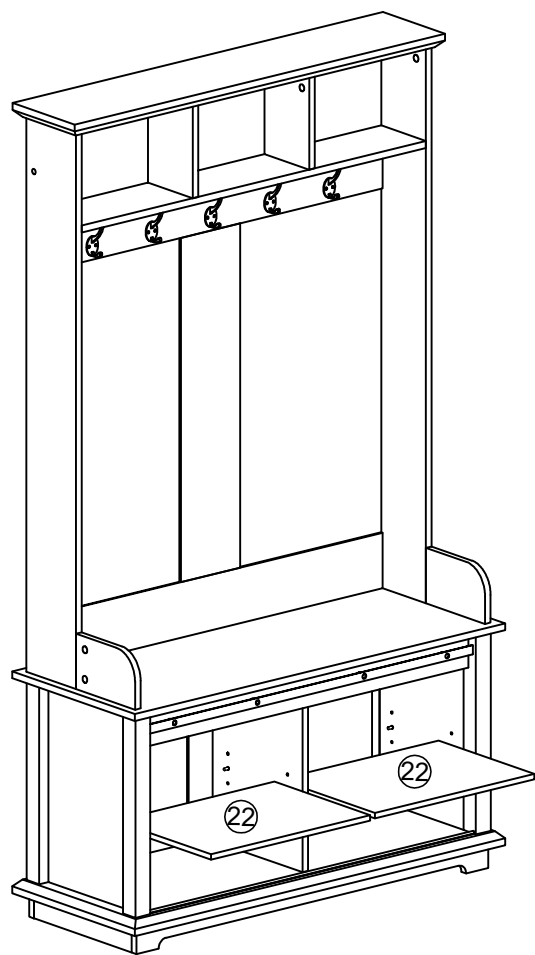


STEP 24

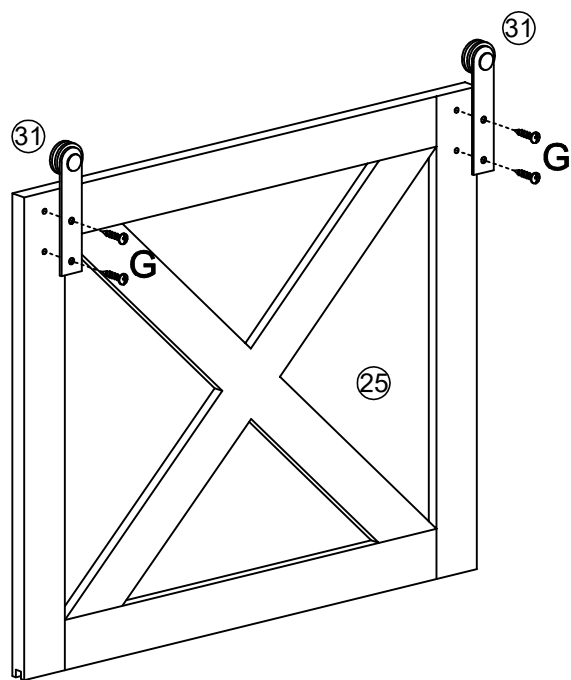


G	X4
	
φ3.5X14mm	

STEP 25

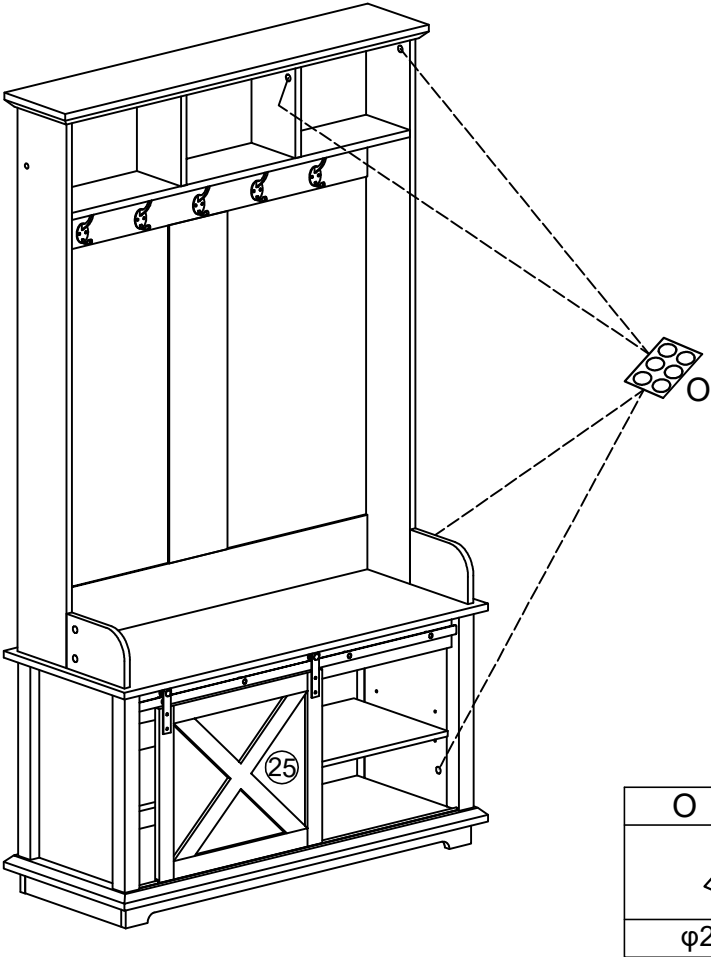

O	X4
φ20mm	

STEP 26

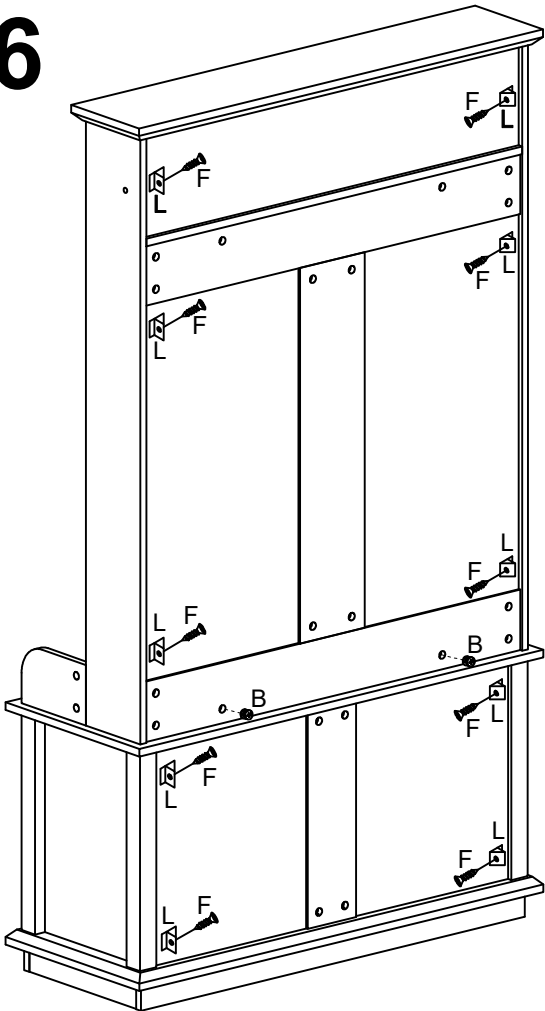


B	X2	F	X10	L	X10
φ15X12mm		φ3.5X14mm		14X14X9mm	





STEP 27

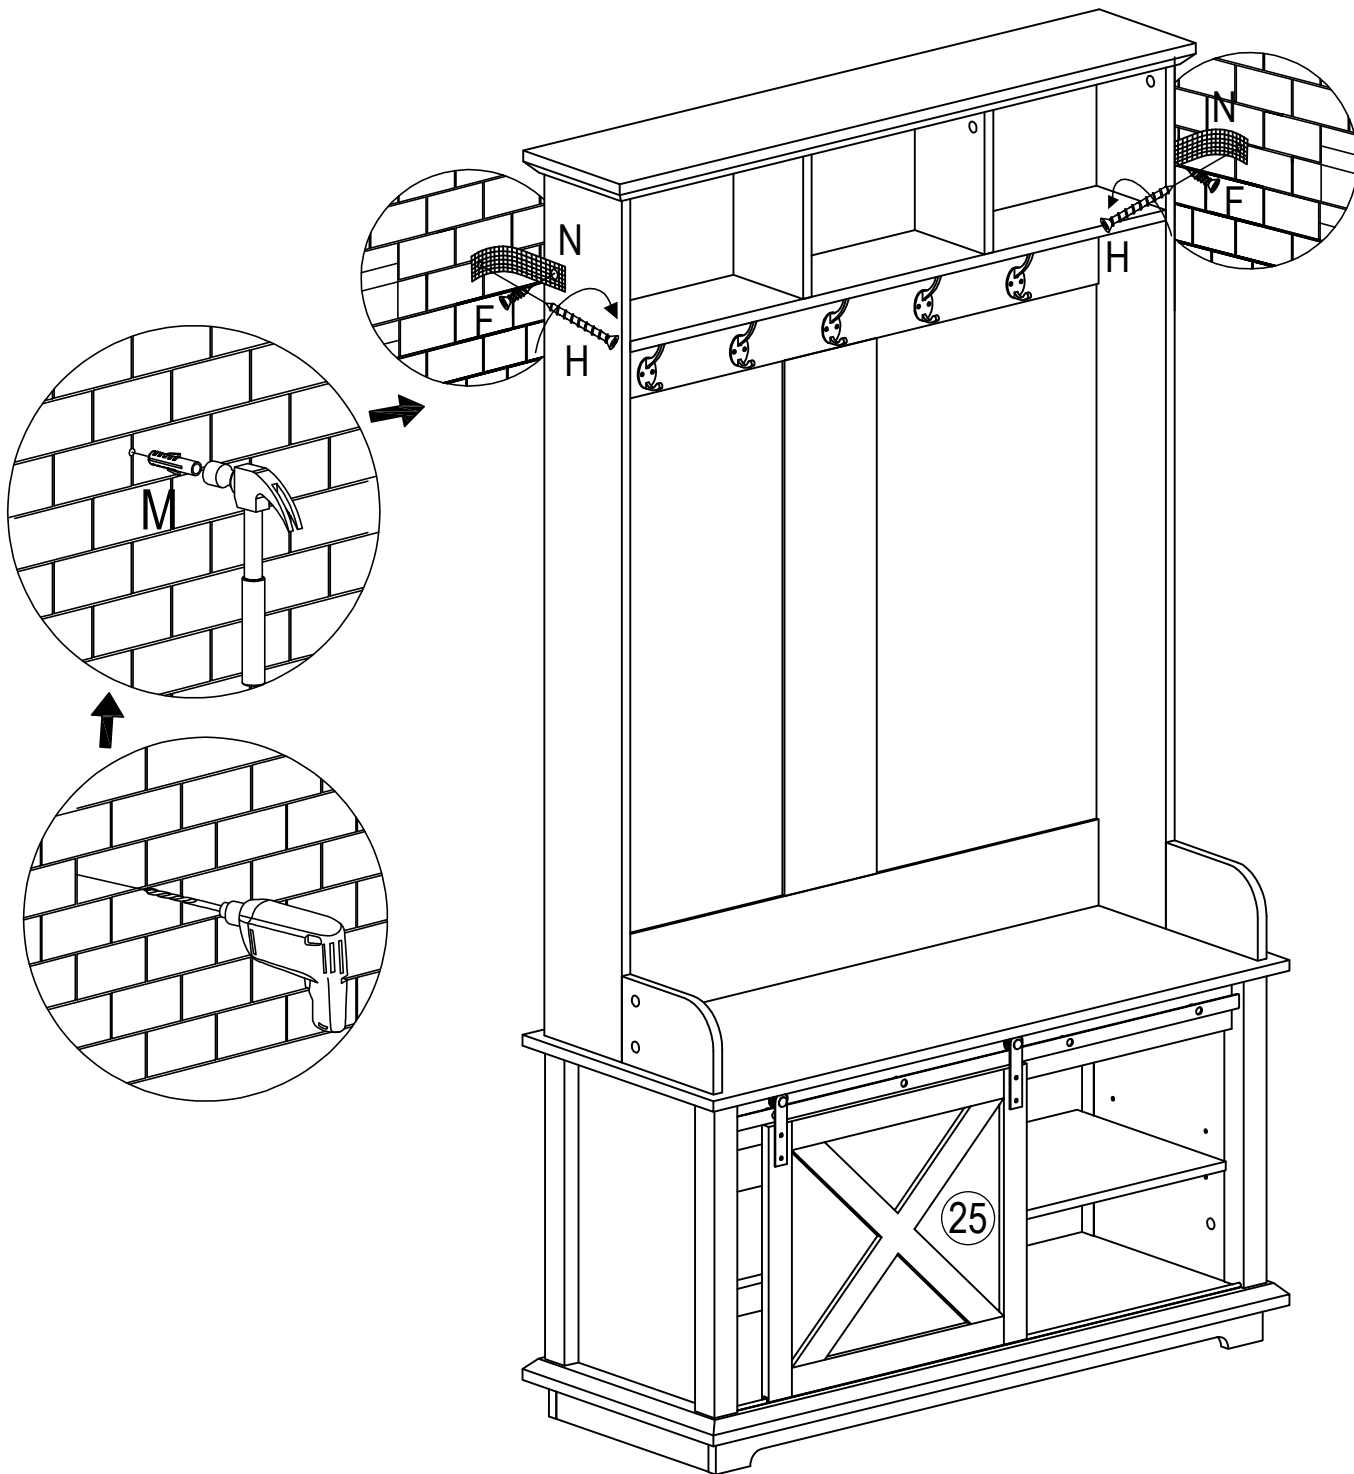

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.



Installation Completed

F	x2	H	x2	M	x2	N	x2
							
Ø3.5×14mm		Ø4×35mm		Ø8×40mm		155×20mm	