


Installation instruction

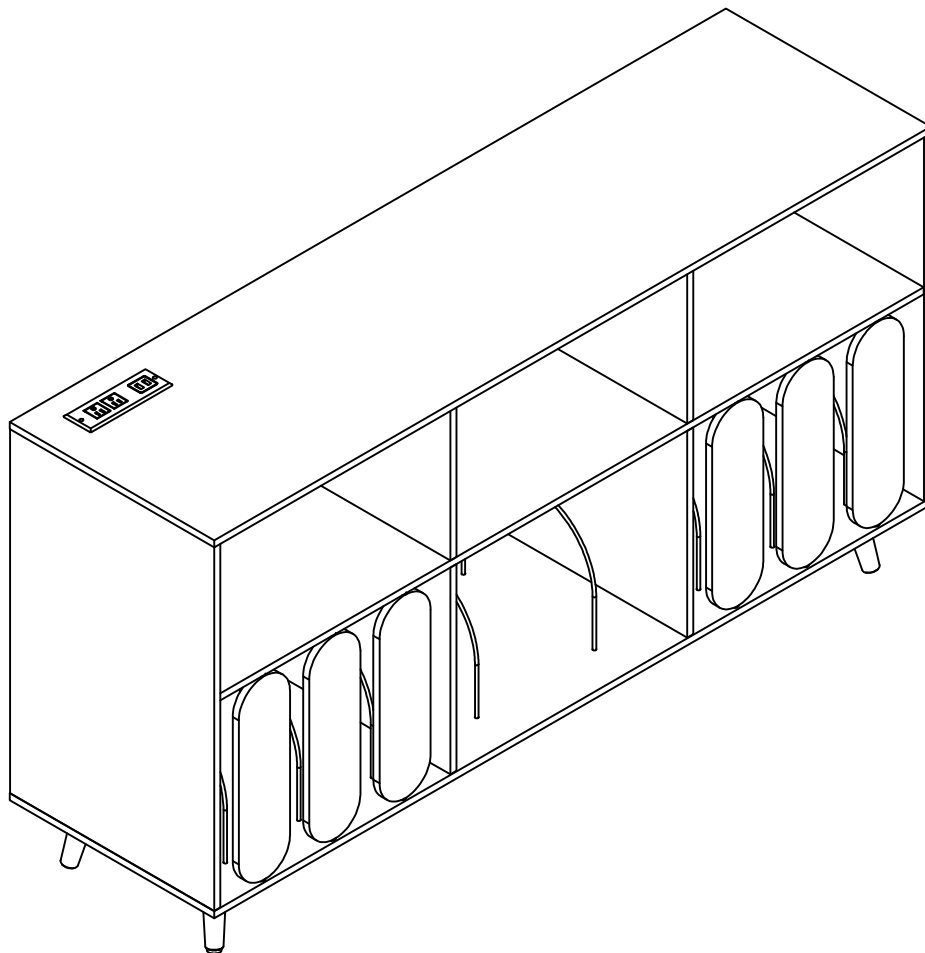

Assembling


Estimated time for assembly



45 : 00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation



100 | **35**
lbs table top lbs per

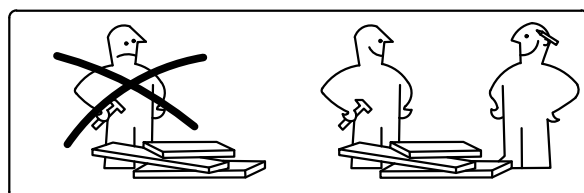


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	16
B	Cam Lock 15X9MM	16
C	Wooden Dowel M6X30MM	28
D	Screw M3.5X12MM	28
E	Screw M4X14MM	4
F	The bolt	12
G	Tack	4
H	Screw M4X35MM	14
I	Back plate buckle	6
J	Adjustable foot	2
K	Hexagonal iron plate	4
L	Square iron sheet	2
M	Screw M3.5X14MM	10
N	Expansion tube	2
O	Perforated paste	16
P	Anti-reverse tape	2
Q	Socket	1

The Hardware

A x 16




Ø6×35 mm

B x 16



Ø15×9 mm

C x 28



Ø6×30 mm

D x 28



Ø3.5×12 mm

E x 4




Ø4×14mm


F x 12



G x 4




H x14




Ø4×35 mm

I x 6




J x 2



K x 4



L x2




M x 10



Ø3.5×14 mm


N x 2




O x 16



P x 2



Q x 1

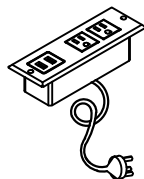


IMPORTANT:


- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product. Do not use power tools.


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom plate	1
3	Left Side Panel	1
4	Right Side Panel	1
5	laminate	1
6	Top riser	2
7	Bottom riser	2
8	epigonotum	1
9	hypotergite	1
10	u-iron	8
11	Cabinet Leg 1	4
12	Cabinet Leg 2	2
13	Revolving door	6

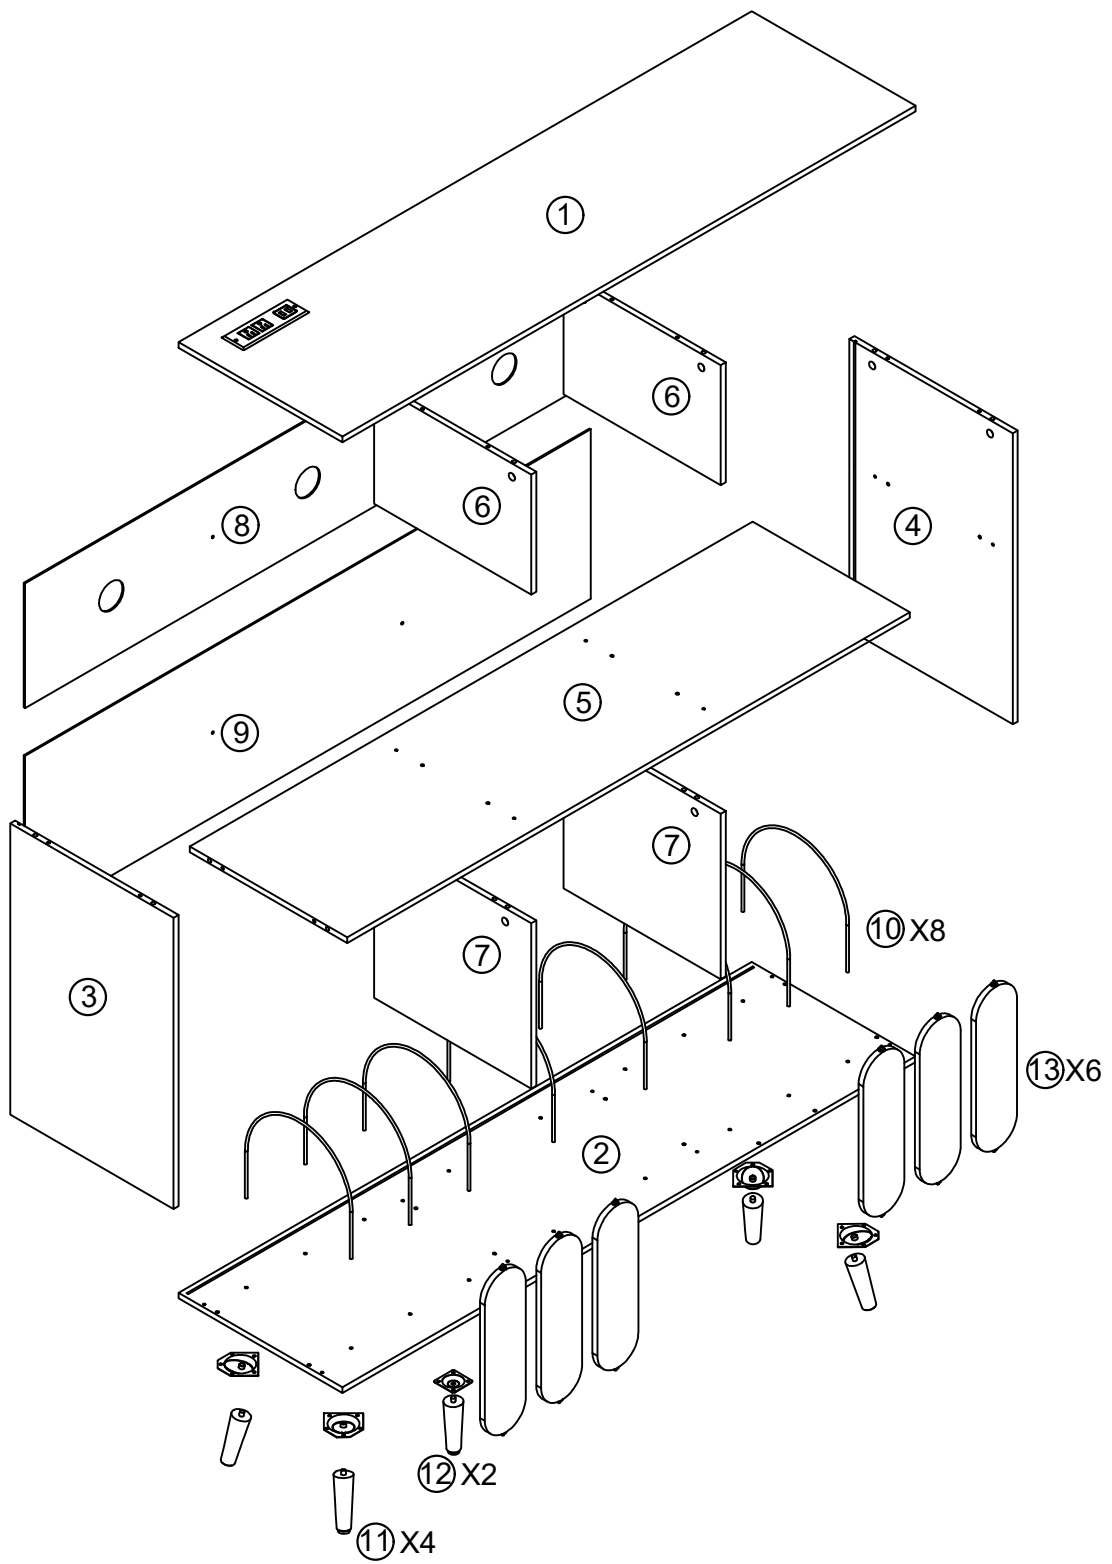



Step 1

A x 4	C x 4
	

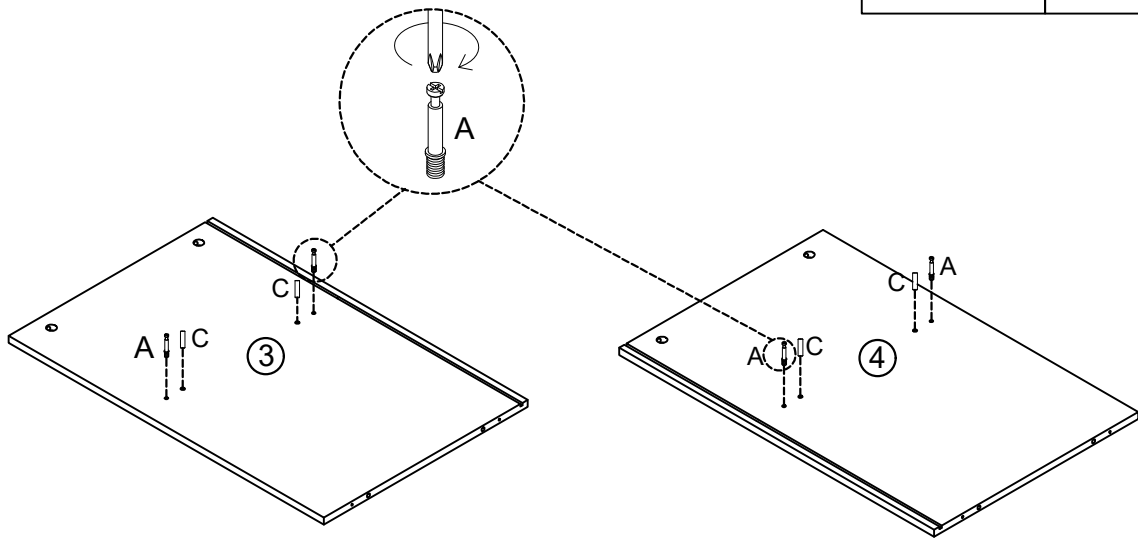


Step 2


A x 8

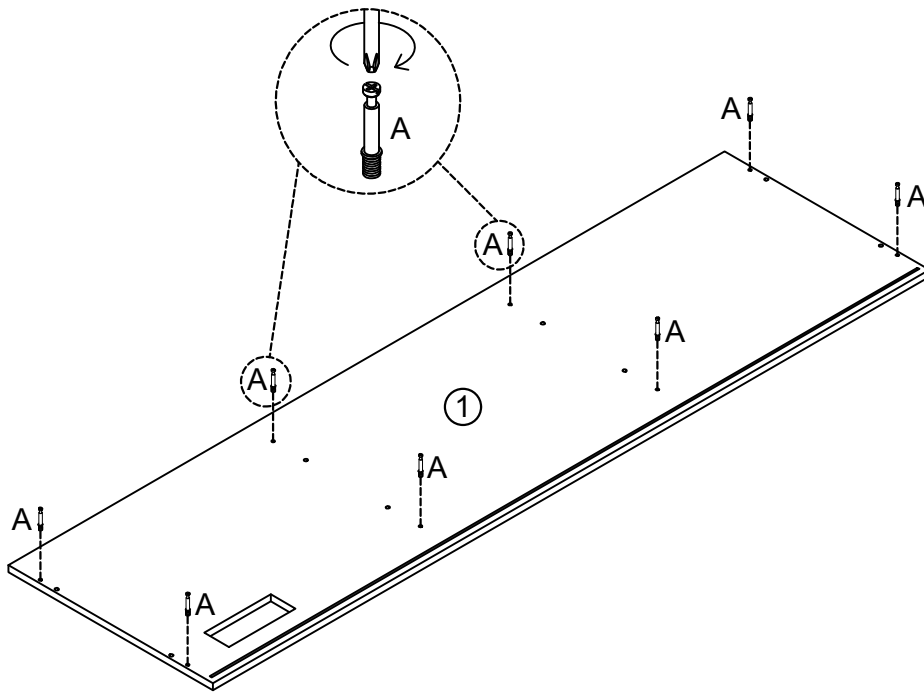


Step 3

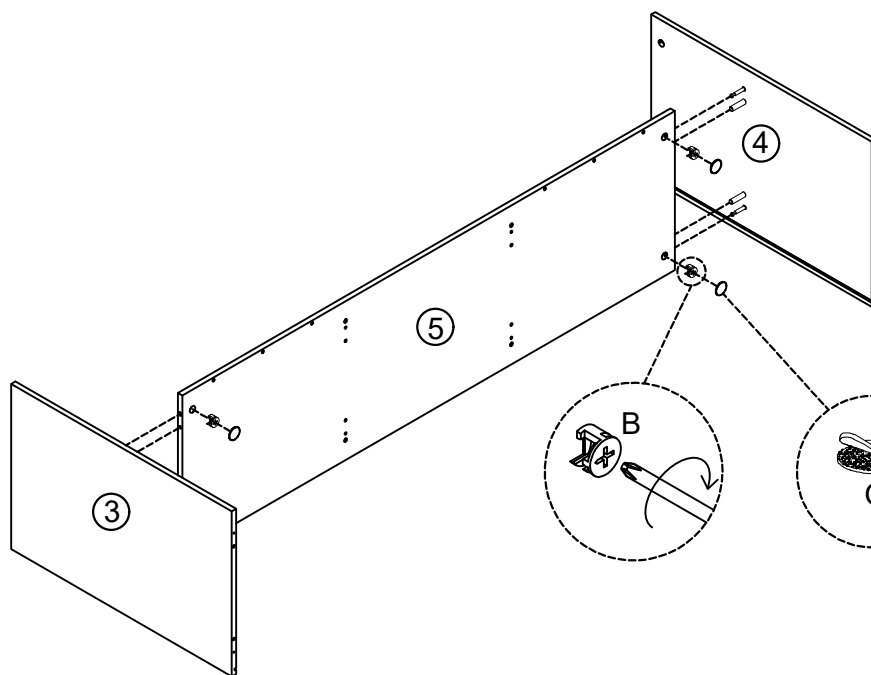


O x 4	B x 4

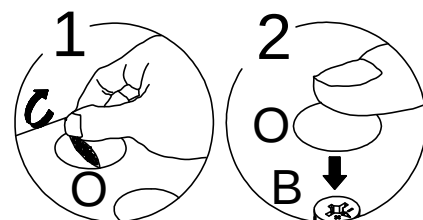


For beauty and safety.
Please attach O-hole stickers
at the end of this step.


Step 4

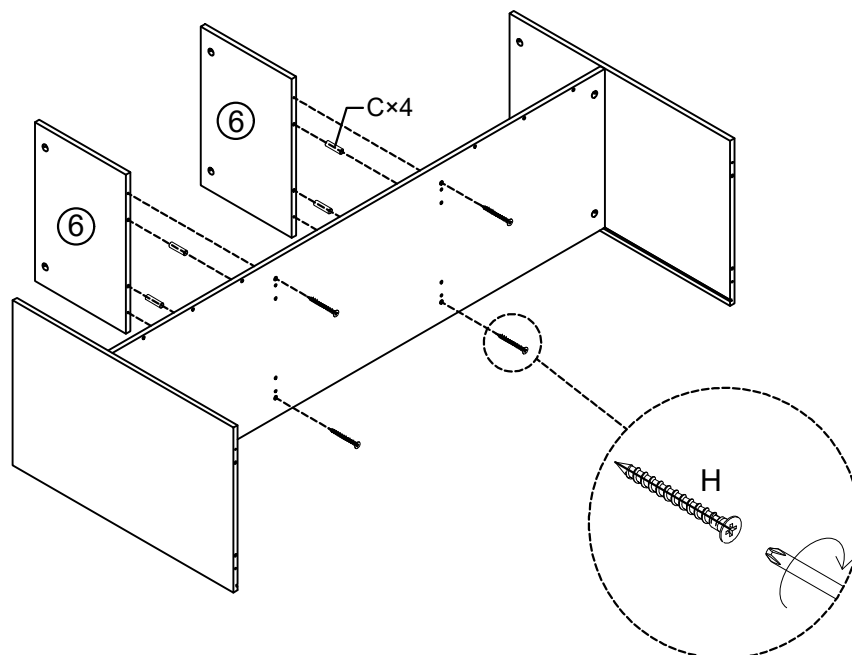


C x 4	H x 4

Step 5

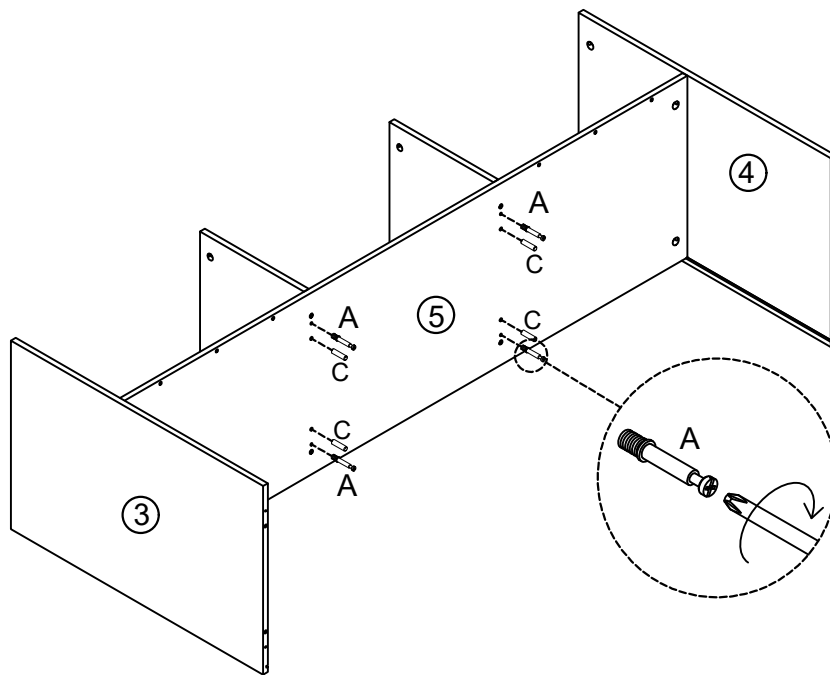


A x 4	C x 4
	

Step 6

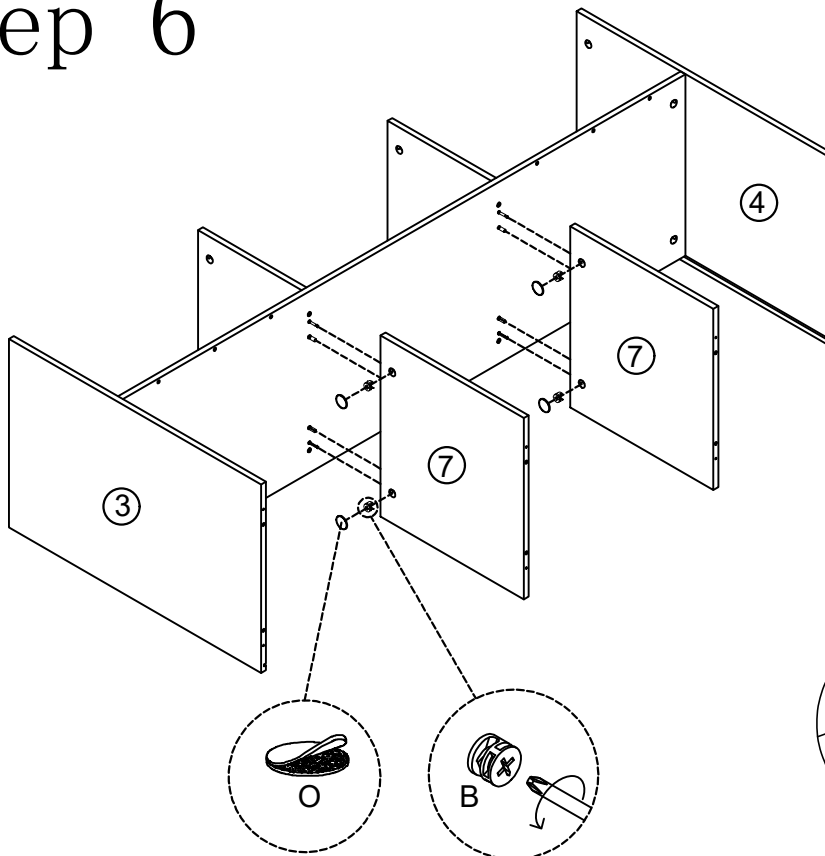


O x 4	B x 4
	

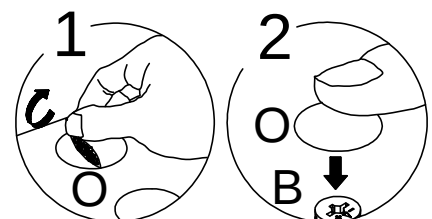


For beauty and safety.
Please attach O-hole stickers
at the end of this step.

Step 7

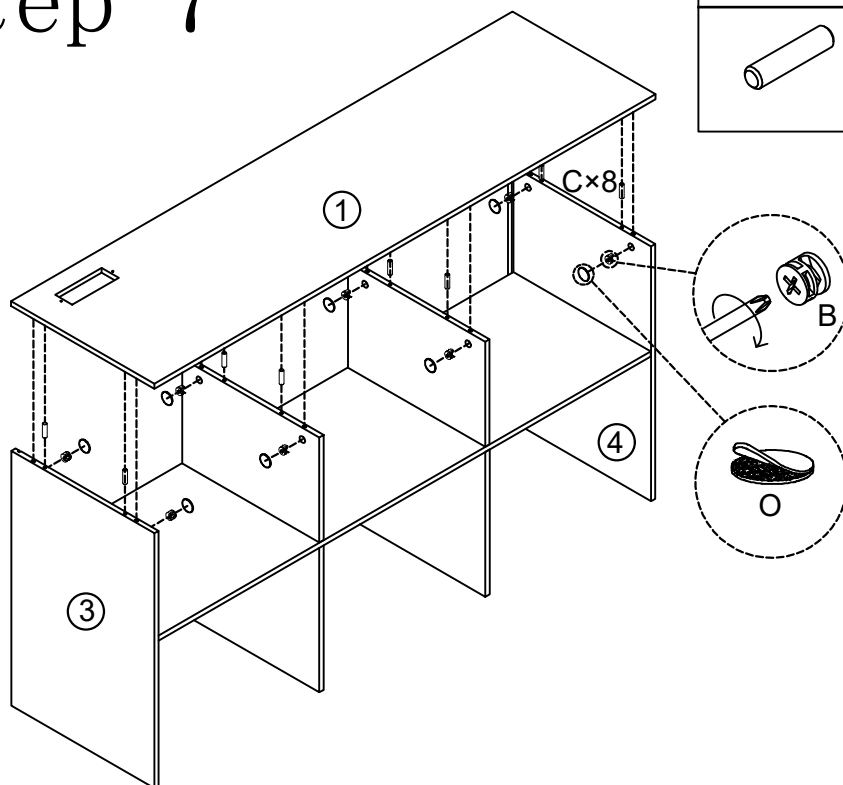


C x 8	O x 8	B x 8

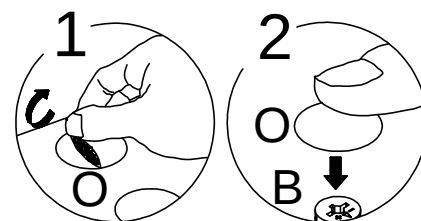



For beauty and safety.
Please attach O-hole stickers
at the end of this step.

Step 8

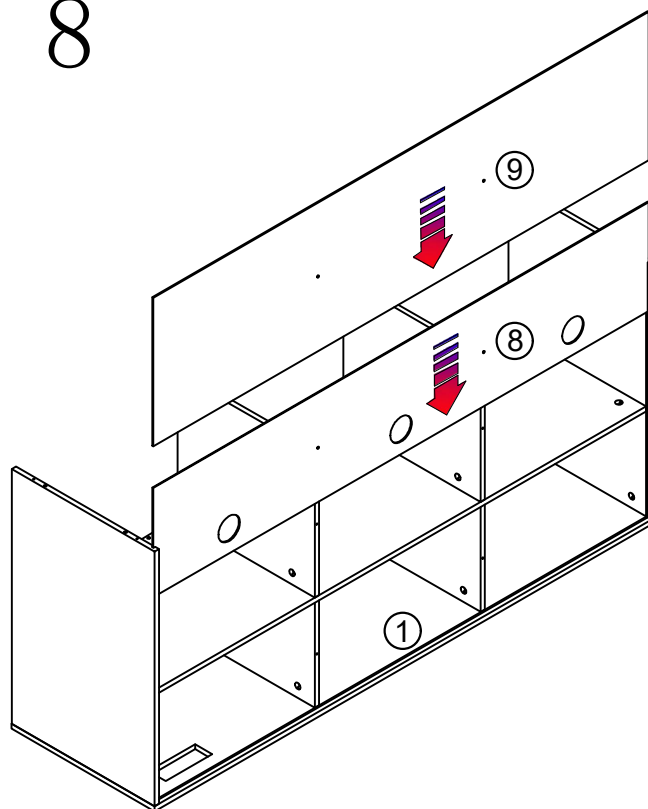


Step 9

C x 8	H x 8
	

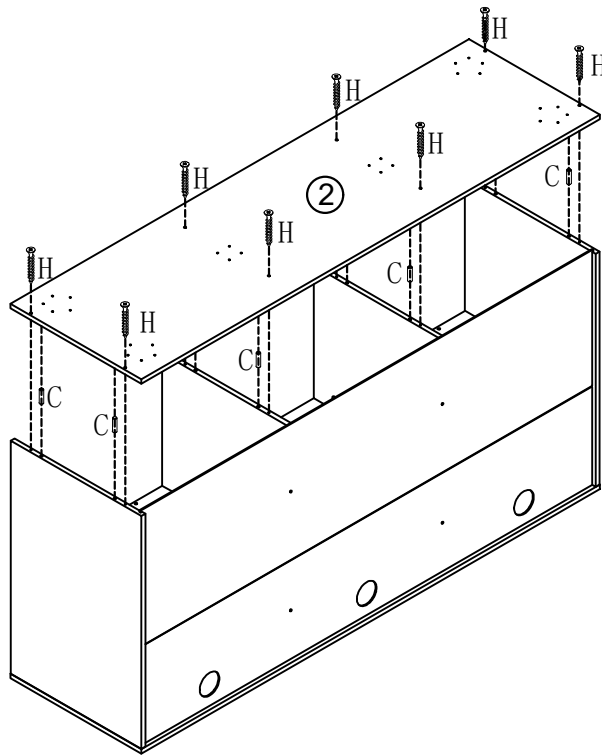


Step 10

E x 4


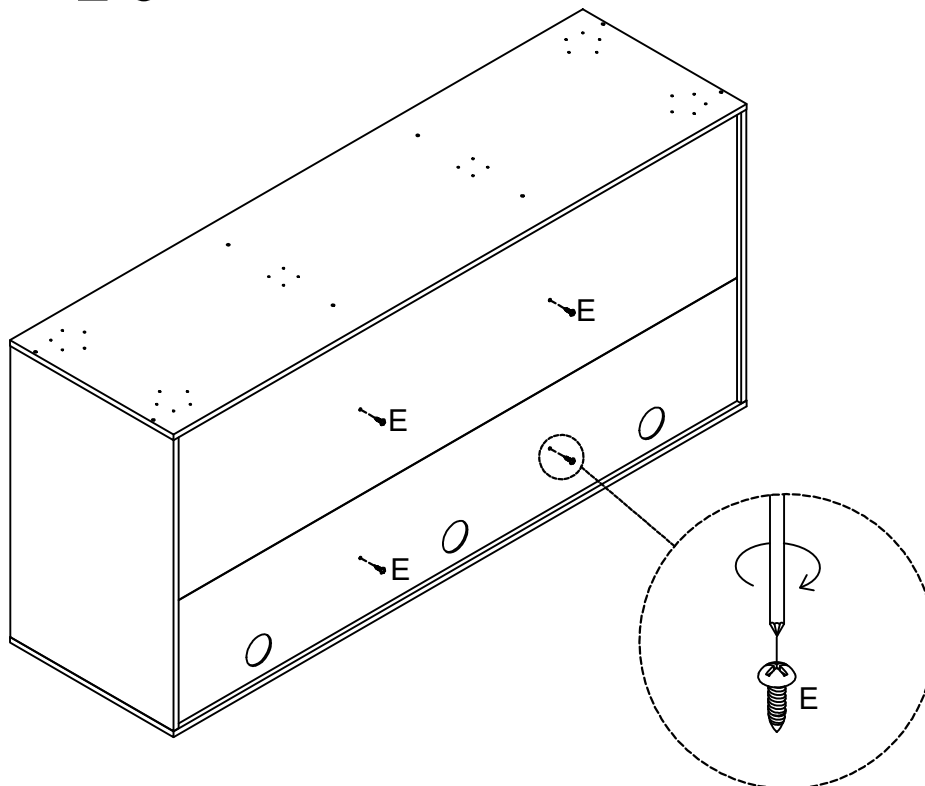
Step 11

L x 2	K x 4	D x 28
		 Ø3.5x12mm


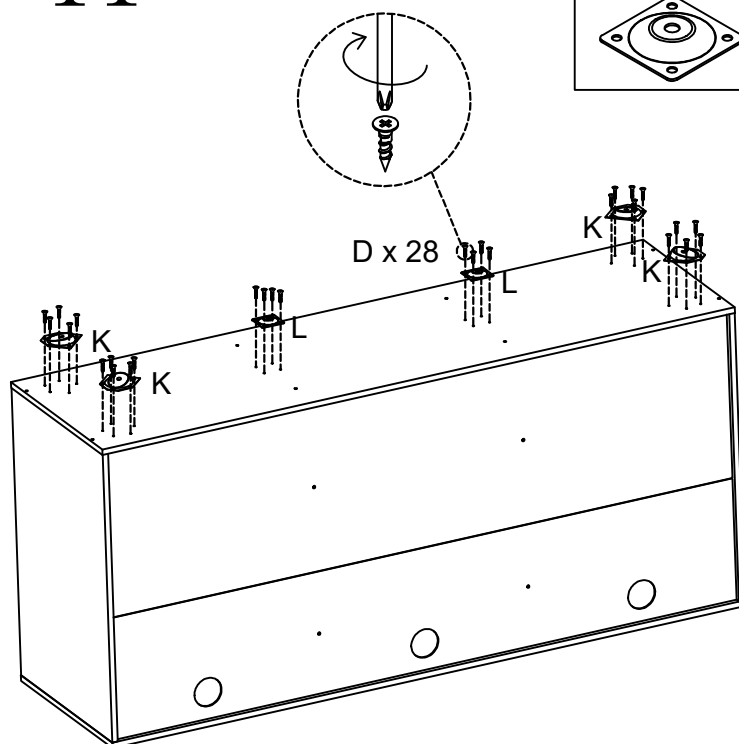


Step 12

Gx4	J x 2
	

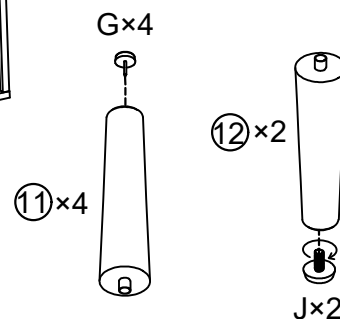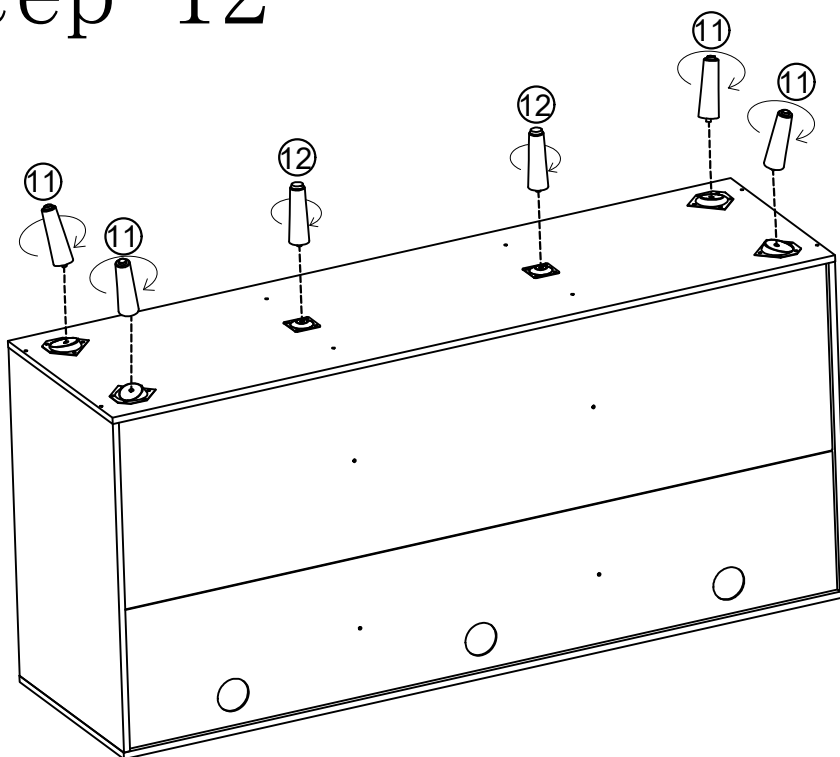


Step 13

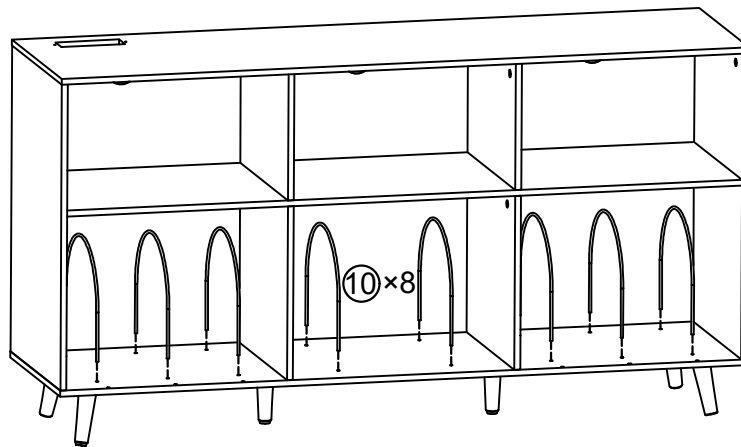


Two people work together to move the table.
Make sure you lift it off the ground.
Don't push and pull.

Step 14


F x 12

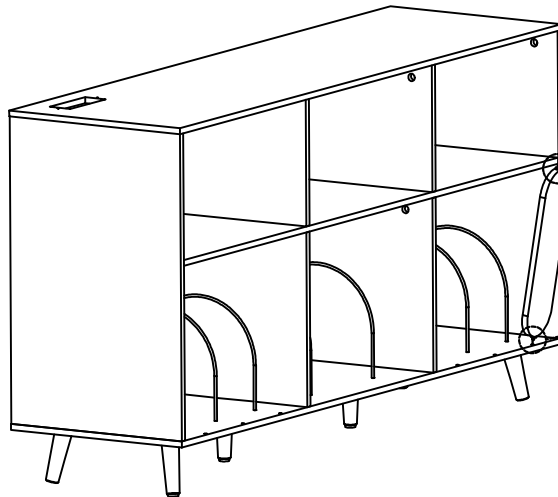


13x6

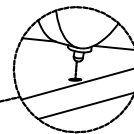

The second step

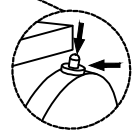


The third step

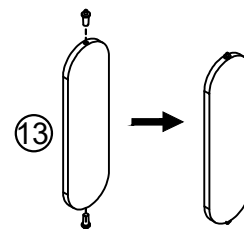


First step

Step 15

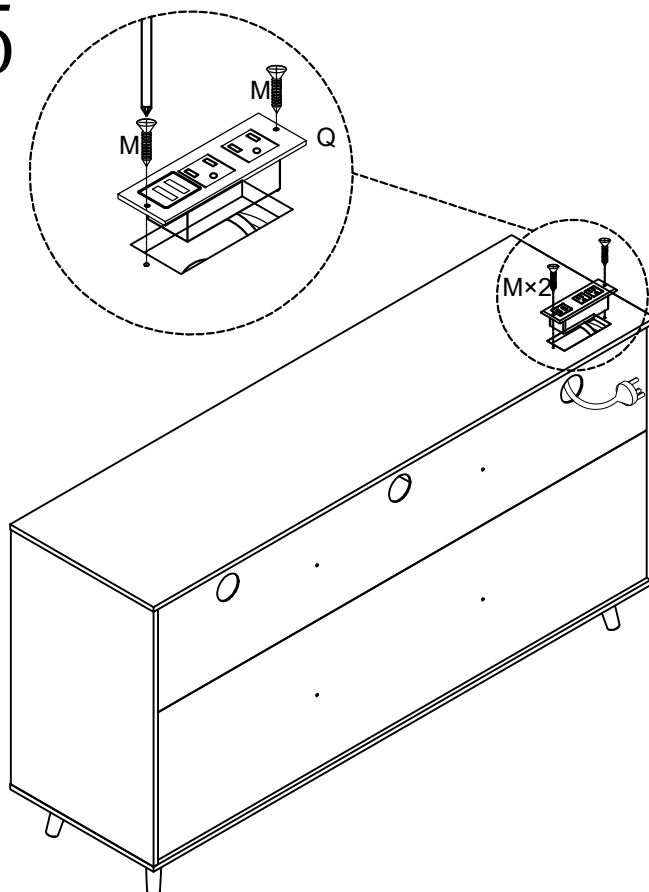


M x 2
 Ø3.5×14mm


Step 16


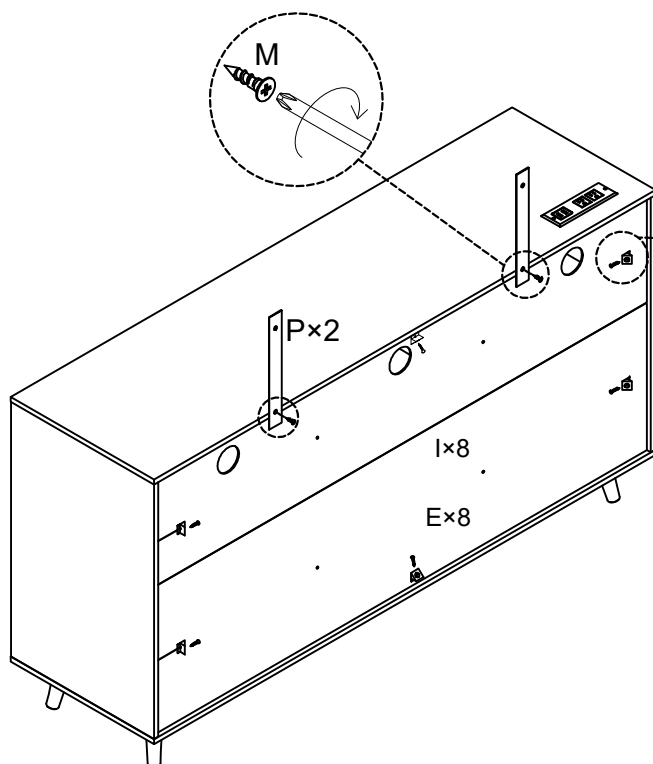


P x 2	M x 8
	 Ø3.5×14mm

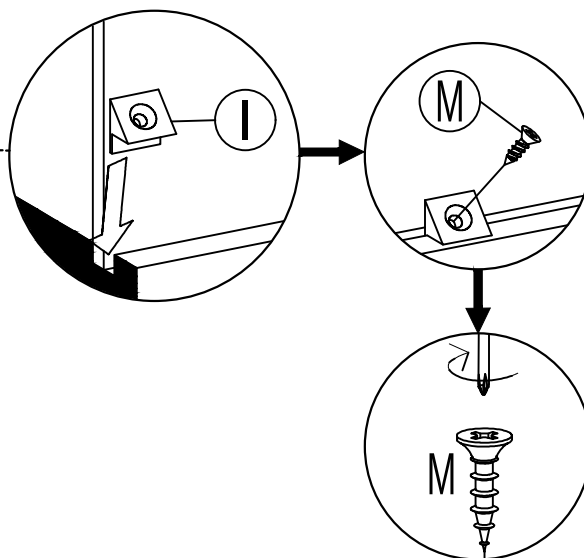

Step 17

N x 2	H x 2
	

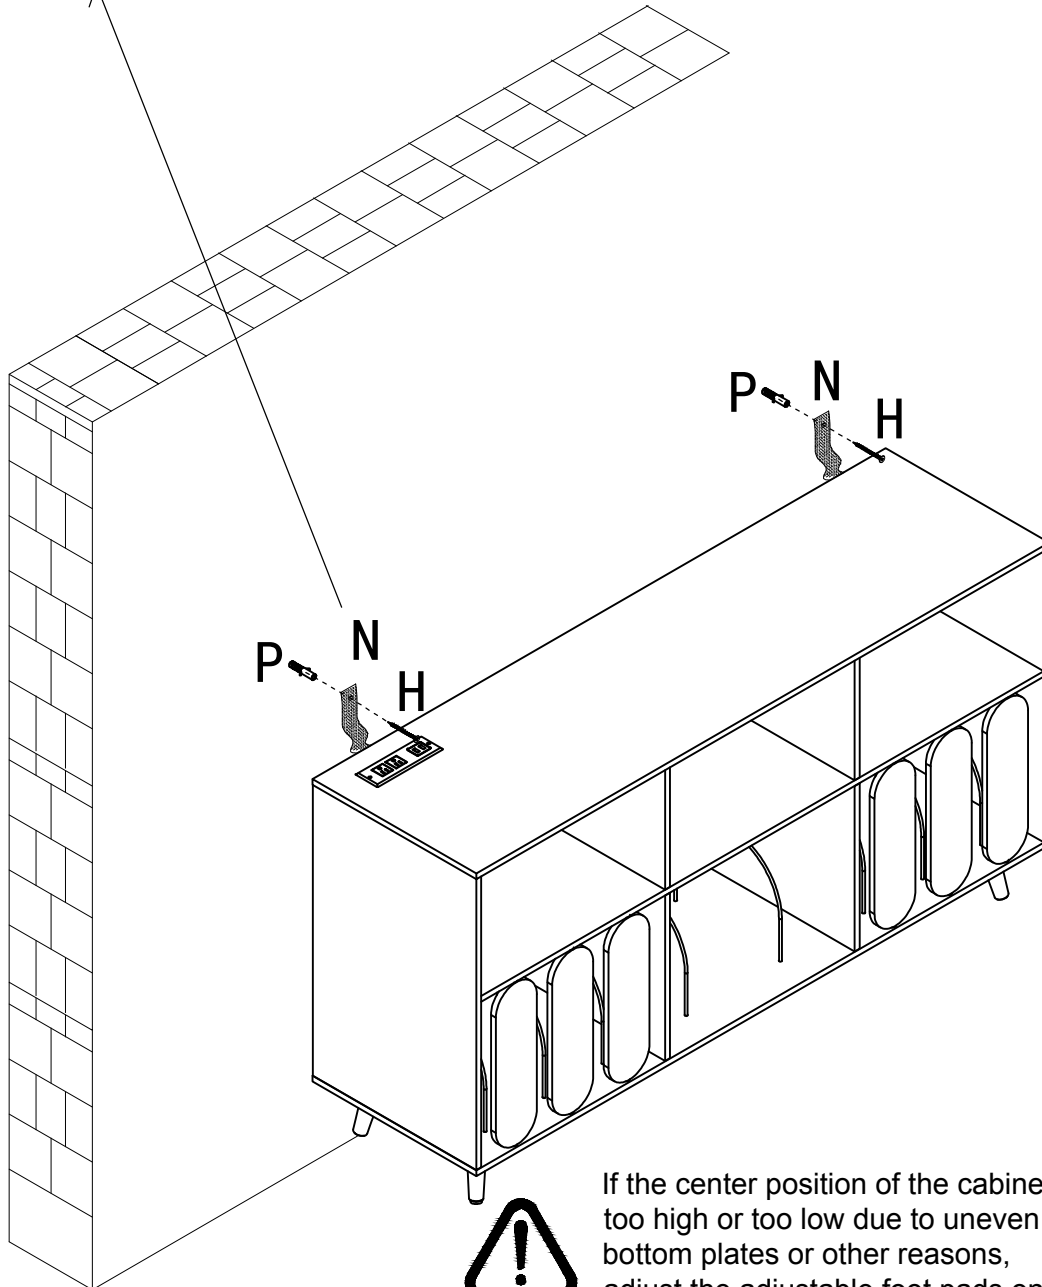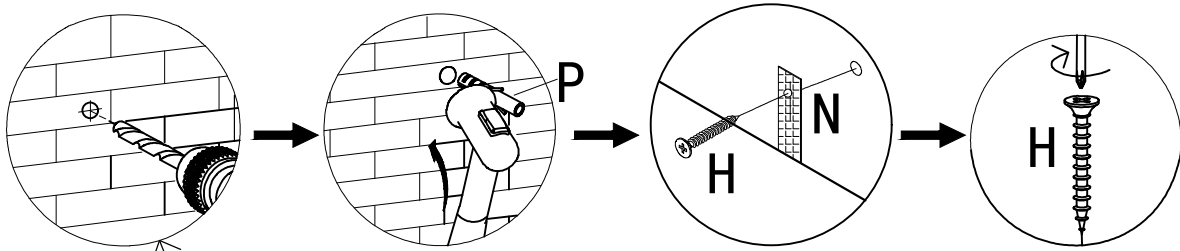

If the center position of the cabinet is too high or too low due to uneven bottom plates or other reasons, adjust the adjustable foot pads on feet ⑫ to adjust the upper and lower height

