




Computer Desk












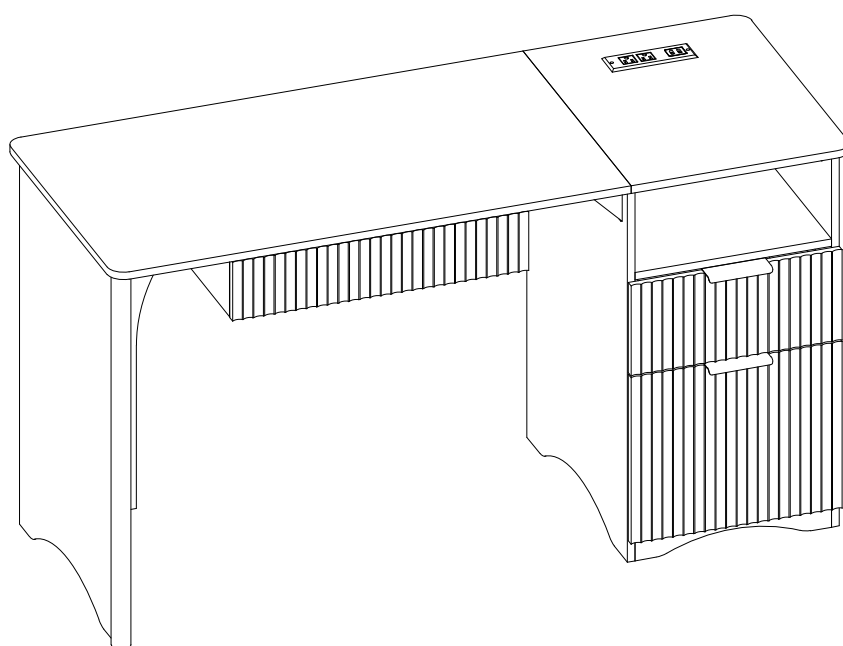


Version: 1.0

ASSEMBLY INSTRUCTION

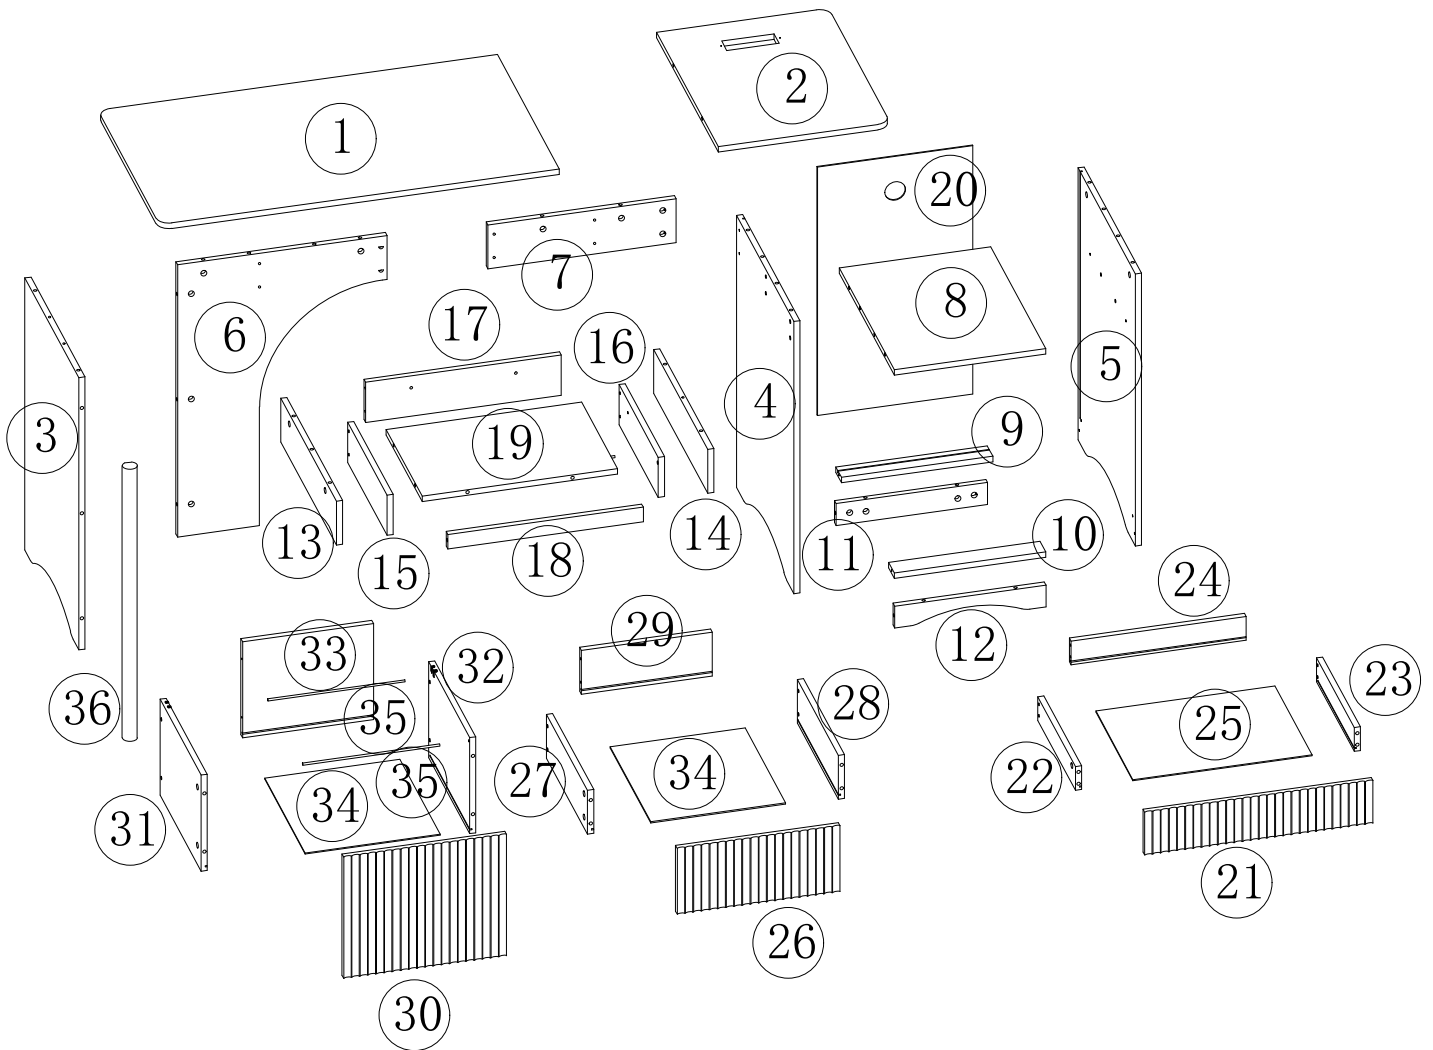


ASSEMBLY INSTRUCTION

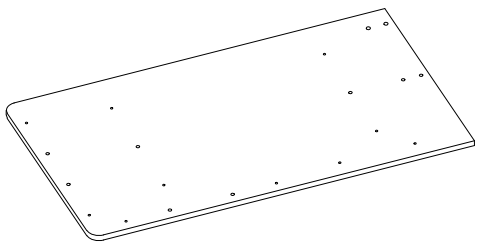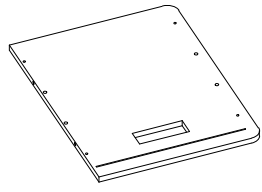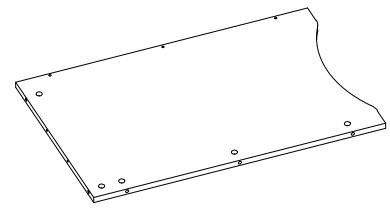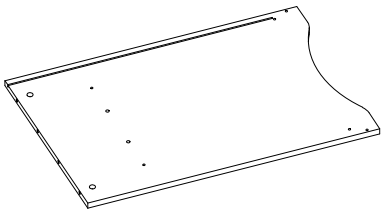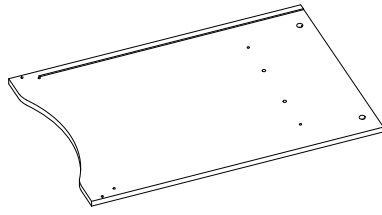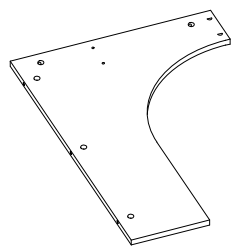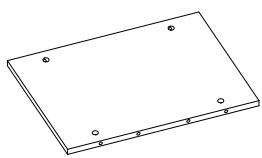①  X1	②  X1	③  X1
④  X1	⑤  X1	⑥  X1
⑦  X1	⑧  X1	⑨  X1
⑩  X1	⑪  X1	⑫  X1
⑬  X1	⑭  X1	⑮  X1


ASSEMBLY INSTRUCTION

①6



X1

①7




X1

①8




X1

①9

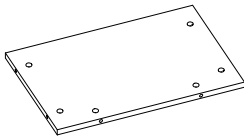

X1

②0

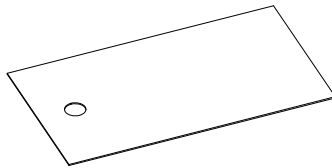

X1

②1




X1

②2



X1

②3




X1

②4




X1

②5

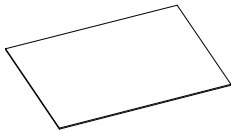

X1

②6



X1

②7



X1

②8




X1

②9



X1


③0

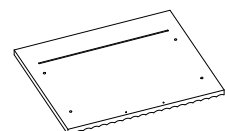

X1


ASSEMBLY INSTRUCTION

31




X1

32




X1

33



X1

34

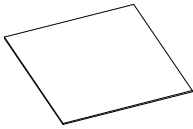

X2


35



Ø5x340mm





X2

36




X1

ASSEMBLY INSTRUCTION

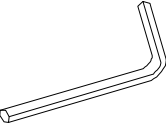
A M7x40mm  X18	B  (K) X44	C 15x11mm  X44	D M3.5x12mm  X38
E M6x10mm  X8	F M8x50mm  X22	G  X1	H  X2
I  X4	J  X4	K M3.5x14mm  X4	L  X2
M M6x25mm  X2	N M4   X1		

ASSEMBLY INSTRUCTION

STEP 1


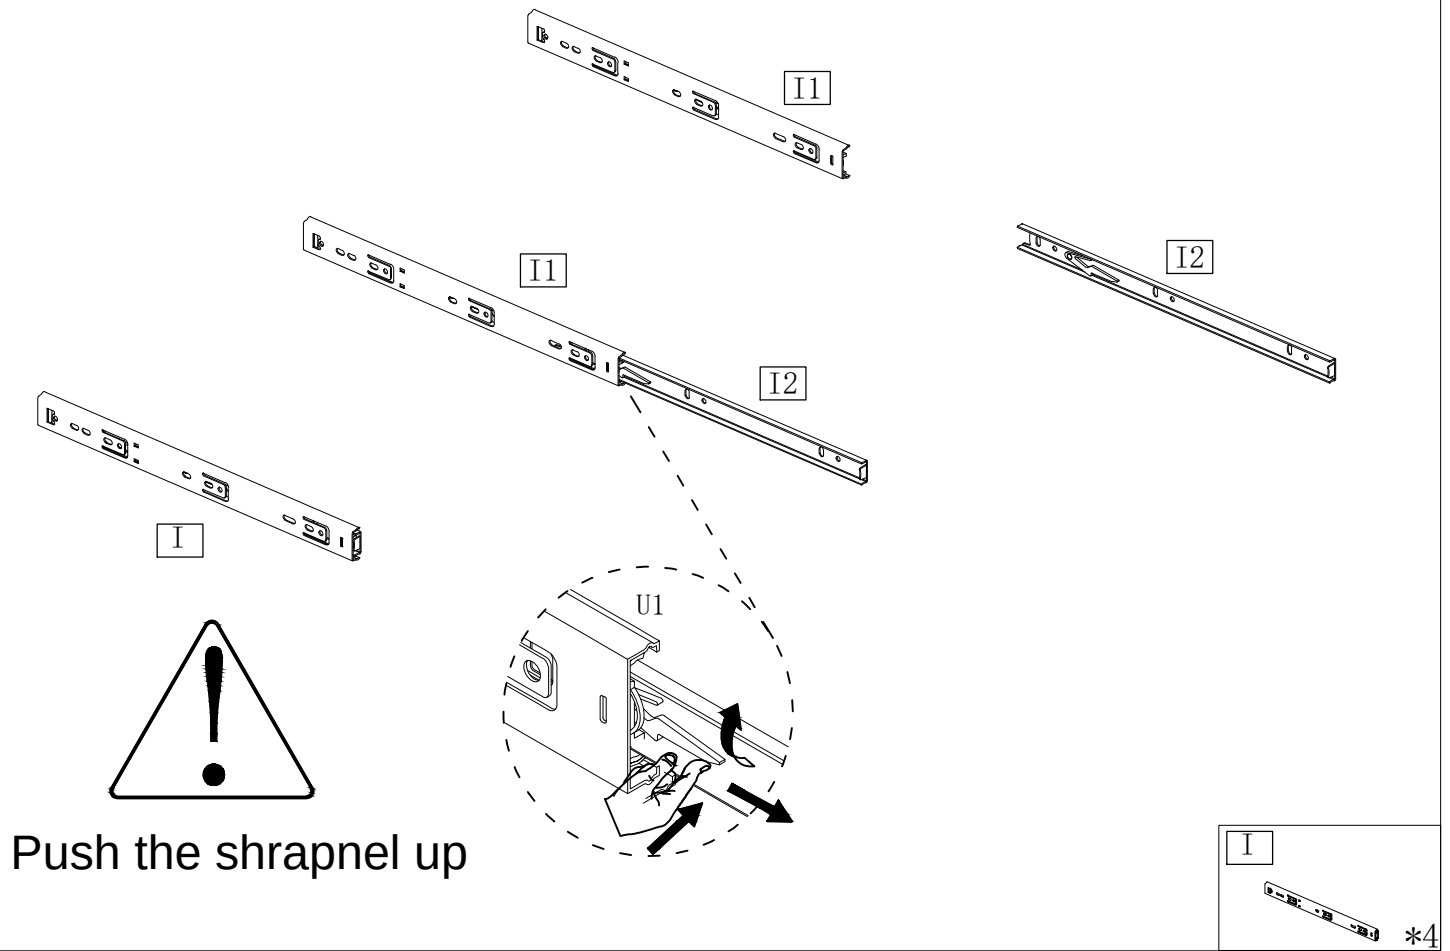


STEP 2


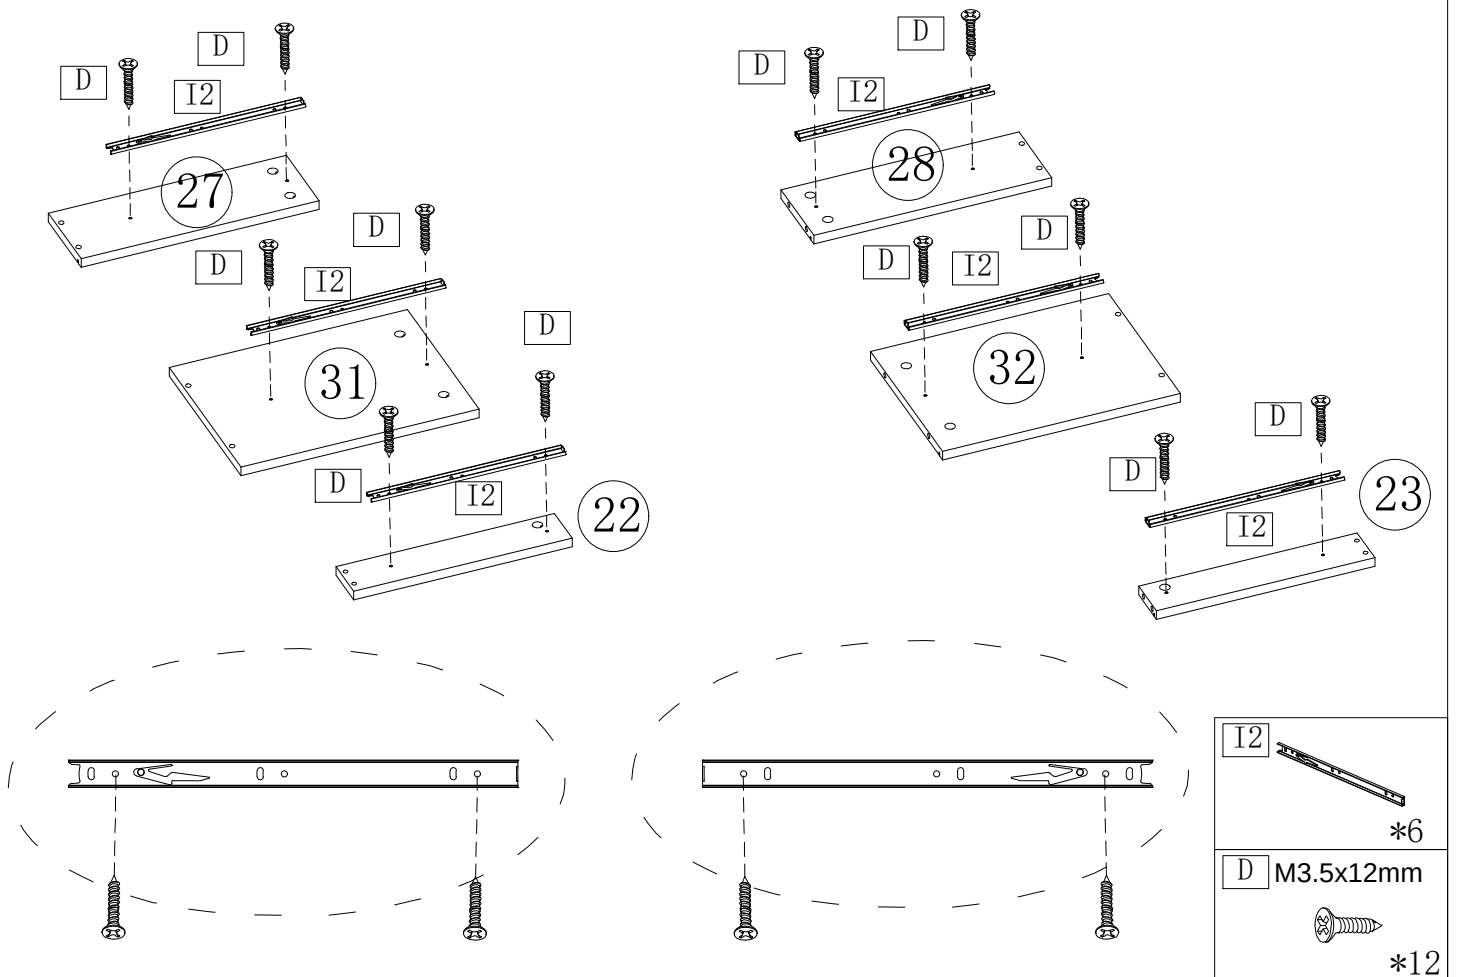


ASSEMBLY INSTRUCTION

STEP 3

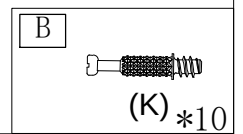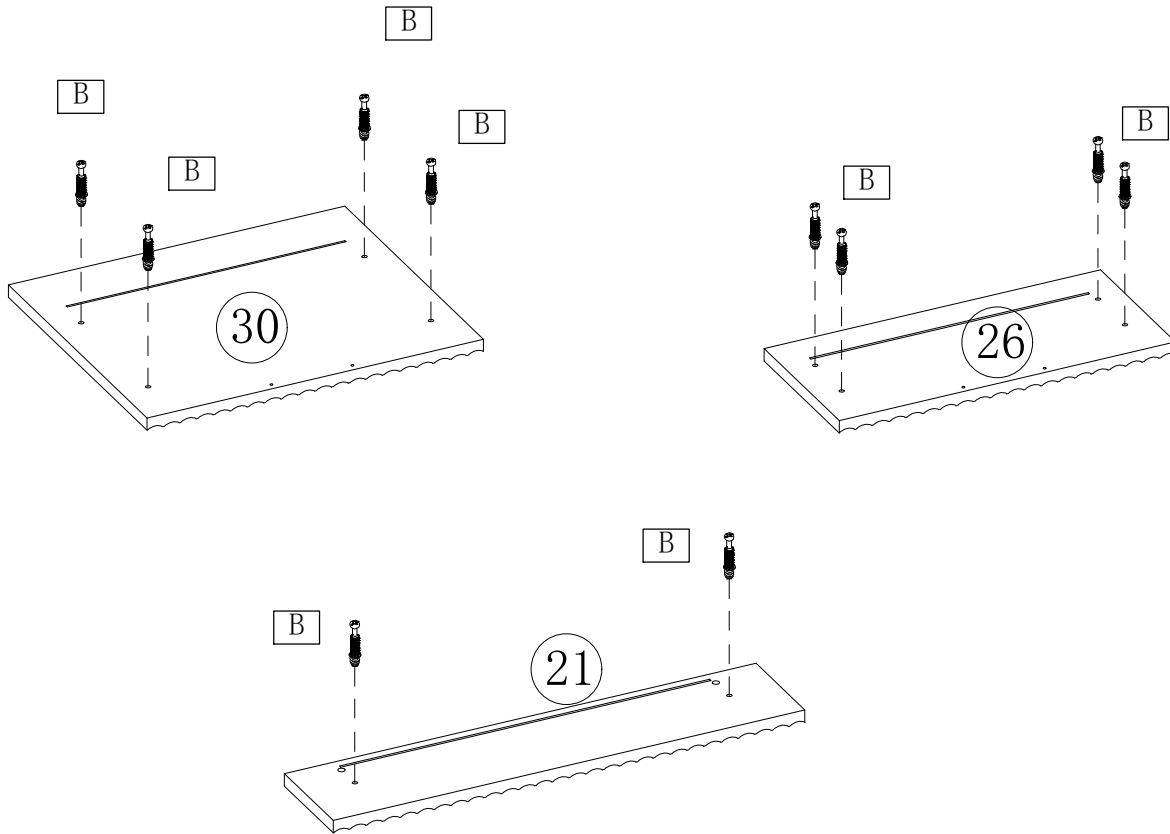


STEP 4

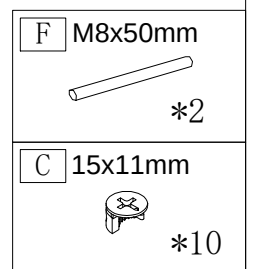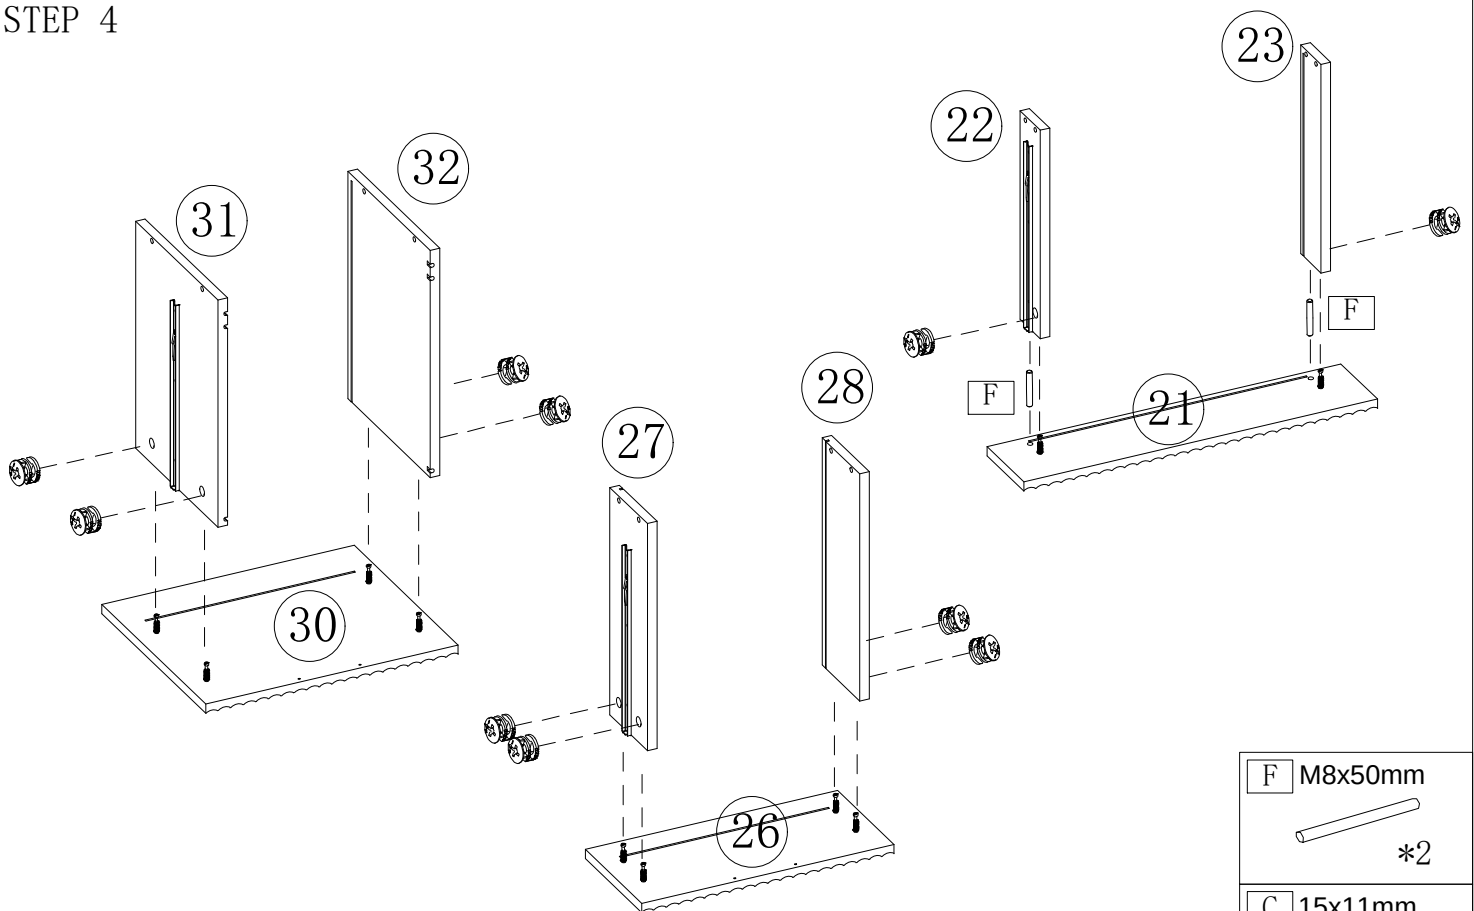


ASSEMBLY INSTRUCTION


STEP 5

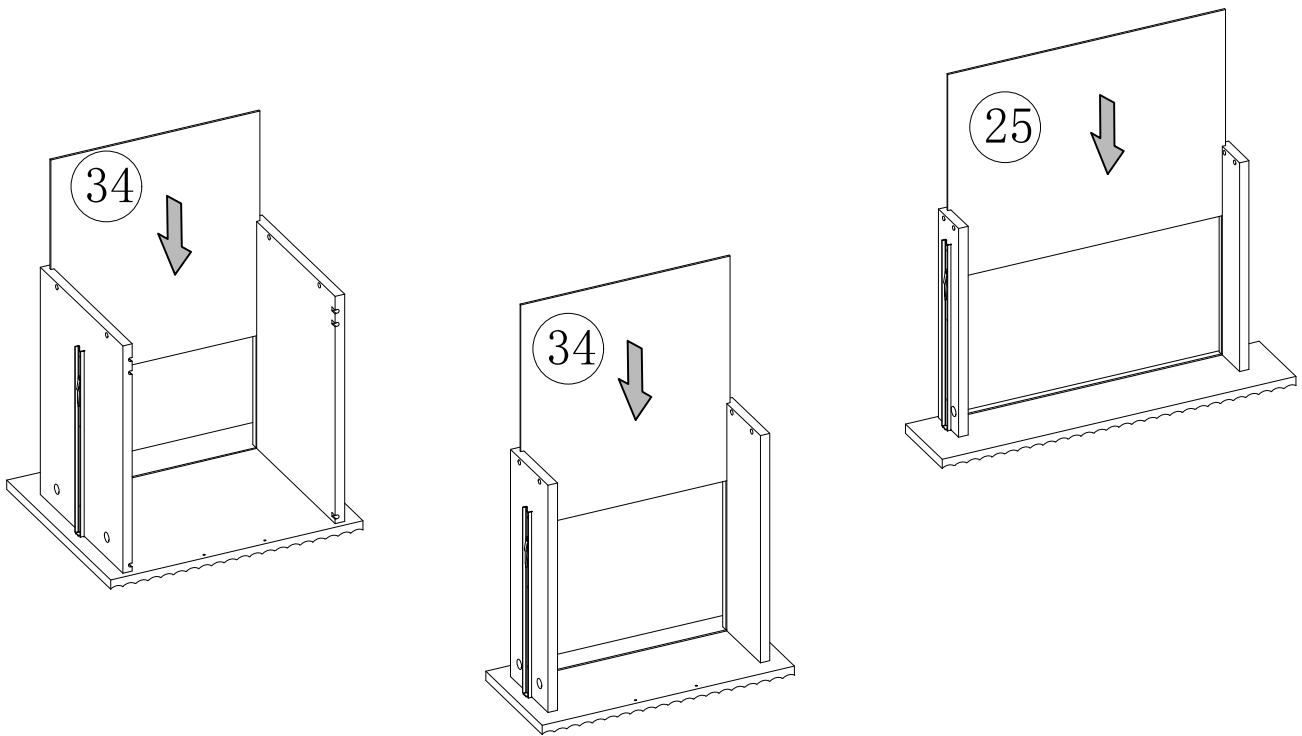

STEP 6

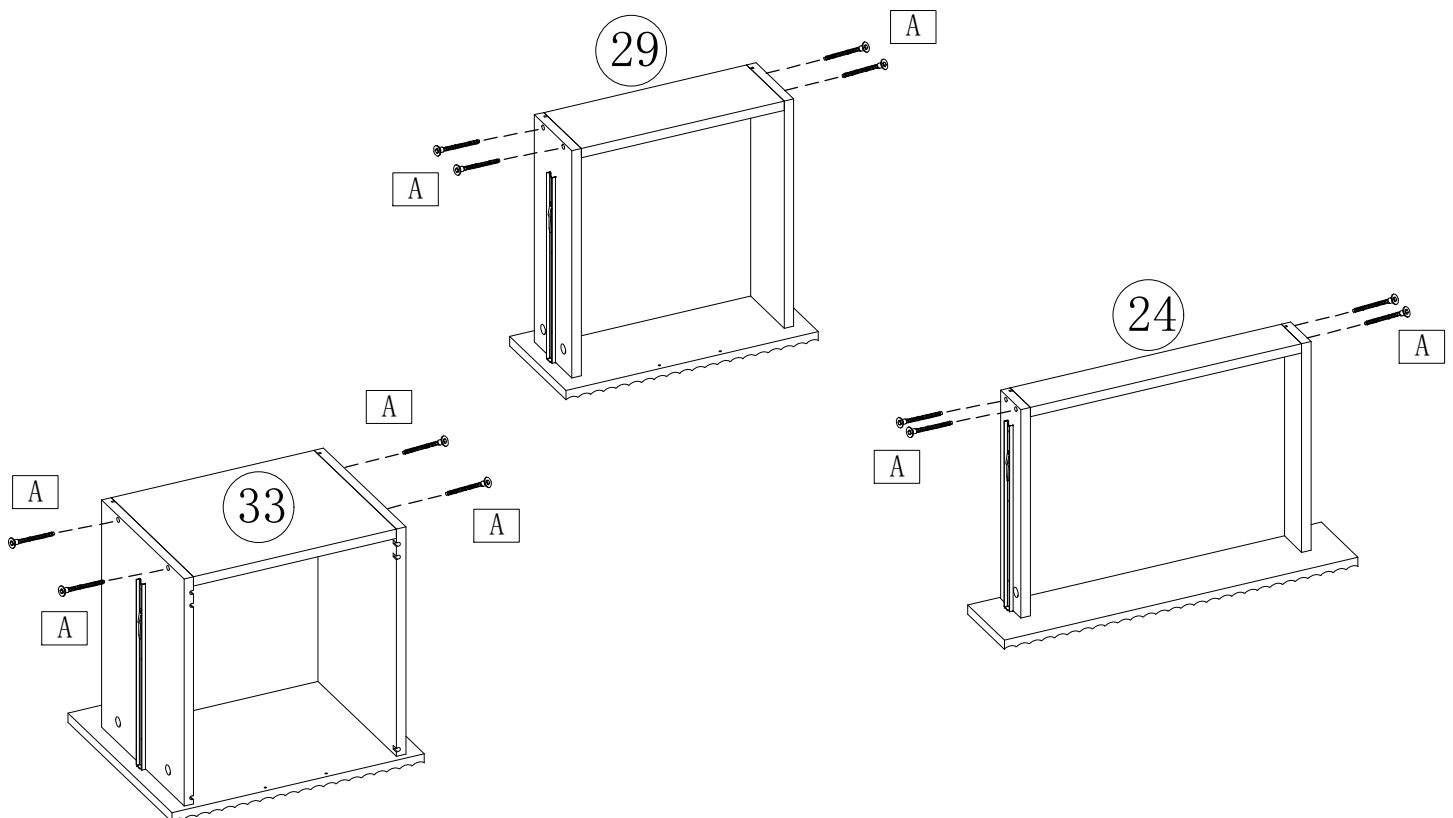


A M7x40mm




*12



ASSEMBLY INSTRUCTION


STEP 7

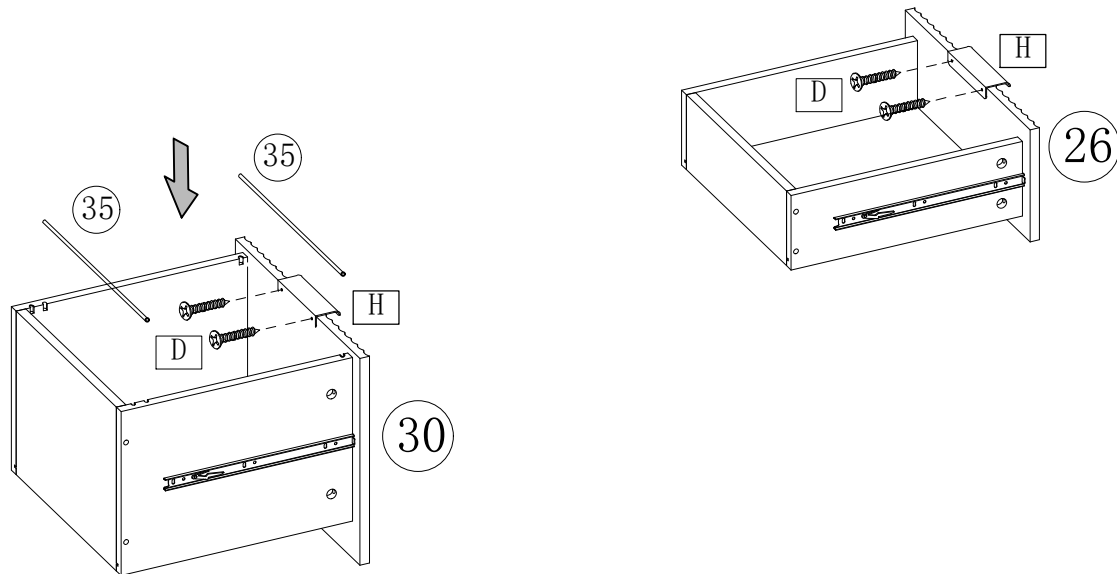

D	M3.5x12mm
	
	*4
H	
	*2



STEP 8

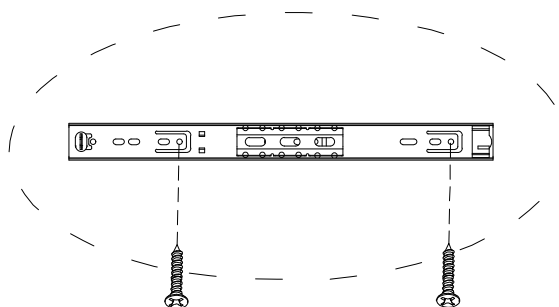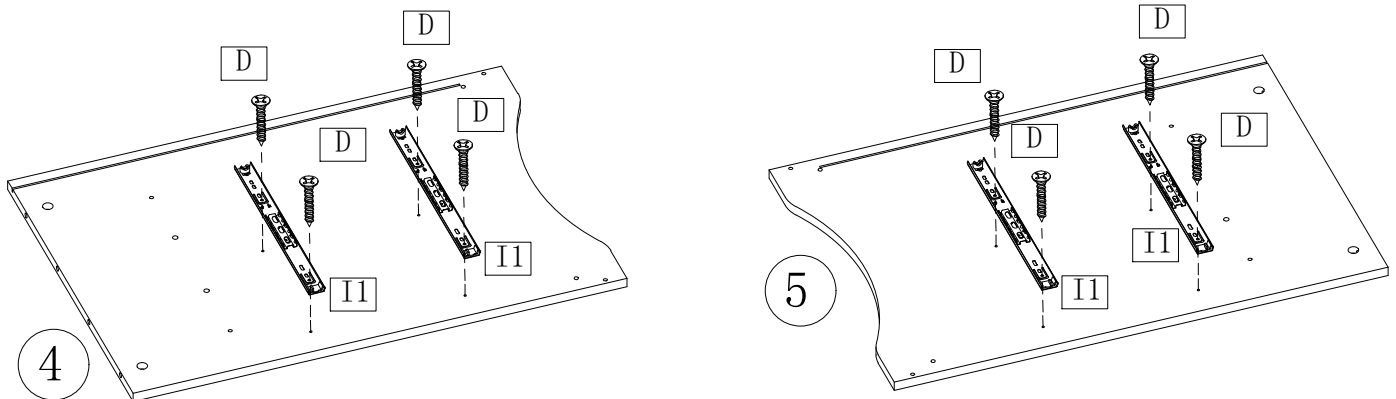




I1	
	*4
D	M3.5x12mm
	
	*8

ASSEMBLY INSTRUCTION

STEP 9

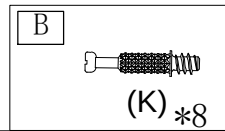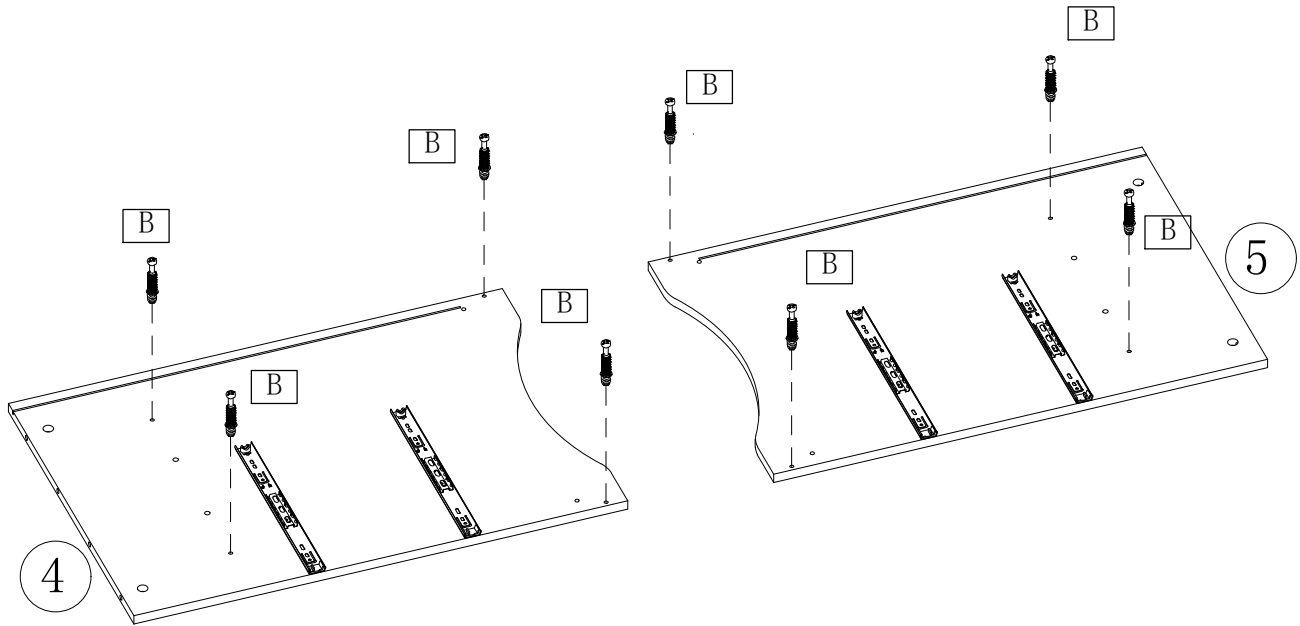


STEP 10

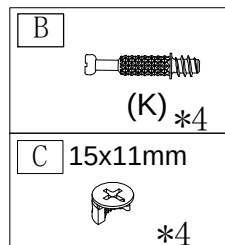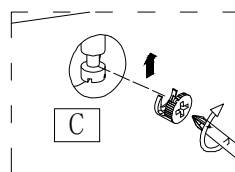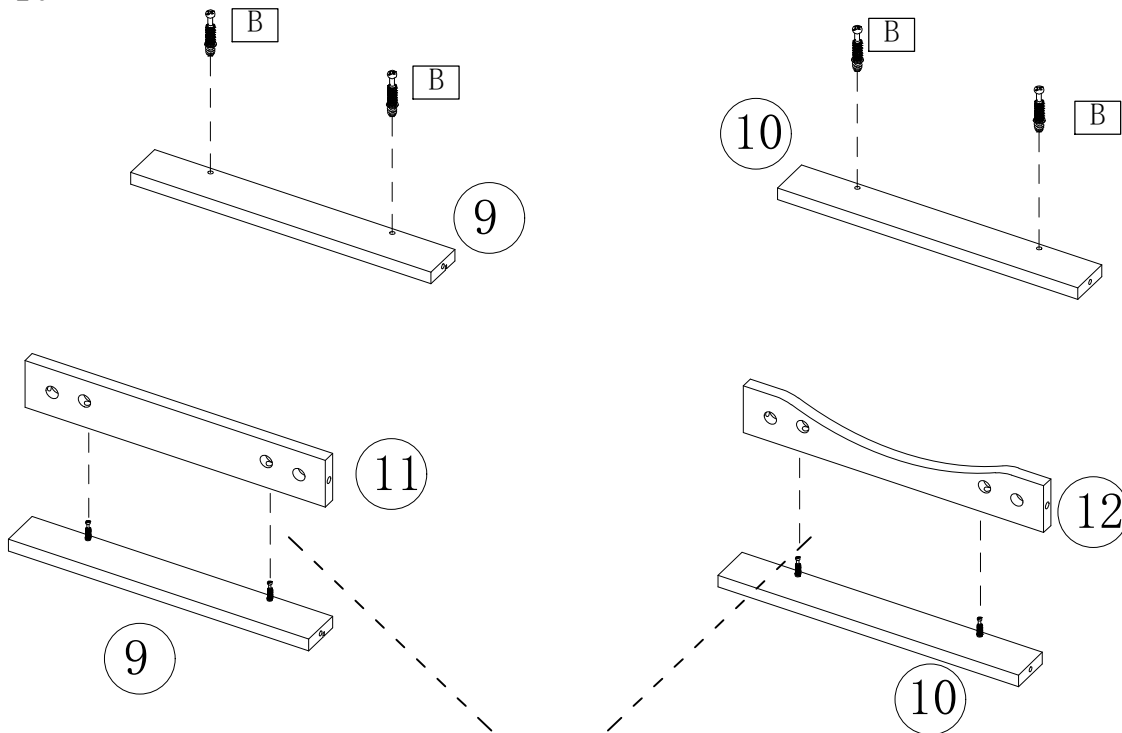


ASSEMBLY INSTRUCTION

STEP 11

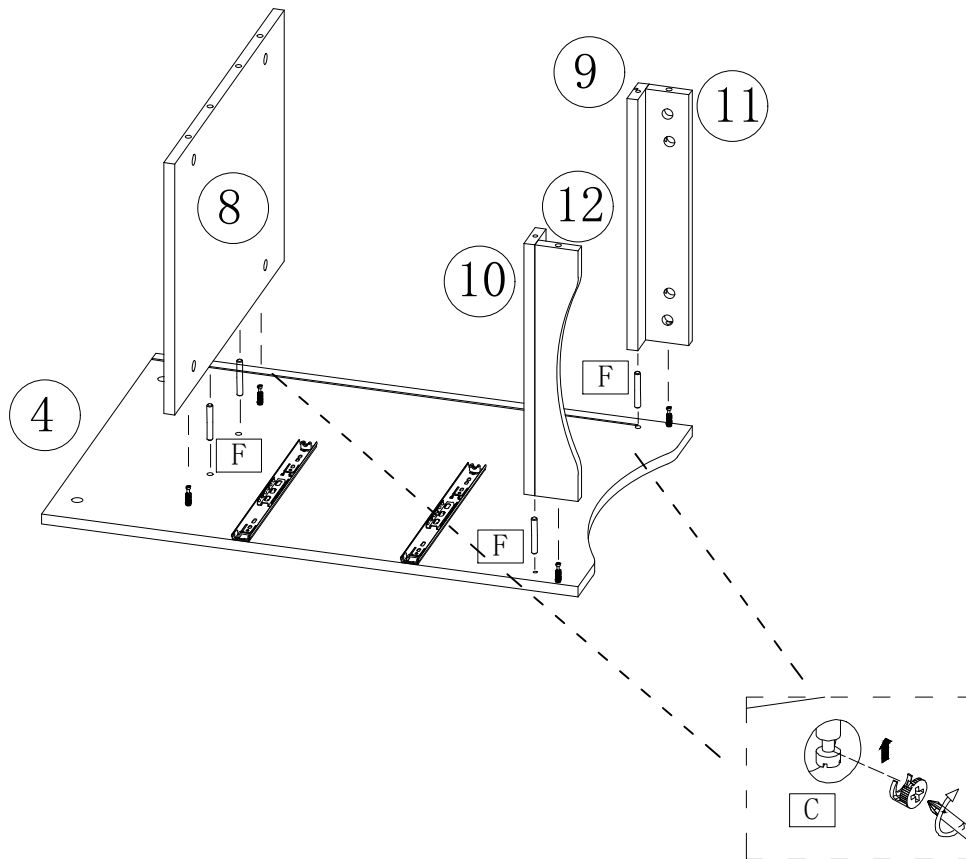

F	M8x50mm
	 *4
C	15x11mm
	 *4


STEP 12

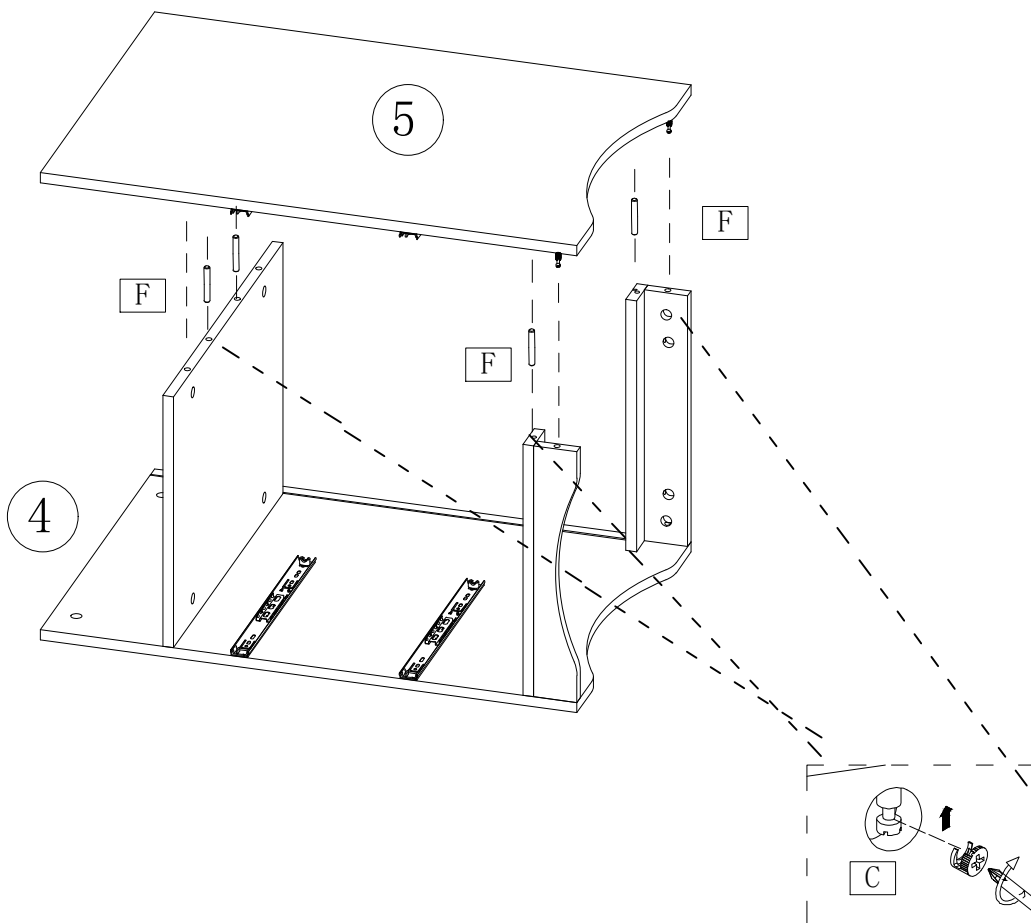


F	M8x50mm
	 *4
C	15x11mm
	 *4

ASSEMBLY INSTRUCTION

STEP 13

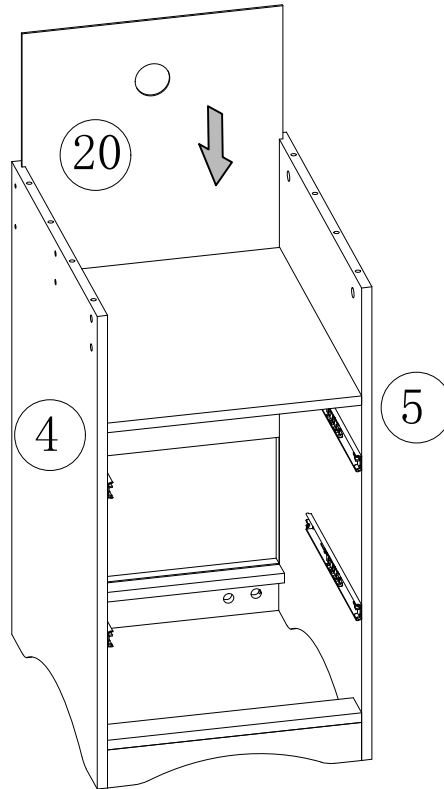


STEP 14

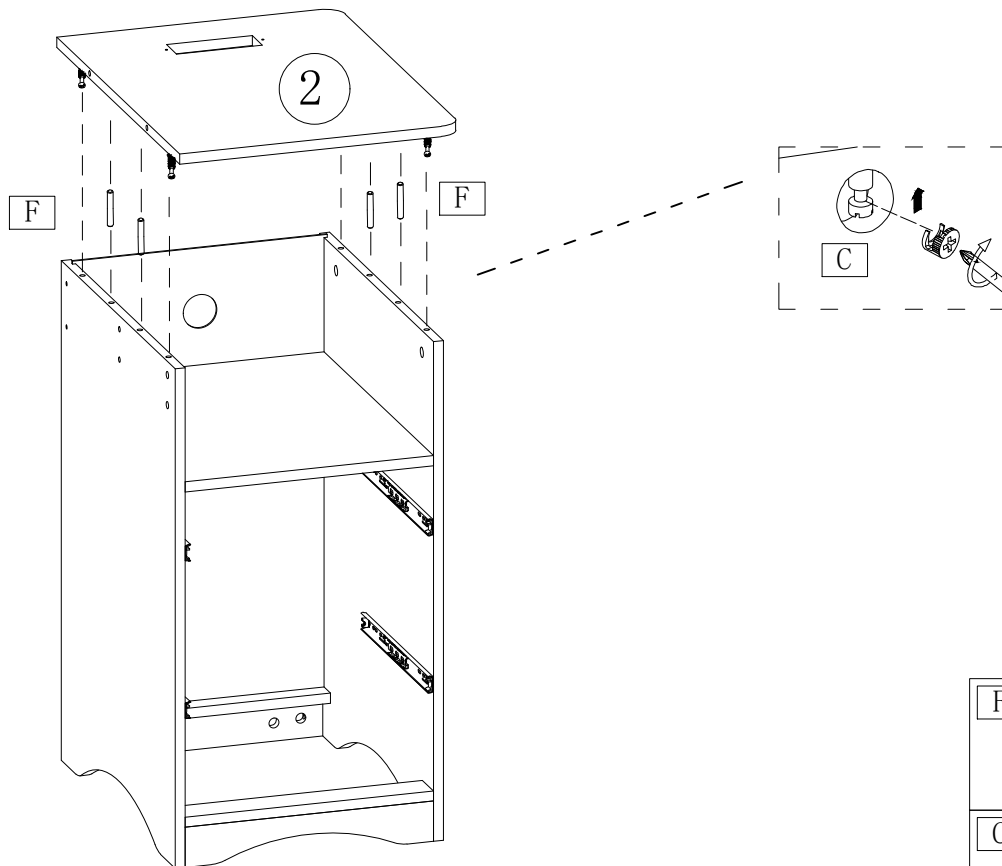


F	M8x50mm
	 *4
C	15x11mm
	 *4

ASSEMBLY INSTRUCTION

STEP 15

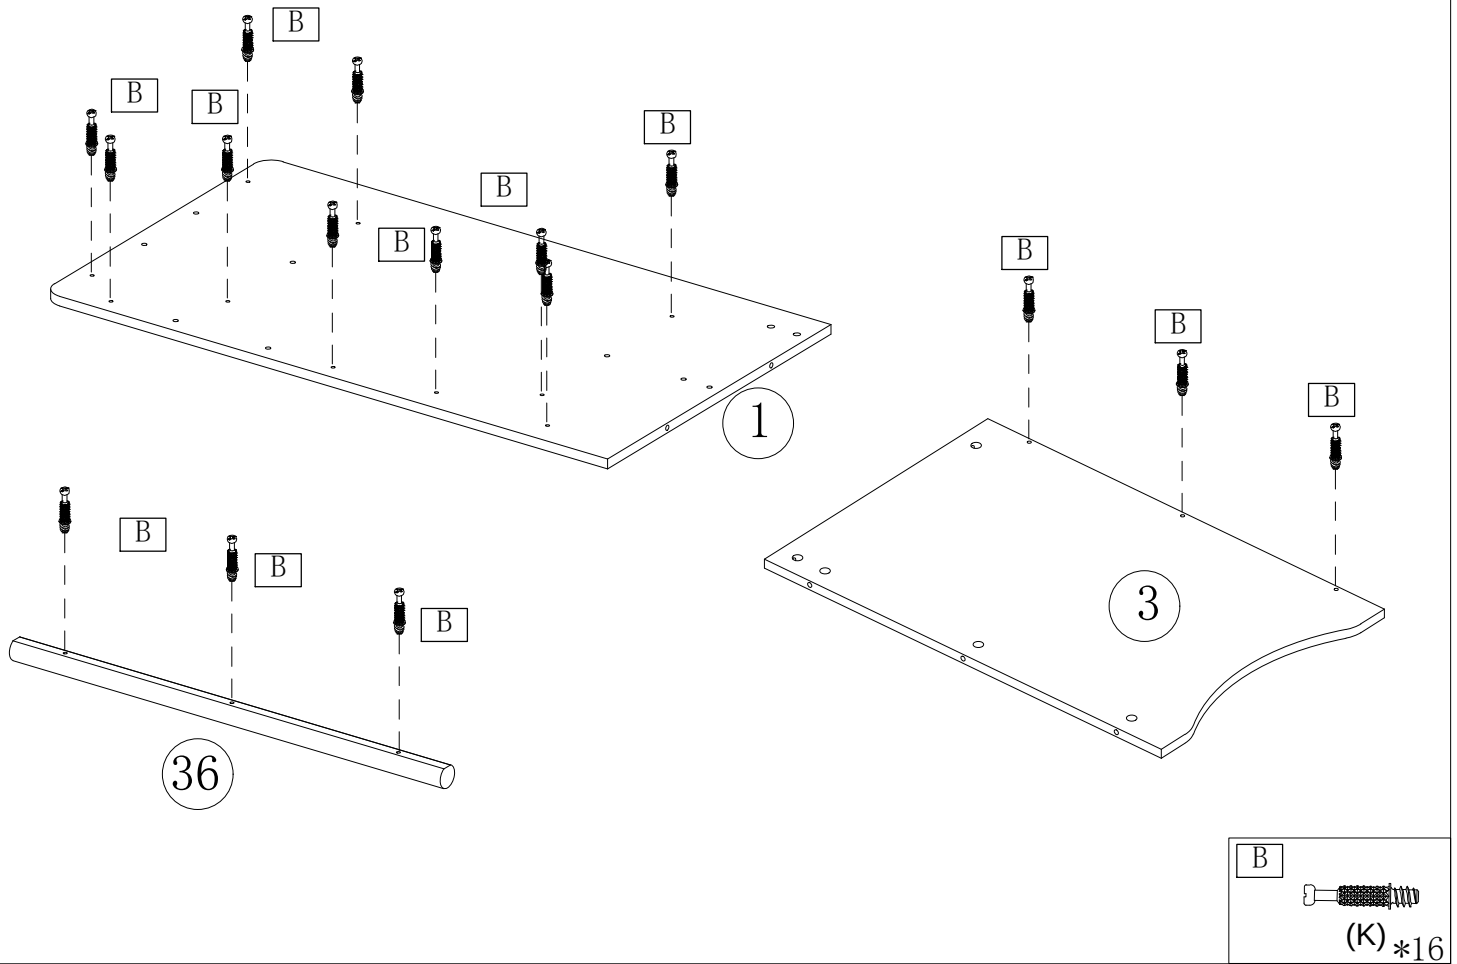


STEP 16

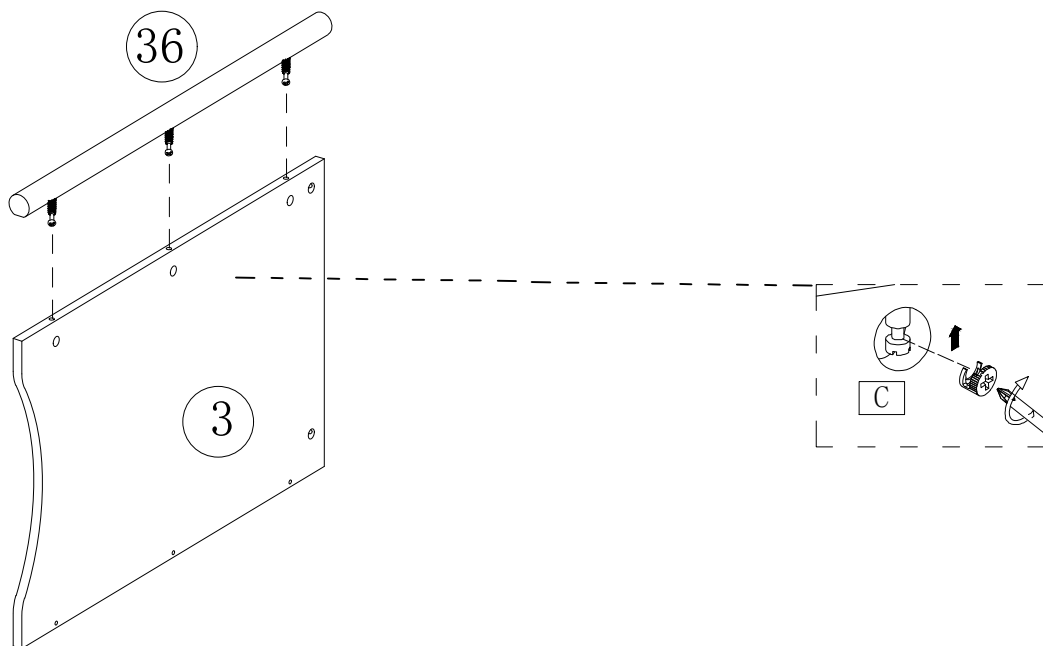


ASSEMBLY INSTRUCTION


STEP 17

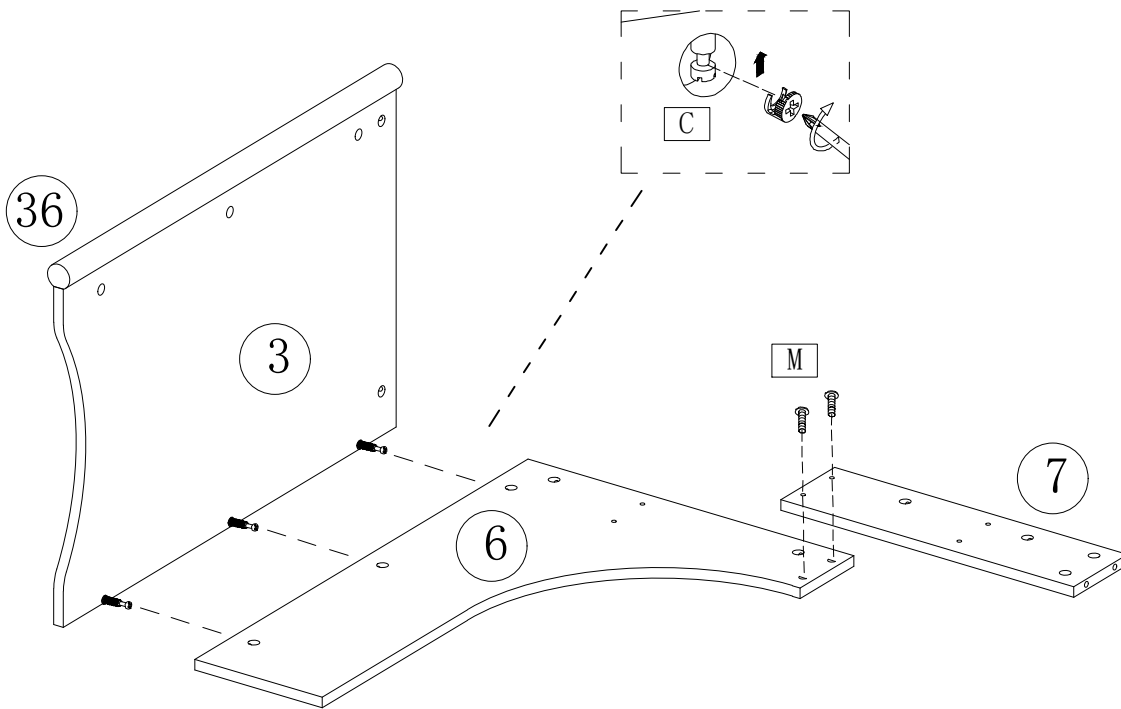

M	M6x25mm
	*2
C	15x11mm
	*3


STEP 18

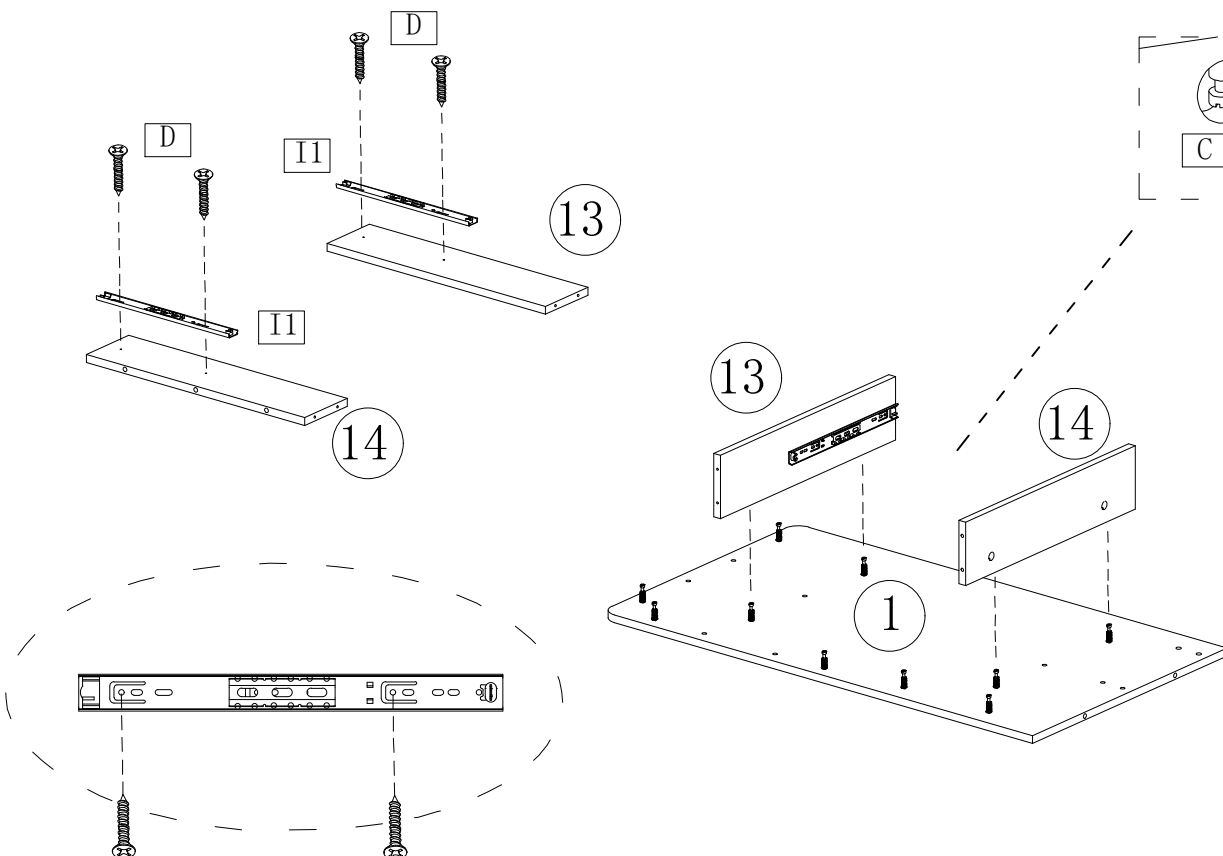

I1		*2
D	M3.5x12mm	
		*4
C	15x11mm	
		*4


ASSEMBLY INSTRUCTION


STEP 19

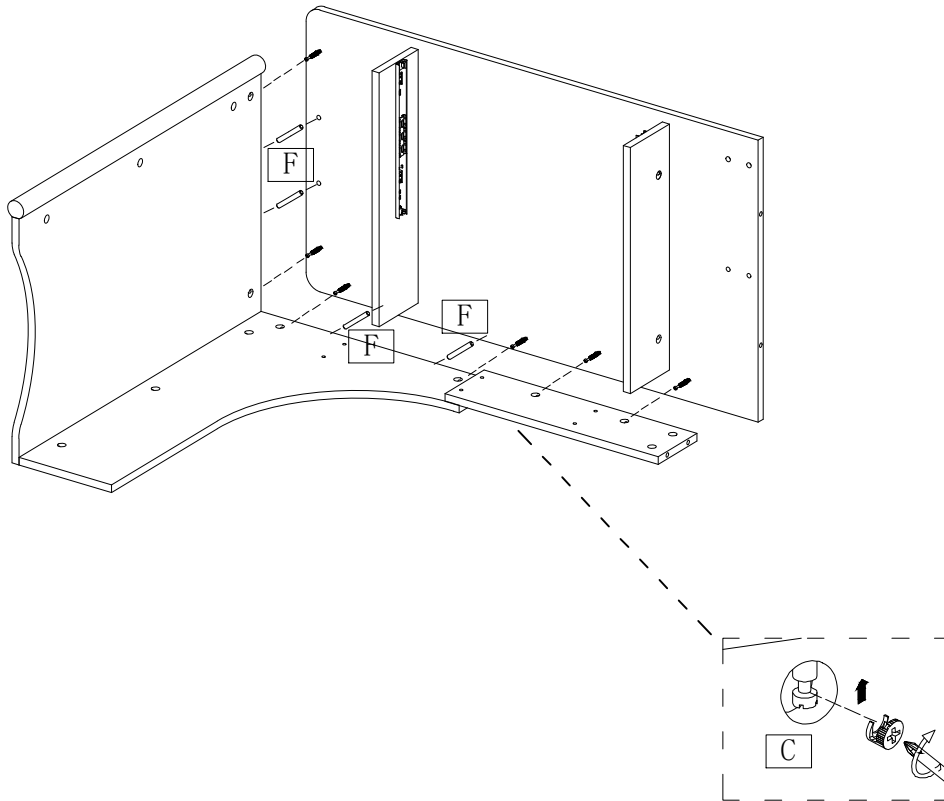

F	M8x50mm
	 *4
C	15x11mm
	 *6


STEP 20

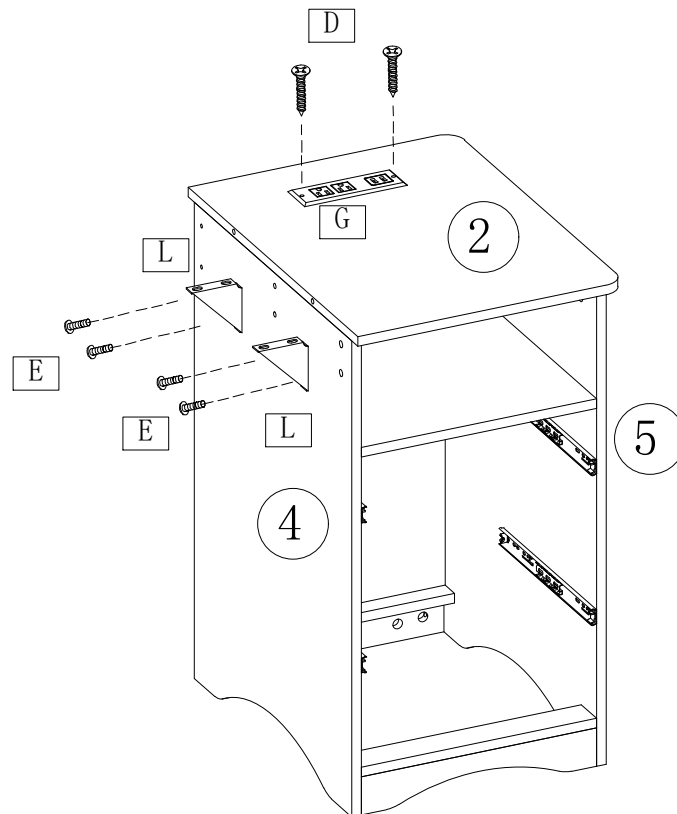


L	 *2
G	 *1
D	M6x10mm
	 *4
D	M3.5x12mm
	 *2


ASSEMBLY INSTRUCTION

STEP 21

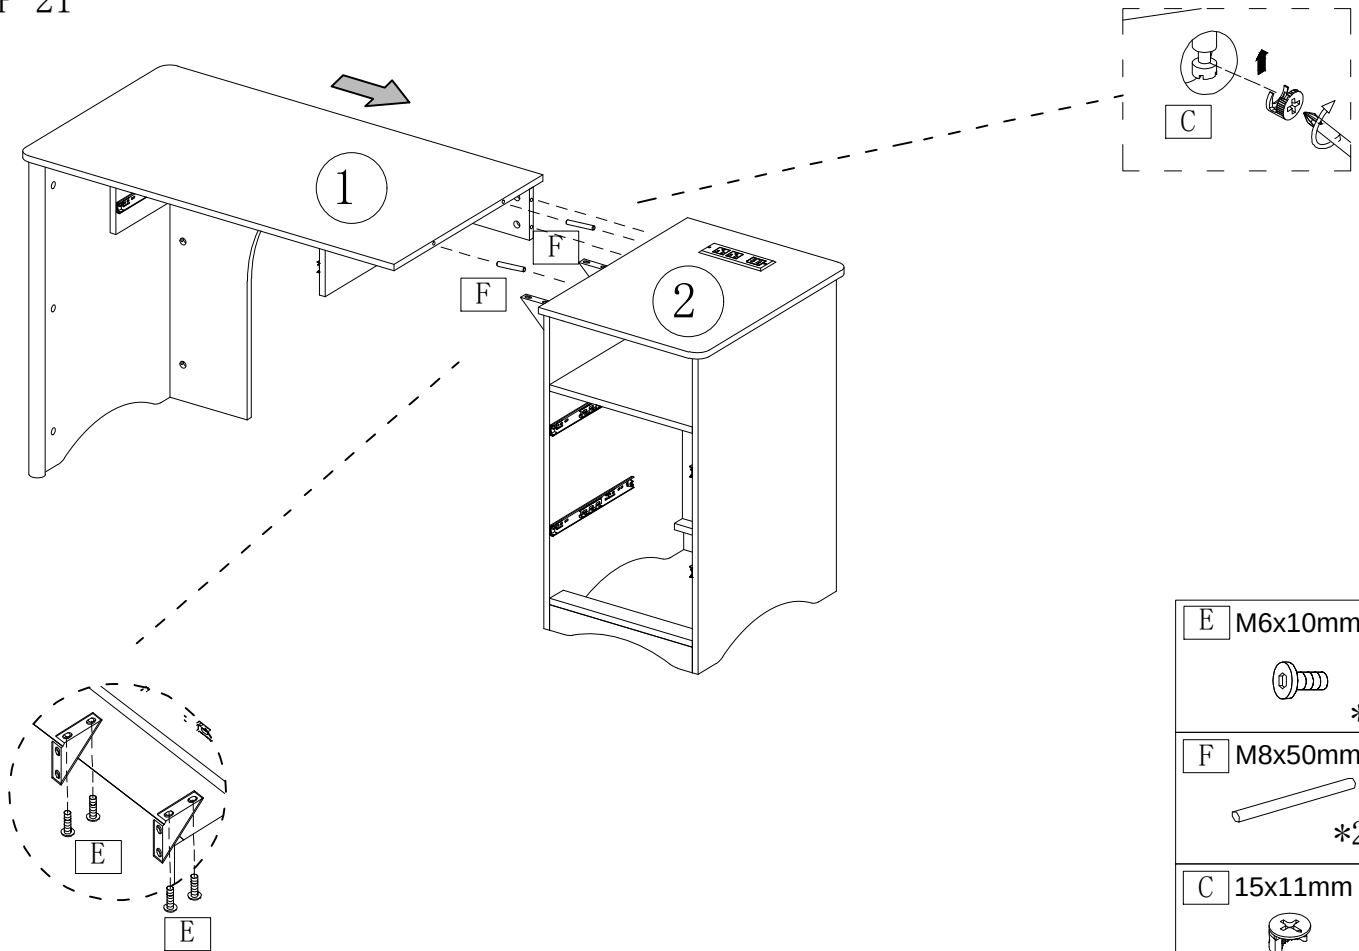


STEP 22

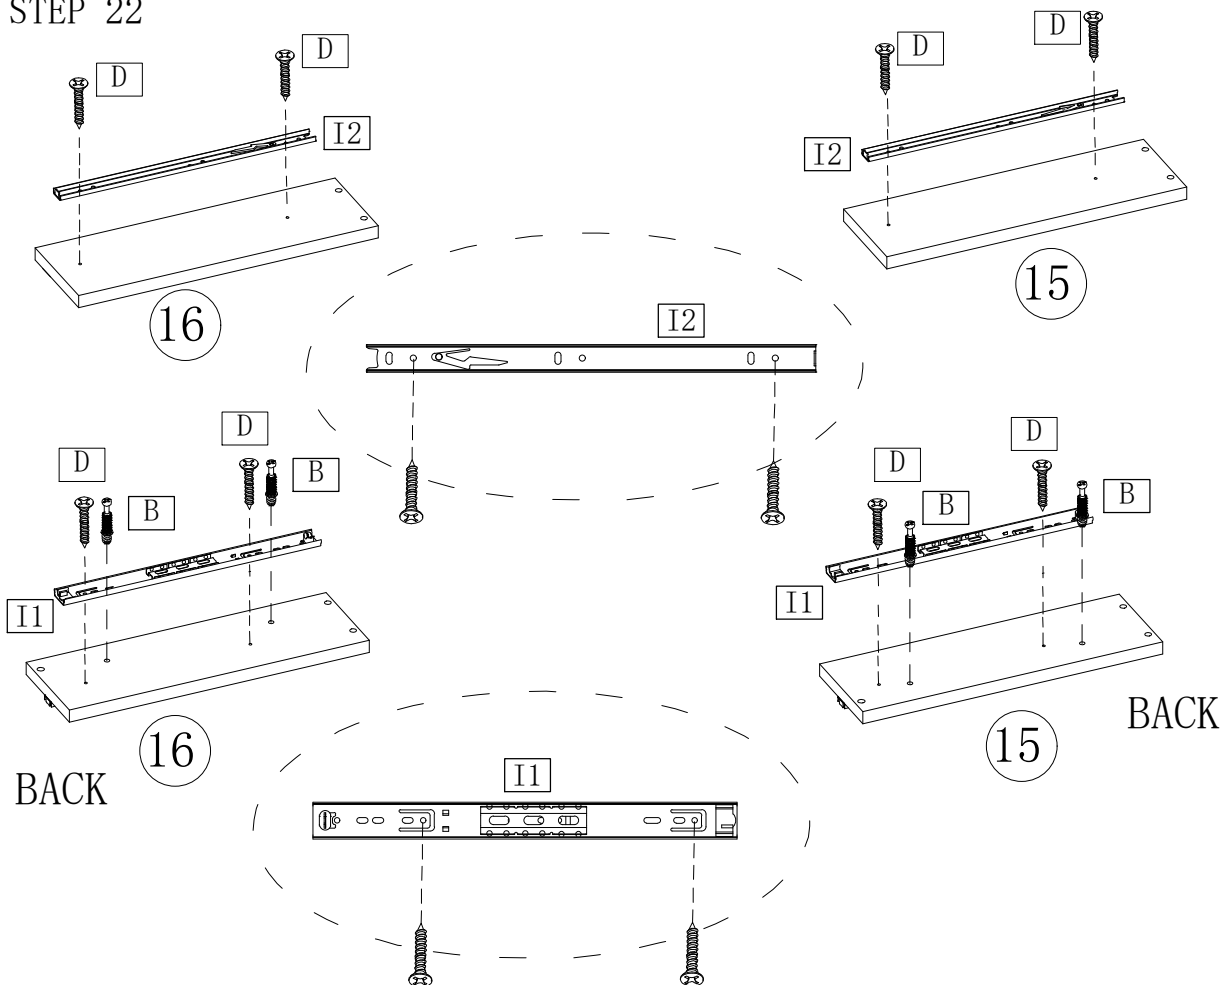


B		(K) *4
I2		*2
I1		*2
D	M3.5x12mm 	*8

ASSEMBLY INSTRUCTION

STEP 23

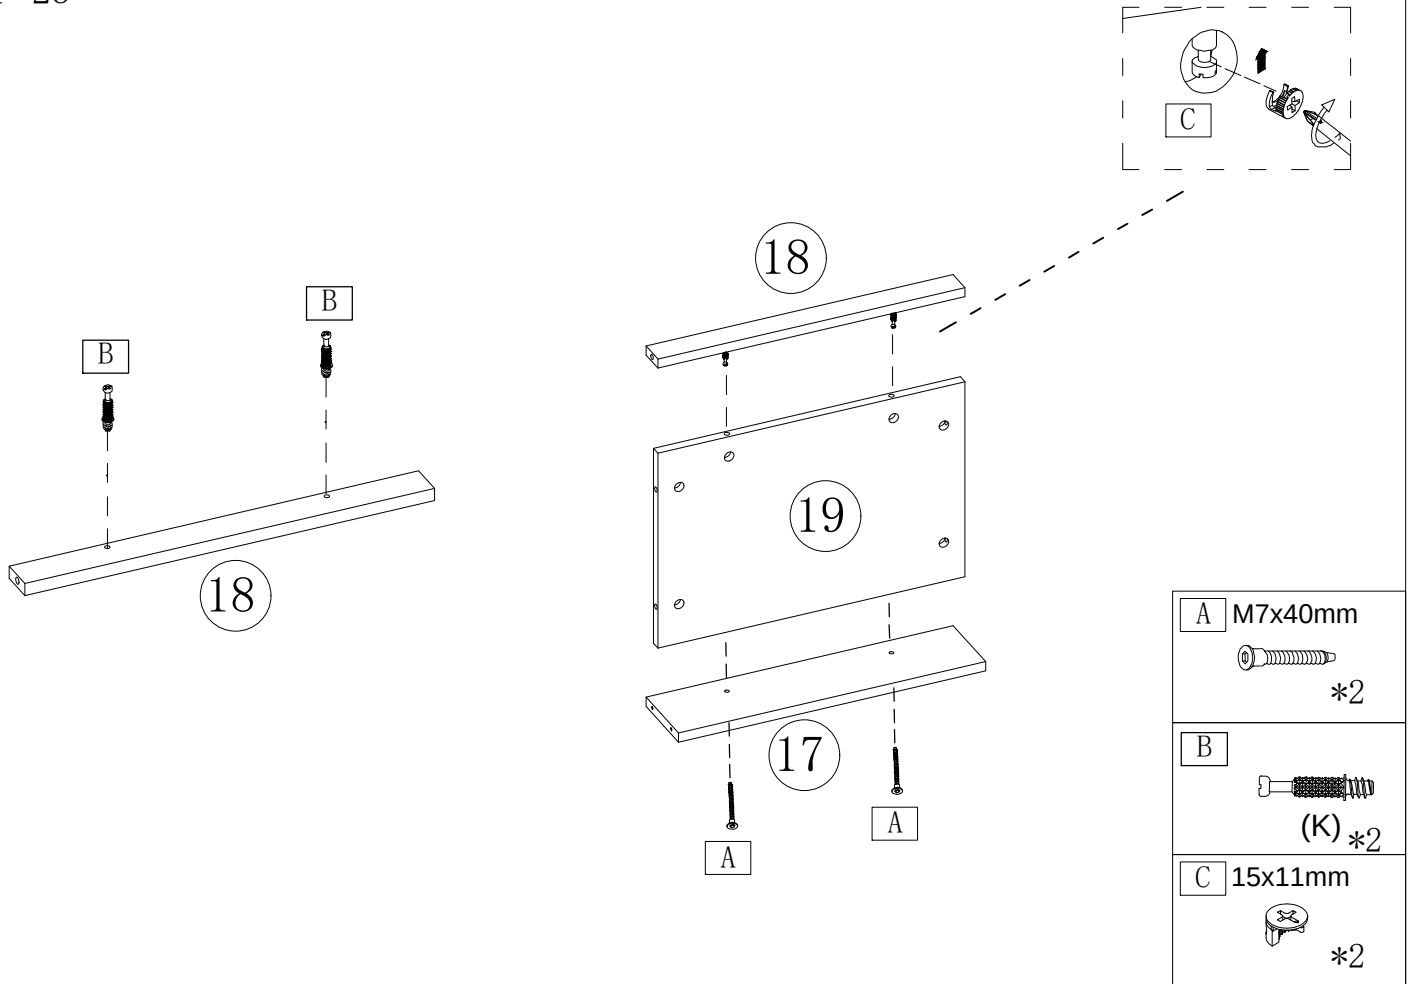


STEP 24

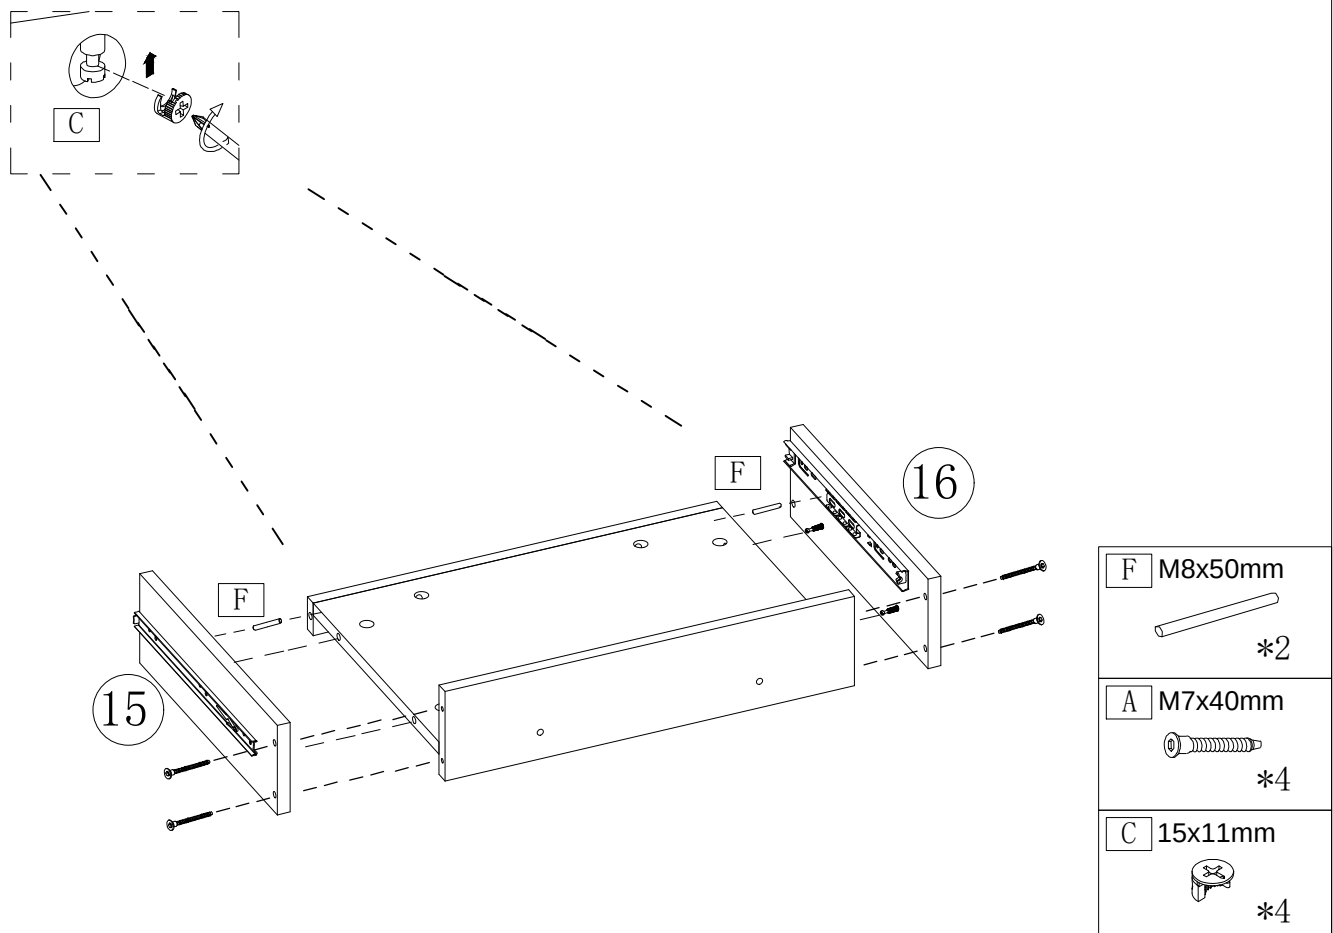


ASSEMBLY INSTRUCTION

STEP 25


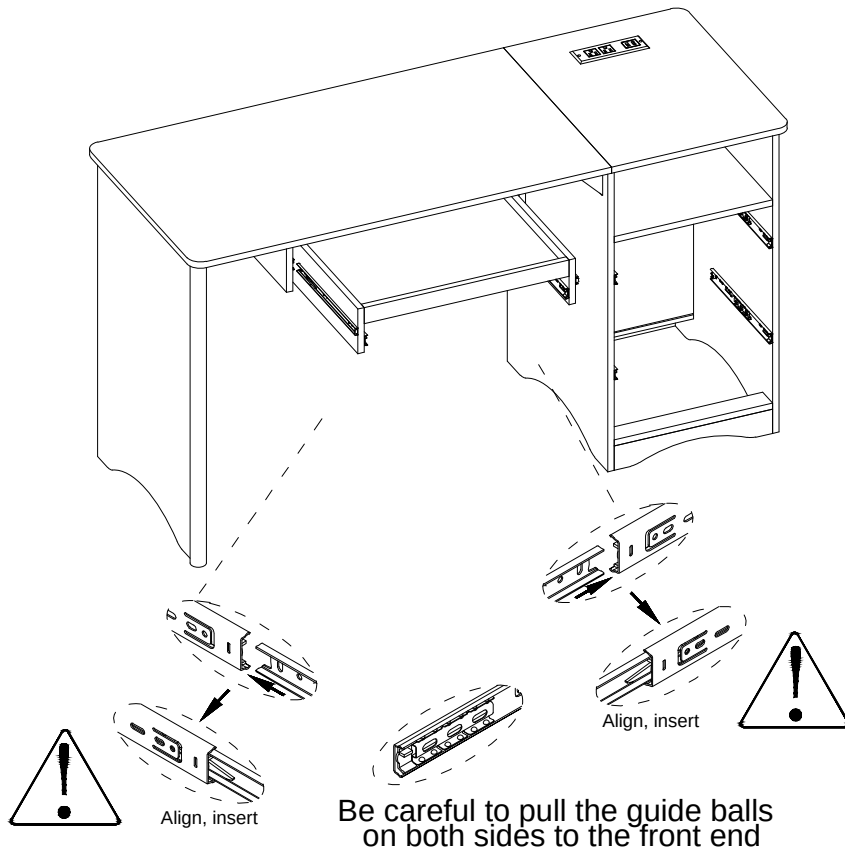


STEP 26

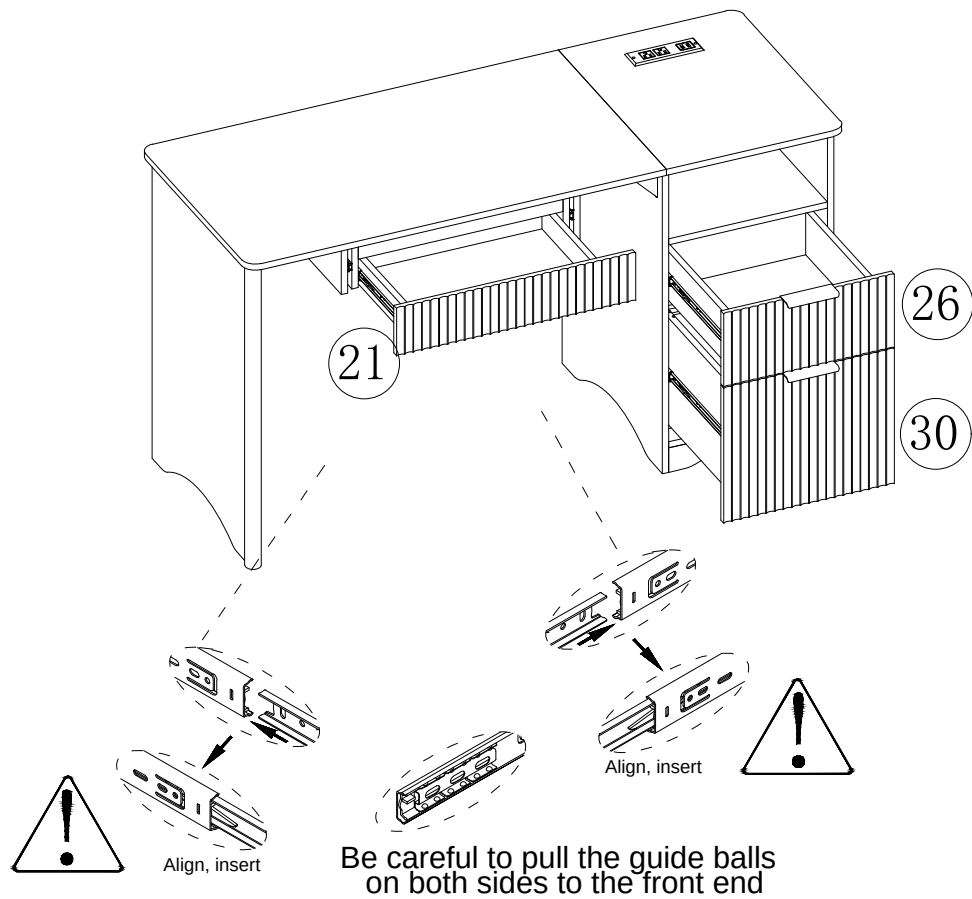


ASSEMBLY INSTRUCTION

STEP 27

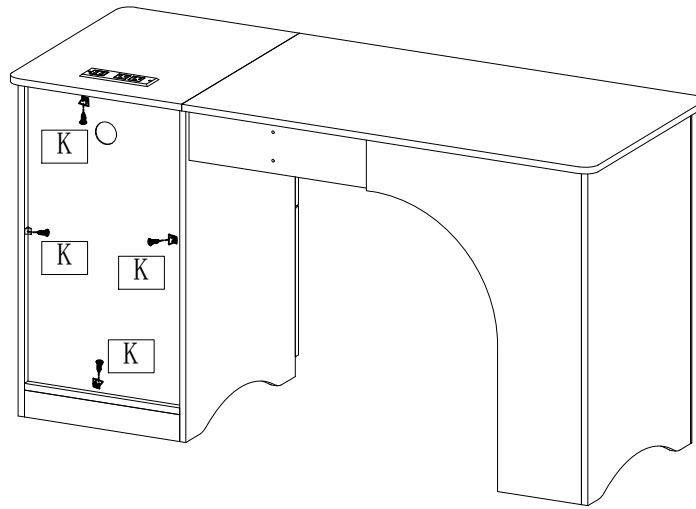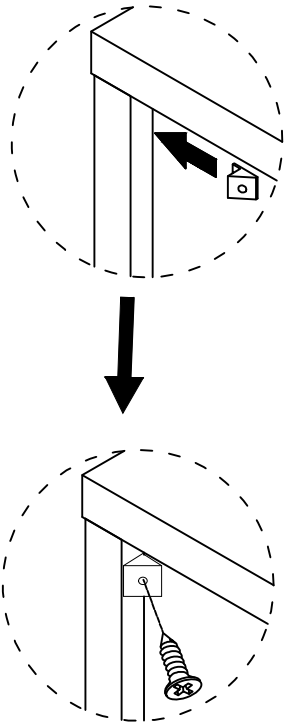

K	M3.5x14mm
	
	*4
J	
	*4

STEP 28

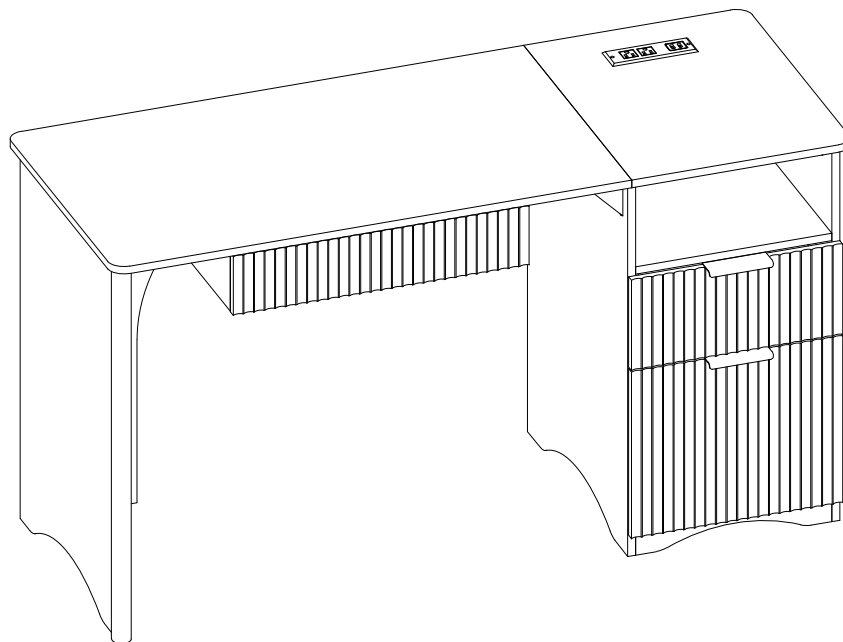

OVER