




HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

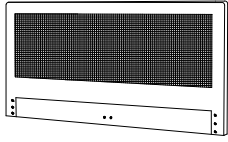

A x 1 pc

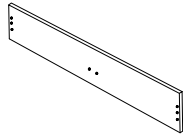


B x 1 pc

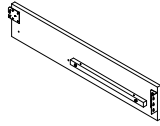


C x 2 pcs




D x 2 pcs



E x 2 pcs



F x 2 pcs



I x 1 pc

Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.

Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
H		Center leg	1	Embossed film wrap	U		Spring Washer Ø8	12	Hardware Pack
K		Legs	4	Embossed film wrap	V		Flat Washer Ø8x25mm	8	Already in Place
M		Bolt Ø6x30mm	12	Already in Place	W		Spring Washer Ø6	12	Hardware Pack
N		Bolt Ø8x30mm	8	Already in Place	X		Flat Washer Ø6x25mm	8	Already in Place
O		Bolt Ø8x60mm	8	Hardware Pack	ZA		Spanner Ø14	12	Already in Place
P		Bolt Ø8x70mm	2	Hardware Pack	ZC		Screws 4x30mm	1	Hardware Pack
Q		"L" Wrenches Ø4	1	Hardware Pack				24	Hardware Pack
R		"L" Wrenches Ø5	1	Hardware Pack					
S		Nut Ø8	2	Hardware Pack					

