

installation instructions:

WOOD FRETWORK WALL PANELS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- Standard power grab
- adhesive
- Circular or Table Saw
- Quality Paint or stain
- Paint brush or roller
- Fine sandpaper
- Small brad nails
- Brad nailer or hammer
- Chalk line & measuring tape

IMPORTANT INFO

- Clean the installation surface and back of any debris with a clean cloth.
- It is highly recommended that you paint or stain the panels before installation.
- It is recommended to use quality paint for finishing MDF panels and stain for all other wood species.
- Make sure the surface and the back of the panel are completely dry before installation.
- Before installing, acclimate the wood panels in the room where you will be installing them.
- In most applications you will have to trim some panels. Cut them with a standard table saw or power tool. Sand cut edge to remove debris.
- Depending on your installation method, use standard power grip adhesive and brad nails.

INSTALL INSTRUCTIONS:

1. Prime and paint wood fretwork before installing or use quality stain for wood species other than MDF. Touch up paint or stain as needed after installation.
2. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
3. We recommend laying out the desired layout before installation. Mark the installation points using a chalk line or straight edge and level.
 - A. For single panels, start at either the top or bottom corner at the edge of the wall and work towards the opposite corner (Diagram A).
 - B. For 2-piece panel sets start at the center and work out (Diagram B).
4. Apply a small amount of adhesive to the back of the panel and secure with small brad nails. (Follow adhesive manufacturer's instructions for proper application.)
 - A. Install panels side by side. (Diagram C).
 - B. For a different look leave a gap between each panel. (Diagram D).

EXAMPLE DIAGRAM:

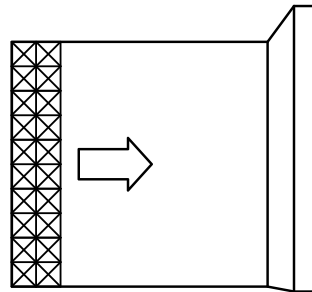


DIAGRAM A

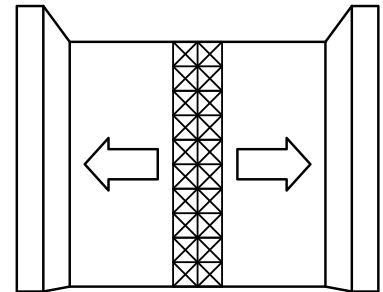


DIAGRAM B

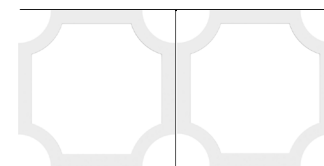


DIAGRAM C


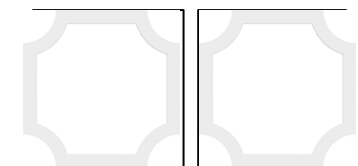


DIAGRAM D

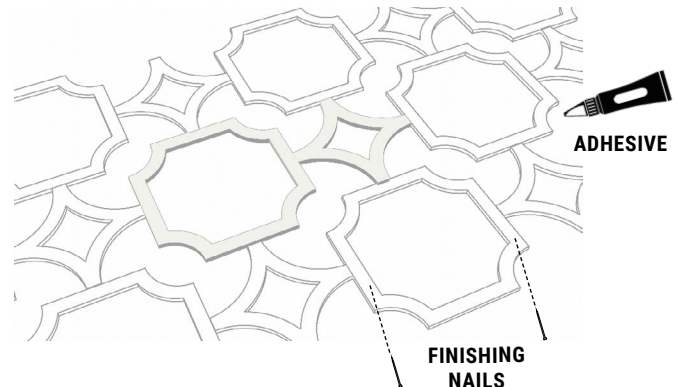

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

We Can Help. Call (866) 607-0453

www.ekenamillwork.com