


# ELECTRIC FLIP TOP END TABLE

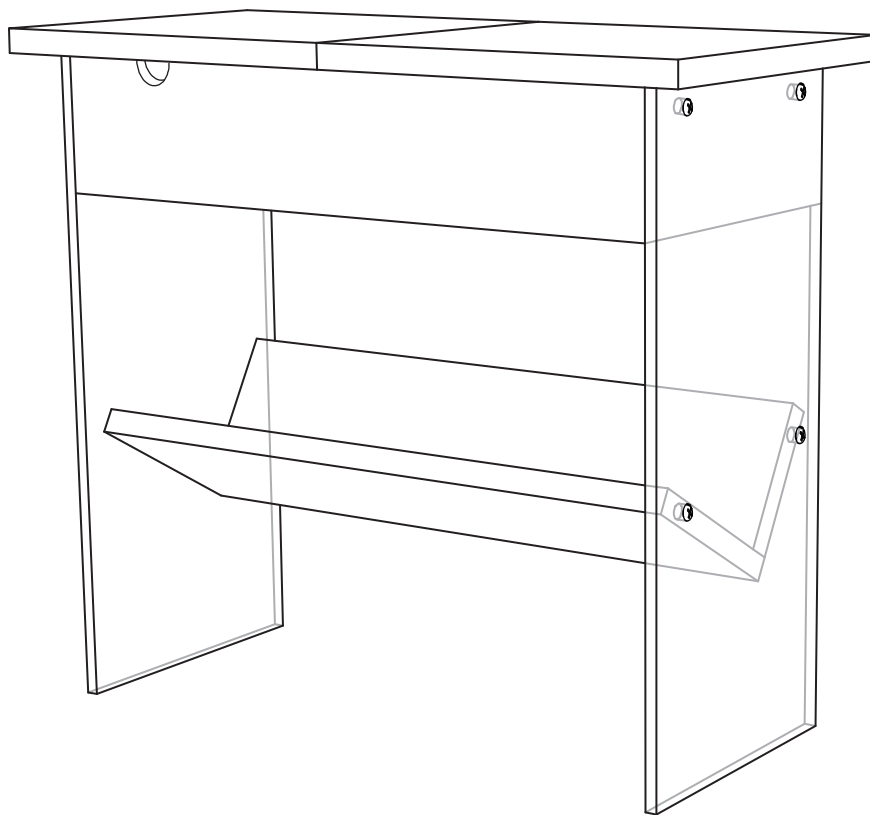









## ASSEMBLY INSTRUCTIONS

---





We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

---







## Hardware List

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 
Cambolt ( 6pcs )	Camlock ( 6pcs )	Large Screw and washer ( 4pcs )	Locking nut ( 4pcs )
<b>E</b> 	<b>F</b> 	<b>G</b> 	<b>H</b> 
Sticker( 6pcs )	Socket strip( 1pc )	Short Screw and washer ( 4pcs )	Screw ( 2pcs )


## Assembling the unit with camlocks and wood dowels.

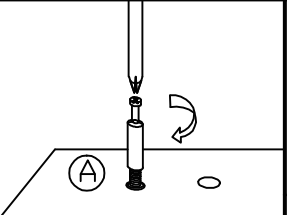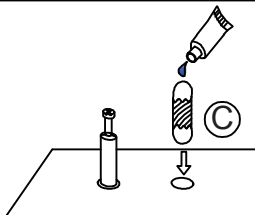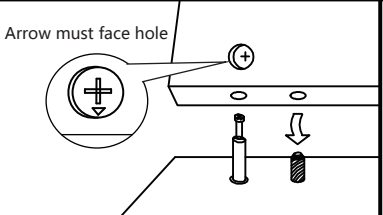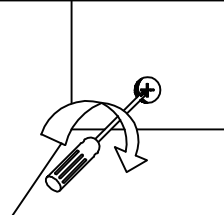			
Gently screw cam dowel into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole.	Lightly glue wood dowel and connect to second panel by inserting dowels into holes.	Screw the camlock firmly into locked position.

## Panel List
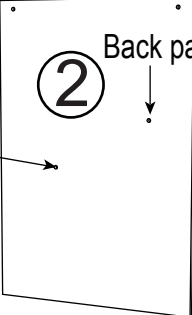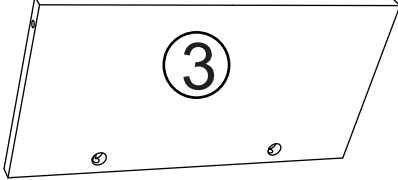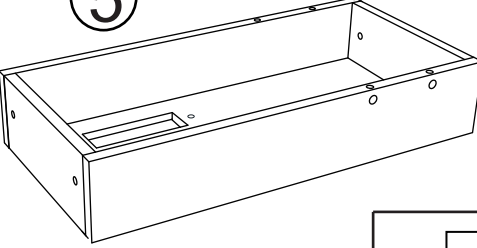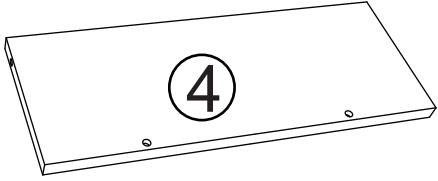
<b>1</b> 	<b>2</b> 
Top panel (1PC)	Side panel (2PCS)
<b>3</b> 	<b>5</b> 
Back panel (1PC)	Top component (1PC)
<b>4</b> 	
Front panel (1PC)	Polishing cloth (1pc)



## Hardware List

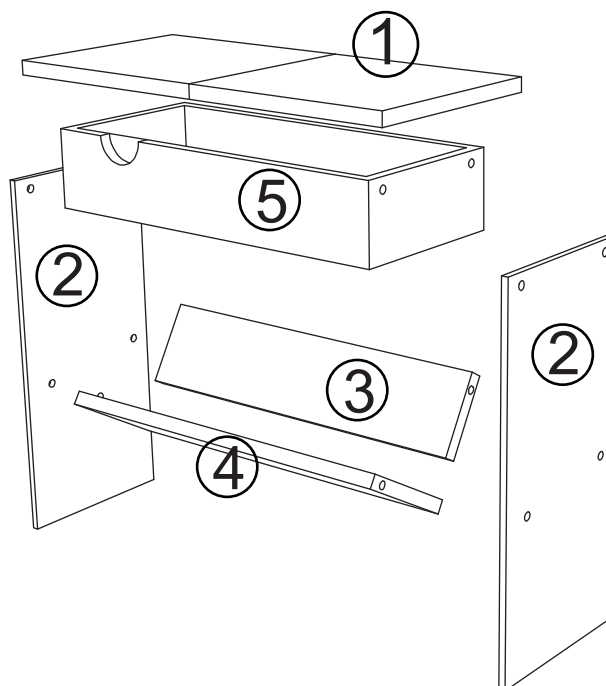

### Step 1



1. Attach socket strip (F) to top component (5) using screws (H).

\*Do not plug into outlet at this point.

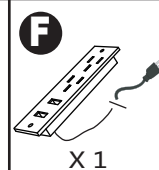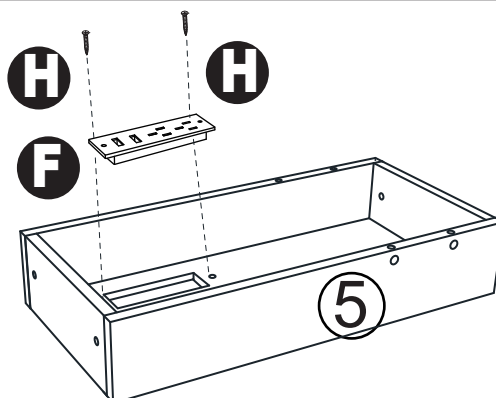


### Step 2

1. Connect the side panels (2) to top component using large screws and washers (C).

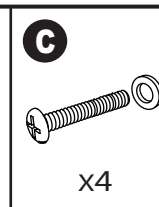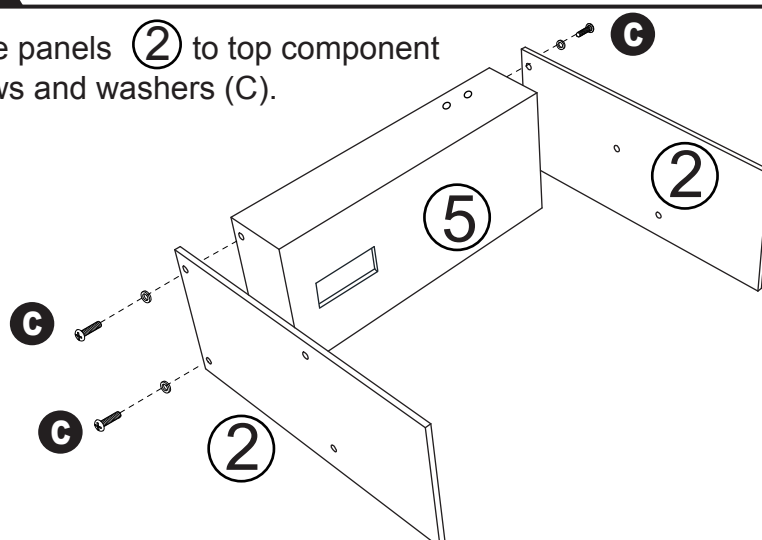





## Step 3

1. Screw cambolts (A) into front panel ④ as shown.
2. Attach back panel ③ to front panel ④ as shown using camlocks (B), gently tighten camlocks.

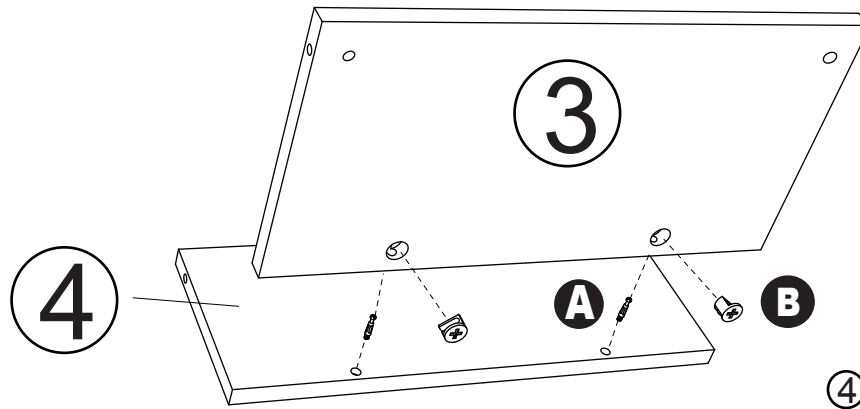

## Step 4

1. Insert locking nuts (D) to front panel ④ and back panel ③.
2. Connect front panel ④ and back panel ③ to unit as shown using short screws and washers (G).

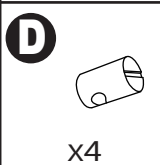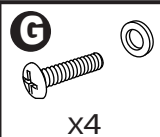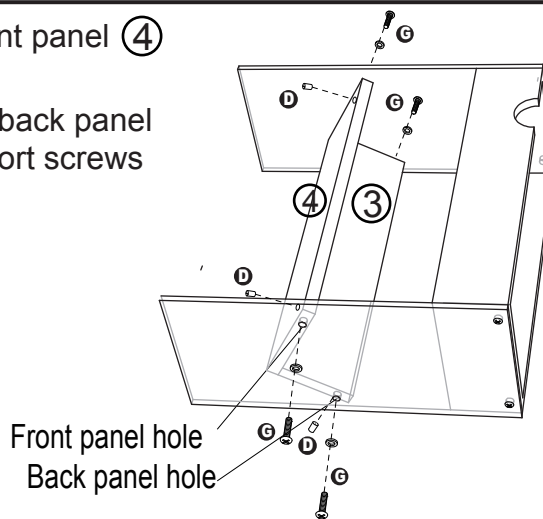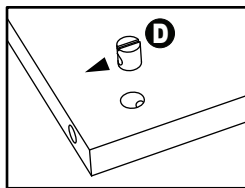

## Step 5

1. Screw Cambolts (A) into top panel ① as shown.
2. Place top panel ① onto unit and tighten with camlock (B).
3. Place stickers (E) over camlock holes.
4. Plug in unit.
5. Finish and enjoy.

