



INSTRUCTION MANUAL

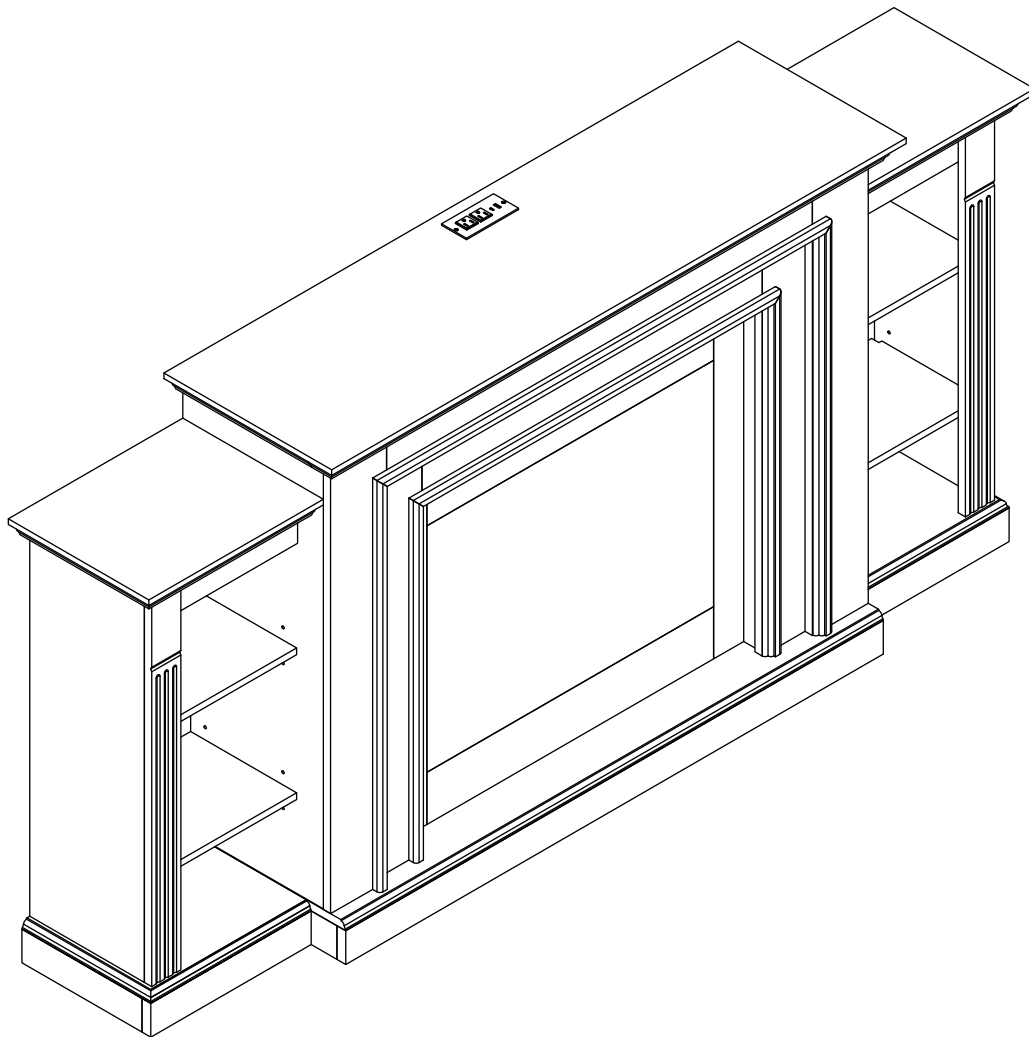


We stand behind our brand. If you're not satisfied with your purchase, reach out to get a replacement or refund. Contact us to save time and money

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

**WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE**

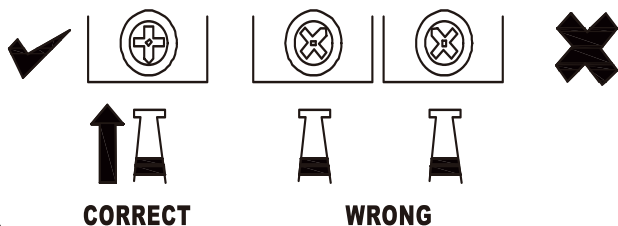


CAM-LOCK

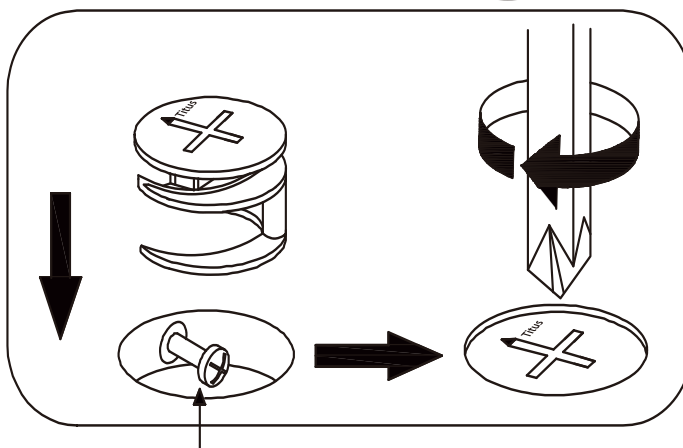




Quickfit head needs to be in centre

QUICKFIT


Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

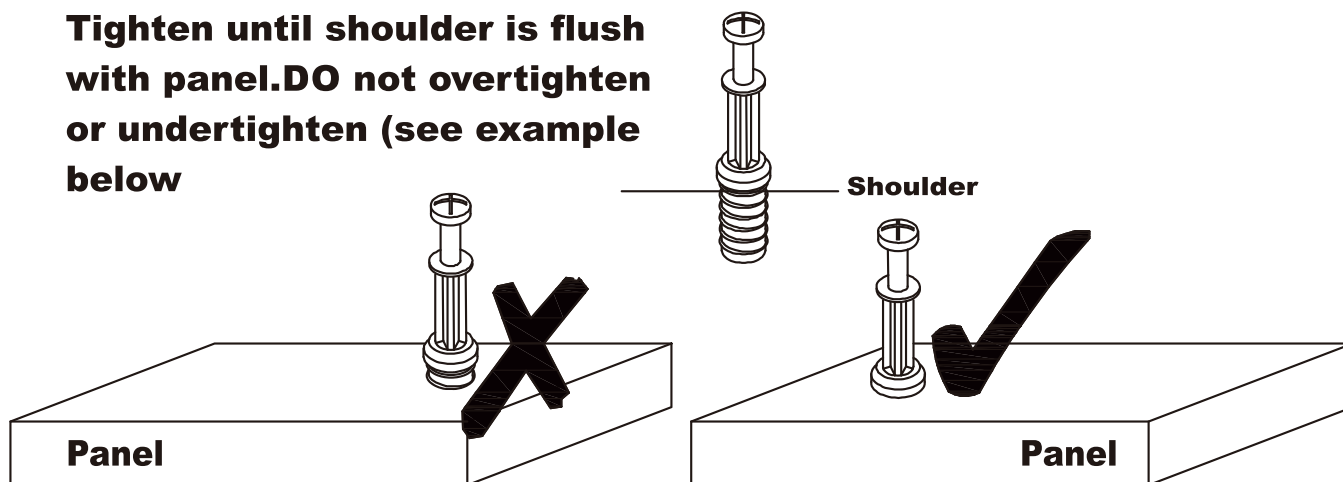

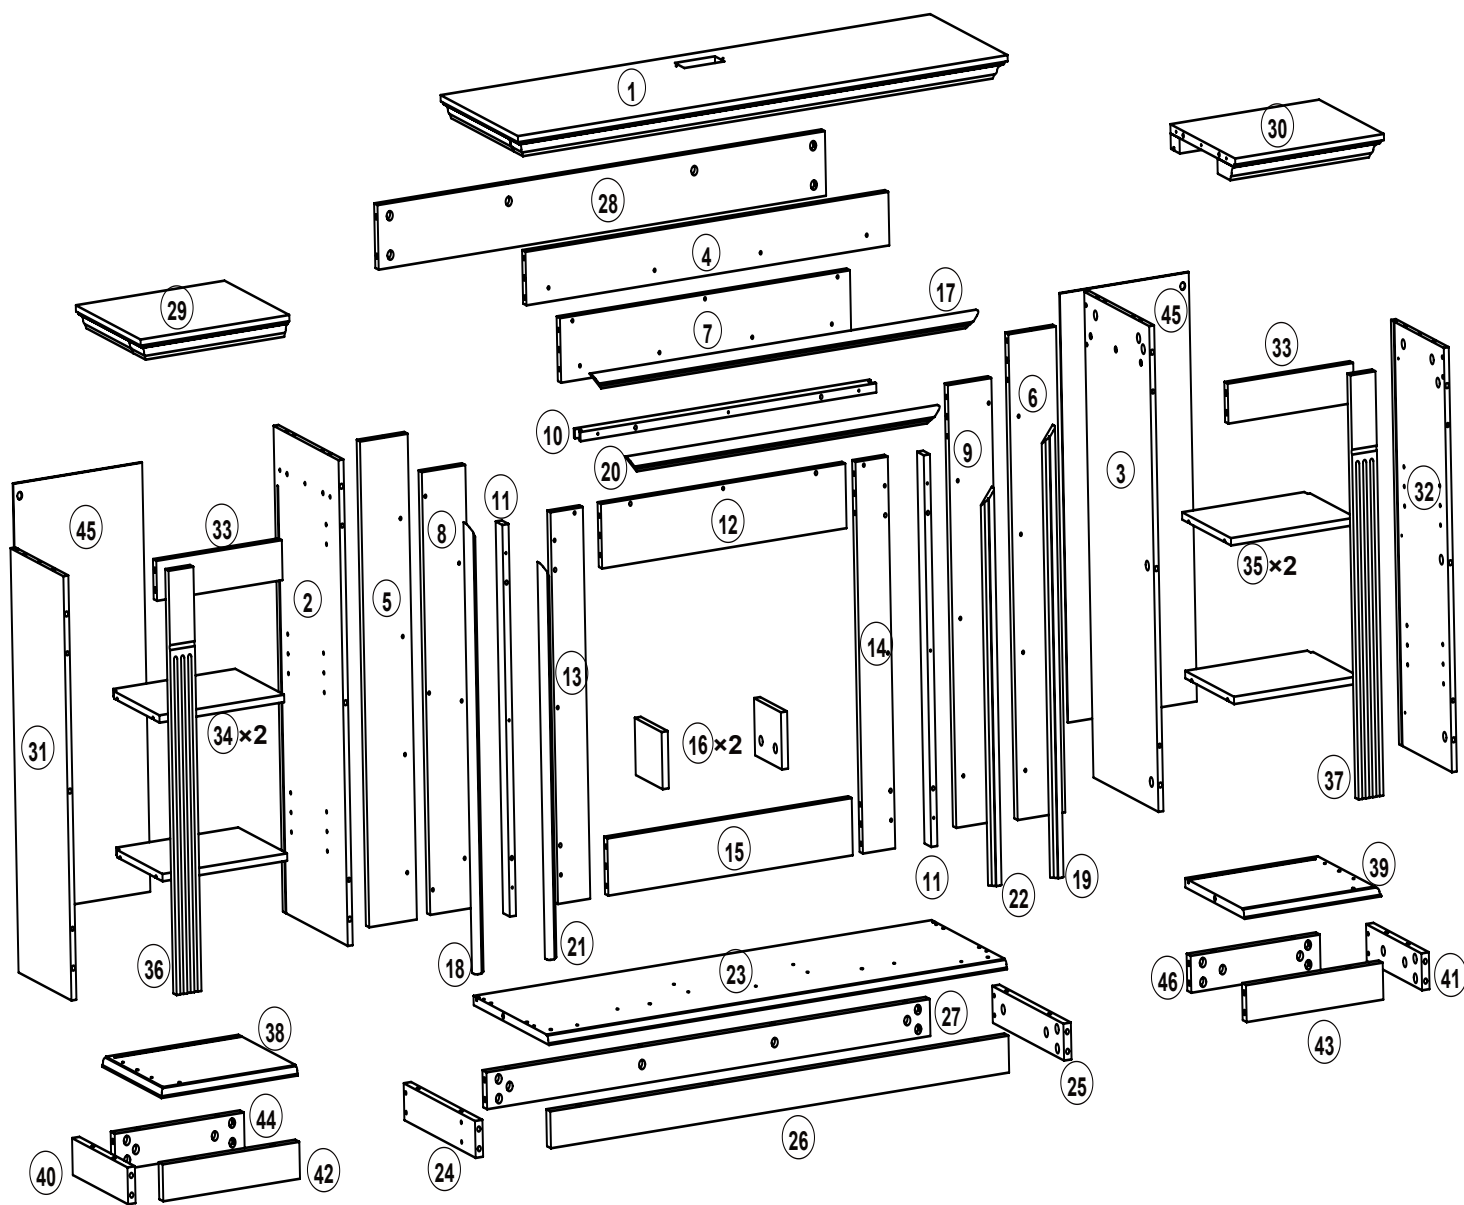


A x90  6x35mm +3(SPARE)	B x110  +3(SPARE)	C x50  6x30mm +3(SPARE)	D x19  4x40mm +2(SPARE)	E x9  4x55mm	F x31  4x25mm +3(SPARE)
G x12 	H x12  3x14mm	I x1 	J x2  3.5x12mm	K x2  4x12mm	L x2 
M x4 	N x2  4x35mm	O x2 	P x16  +2(SPARE)	Q x1 	R x9 
S x9  3x10mm	T x10 	U x6  6x50mm	V x10 	W x 6  4x12mm	

①

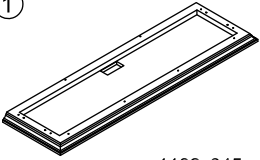


1182x345cm
x1PCS

②

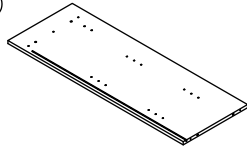


790x290cm
x1PCS

③

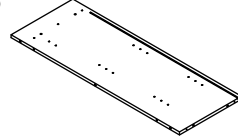


790x290cm
x1PCS

④

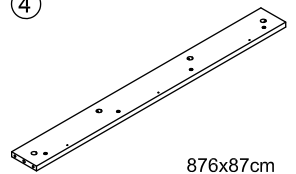


876x87cm
x1PCS

⑤

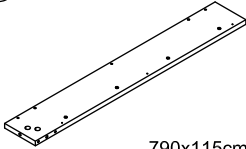


790x115cm
x1PCS

⑥

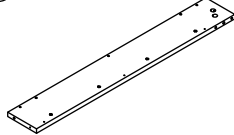


790x115cm
x1PCS

⑦

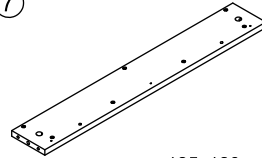


125x120cm
x1PCS

⑧

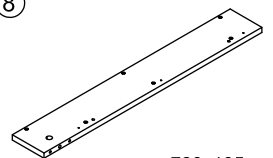


720x105cm
x1PCS

⑨

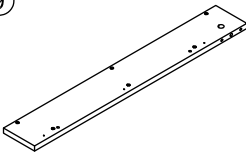


720x105cm
x1PCS

⑩

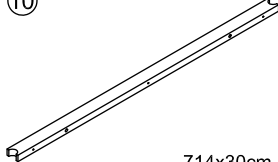


714x30cm
x1PCS

⑪

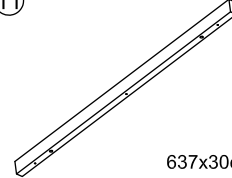


637x30cm
x2PCS

⑫

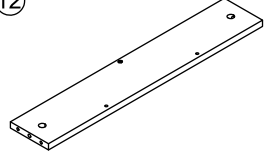


590x105cm
x1PCS

⑬

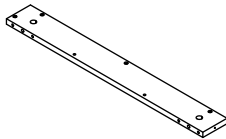


637x78cm
x1PCS

⑭

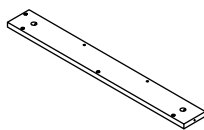

637x78cm
x1PCS

⑮

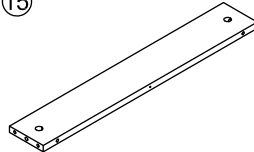


590x93cm
x1PCS

⑯




120x93cm
x2PCS

⑰

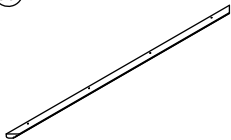


933x27cm
x1PCS

⑱

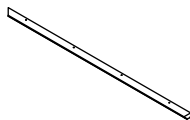


733x27cm
x1PCS

⑲

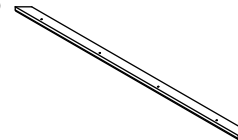


733x27cm
x1PCS

⑳

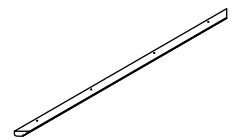


754x27cm
x1PCS

㉑




645x27cm
x1PCS

㉒

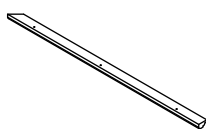


645x27cm
x1PCS

㉓

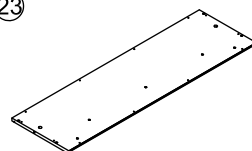


1105x336cm
x1PCS

㉔

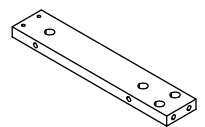


318x60cm
x1PCS

㉕




318x60cm
x1PCS

㉖

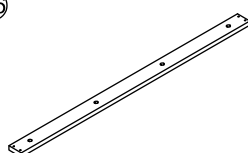


1105x60cm
x1PCS

㉗

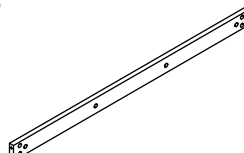


1069x60cm
x1PCS

㉘

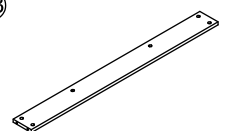


1080x105cm
x1PCS

29

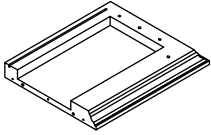


359x288cm
x1PCS

30

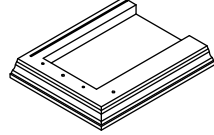


359x288cm
x1PCS

31

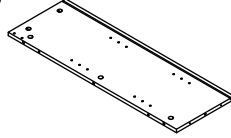


690x236cm
x1PCS

32

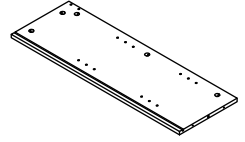


690x236cm
x1PCS

33




303x65cm
x2PCS

34

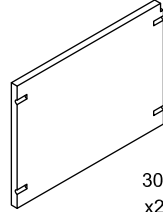


301x218cm
x2PCS

35

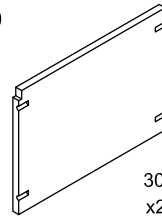


301x218cm
x2PCS

36

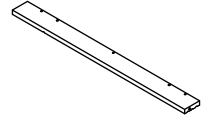


690x60cm
x1PCS

37

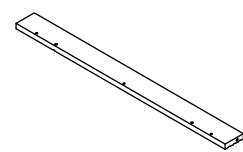


690x60cm
x1PCS

38

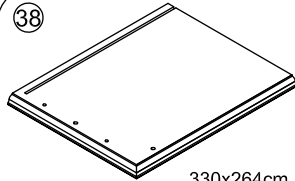


330x264cm
x1PCS

39

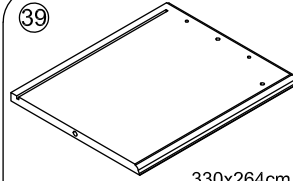


330x264cm
x1PCS

40




246x60cm
x1PCS

41




246x60cm
x1PCS

42

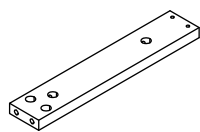


330x60cm
x1PCS

43

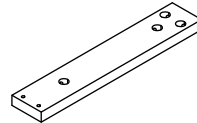


330x60cm
x1PCS

44

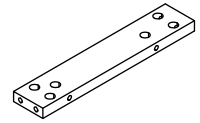


312x60cm
x1PCS

45




698x308cm
x2PCS

46




312x60cm
x1PCS

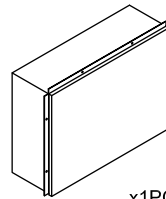


x1PCS



Step 1

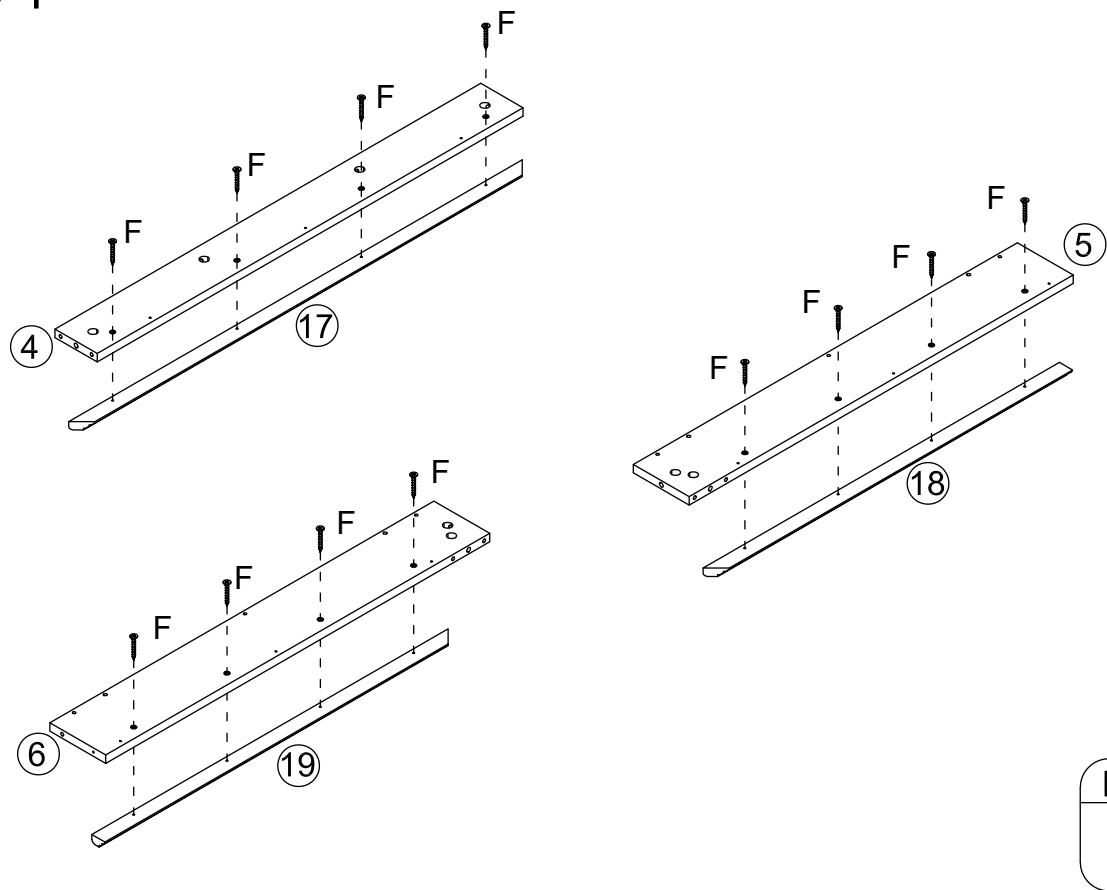



Step 2

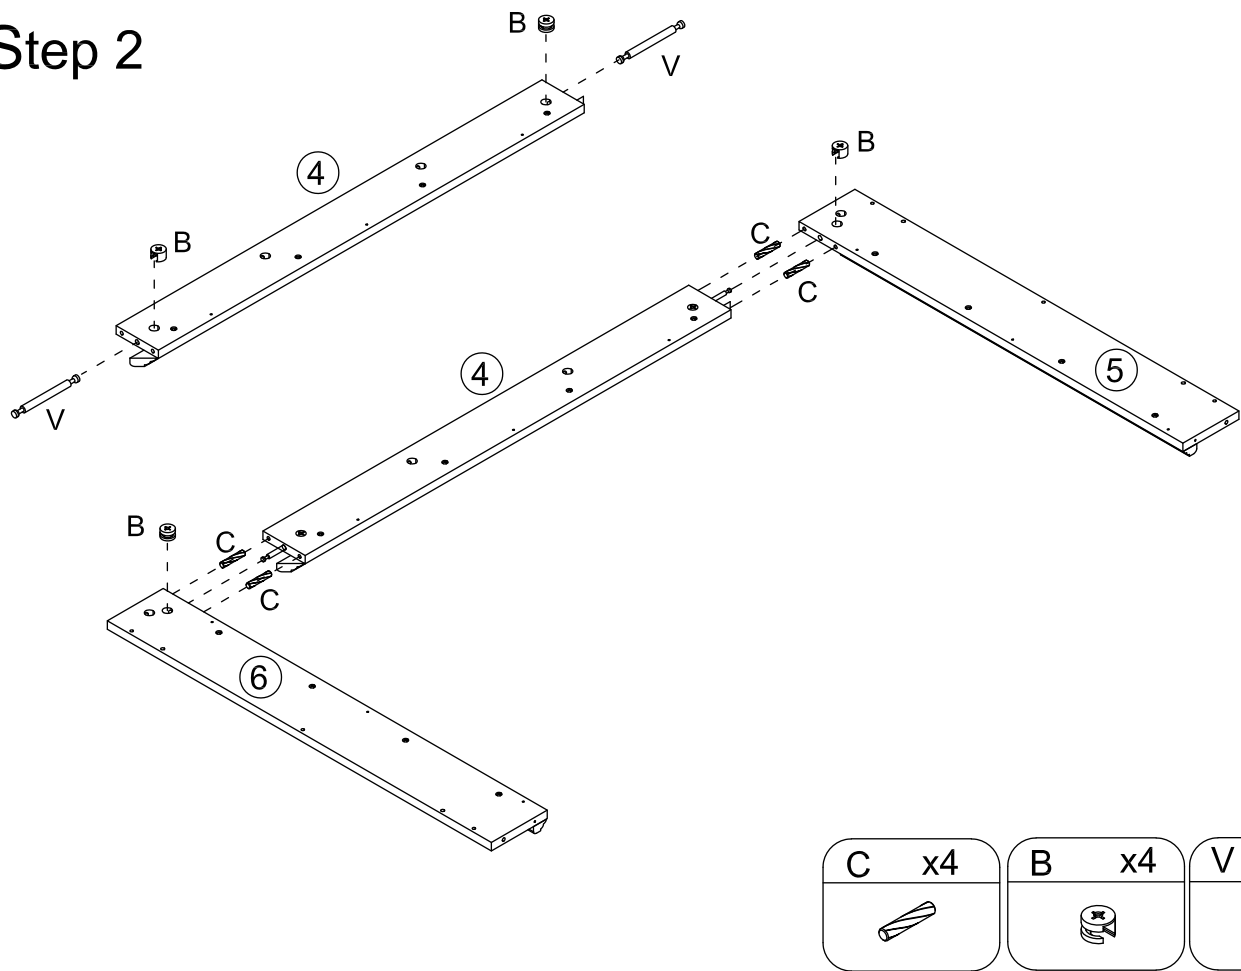


Step 3

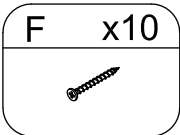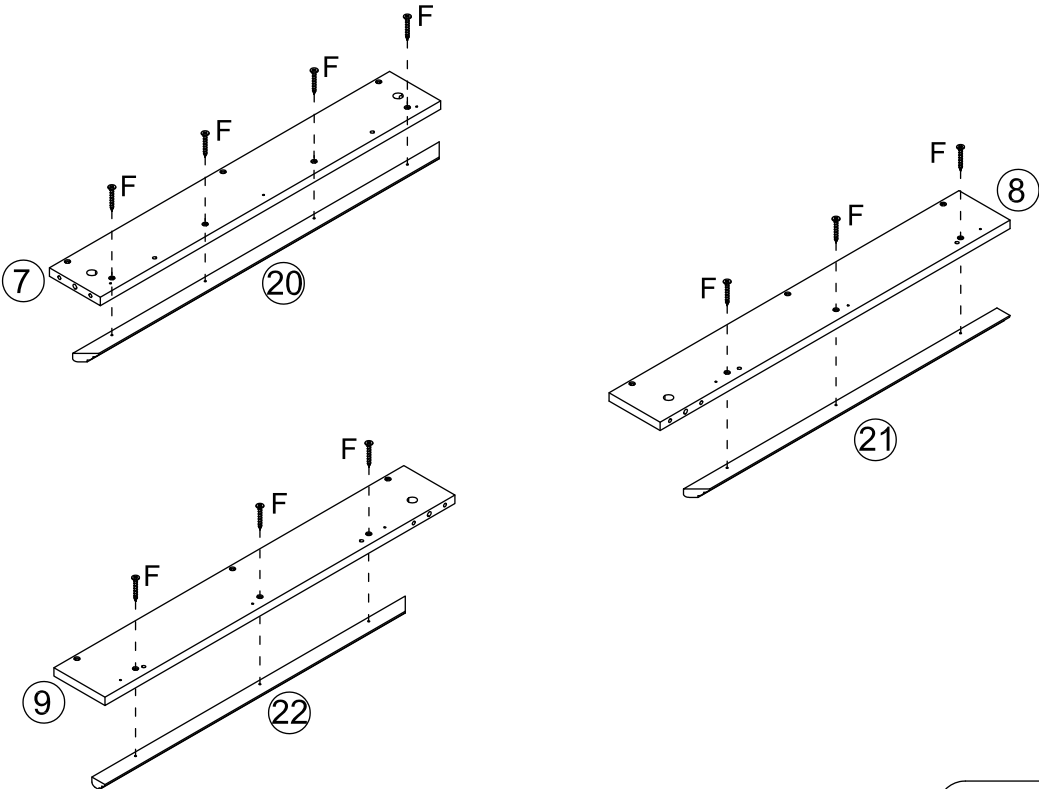

Step 4

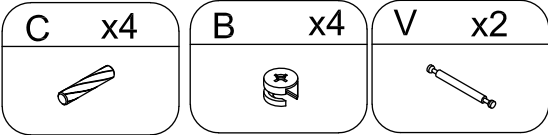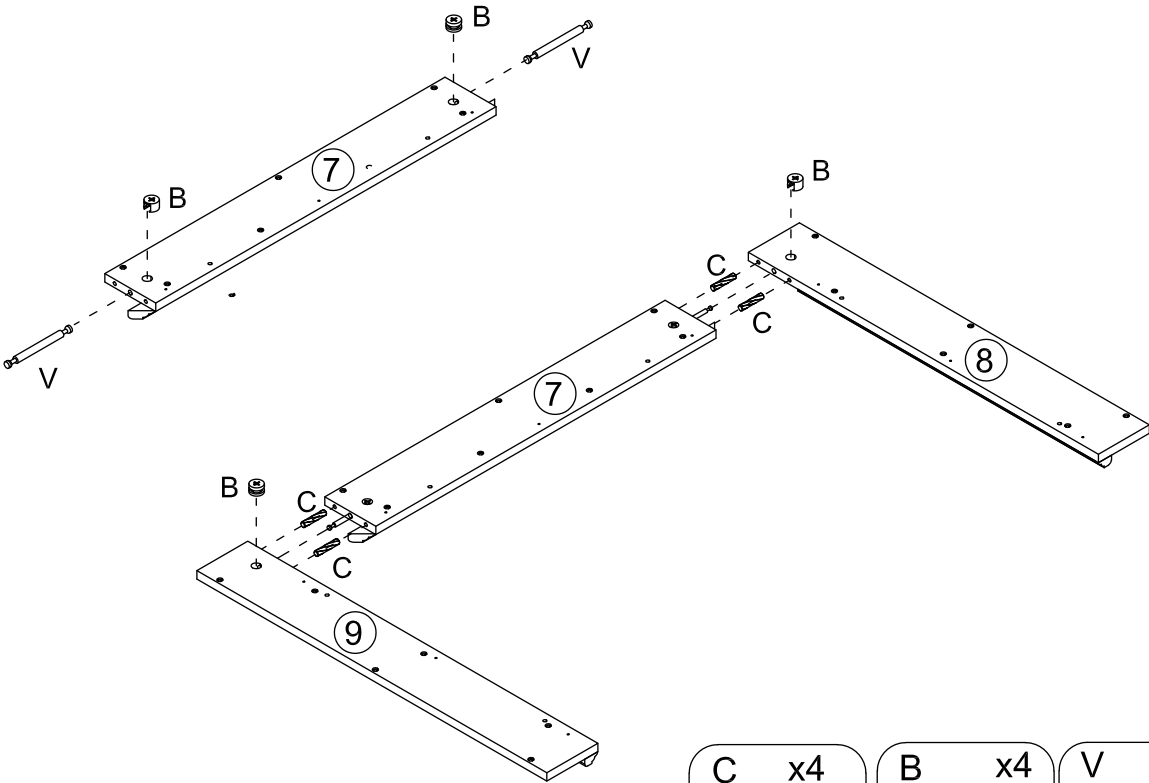


Step 5

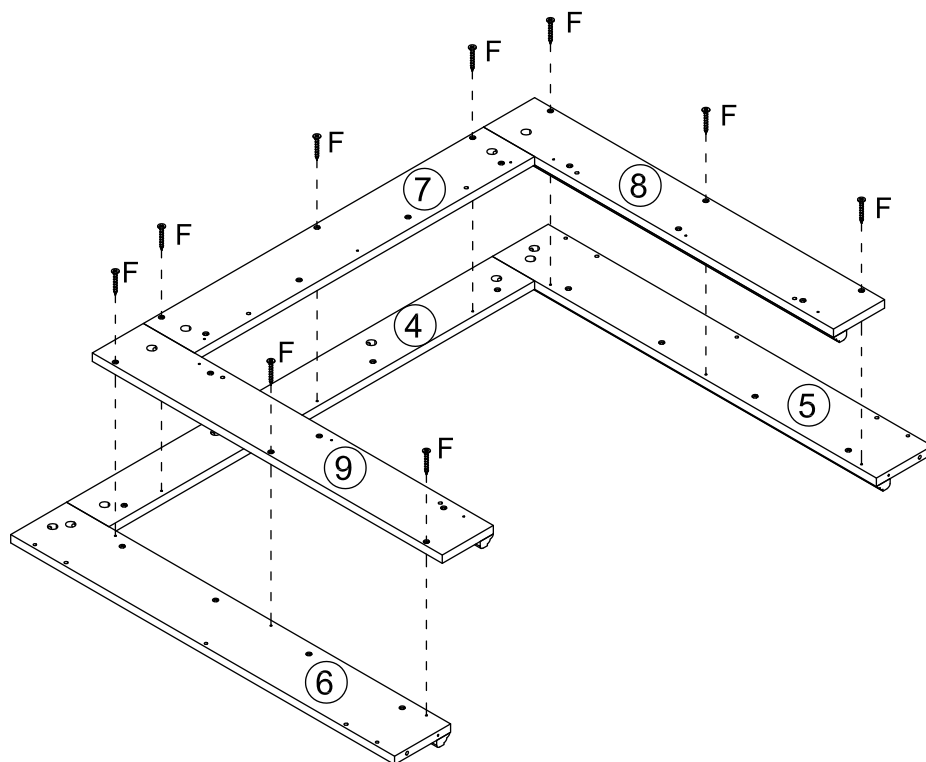

F x9




Step 6

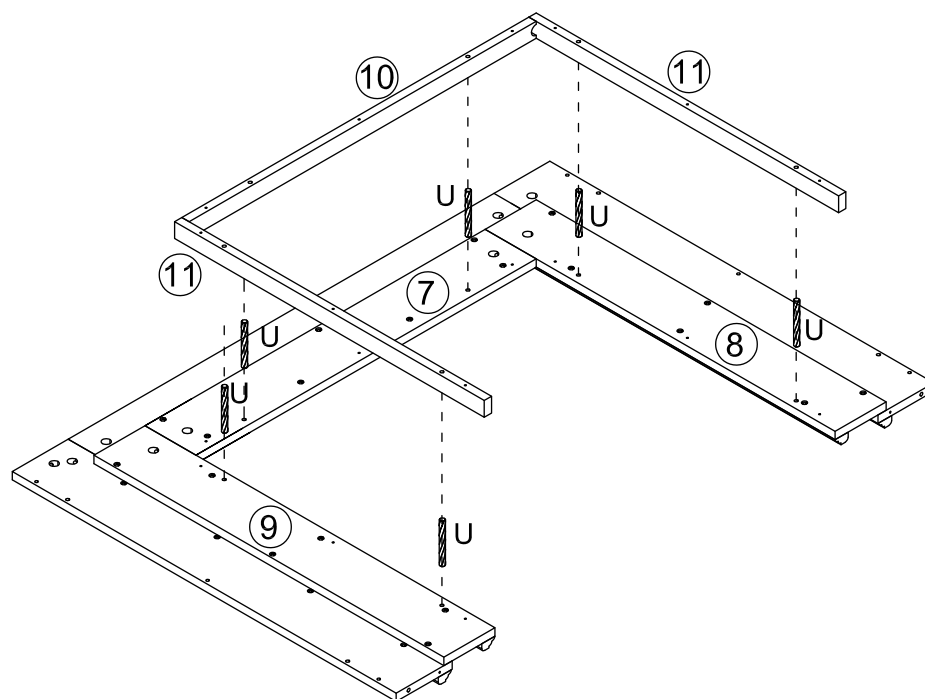


U x6




Step 7

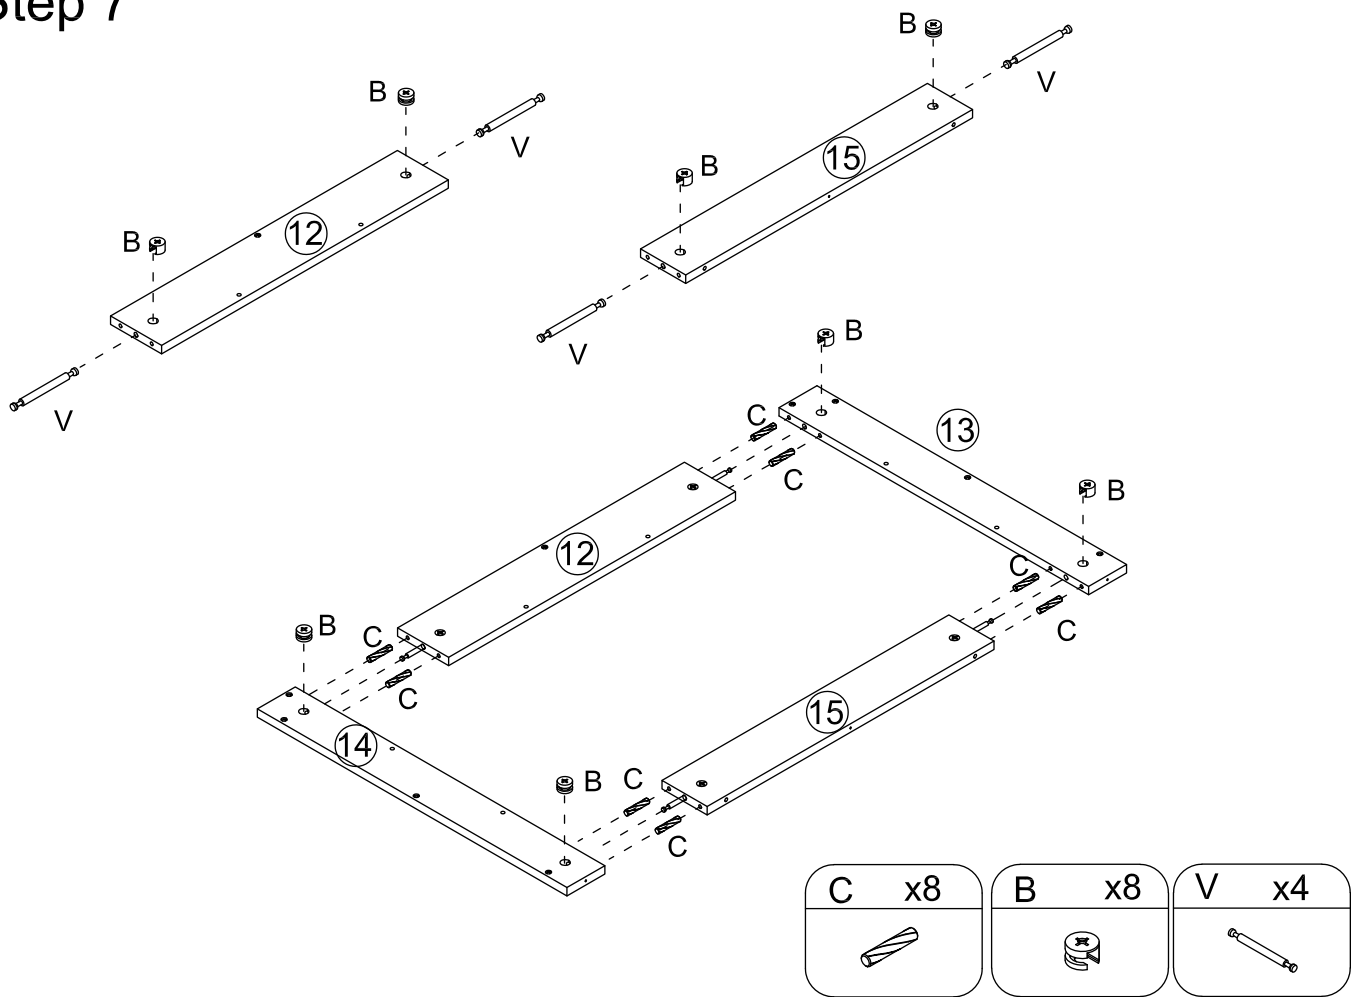

Step 8

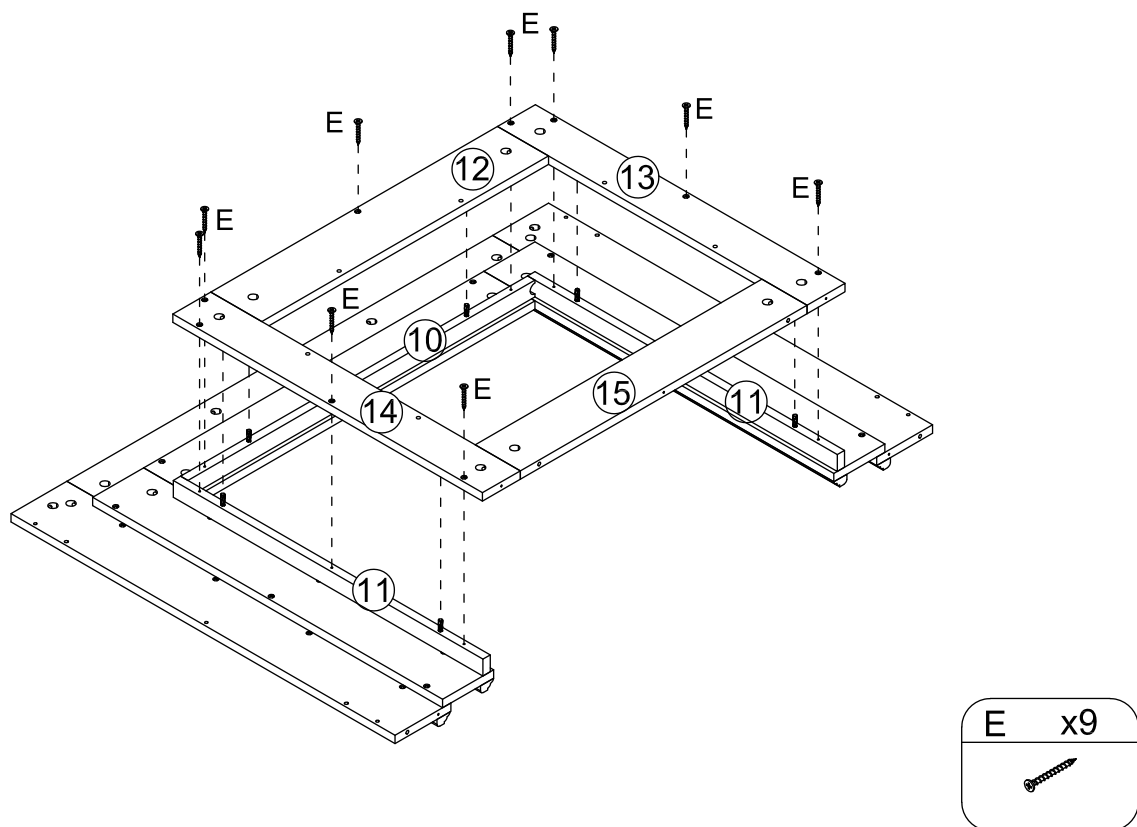


Step 9

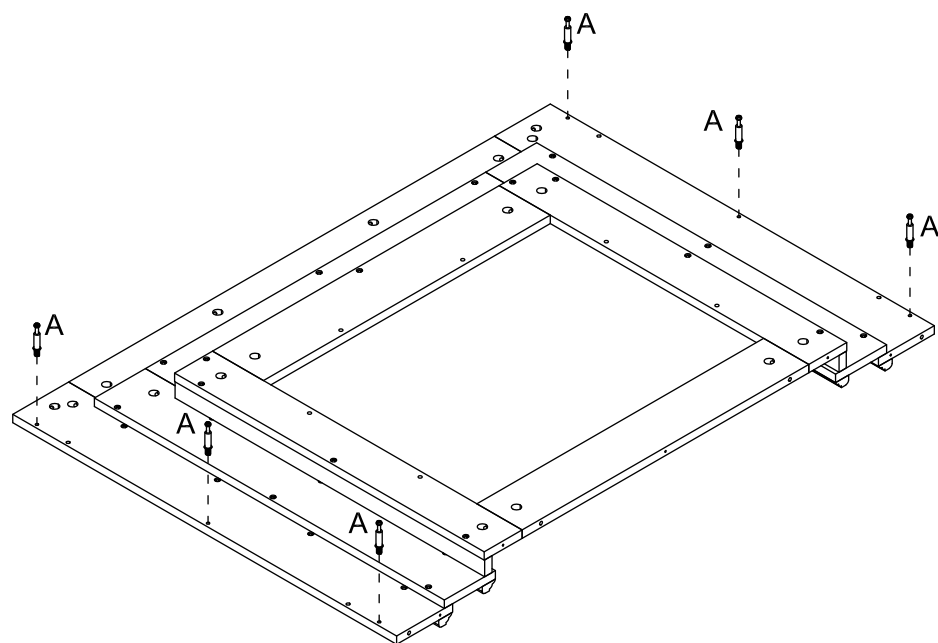


A	x6

Step 10

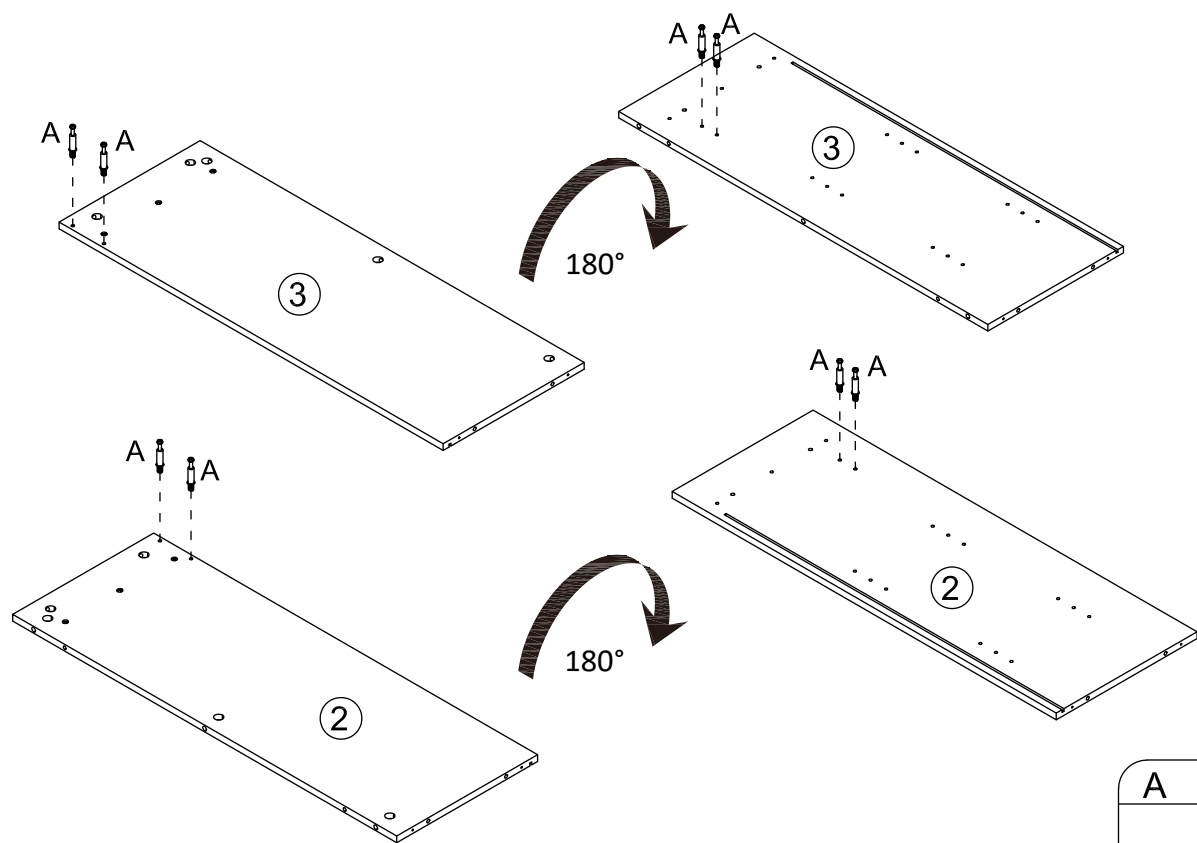


A	x8

Step 11

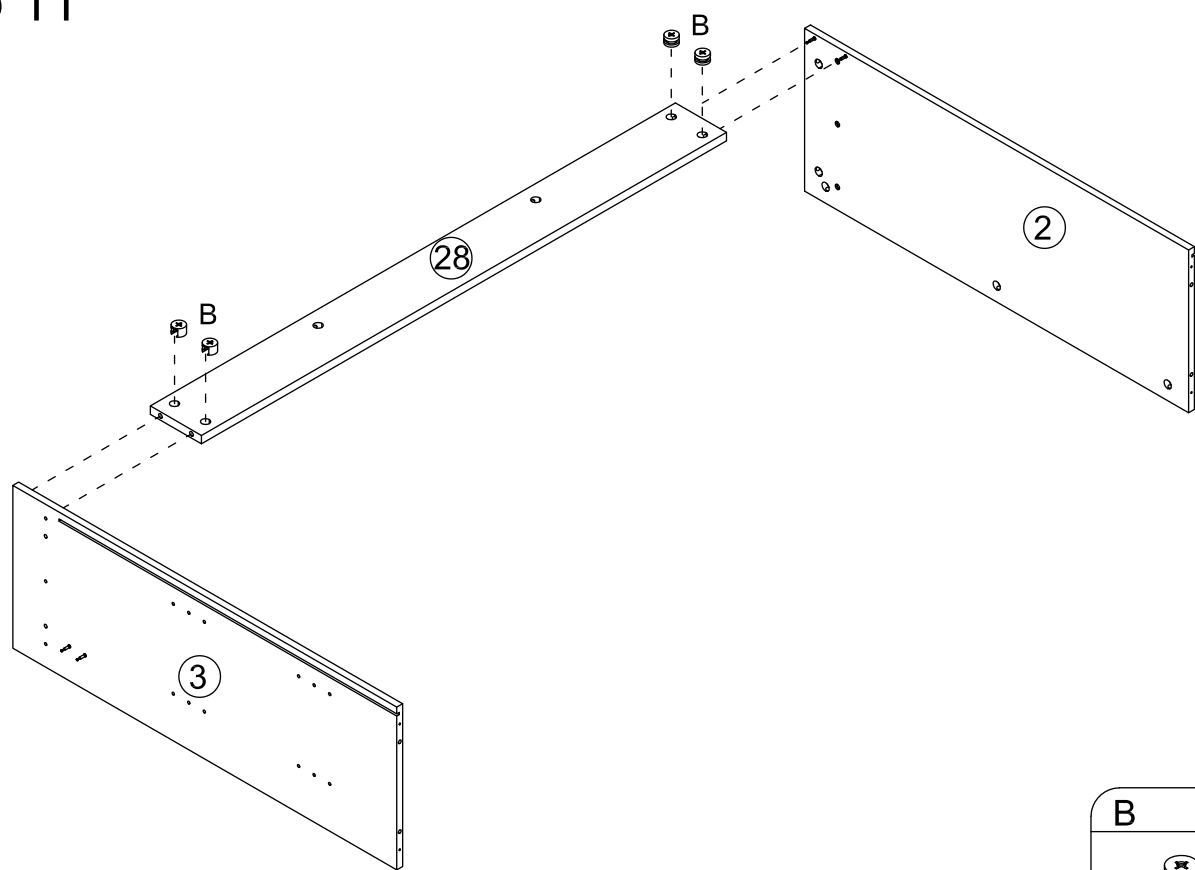


B	x4

Step 12

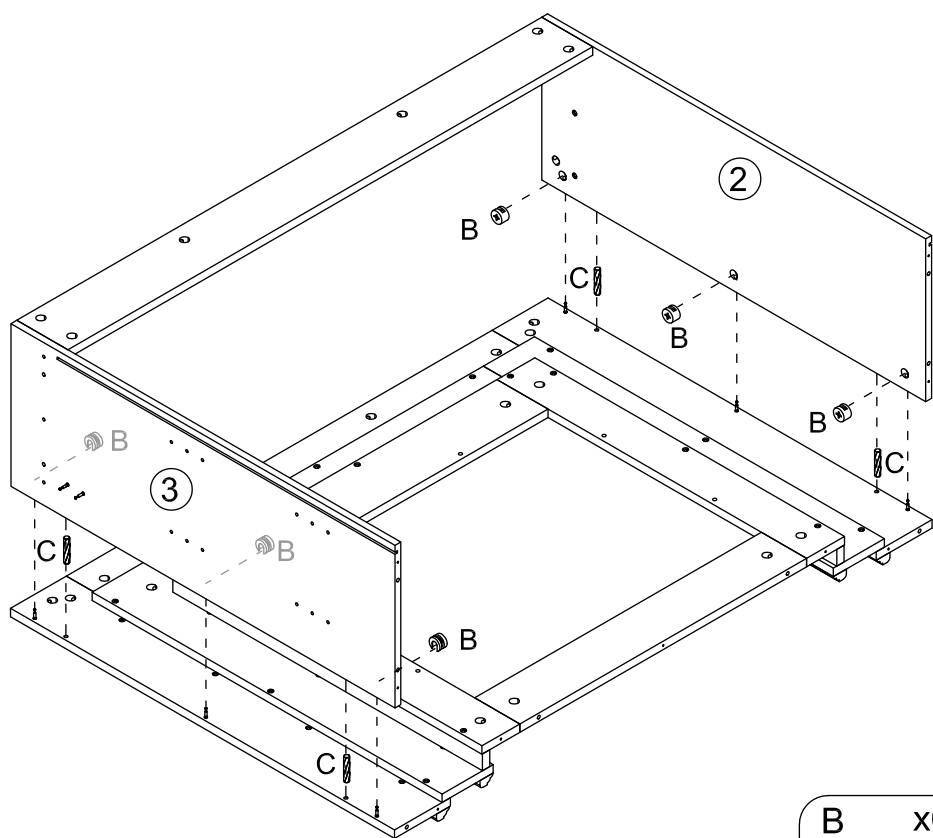


B	x6
C	x4

Step 13

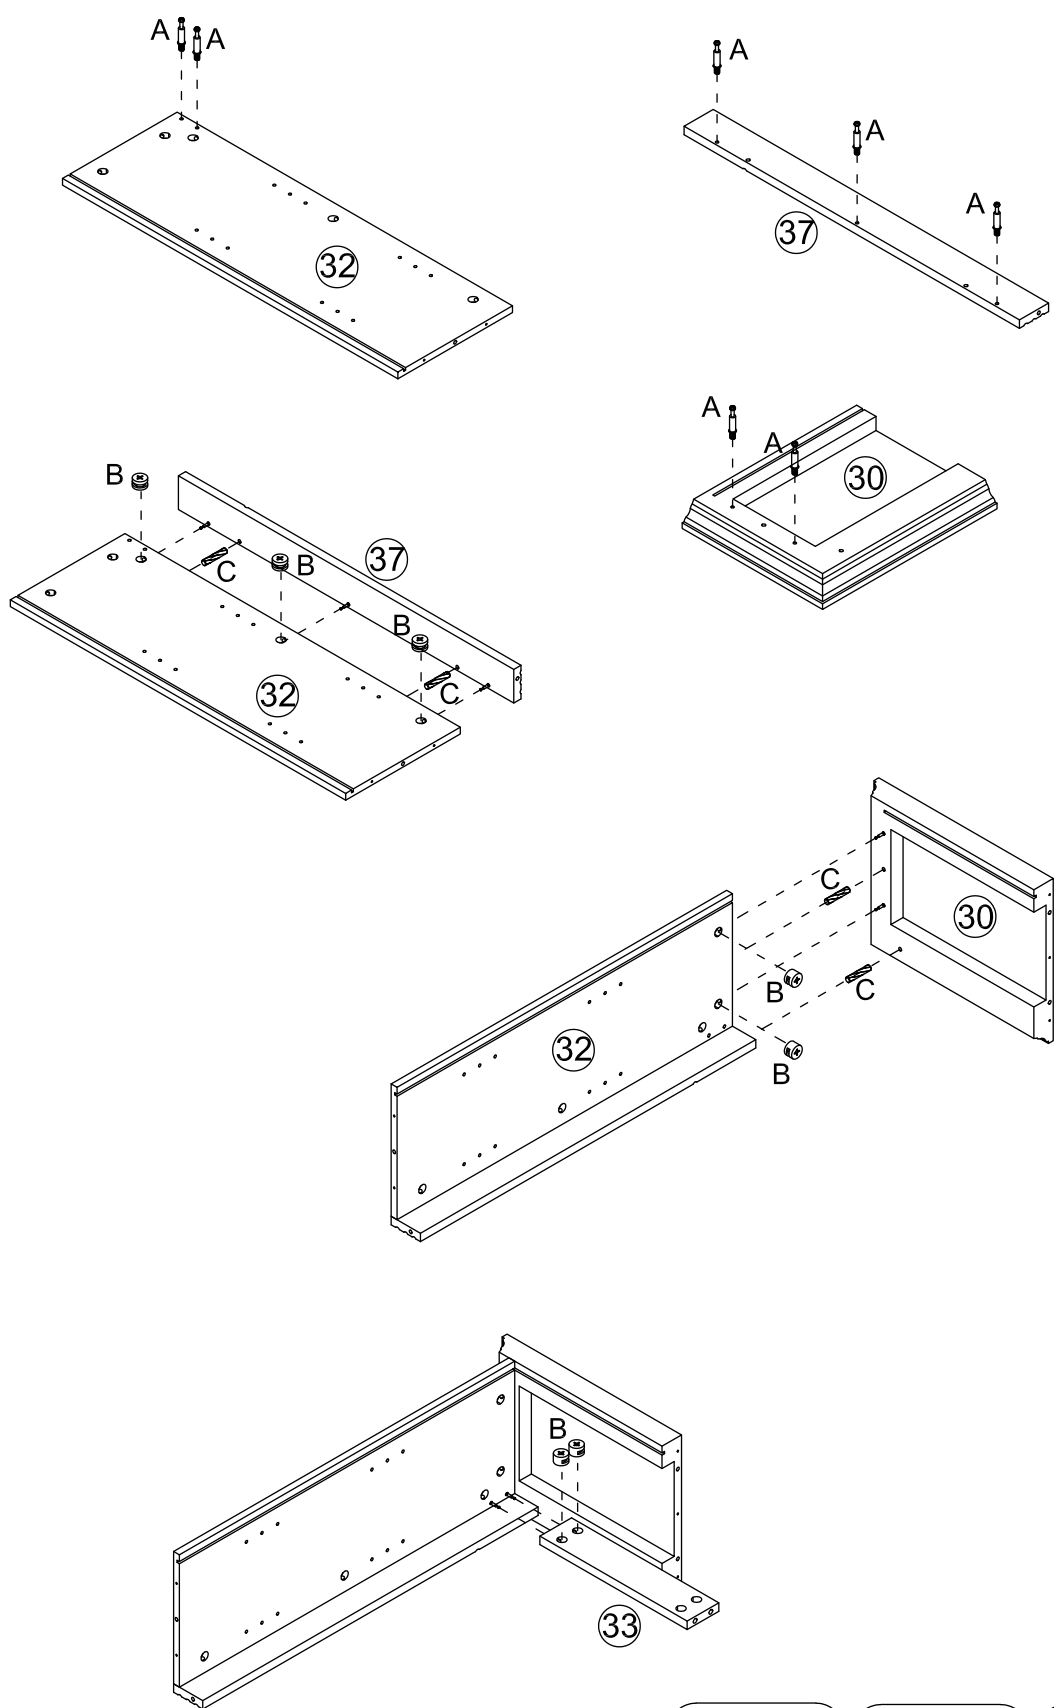


A	x7	B	x7	C	x4
					

Step 14

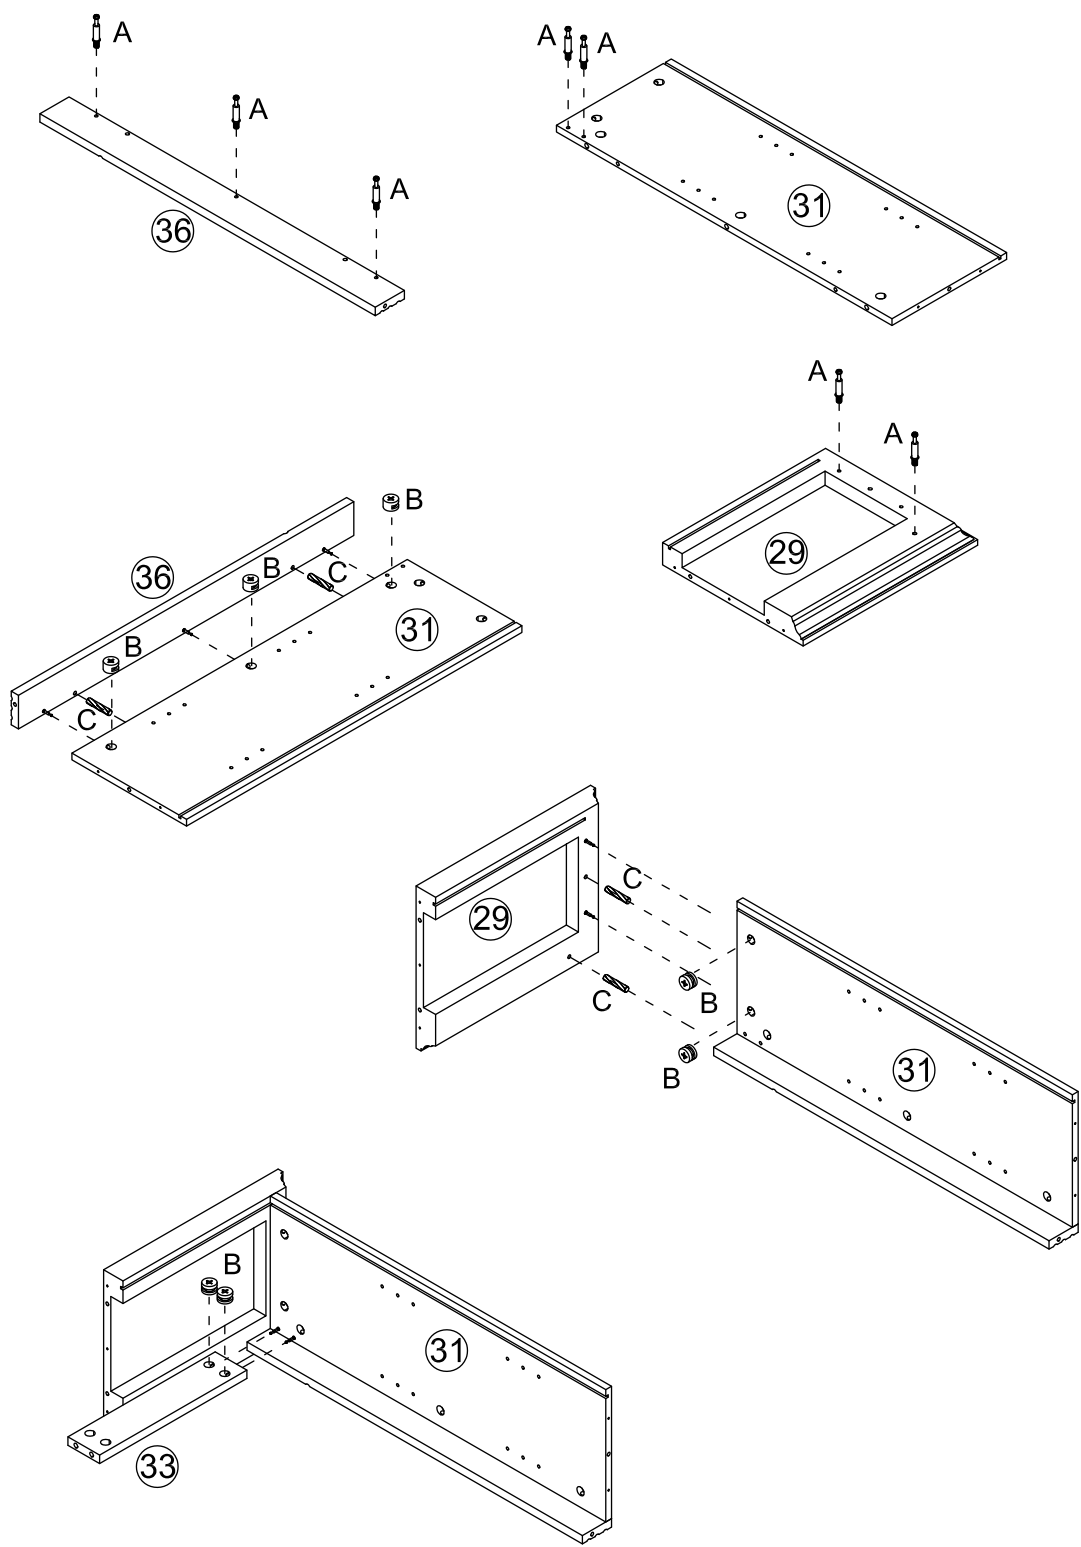


A	x7	B	x7	C	x4
  					

Step 15

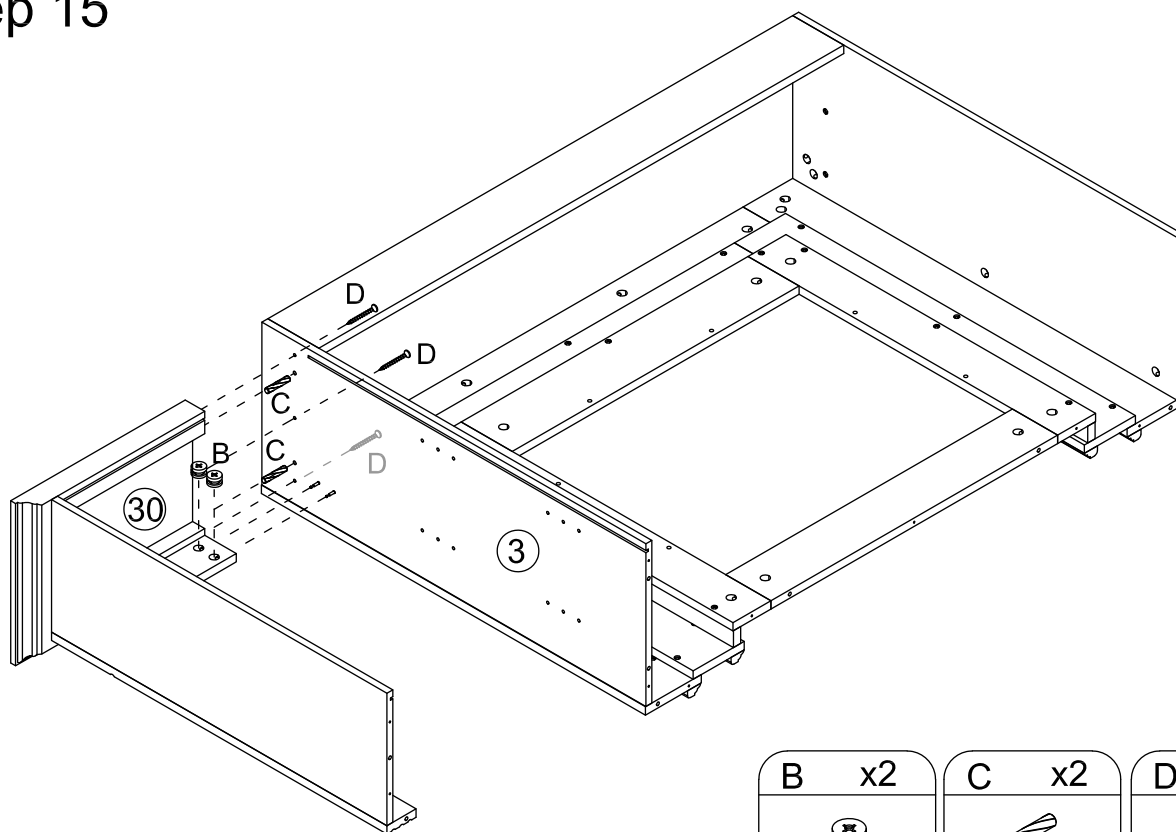


B	x2	C	x2	D	x3
					

Step 16

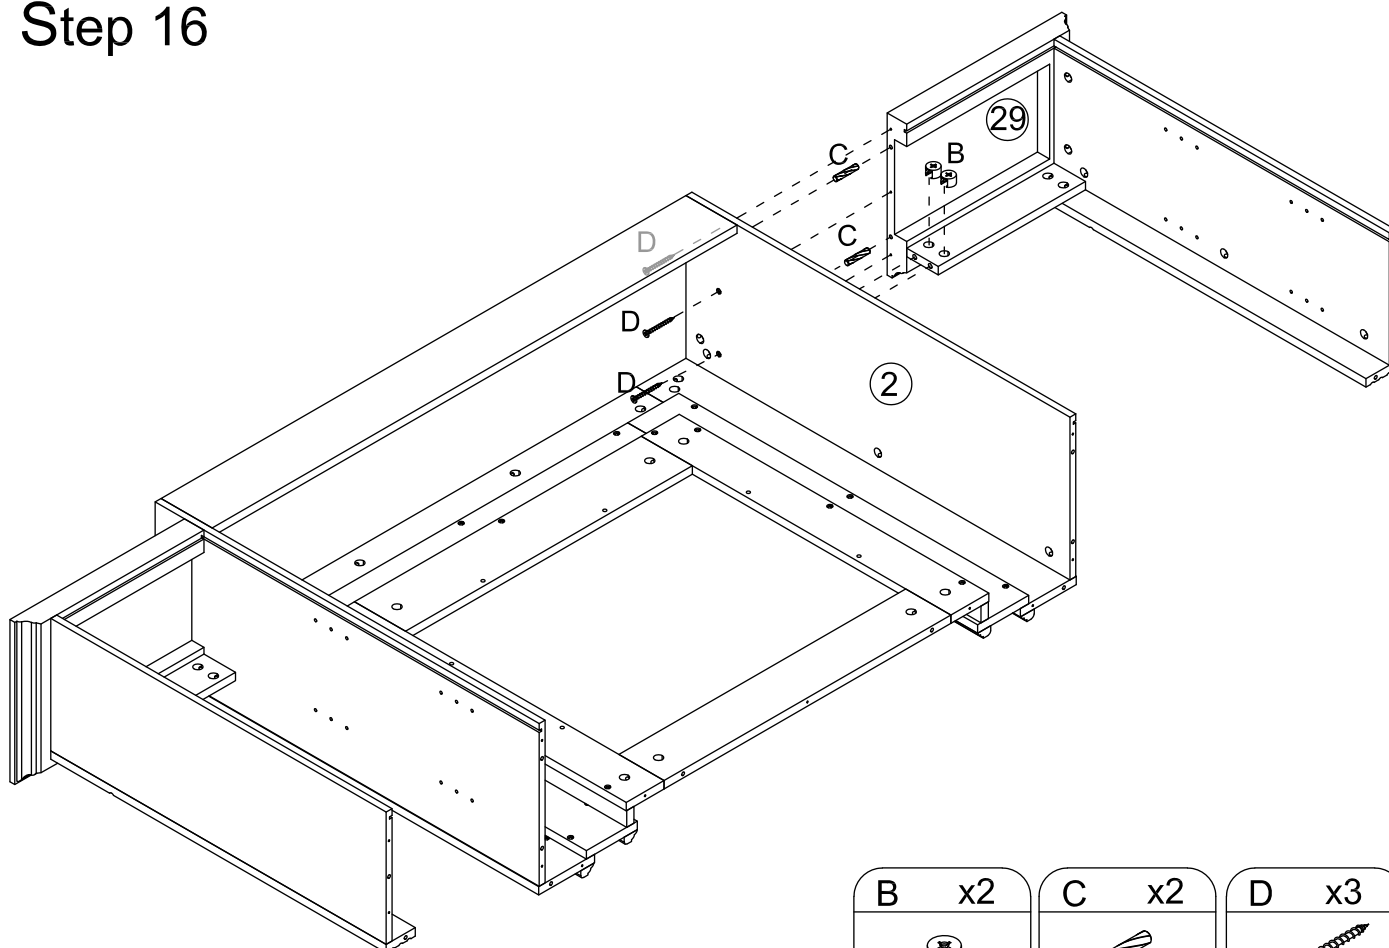


B	x2	C	x2	D	x3
					

Step 17

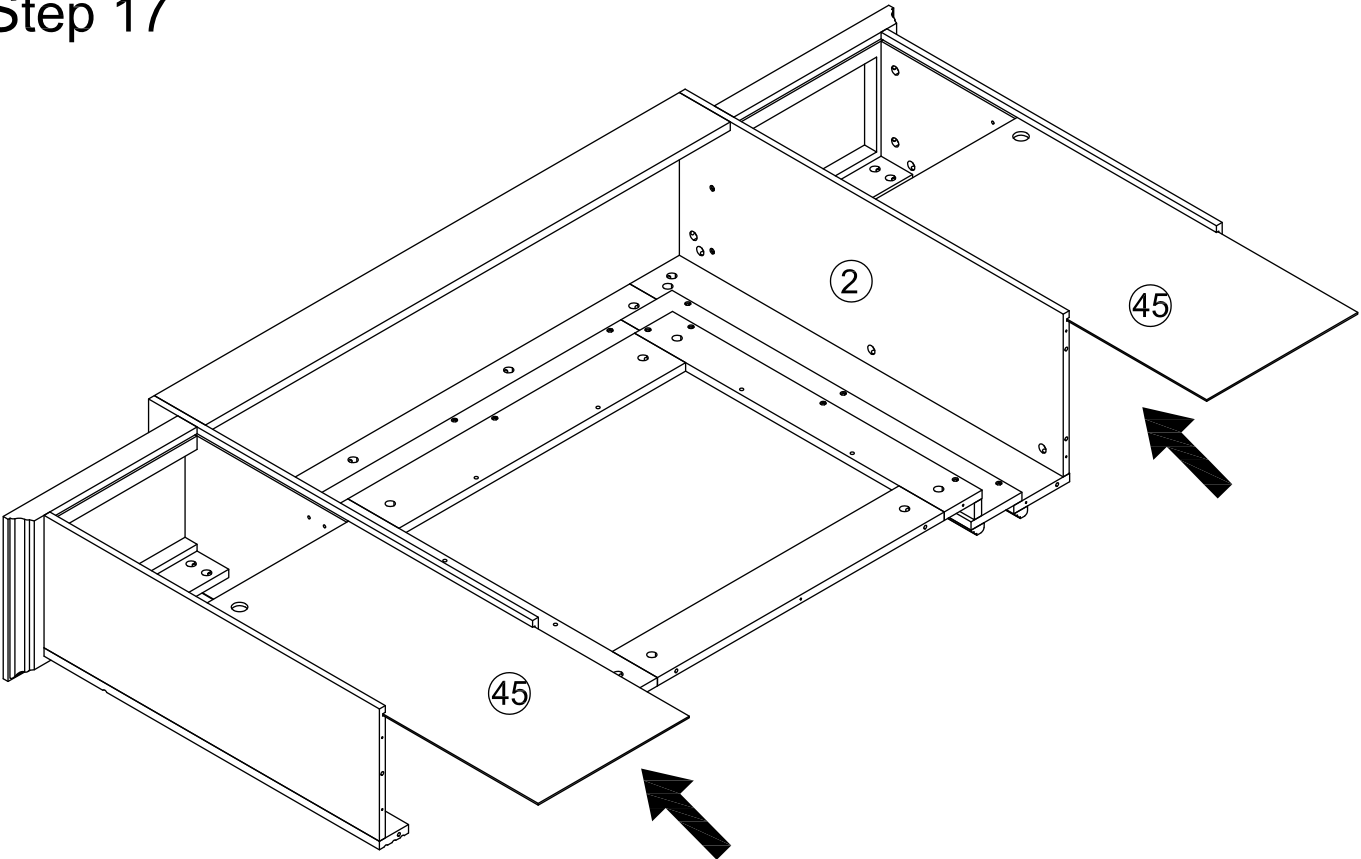


Step 18

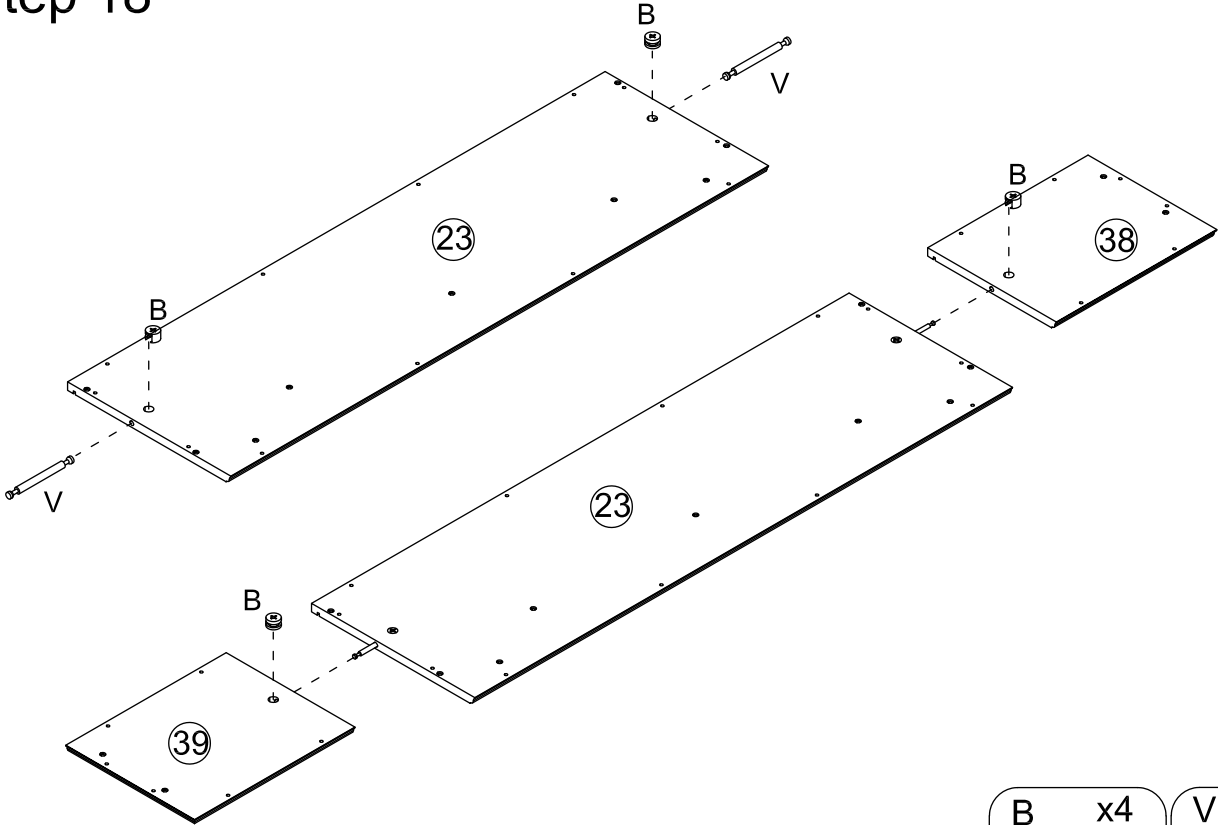


B x4	V x2
	


Step 19

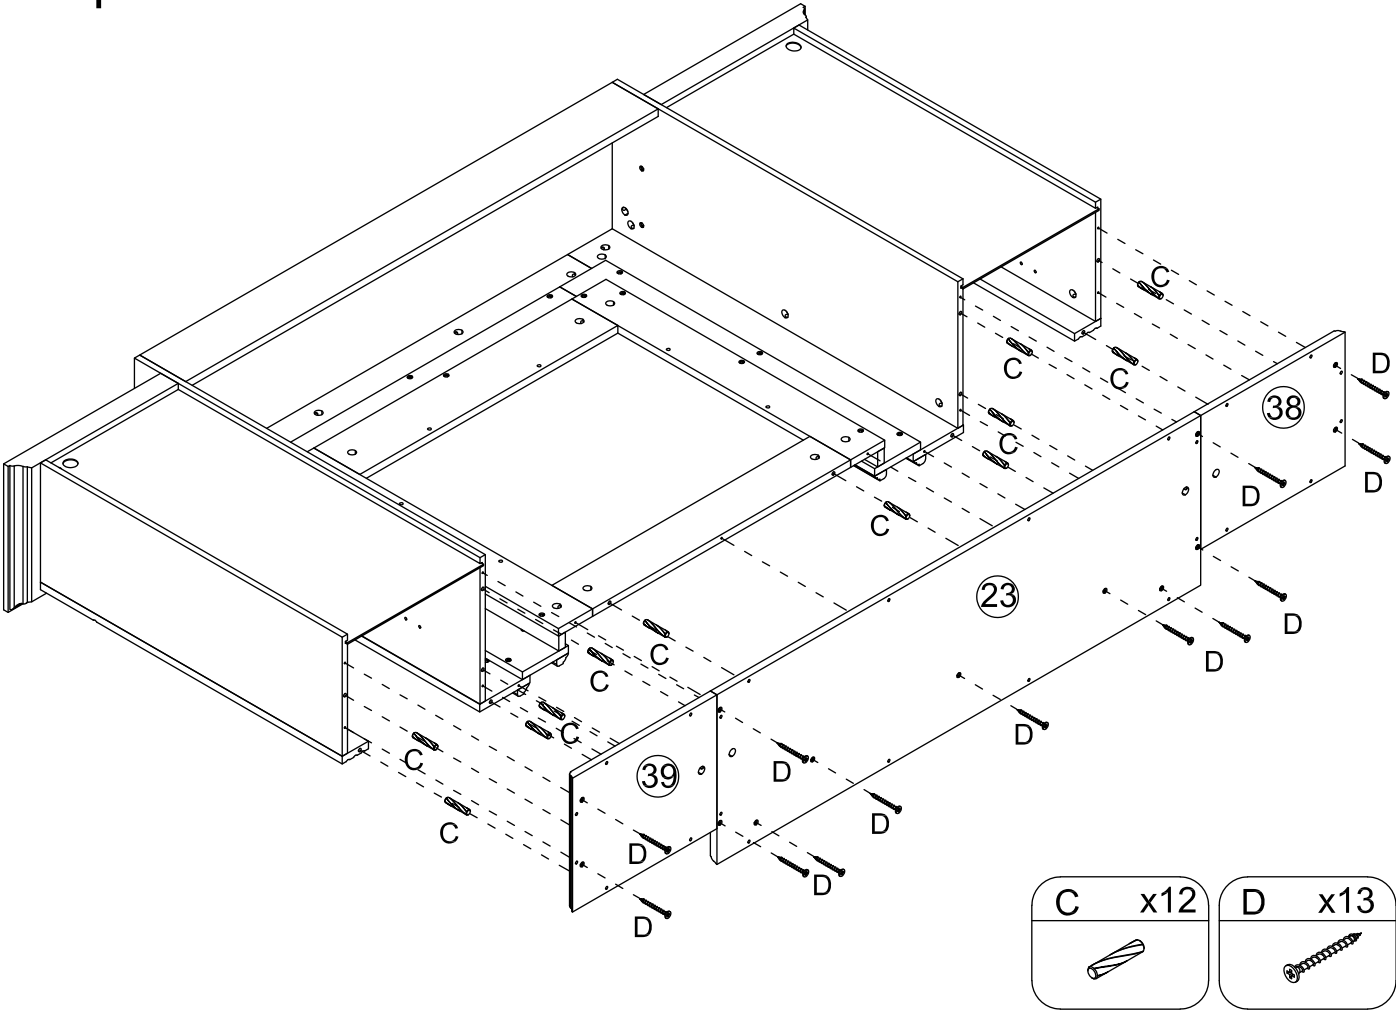

Step 20

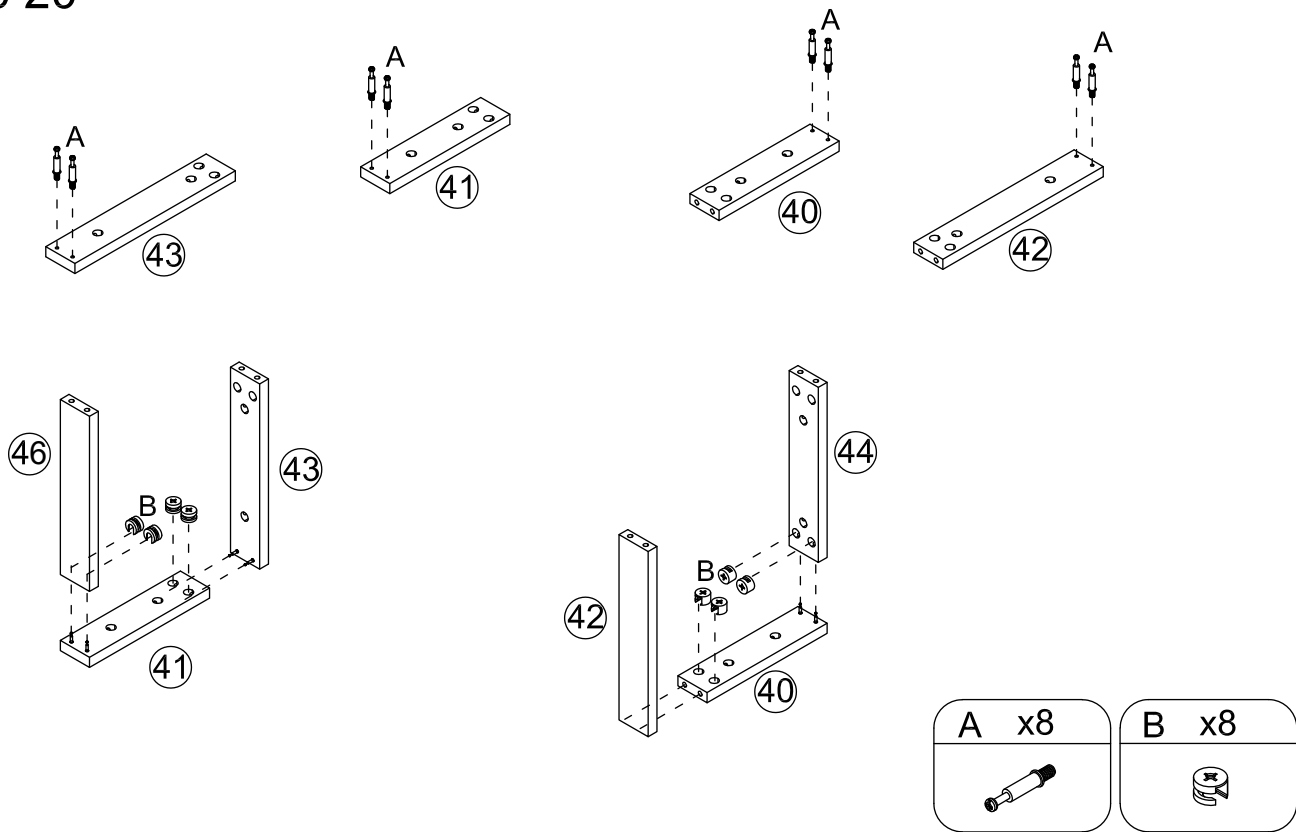


Step 21

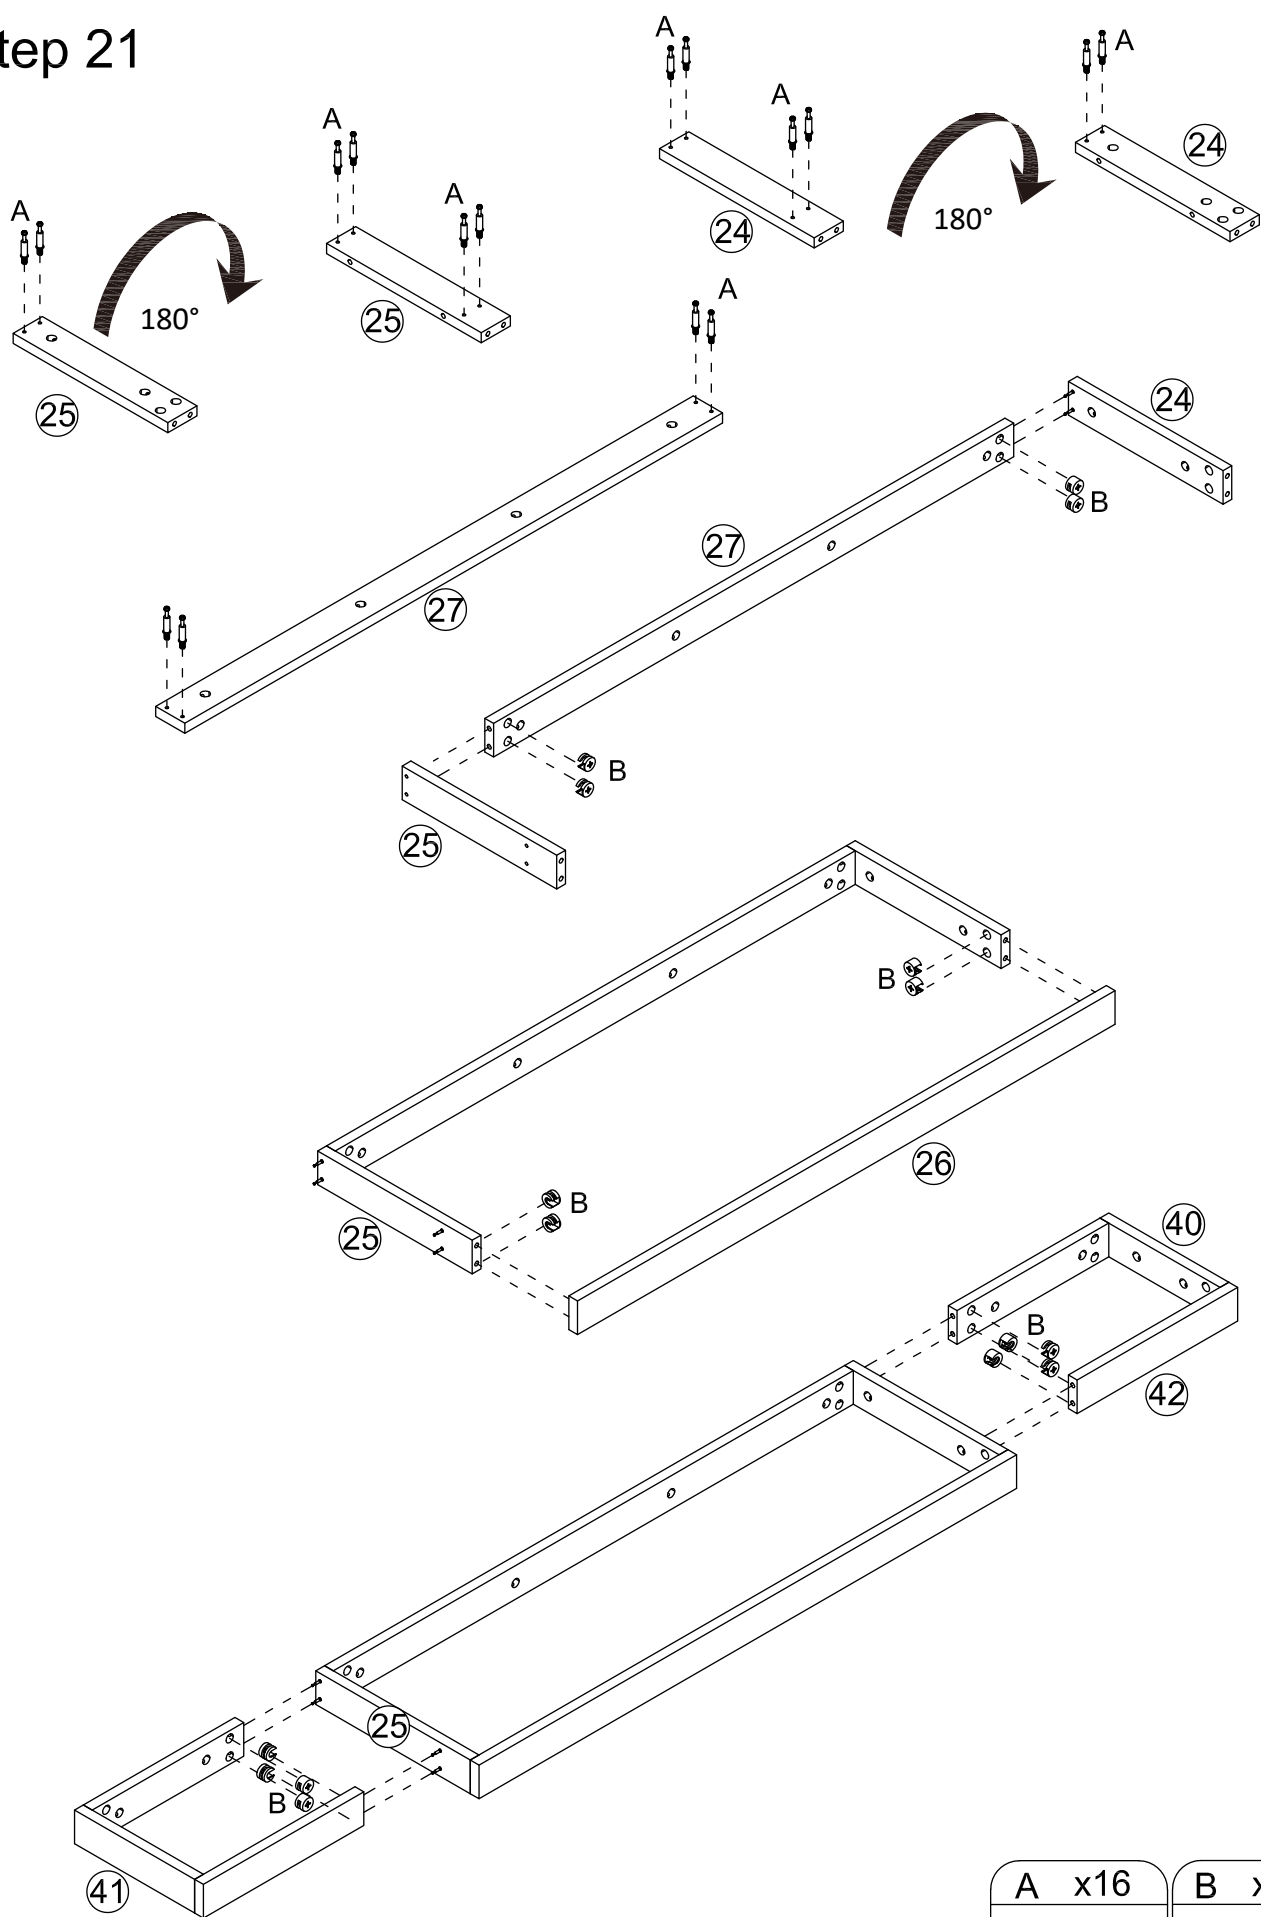


A x16	B x16
	



Step 22

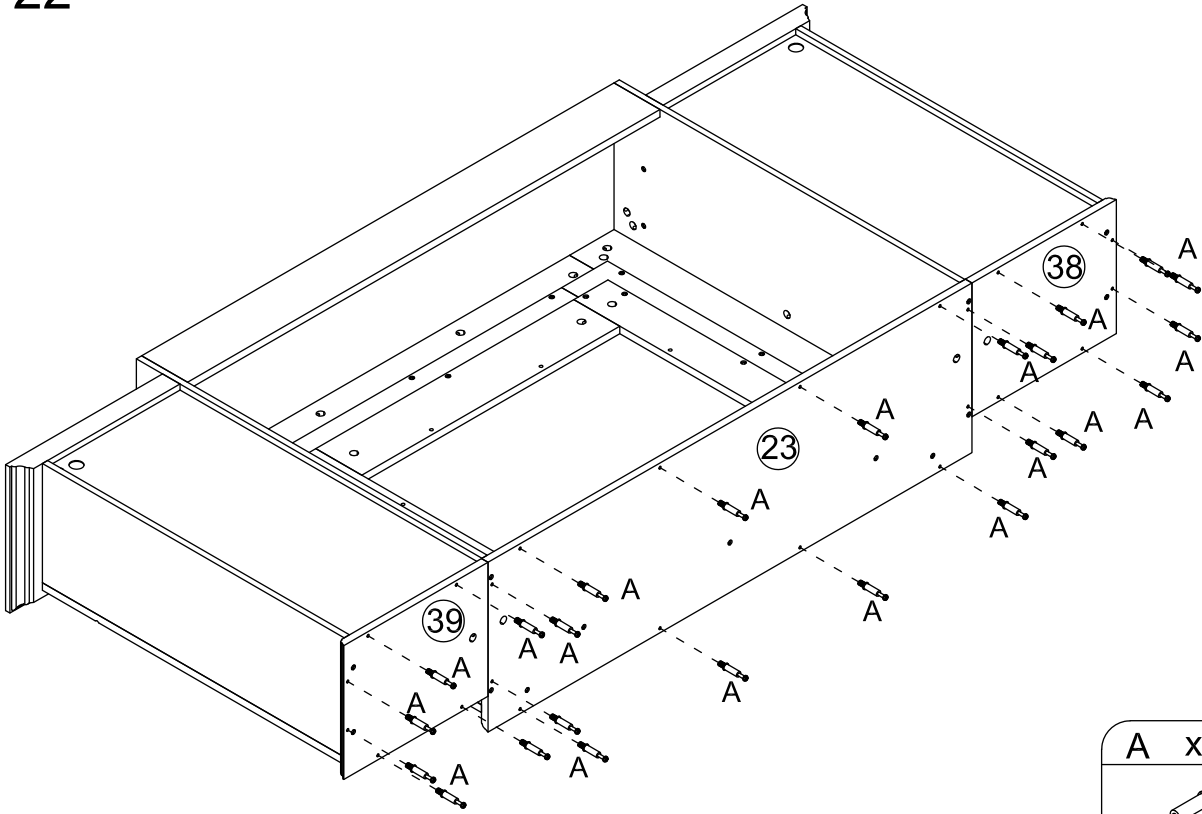



Step 23

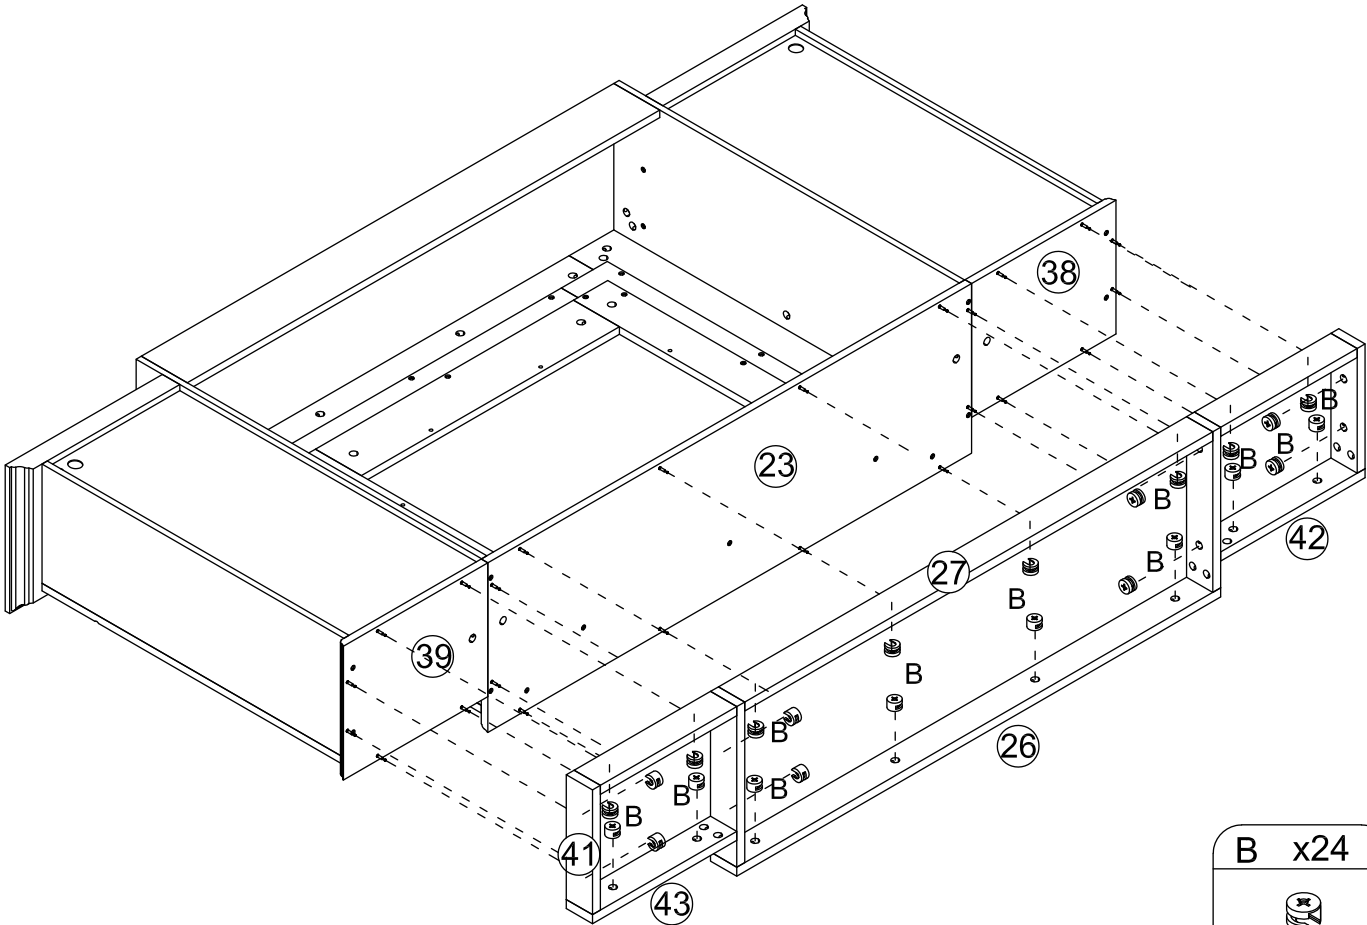


Step 24

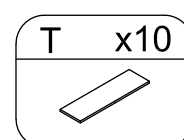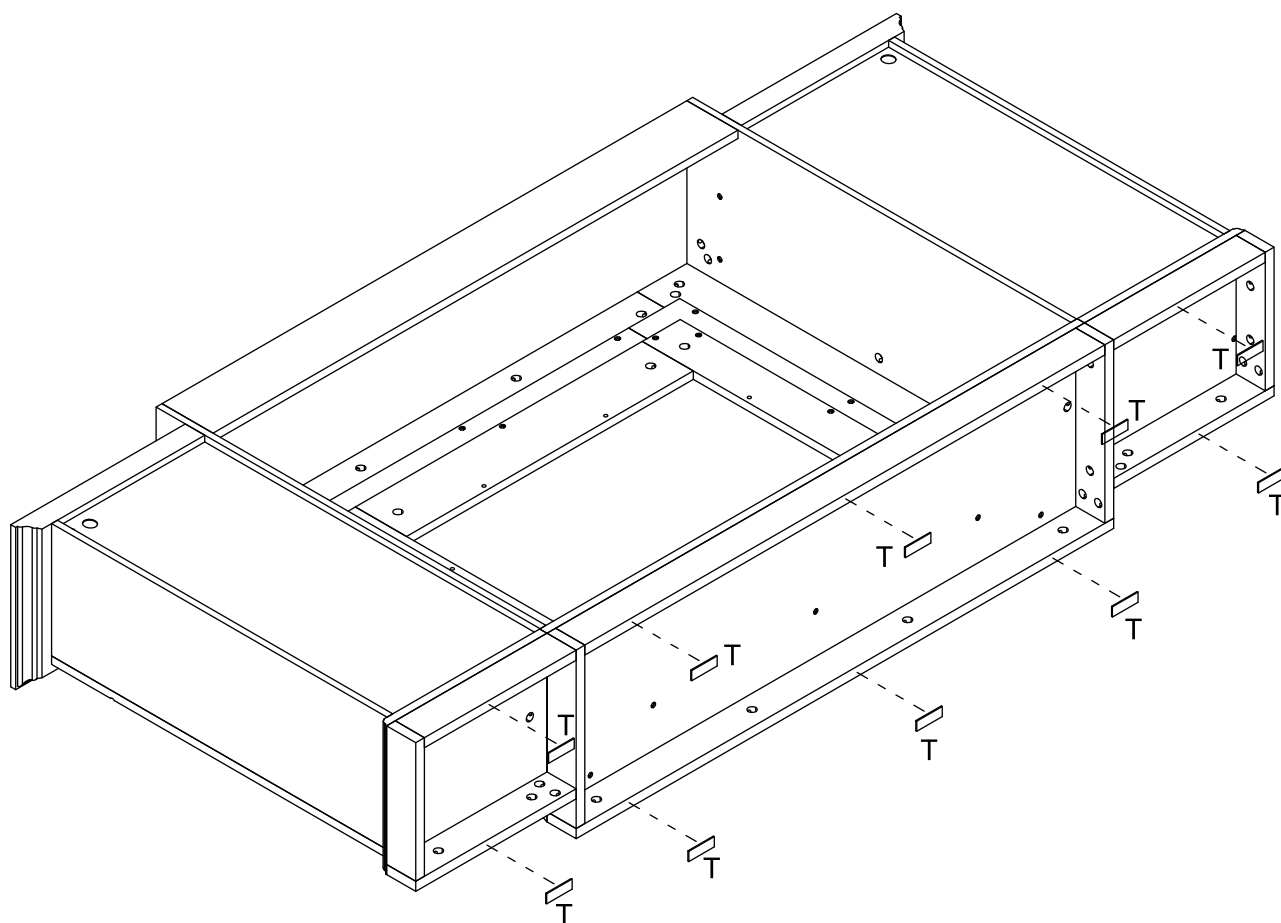

Step 25

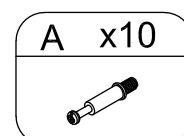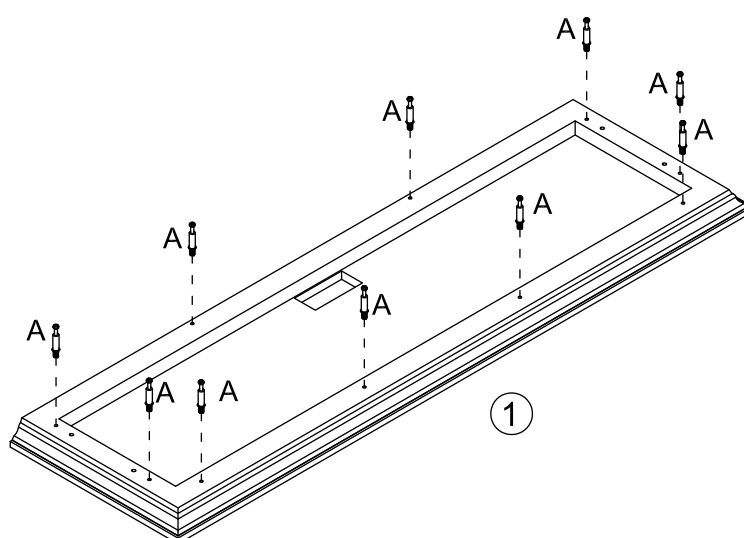


Step 26

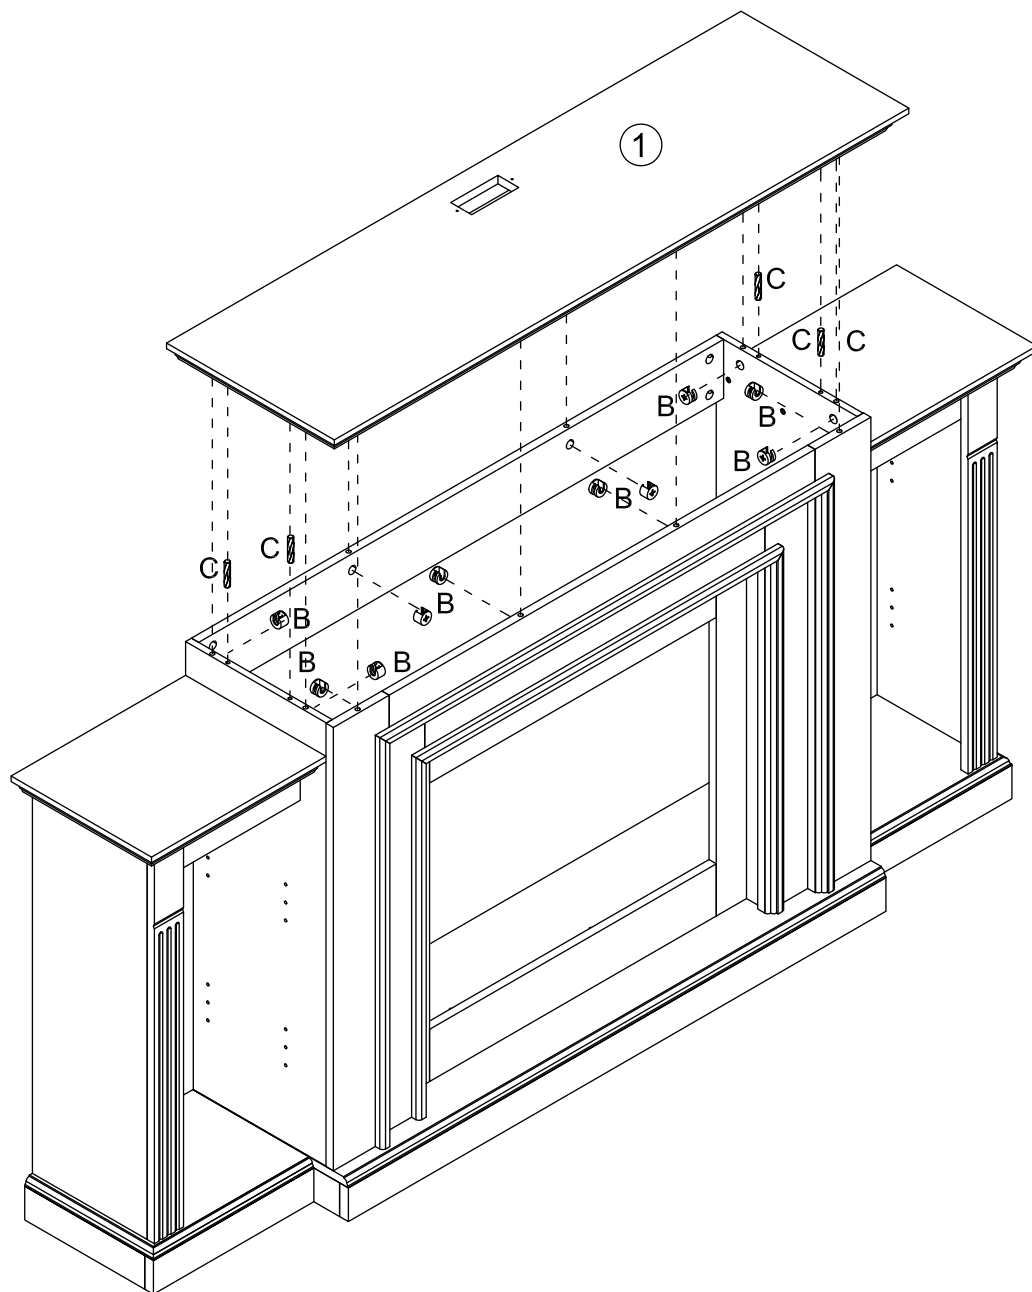

B x10	C x4
	


Step 27

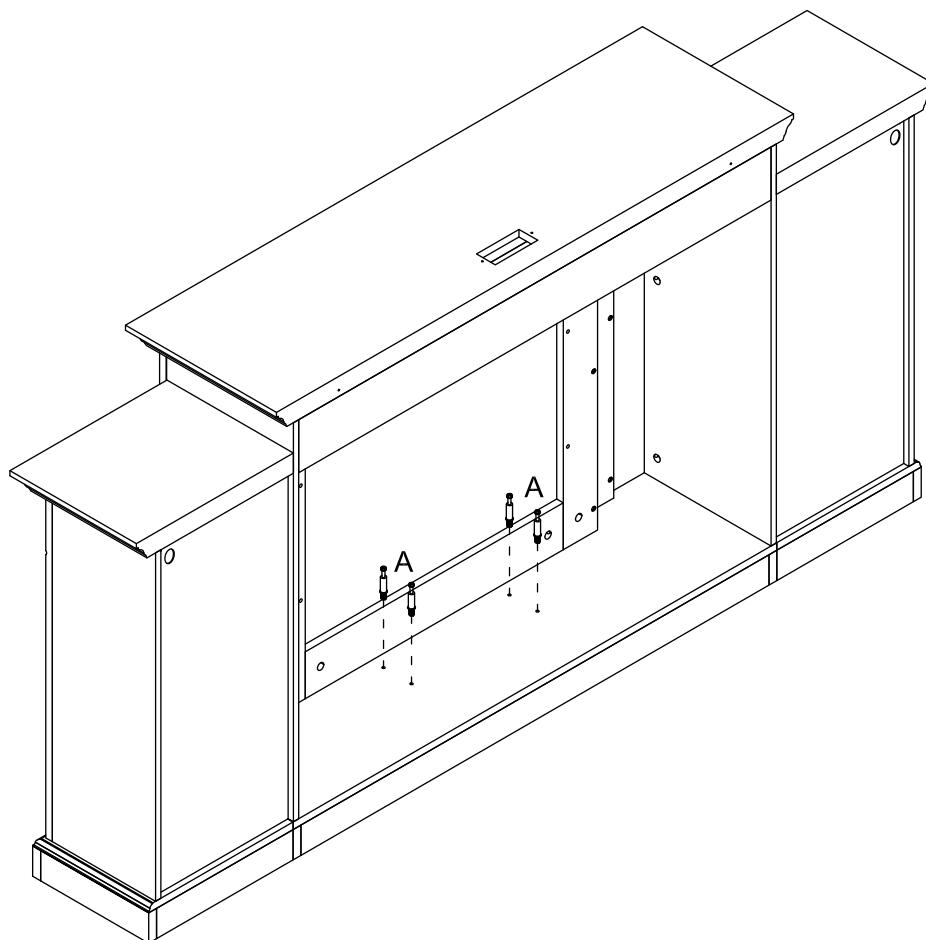

A x4






Step 28

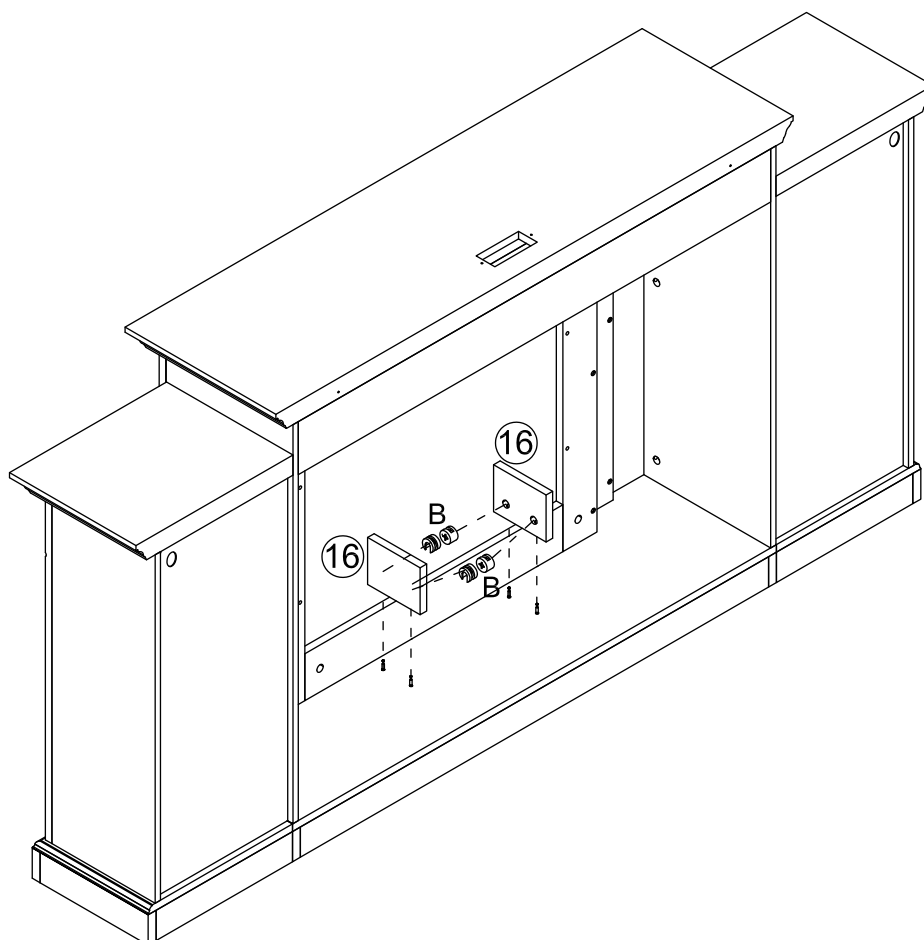


B x4



Step 29

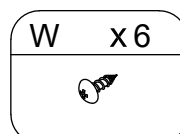
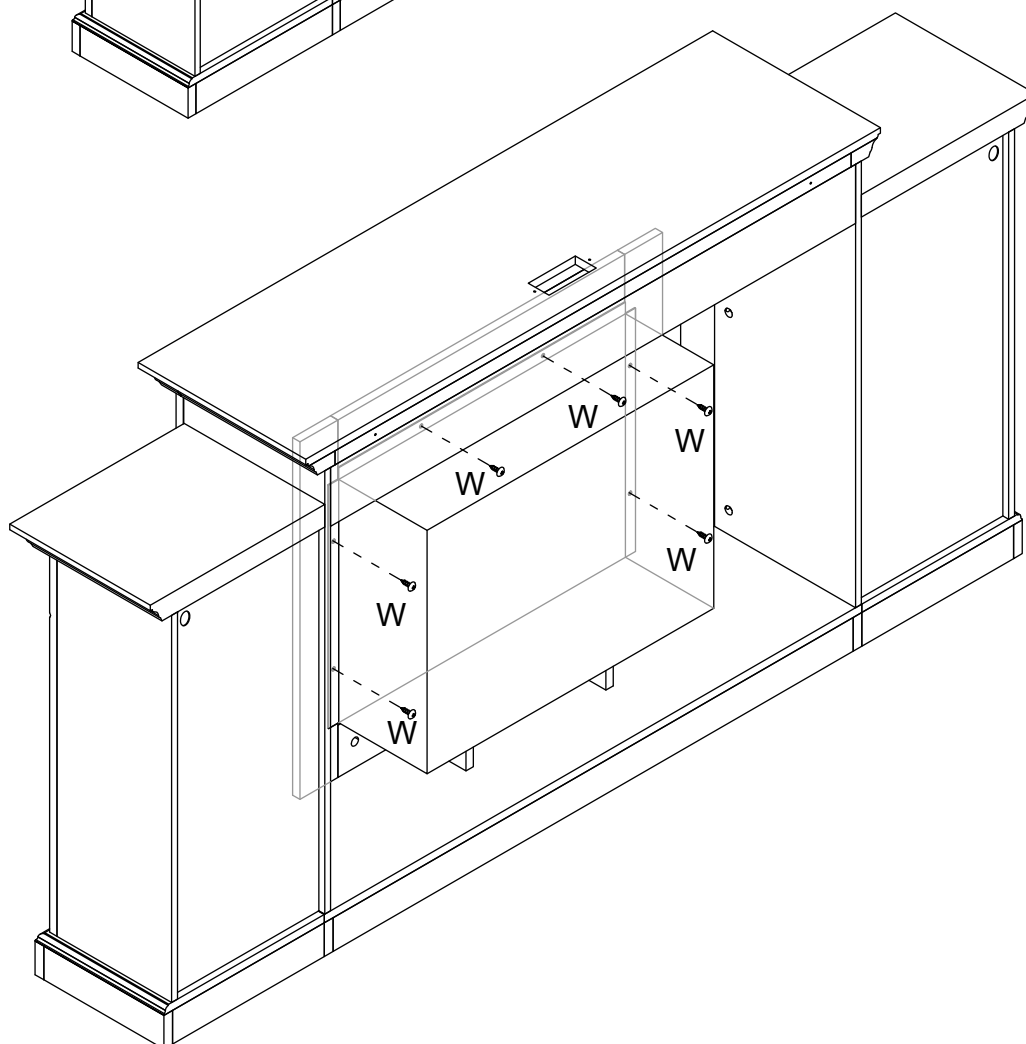
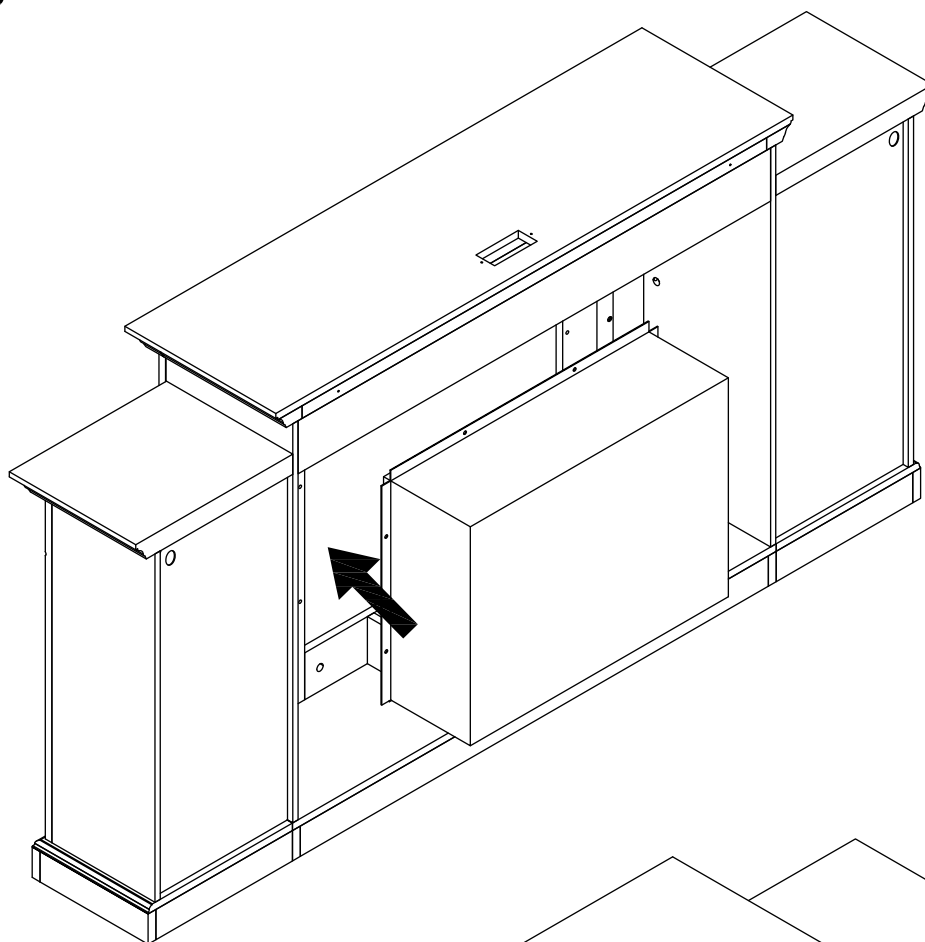


Step 30

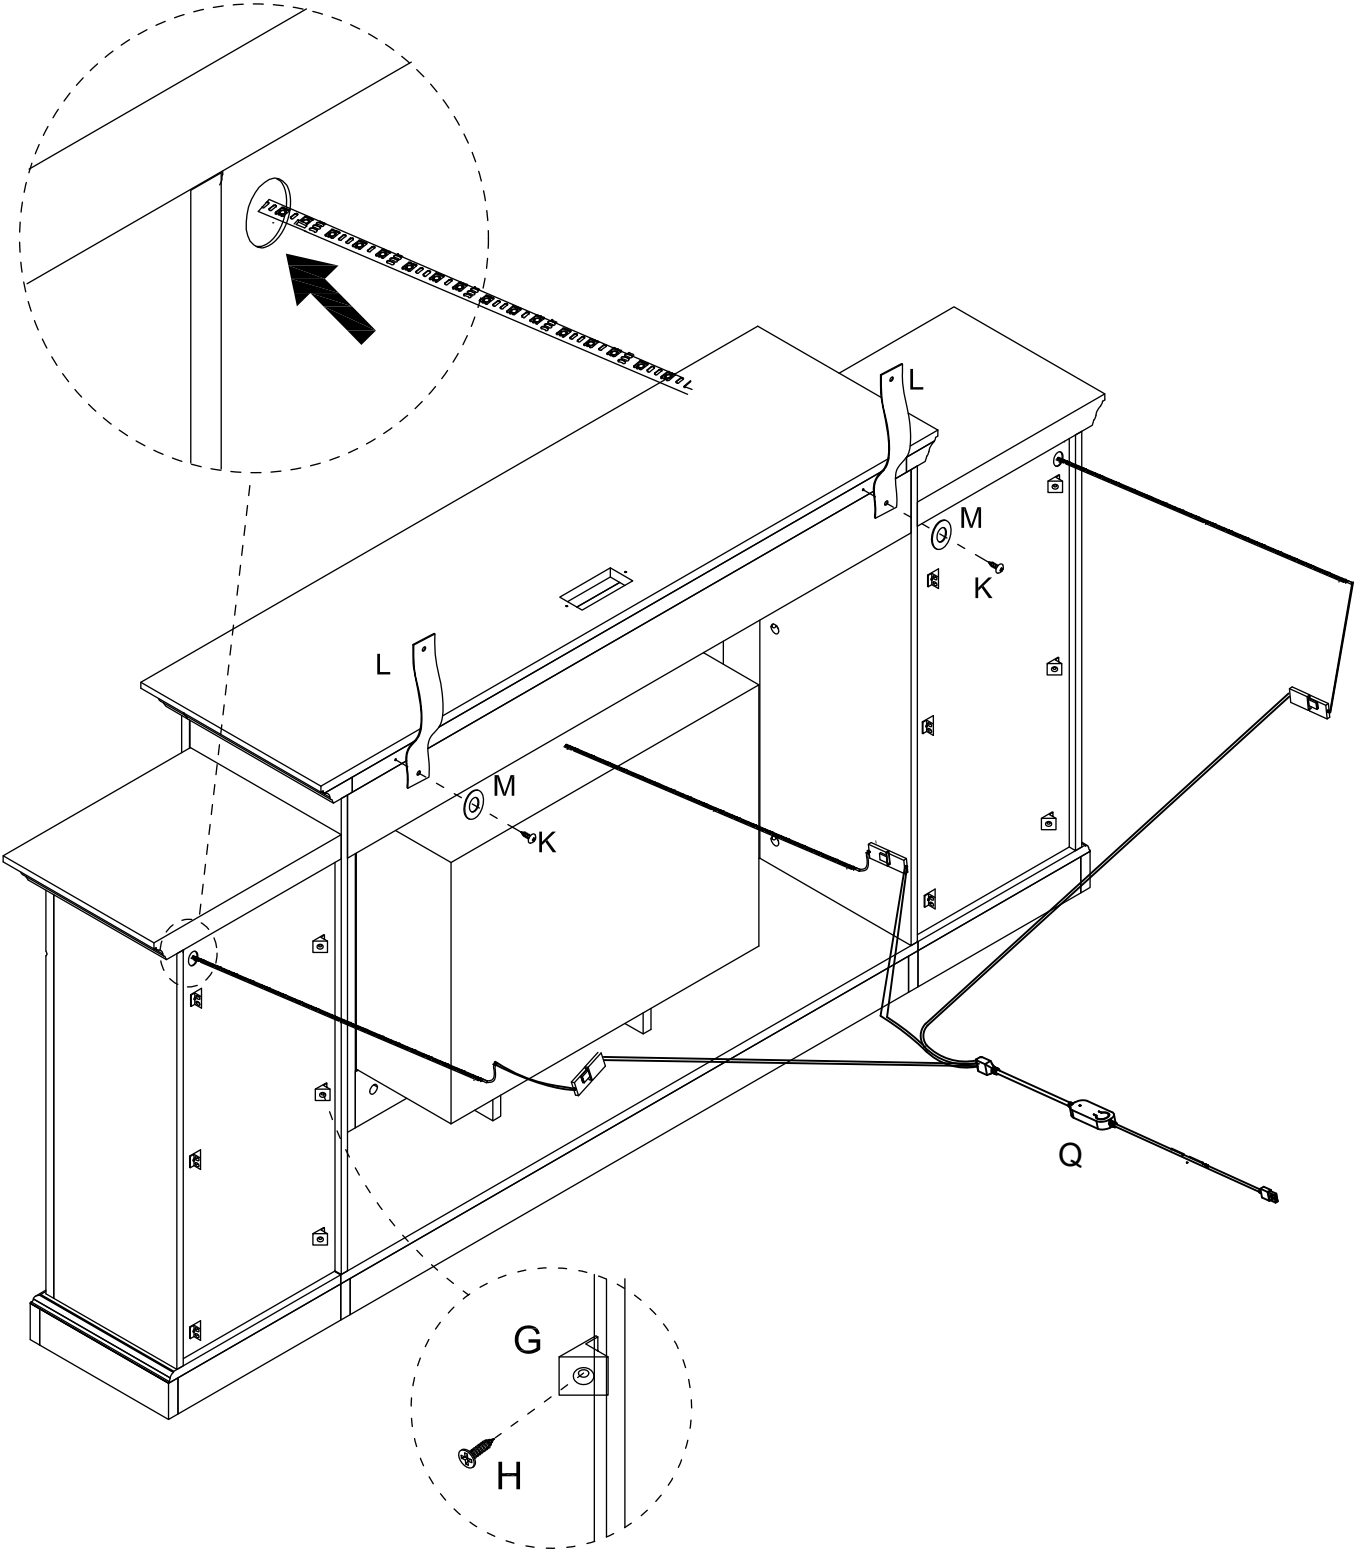


Q x1	G x12	H x12	M x2	K x2	L x2

Step 31

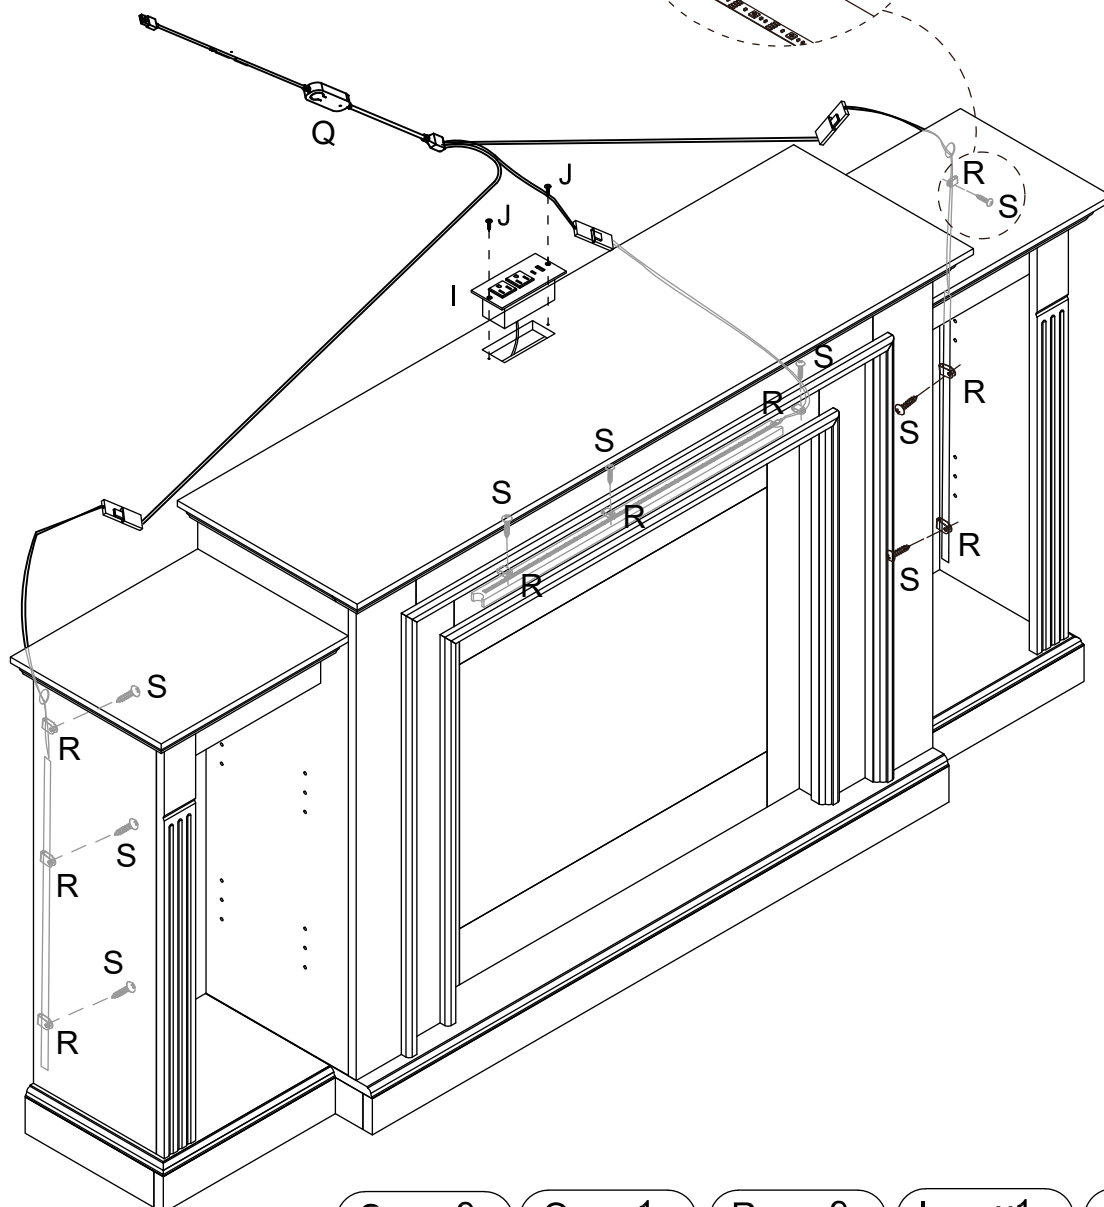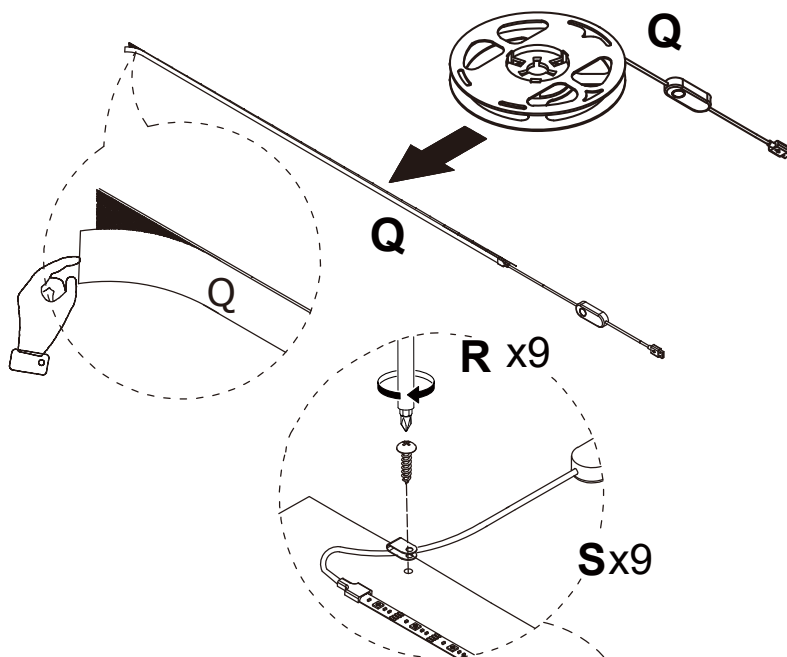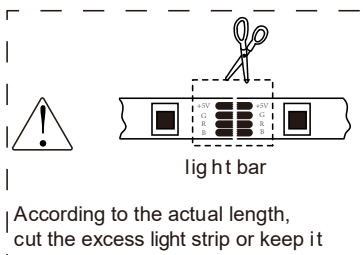


S x9	Q x1	R x9	I x1	J x2

Step 32

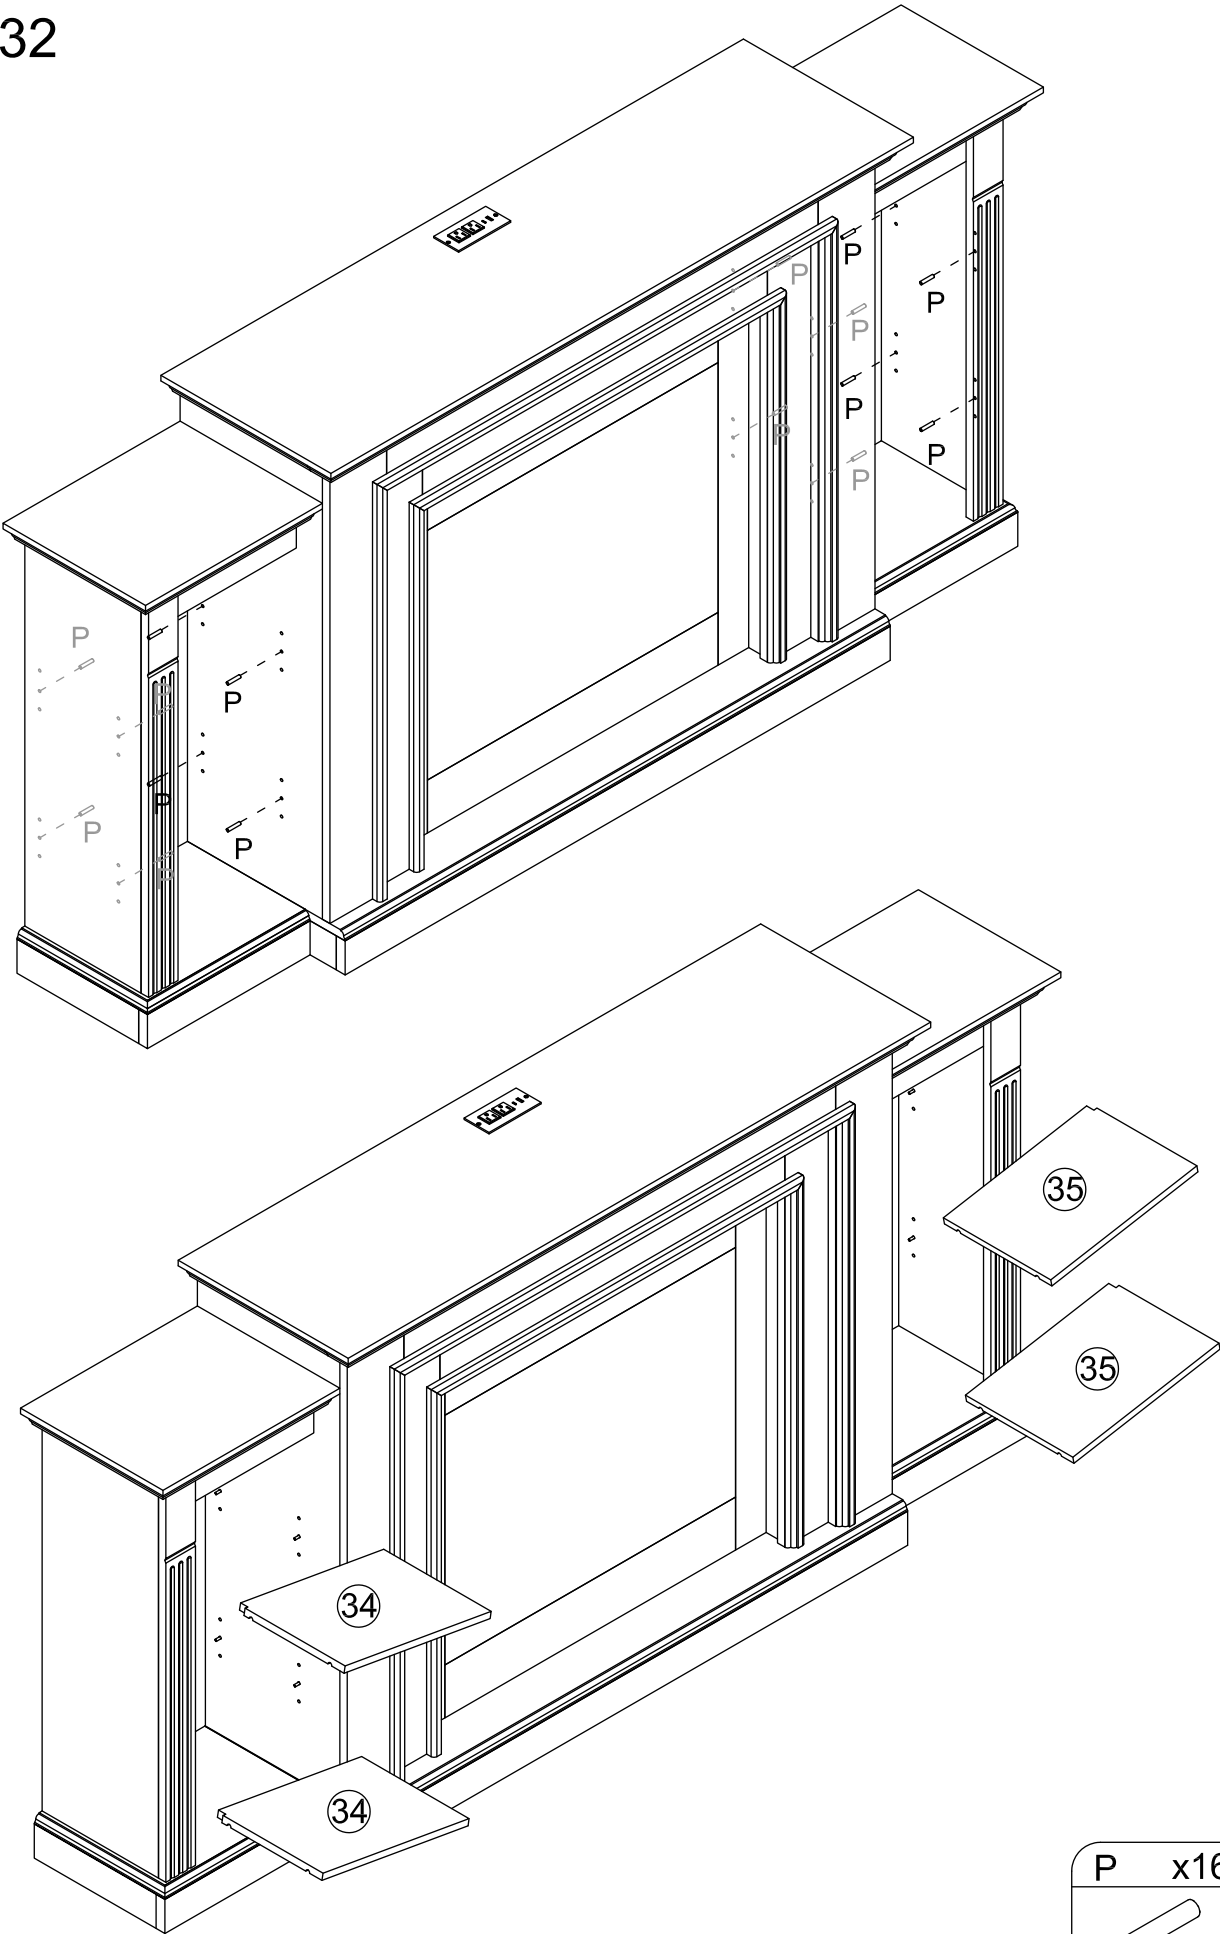

Step 33

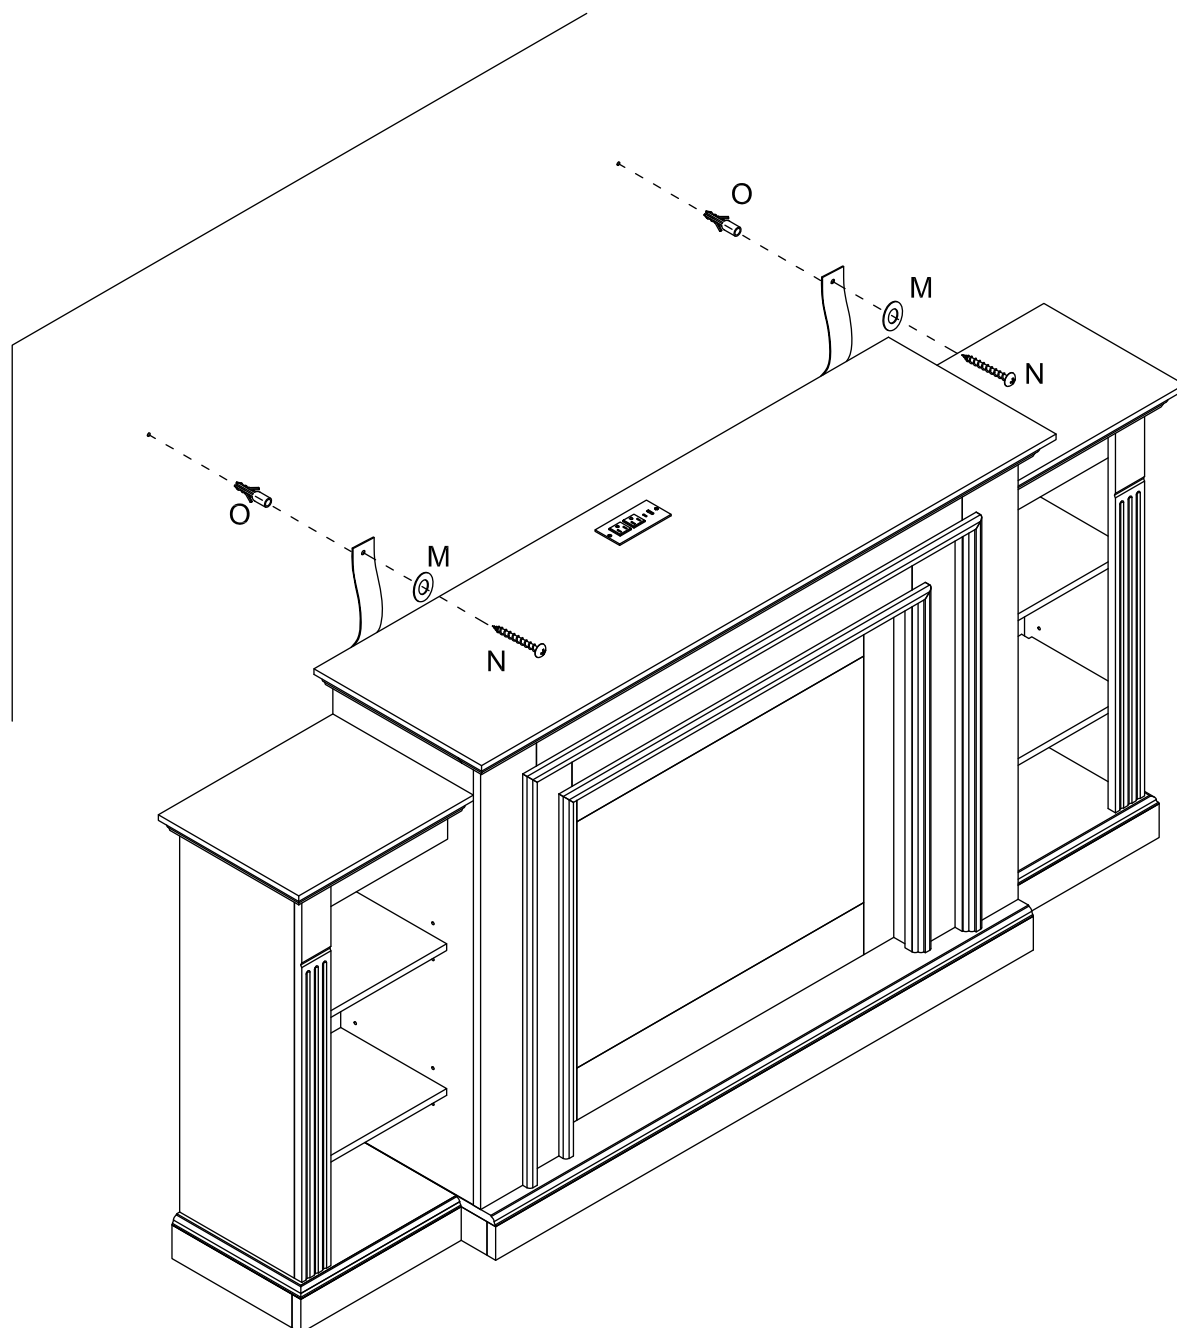

M	x2	N	x2	O	x2
					