


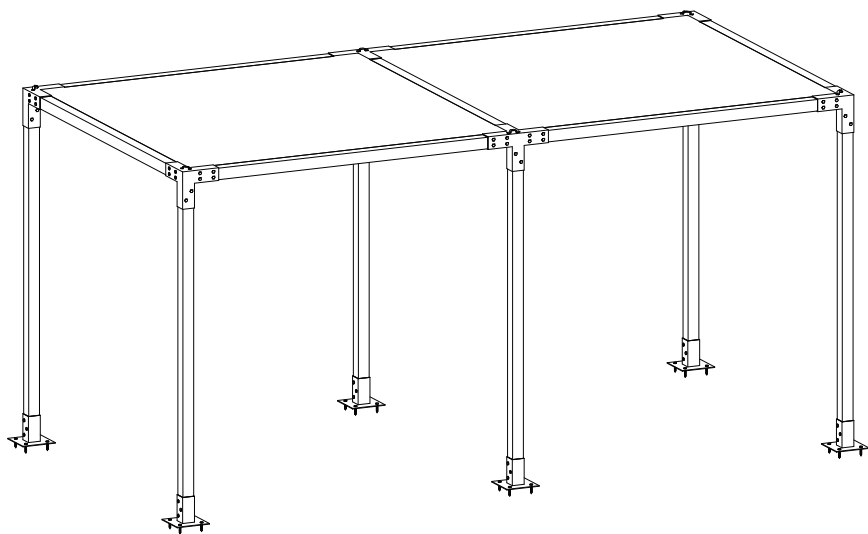

Double Freestanding PERGOLA BRACKETS KIT

Assembly Instructions

Lumber Not included


PARTS LIST

NO.	PART	DESCRIPTION	QTY	IMAGE
1	A	3 Ways corner bracket	4	
2	B	4Ways Extension Bracket	2	
3	C	Post base	6	
4	D	Lag bolt M6x40 mm	240+2	
5	E	Expansion anchor	24	
6	F	Wood drill bit M4	1	
7	G	Masonry drill bit M8	1	
8	H	Hex Socket 10 mm	1	

Required additional items:

- 13 pcs pcs 4x4 lumber Actual size 3.5x3.5 inches.
Recommended to use vertical post as 8ft long.
- Top shade: Purchased separately and available at EZ Shades store:

Tools will make your life easier:




Drill driver



Soft hammer



Ladder



Hammer drill




Gloves




Protective
Glasses

INSTALLATIONS


Step-1

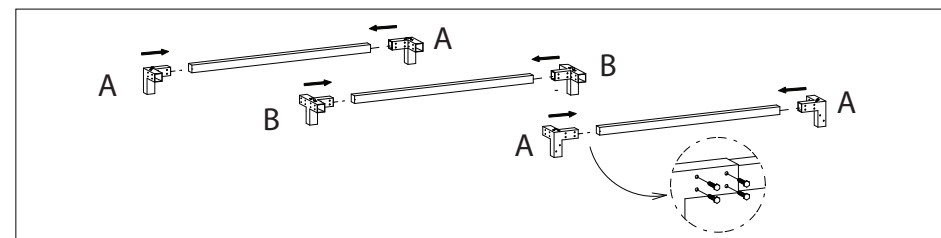


Step-2

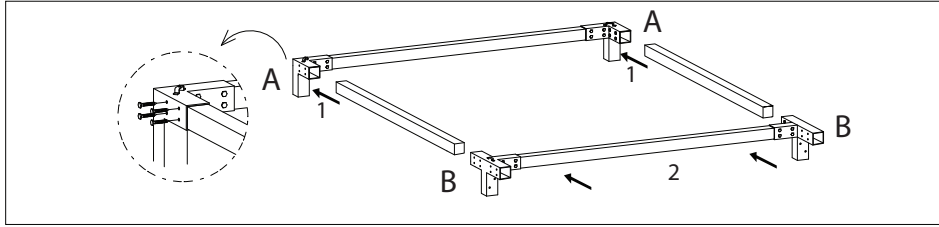


Step-3

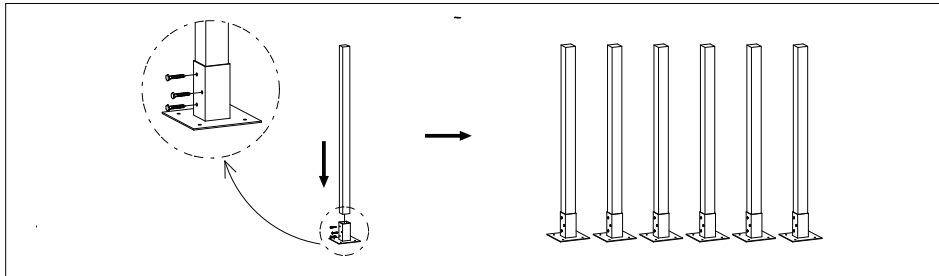


Step-4

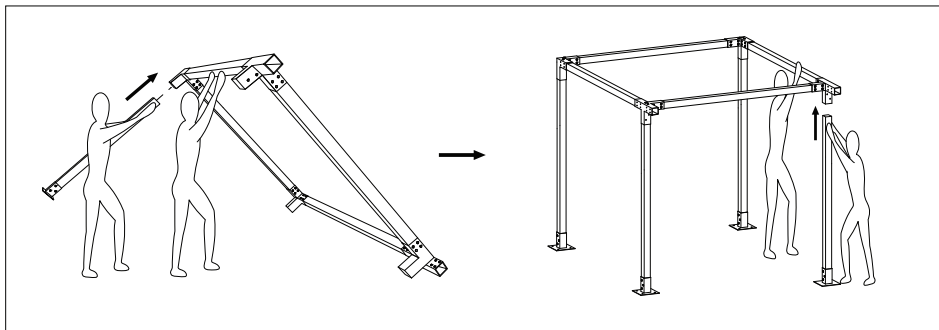


Step-5

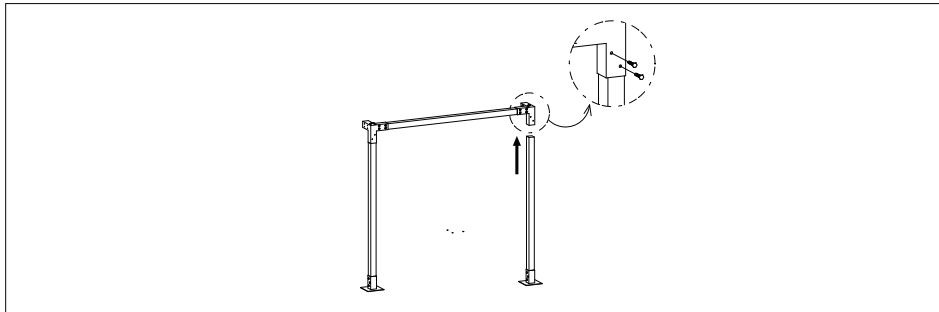

Step-6

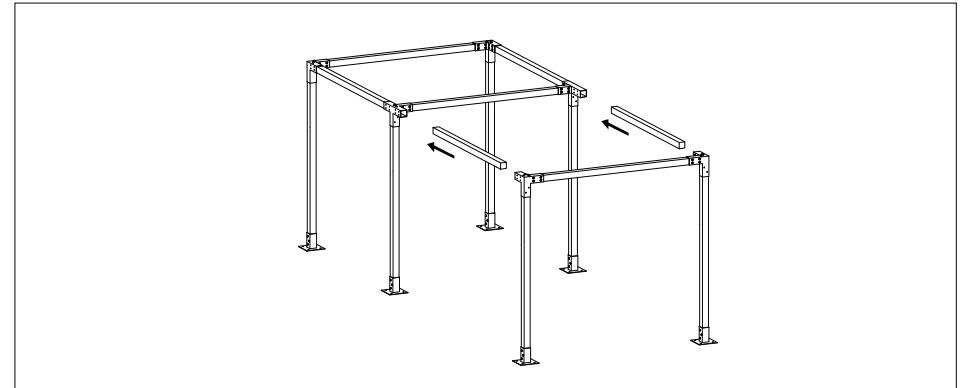

Step-7

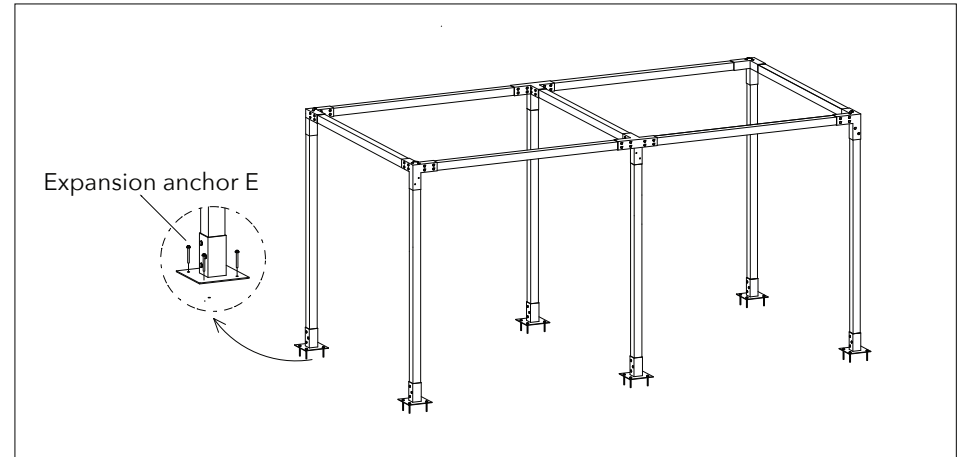

Step-8

