


Assembling Instruction

Generating Drawings

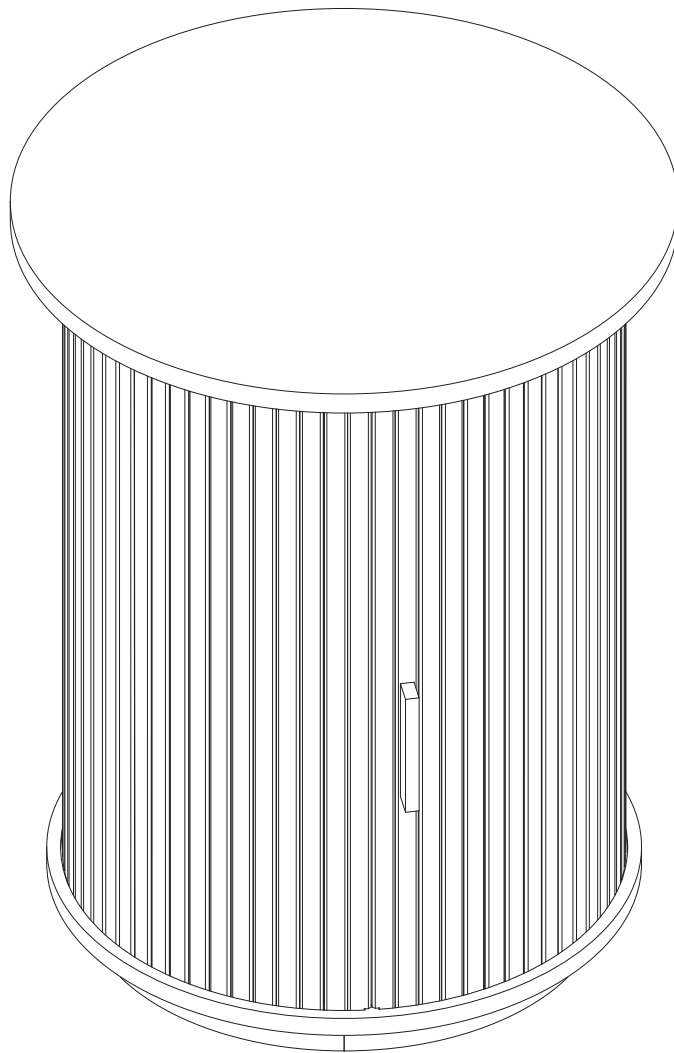

ATTENTION

If there is any missing, please kindly send us messages to let us know the name of missing part regarding to the first page of instructions.


We will send replacement to you asap. We are concerned about each customer's experience, if there is any loss or damage, please contact us at any time, we will provide effective solutions.

Please attach your Oder ID so that we can assist you better.




General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- VI . A Phillips head screwdriver is required for the assembly of this product .

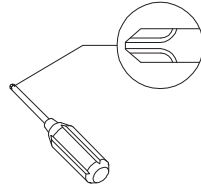





- VII . Power tools should not be used to assemble this product .

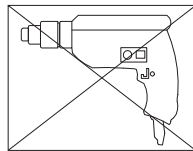


Parts List

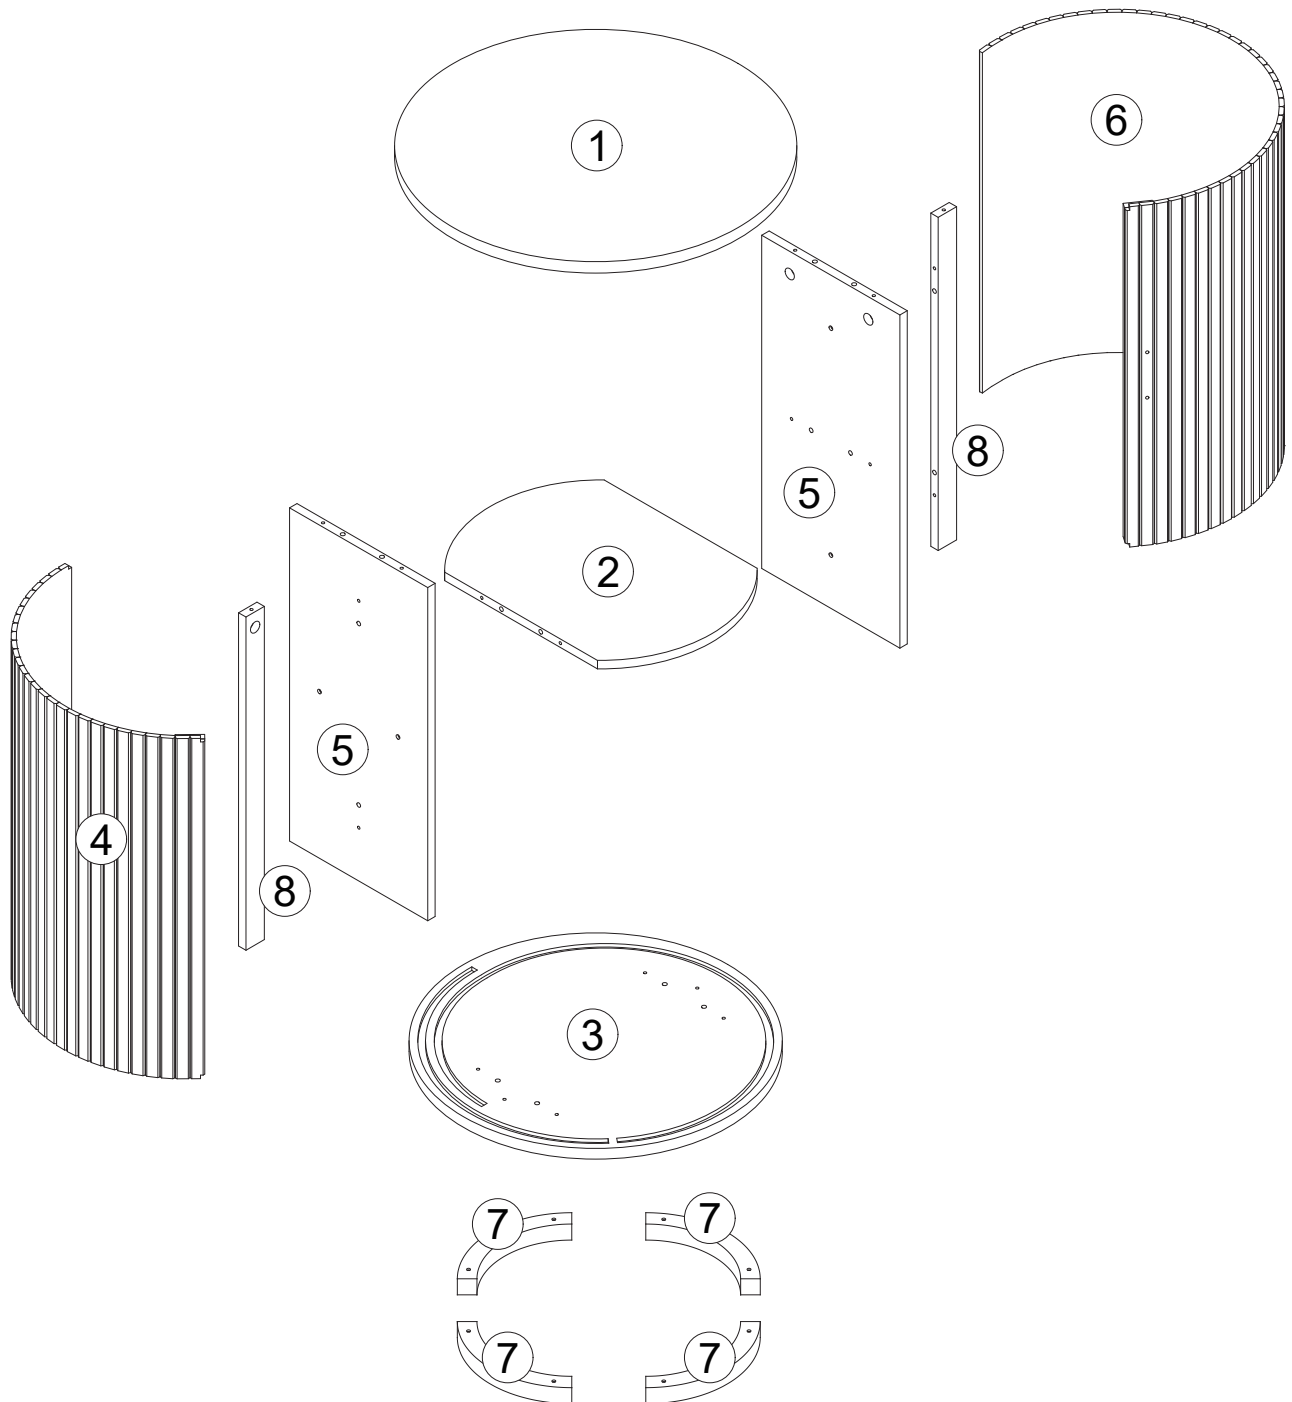

HARDWARE PACK CONTENT

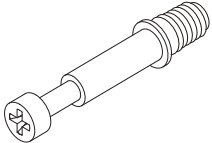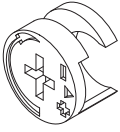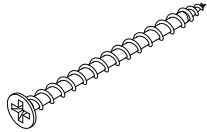

A  M6x35mm 6+2PCS	B  Ø15x9mm 6+2PCS	C  Ø6x30mm 24+3PCS	D  M4x40mm 22+3PCS	E  M4x28mm 2+1PCS
F  1PC	G  Ø30mm 4+2PCS			

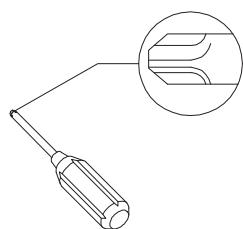

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

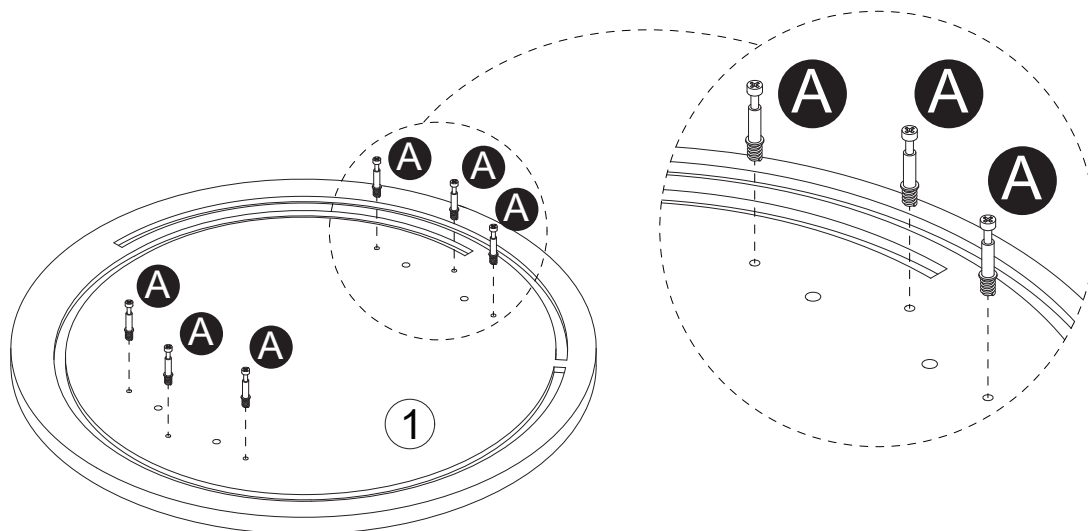


A x 6PCS

Step 2

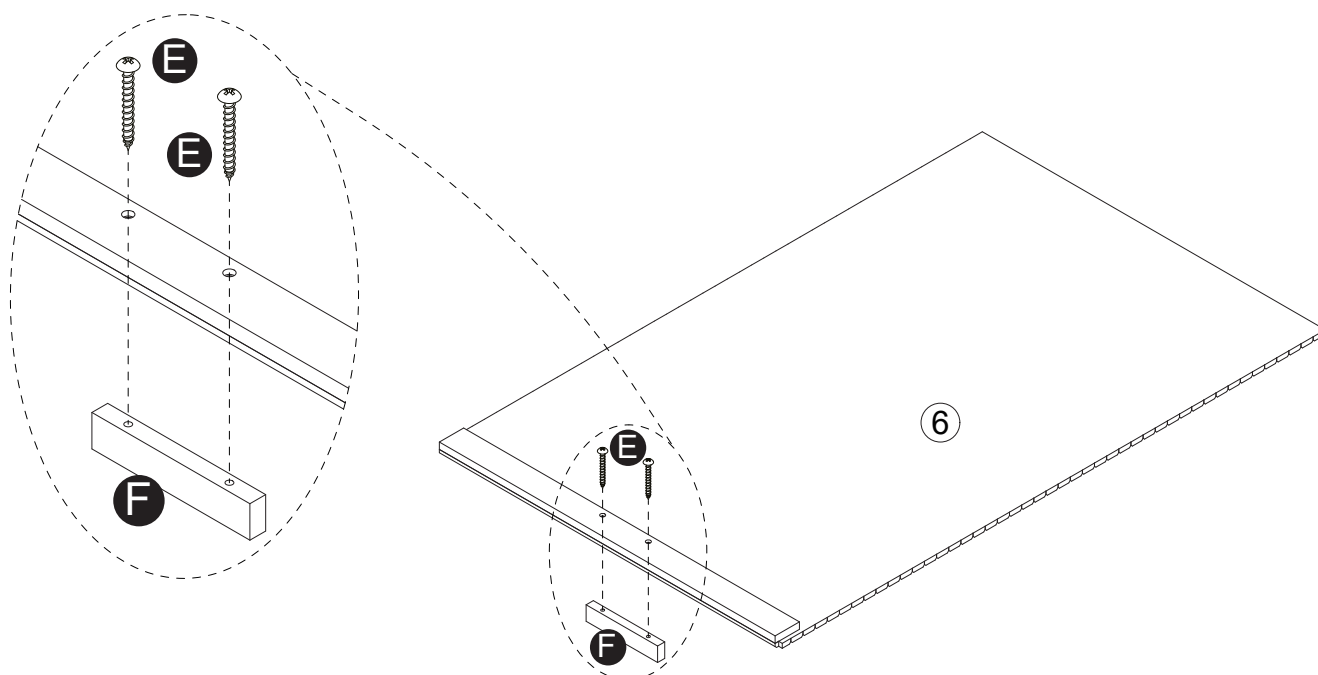


E x 2PCS



F x 1PC

Step 3

NOTE: The cam lock holes on both panel #5 and #8 are located at the top.

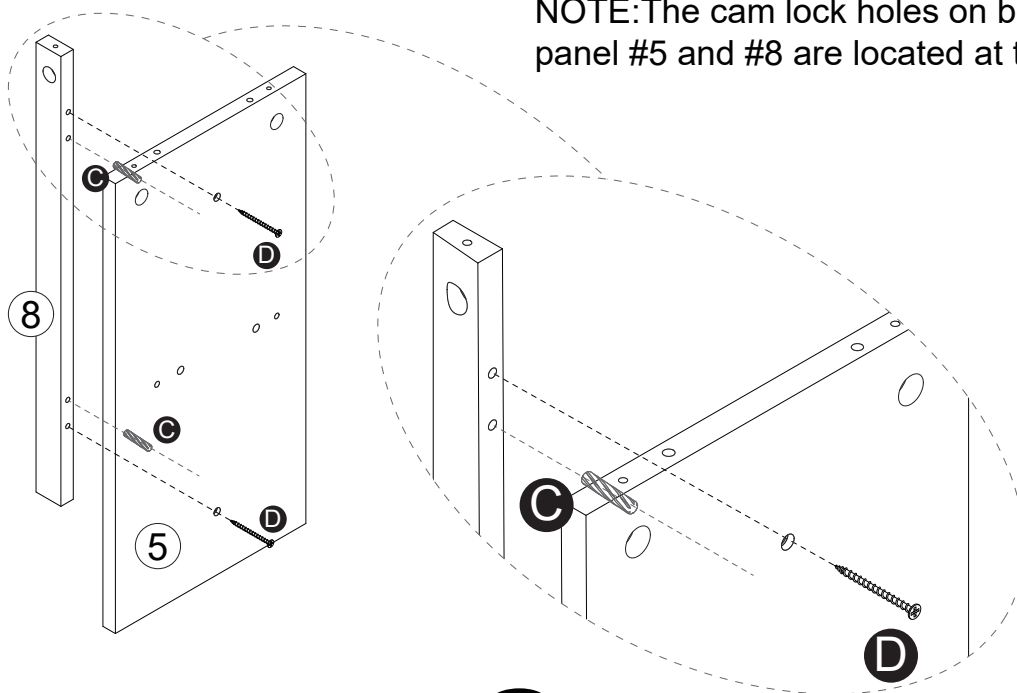


x2

	C x 4PCS
	D x 4PCS



Step 4

NOTE: The cam lock holes on panel #5 are located at the top.

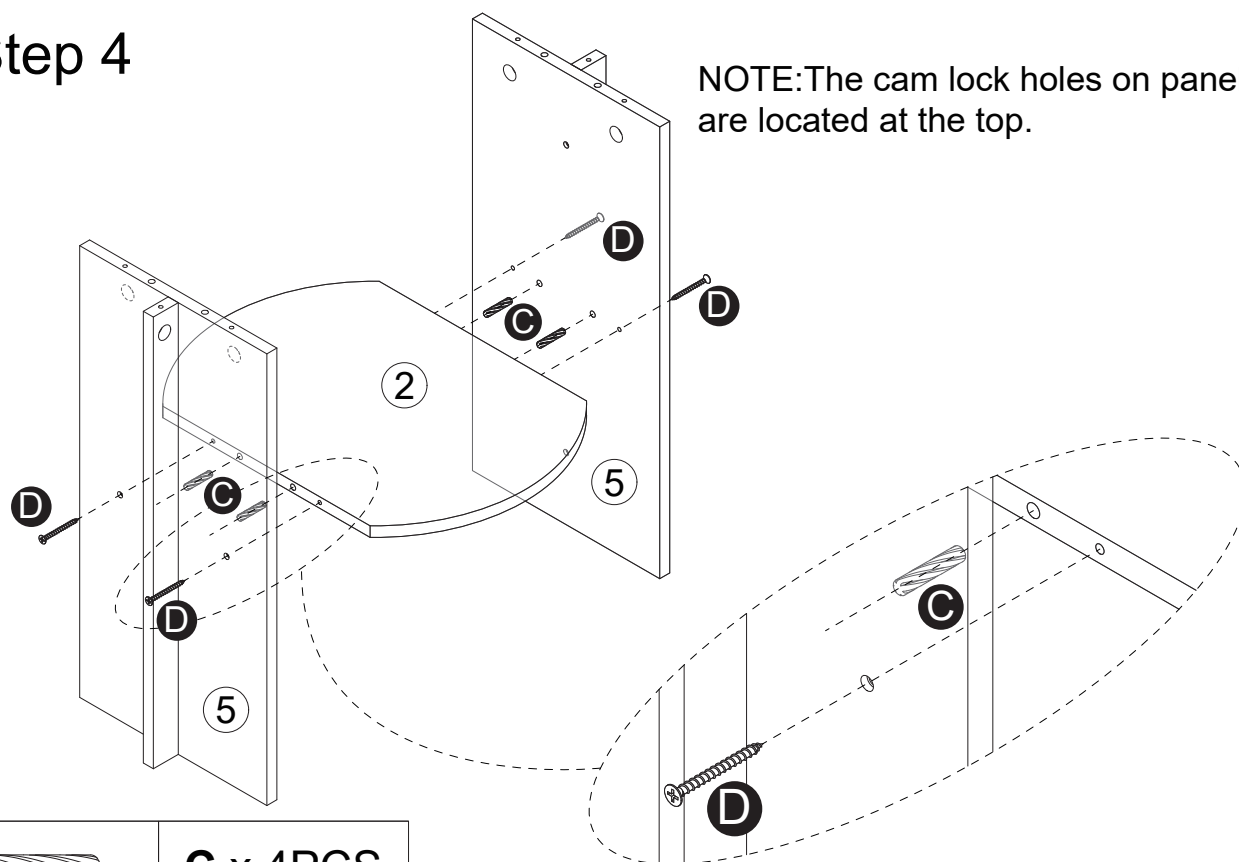


	C x 4PCS
	D x 4PCS


Step 5

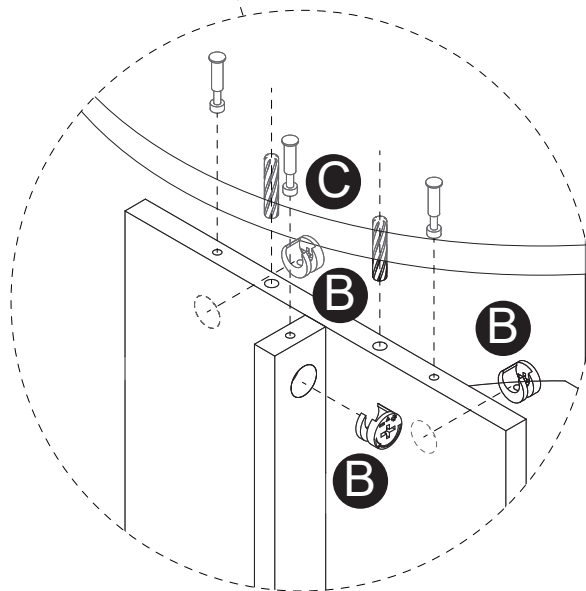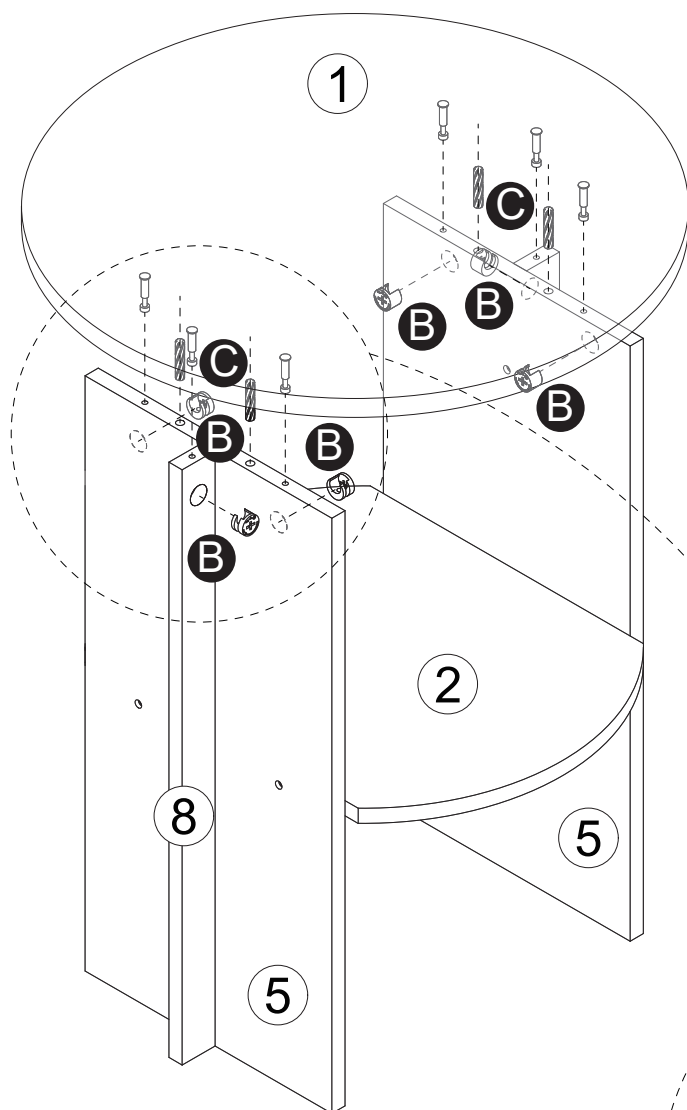

	B x 6PCS
	C x 4PCS

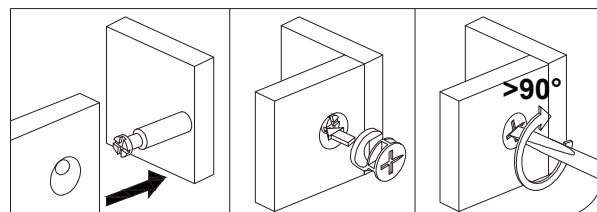


Step 6

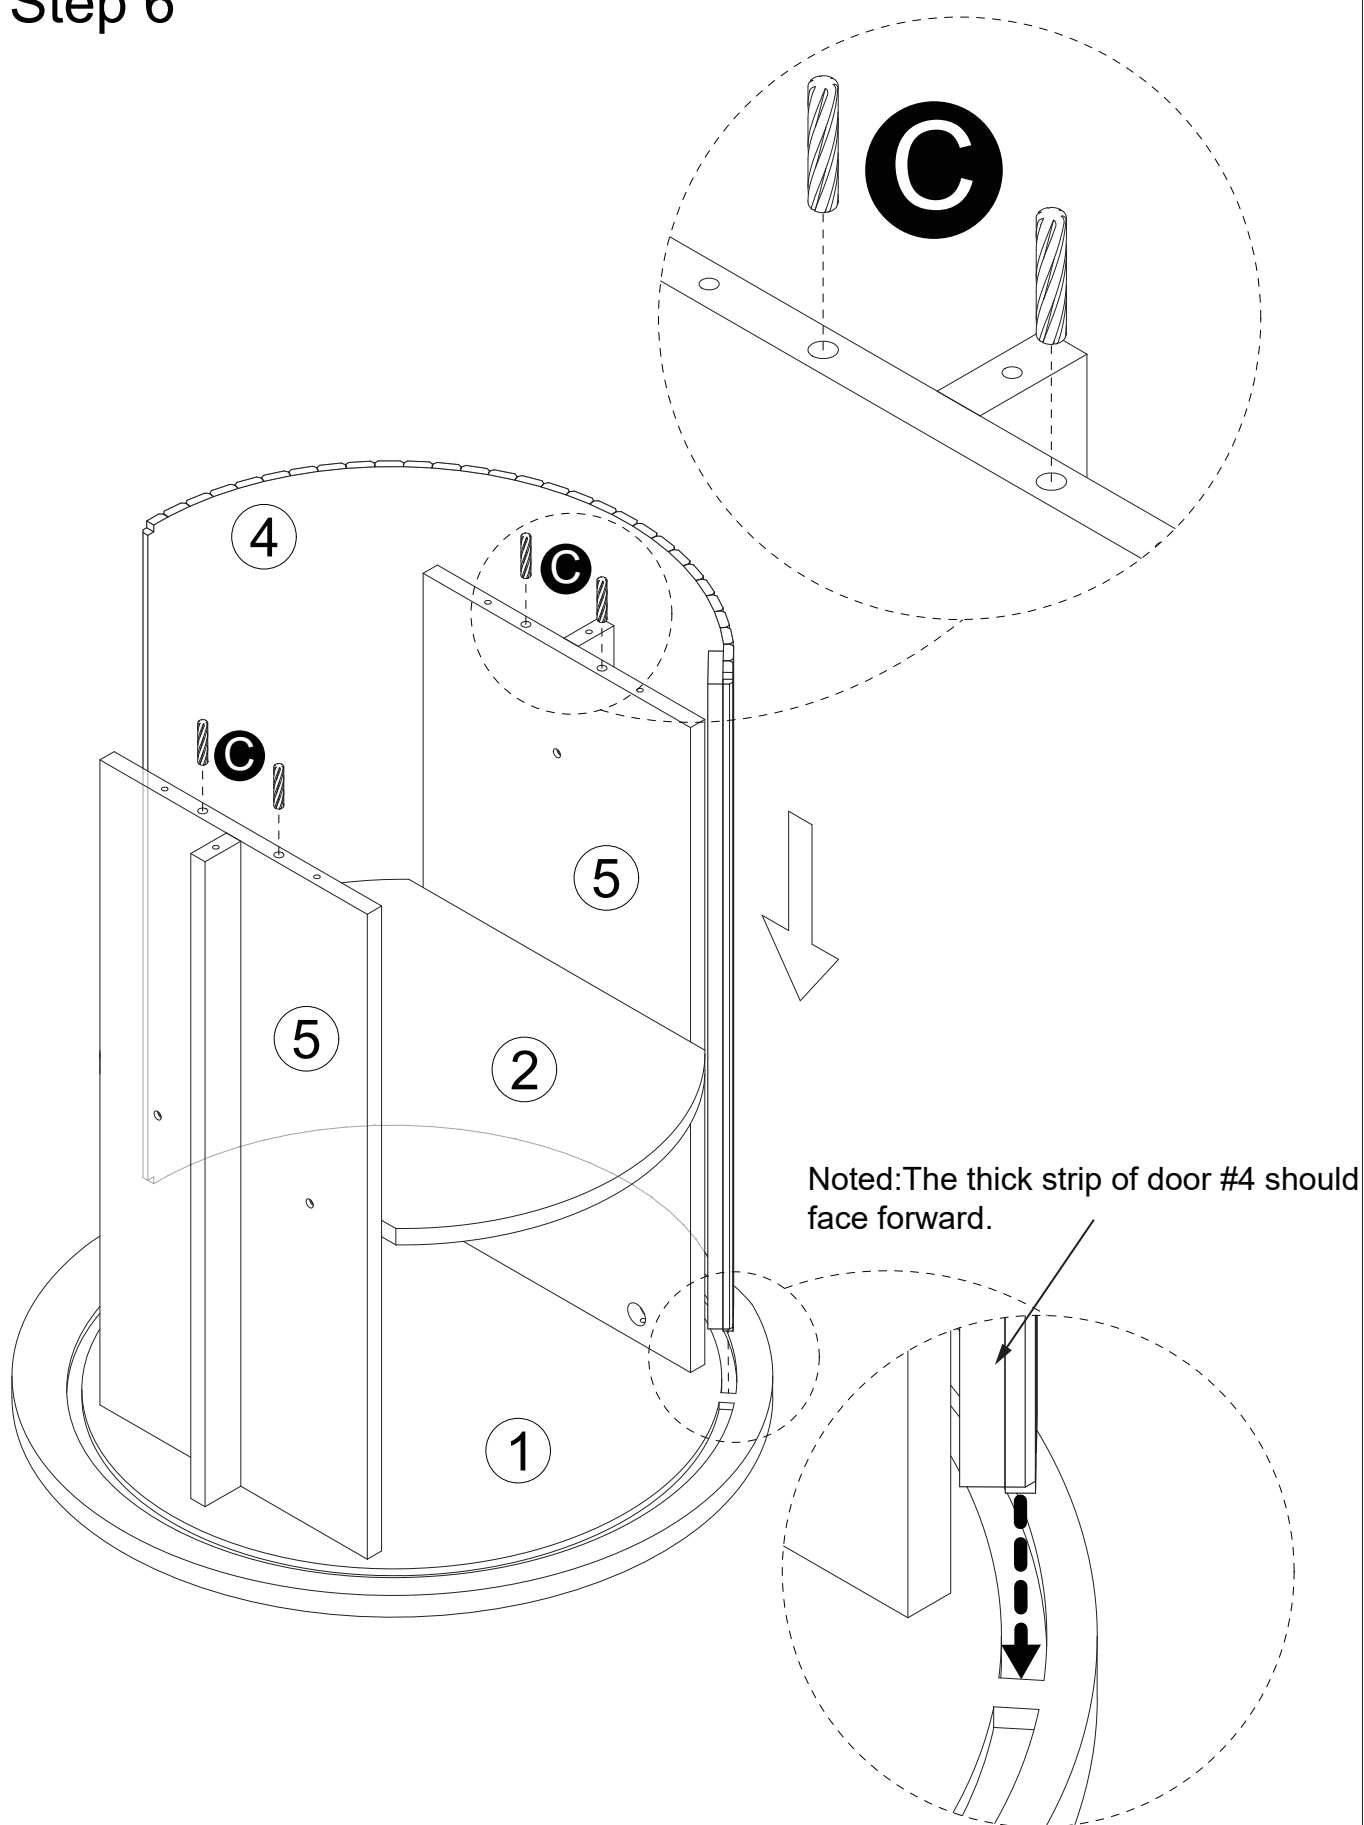



C x 4PCS

Step 7

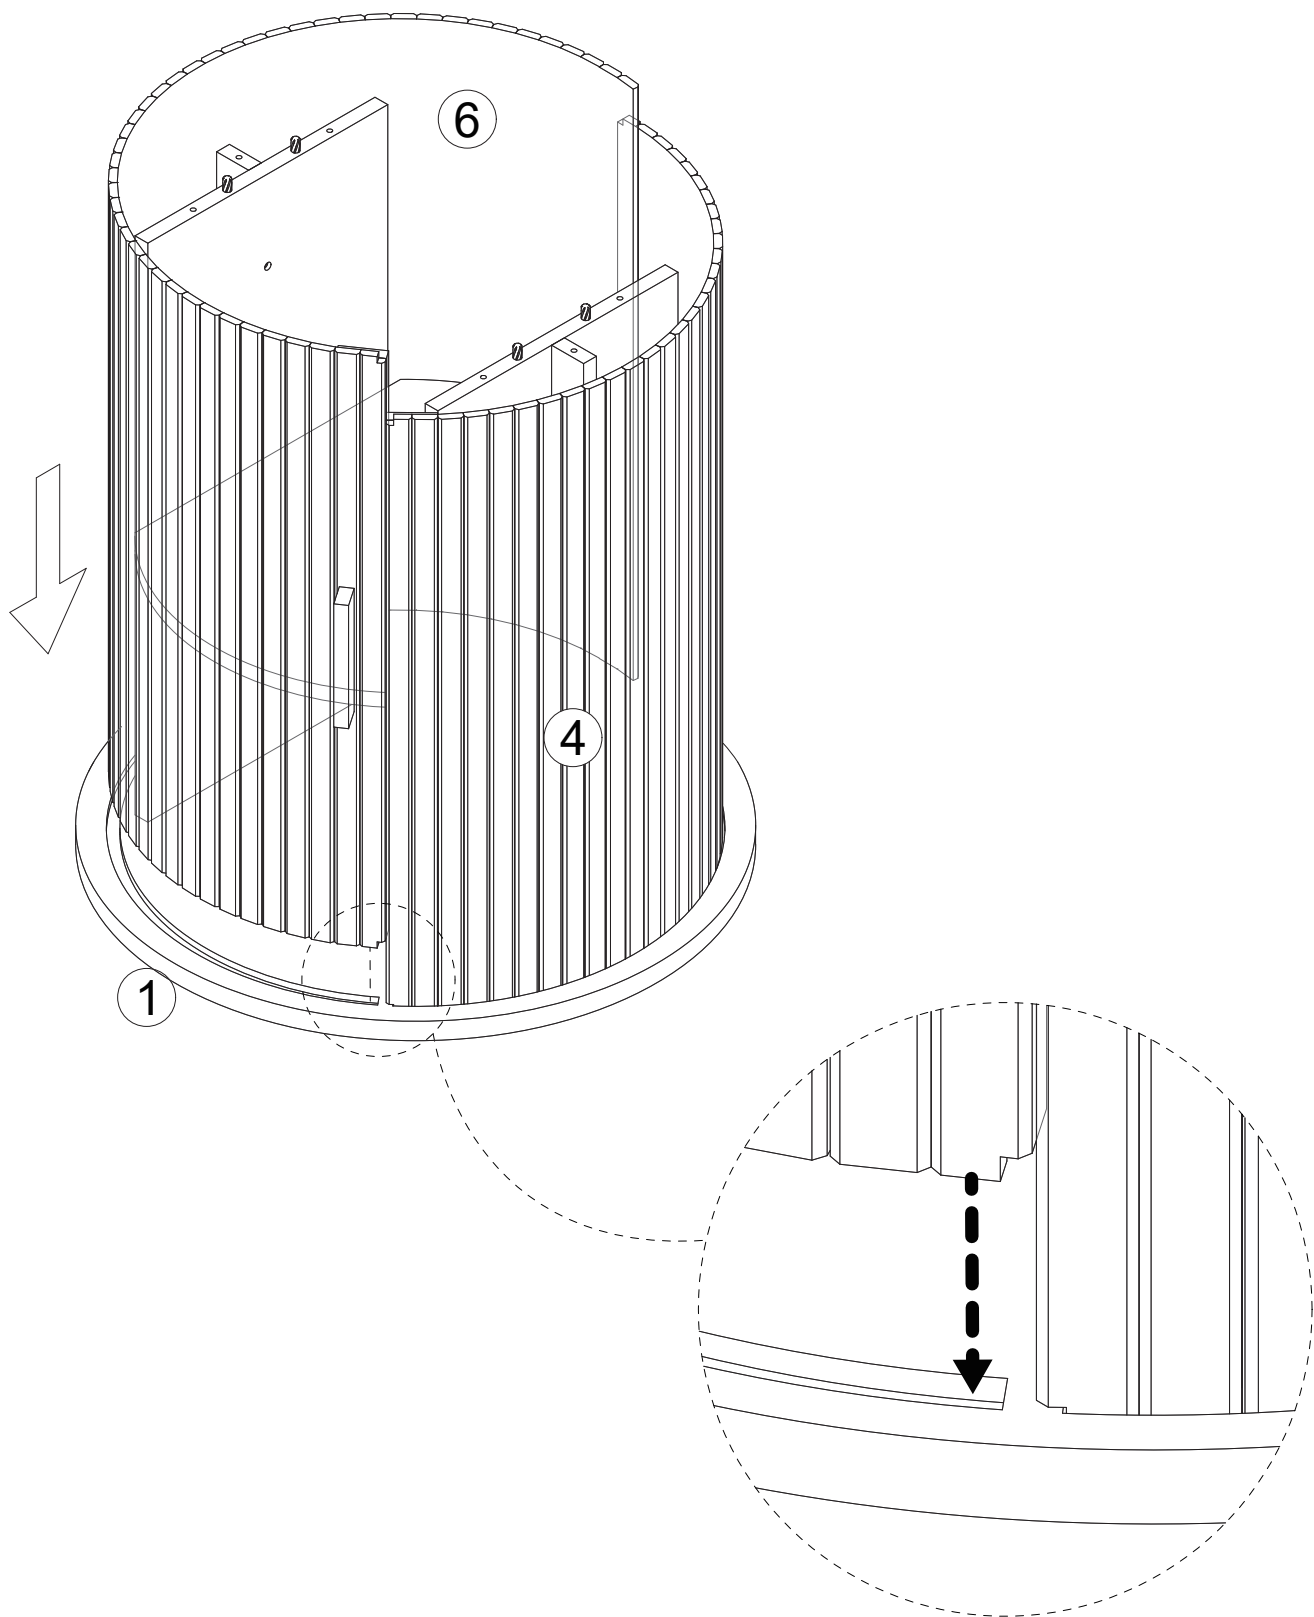

Step 8


Noted: Please put the frame on the desk so that you can see the dowel and hole, this will make the assembly easier.

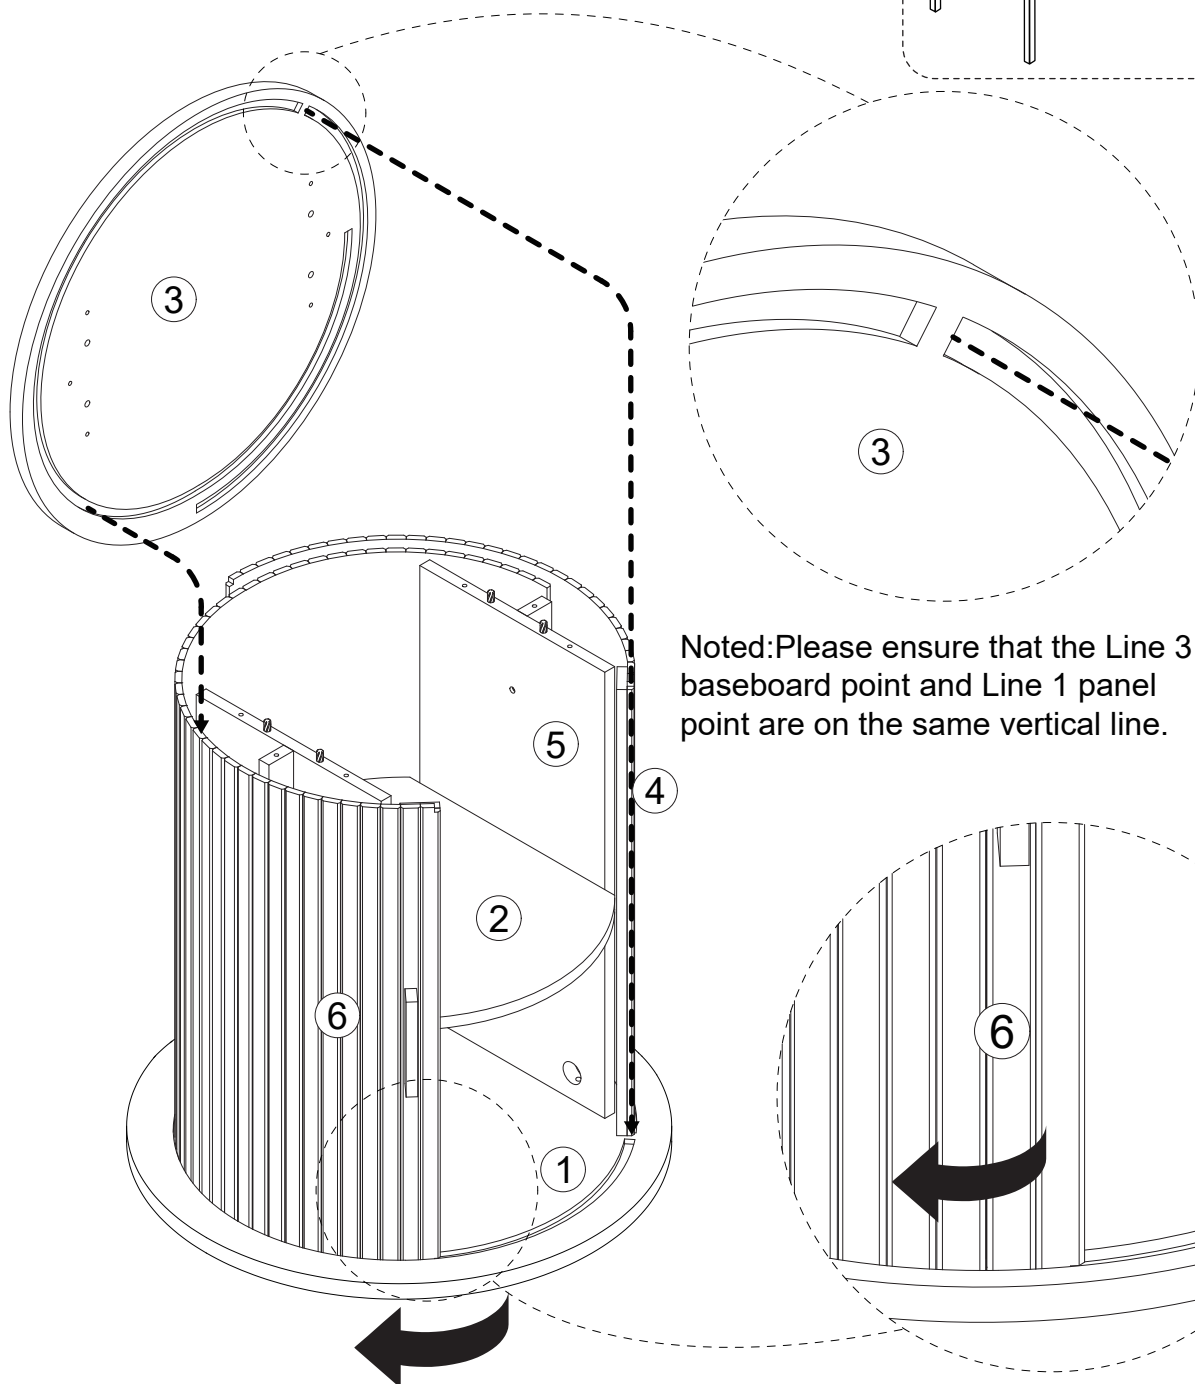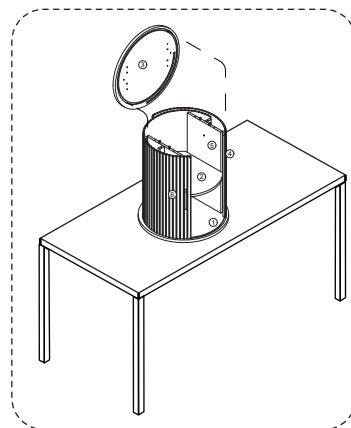

Noted: Please ensure that the Line 3 baseboard point and Line 1 panel point are on the same vertical line.

Noted: Please push the door 6 to the position as shows first, then assemble the bottom panel 3.

Step 9

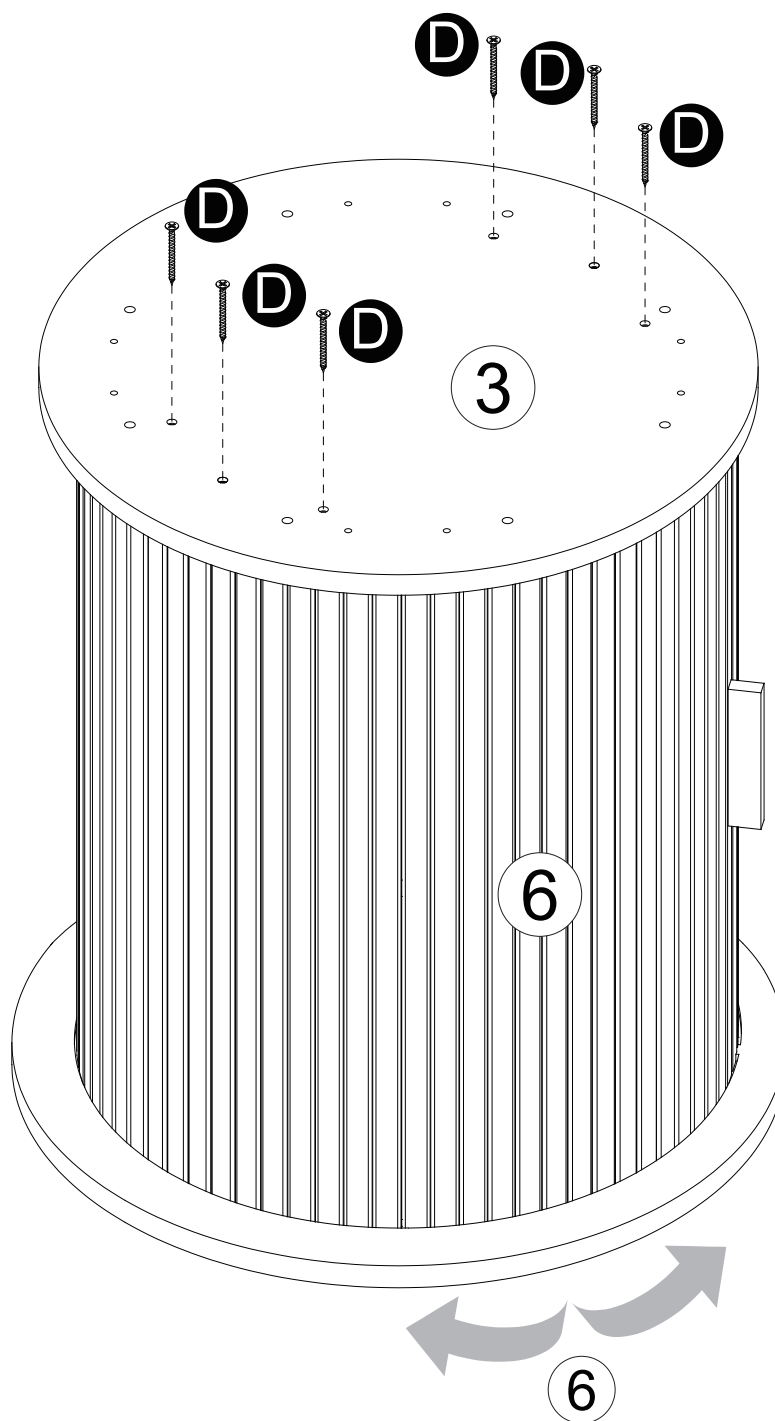


Noted:

Before tightening the bottom panle 3 with screws,slide the door 6 first to ensure the door sliding smothly,then tighten with screws.
If door 6 is blocked,please unscrew the screw D,reassemble the bottom panel 3.




D x 6PCS

Step 10

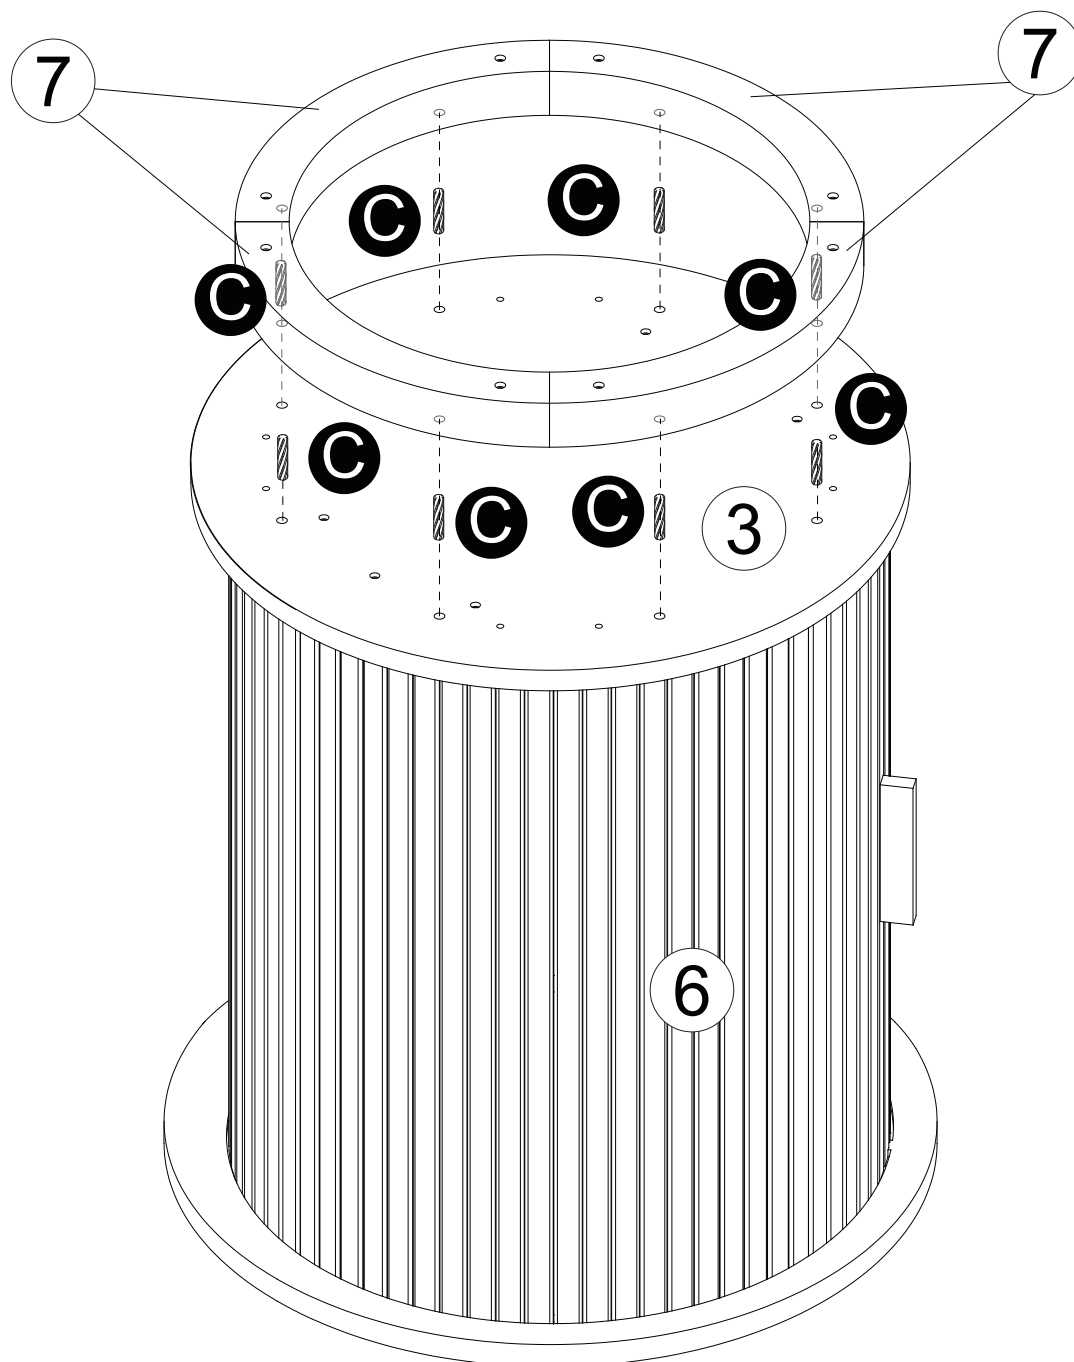


C x 8PCS

Step 11

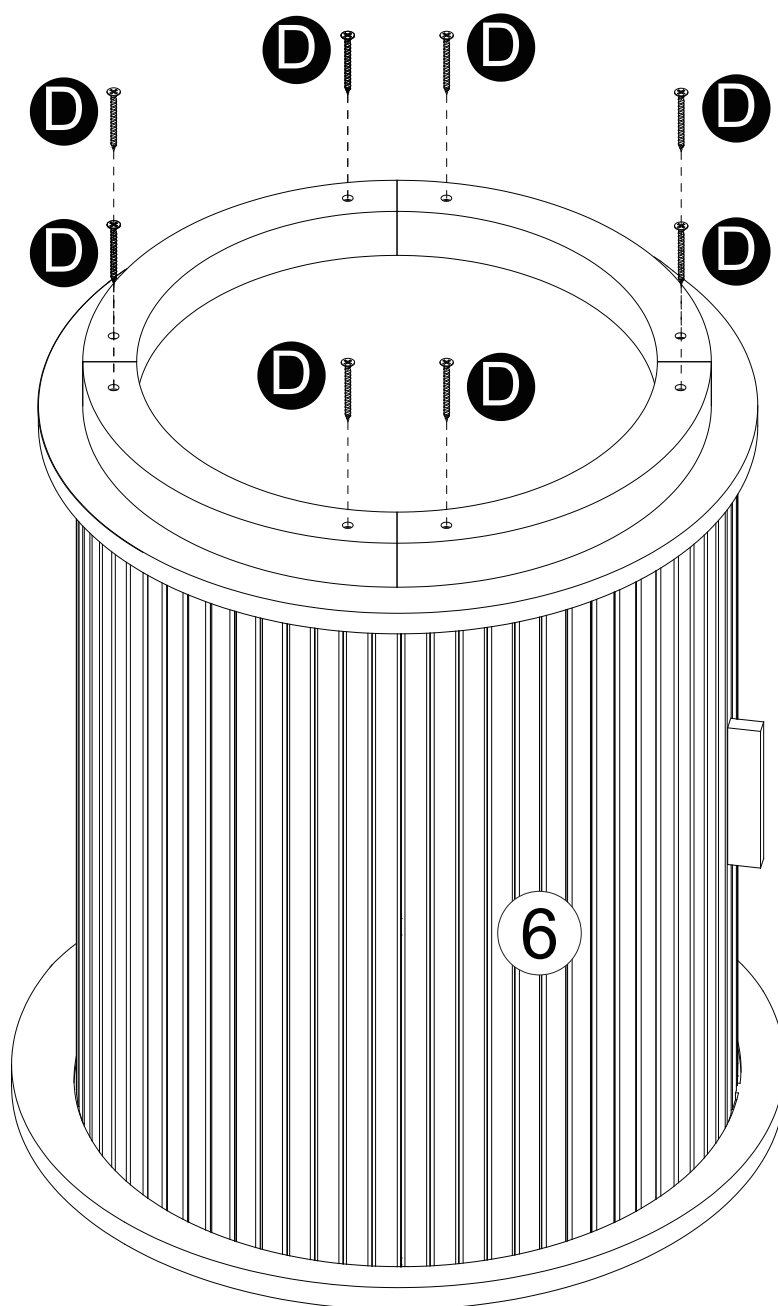

D x 8PCS

Step 12

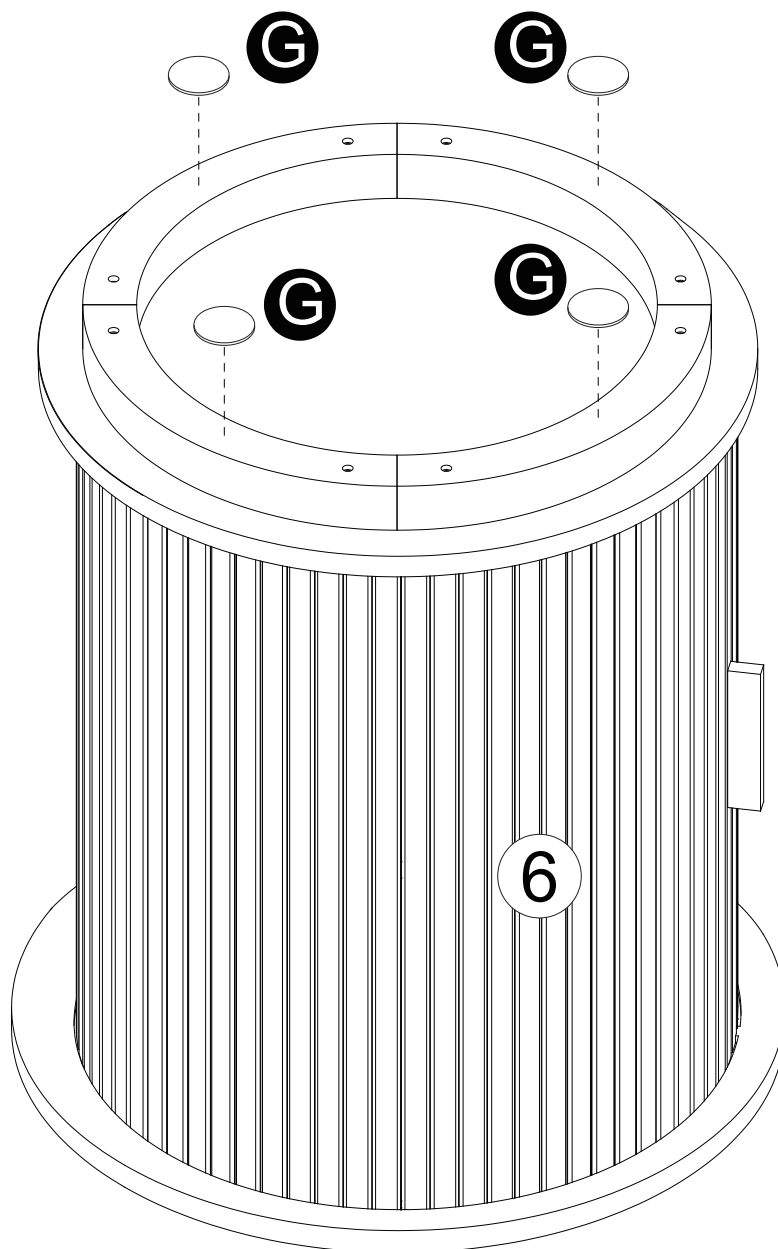

G x 4PCS