









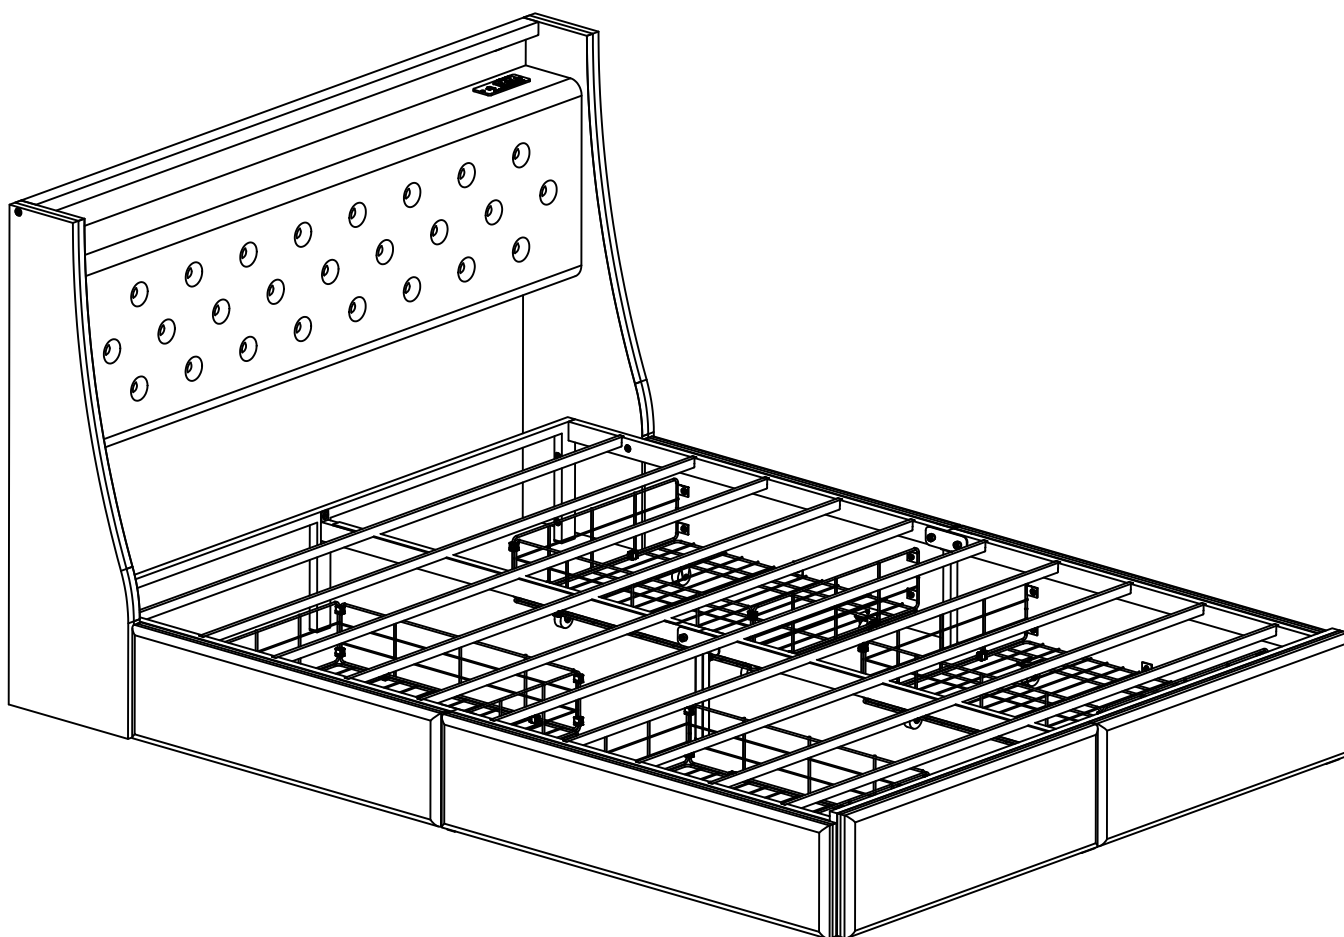






Model: C336-Q






Please Scan the QR code to watch the tutorial video







Parts List:

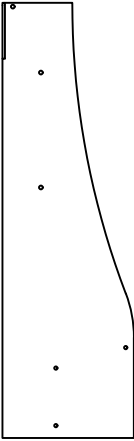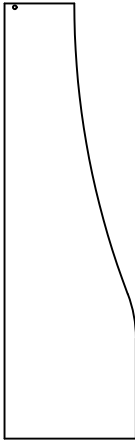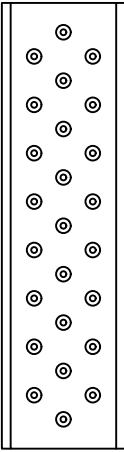

								
A1 1pcs	A2 1pcs	B 1pcs	C 1pcs	D 1pcs	E 2pcs	F 2pcs	G 2pcs	H 1pcs

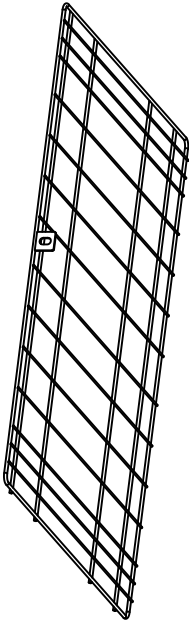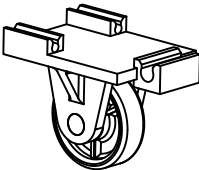					
Z2 8pcs	Z3 4pcs	Z4 4pcs	Z5 16pcs	Q1 40pcs	Z8 4pcs
M6x10mm					


							
M4x15mm	M6x15mm	M6x30mm	M6x40mm	M6x45mm	M6x55mm	M8x15mm	M8x35mm
V 14pcs	T1 24pcs	T2 6pcs	T3 4pcs	T4 4pcs	T5 4pcs	Y3 4pcs	Y1 8pcs

Parts List:

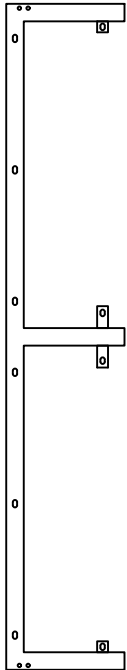
				
I	J	K	L	M
1pcs	1pcs	1pcs	1pcs	10pcs

			
Ø6xØ18mm	KEY 4		
X	W	U1	U3
8pcs	1pcs	1pcs	1pcs


Step 1

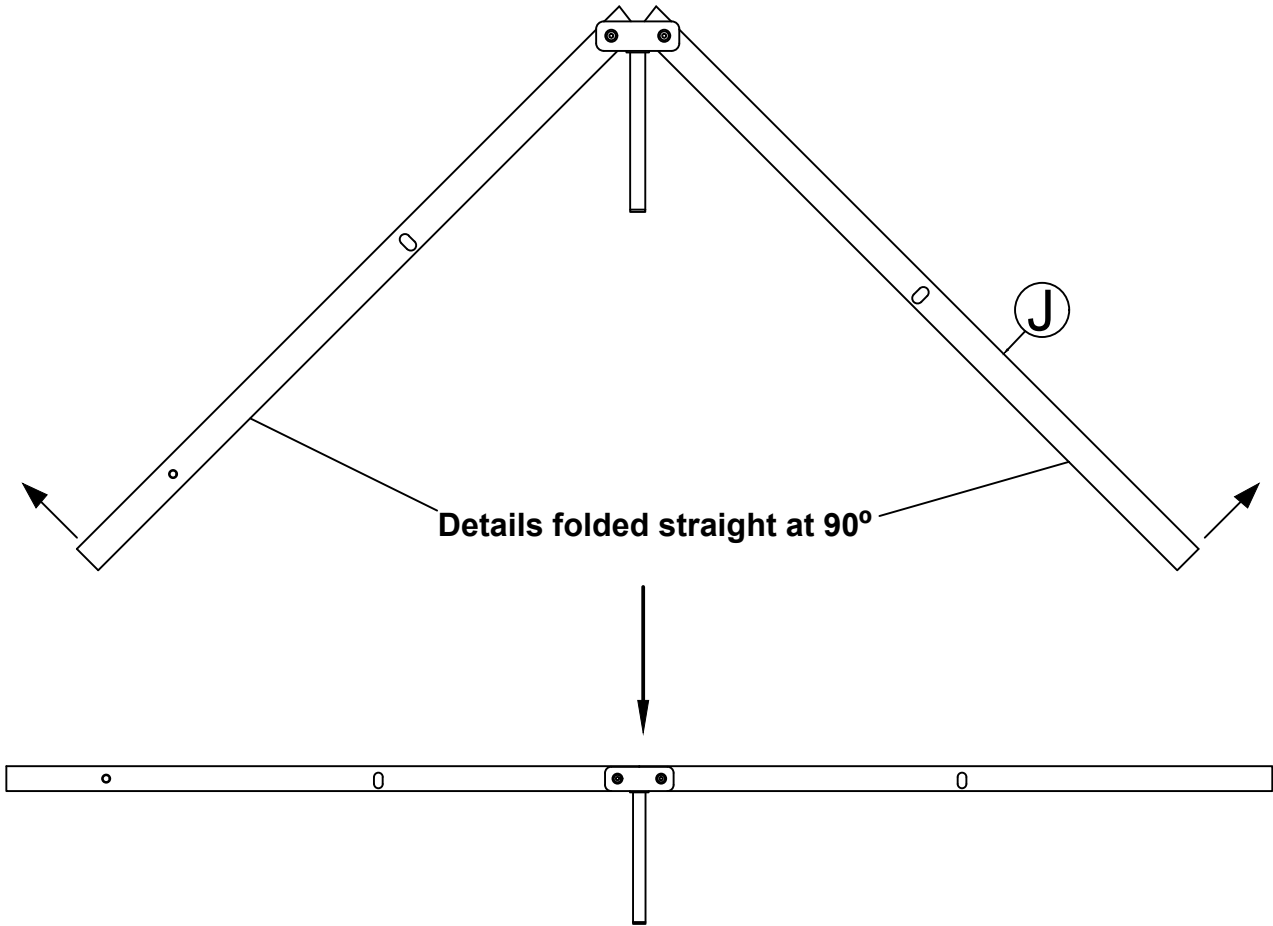


Step 2

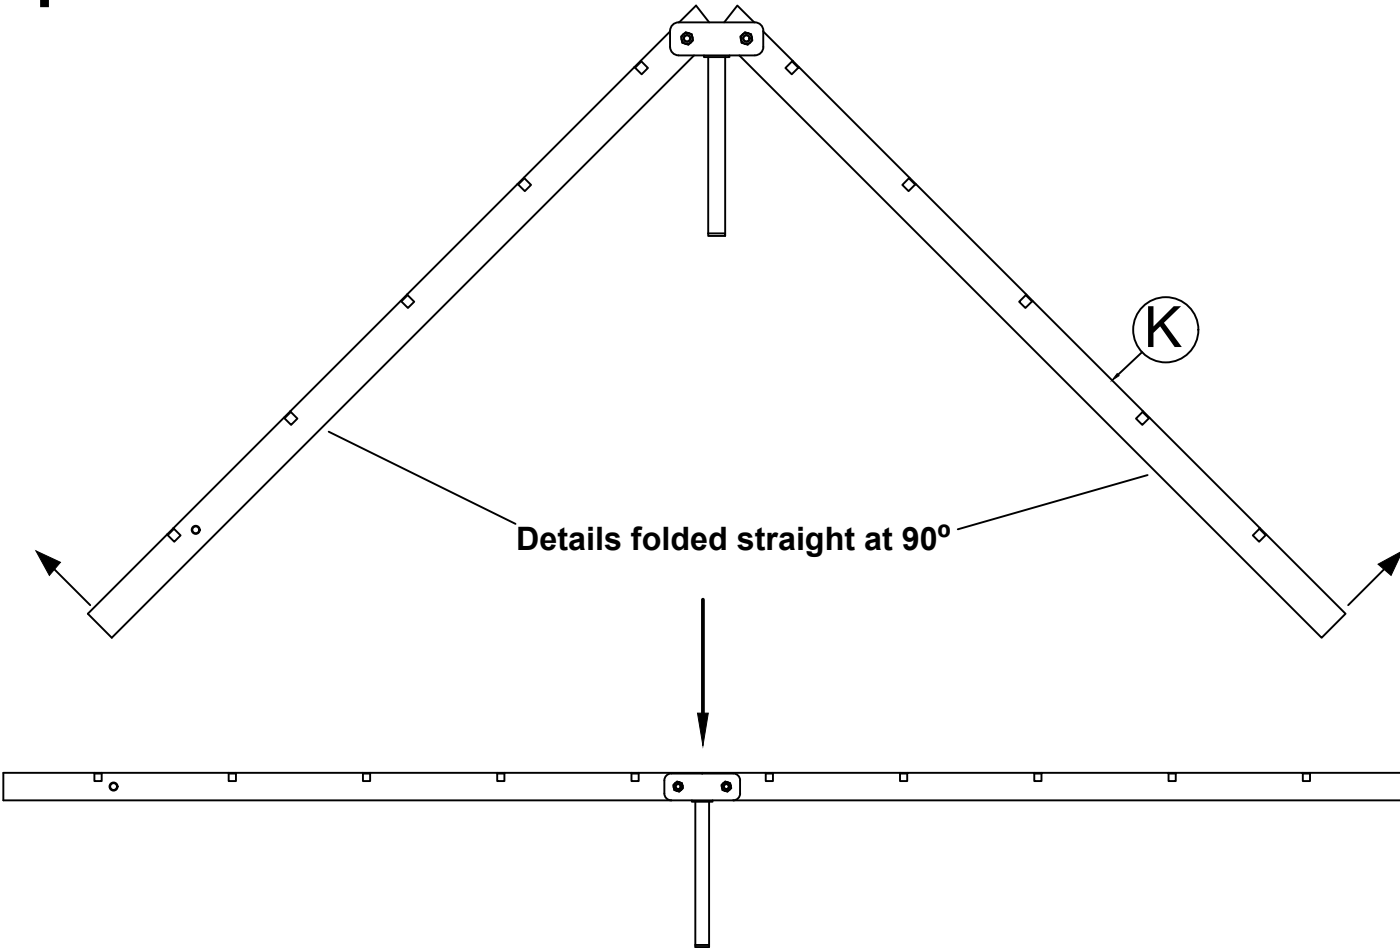


Step 3

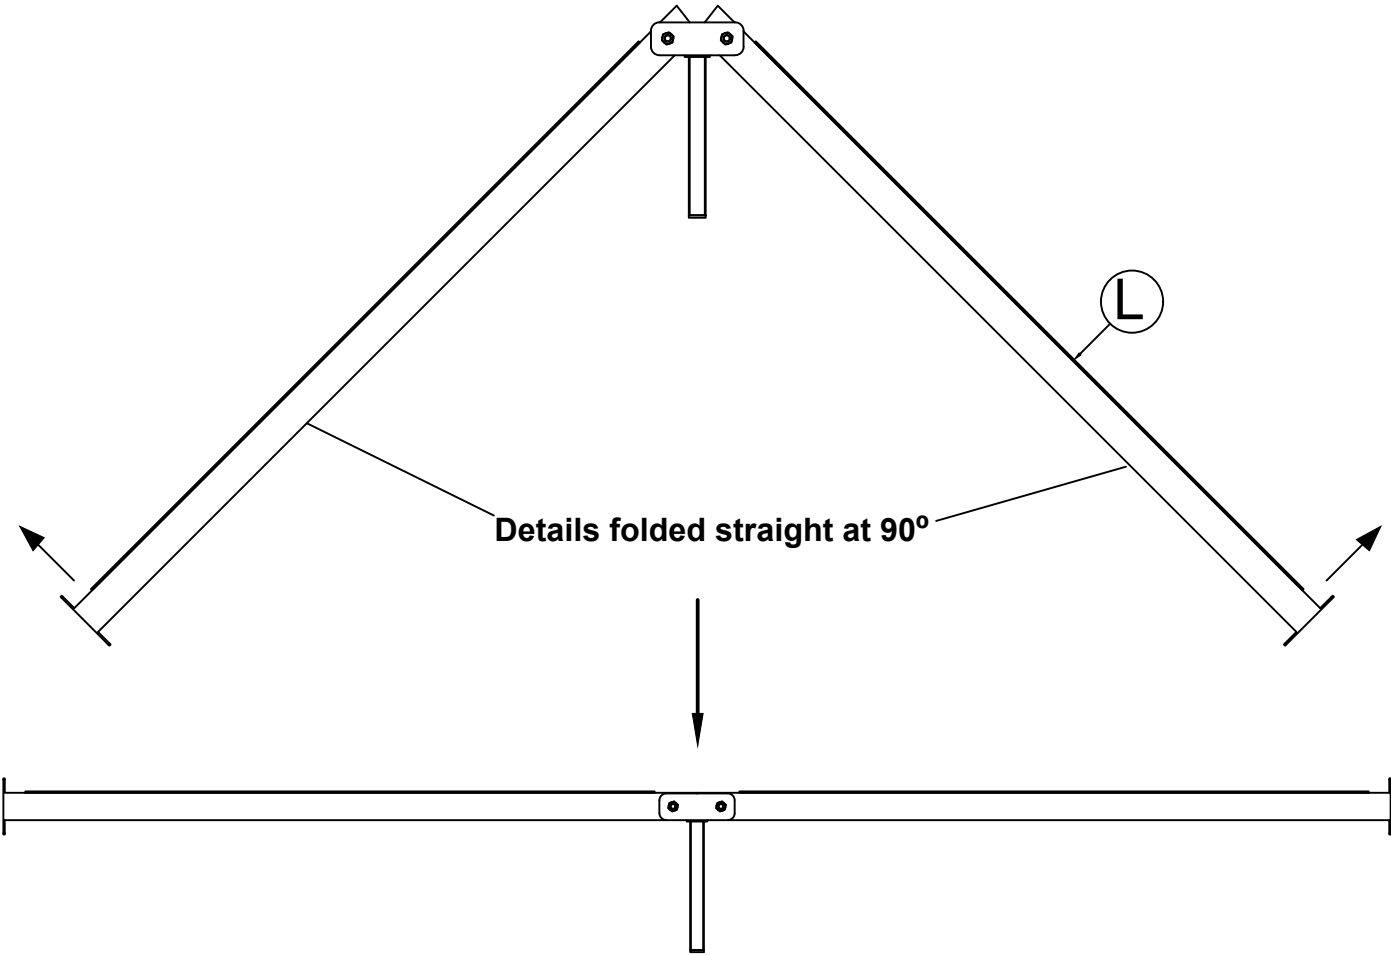


Step 4

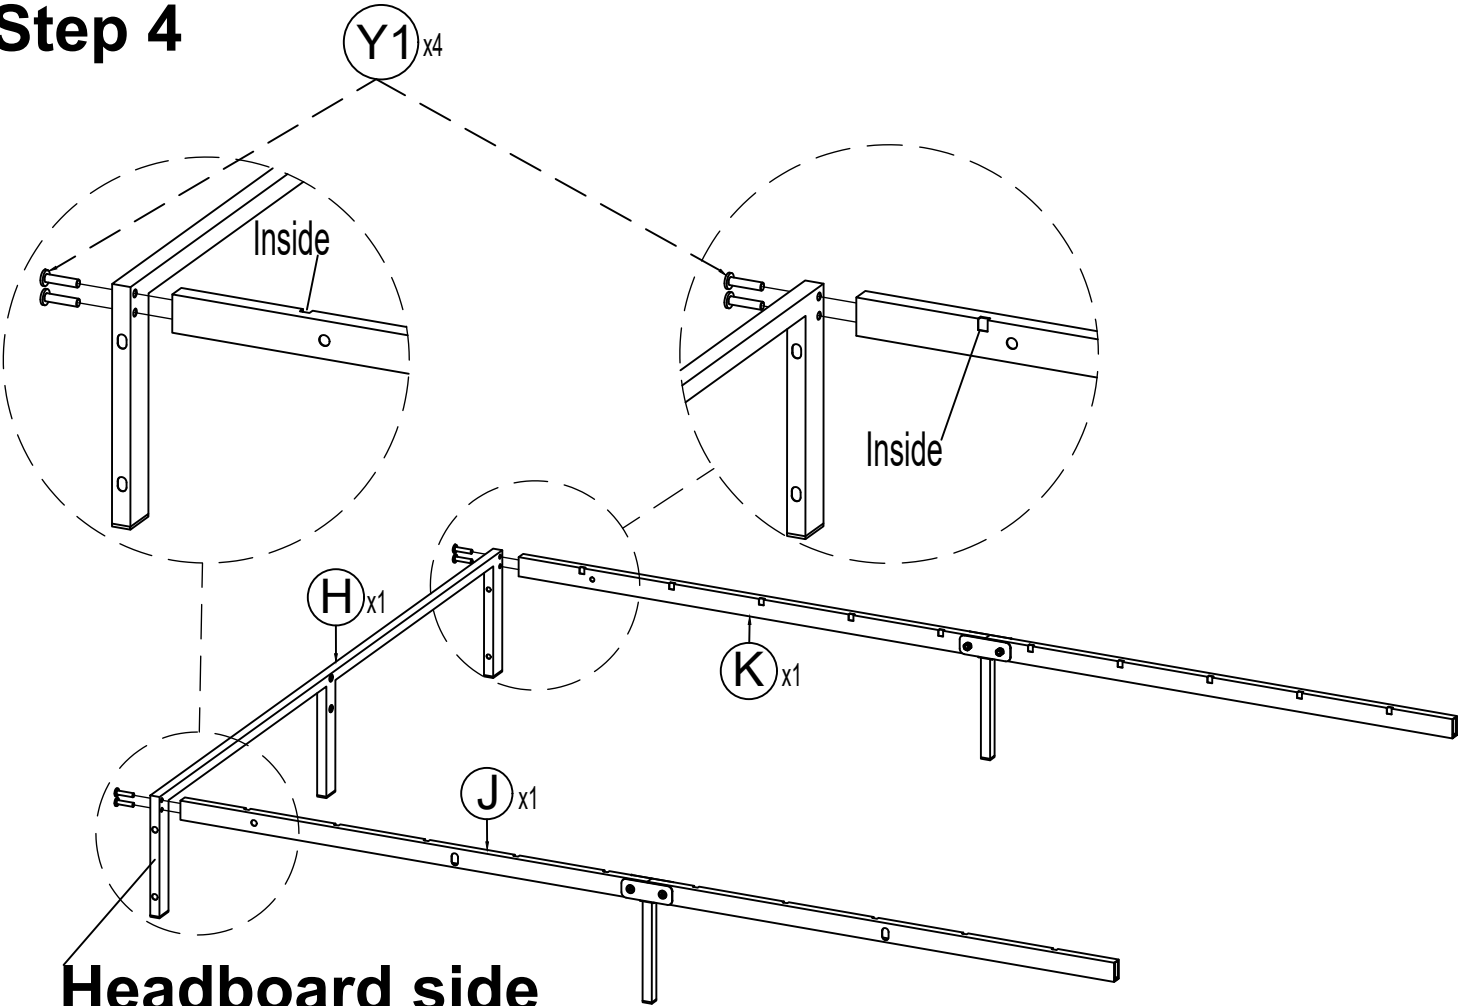

Step 5

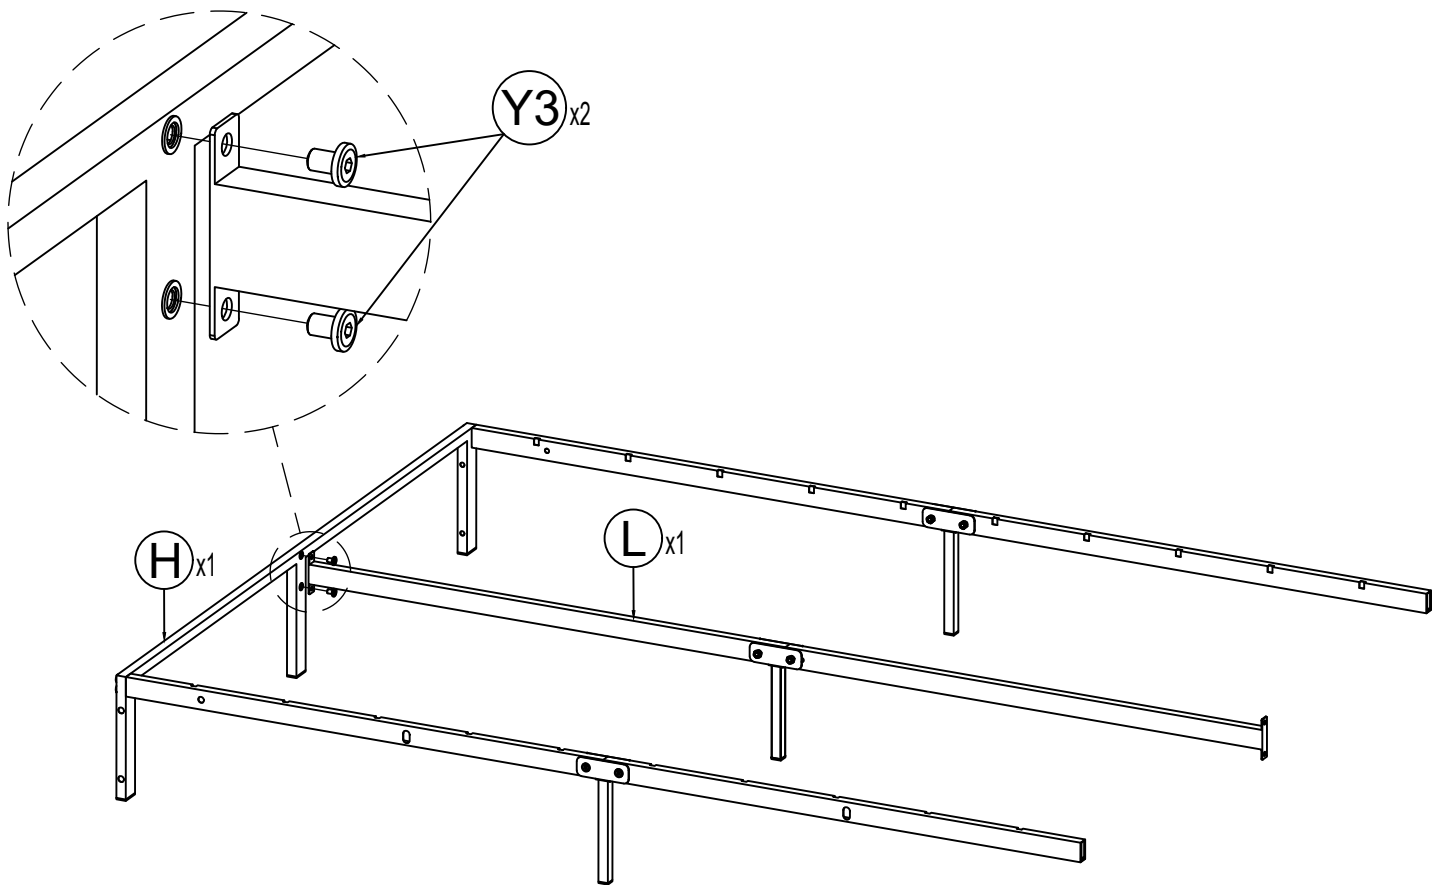


Step 6

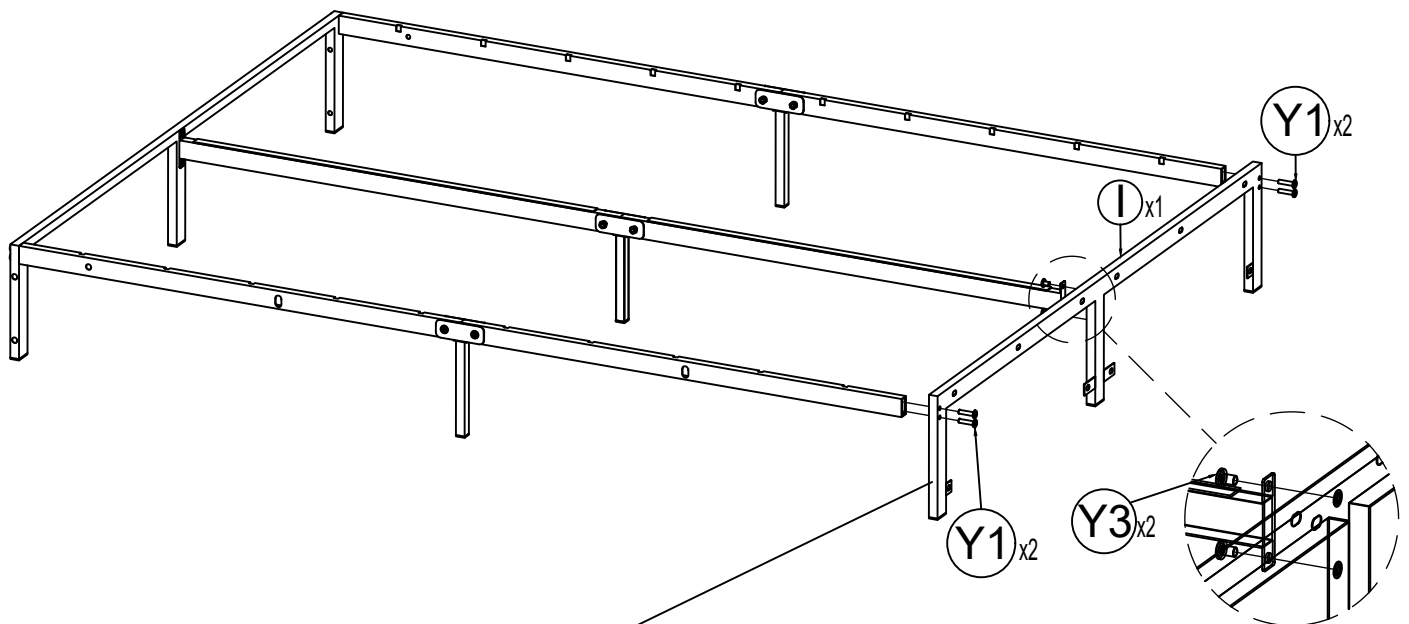


Footboard side


Step 7

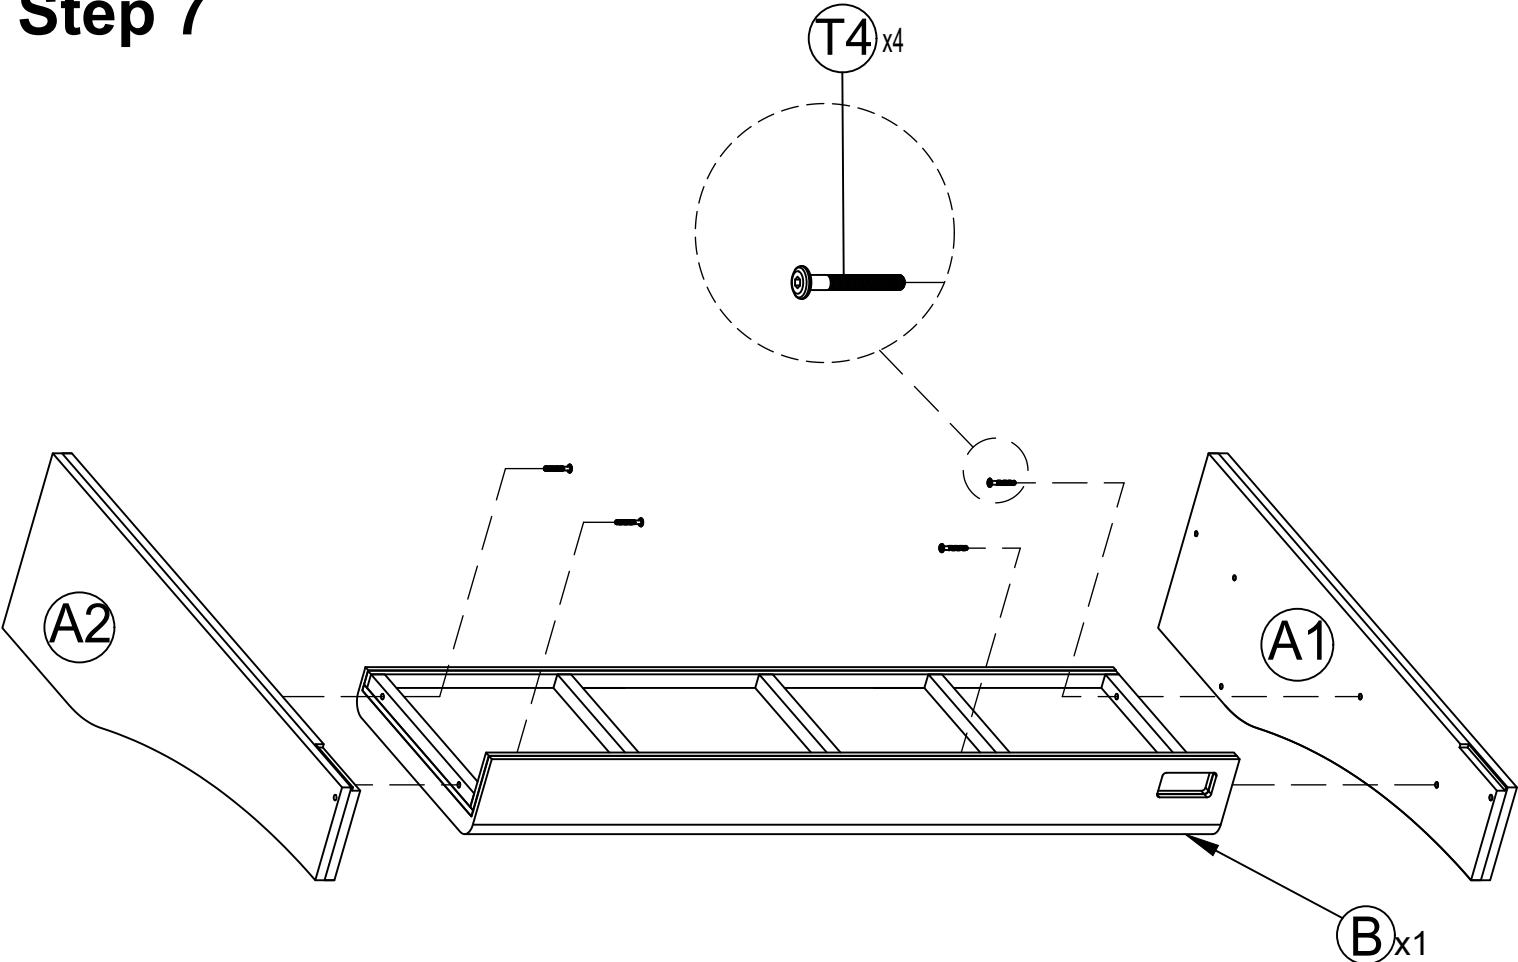

Step 8

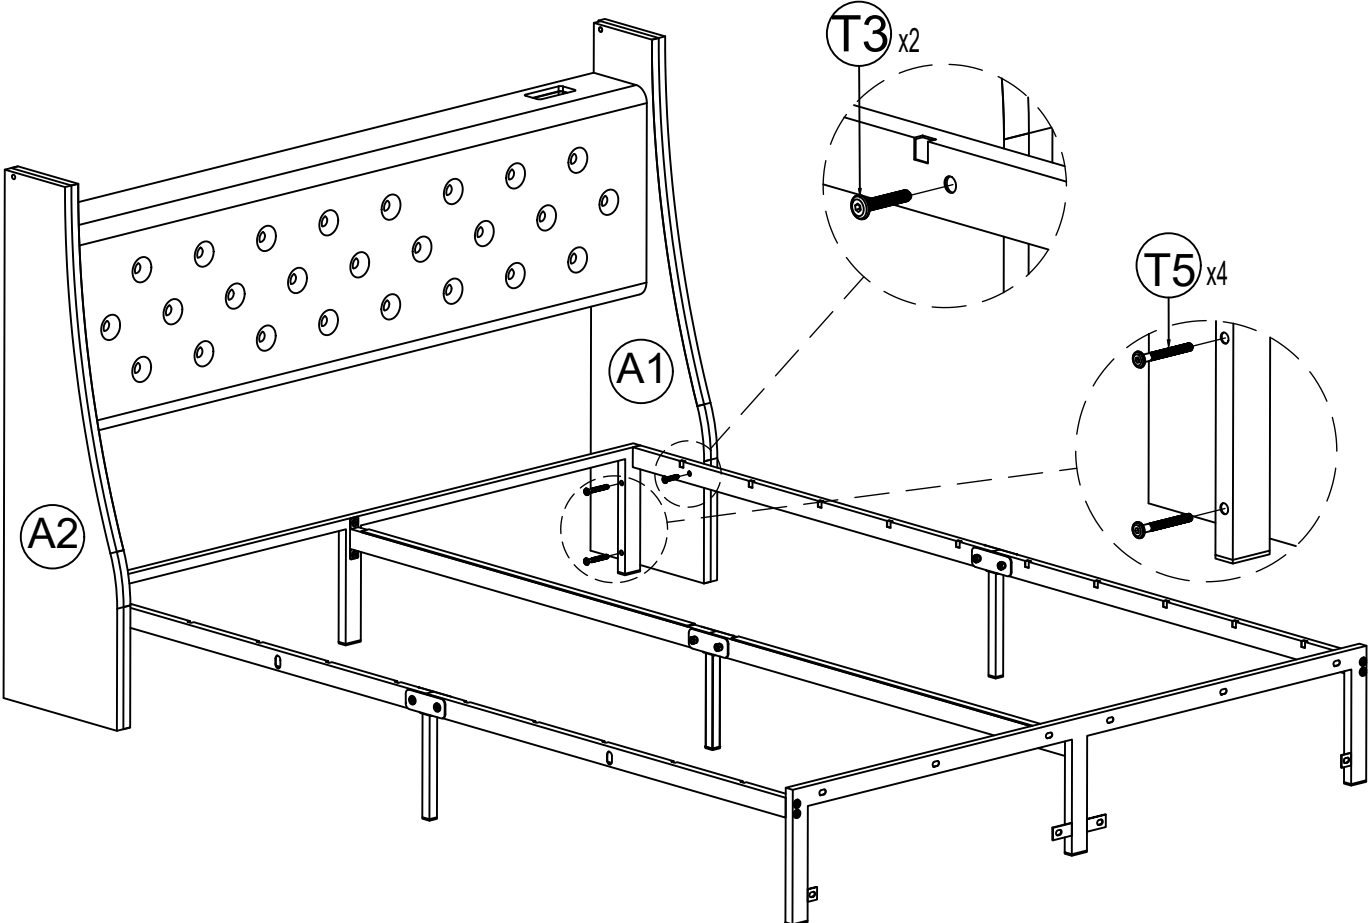


Step 9

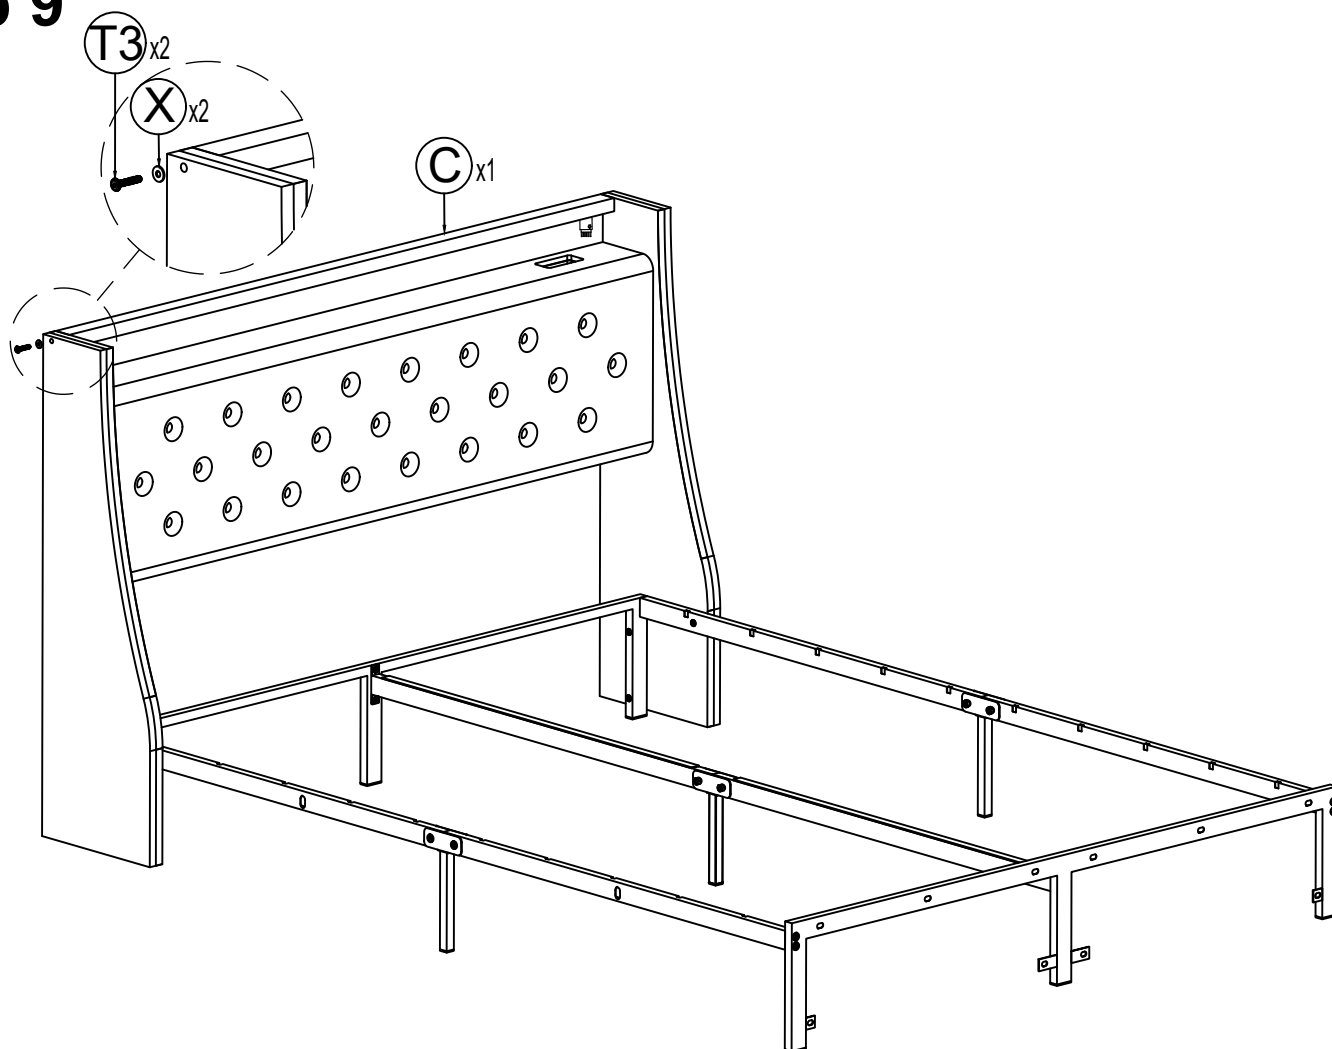


Step 10


We suggest using drill machine to install "V" screws

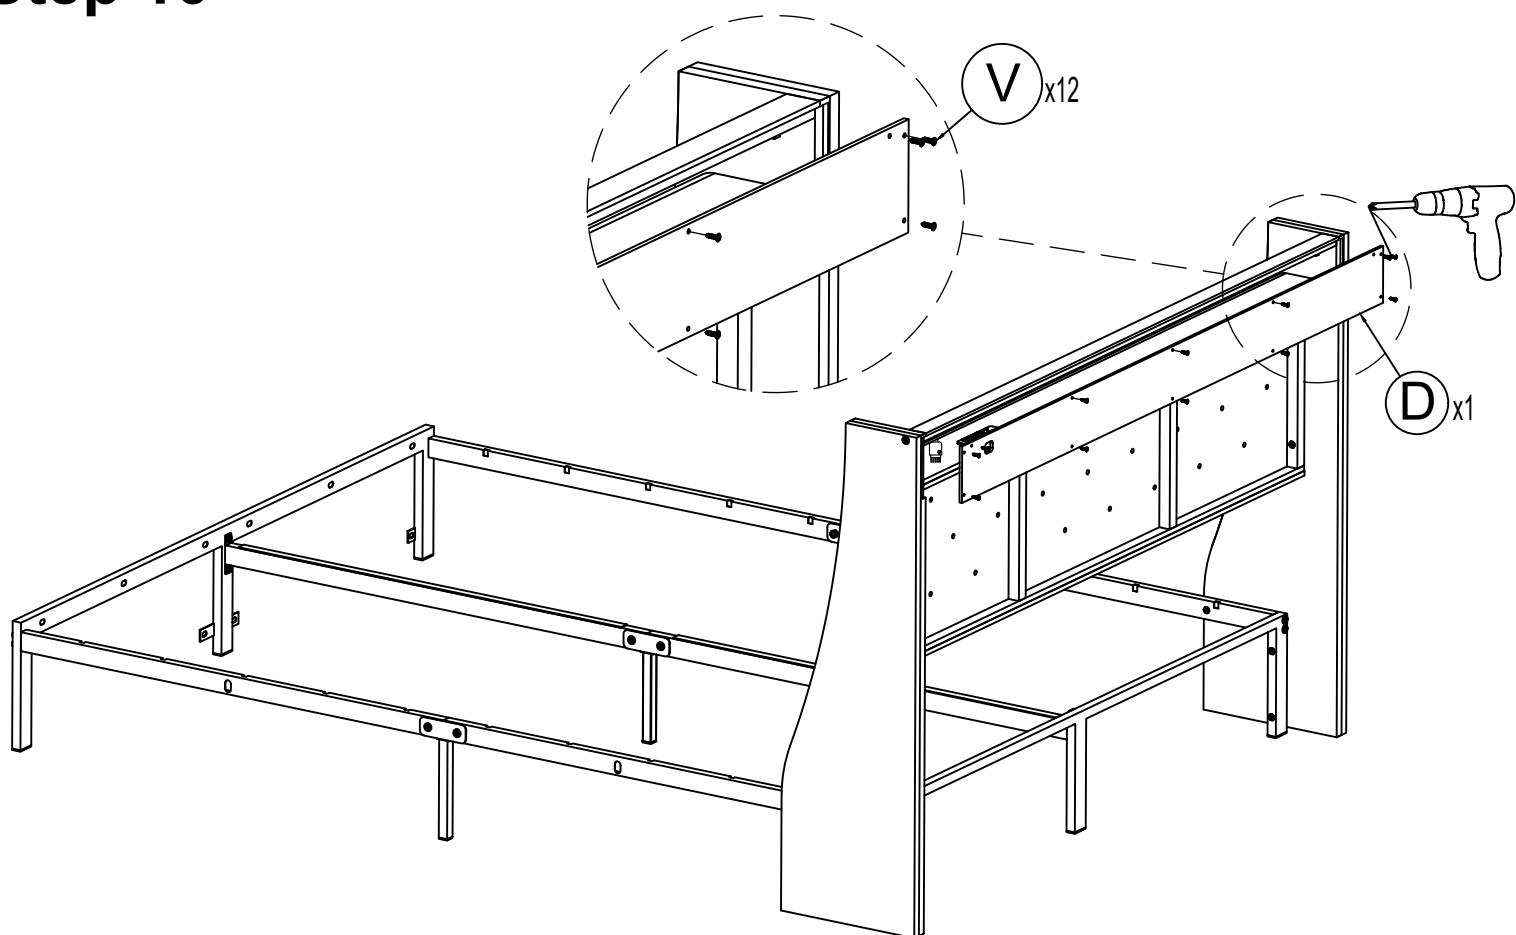

Step 11

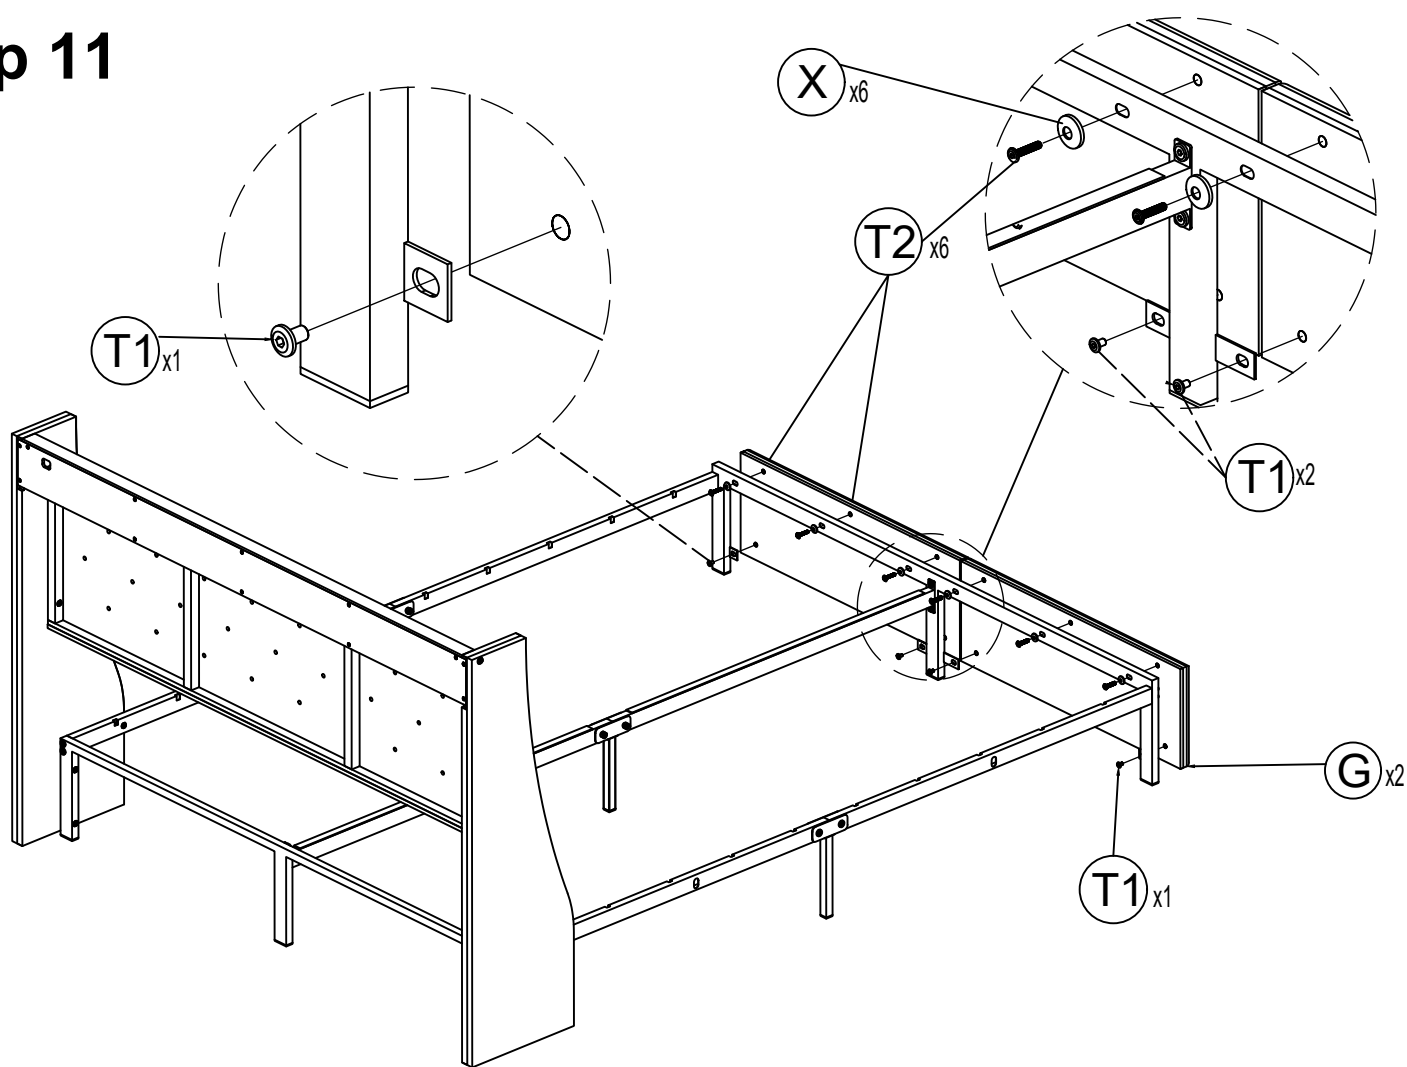


Step 12

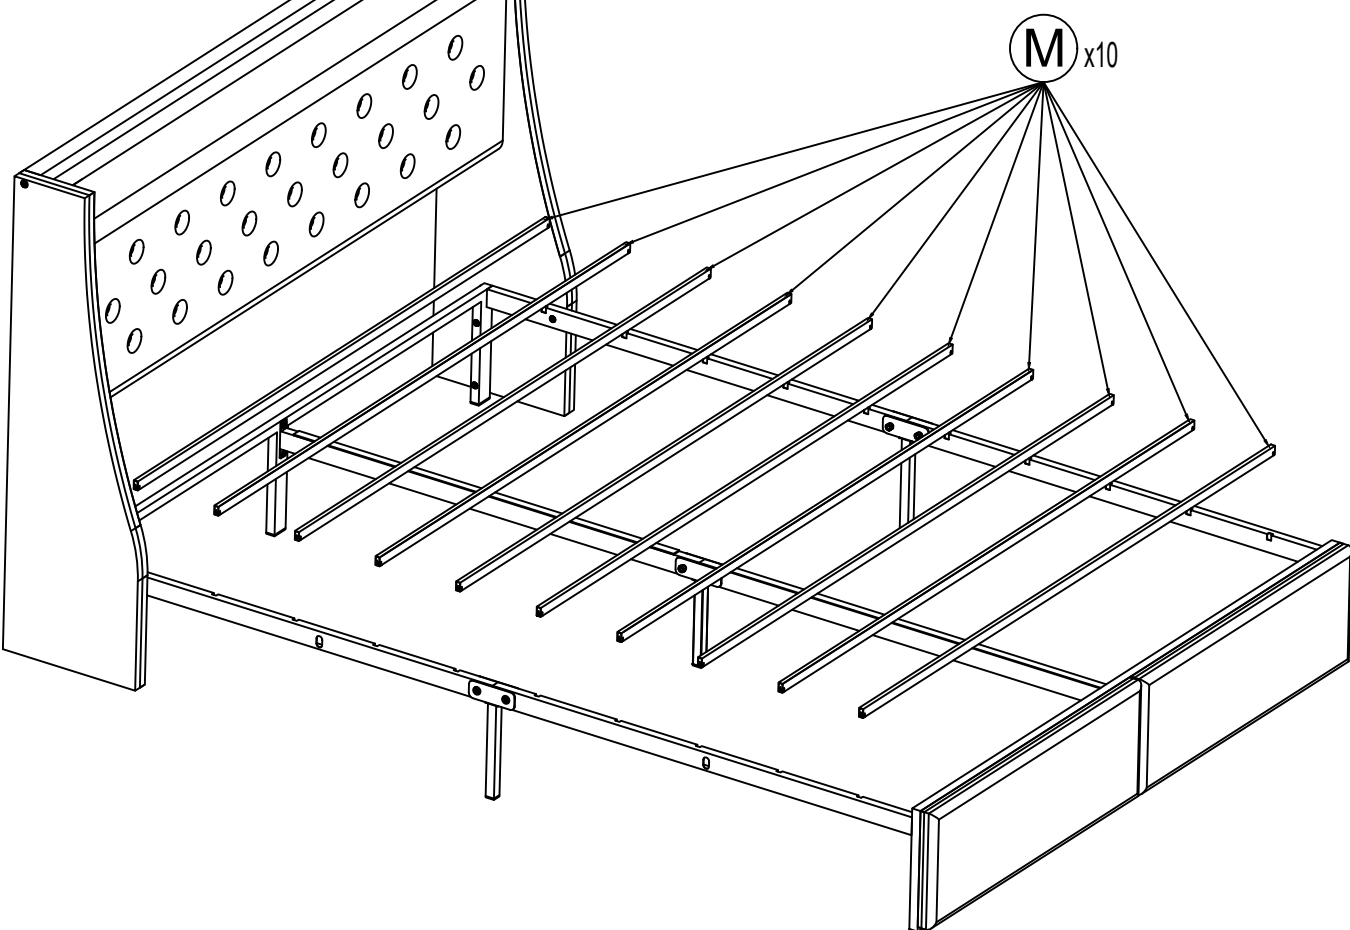


Step 13

We suggest using drill machine to install "V" screws

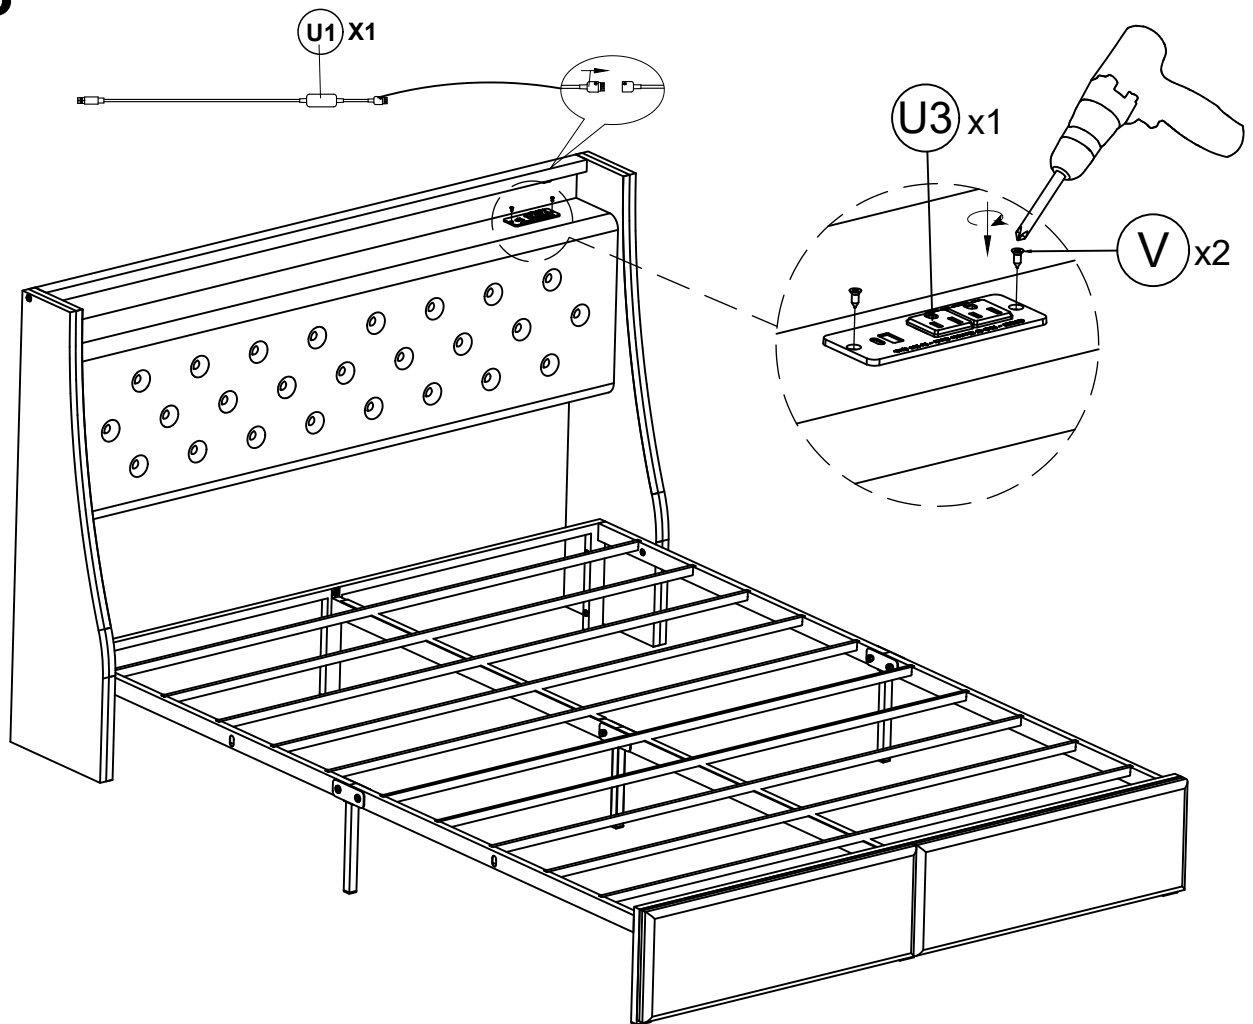


Step 14

Wheel mounting position




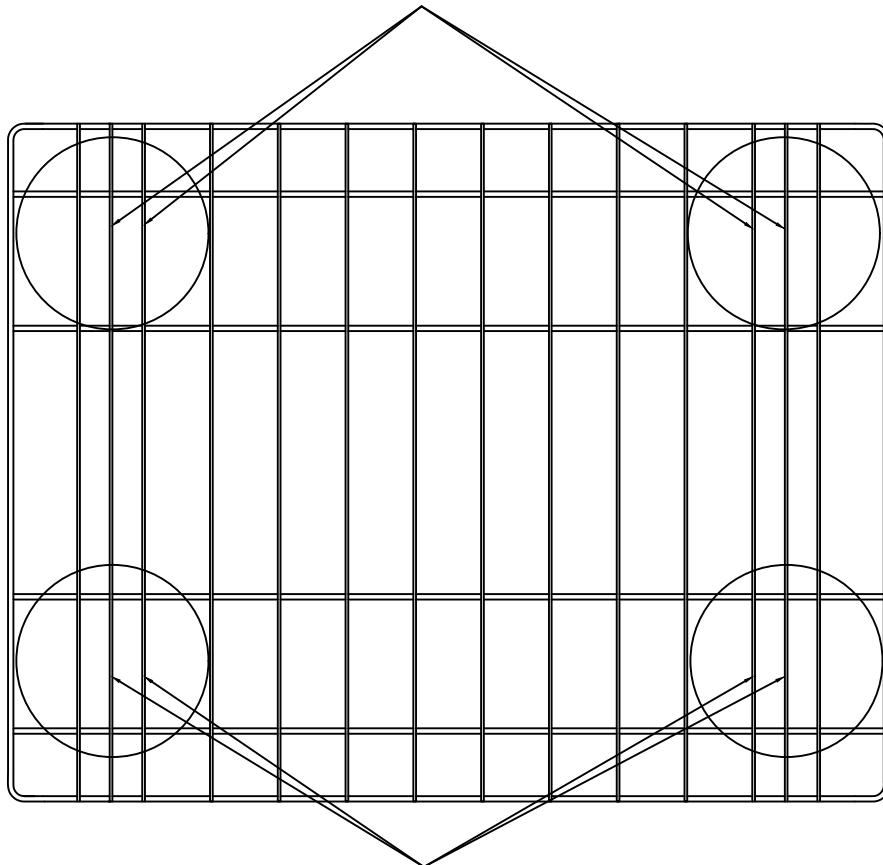


Wheel mounting position

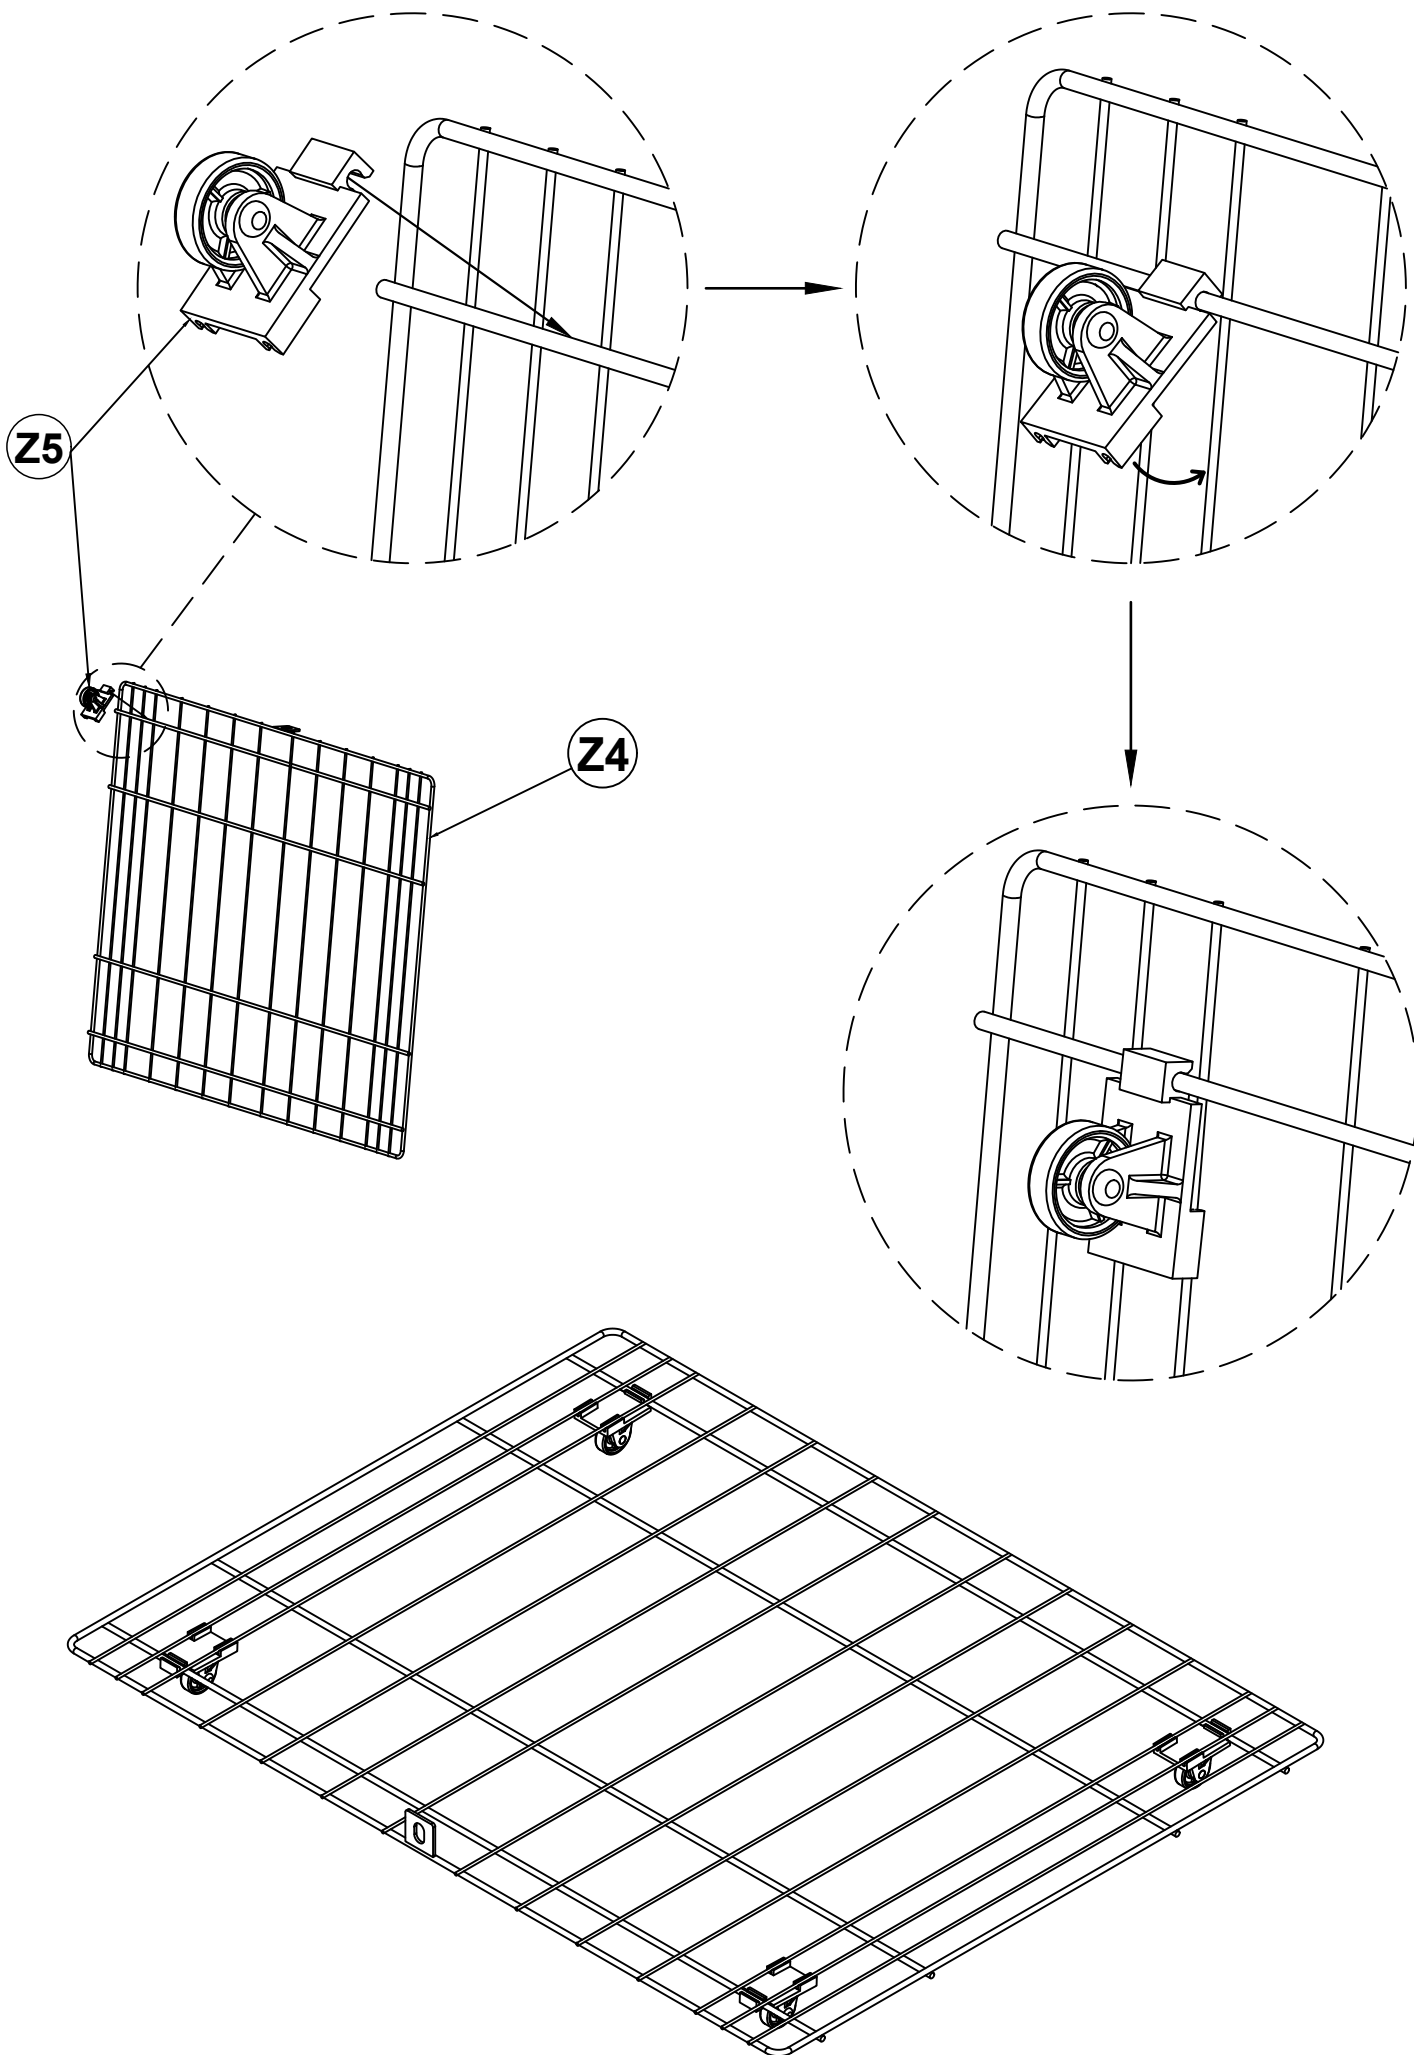


Detailed assembly instructions Q1


these two
lines on Q1.1
and Q1.2 need
to be matched

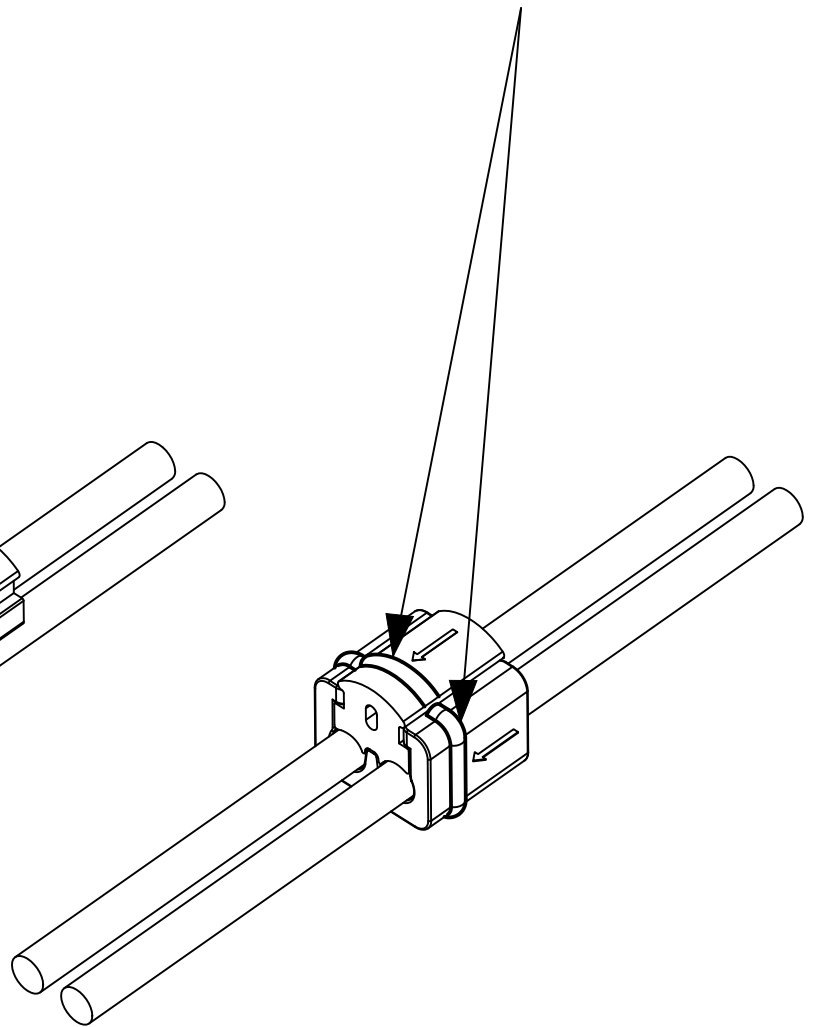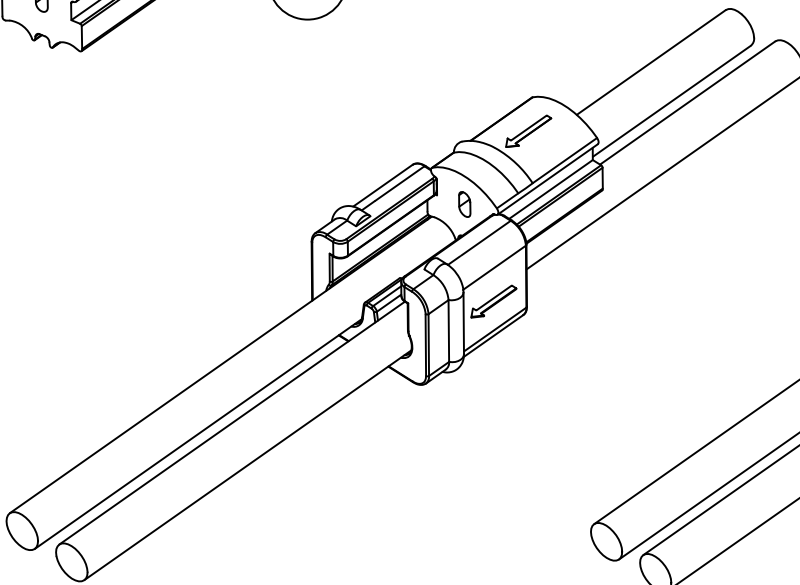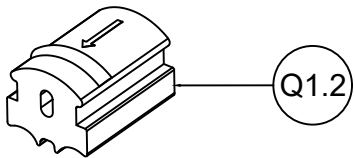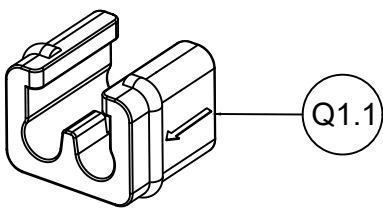


Step 15

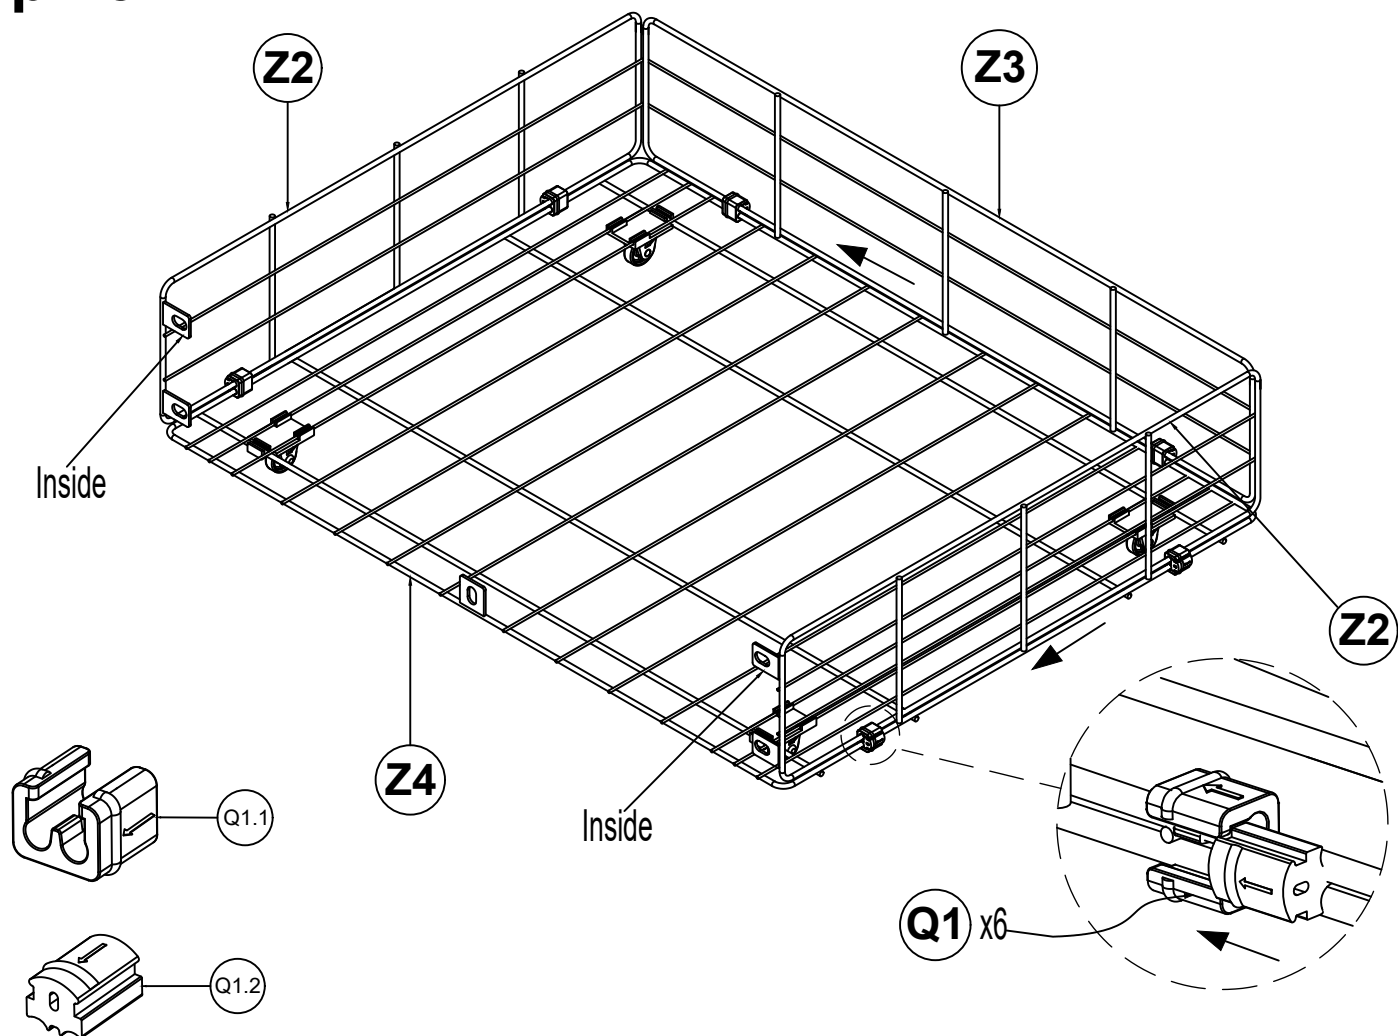

Step 16

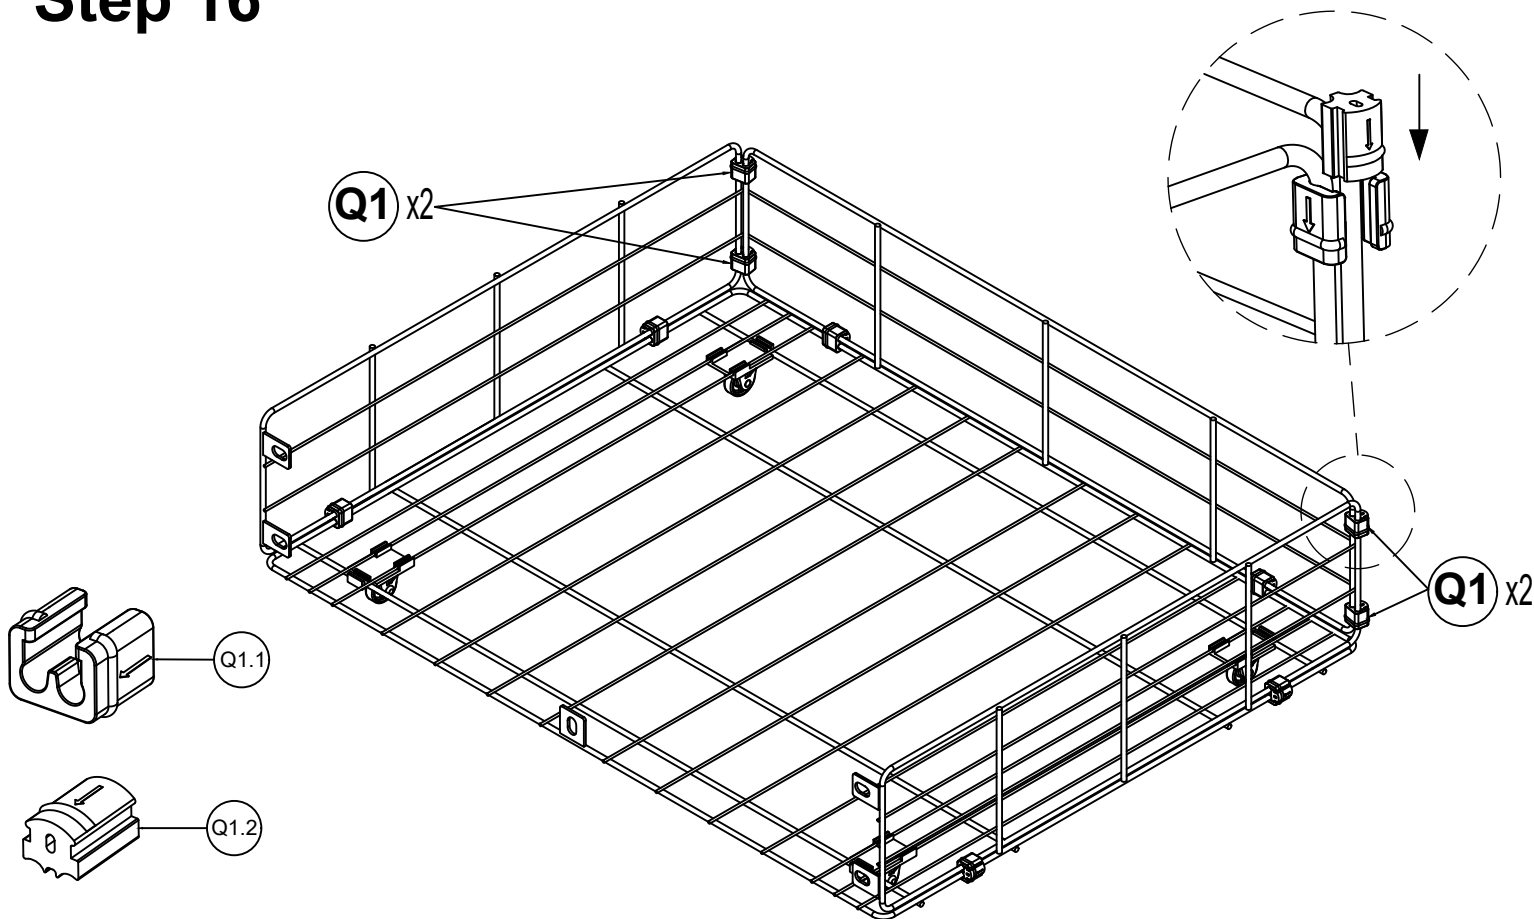


Step 17

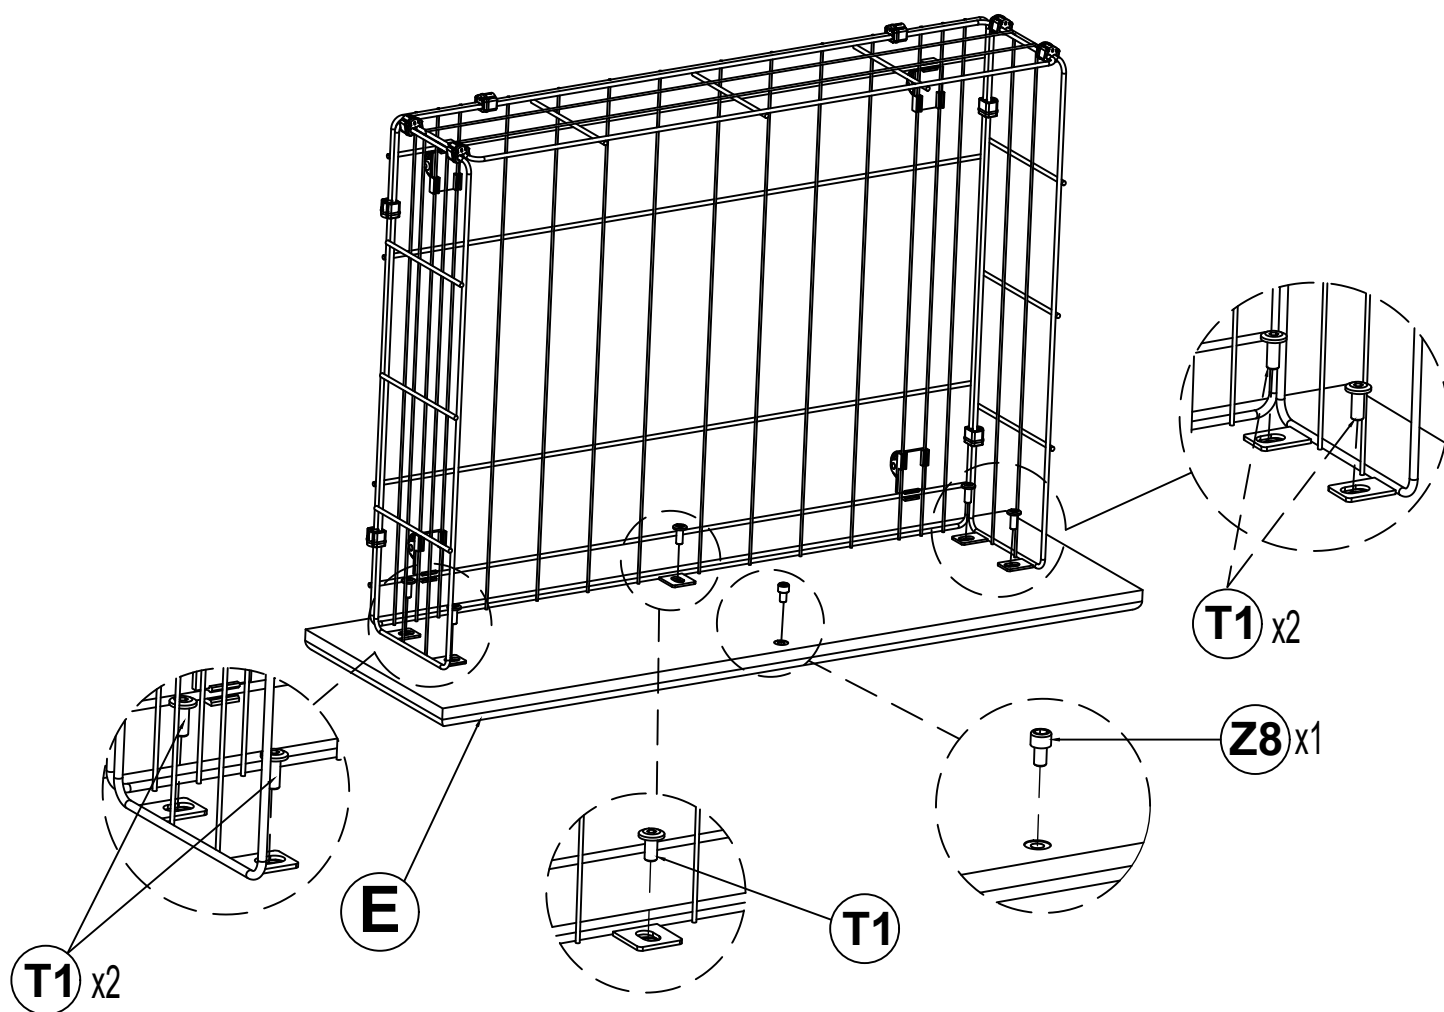

2pcs

E

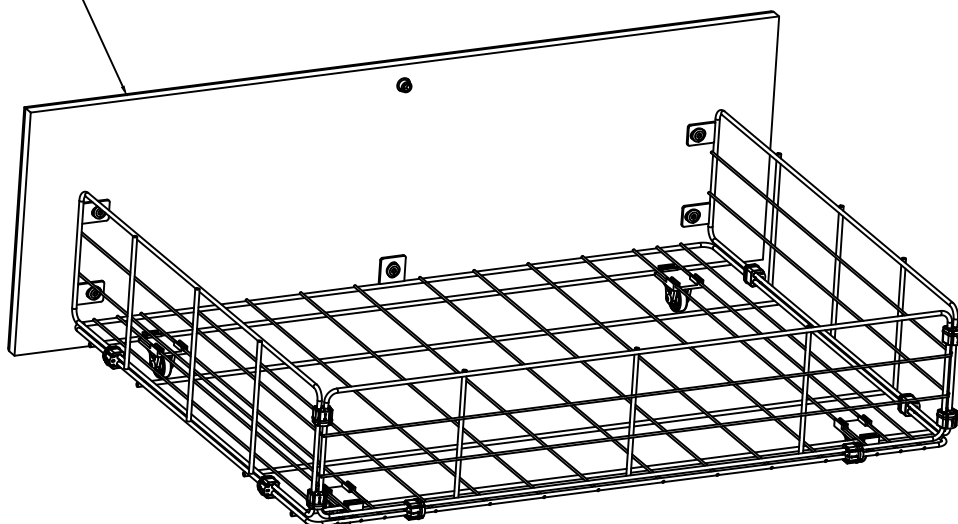

Step 18

