
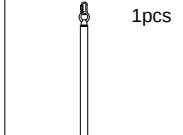

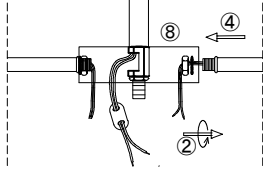
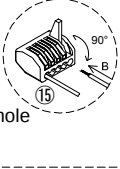

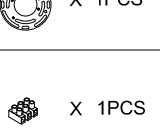
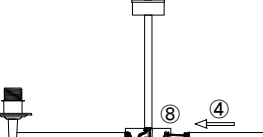
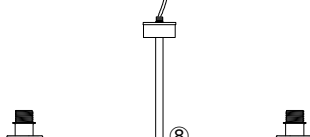
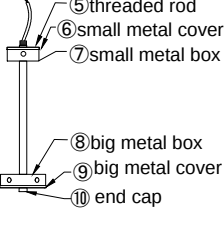
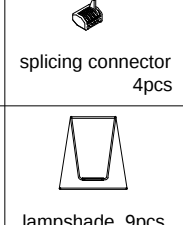
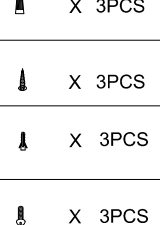
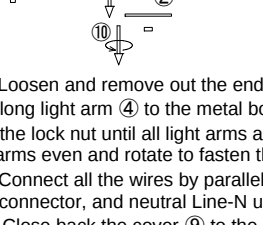
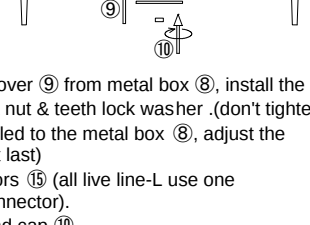
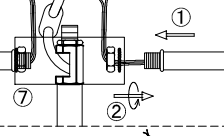
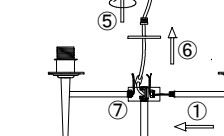
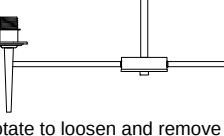

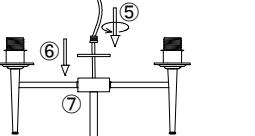
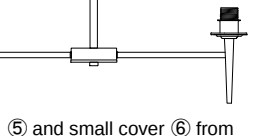
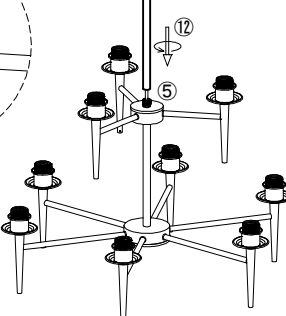
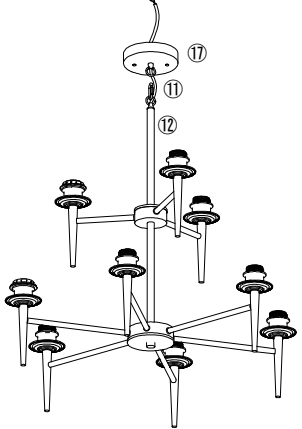
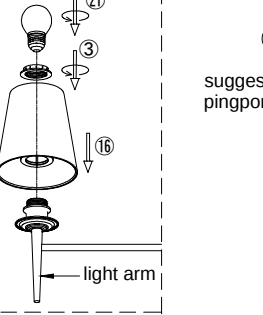
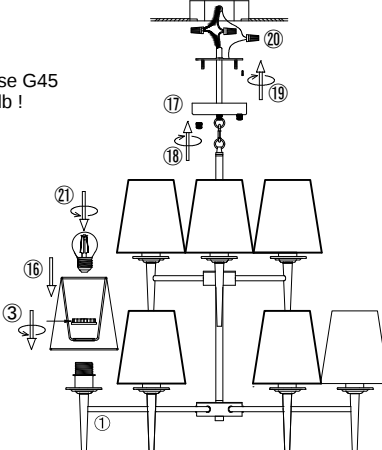


Installation & Assembly

③ socket ring 3pcs ② lock nut & teeth lock washer 3pcs ① short light arm 3pcs 	⑪ carabiner hook screw connection 1pcs ⑫ hanging tube 1pcs 	⑰ canopy 1pcs ⑱ cap nut 2pcs 	 1. Pull the orange operating handle A to open the inlet hole, insert the wire B. 2. Press the operating handle A to finish wiring. (Note: one inlet hole can put 2 or 3 wires inside) 
③ socket ring 6pcs ② lock nut & teeth lock washer 6pcs ④ long light arm 6pcs 	⑬ threaded rod 3pcs ⑭ hanging tube 3pcs 	⑱ X 1PCS ⑲ X 1PCS 	 
⑤ threaded rod ⑥ small metal cover ⑦ small metal box ⑧ big metal box ⑨ big metal cover ⑩ end cap 	⑮ splicing connector 4pcs ⑯ lampshade 9pcs 	⑱ X 3PCS ⑲ X 3PCS ⑲ X 3PCS 	1. Loosen and remove out the end cap ⑩ and cover ⑨ from metal box ⑧, install the long light arm ④ to the metal box ⑧ with lock nut & teeth lock washer. (don't tighten the lock nut until all light arms are ready installed to the metal box ⑧, adjust the arms even and rotate to fasten the lock nuts at last) 2. Connect all the wires by parallel with connectors ⑮ (all live line-L use one connector, and neutral Line-N use another connector). 3. Close back the cover ⑨ to the box ⑧ with end cap ⑩.  
   4. Rotate to loosen and remove out the threaded rod ⑤ and small cover ⑥ from metal box ⑦, install the short light arm ① to the metal box ⑦ with lock nut & teeth lock washer ②. (don't tighten the lock nut until all light arms are ready installed to the metal box ⑦, adjust the arms even and rotate to fasten the lock nuts at last) 5. Connect all the wires by parallel with connectors ⑮ (all live line-L use one connector, and neutral Line-N use another connector). 6. Close back the cover ⑥ to the box ⑦ with threaded rod ⑤.	1. Pull the orange operating handle A to open the inlet hole, insert the wire B. 2. Press the operating handle A to finish wiring. (Note: one inlet hole can put 2 or 3 wires inside)   	  can connect more tubes to get the height you need	
 8. Hang the fixture to the canopy ⑰ with carabiner hook screw connection ⑪, let the wire go through the ring ⑪ and canopy ⑰.	 suggest to use G45 pingpong bulb !  Please operate with gloves to avoid leaving stains on the lampshade. 7. Install the bracket to the ceiling junction box with screw ⑲. 8. Connect the wire to your home line with cap connector ⑳. 9. Install the fixture to the bracket with cap nut ⑱. 10. Install the lampshade ⑯ to the fixture with socket ring ③ and install the bulb ㉑. (bulbs are not included in the package)		

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !