
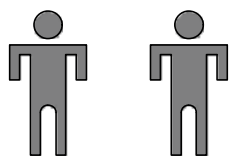




ASSEMBLY INSTRUCTIONS

ITEM: MJ1002Y

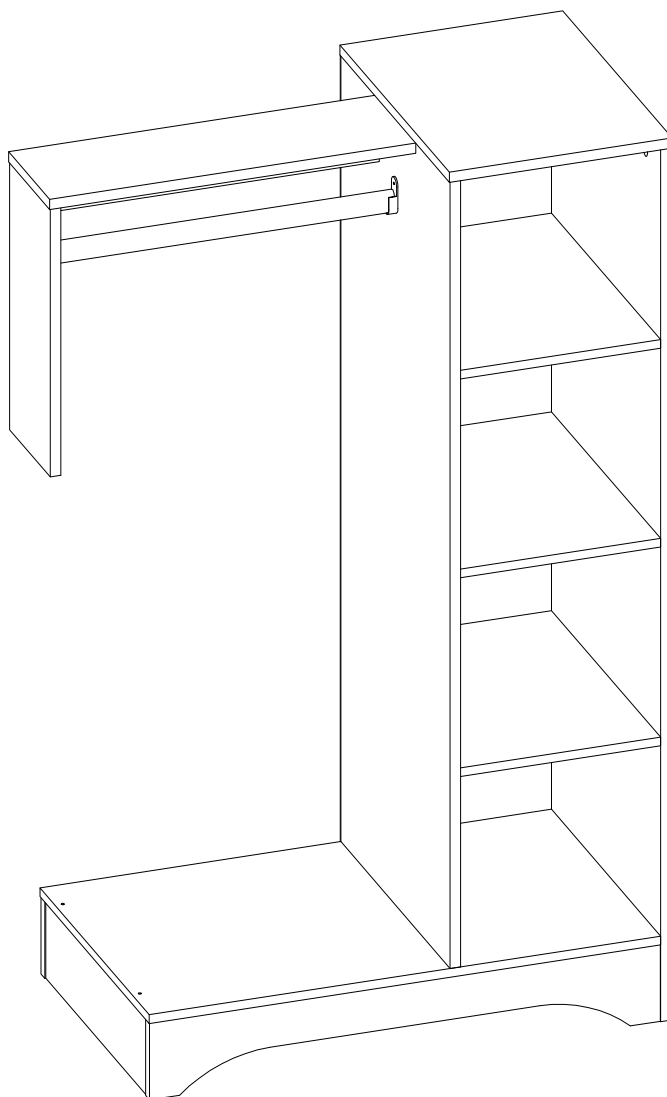


2 people for assembly









MJ Collections

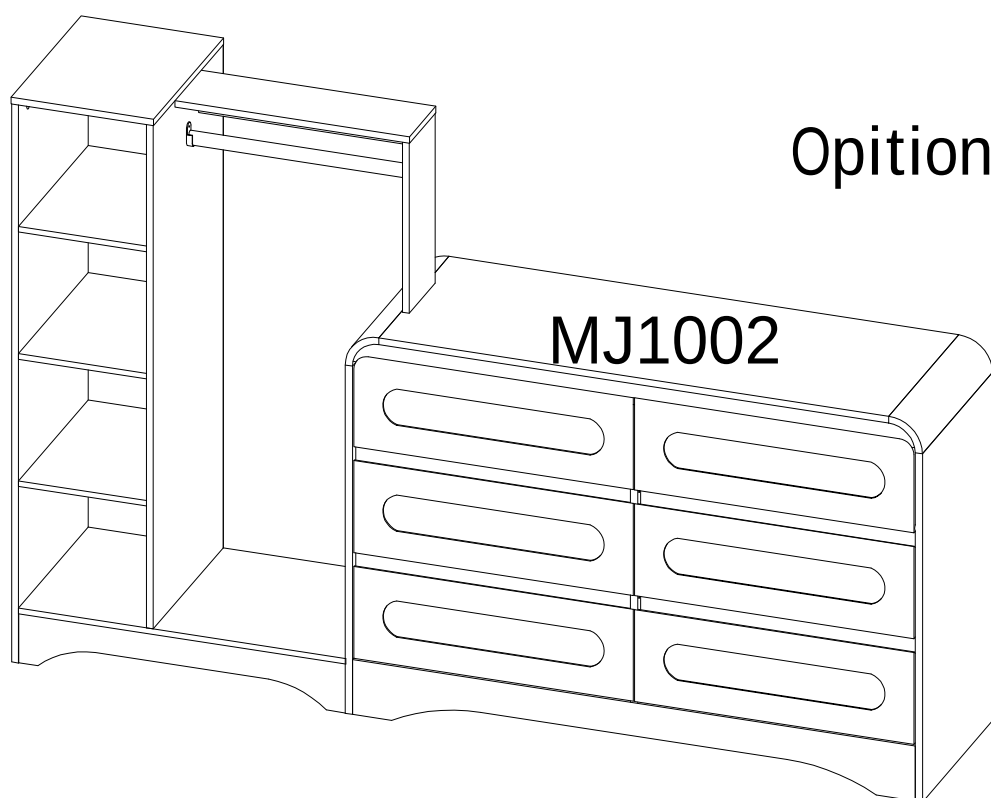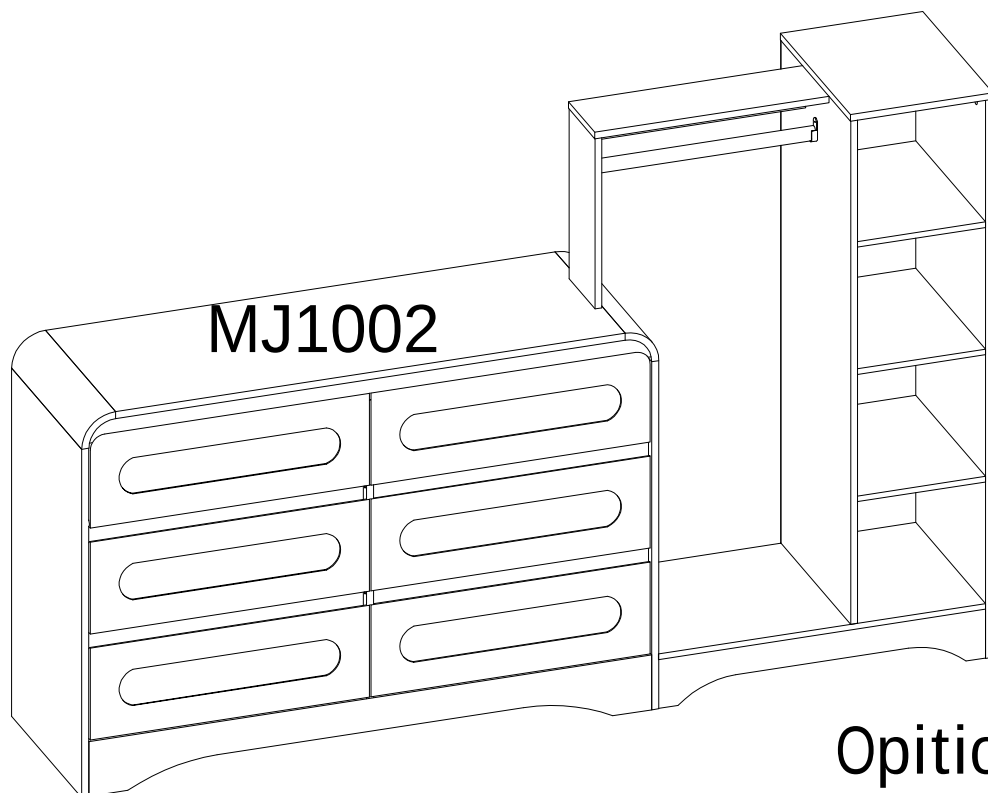


PACKAGE INCLUDE

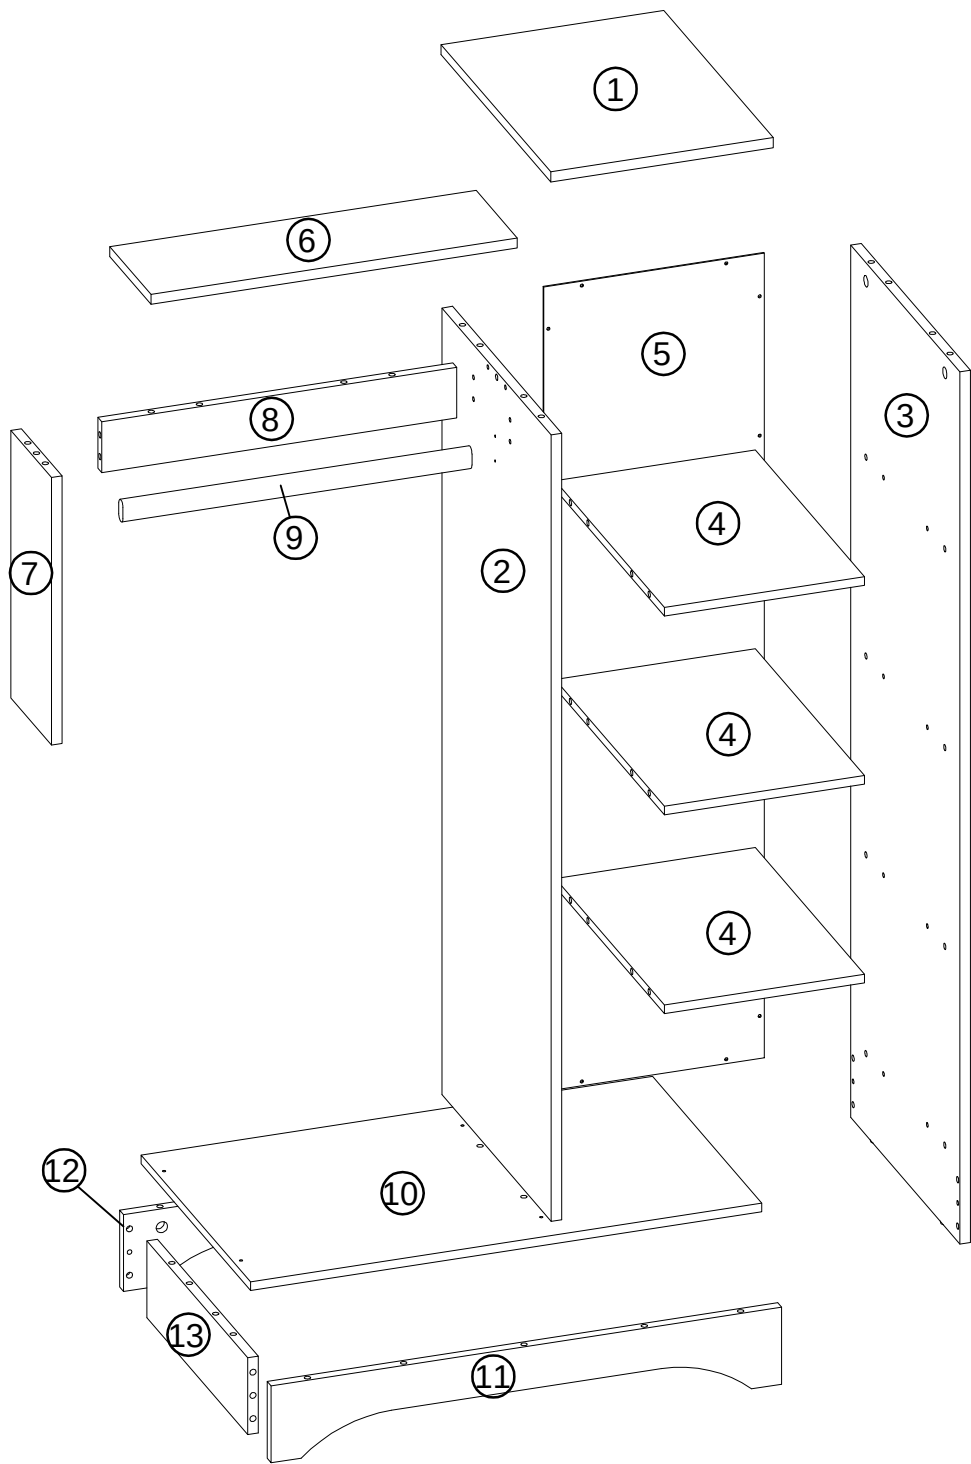


PACKAGE CONTENT

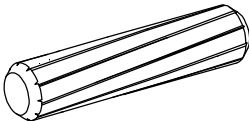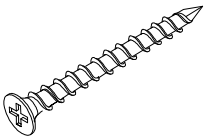$\phi 6 \times 30 \text{MM}$  (A) $34X+1$	$\phi 3 \times 12 \text{MM}$  (B) $19X+1$	$\phi 6 \times 34 \text{MM}$  (C) $44X+2$	$\phi 15 \times 9 \text{MM}$  (D) $44X+2$
$\phi 4 \times 50 \text{MM}$  (E) $2X+1$	 (F) $2X$	$\phi 3 \times 12 \text{MM}$  (G) $4X+1$	 (H) $2X$
$\phi 3.5 \times 12 \text{MM}$  (I) $4X+1$	 (J) $30X+1$	 (K) $2X$	


How to use the cam lock system

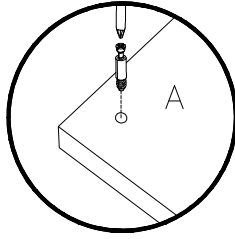


1. Screw cam bolt into panel

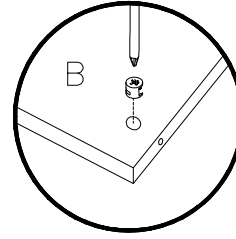


2. Push cam into panel - arrow feature on cam top points to panel edge

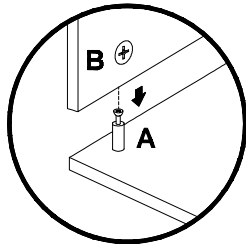

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

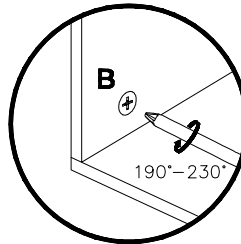


4. Rotate cam(s) clockwise 190°-230° to lock panels together

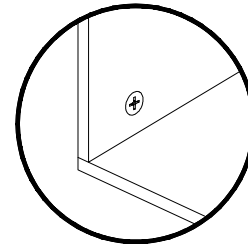

5. Panels should be tight against each other and connection should be rigid


Insert the wood dowel [A] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

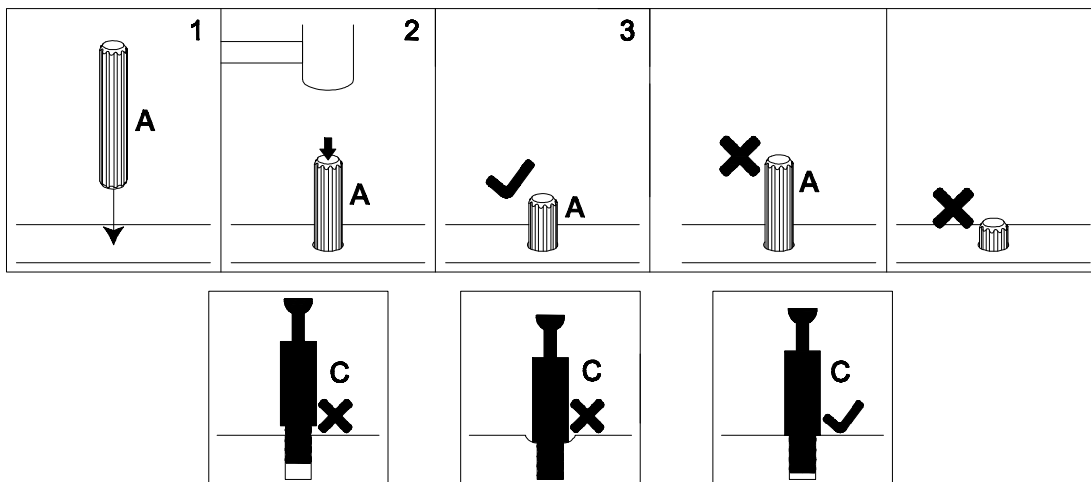

⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Now you can assemble the item.

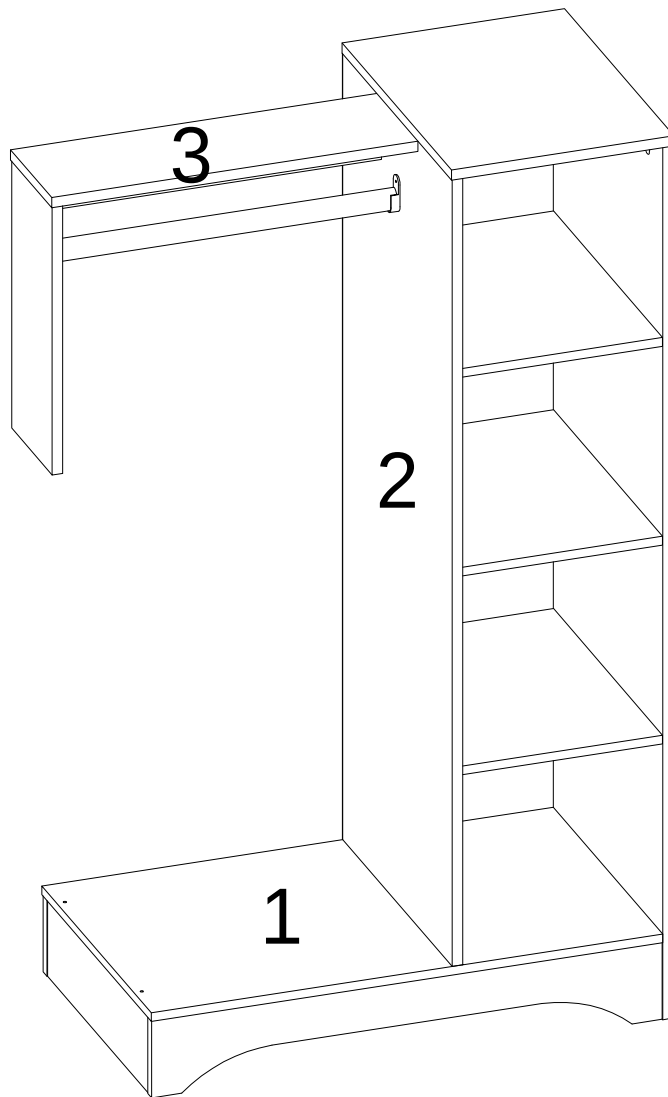




The installation process is divided into three parts:

1. Install the base
2. Install the cabinet body
3. Install the side support




Tip:

Using an electric screwdriver will make assembly easier.




STEP 1

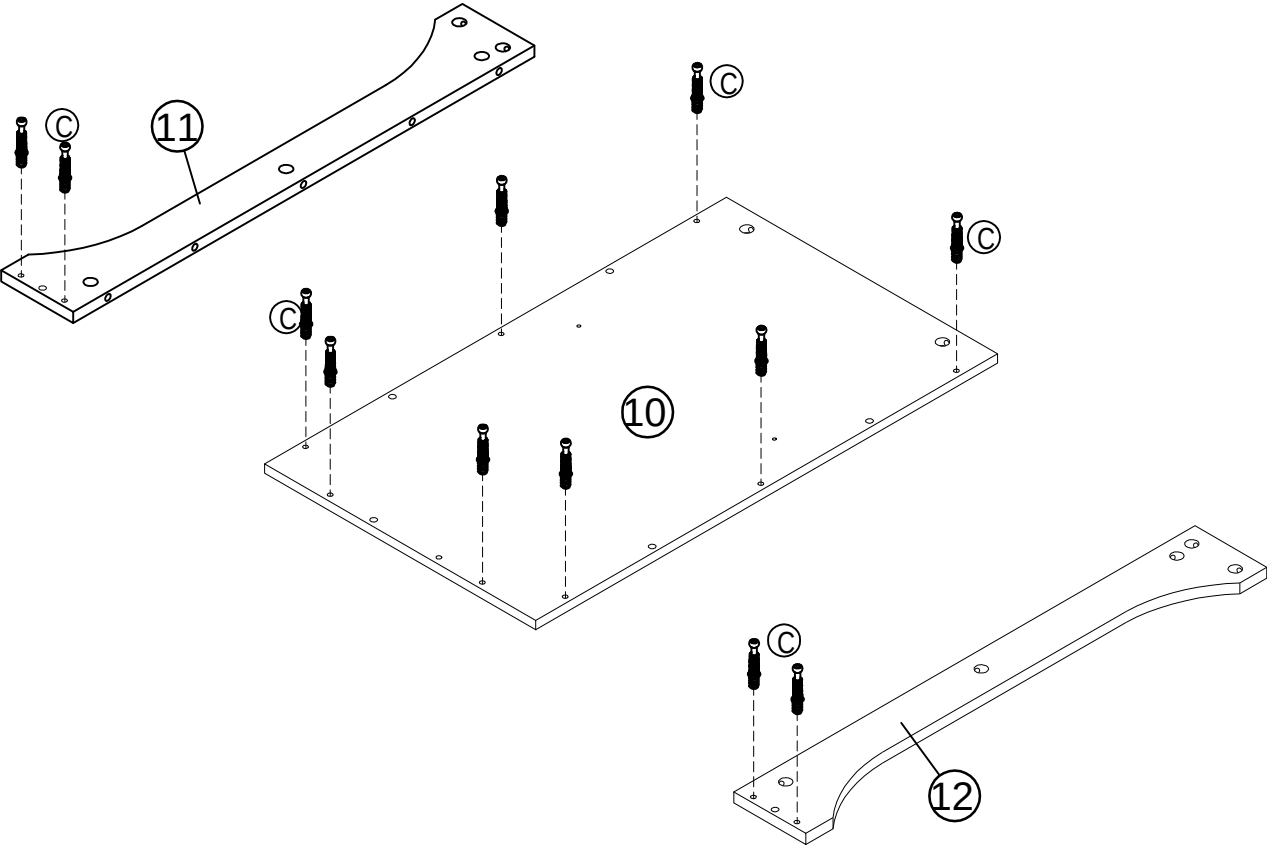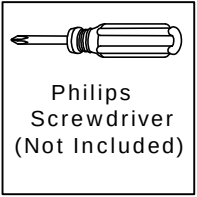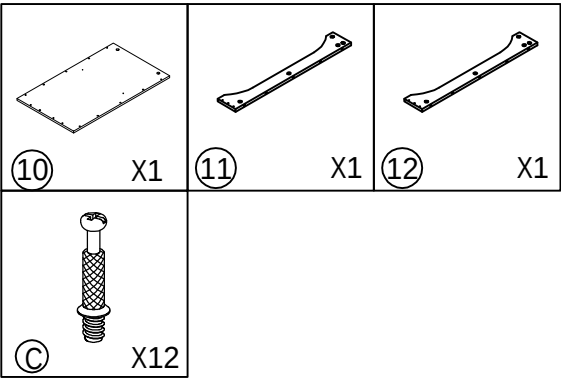



STEP 2

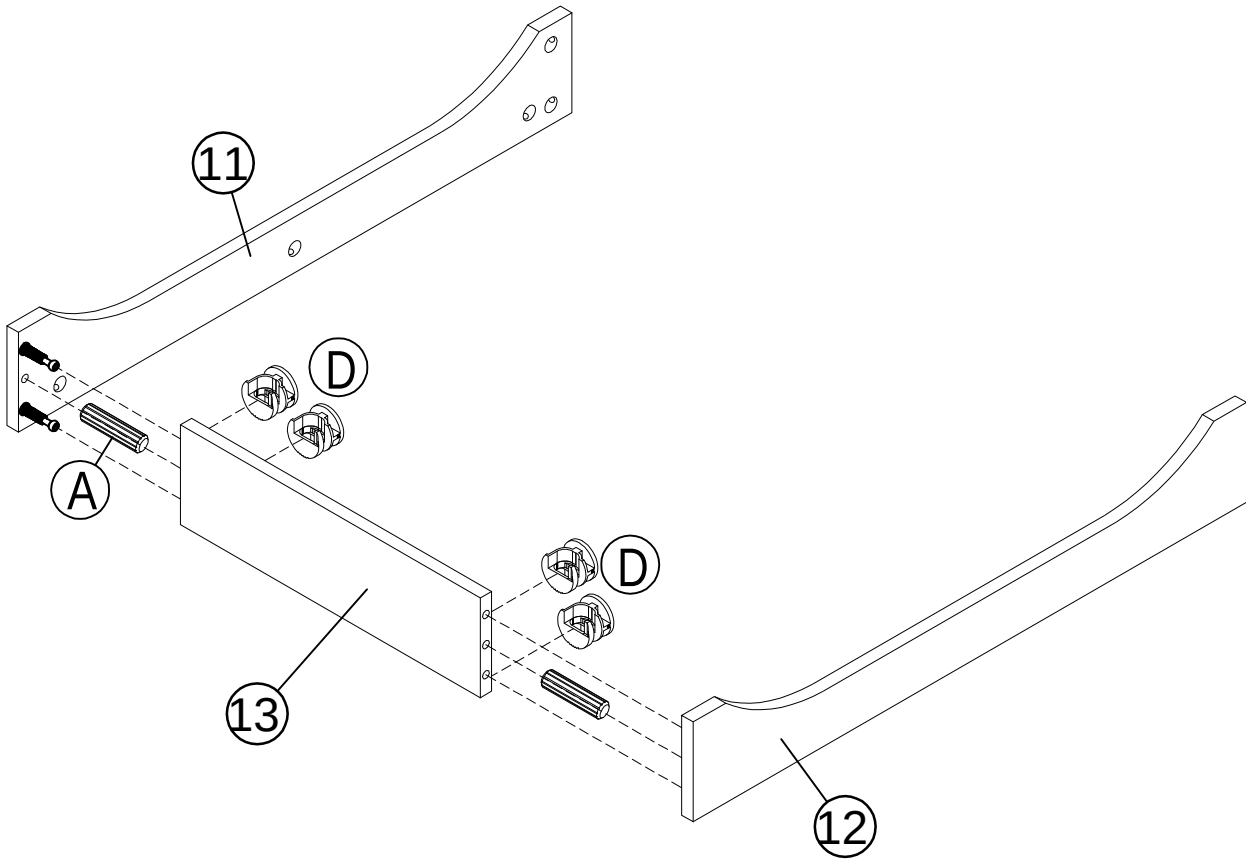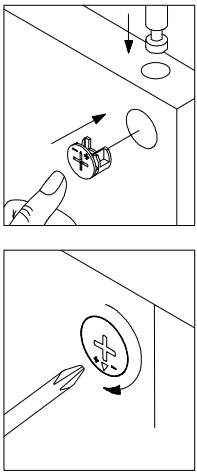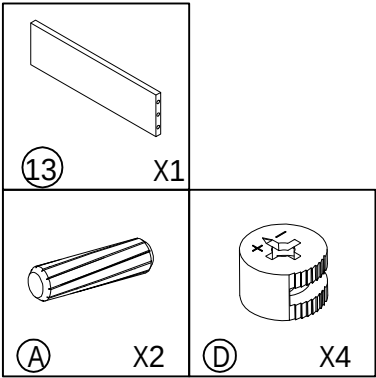


STEP 3

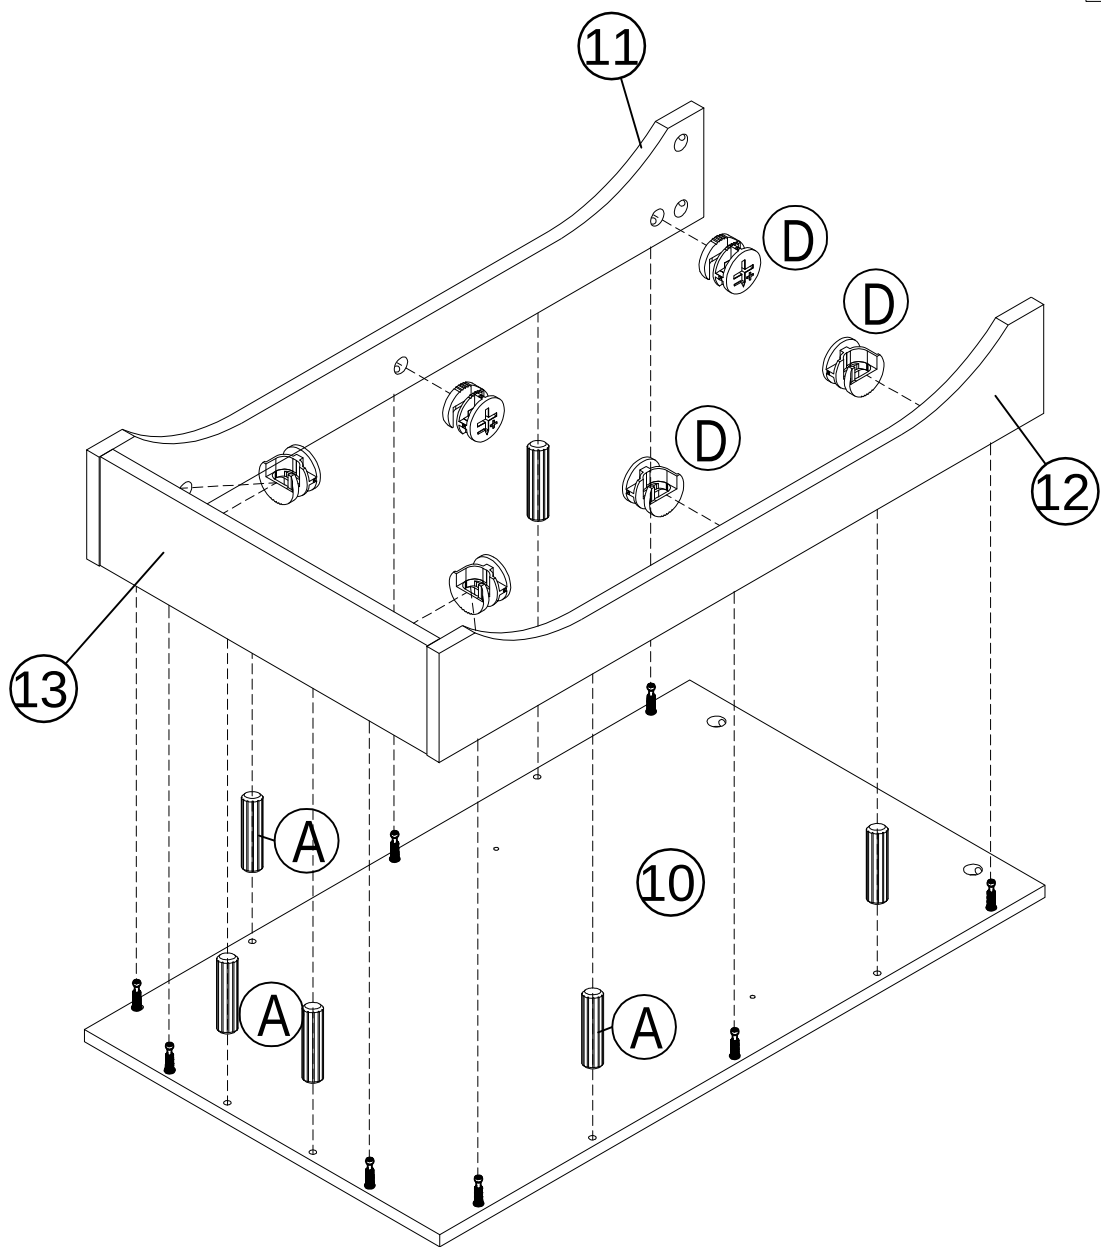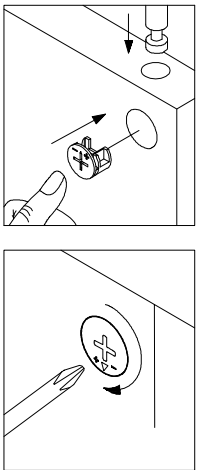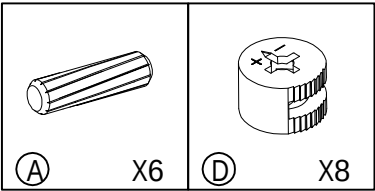


STEP 4

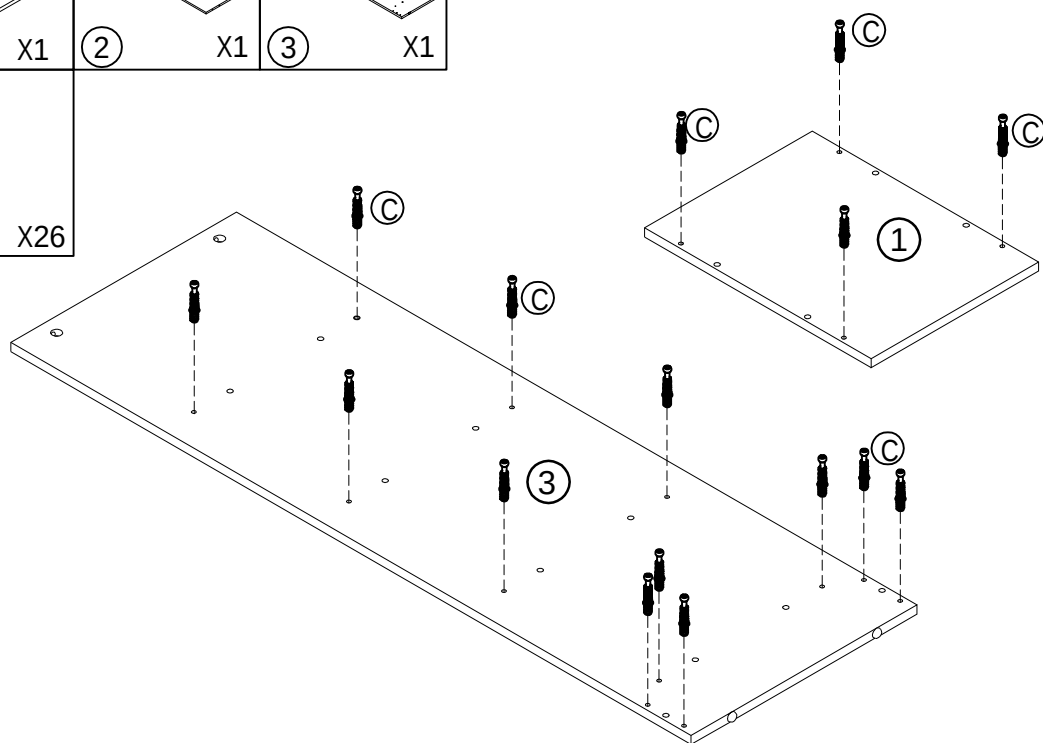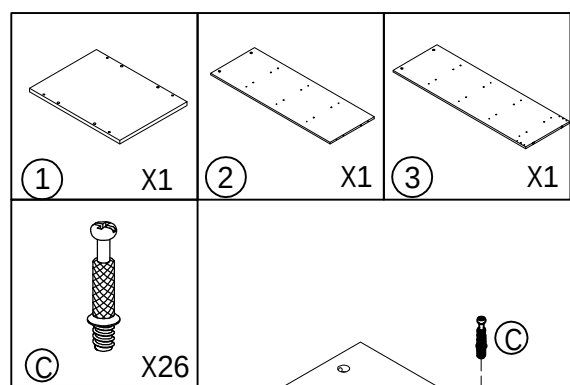


Opition 1

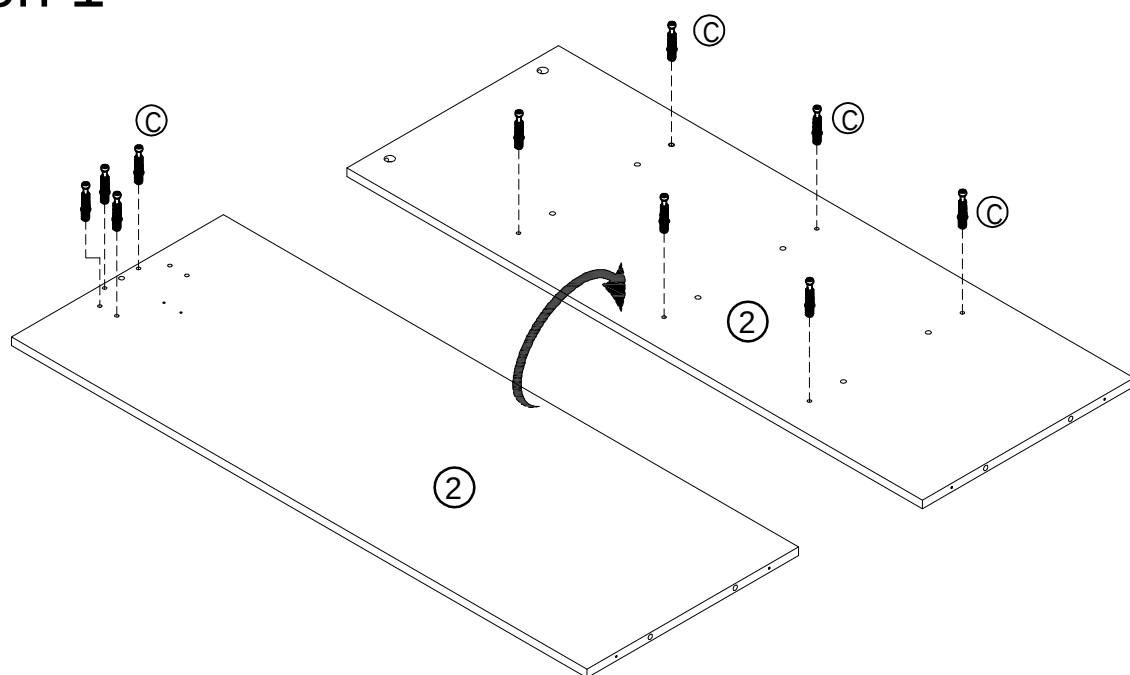


STEP 5

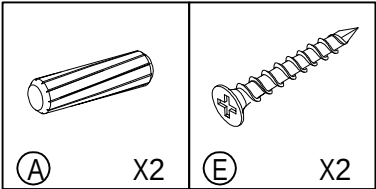



Opition 1

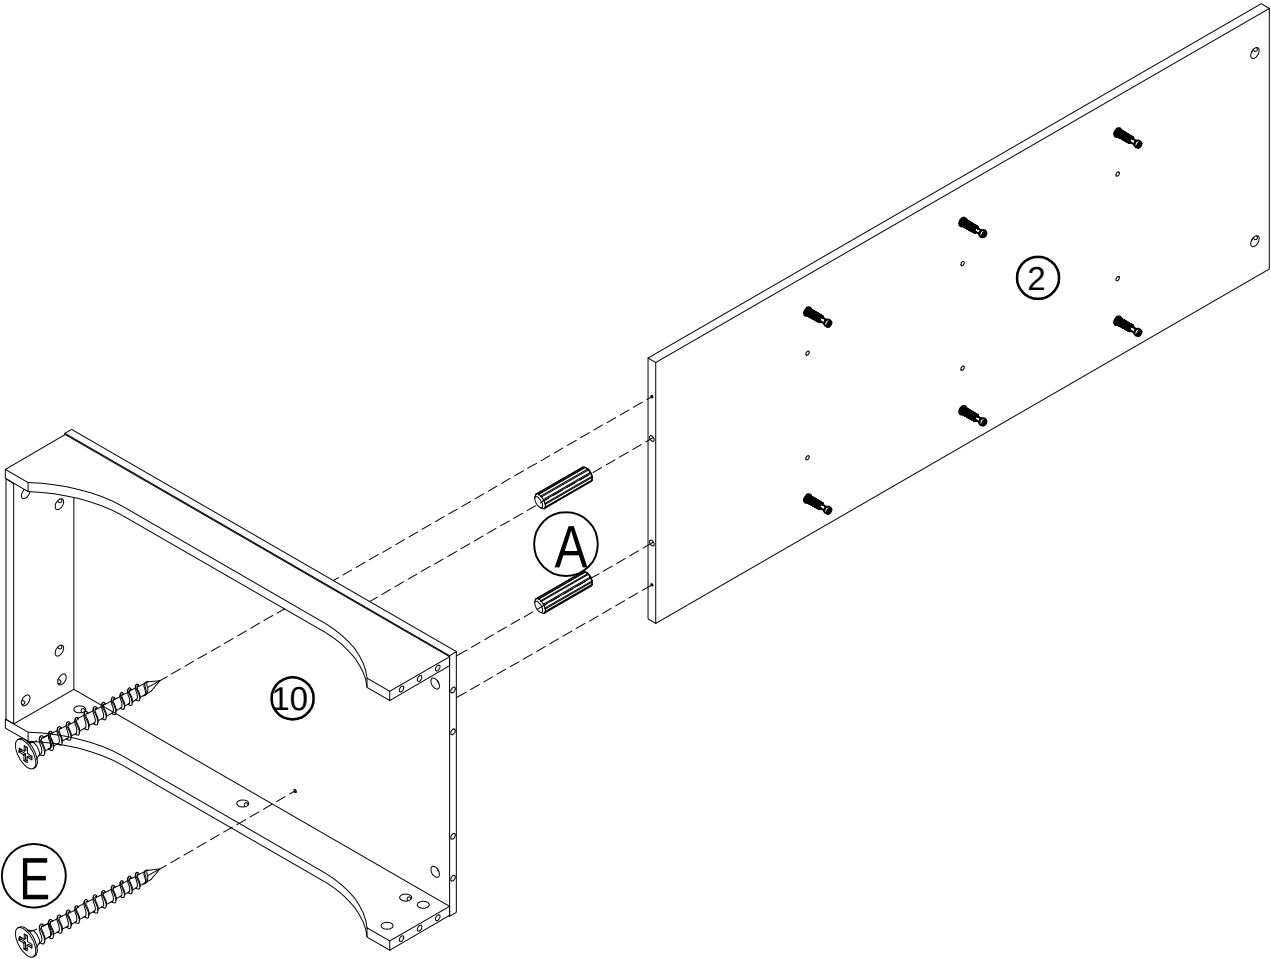



STEP 6

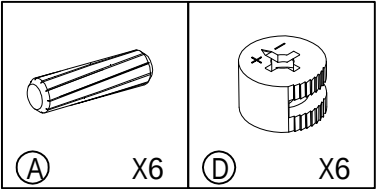


Opition 1

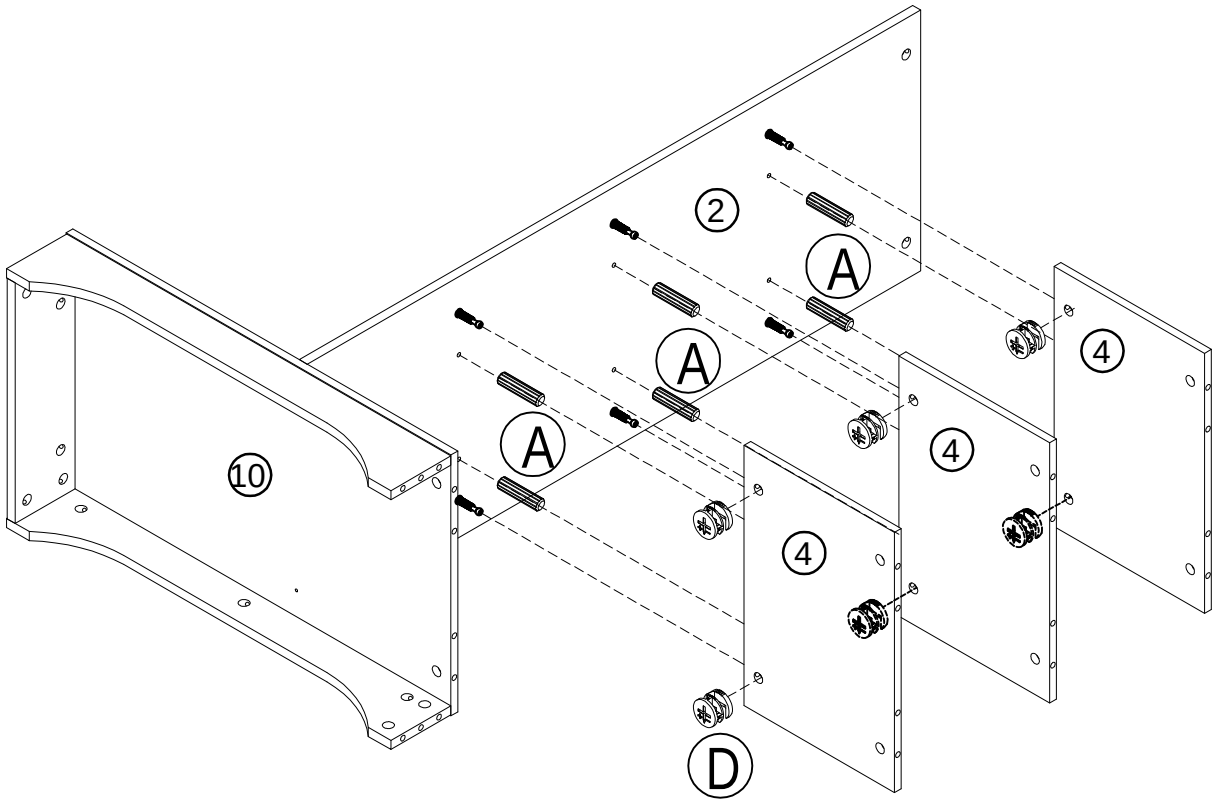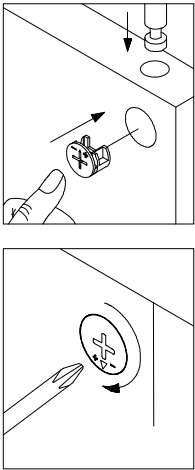

STEP 7

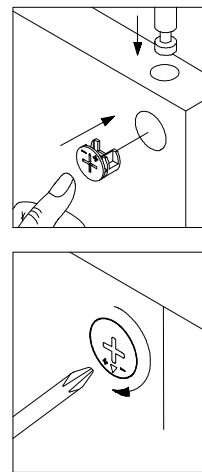
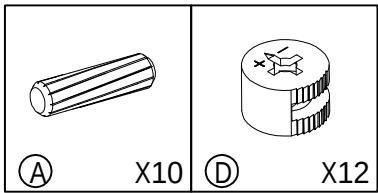


Opition 1

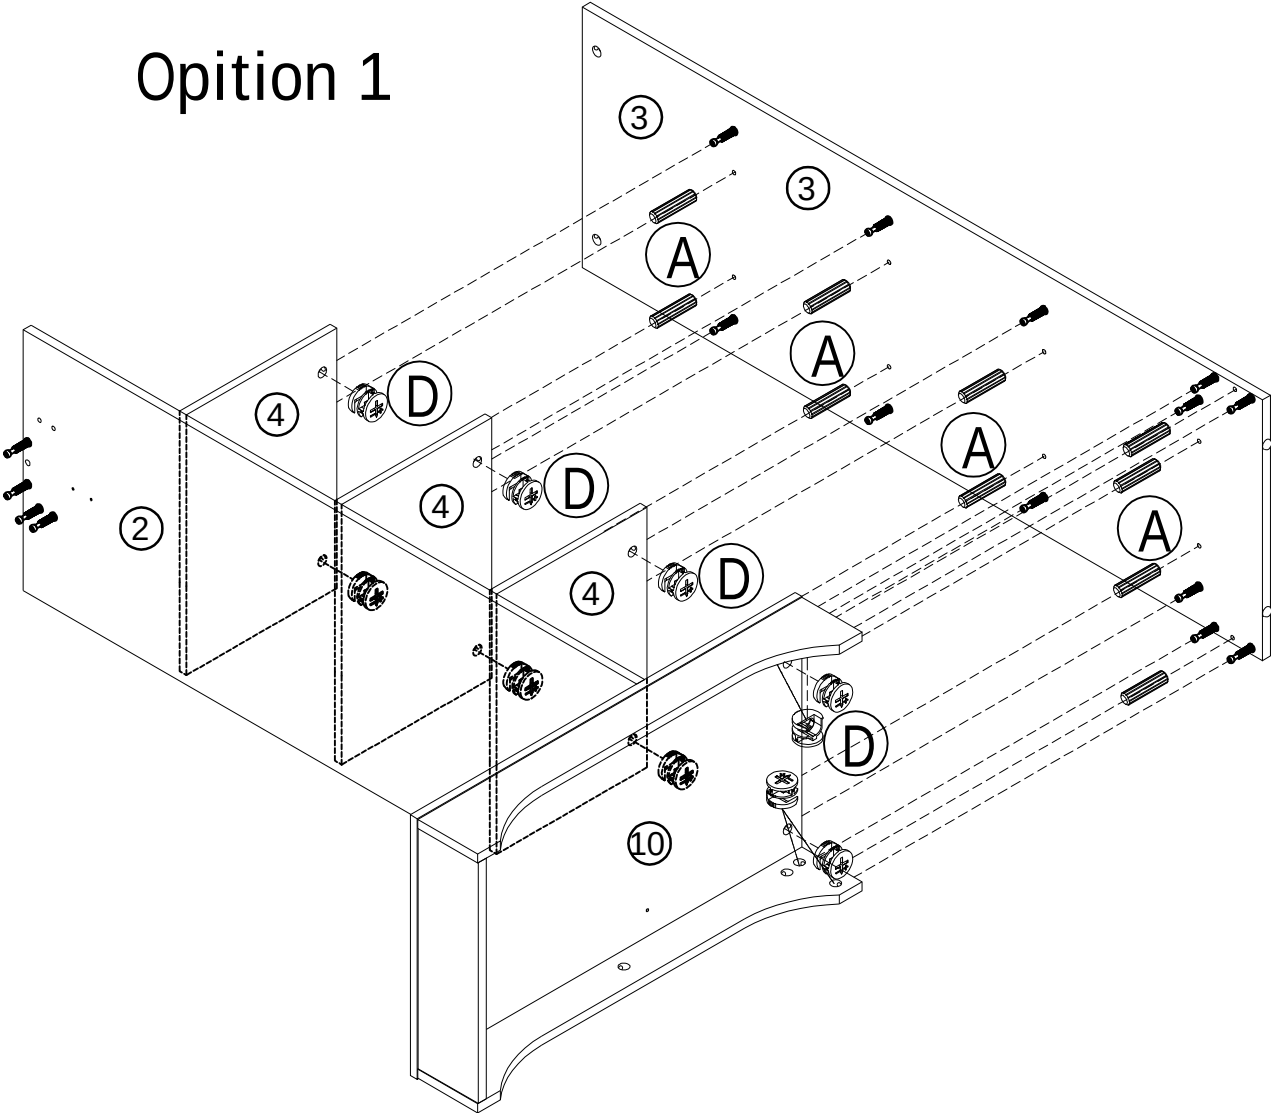


Note: ask for assistance on this step.


STEP 8

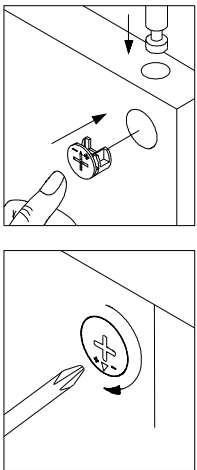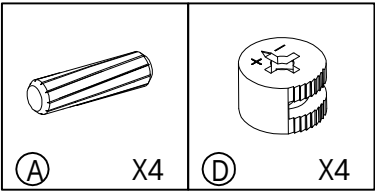




Opition 1

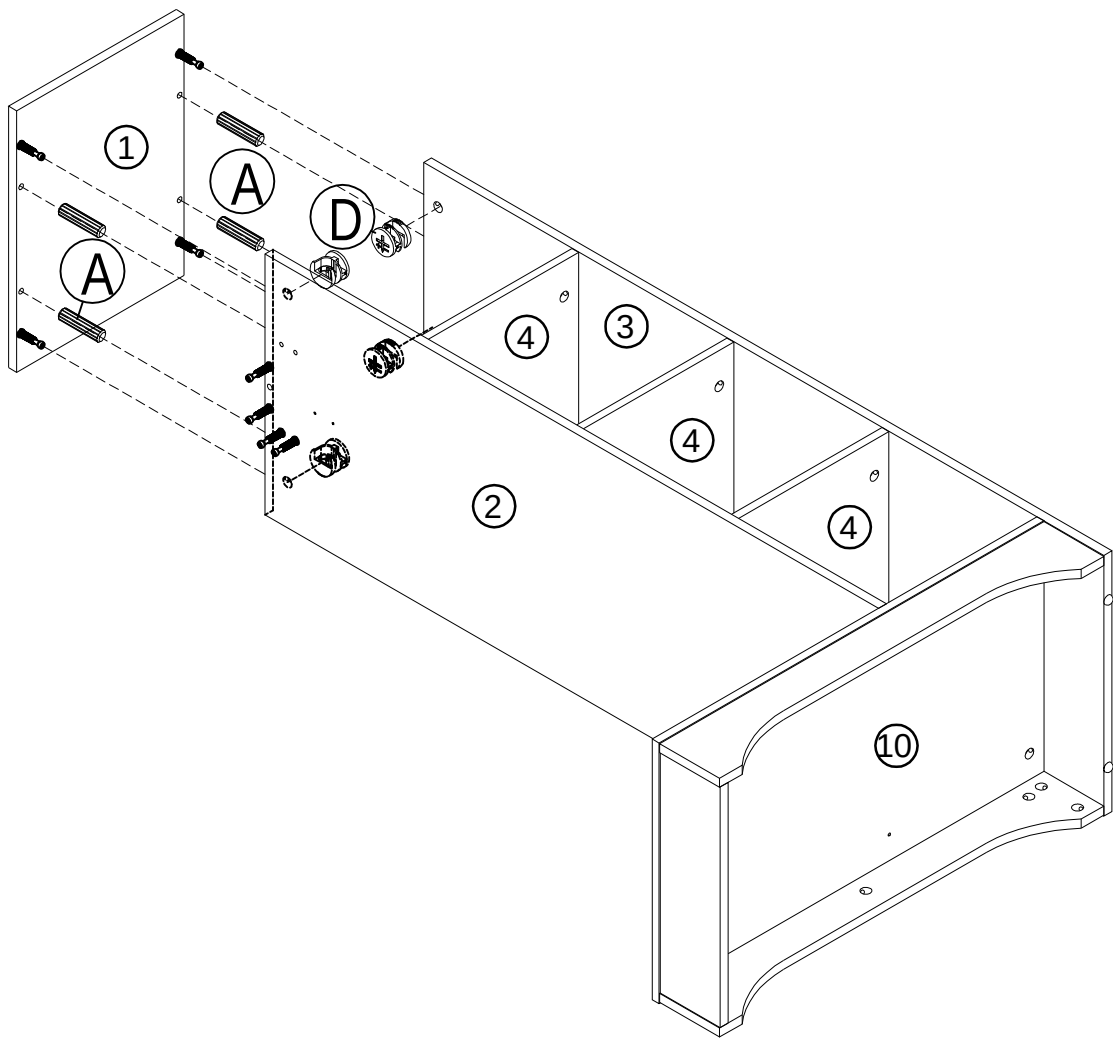


STEP 9

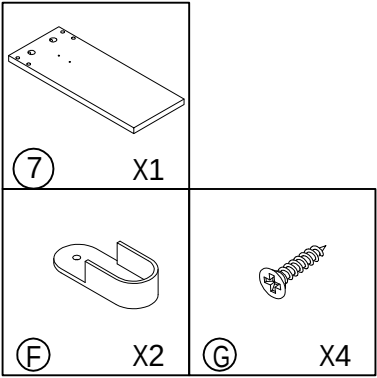


Opition 1

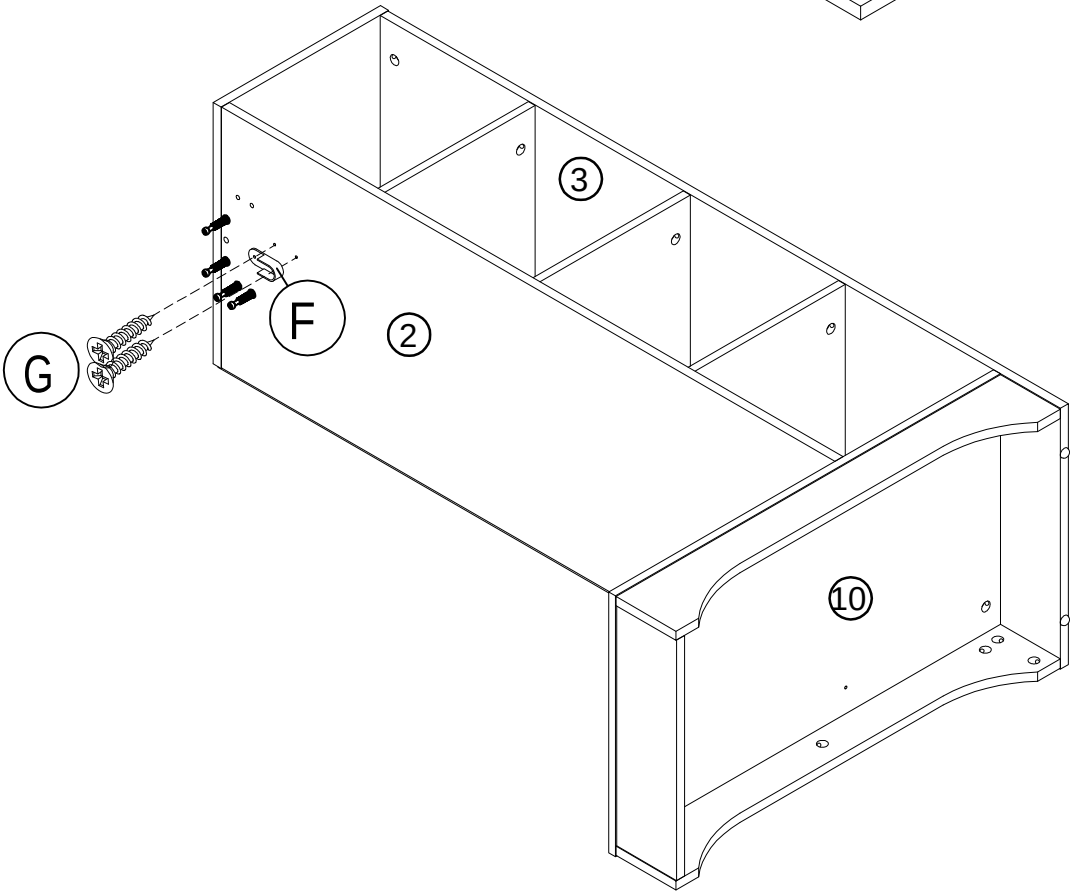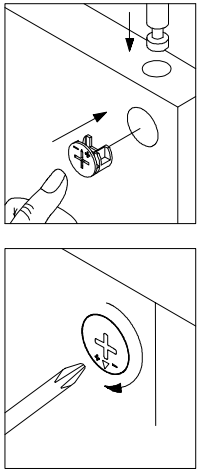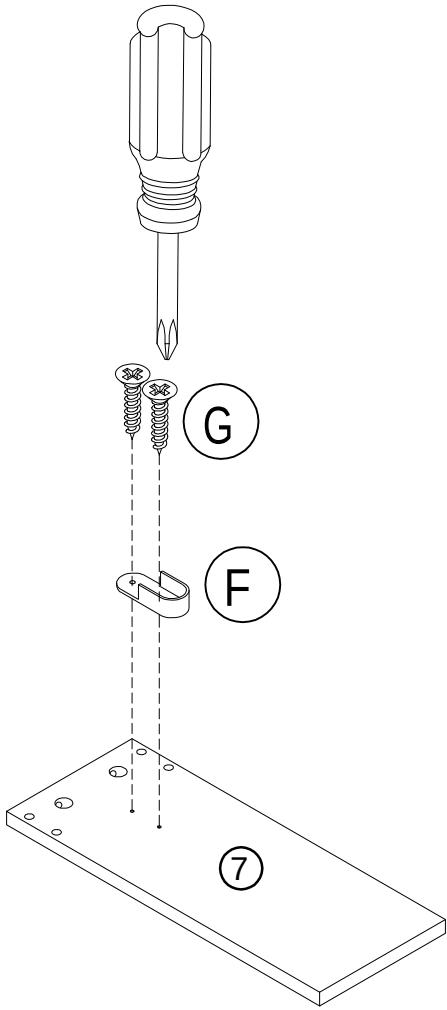


STEP 10

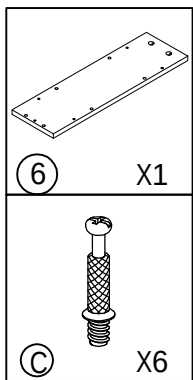



Opition 1

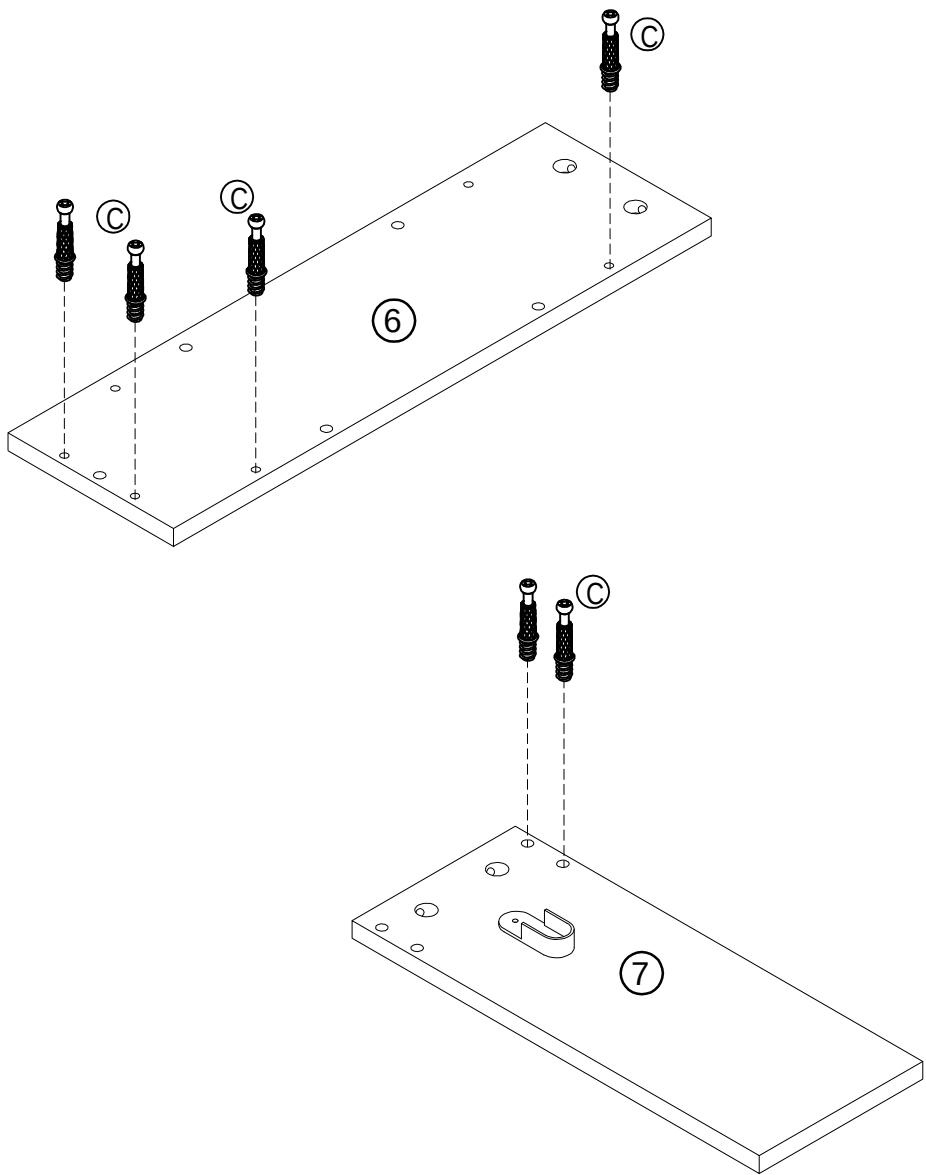

STEP 11


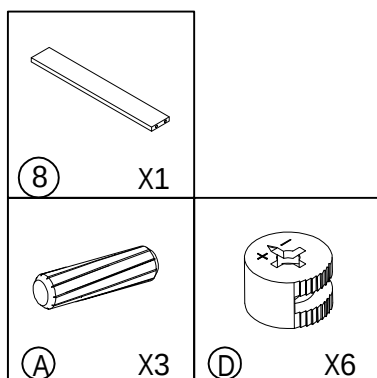


Opition 1

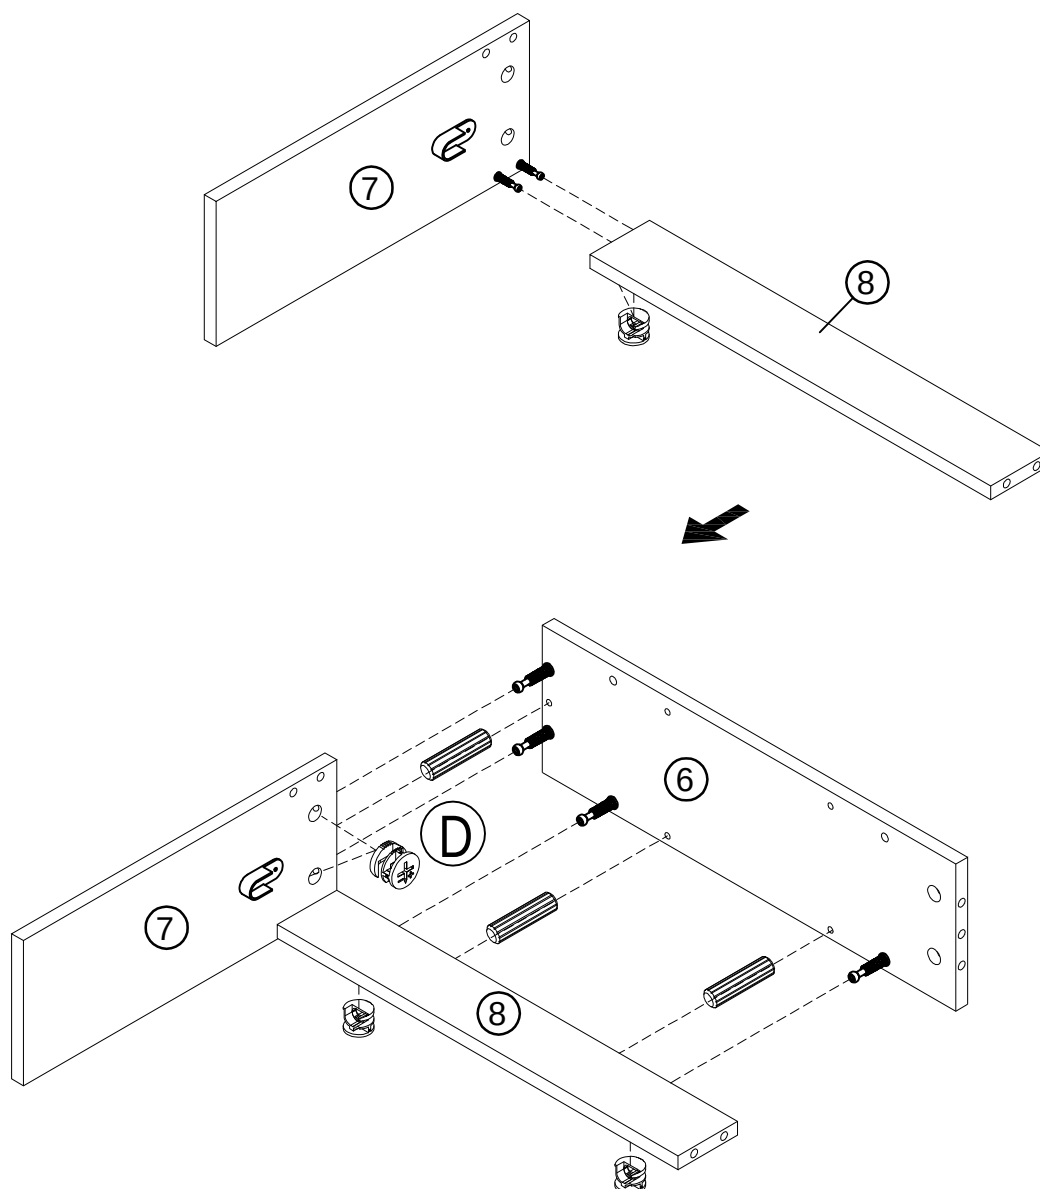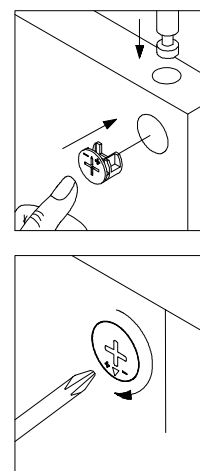


Note: ask for assistance on this step.


STEP 12

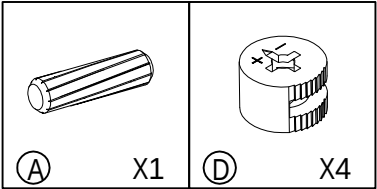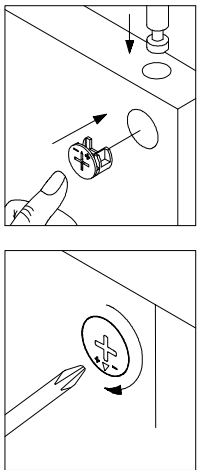




Opition 1

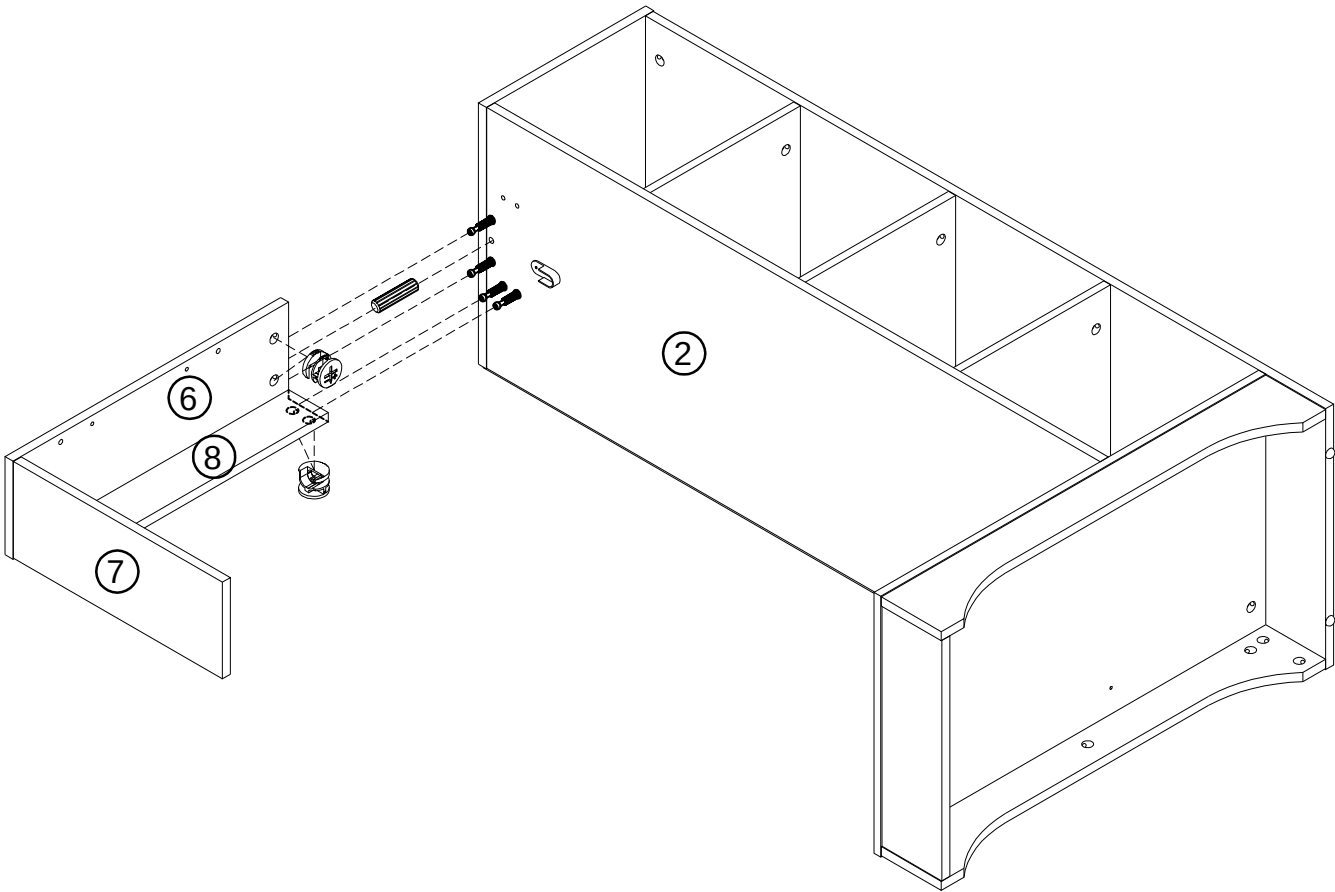

STEP 13

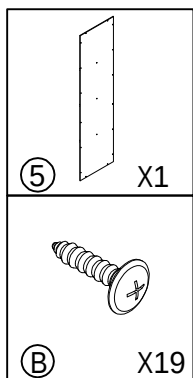


Opition 1

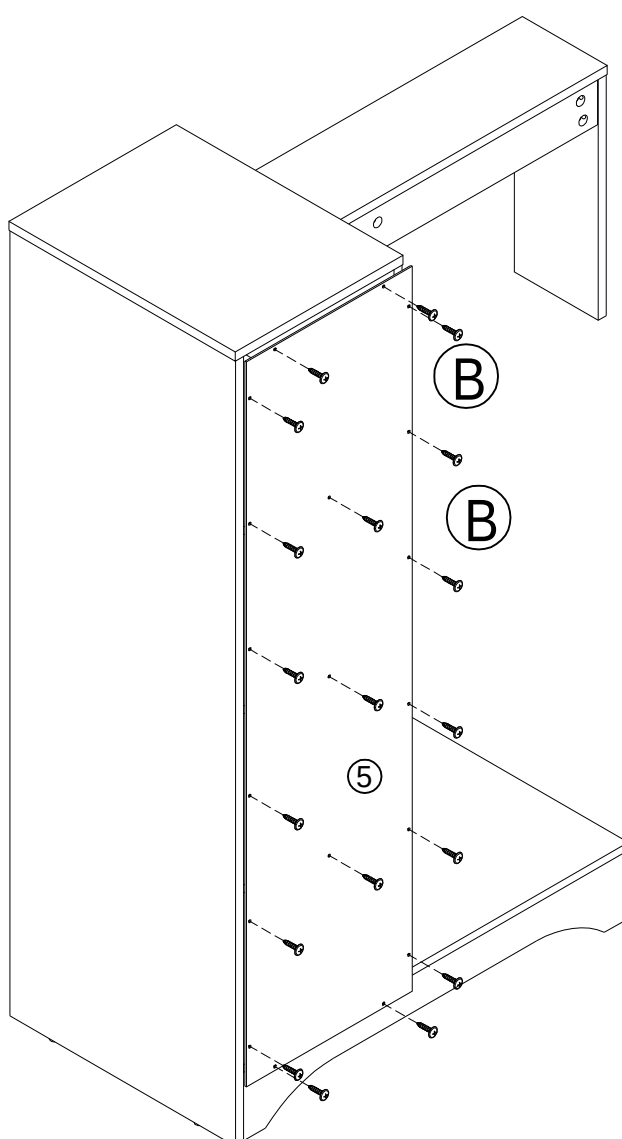
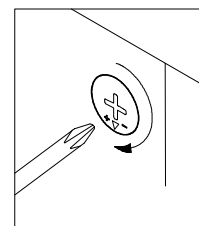
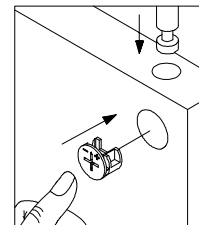


Note: ask for assistance on this step.


STEP 14

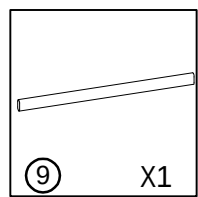



Opition 1

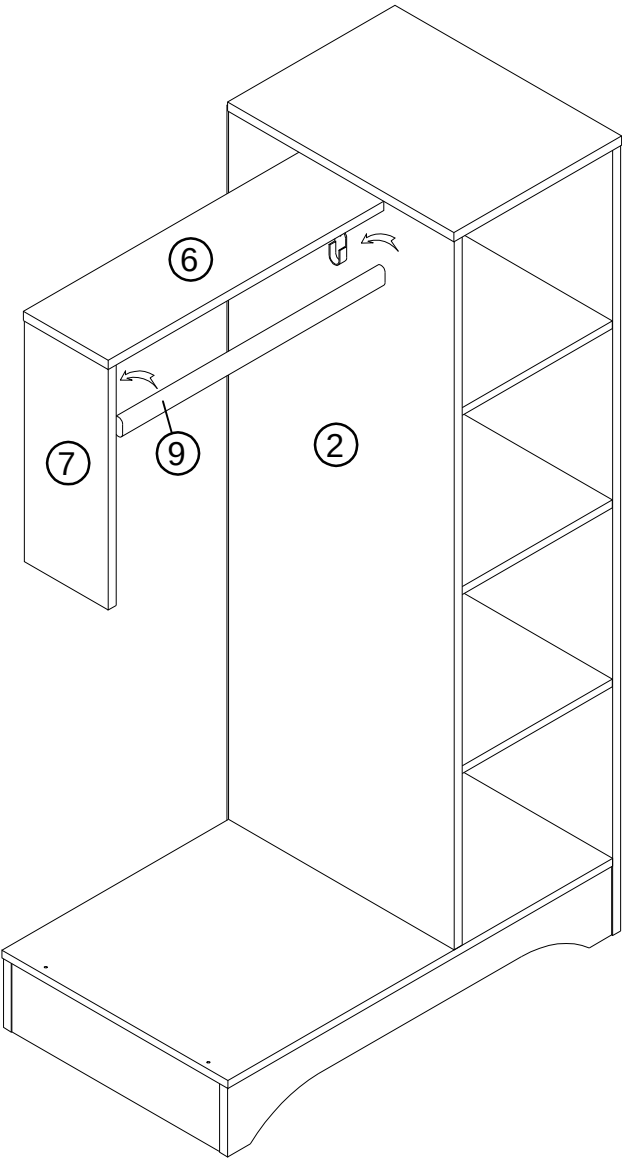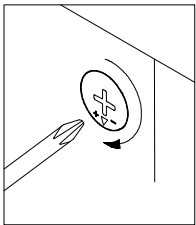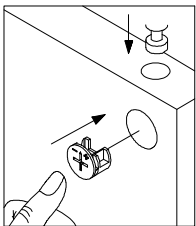

STEP 15

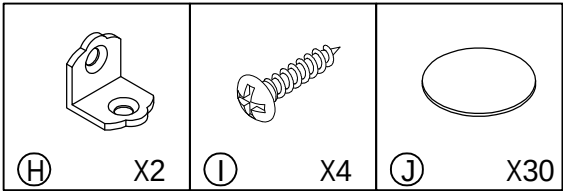



Opition 1

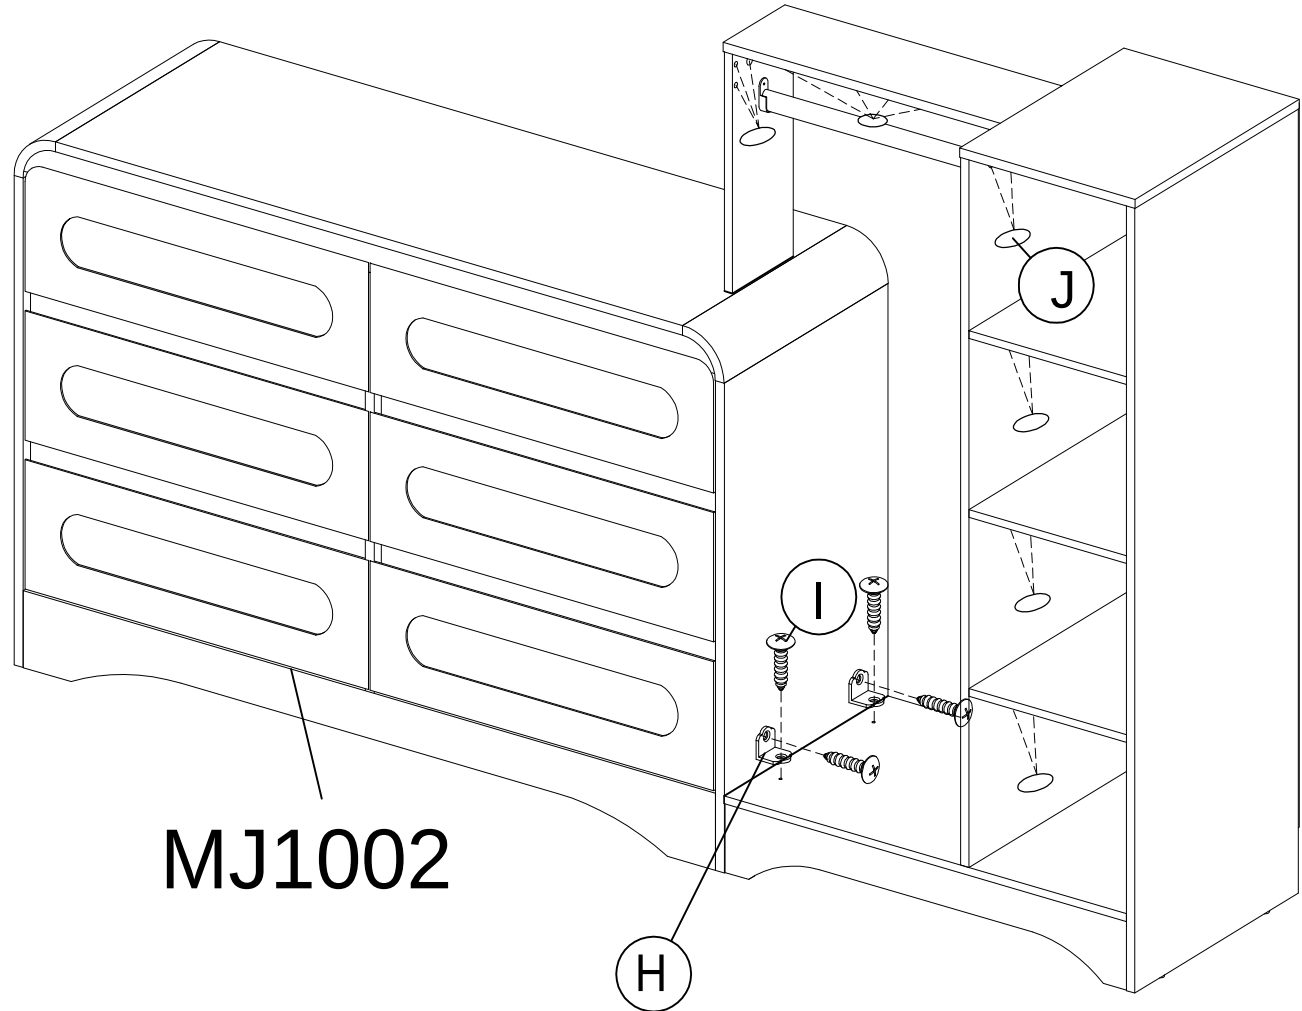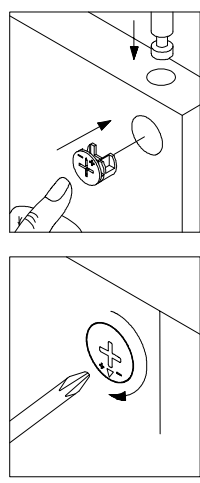

Note: ask for assistance on this step.




STEP 16

Opition 1

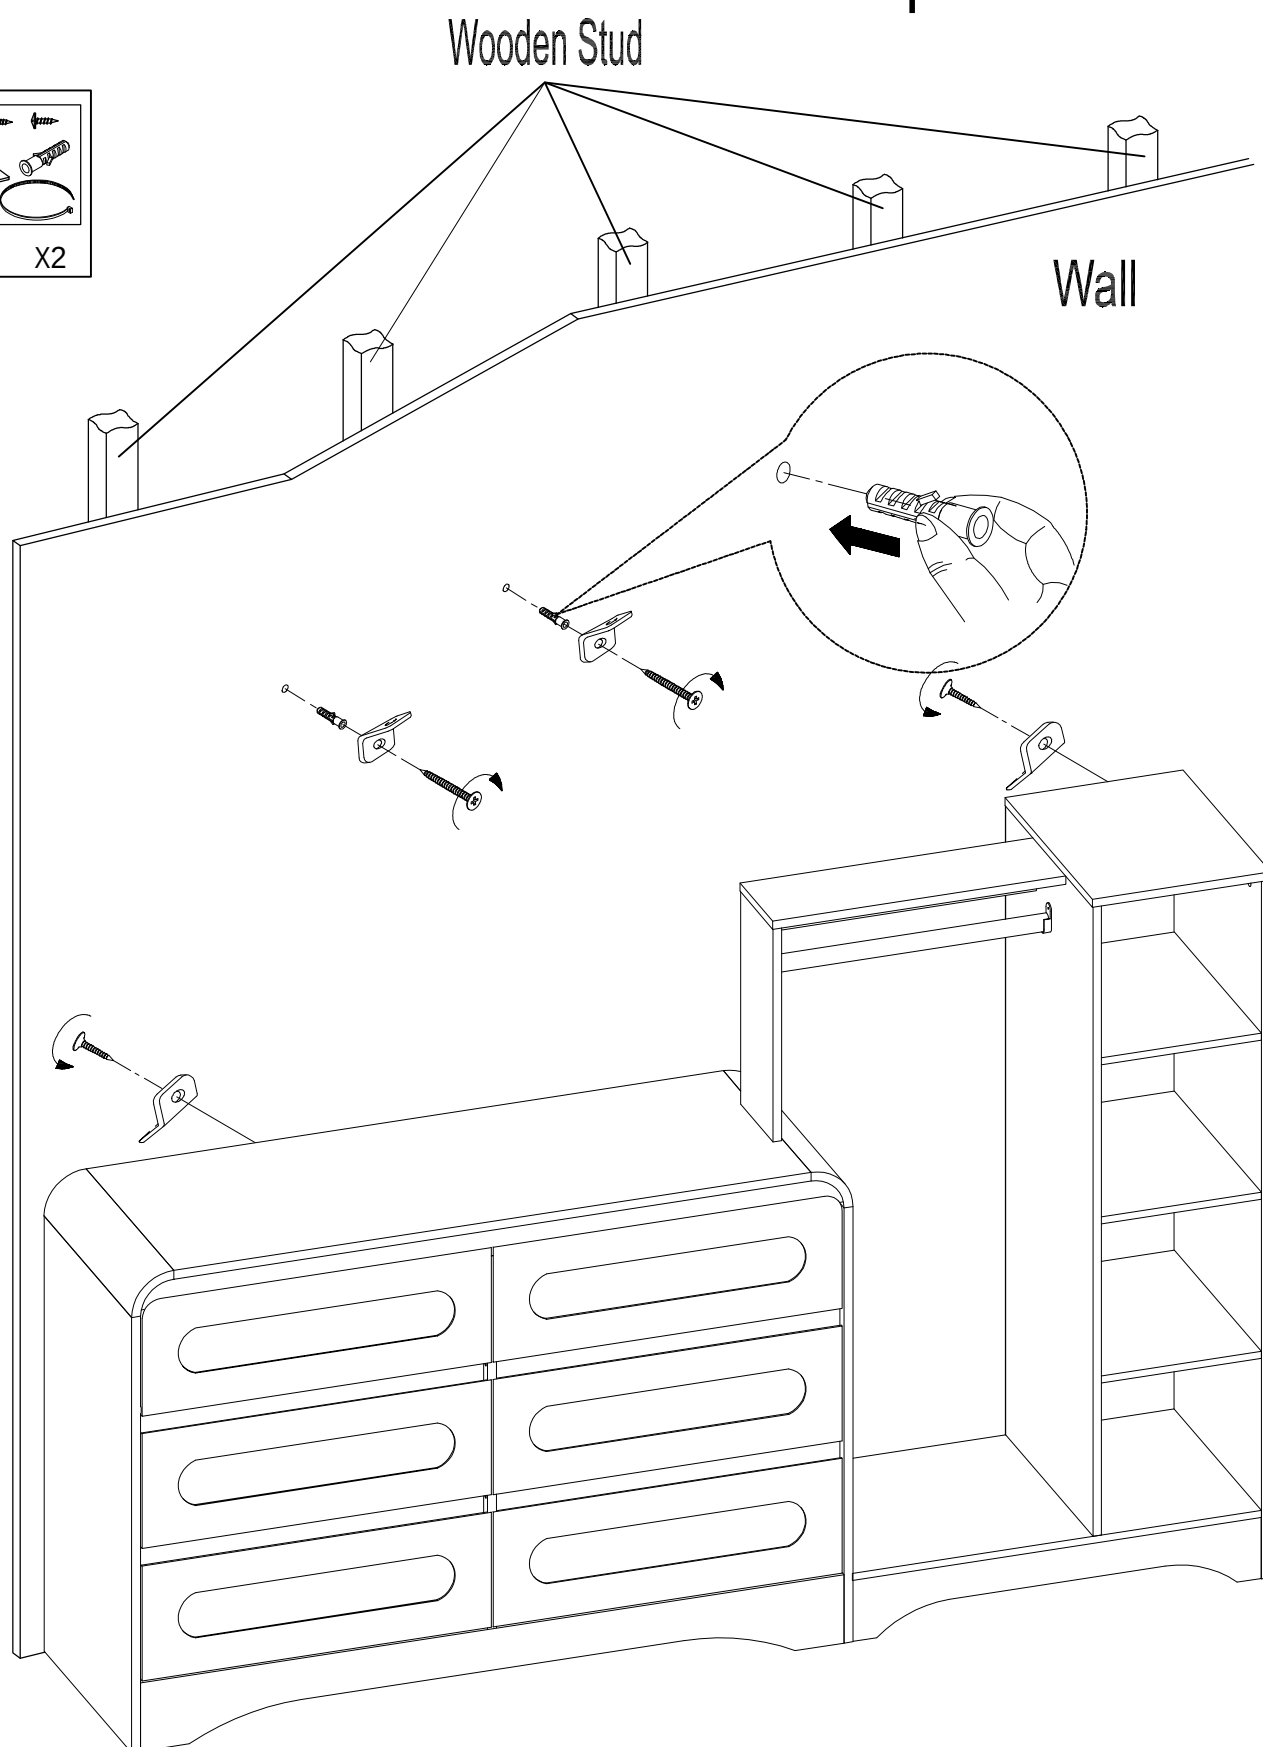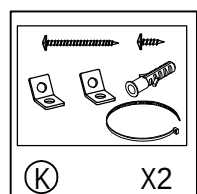


STEP 17

Opition 1

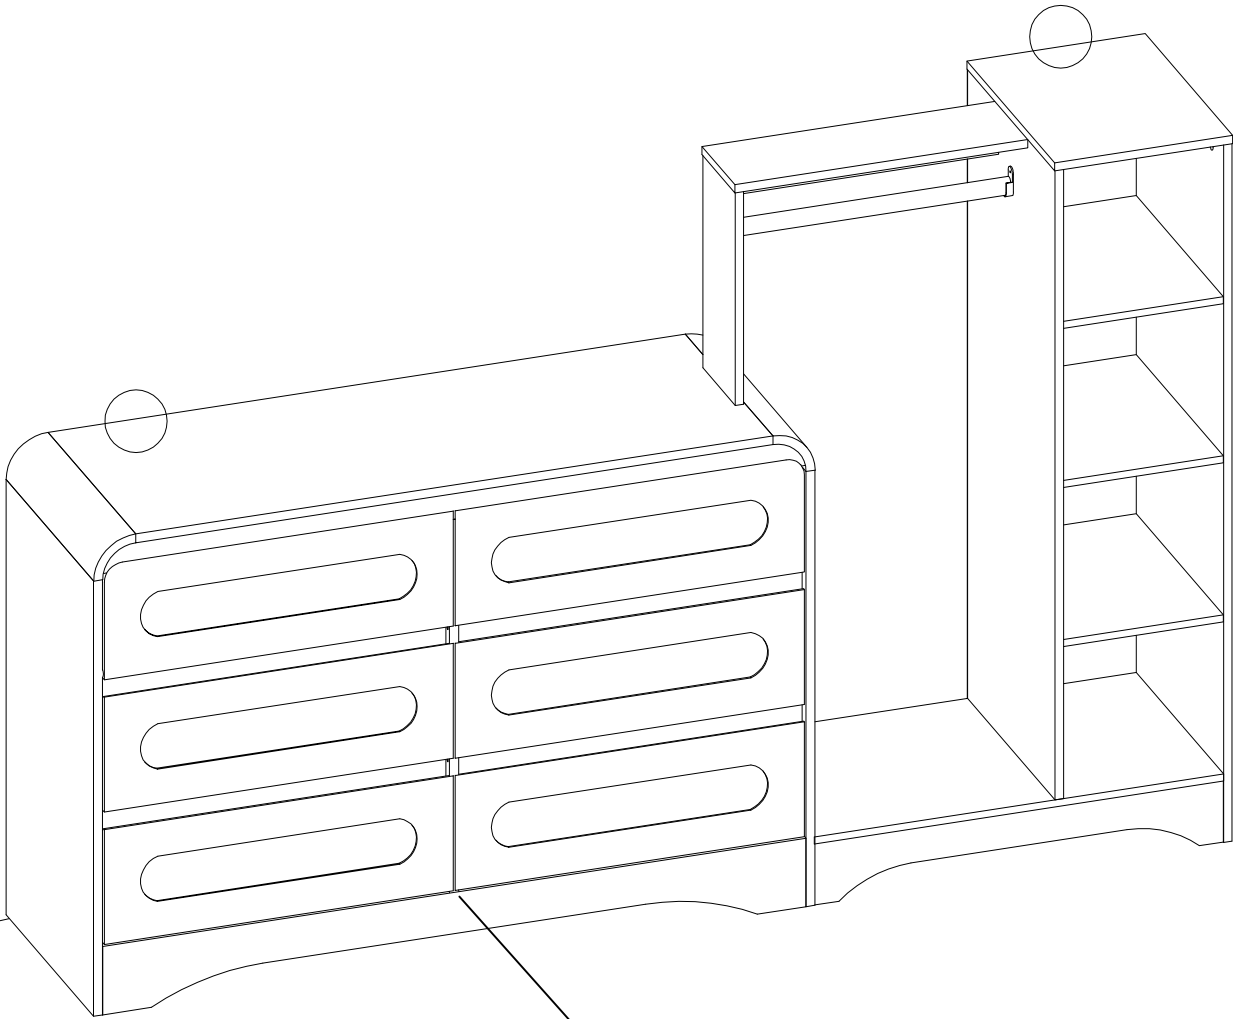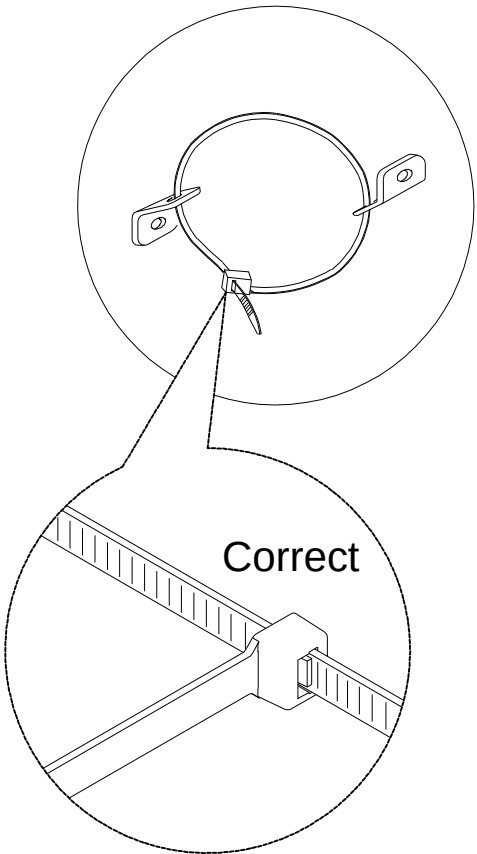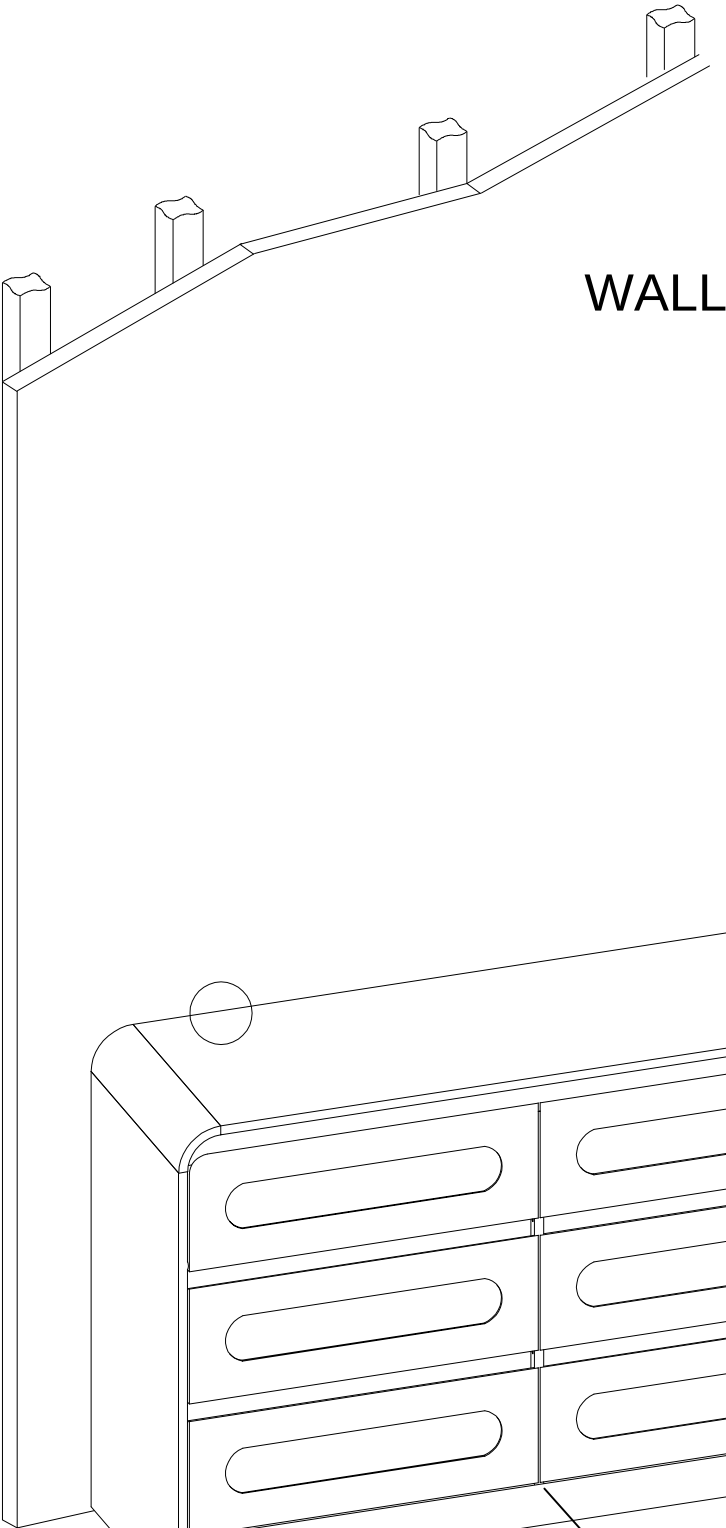


MJ1002


STEP 18

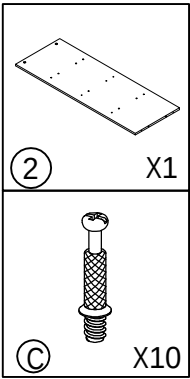


Opition 2

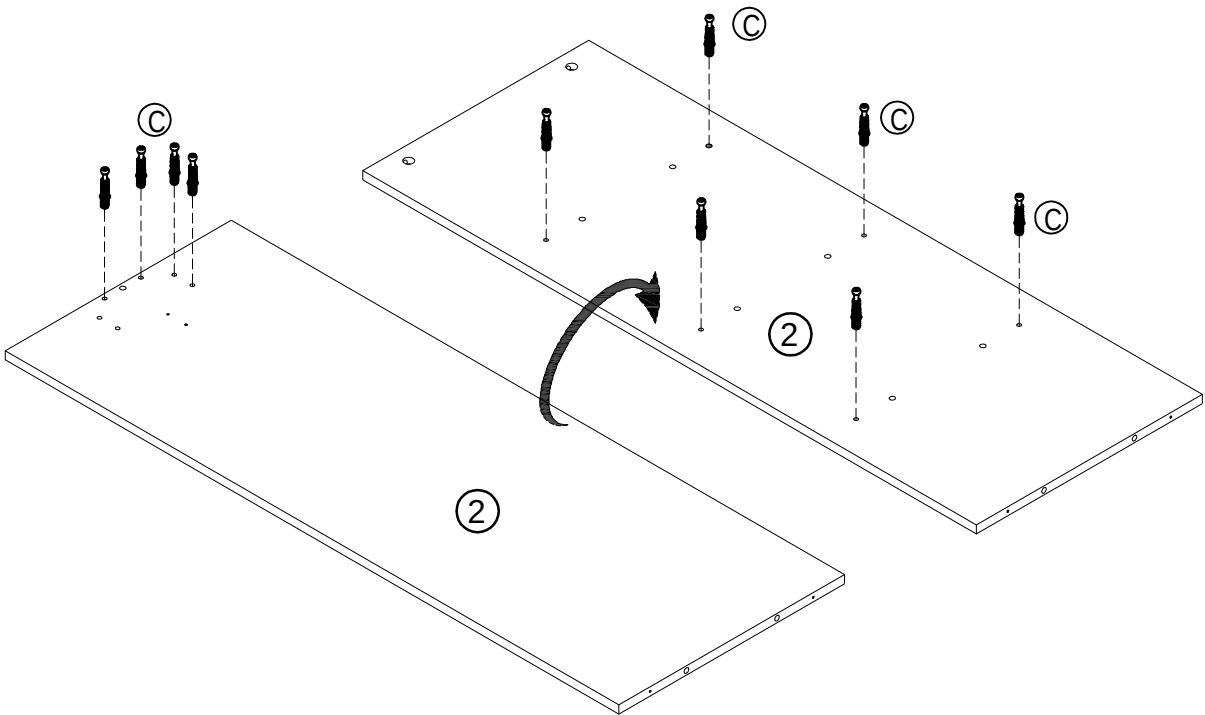


STEP 19

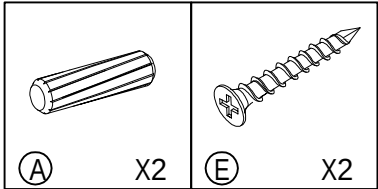



Opition 2

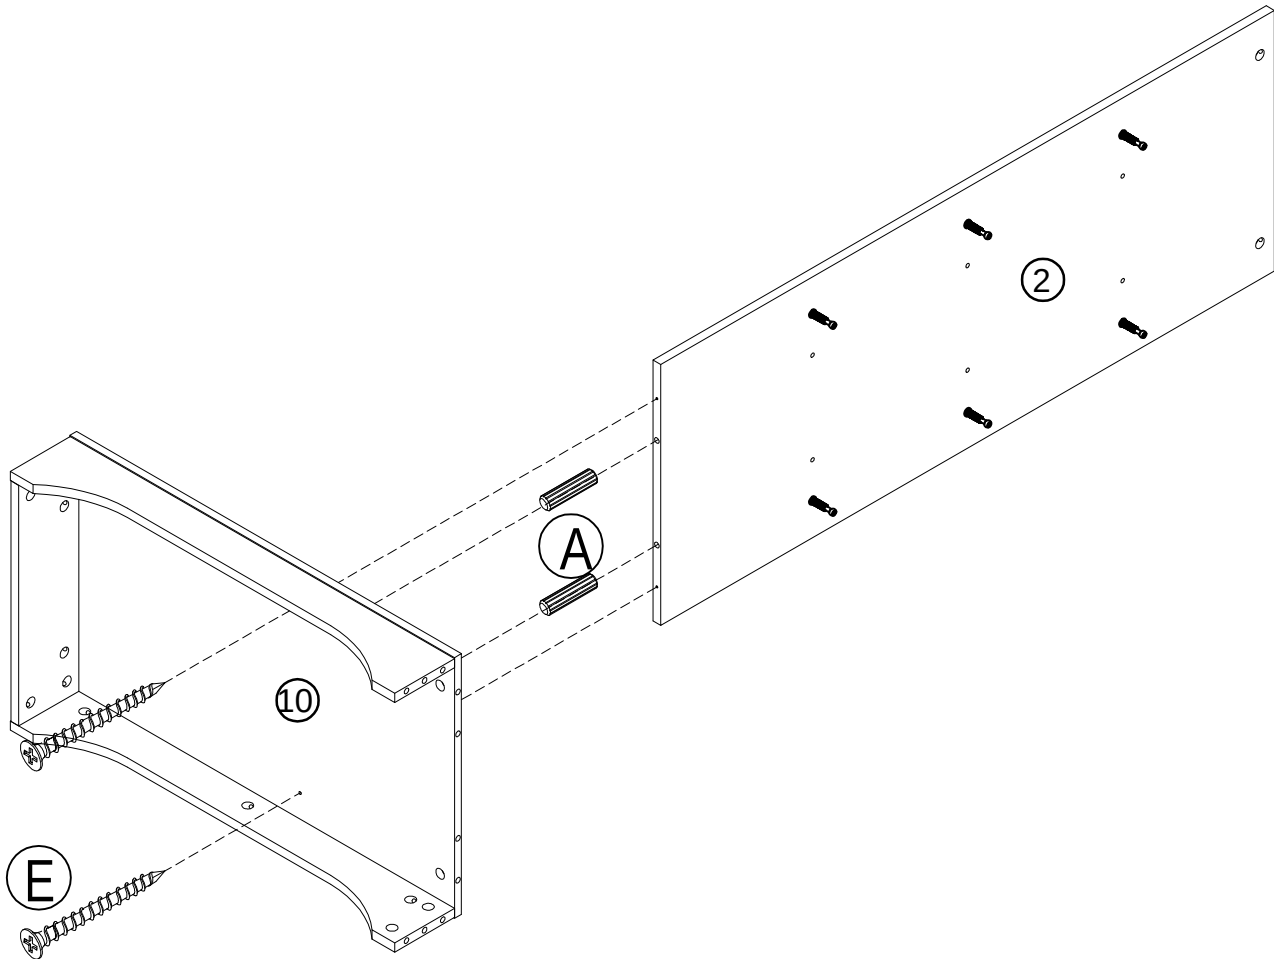


STEP 20

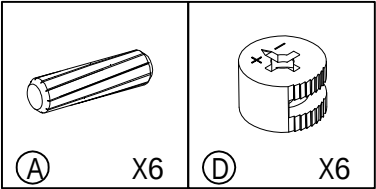



Opition 2

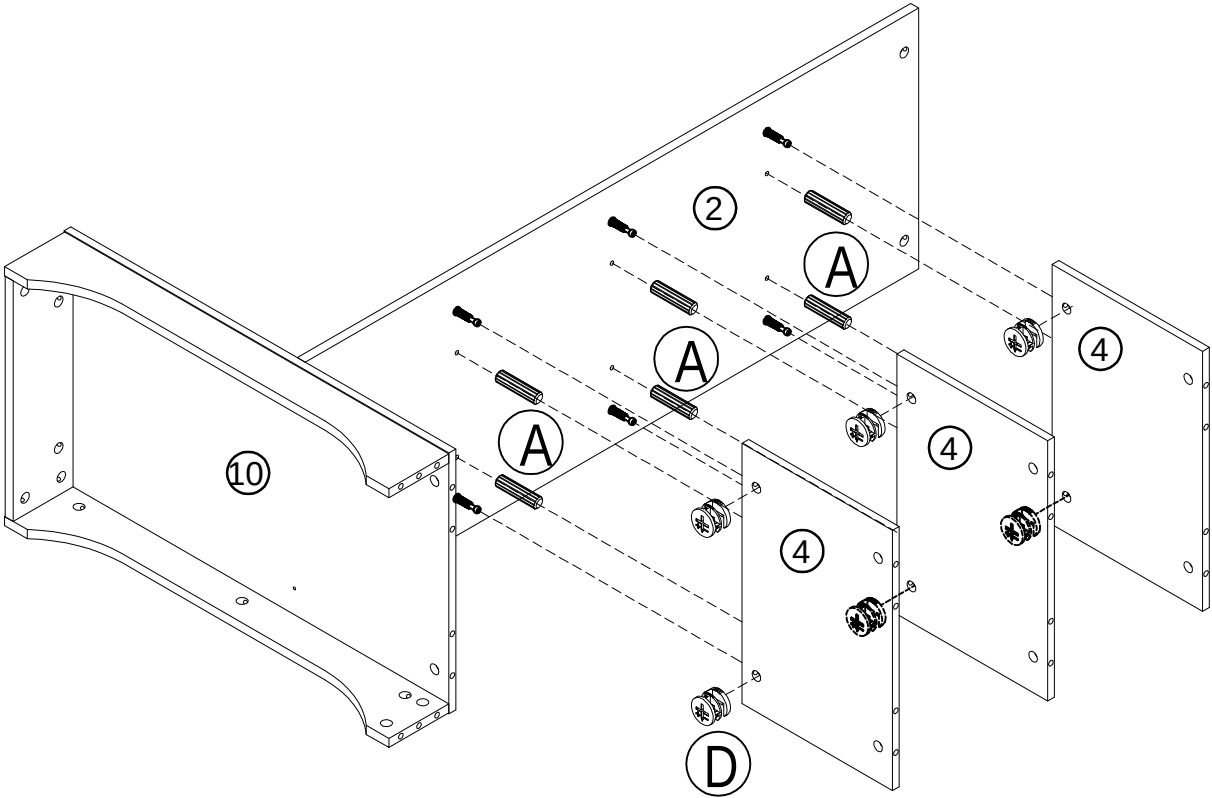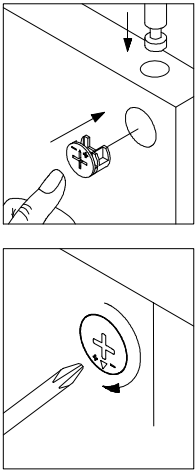

STEP 21


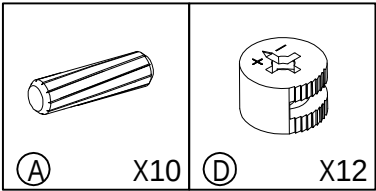


Opition 2

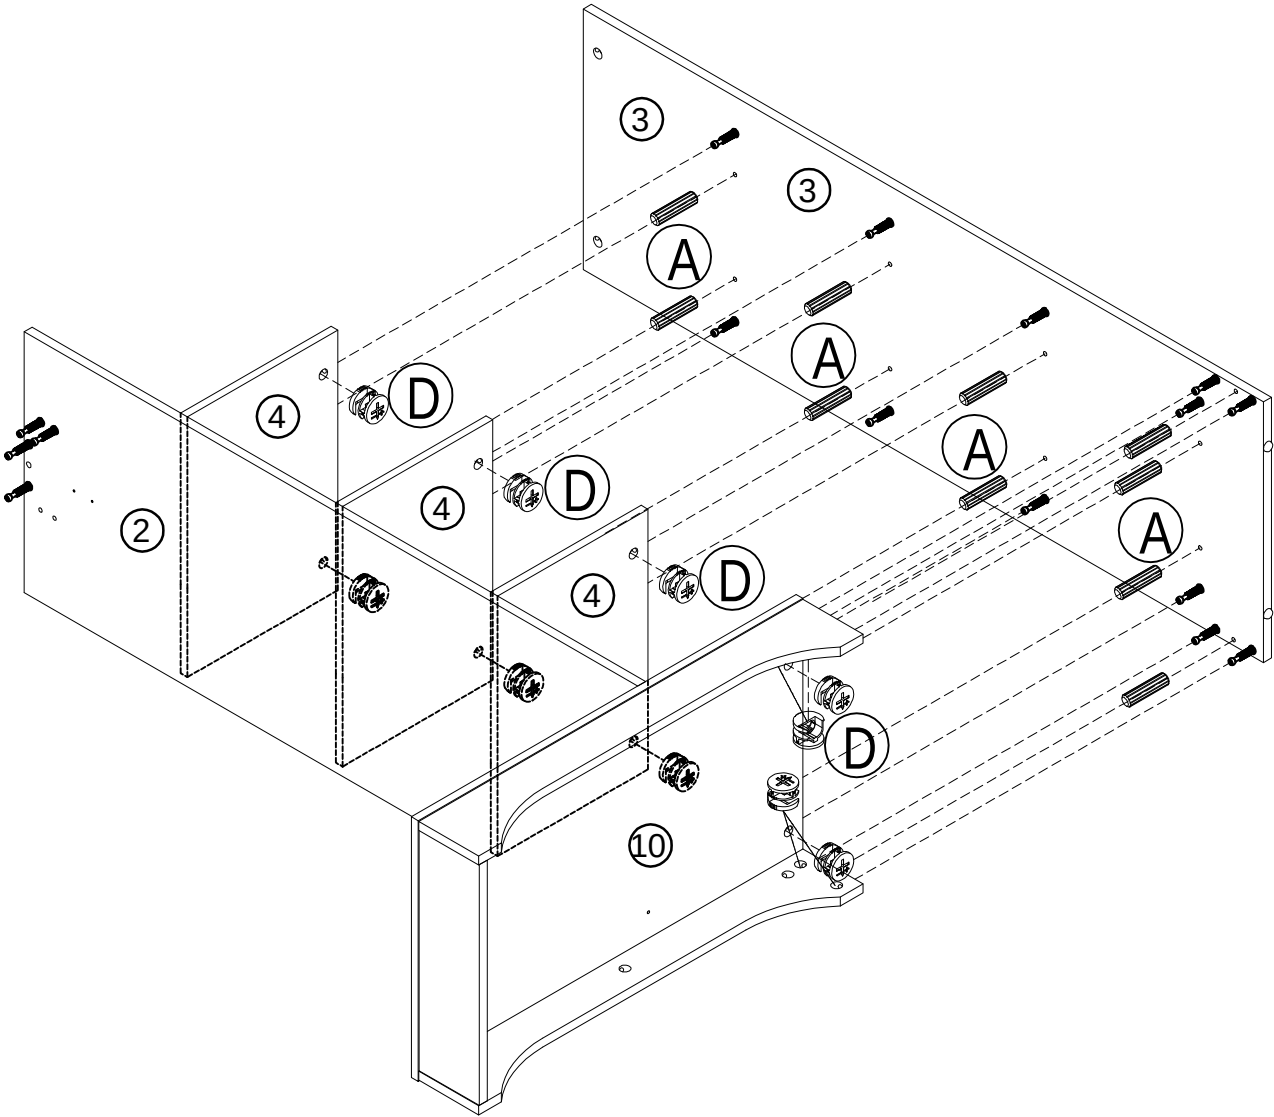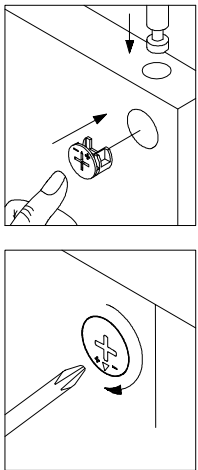


Note: ask for assistance on this step.


STEP 22

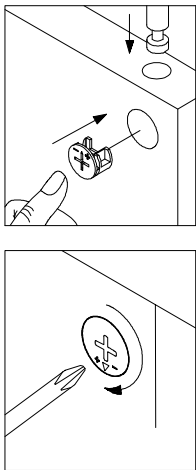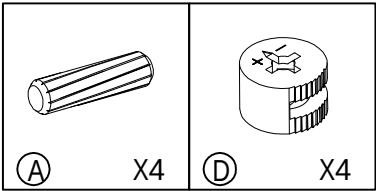




Opition 2

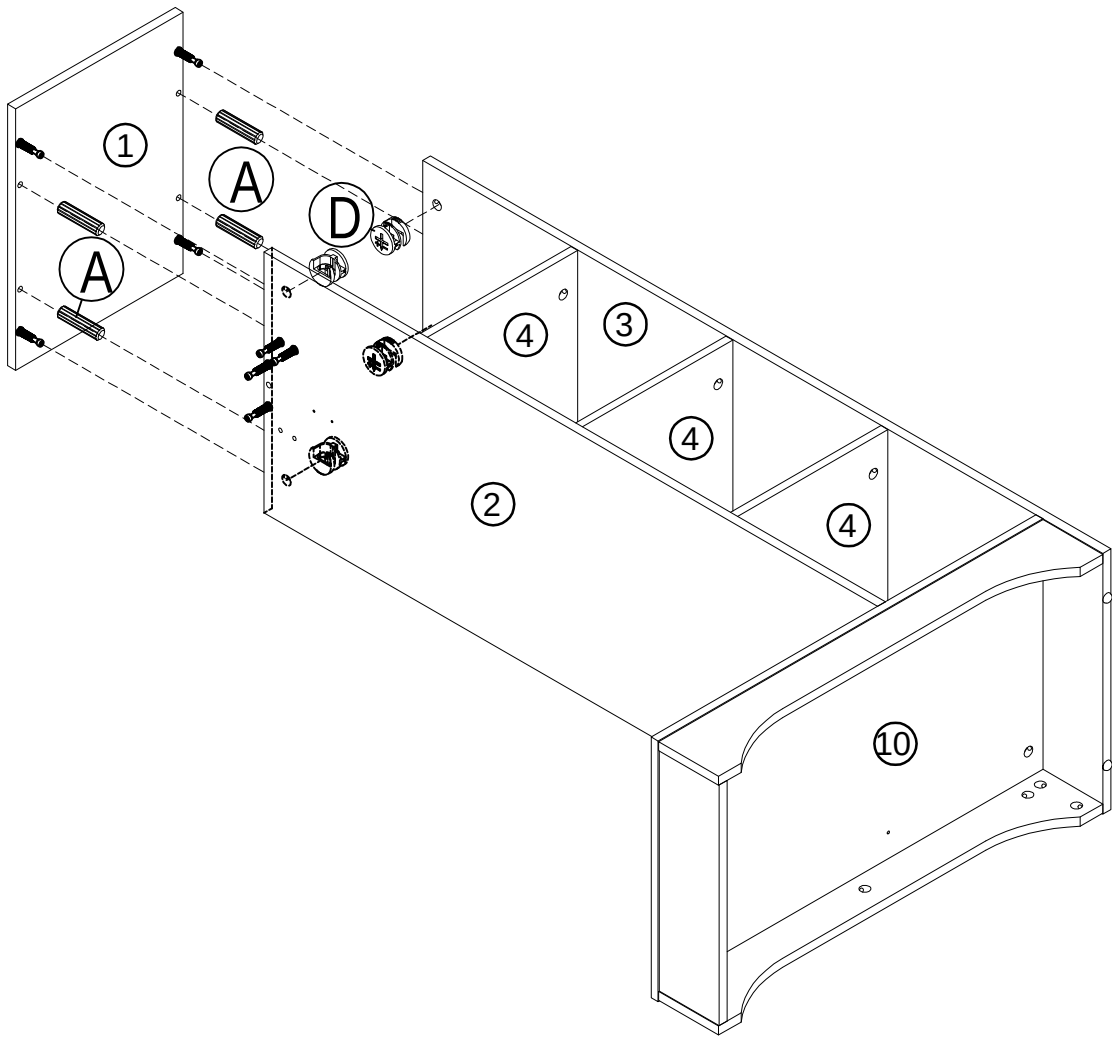

STEP 23



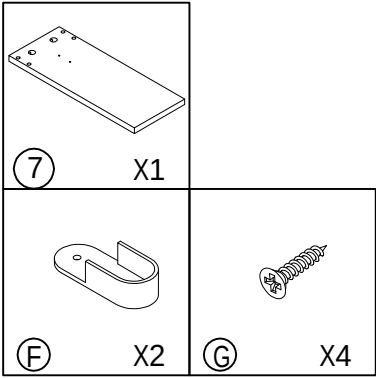


Opition 2

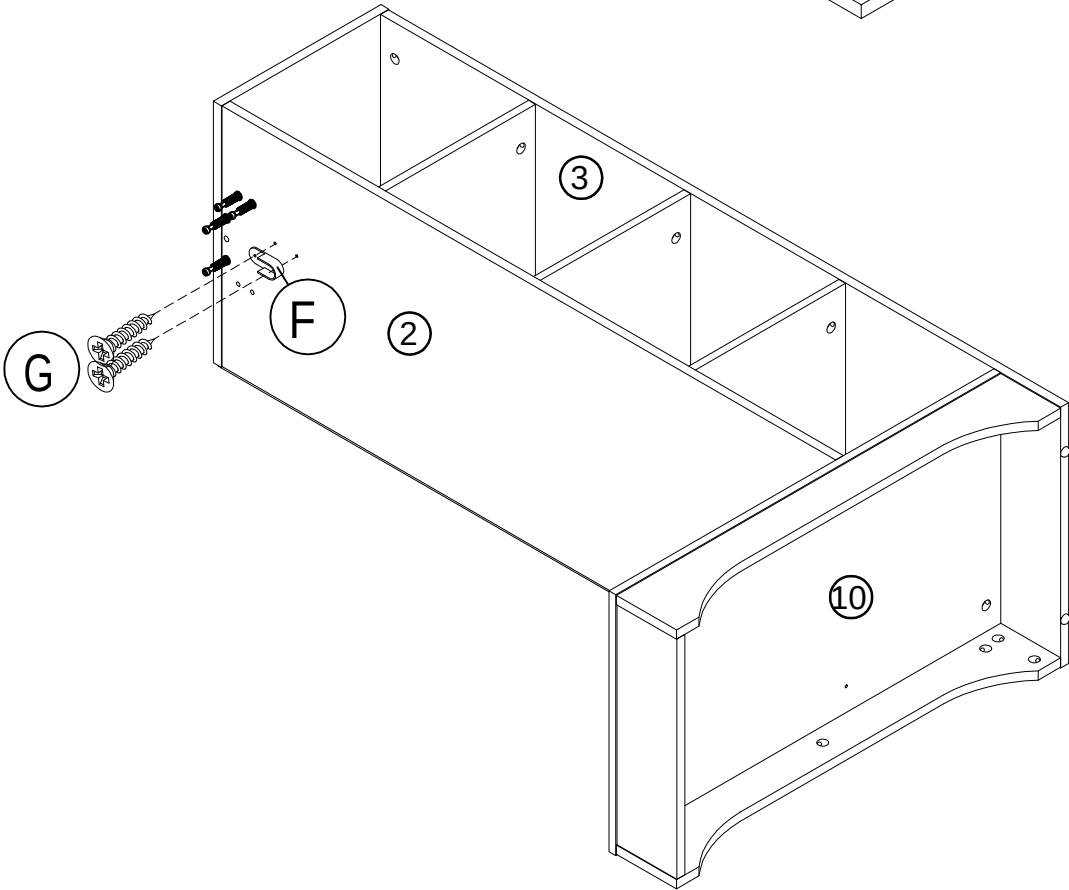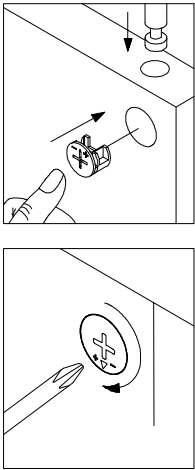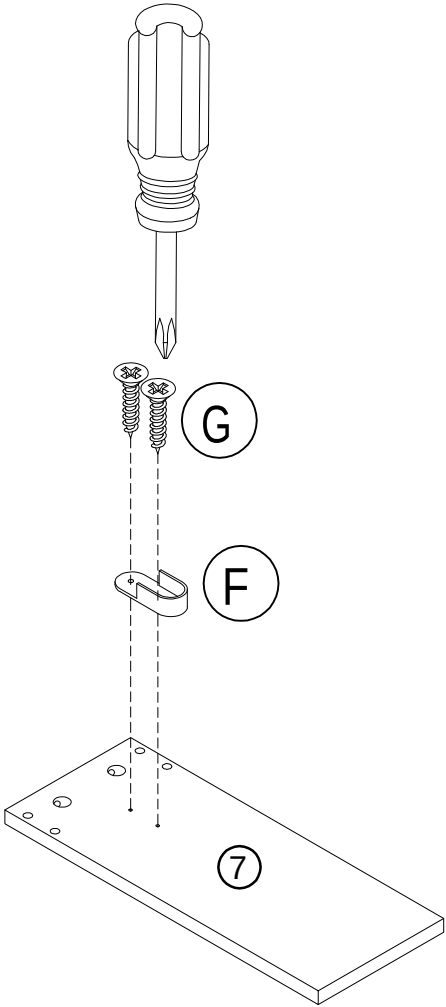





STEP 24

Opition 2

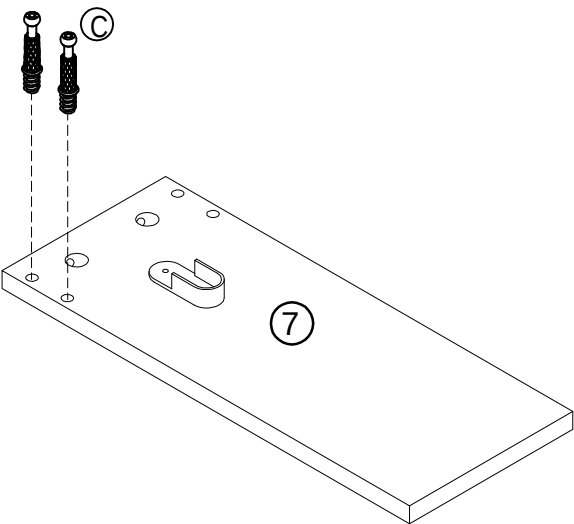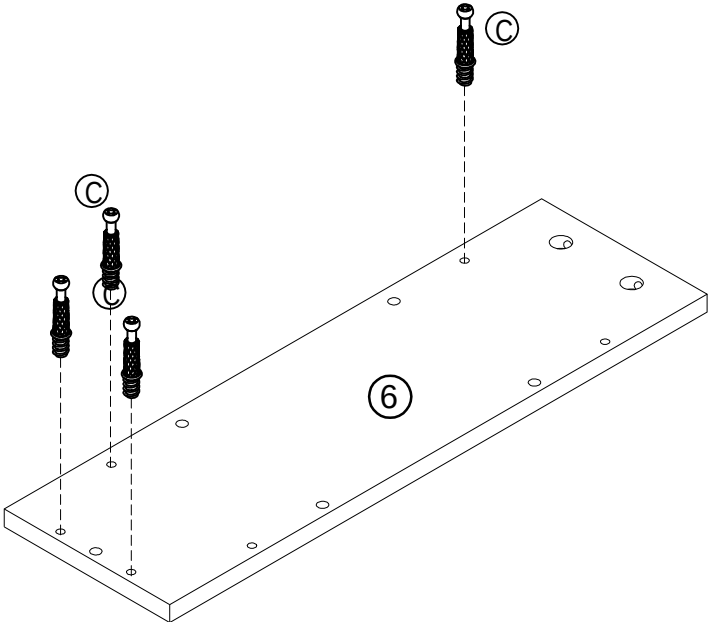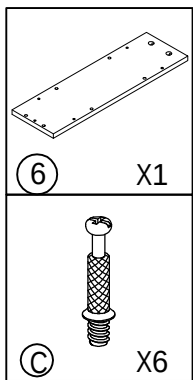



STEP 25

Opition 2

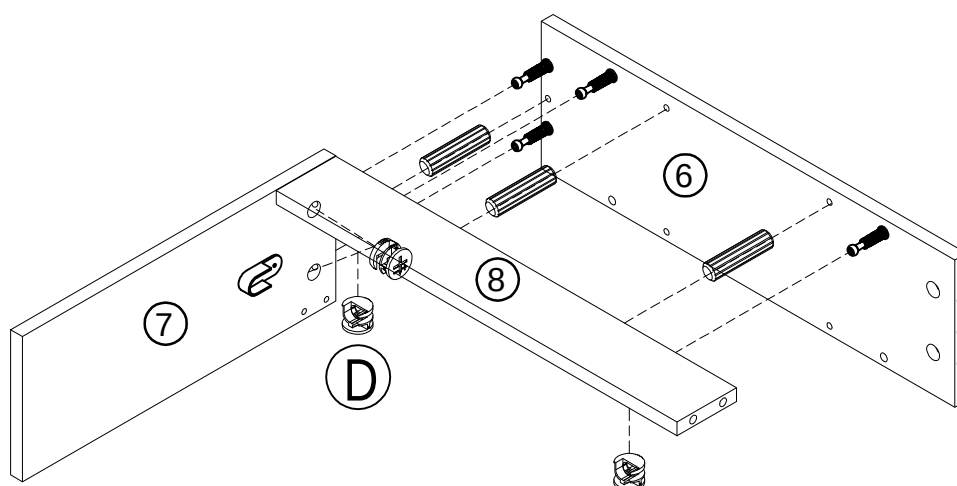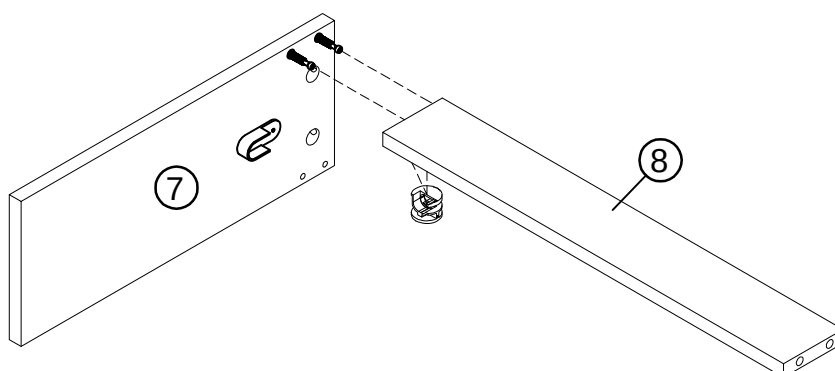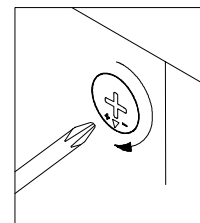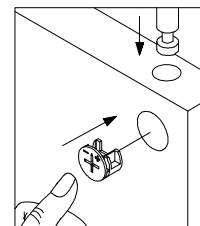


Note: ask for assistance on this step.



STEP 26

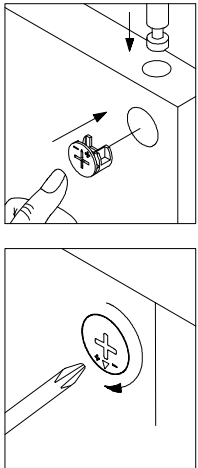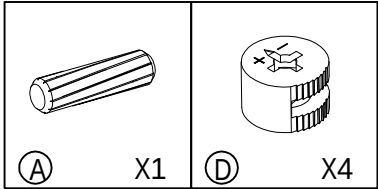


Opition 2

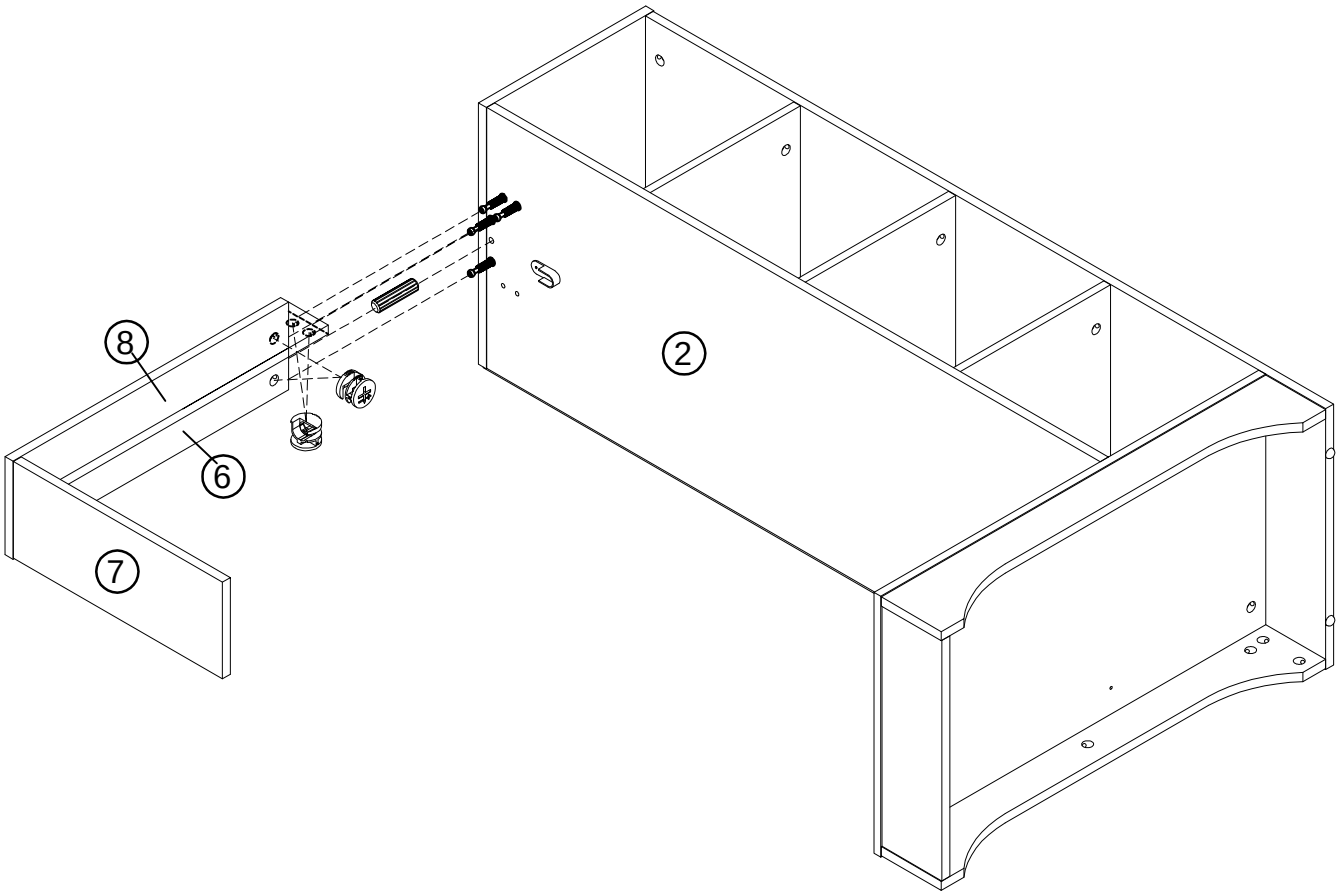




STEP 27

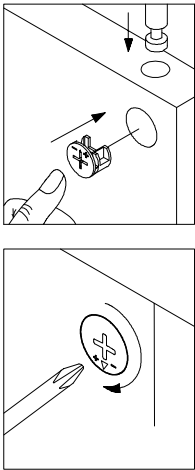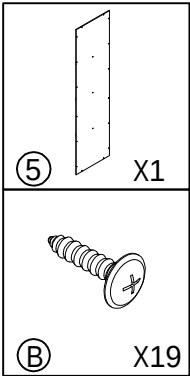


Opition 2

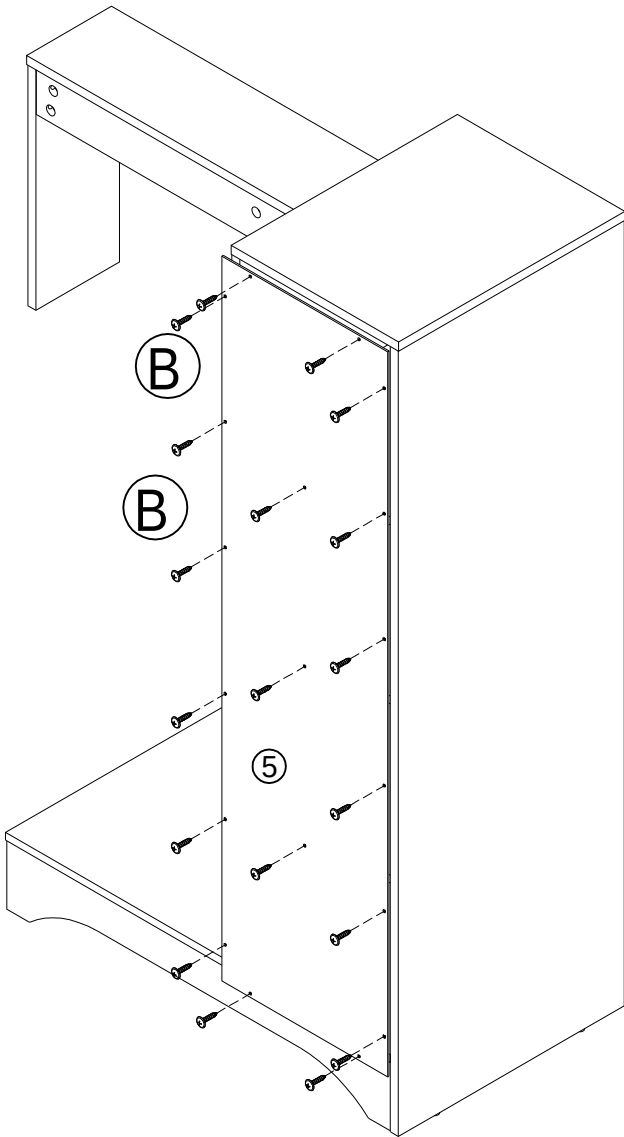


STEP 28

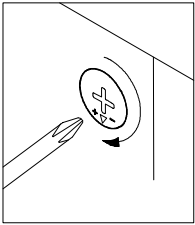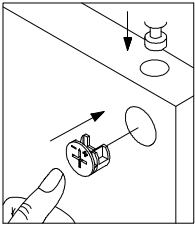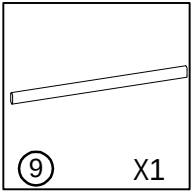




Opition 2

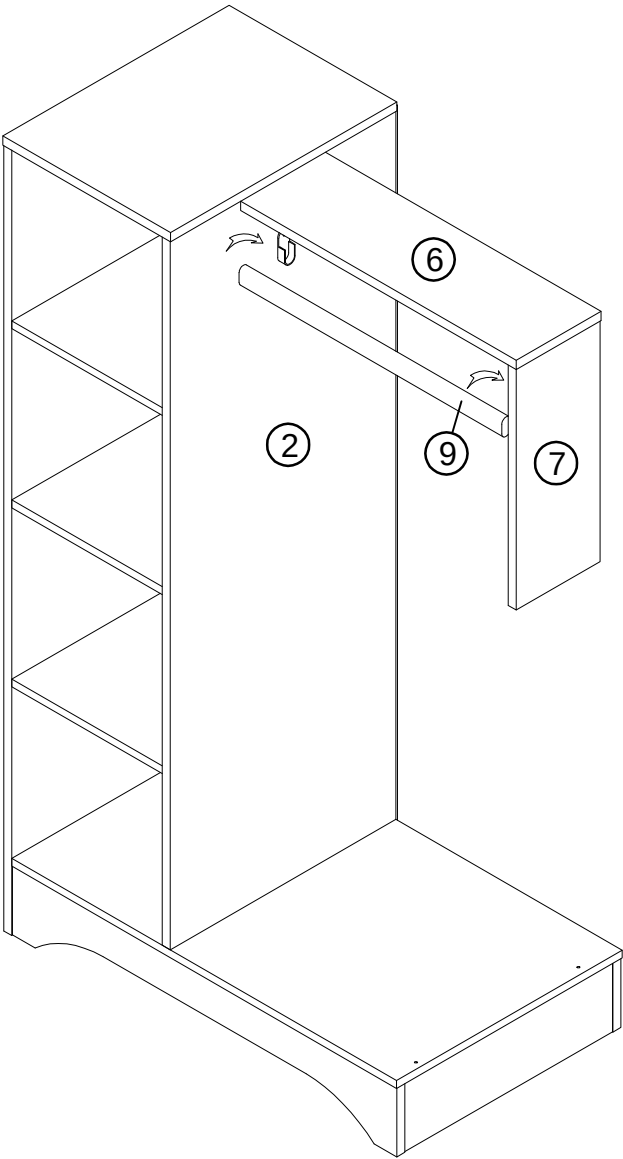

STEP 29

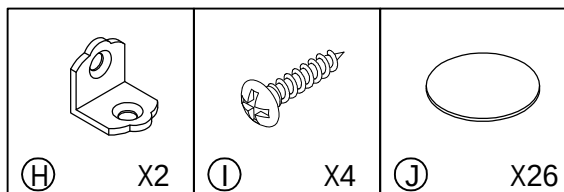



Opition 2

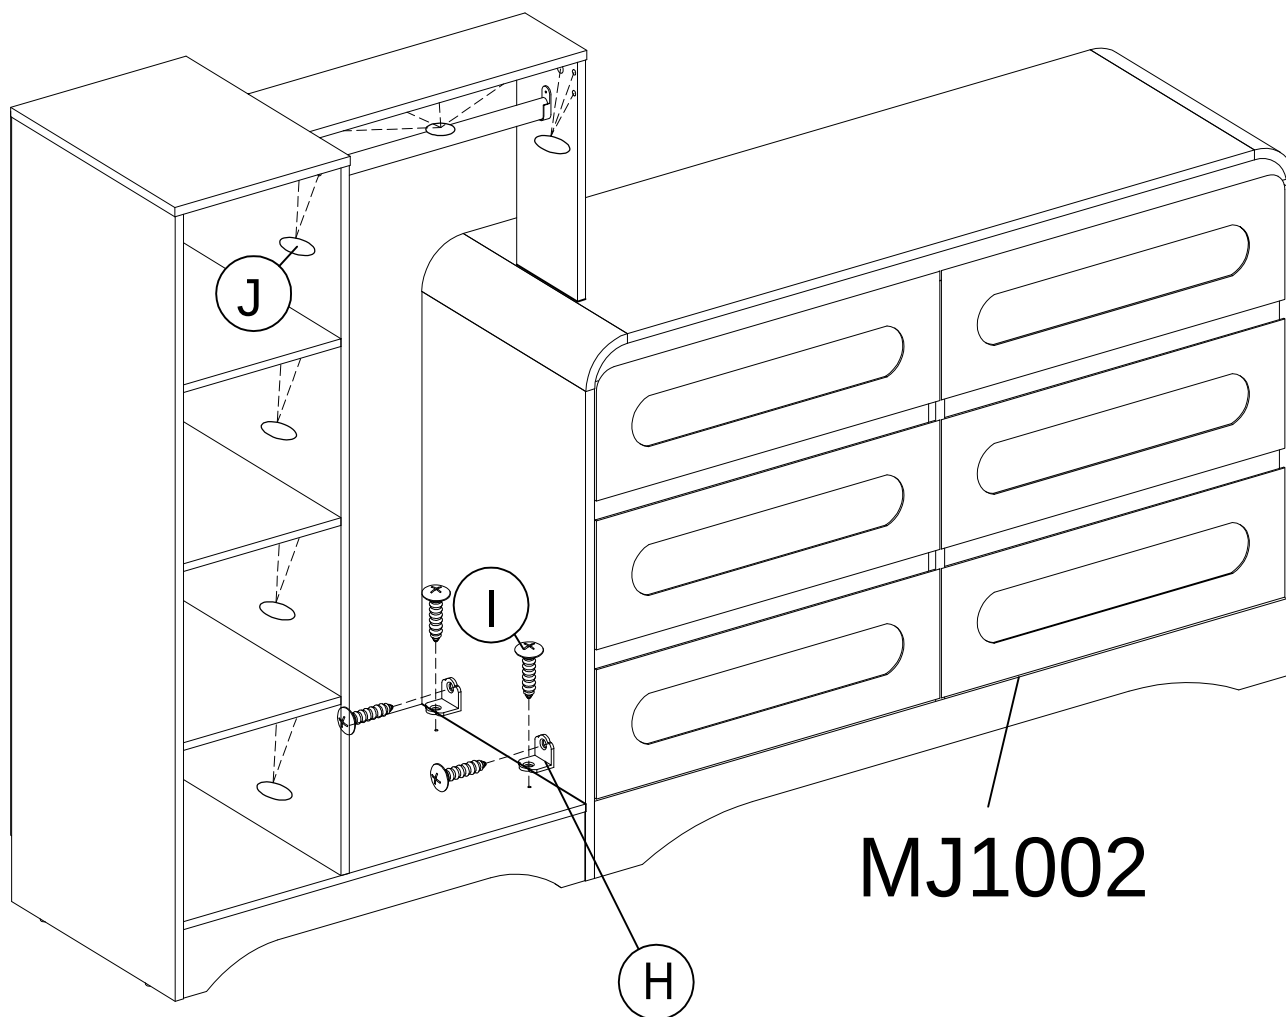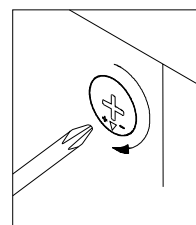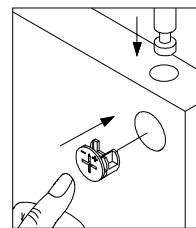

Note: ask for assistance on this step.


STEP 30

Opition 2

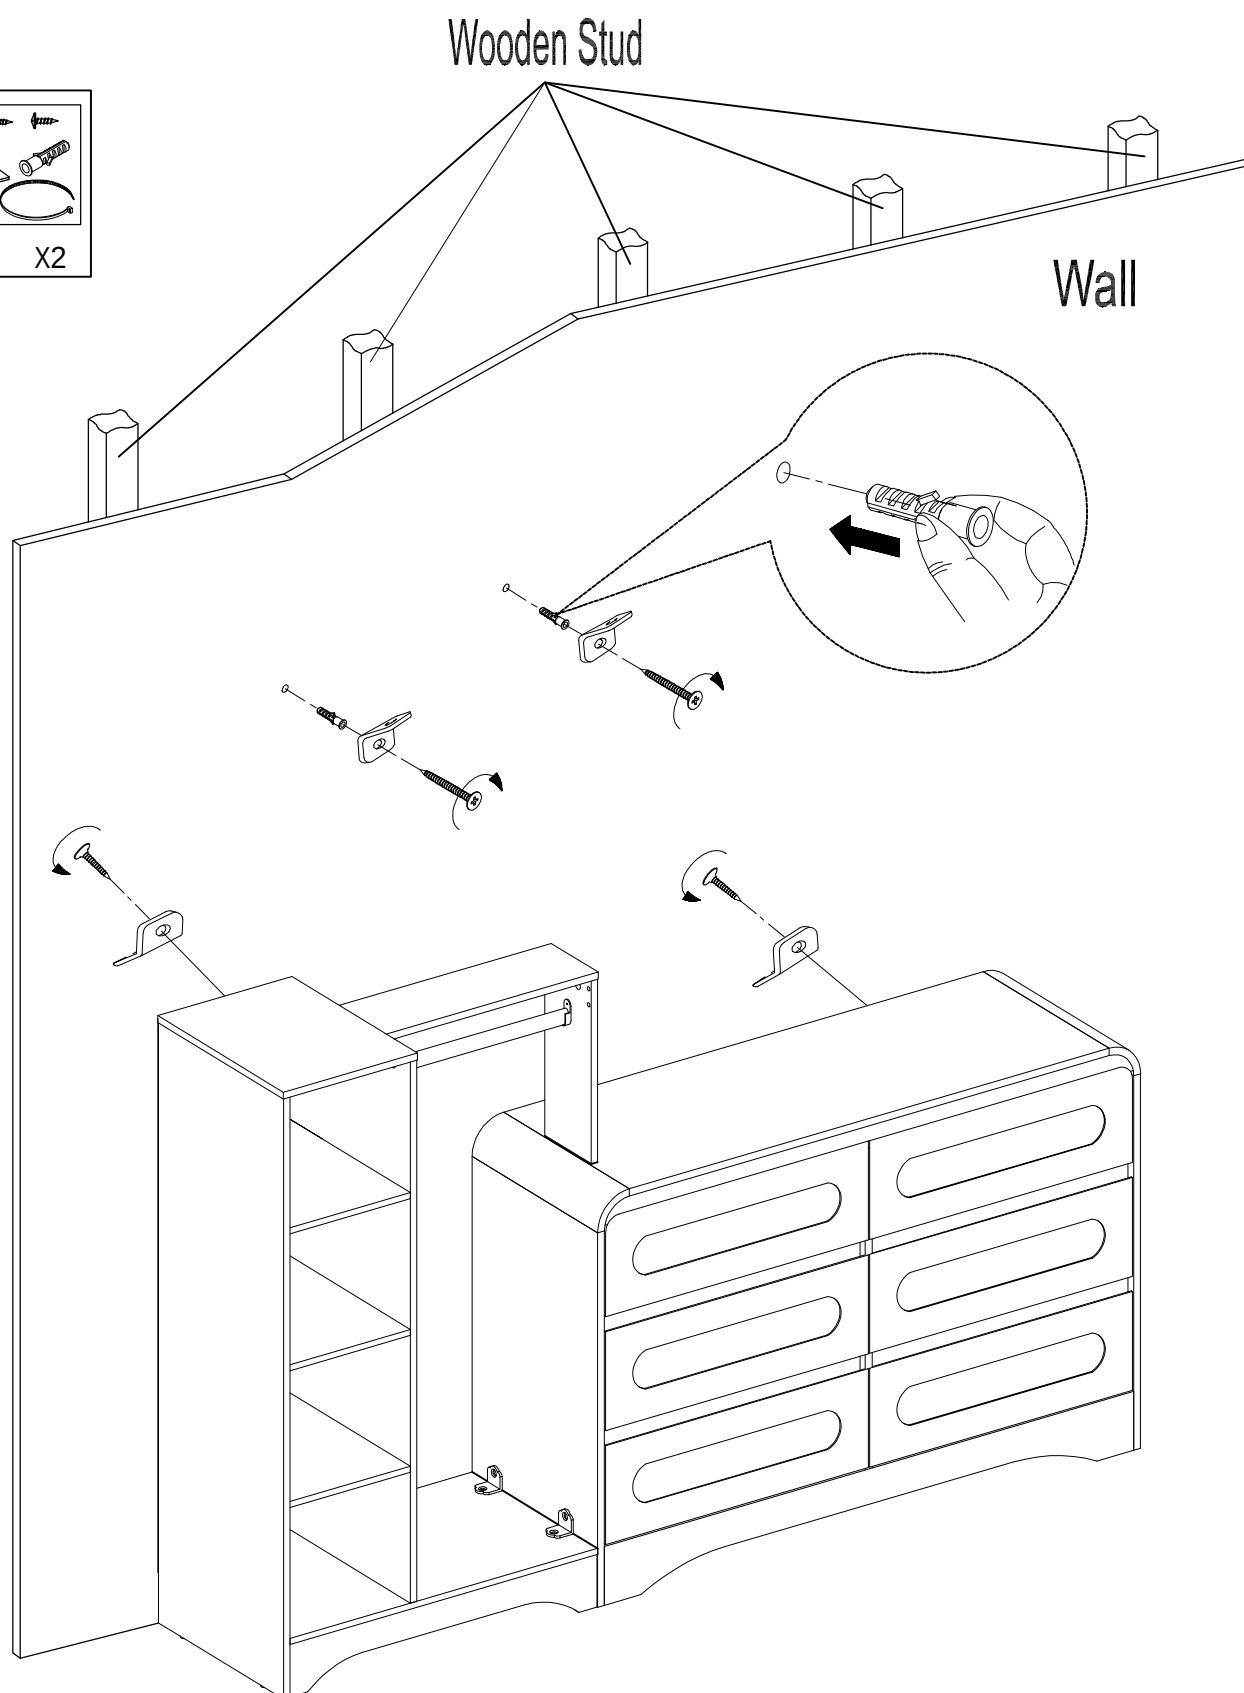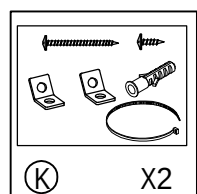


STEP 31

Opition 2

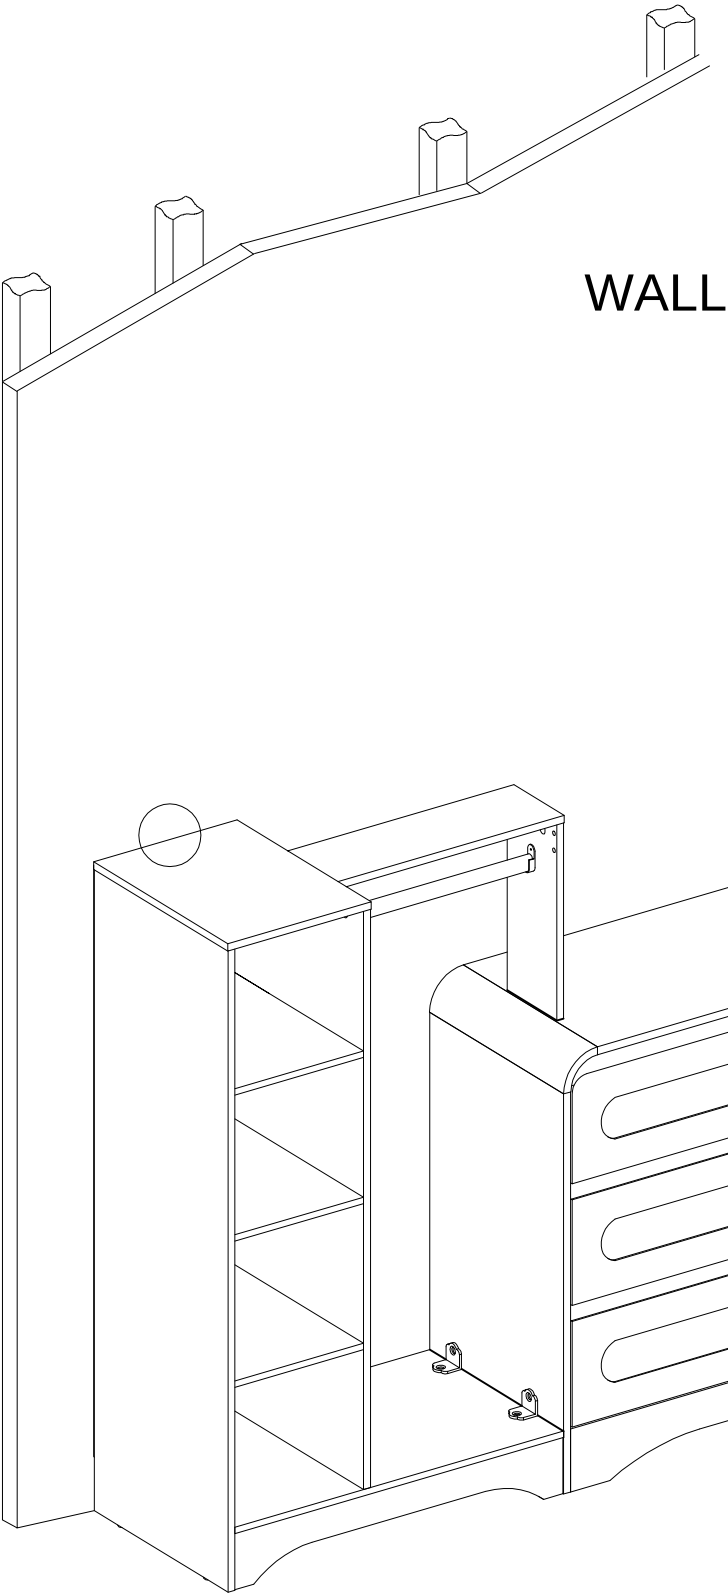

WALL

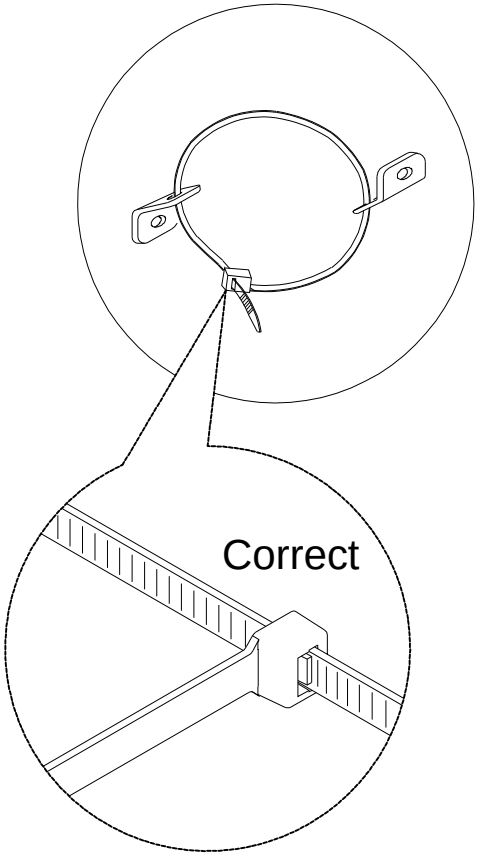

Correct

MJ1002