





## Full Bed

Assembly Instructions

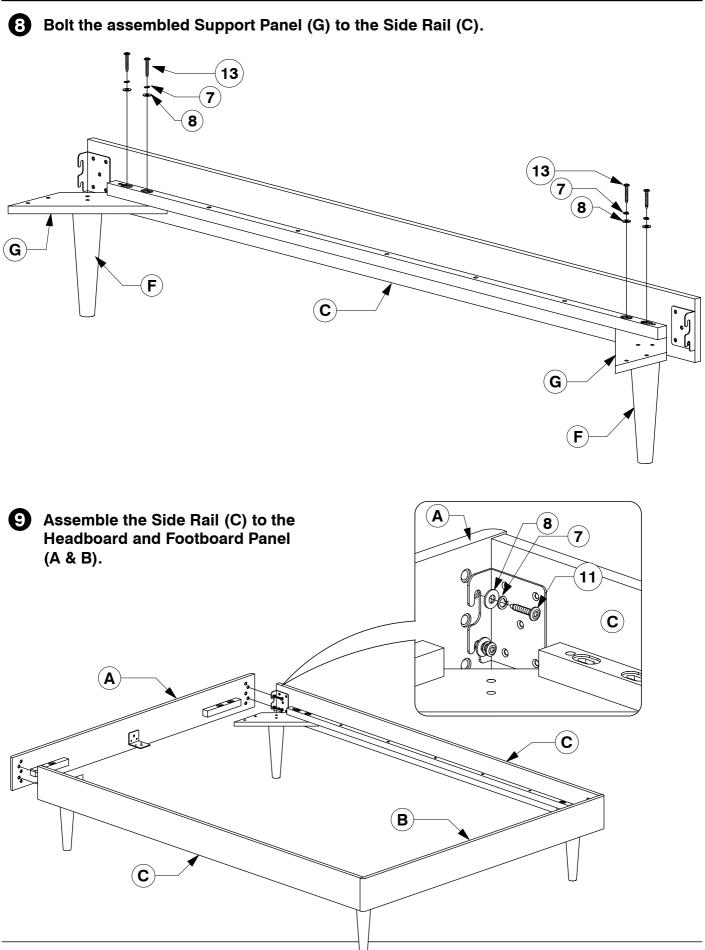


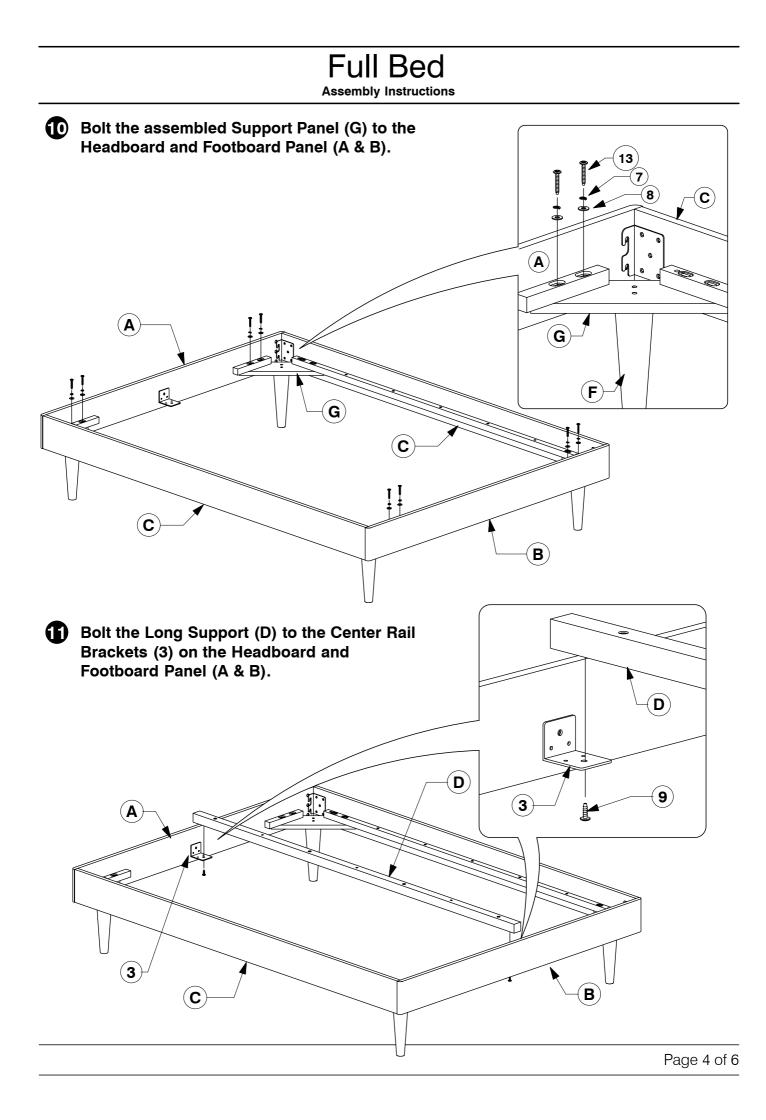

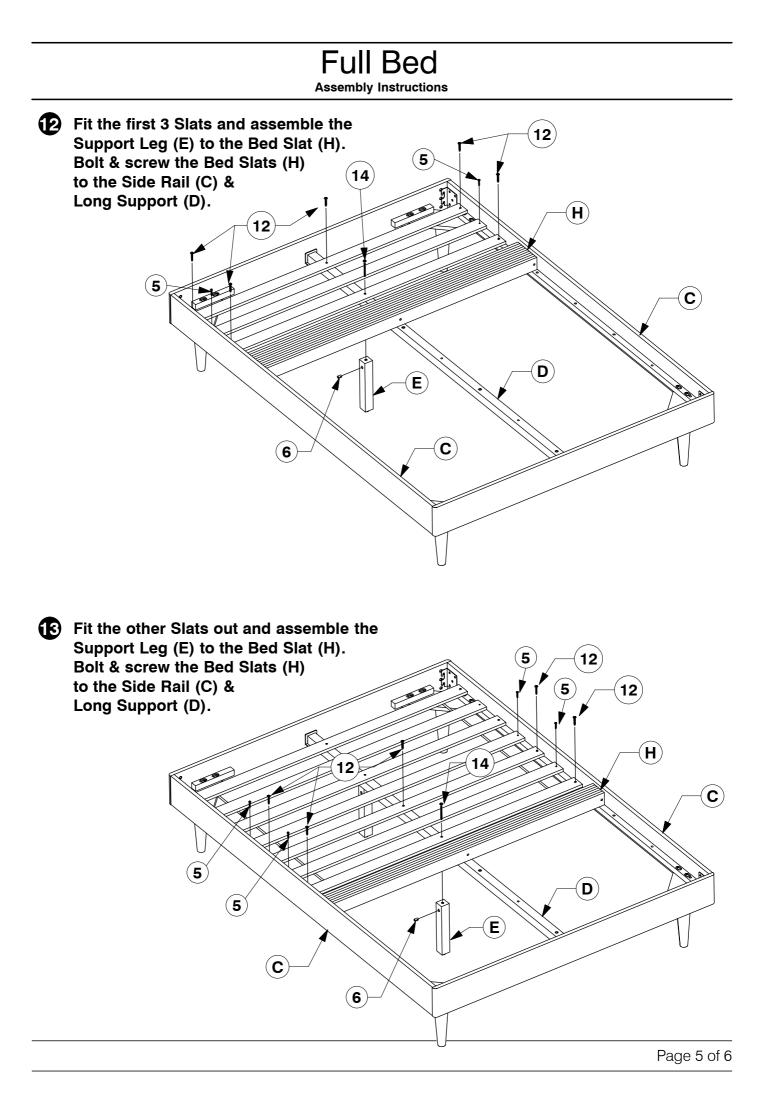

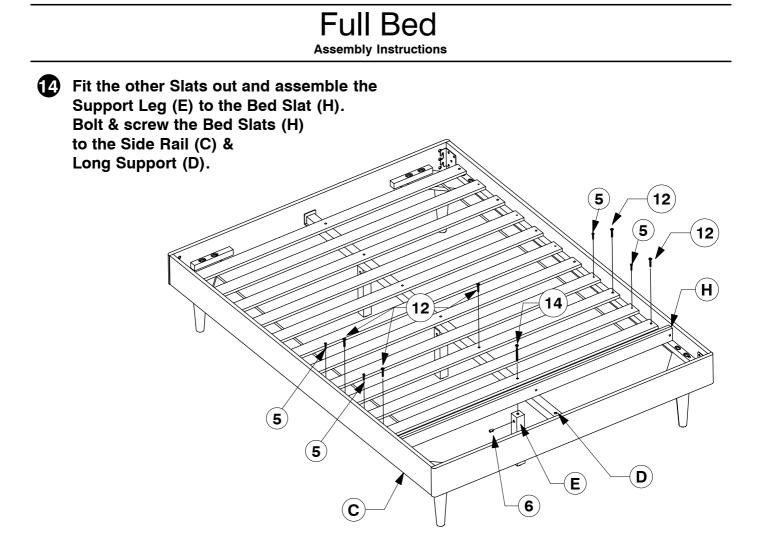


Bolt & screw the remaining Bed Slats (H) to the Side Rail (C).

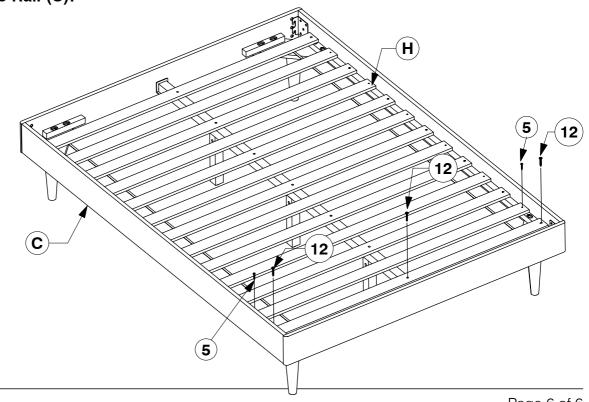

Page 6 of 6

## Full Headboard

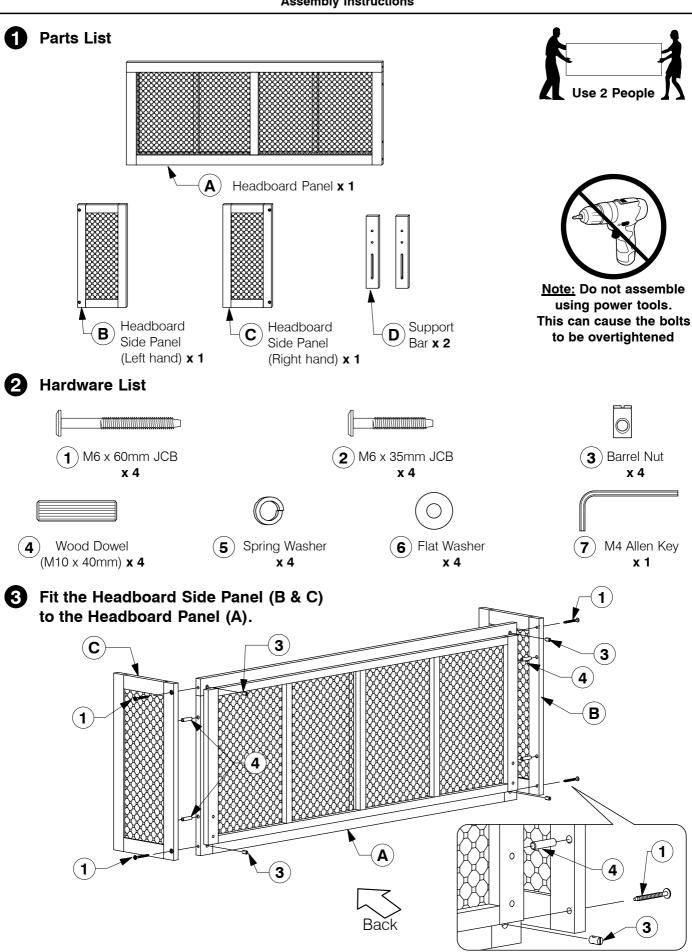

## Full Headboard

Assembly Instructions

