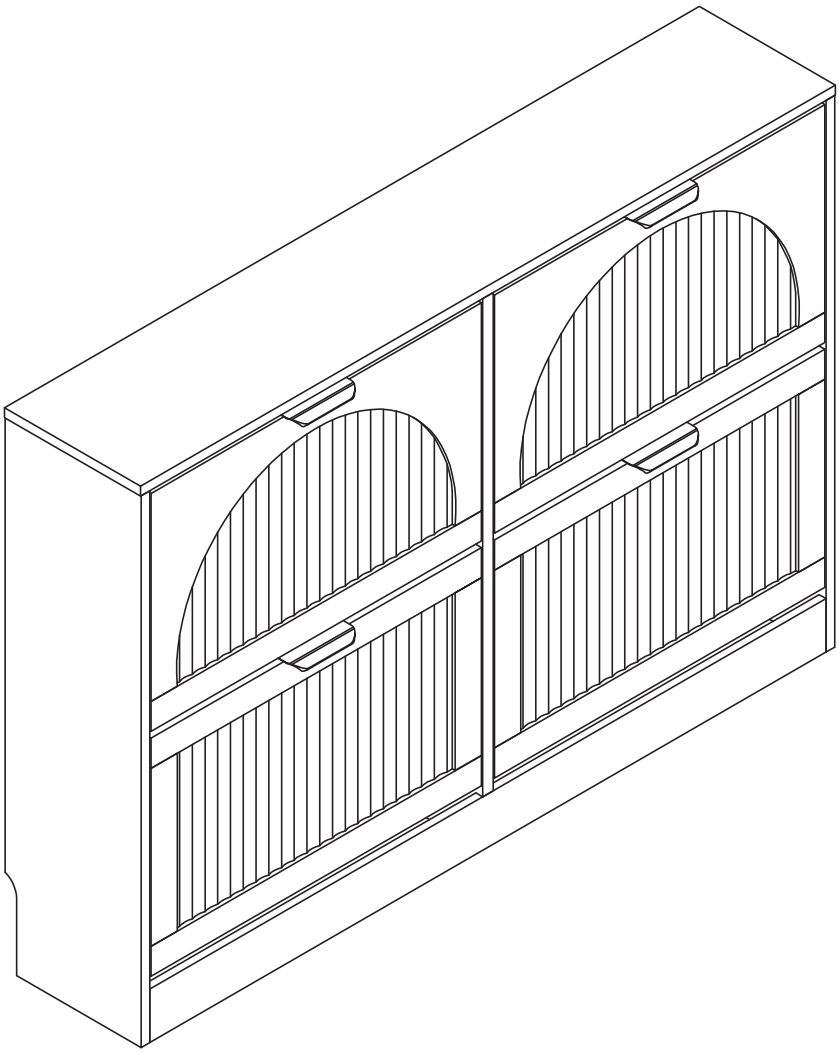
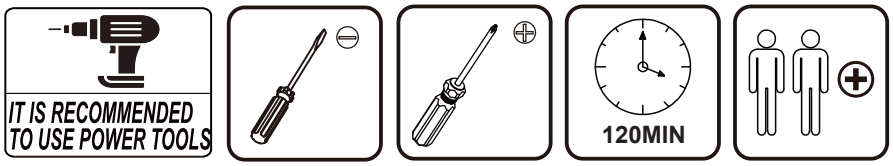
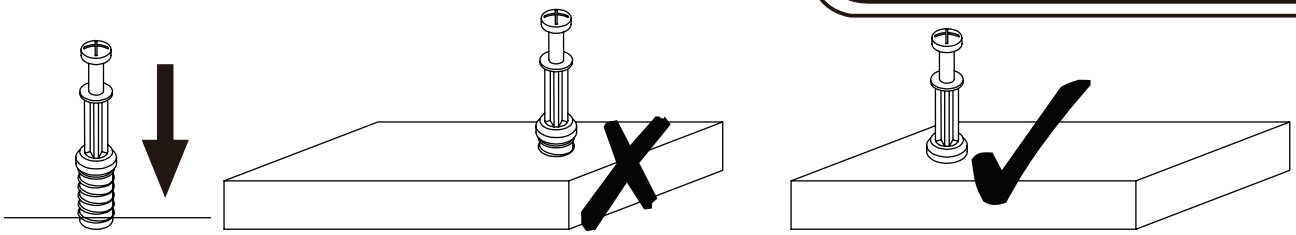
Please note: Items cannot be returned once assembled.

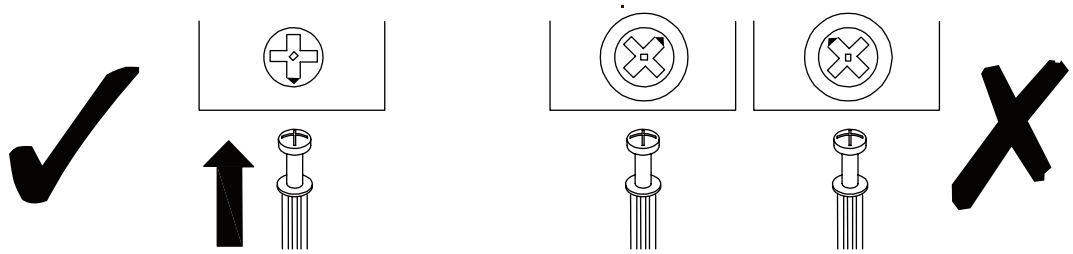




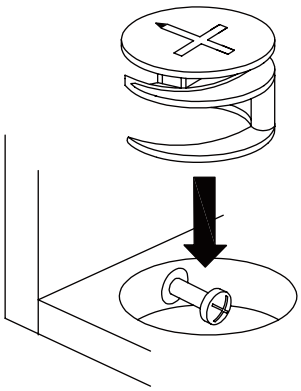
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



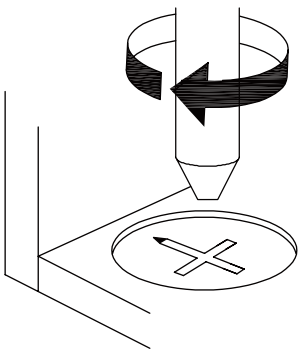
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.



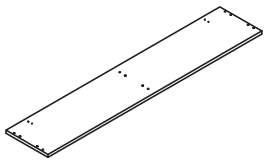
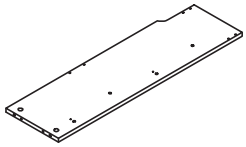
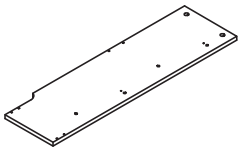
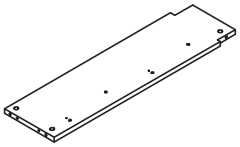
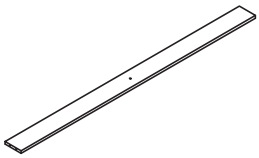
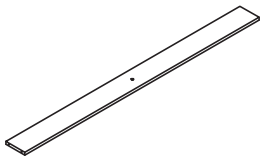
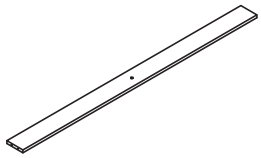
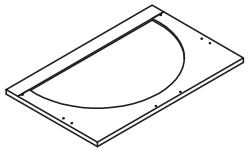
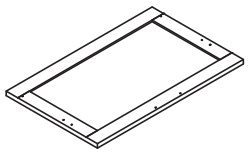
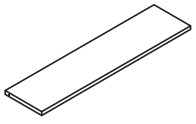
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




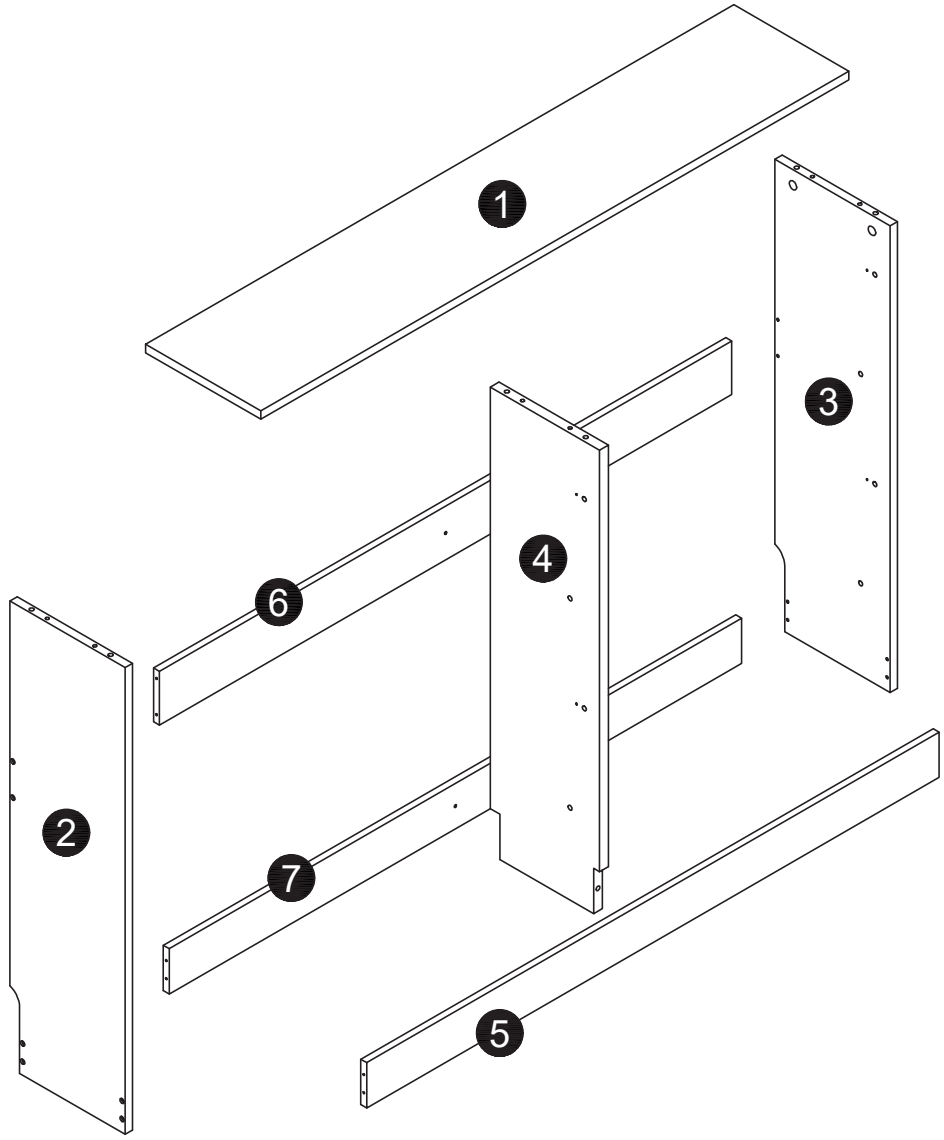
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

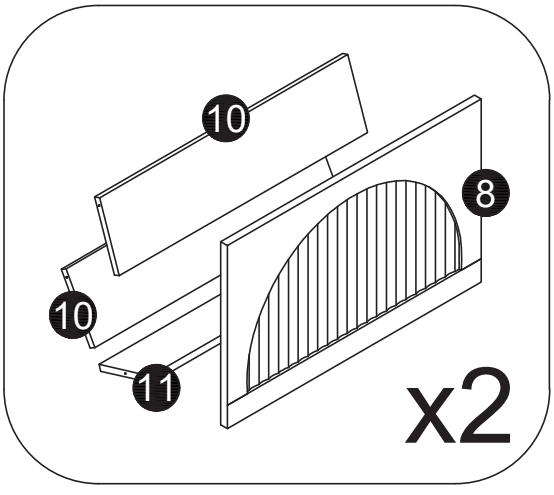


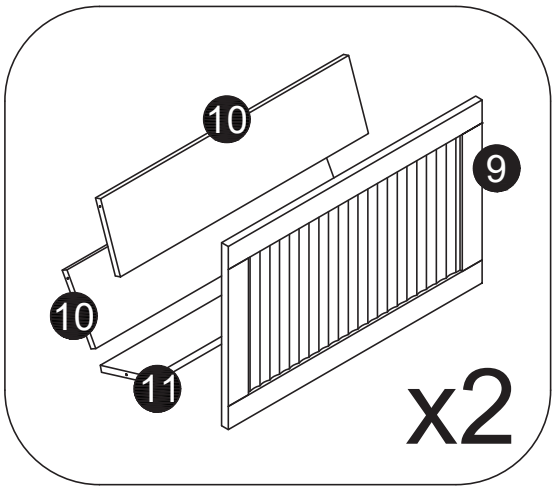
EN_ Turn cam lock clockwise to tighten.

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x8	

NO.	PARTS	QTY	SPARE
⑪		x4	
	 Hardware Kit	x1	


1
3
4
6
2
7
5


10
8
10
11
x2

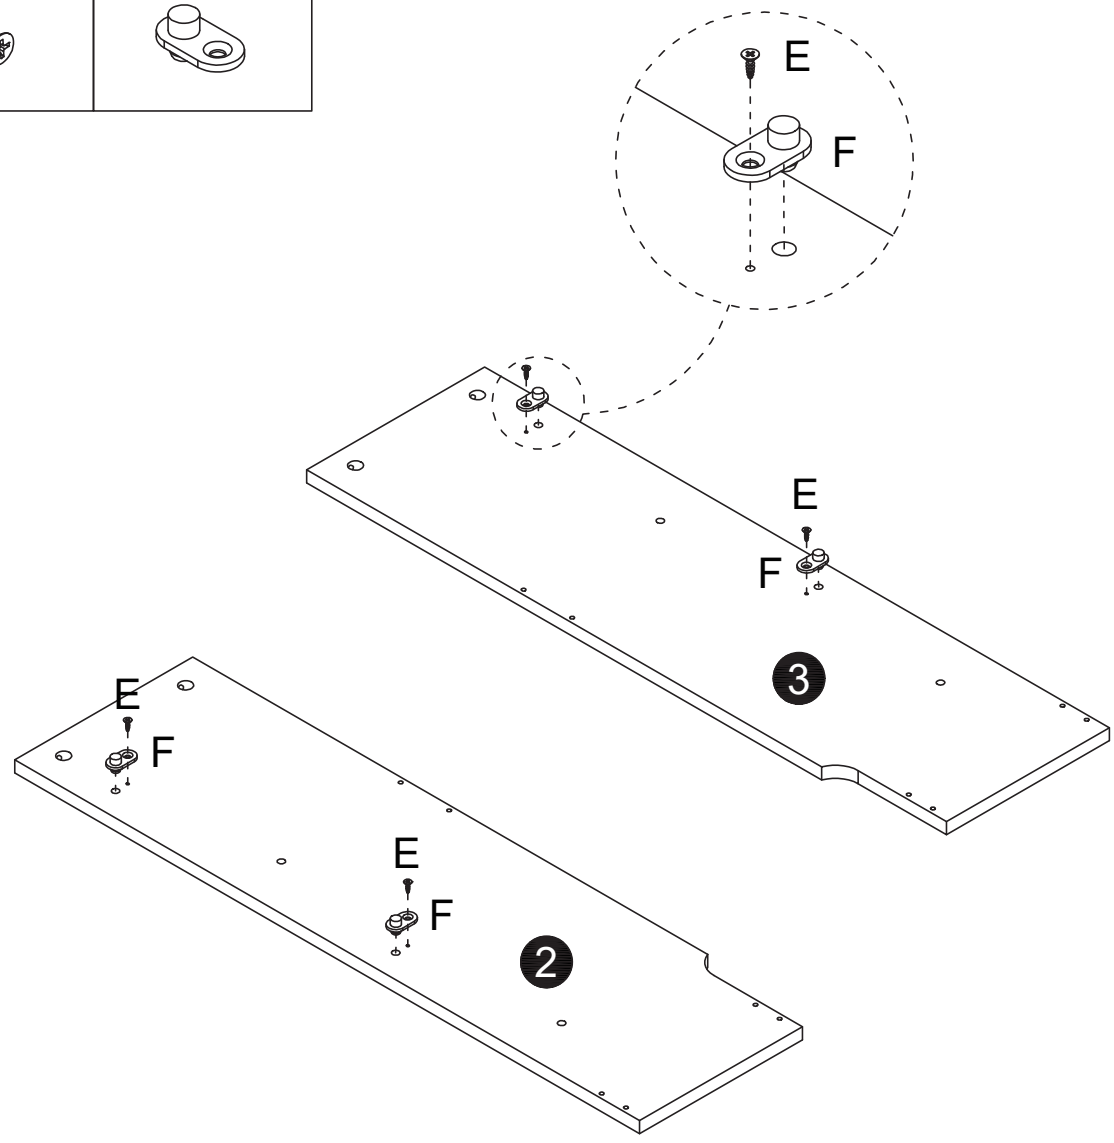

10
9
10
11
x2

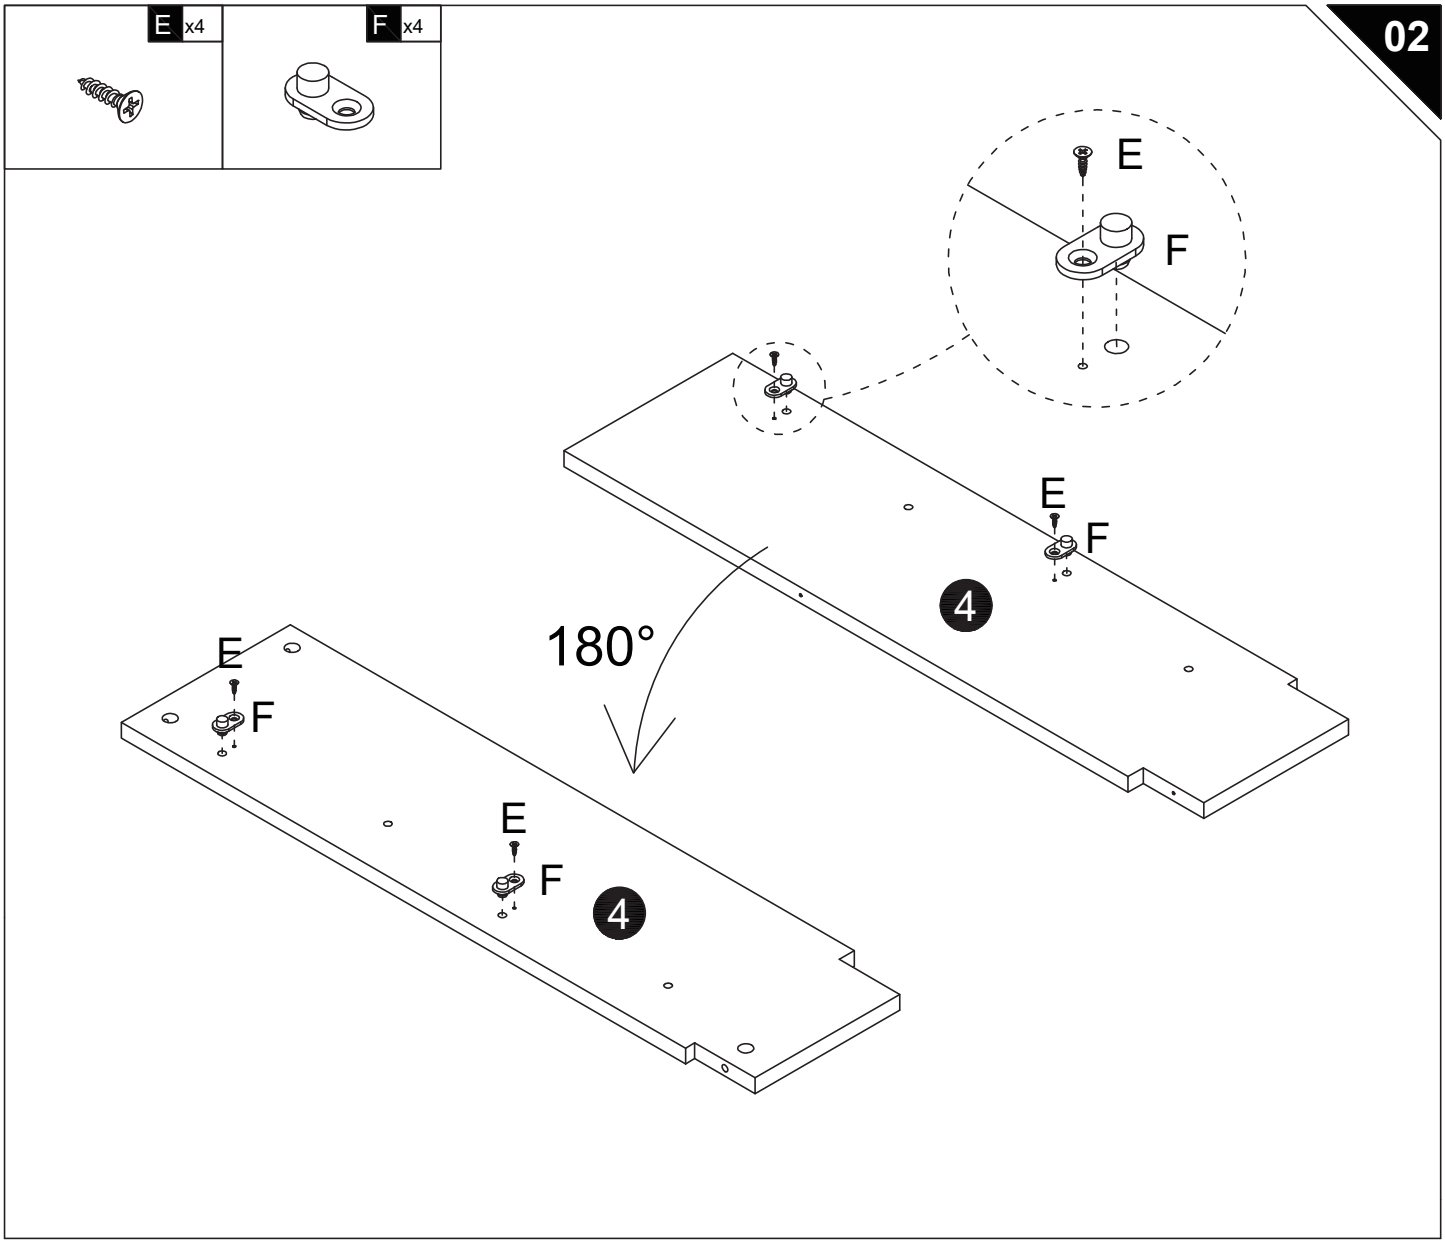
HARDWARE

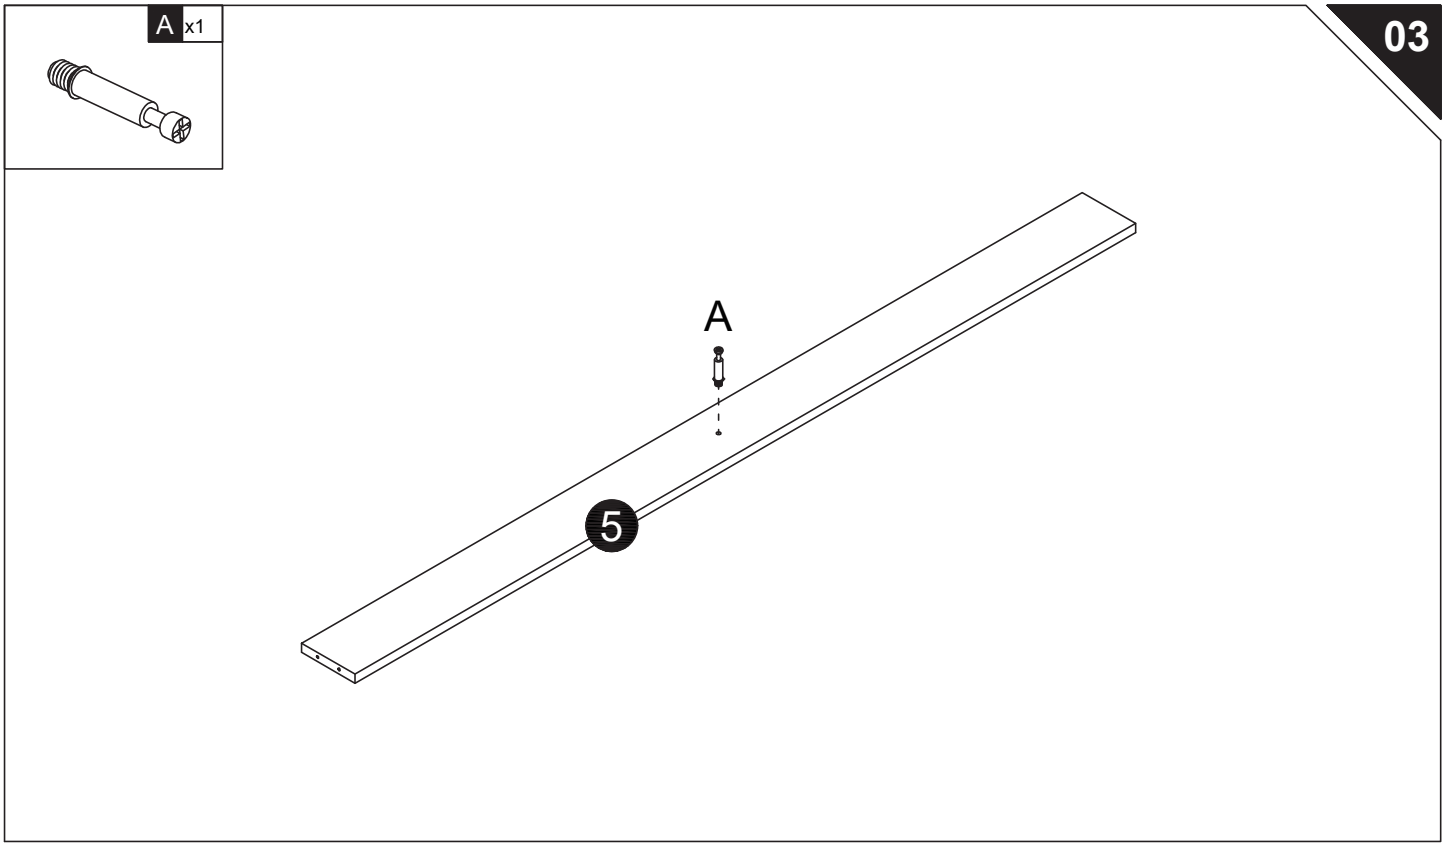
A x7 Ø6x35mm	B x7 Ø15x10mm	C x6 Ø6x30mm	D x16 Ø4x35mm +1(spare)	E x64 Ø3.5x12mm +5(spare)	F x8 +1(spare)
G x8 +1(spare)	H x4 +1(spare)	I x2	J x12 +2(spare)	K x4	L x4
M x2 M-1 M-2	N x4 +1(spare)	R x4			

01

E x4 F x4



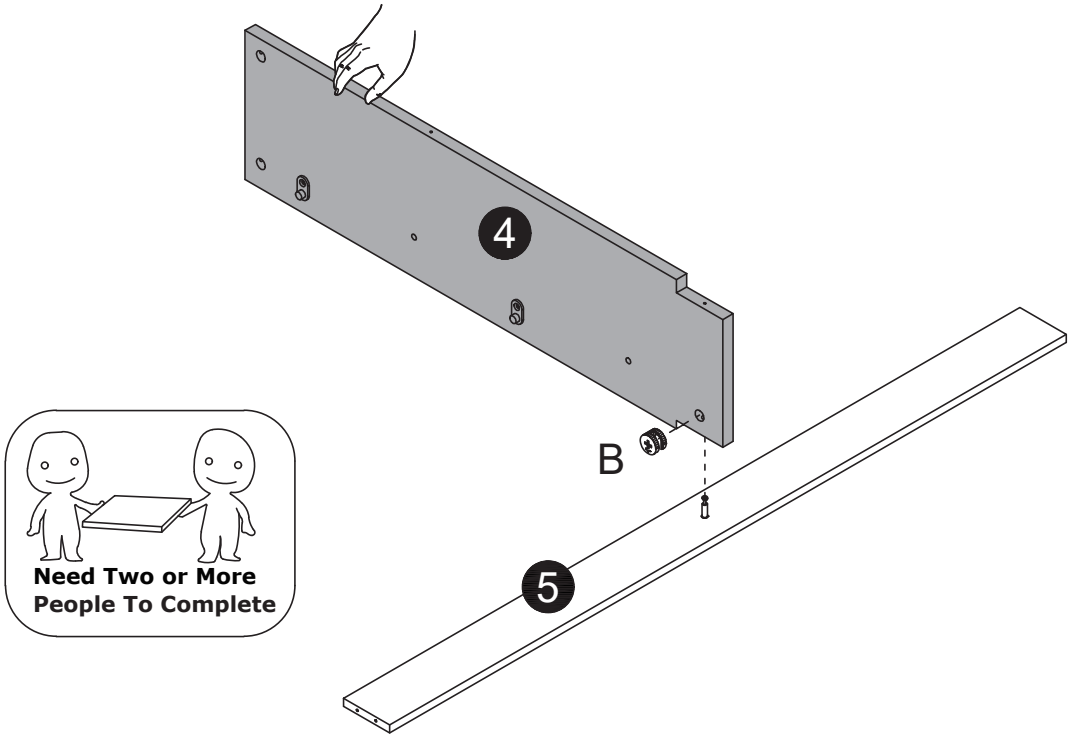

E x4
F x4
02
E
F
E
F
4
180°
E
F
E
F
4


A x1
03
A
5


B x1



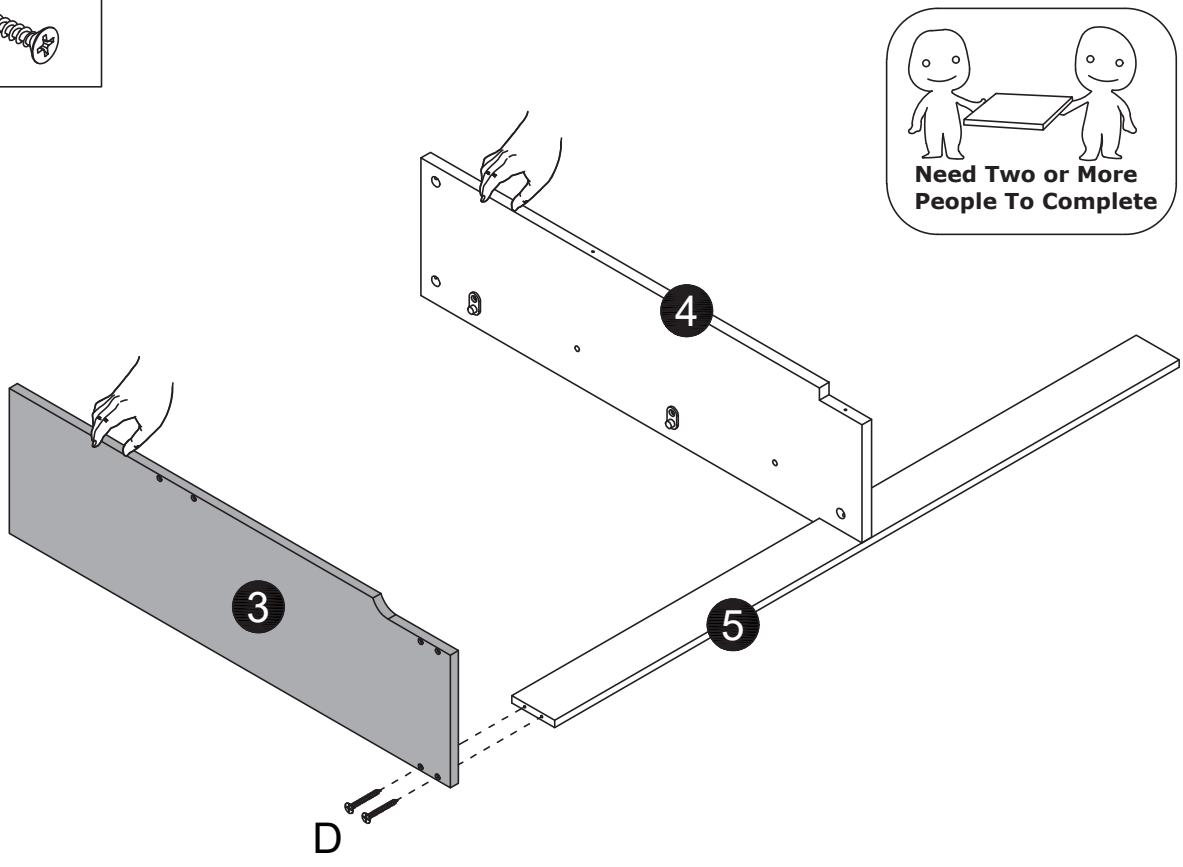
04


4
B
5
Need Two or More
People To Complete


D x2



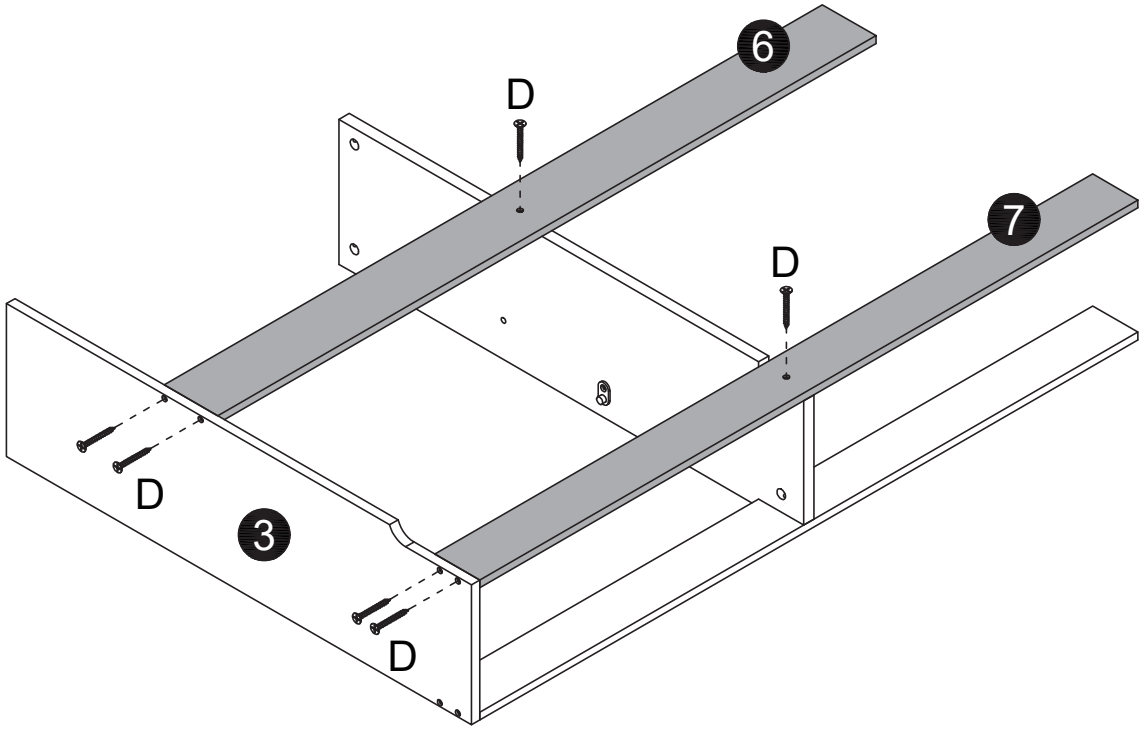
05


Need Two or More
People To Complete
4
3
5
D


D x6



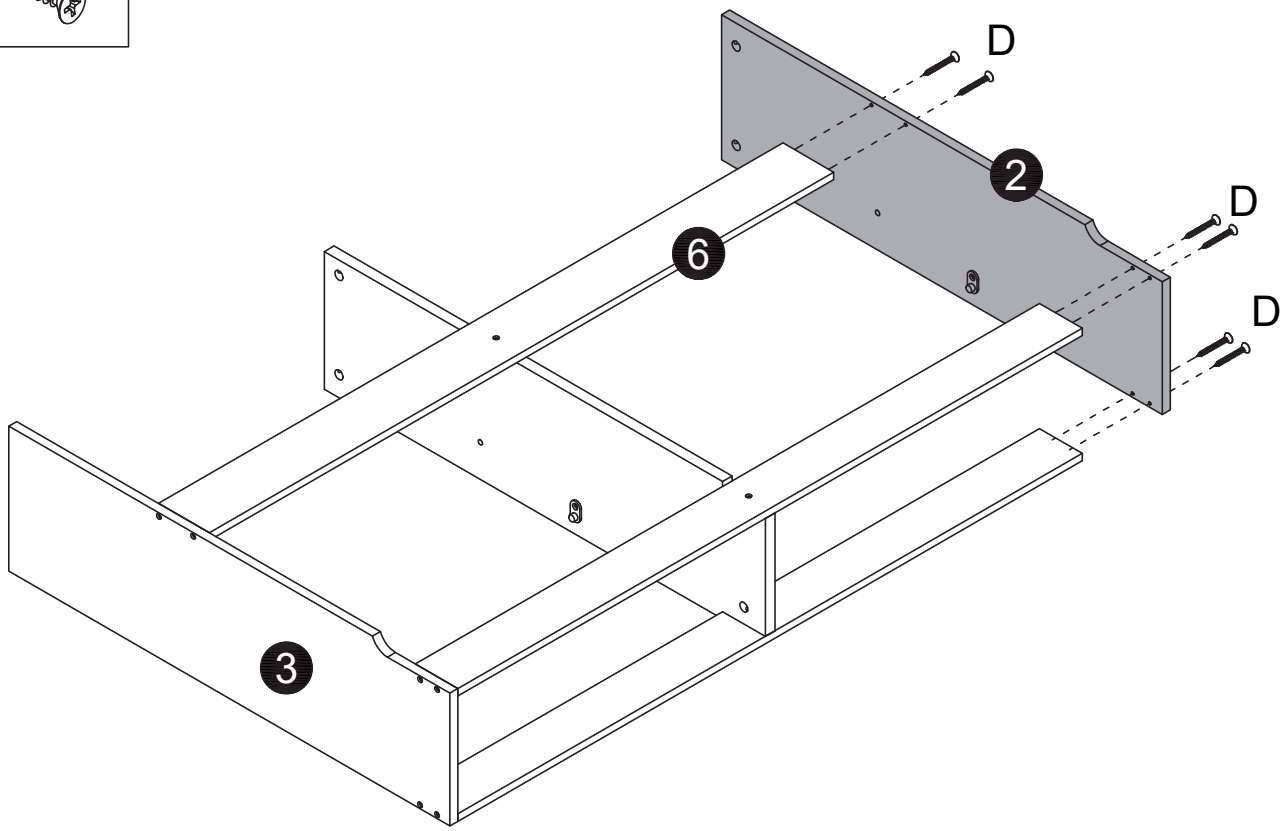
06

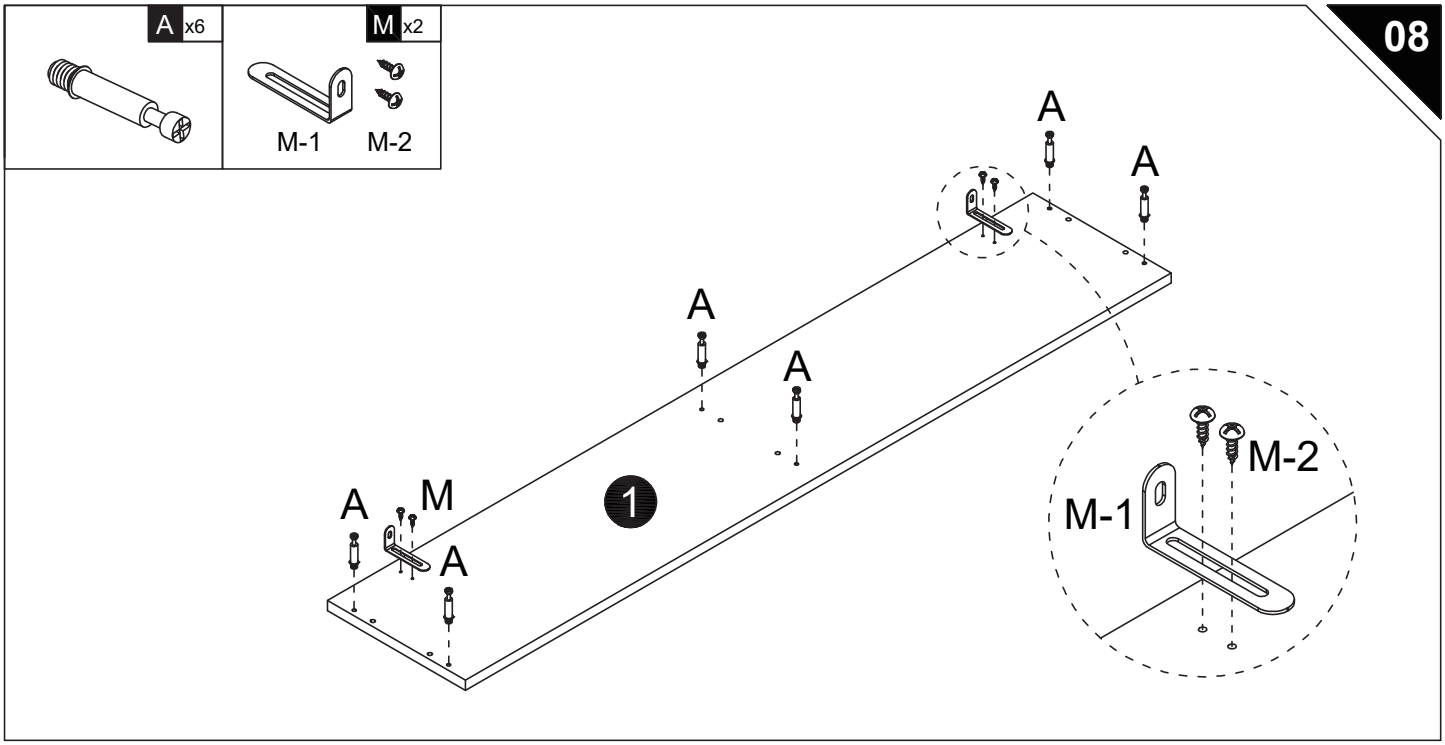


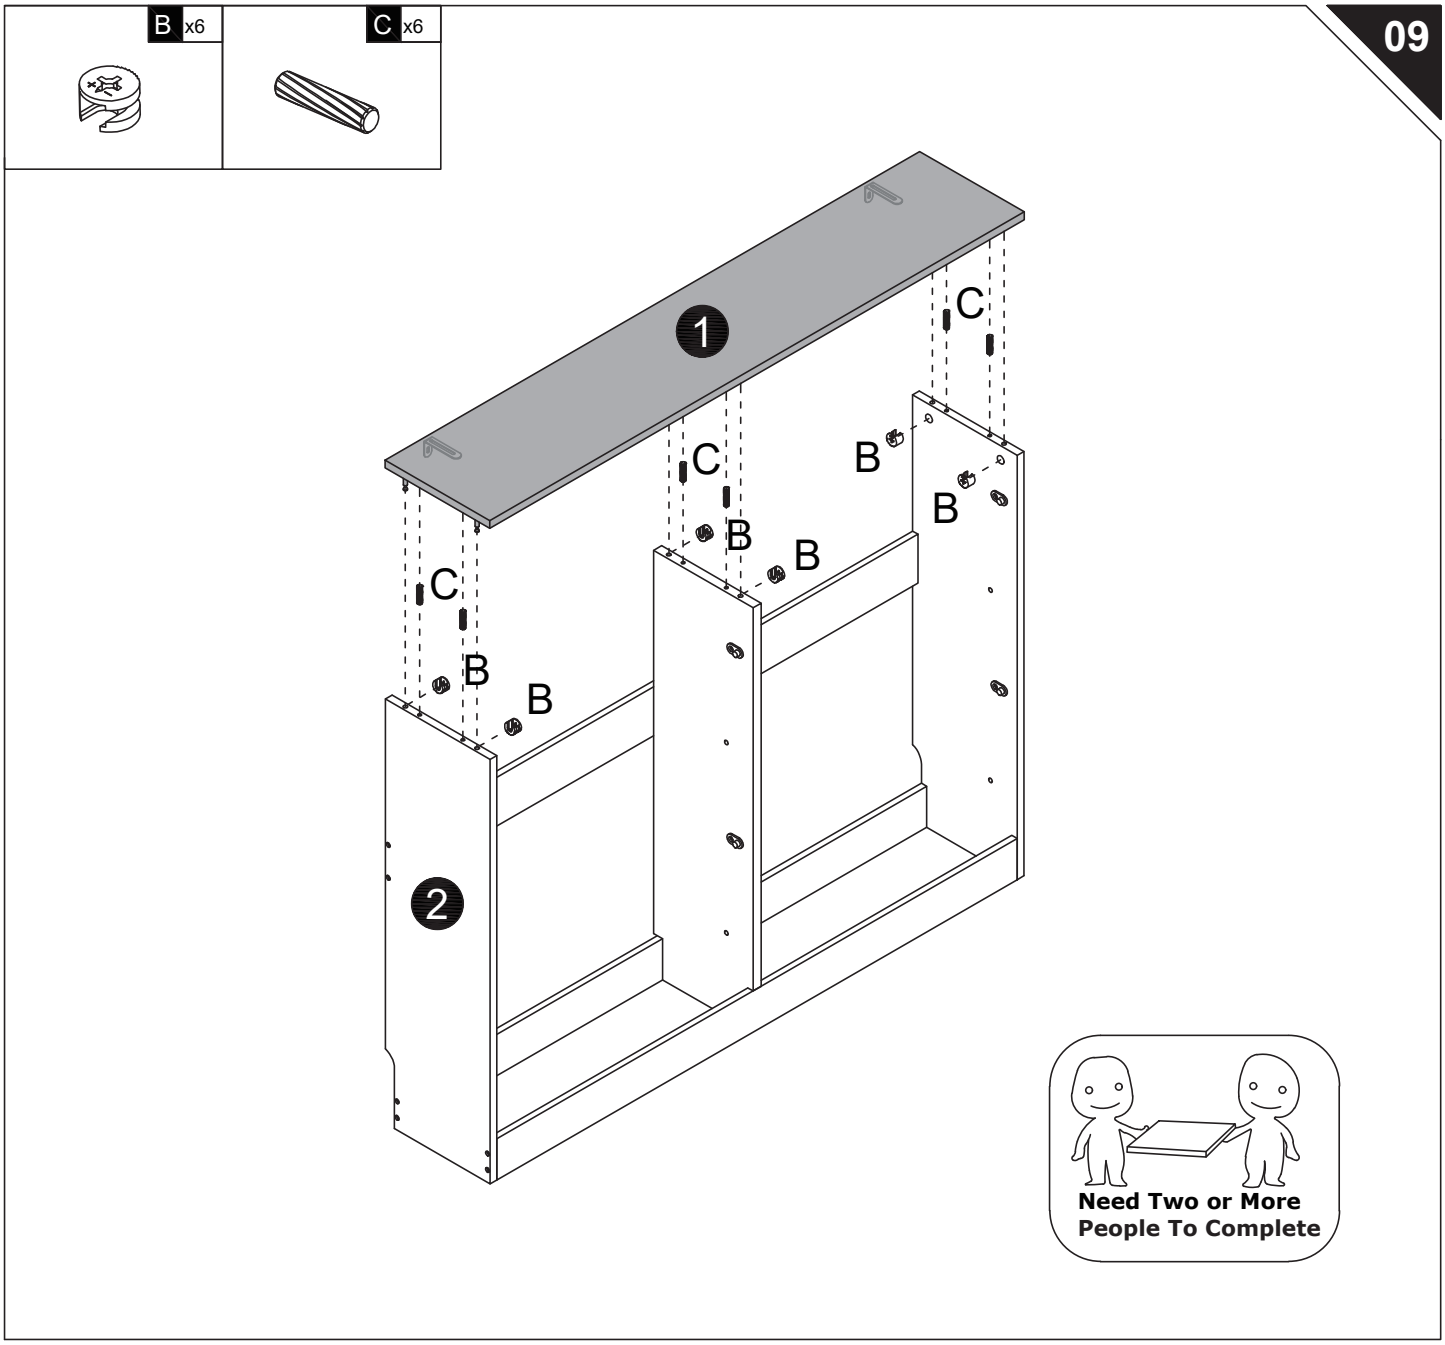
D x6

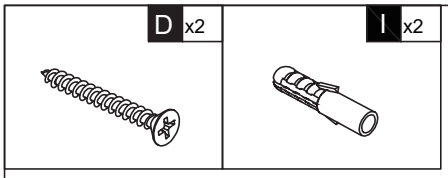


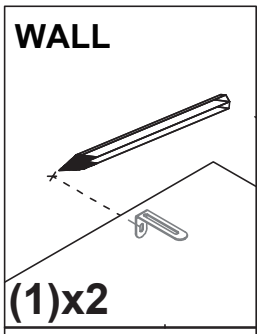
07




A x6
M x2
M-1
M-2
08
A
A
A
A
A
M
A
1
M-1
M-2


B x6
C x6
09
1
C
C
B
B
B
B
C
B
B
2
Need Two or More
People To Complete

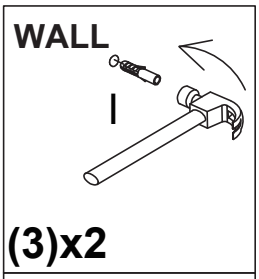




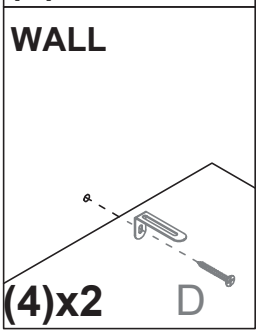
First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.



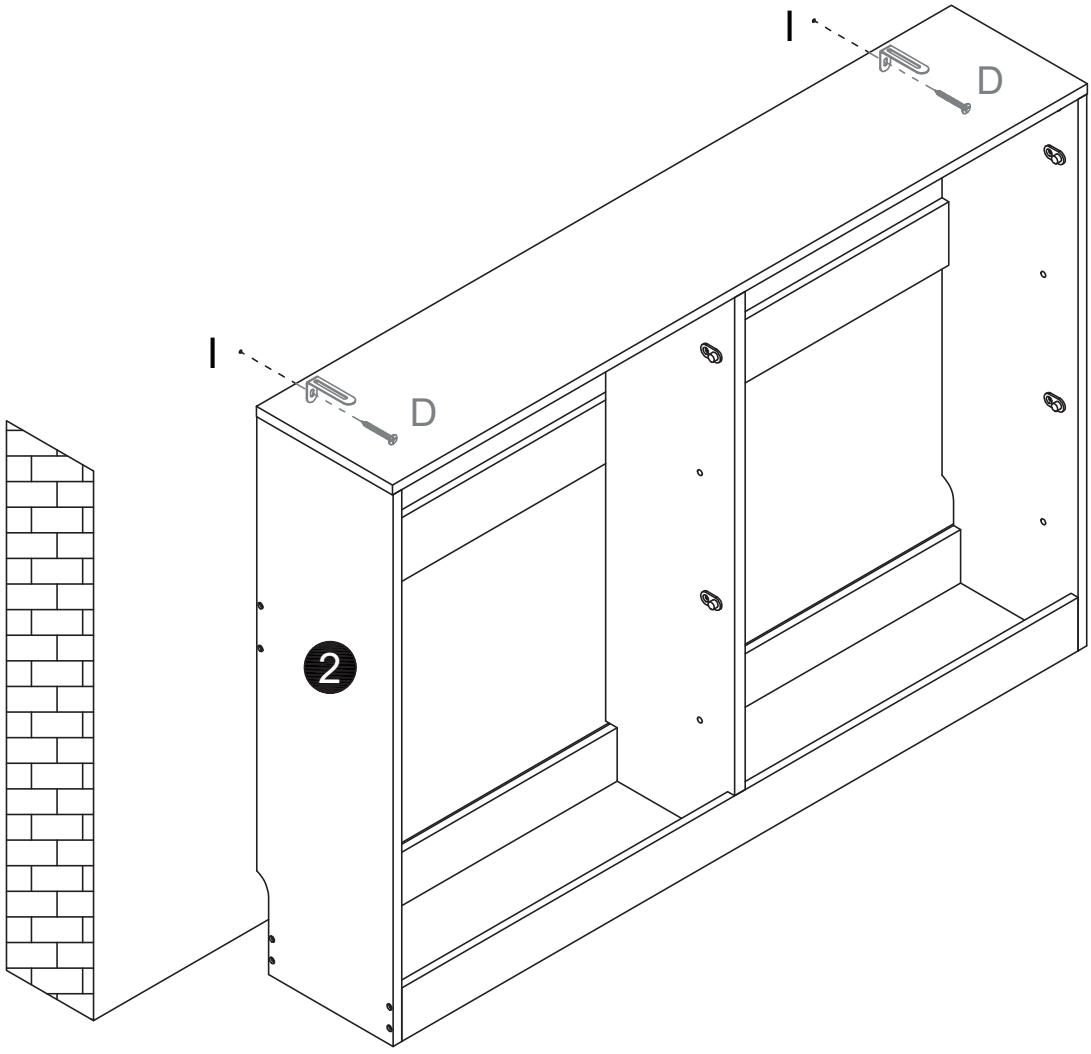
Then use a tape drill to make holes in the wall that are suitable for the product screws.

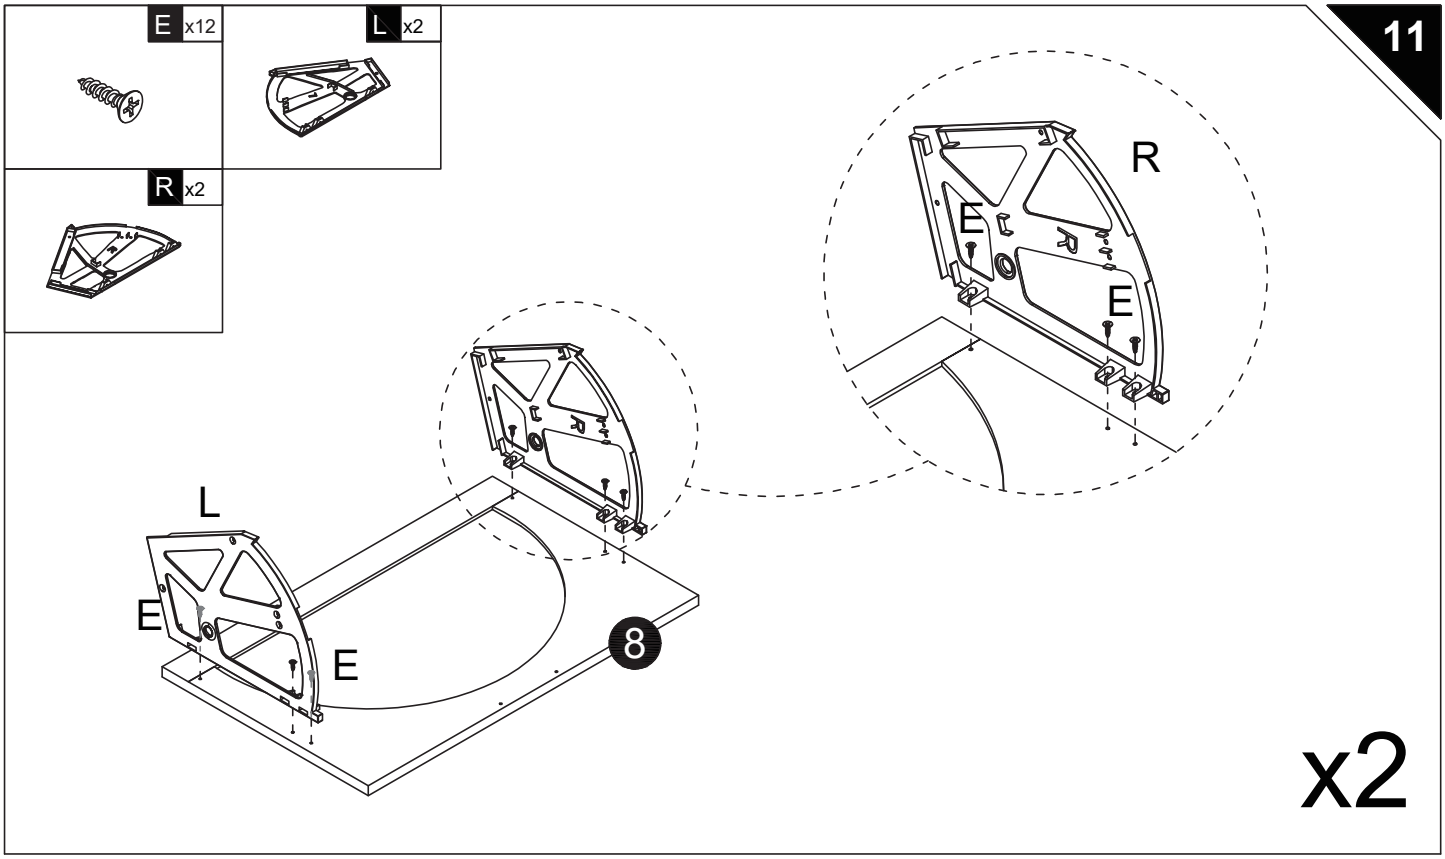


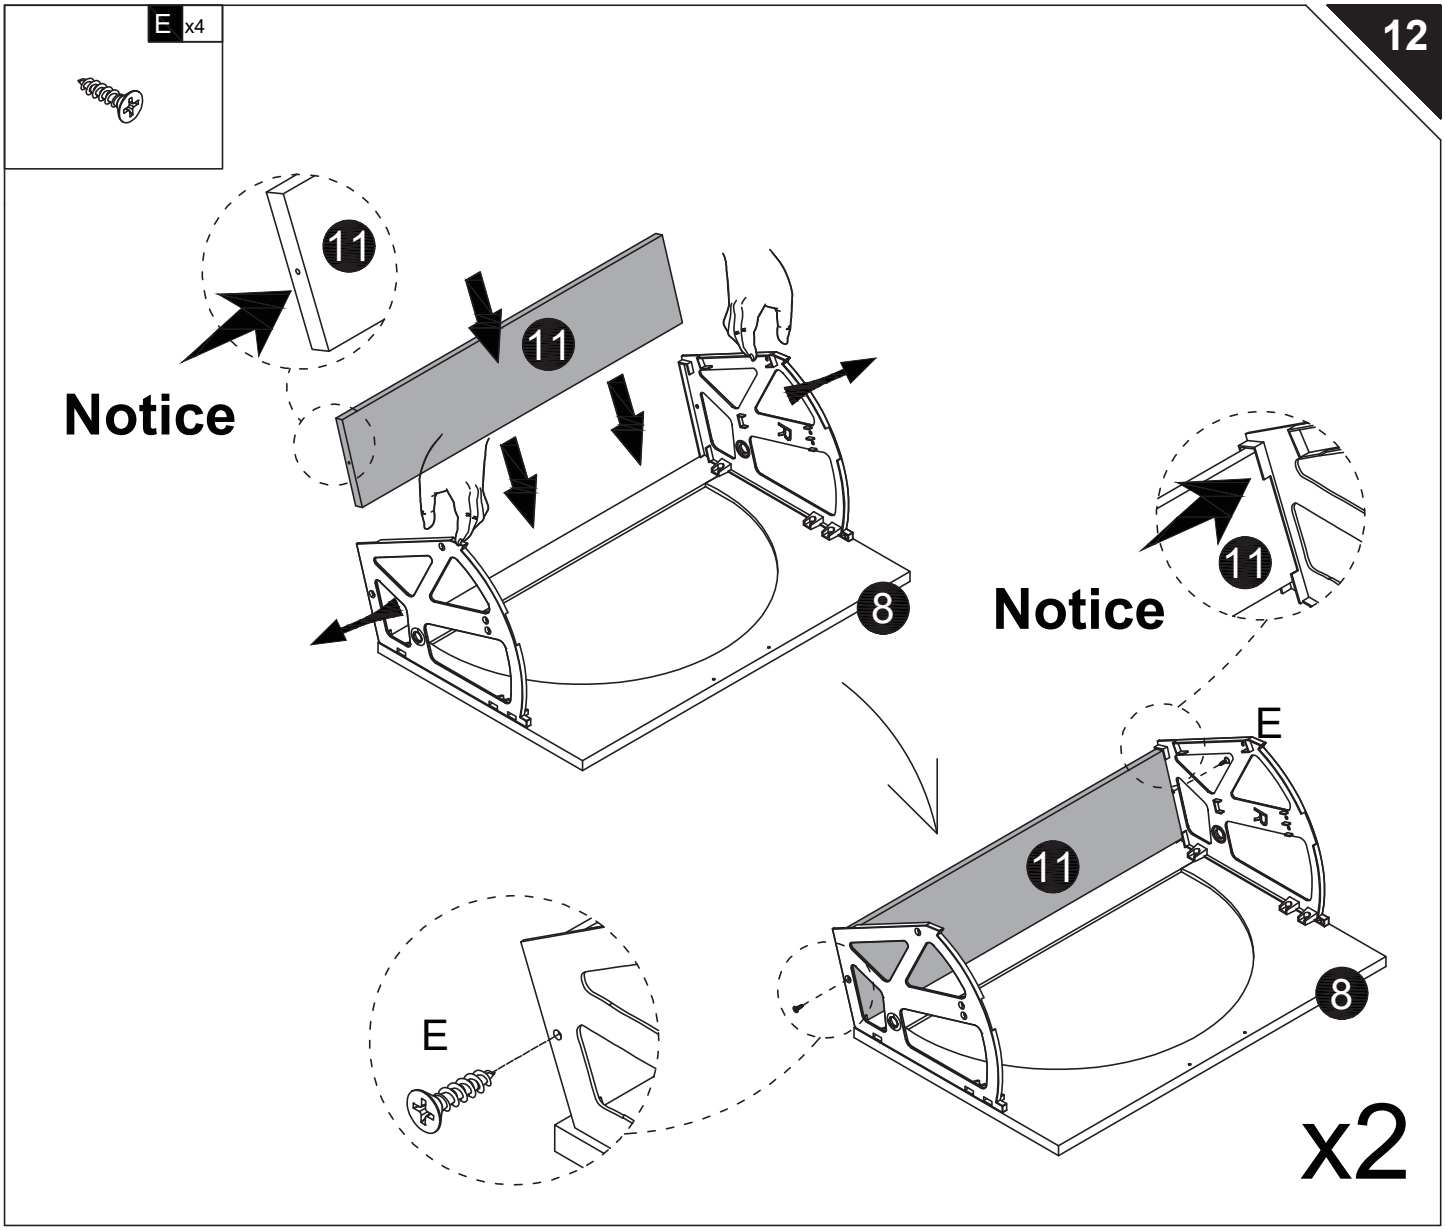
Then,put the expansion bolt into the hole



Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.




E x12
L x2
R x2
11
R
E
E
L
E
E
8
x2


E x4
12
11
11
Notice
8
Notice
11
E
11
E
8
x2

E x4

13

Notice

10

8

10

E

10

8

E

x2

E x4

K x2

14

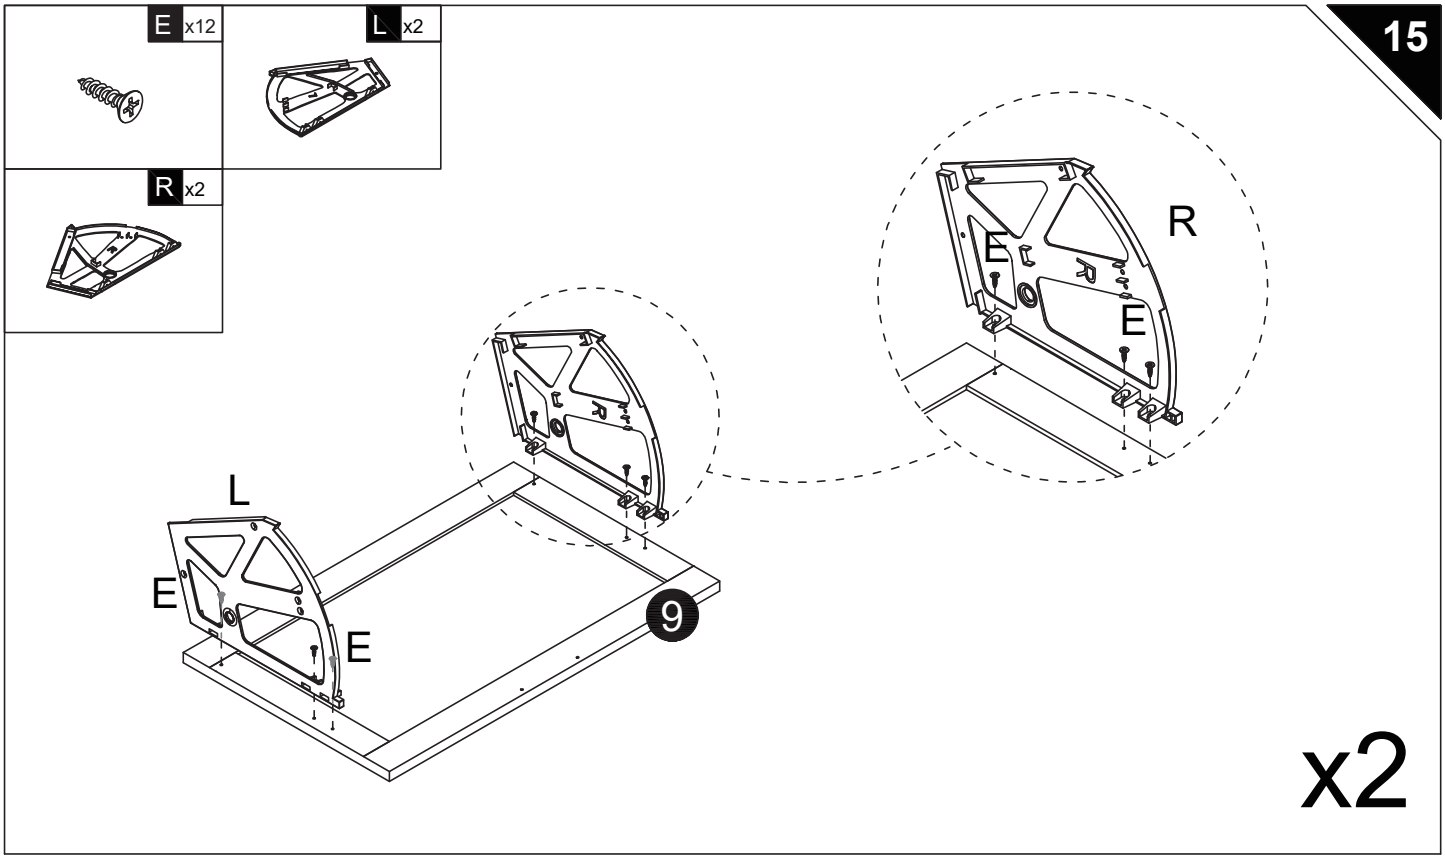
K

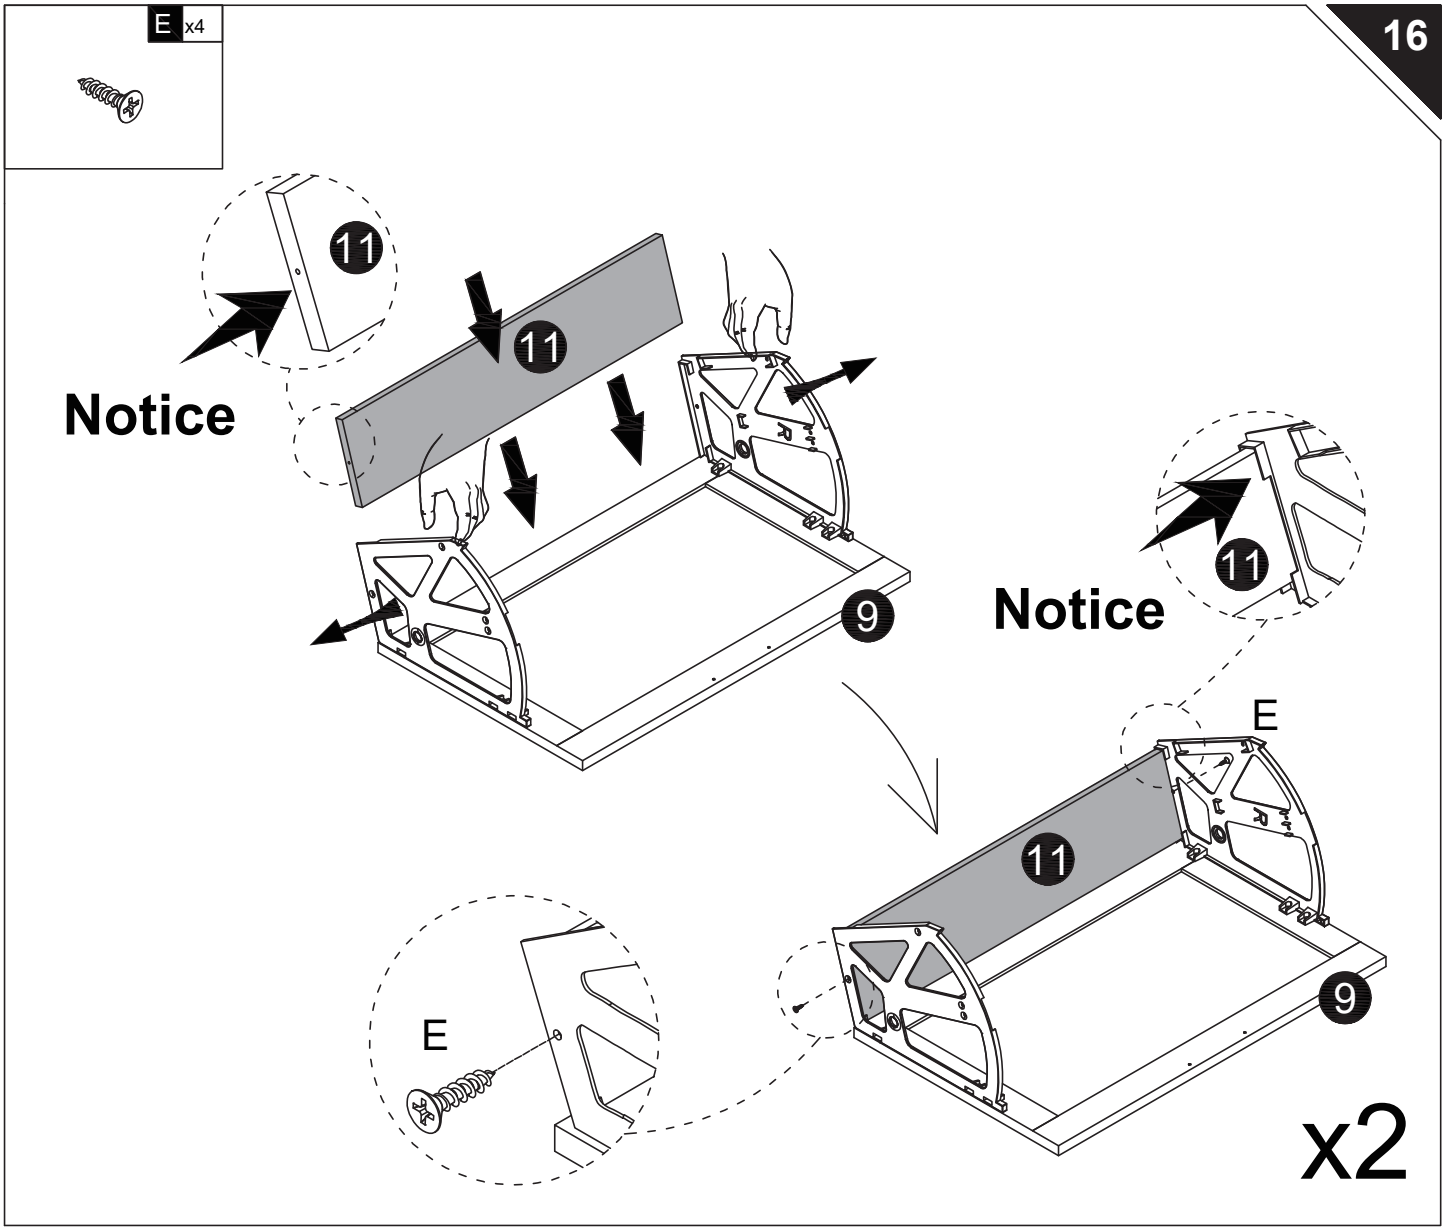
E

E

8

x2

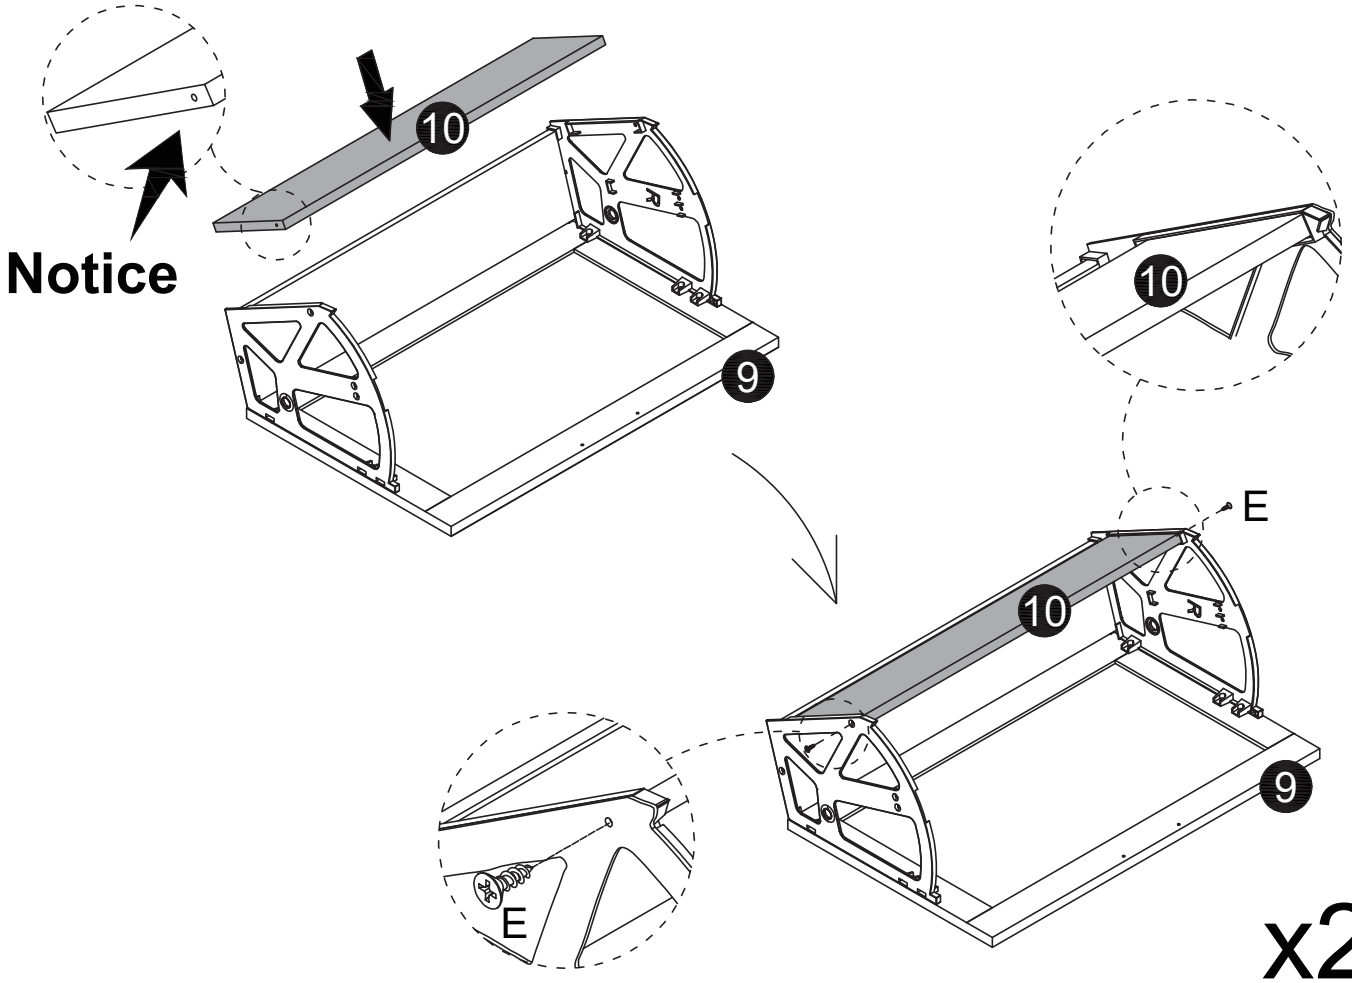

E x12
L x2
R x2
15
R
E
E
L
E
E
9
x2


E x4
16
11
Notice
11
9
11
Notice
E
11
E
9
x2

17

E x4






18

E x4



K x2



19

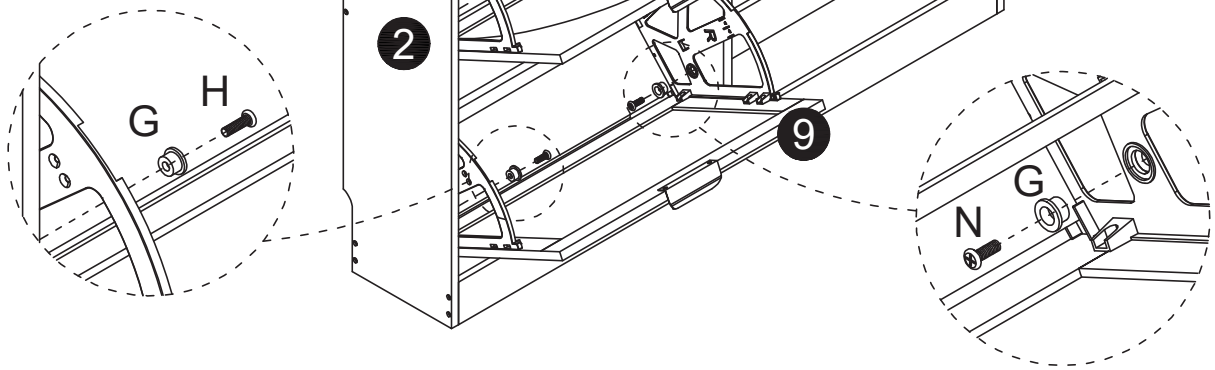
G x4

H x2

N x2

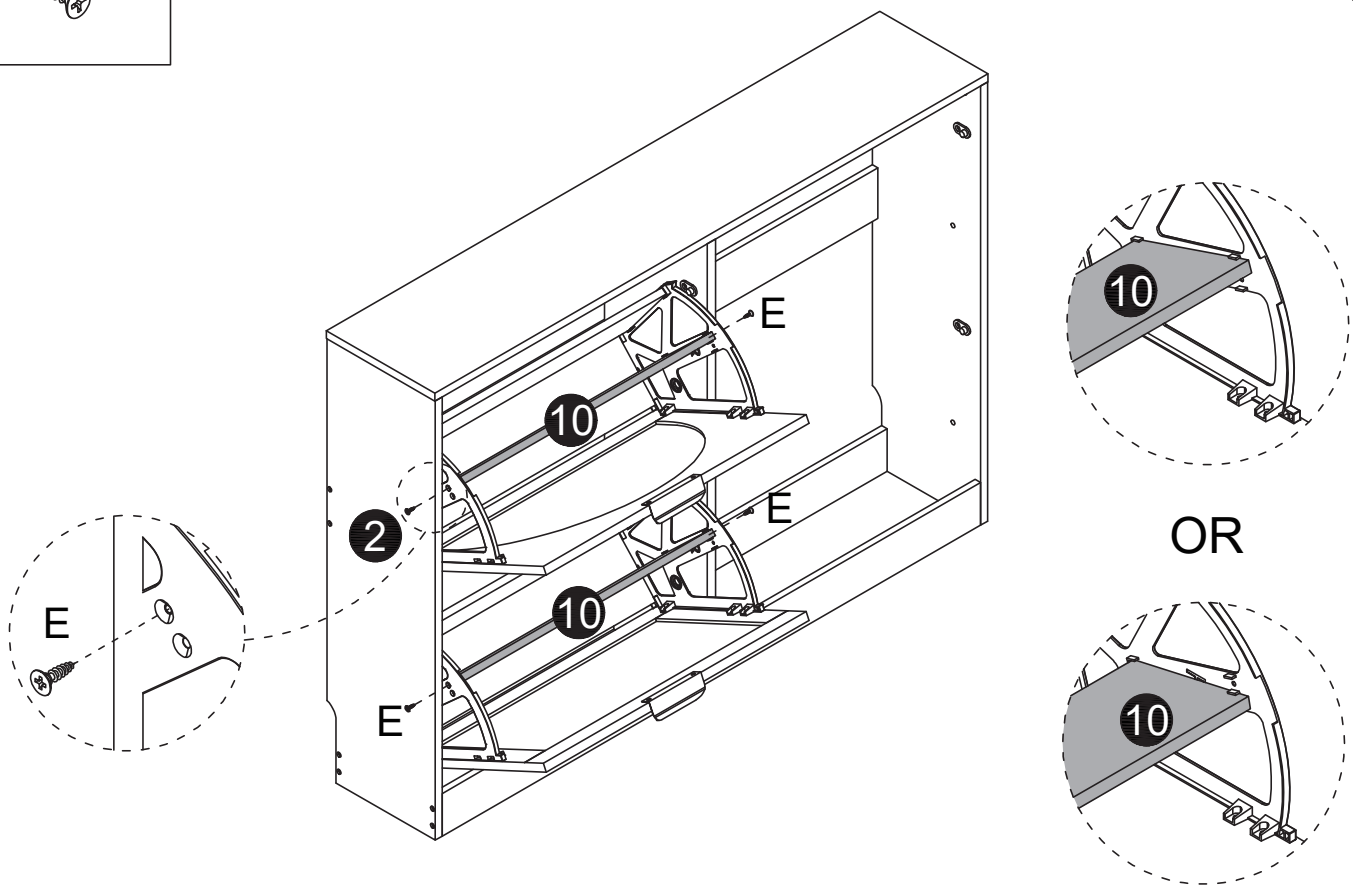
Notice 8

Note: When installing H、N, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.



20

E x4



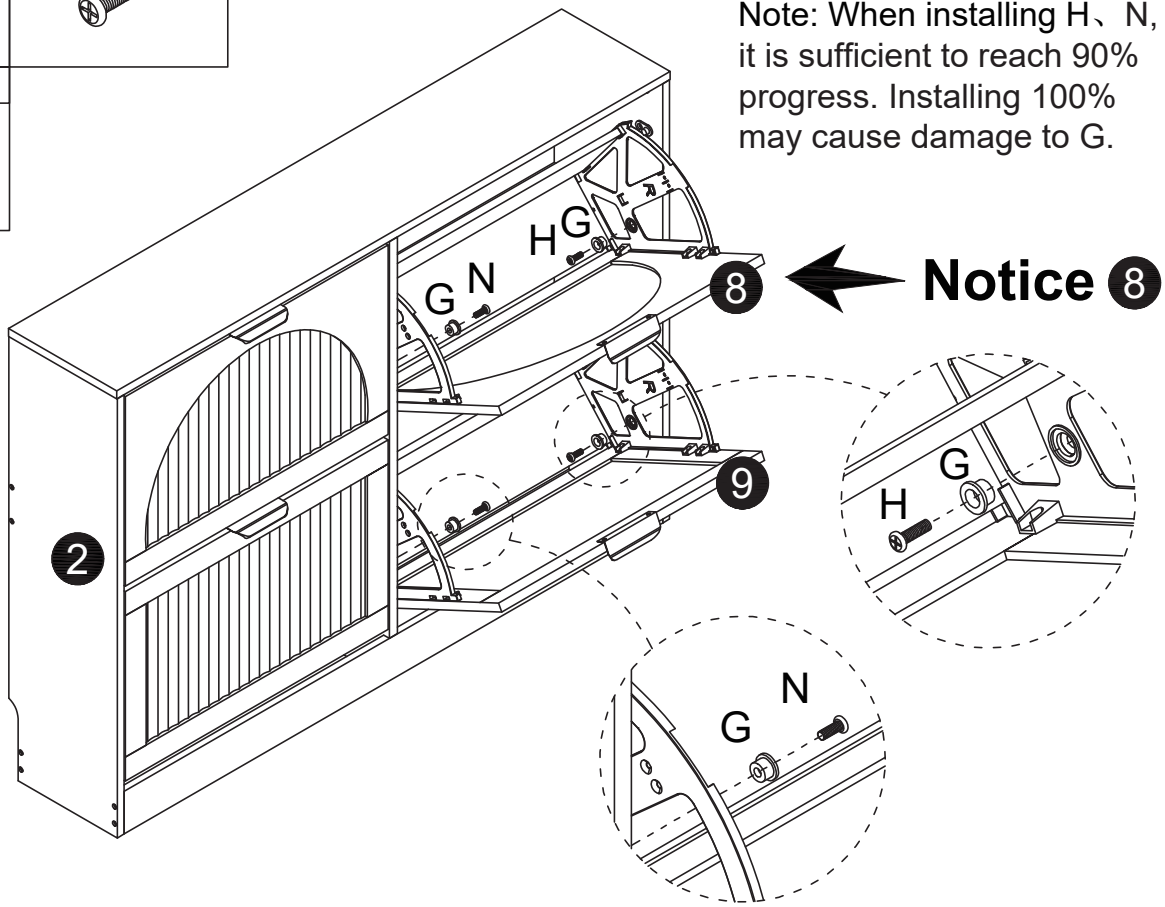
21

G x4

H x2

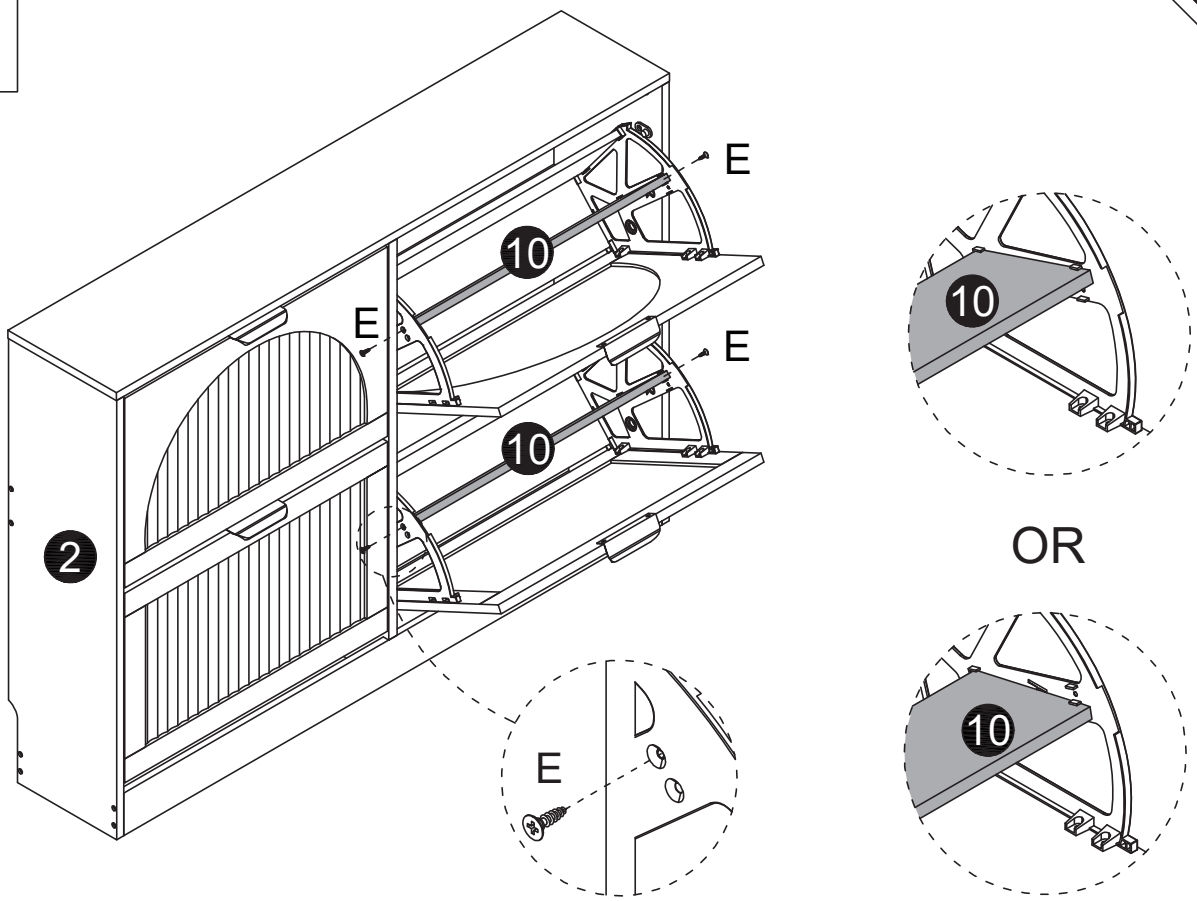
N x2

Note: When installing H、N, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.



22

E x4



J x12

Done

