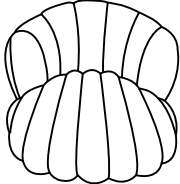
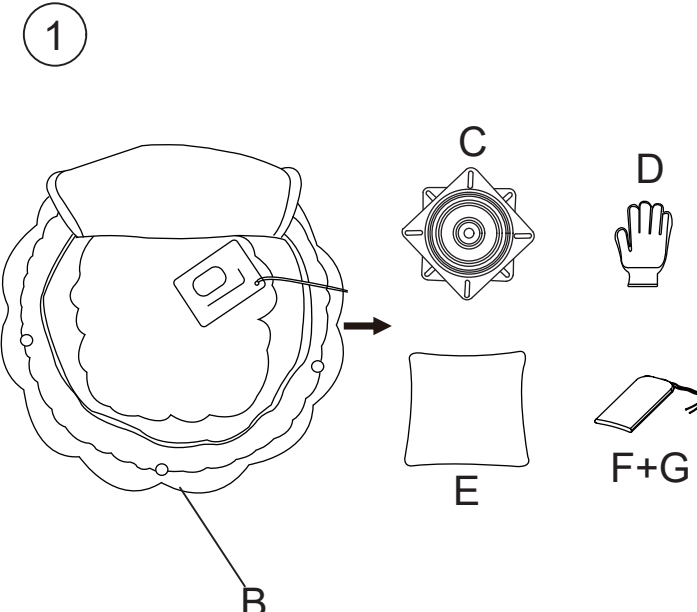
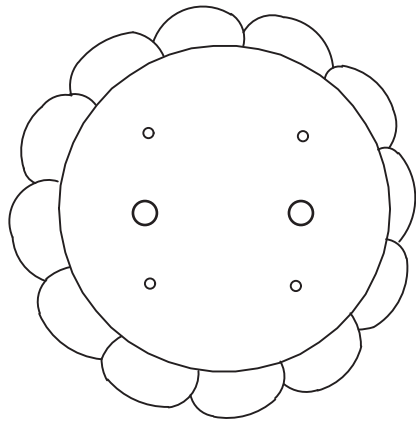
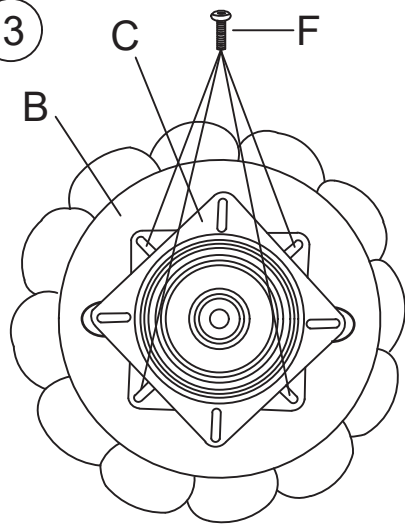
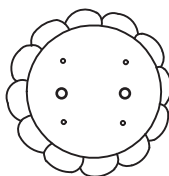


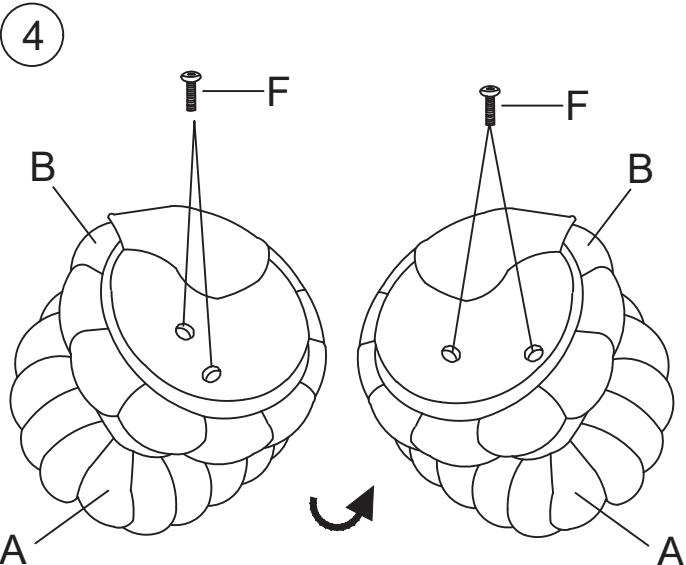
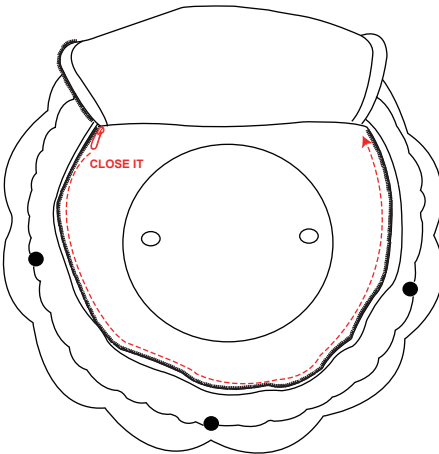
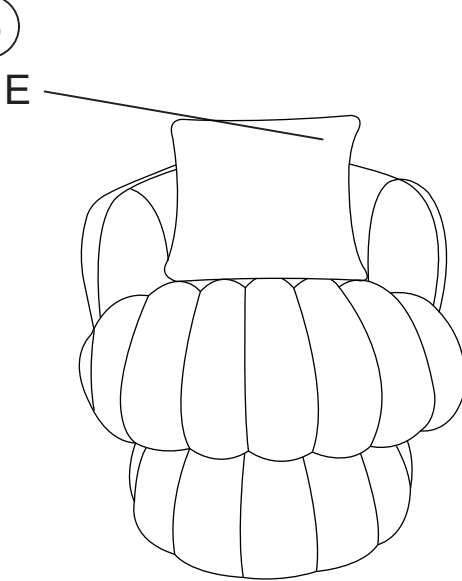
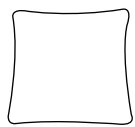




ASSEMBLE INSTRUCTION

<p>Ax1</p> 	<p>1</p> 	<p>2</p> 	<p>3</p>  <p>Turn the dial to align the horizontal hole with the large hole</p>
<p>Bx1</p> 			
<p>Cx1</p> 			
<p>Dx1</p> 	<p>4</p> 	<p>5</p> 	<p>6</p> 
<p>Ex1</p> 			
<p>Fx8+1</p>  <p>M6*16mm</p>			
<p>Gx1</p> 	<p>First, do not tighten all the bolts, tighten them all after the installation is complete.</p>		