


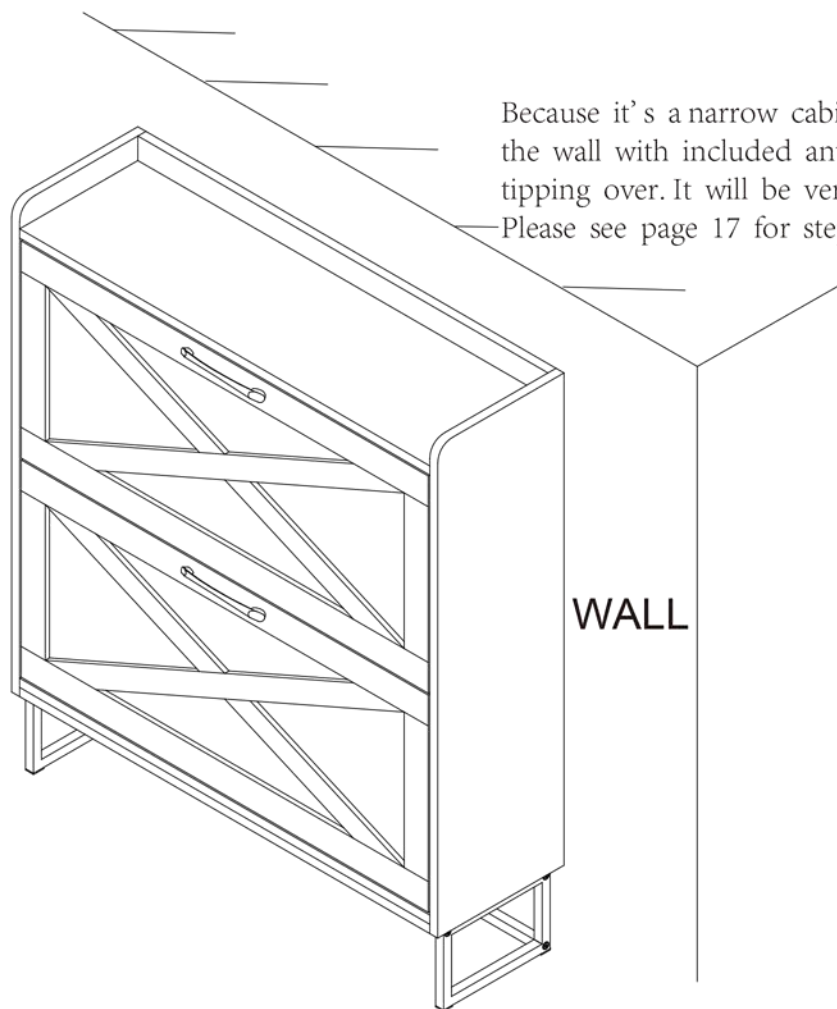


Because it's a narrow cabinet, it must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over. It will be very stable and safe when locked on the wall. Please see page 17 for steps to lock the wall.

WALL

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

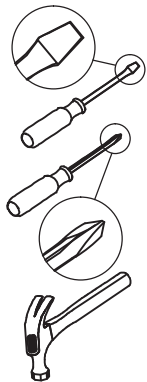

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

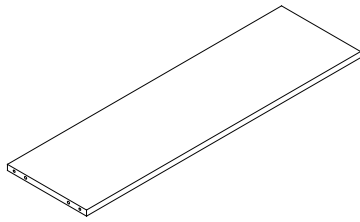


①
TOP PANEL
Qty: 1

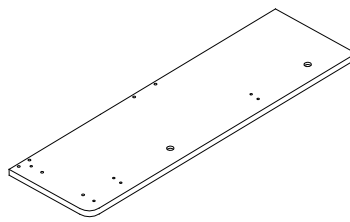


②
LEFT SIDE PANEL
Qty: 1

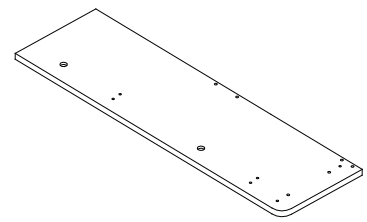


③
RIGHT SIDE PANEL
Qty: 1

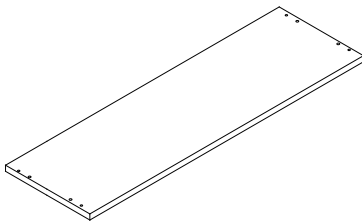


④
BOTTOM PANEL
Qty: 1

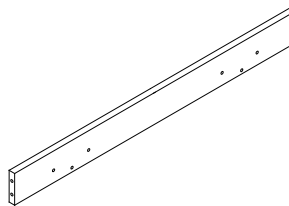


⑤
UPPER CROSS BAR
Qty: 1

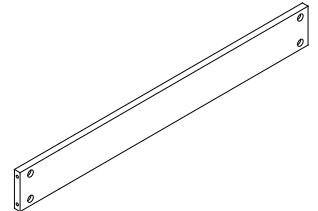


⑥
LOWER CROSS BAR
Qty: 1

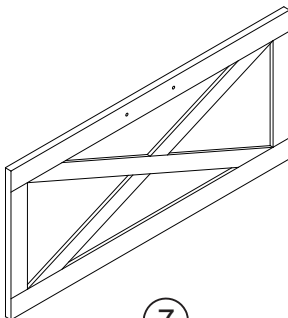

⑦
DOOR
Qty: 2




⑧
IRON FRAME
Qty: 2

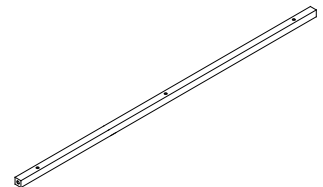

⑨
IRON STRIP
Qty: 2

Board Identification


Not actual size

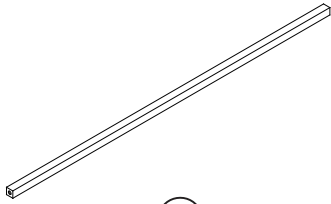

⑩

IRON STRIP


Qty: 1

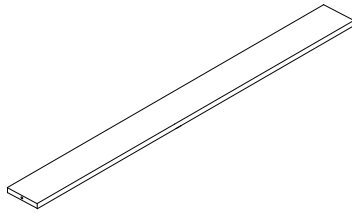

⑪

SHOE BOX BOTTOM

Qty: 2

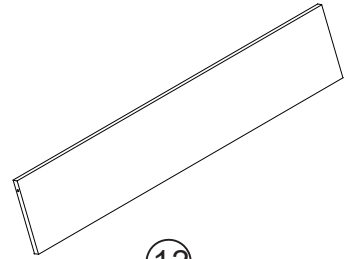


⑫

SHOE BOX LAYER


Qty: 4

Board Identification

Not actual size

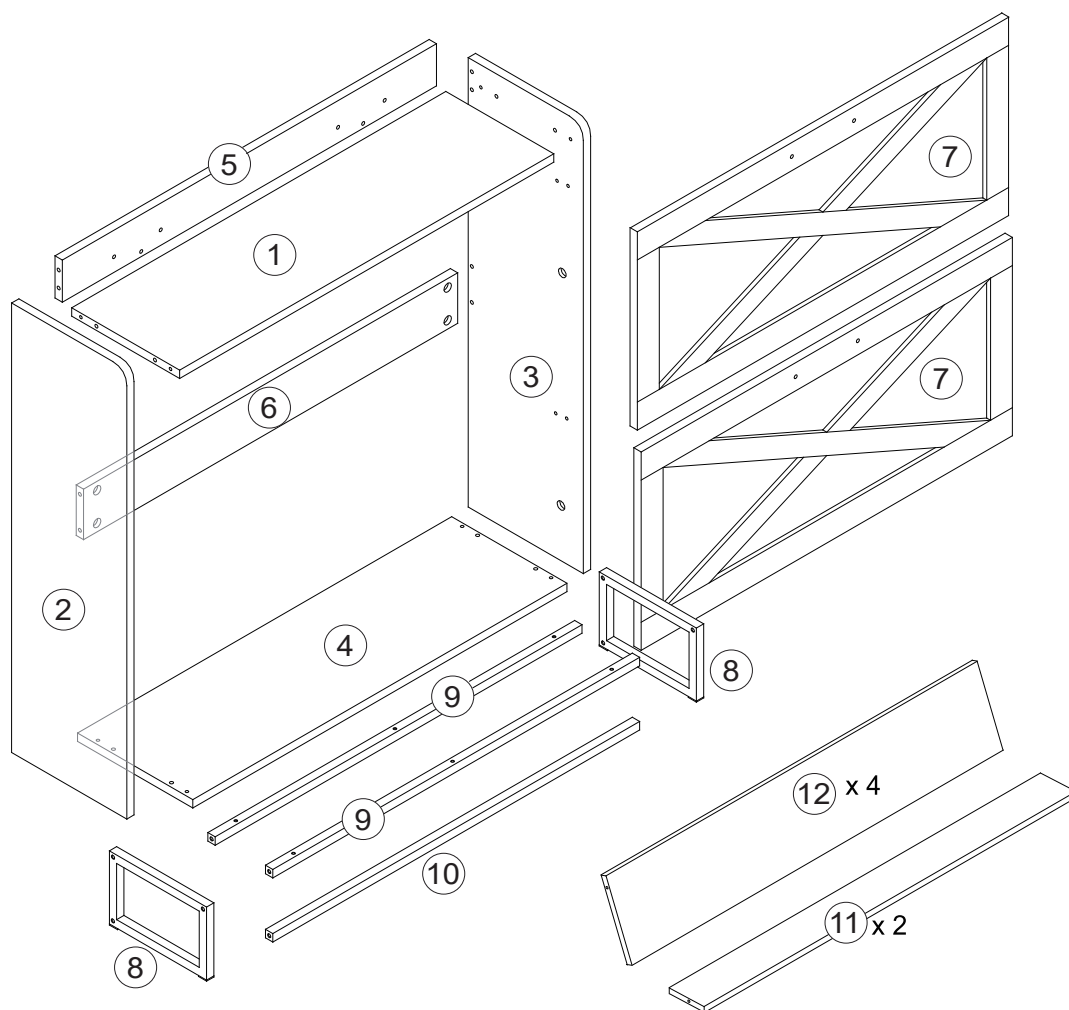

Part List



ø6X35mm

(A)

X10

CAM BOLT
spare: 2




Ø15X10mm

(B)

X10

CAM LOCK
spare: 2




ø6X30mm

(C)

X12

WOOD DOWEL
spare: 2



Ø4X14 mm

(D)

X28

SCREW
spare: 3




M4X18mm

(E)

X4


BOLT

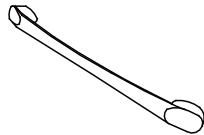

(F)

X2

HANDLE



(G)

X4

SCREW



(H)

X4


PLASTIC PLUG



(I)

X2


SHOE BOX LEFT SUPPORT

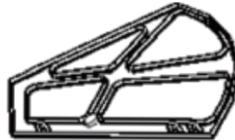

(J)

X2

SHOE BOX RIGHT SUPPORT




(k)

X4

PLASTIC PIN


Part List

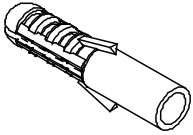

(L)

X2

EXPANSION NEIL




M4X30mm

(M)

X6

SCREW

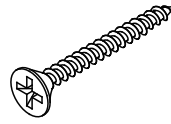


M4X40mm

(N)

X2

SCREW




Ø6X35mm

(O)

X6


BOLT



(P)

X1

ALLEN WRENCH



M4X25mm

(Q)


X6

SCREW
spare: 1


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

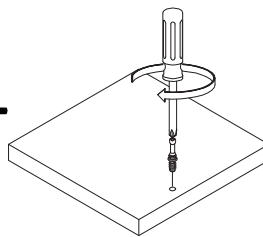

2

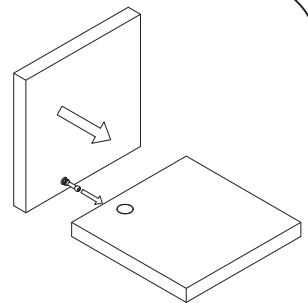


3




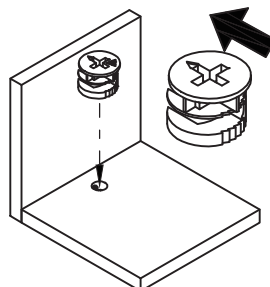


The opening must point toward the edge of the board




4

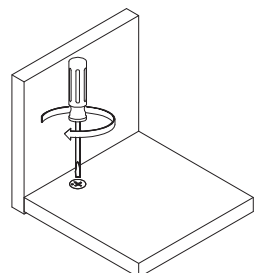







STEP1

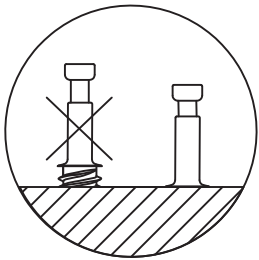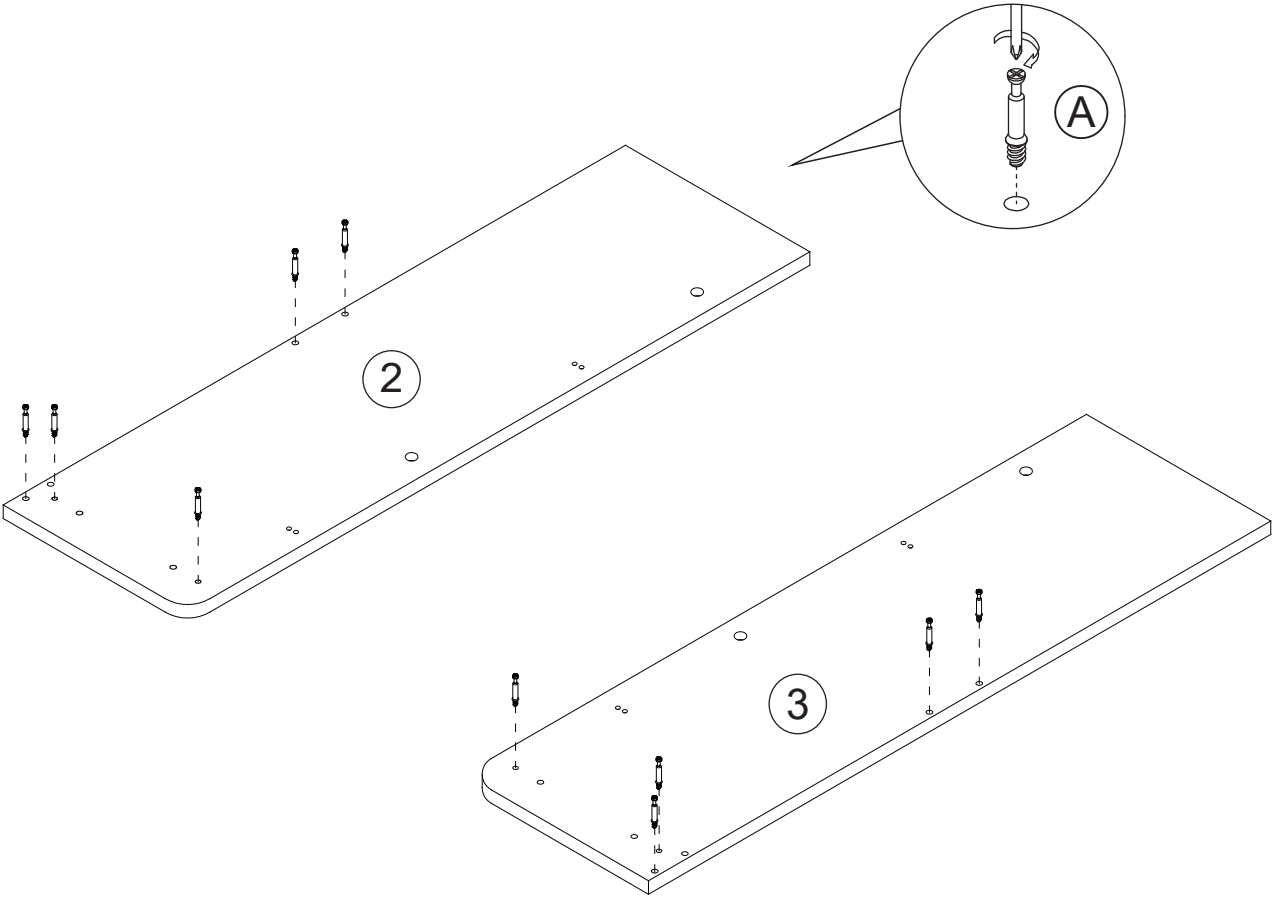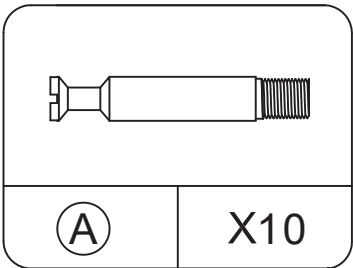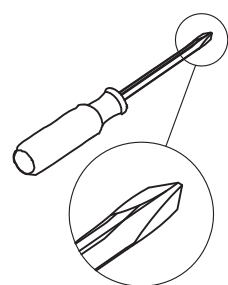

STEP2

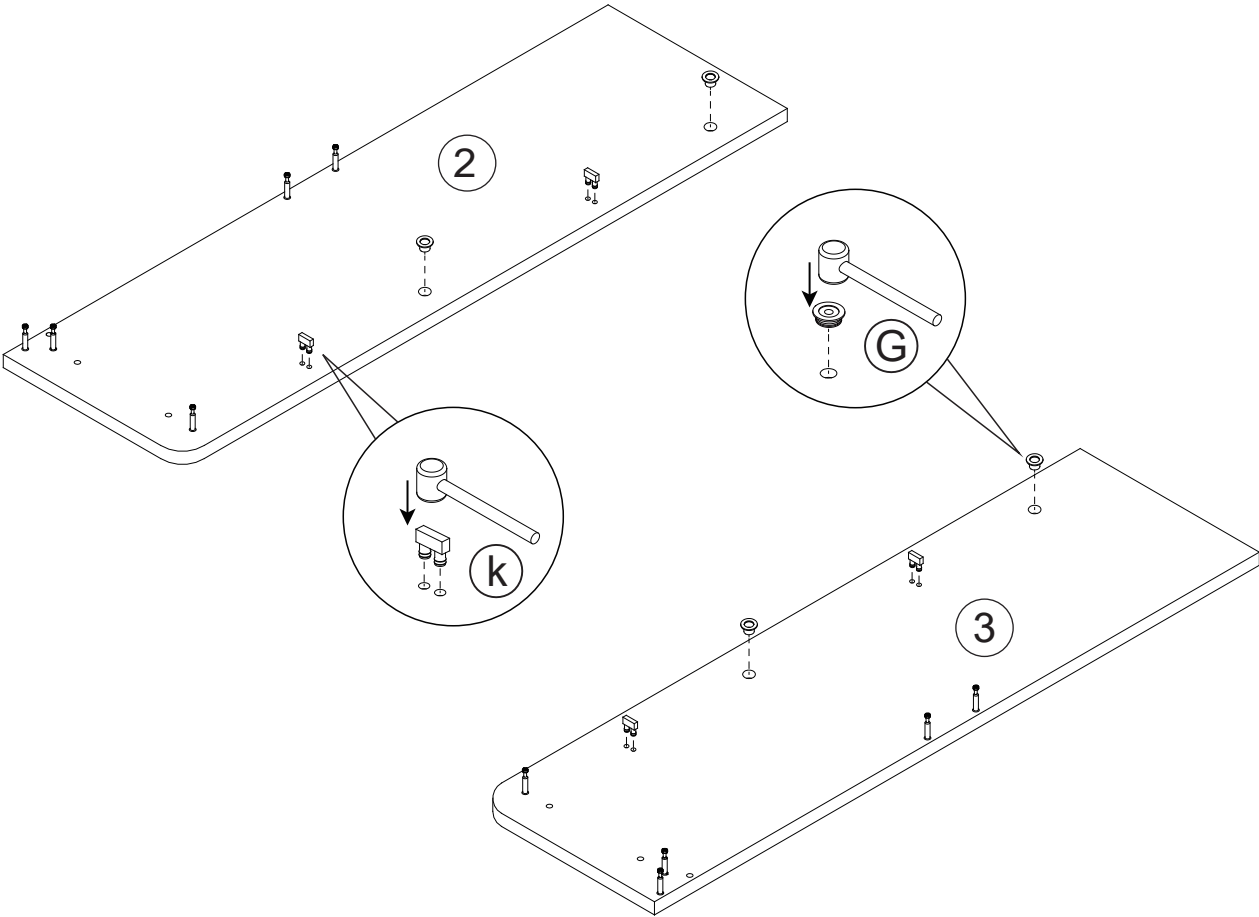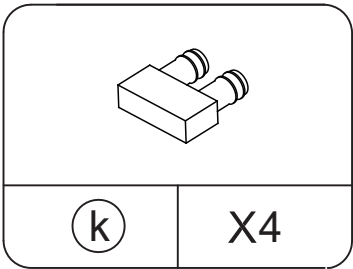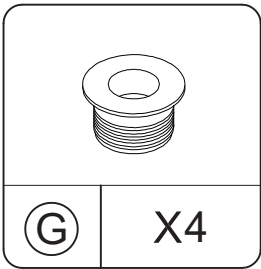


STEP3

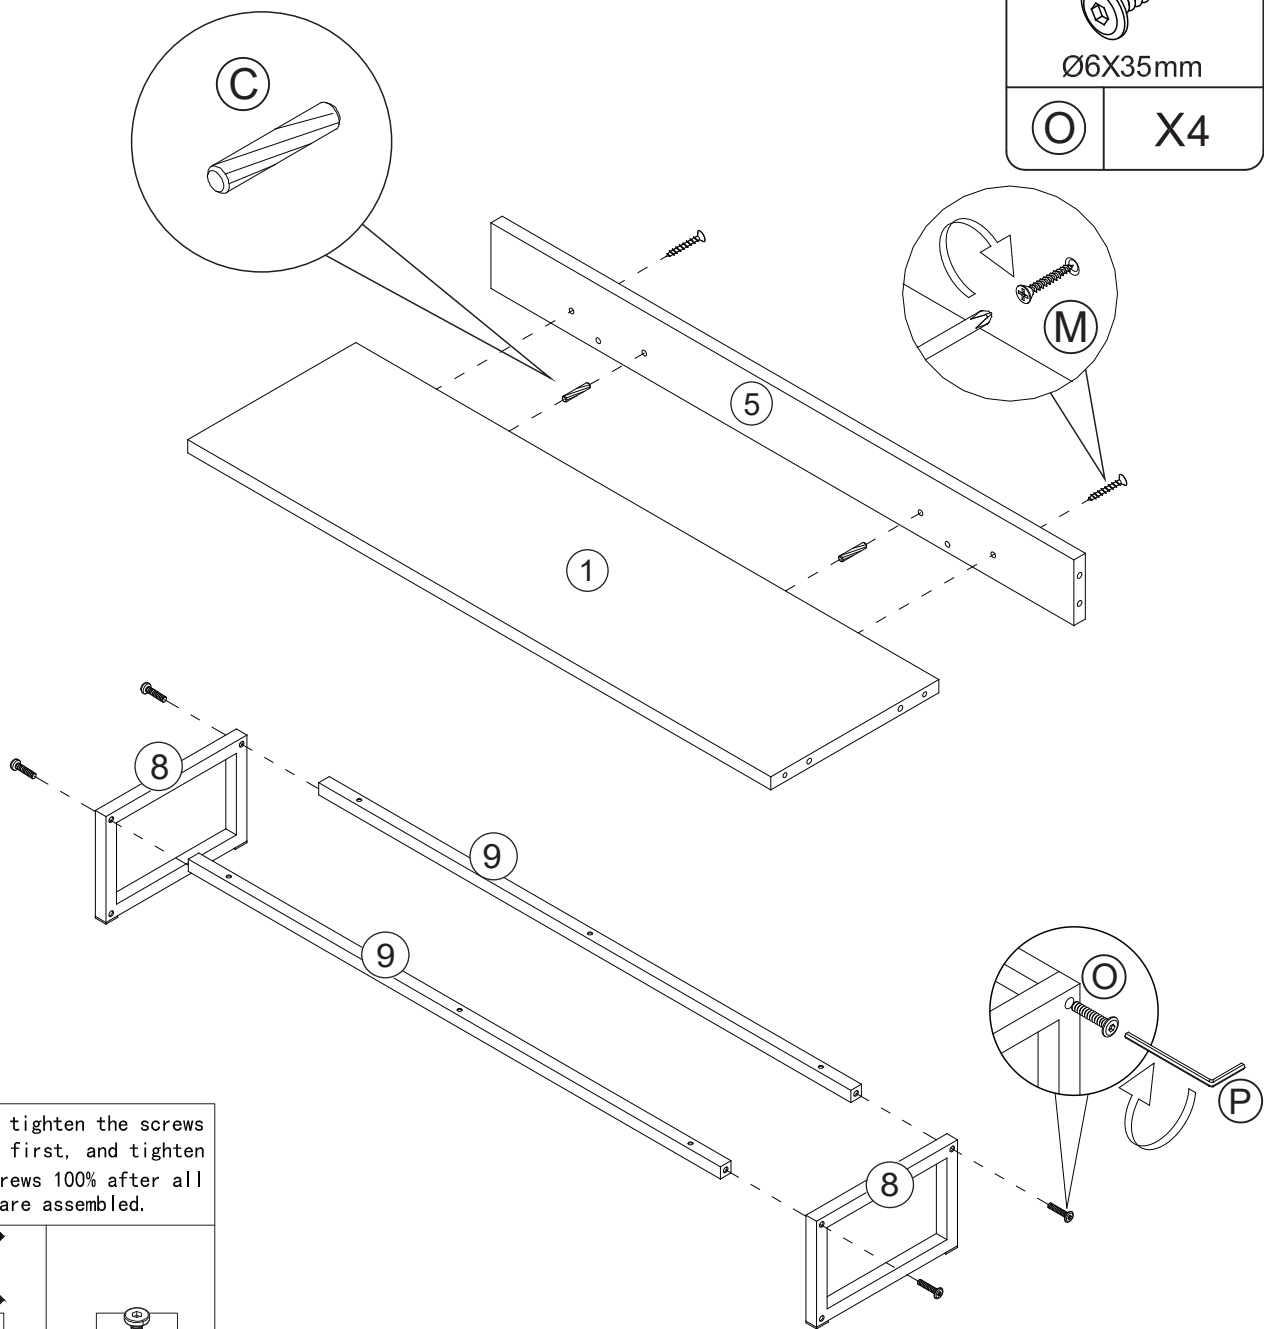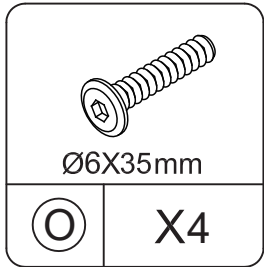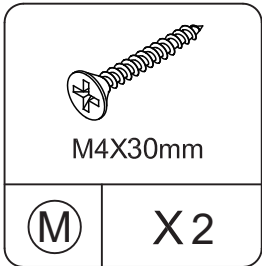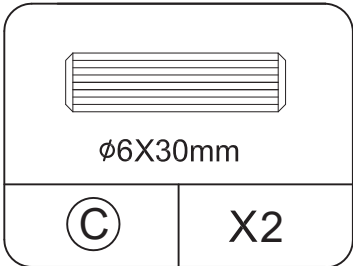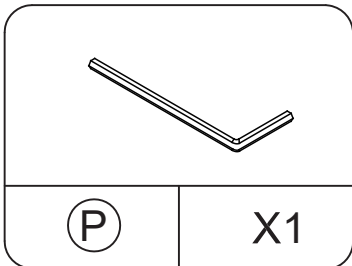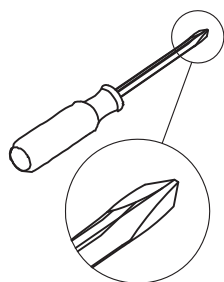

Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.

--	--


STEP4

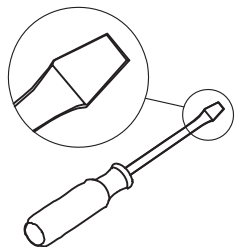





Ø15X10 mm

(B)	X5
-----	----




ø6X30mm

(C)	X3
-----	----

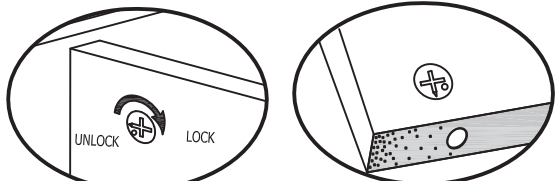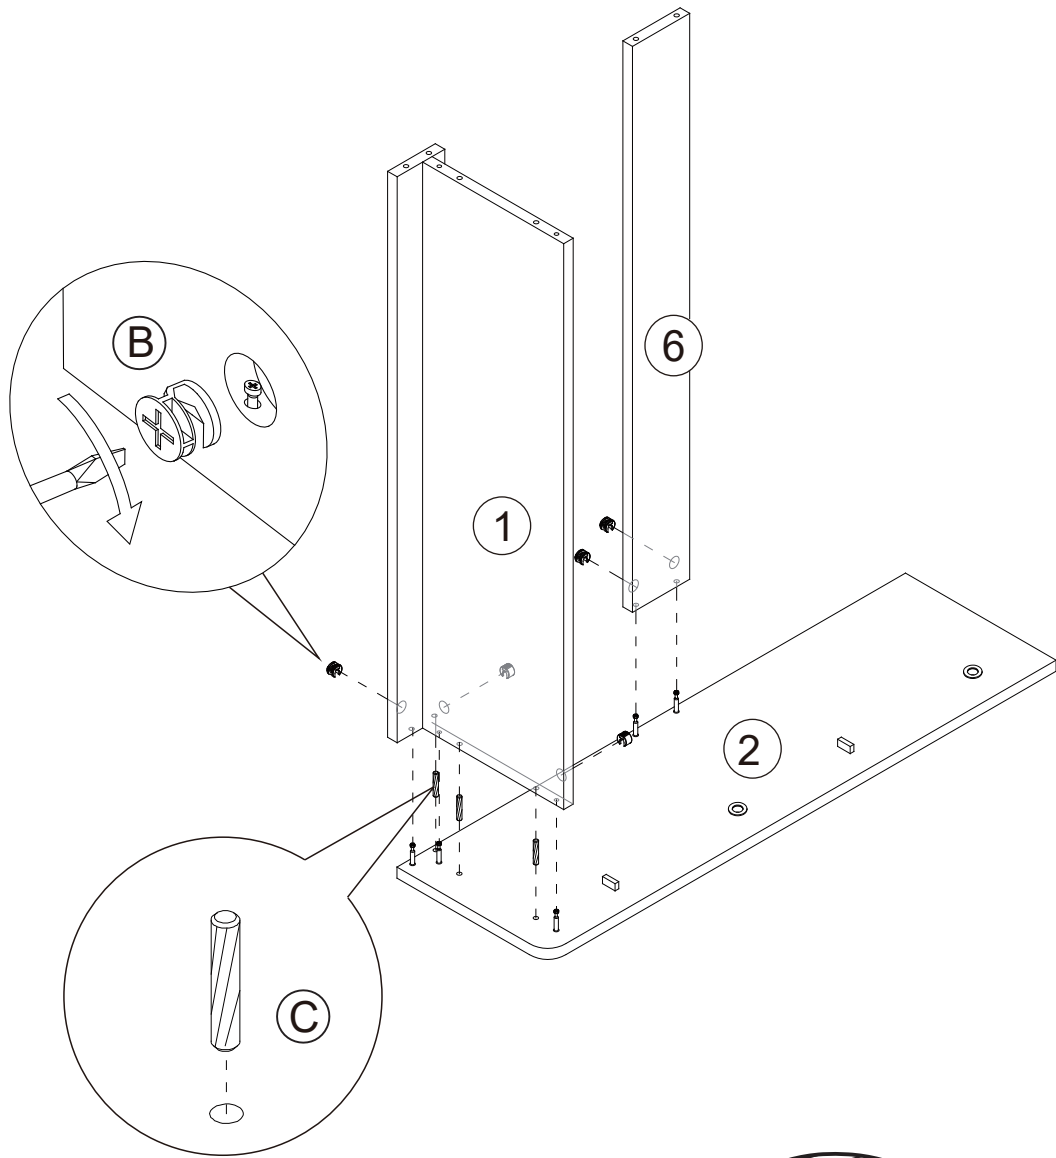





Proper orientation of CAM LOCK

STEP5

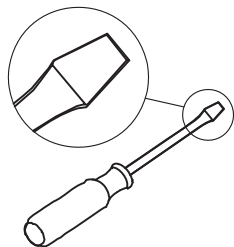





 Ø15X10mm	
(B)	X5

 ø6X30mm	
(C)	X3







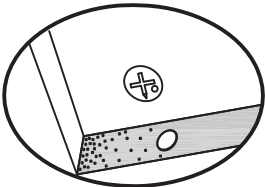
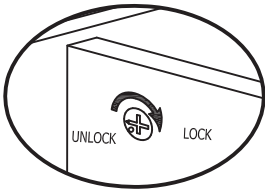
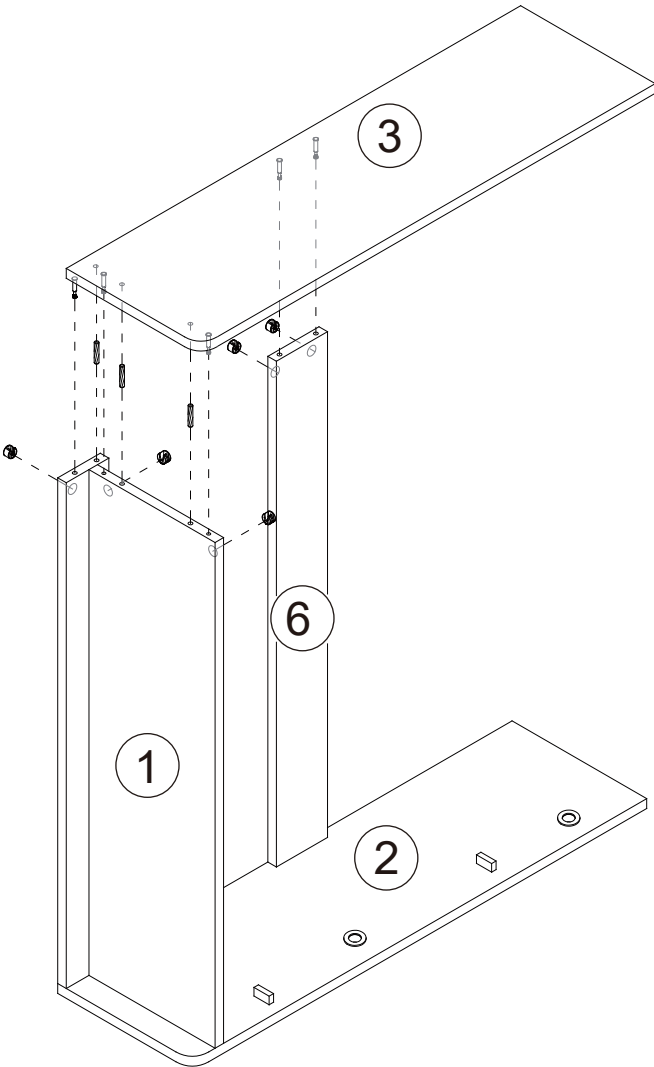


Proper orientation of CAM LOCK








STEP6

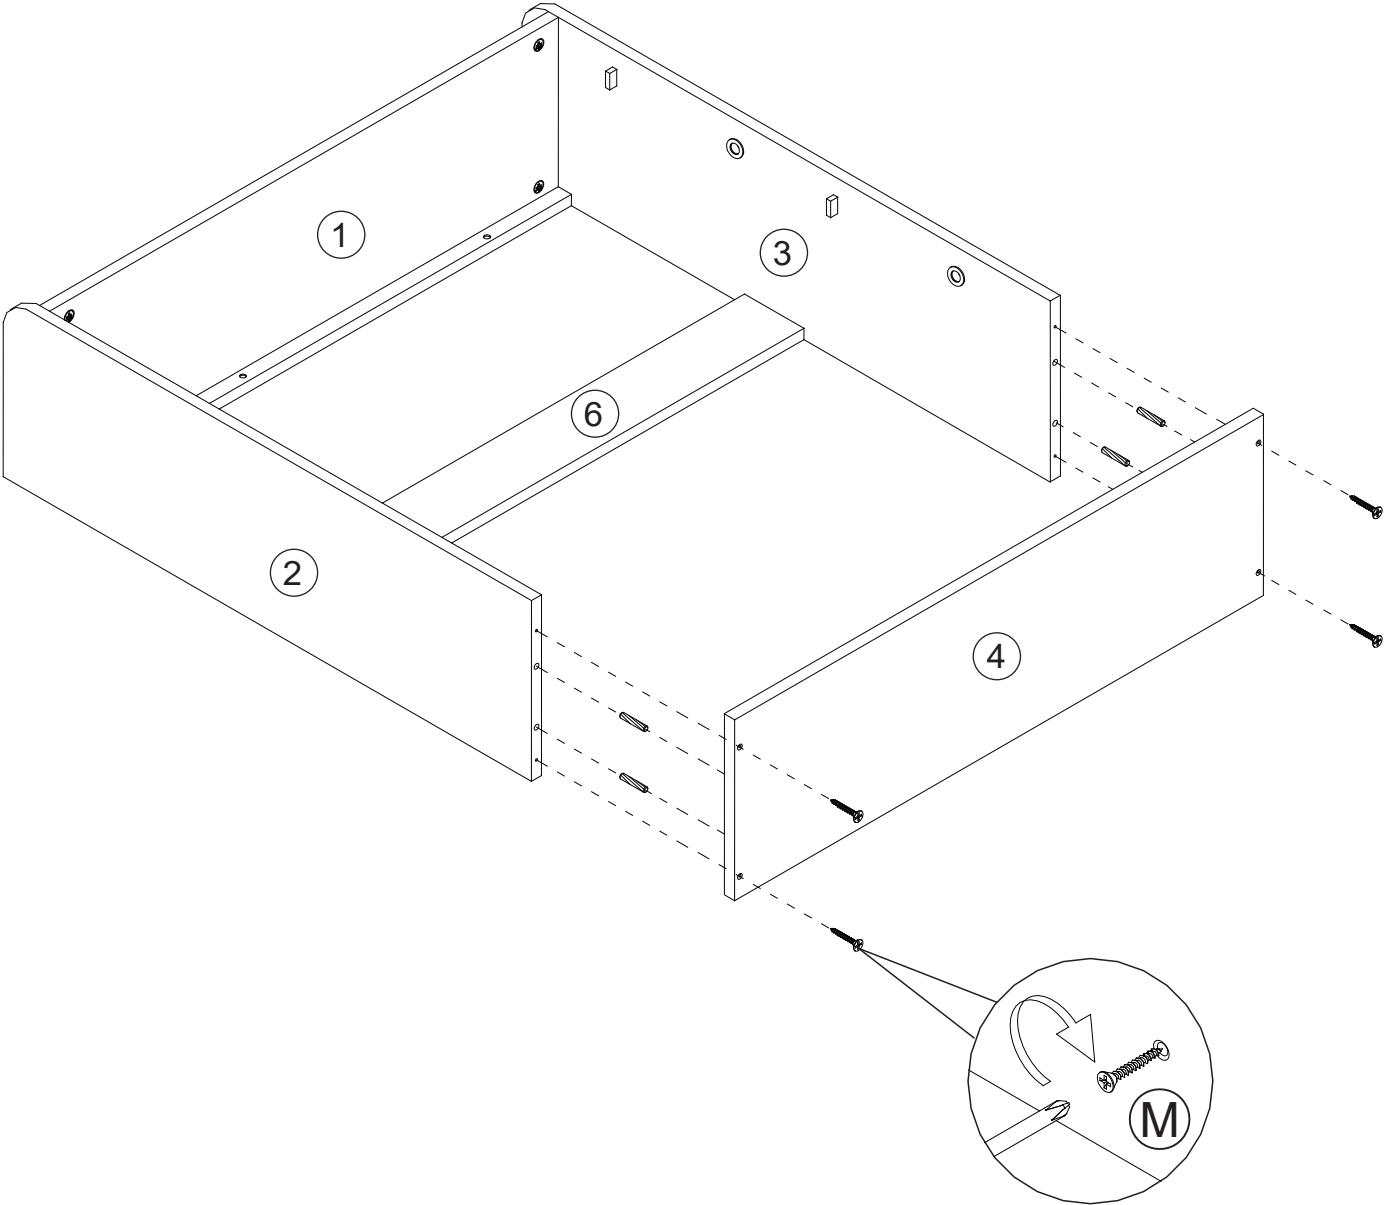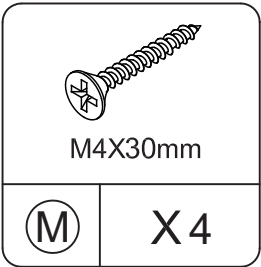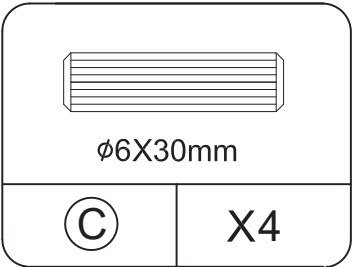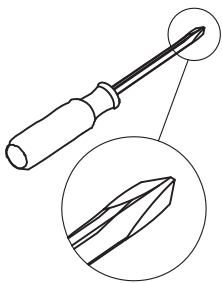

STEP7

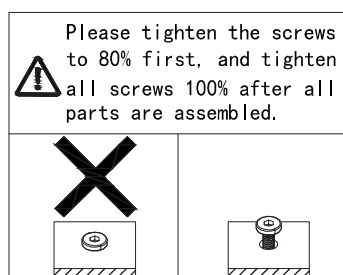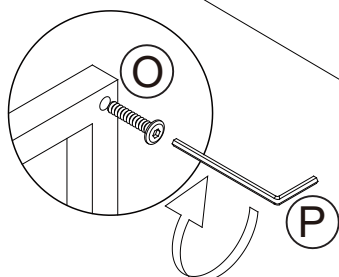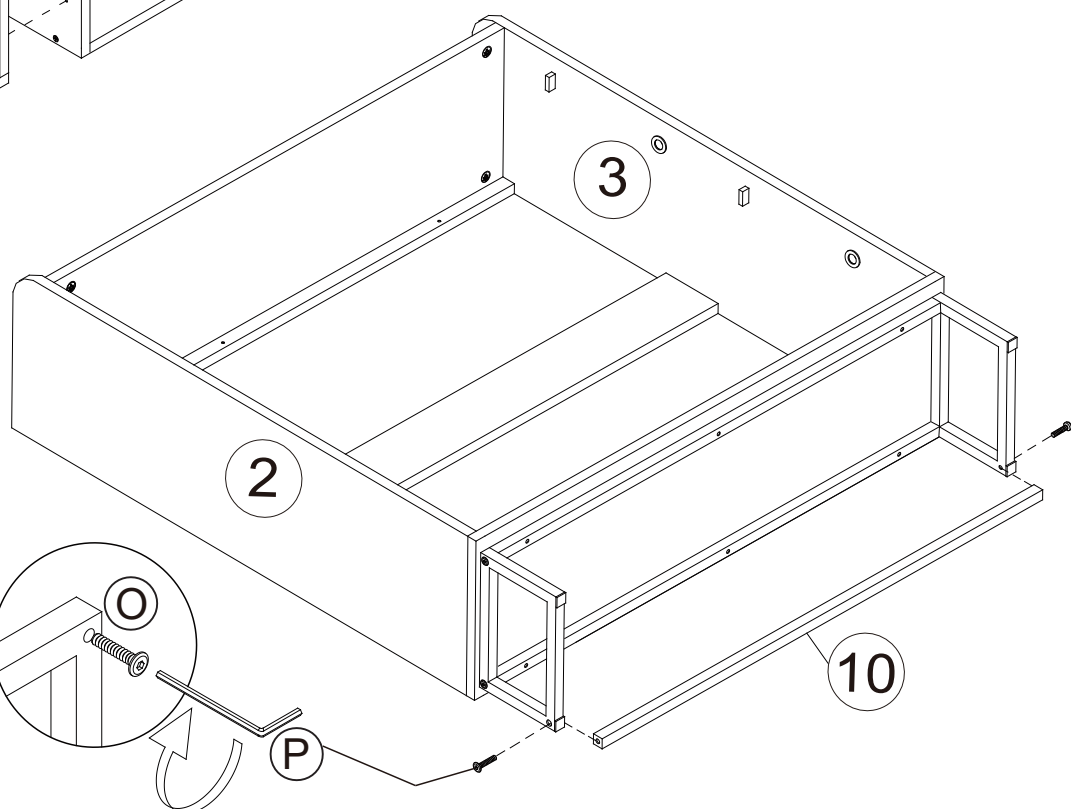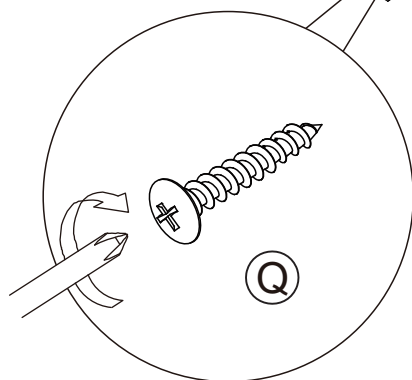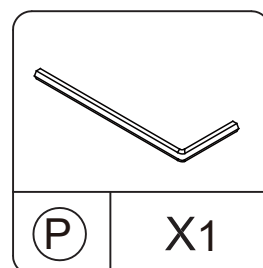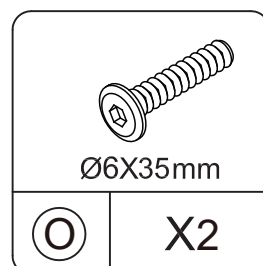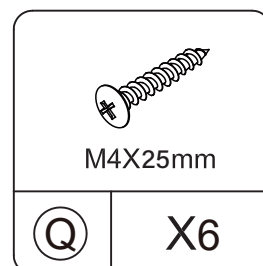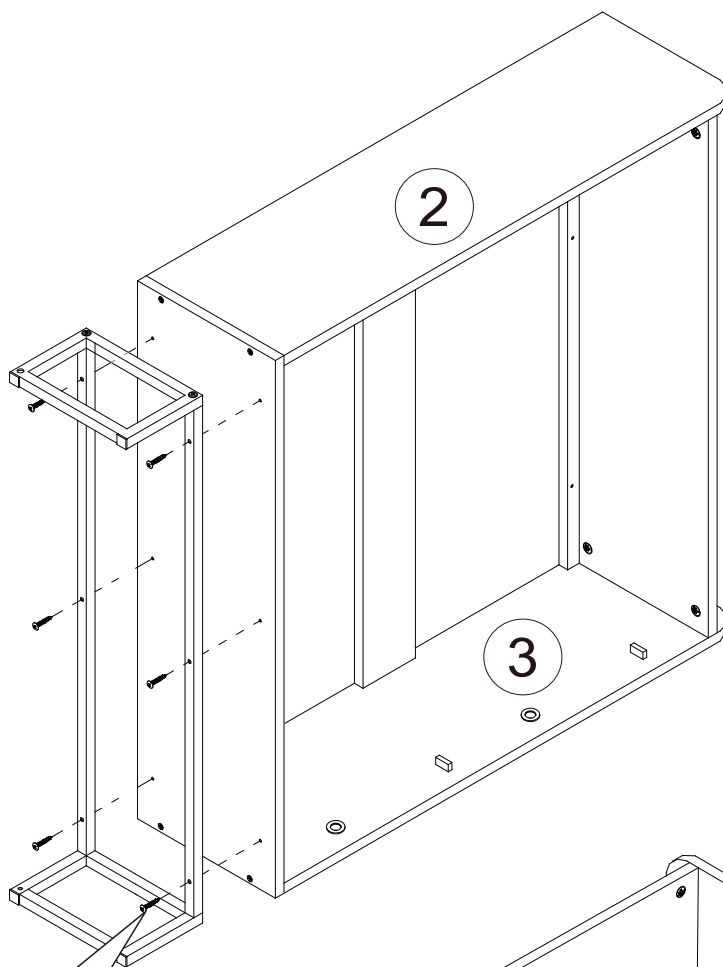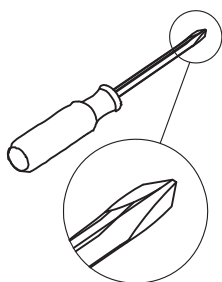


STEP8

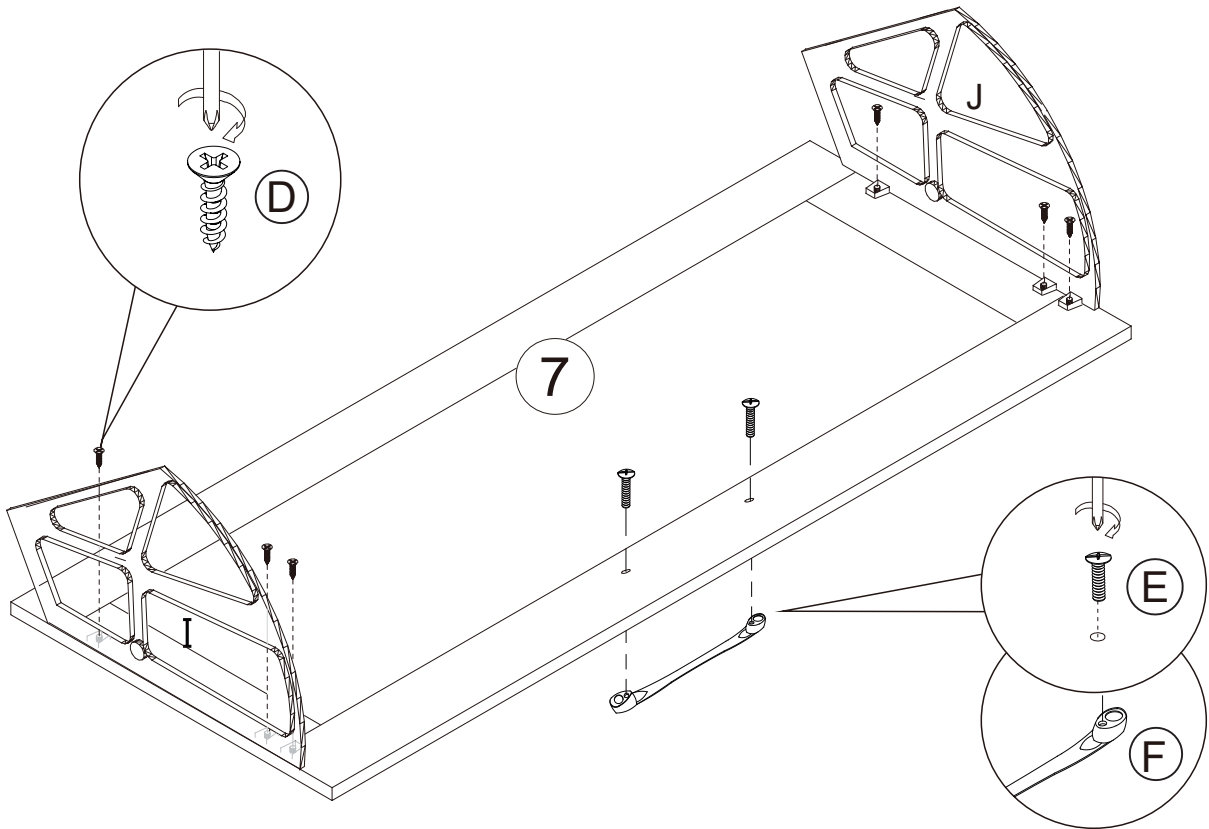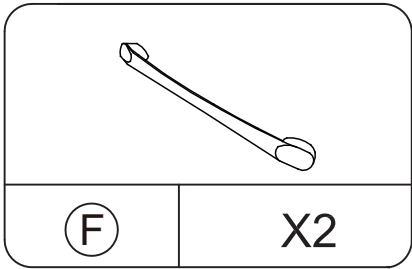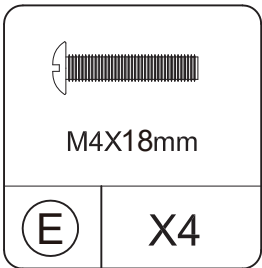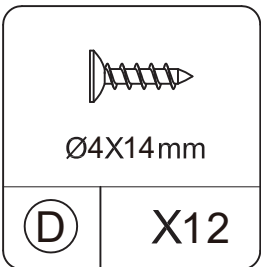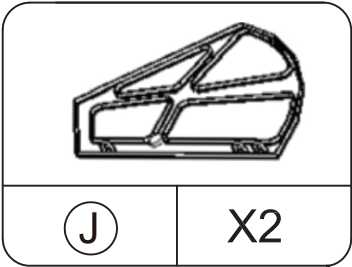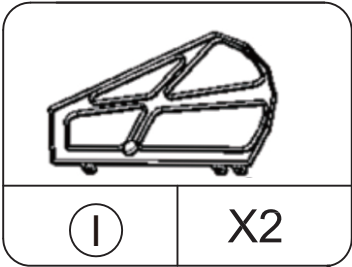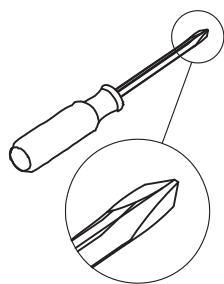


X2

STEP9



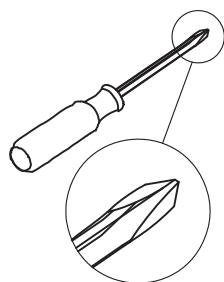


	
Ø4X14mm	
D	X8

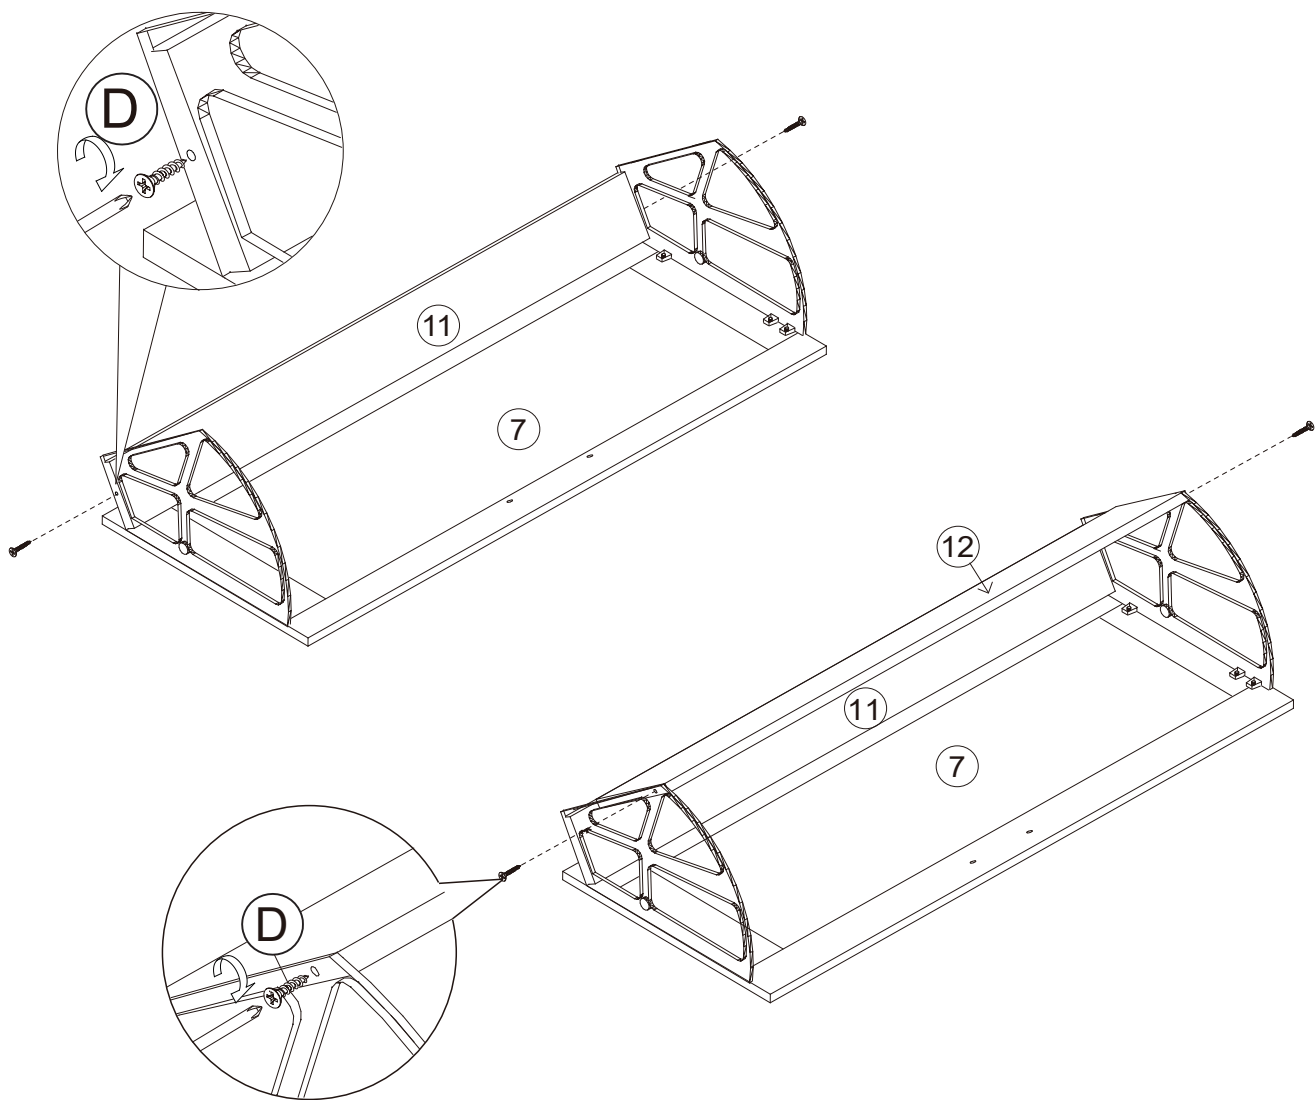

X2

STEP10

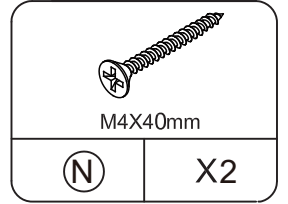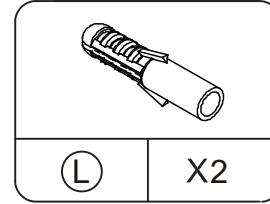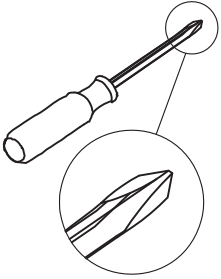


Cabinet must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over.

.Mark the drill position on the wall with a pencil.


.Drill holes on the marked position using a bit.

Gently inert the wall anchor (L) into the drilled hole with the help of a hammer





.Fixed the cabinet to the wall with provided screws (N)

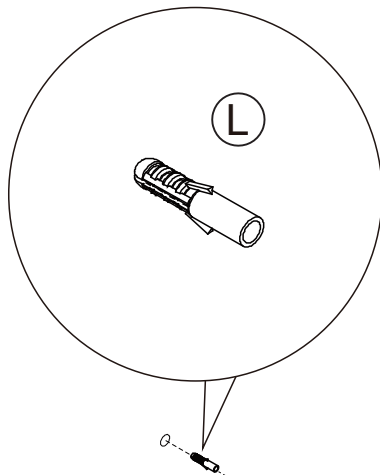


WALL

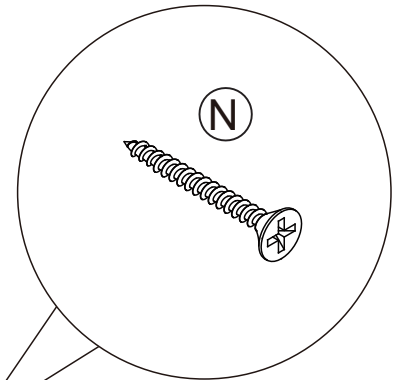

STEP11

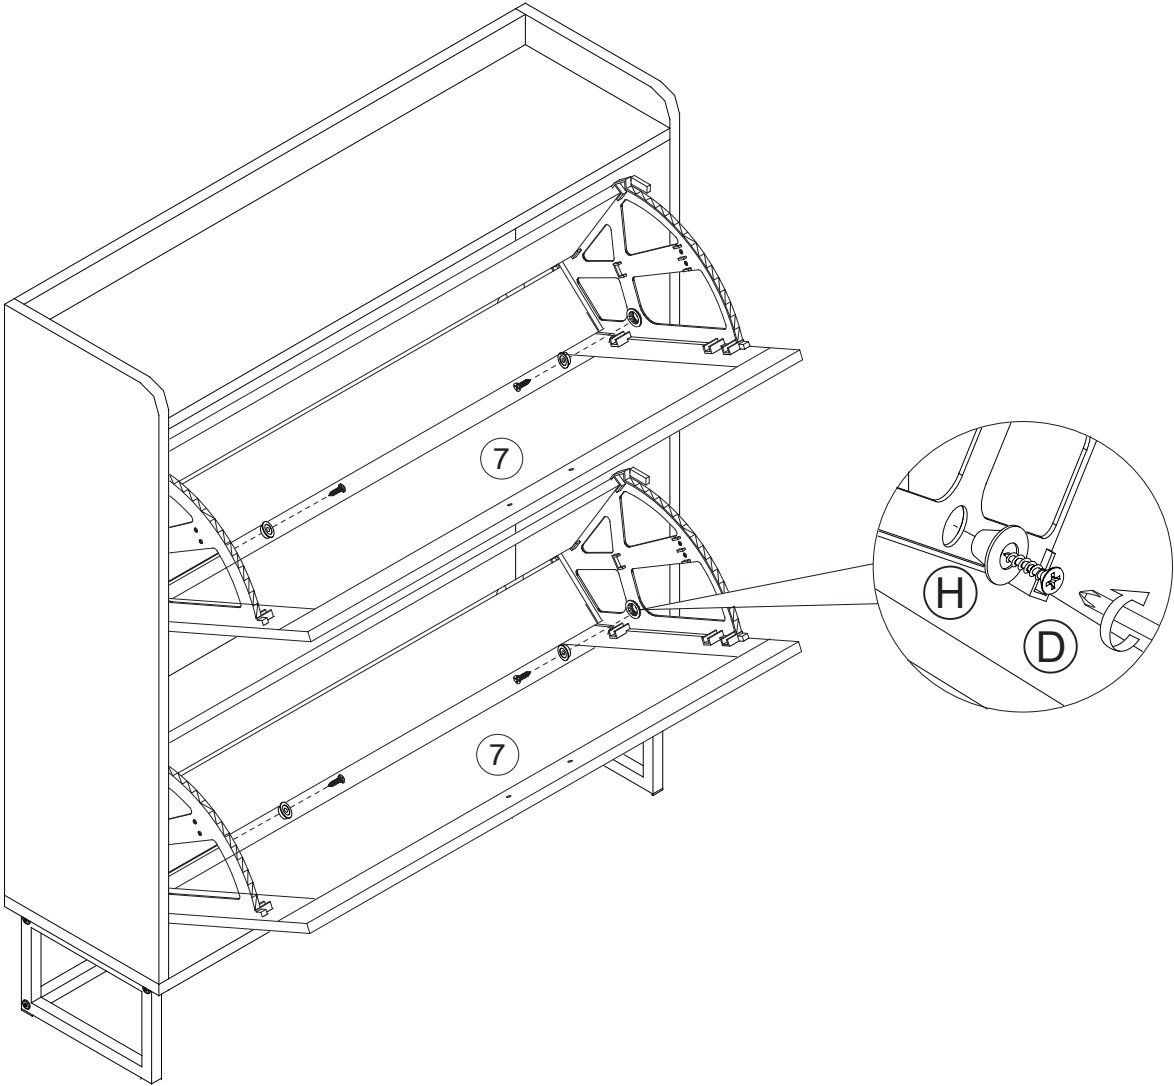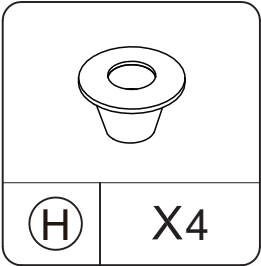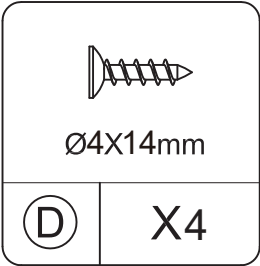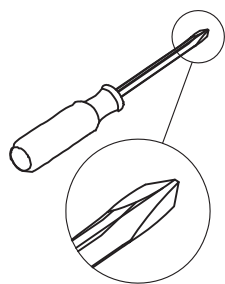

STEP12

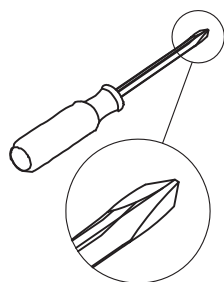

 Ø4X14mm	
D	X4

