





# ASSEMBLY INSTRUCTION

020/323/324/R55 Kelly Uph. Sleigh Bed 5/0  
 020/326/327/R55 Kelly Uph. Sleigh Bed 6/6  
 020/326/327/R59 Kelly Uph. Sleigh Bed 6/0

## HARDWARE LIST

|   |   |                   |             |        |
|---|---|-------------------|-------------|--------|
| A |  | Threaded Bolt     | Ø5/16"*4"   | 8 PCS  |
| B |  | Curve Washer Nuts | Ø5/16"      | 8 PCS  |
| C |  | Spanner Wrench    | 12MM        | 1 PC   |
| D |  | Screw             | Ø8*1*1-1/4" | 10 PCS |

## IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children

- STEP 1. Screw the Threaded Bolt (A) into the two threaded holes that are at the bottom of the posts of Bolt the Headboard and the Footboard. Slide the Bed Rail onto the two Bolts (A) on one of the bed posts until the Threaded Bolt (A) are visible through the holes on the inside of the Bed Rail. See Figure 1.
- STEP 2. Slide a Curved Washer Nut (B) onto the Threaded Bolt (A) through the holes in the Bed rail. Tighten all the Curved Washer Nut (B), using the Spanner Wrench (C). See Figure 1.
- STEP 3. Assemble the leg supports to the bed slats. See Figure 2.
- STEP 4. Mount the assembled support slats onto the side rail with screws (D). Then use a Phillips head screwdriver to tighten screws. See Figure 3.

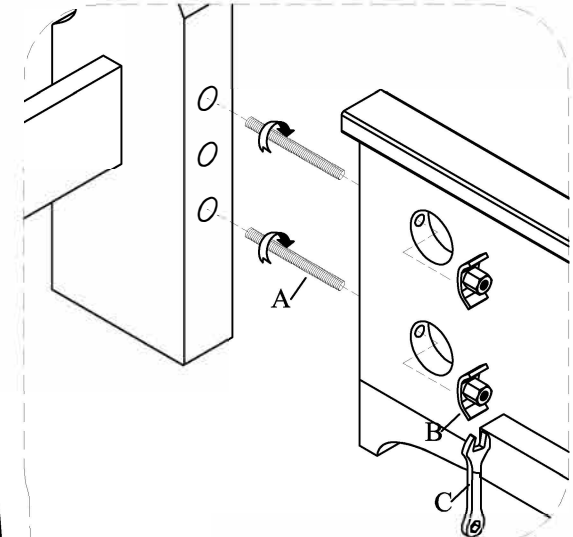


FIGURE 1

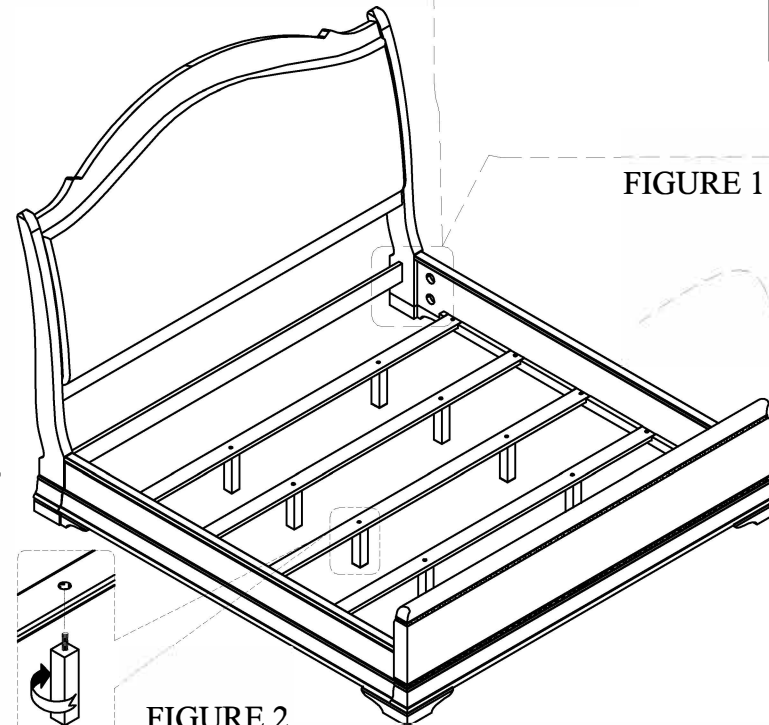


FIGURE 2

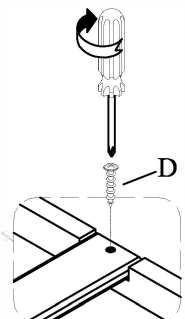


FIGURE 3

MADE IN VIETNAM