







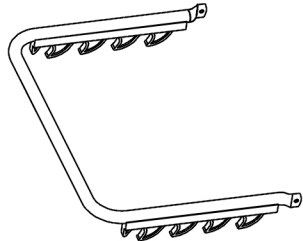




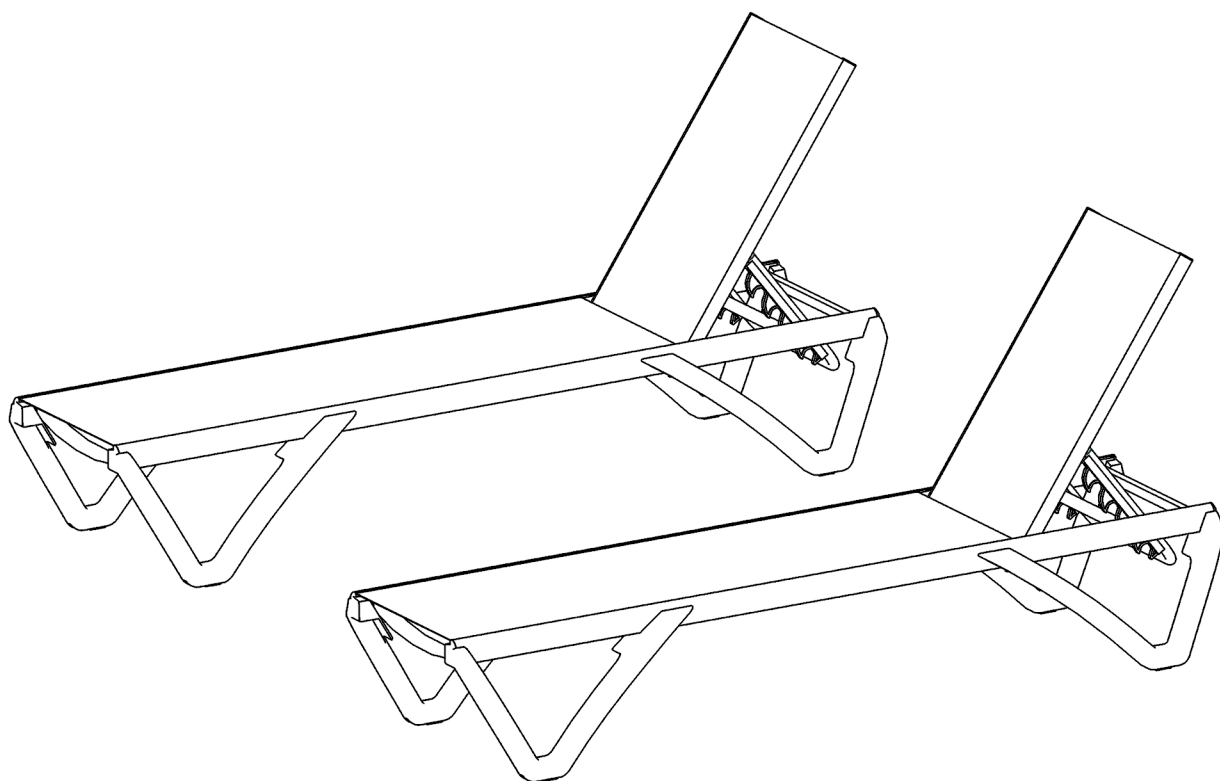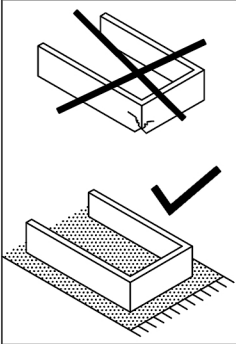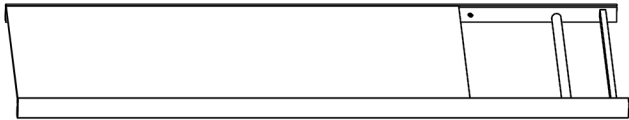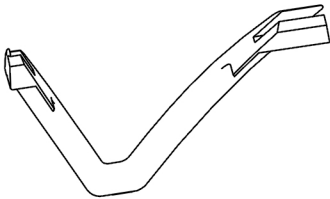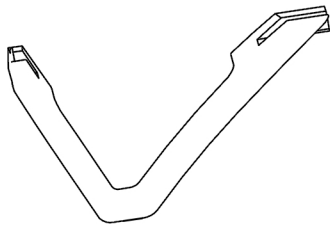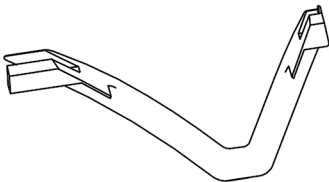


PATIO LOUNGE CHAIR


ASSEMBLY MANUAL

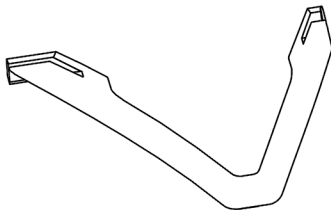


<div data-bbox="86 1289 293 1506"> <p>Please assemble the lounge chair on the carton or carpet to avoid scratch.</p> </div> <div data-bbox="74 1549 308 1893">  </div> <div data-bbox="181 1923 204 1979"> <p>1</p> </div>	<div data-bbox="347 140 1396 466"> <div data-bbox="347 140 807 208"> <p>A 2X Main Seat Frame</p> </div> <div data-bbox="532 266 1157 385">  </div> </div> <div data-bbox="347 495 857 821"> <div data-bbox="347 495 555 563"> <p>B 2X Leg</p> </div> <div data-bbox="460 585 788 783">  </div> </div> <div data-bbox="881 495 1396 821"> <div data-bbox="881 495 1089 563"> <p>C 2X Leg</p> </div> <div data-bbox="958 576 1286 800">  </div> </div> <div data-bbox="347 851 857 1176"> <div data-bbox="347 851 555 919"> <p>D 2X Leg</p> </div> <div data-bbox="443 963 770 1144">  </div> </div> <div data-bbox="881 851 1396 1176"> <div data-bbox="881 851 1089 919"> <p>E 2X Leg</p> </div> <div data-bbox="923 946 1252 1155">  </div> </div> <div data-bbox="347 1206 857 1532"> <div data-bbox="347 1206 578 1274"> <p>F 2X Back</p> </div> <div data-bbox="415 1319 770 1459">  </div> </div> <div data-bbox="881 1206 1396 1532"> <div data-bbox="881 1206 1335 1274"> <p>G 2X Adjustment Tube</p> </div> <div data-bbox="985 1270 1286 1510">  </div> </div> <div data-bbox="347 1561 857 1893"> <div data-bbox="347 1561 602 1630"> <p>H 24X Bolts</p> </div> <div data-bbox="522 1655 810 1719">  <p>M6X30</p> </div> <div data-bbox="347 1732 578 1800"> <p>K 4X Bolts</p> </div> <div data-bbox="424 1793 543 1893">  <p>M6X20</p> </div> <div data-bbox="611 1732 839 1800"> <p>M 4X Plastic Cylinder</p> </div> <div data-bbox="700 1825 758 1881">  </div> </div> <div data-bbox="881 1561 1396 1893"> <div data-bbox="881 1561 1113 1630"> <p>J 4X Bolts</p> </div> <div data-bbox="1026 1644 1350 1713">  <p>M6X35</p> </div> <div data-bbox="881 1732 1267 1800"> <p>N 1X Allen Wrench</p> </div> <div data-bbox="1071 1783 1212 1885">  </div> </div>
--	--

! Warm Tip: Please don't tighten screws before finish assemble.


Step 1: Fix 4 legs (Parts B,C, D, E) to Main Seat Frame A separately using 12X Bolts H (M6×30) as shown in diagram.

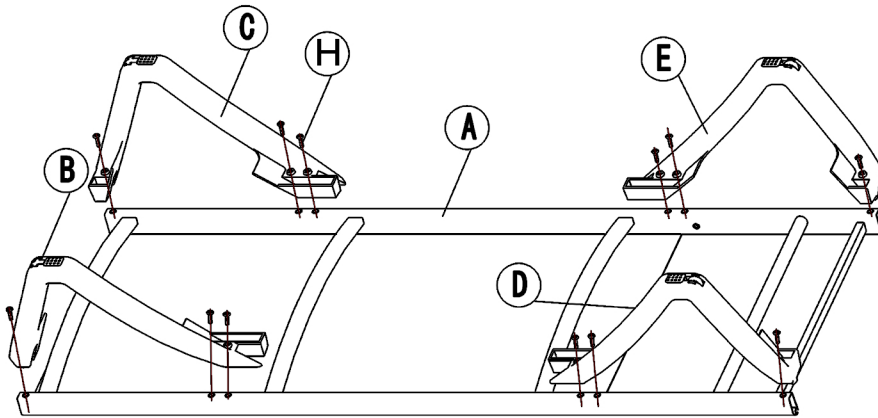

Step 2: Link Adjustment Tube G to Back F using Bolts K (M6×20) as shown in diagram.

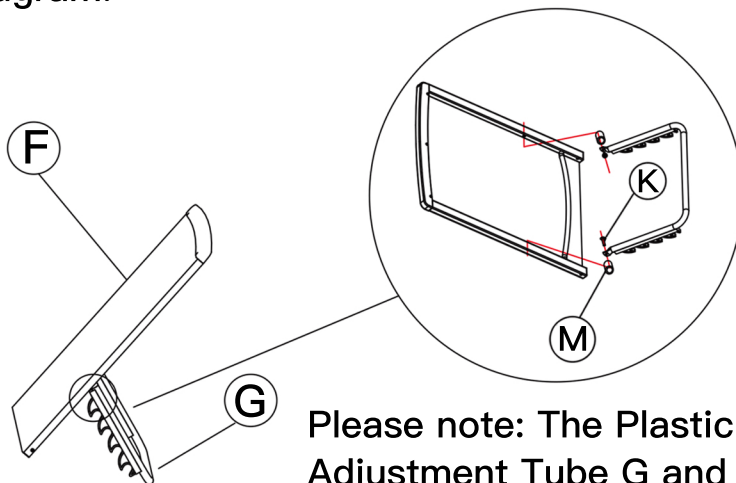

Step 3: Connect Back F to Main Seat Frame A using Bolts J (M6×35) as shown in diagram.

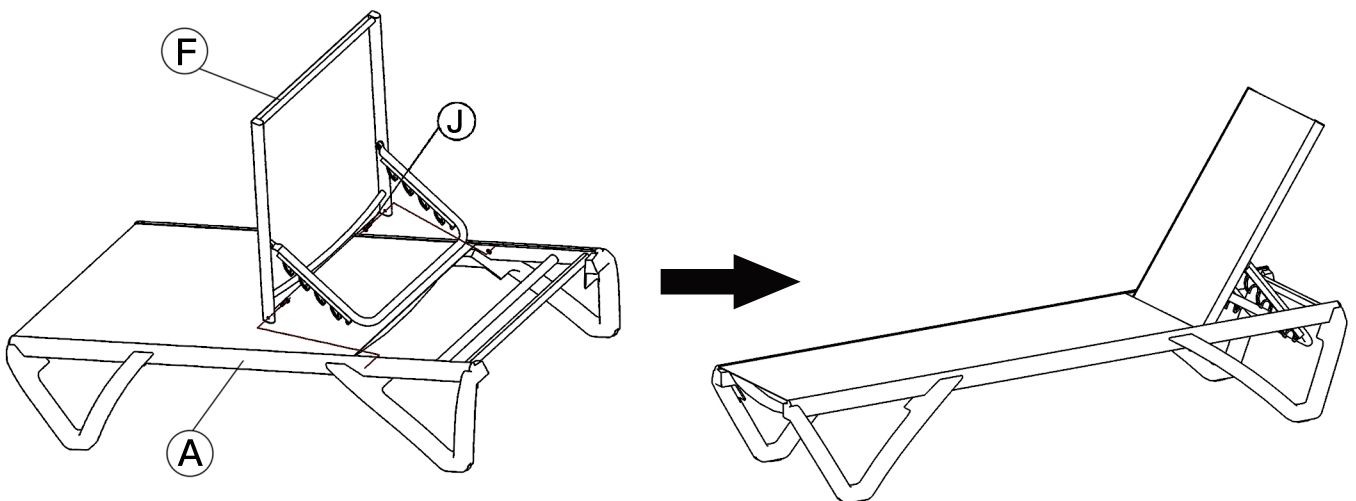

Thanks for your purchase.

we believe in our products.

That's why we provide a 12-month warranty and
friendly, easy-to-reach after-sales service. So if you
have any questions about our product and assembly-
, please feel free to contact us. We will be here for you.