




Frame-Less installation guide

1. **Cut Wallboard:** Cut the first piece of wallboard to the desired size.

2. **Apply Foaming Agent:** Spread foaming agent on the back of the wallboard.


3. **Attach Wallboard to Wall:** Stick the wallboard to the wall once the foaming agent is halfway solidified.

4. **Repeat Process:** Repeat steps 1-3 until the entire wall is covered.

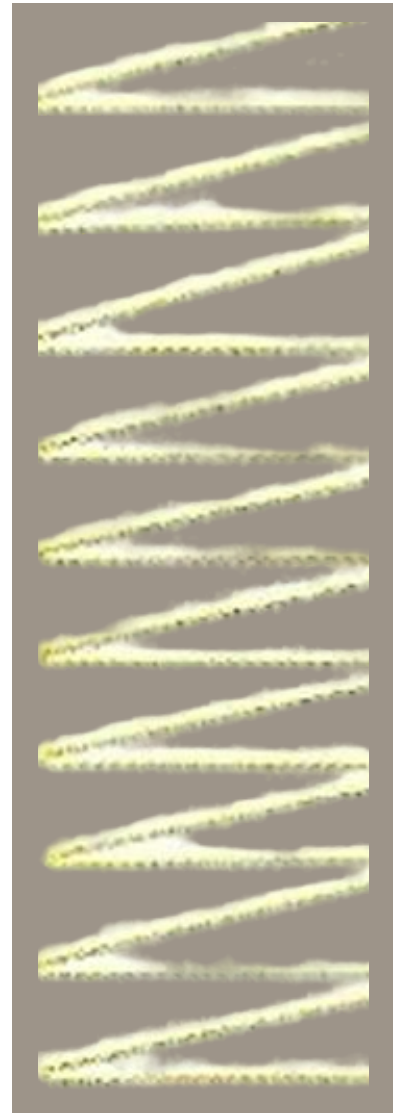

Installation guide with **Frames**

1. **Prepare Frame Parts:** Cut the frame (GP09-1 and GP06-1) to the required size.

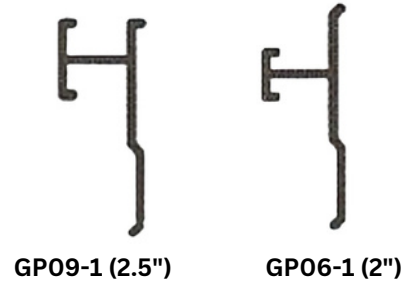

2. **Fix the Frames to the Wall:** Use one inch or longer drywall nails to fix GP09-1 to the wall.

Drywall Nails



3. **Apply Foaming Agent:** Add foaming agent to the back of the wallboard and the frame.

4. **Attach Wallboard:** Press the wallboard into place once the foaming agent is halfway solidified.

5. **Repeat Process:** Follow the same process for each frame and wallboard section until the wall is complete.

