

AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.


The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.

We will reply your messages within 24 hours, please kindly wait for the response from our professional service team.


Your comfort and contentment are of utmost importance.

Best Regards,
Customer Care Specialist

ASSEMBLY INSTRUCTION

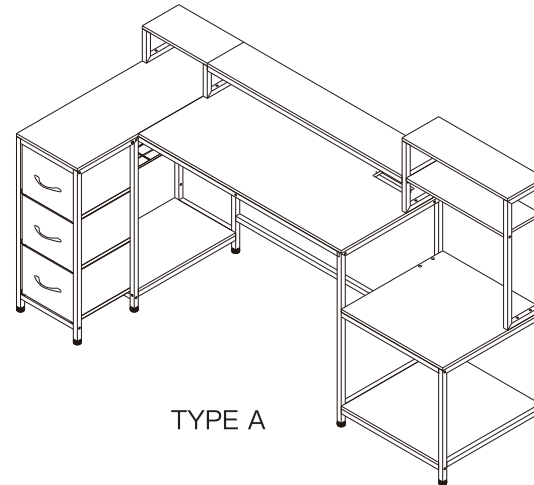

TYPE A


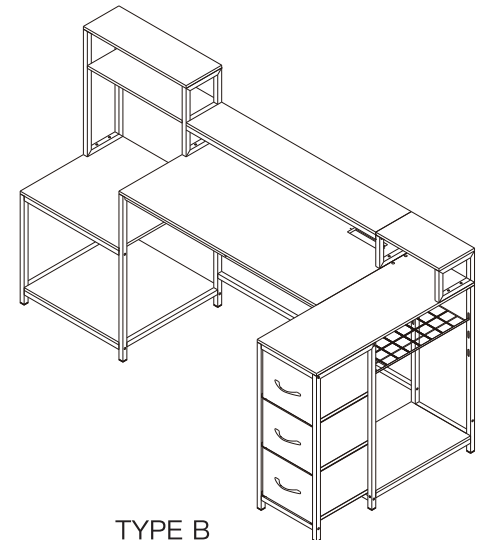


TYPE B


Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition.

If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.

PARTS:

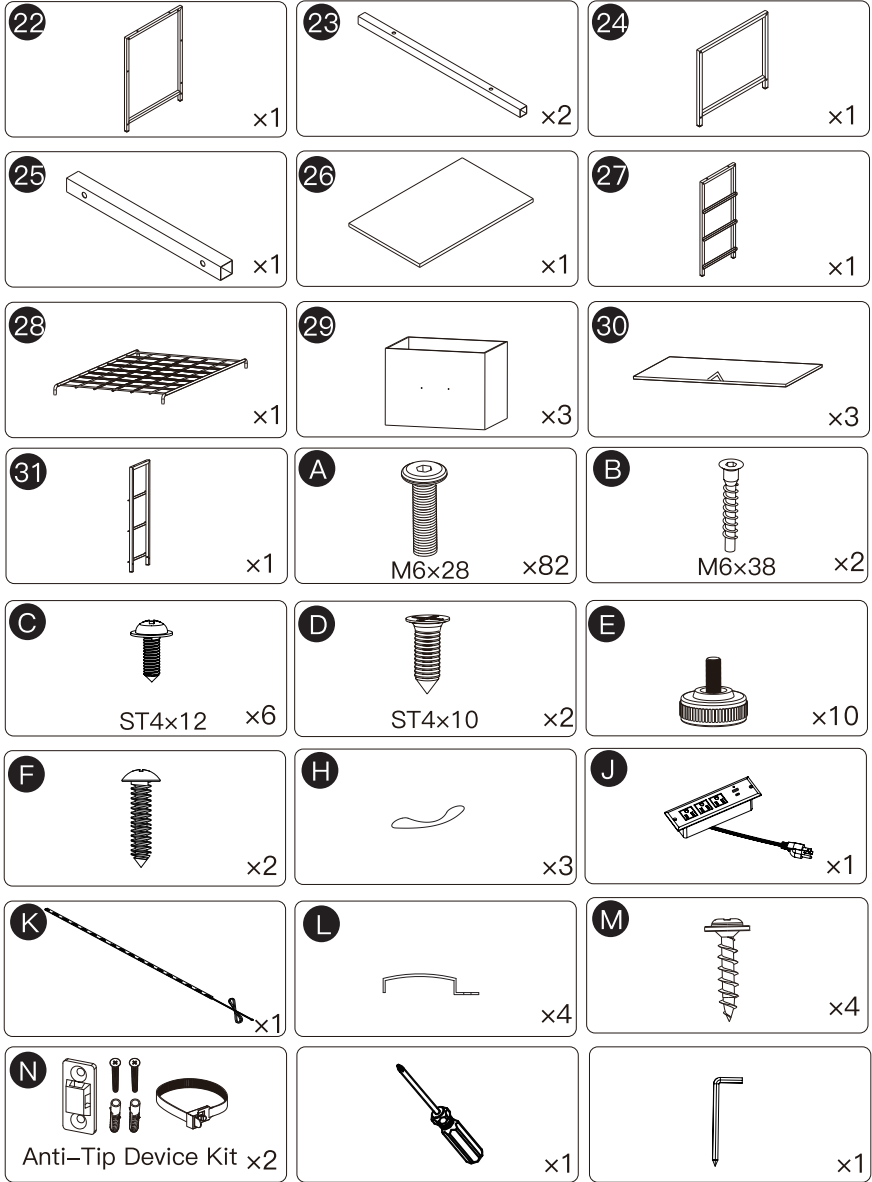
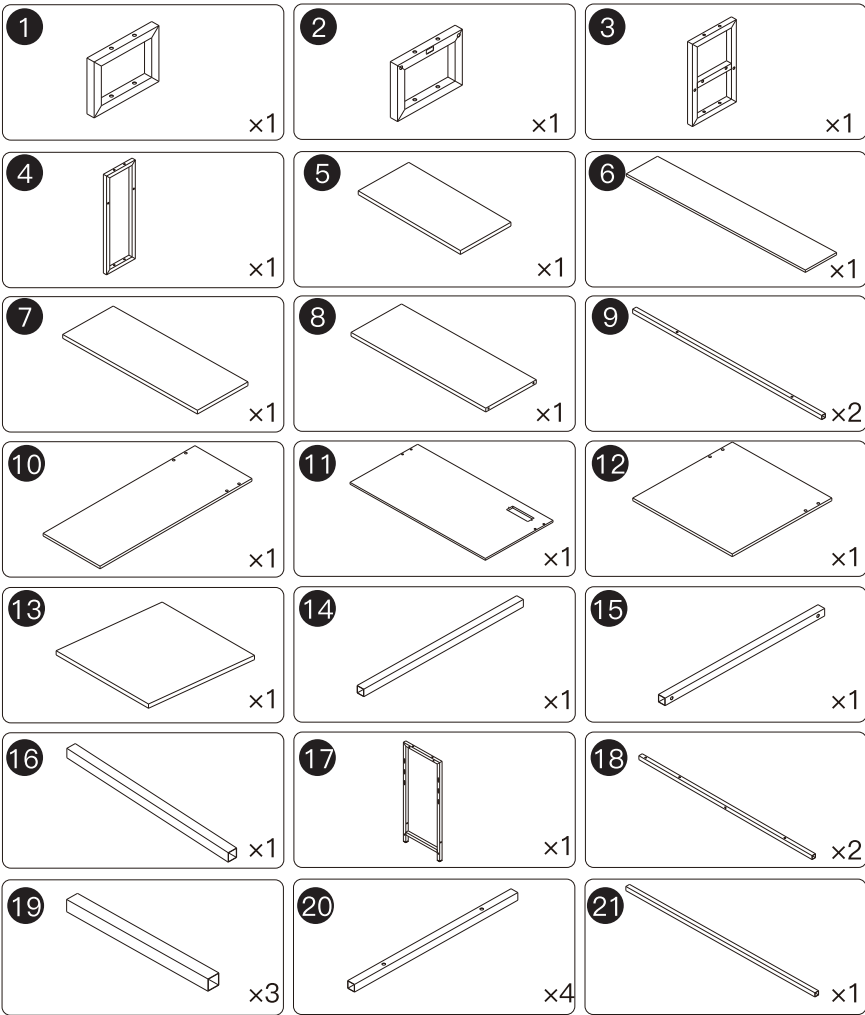


EXPLODED DRAWING:

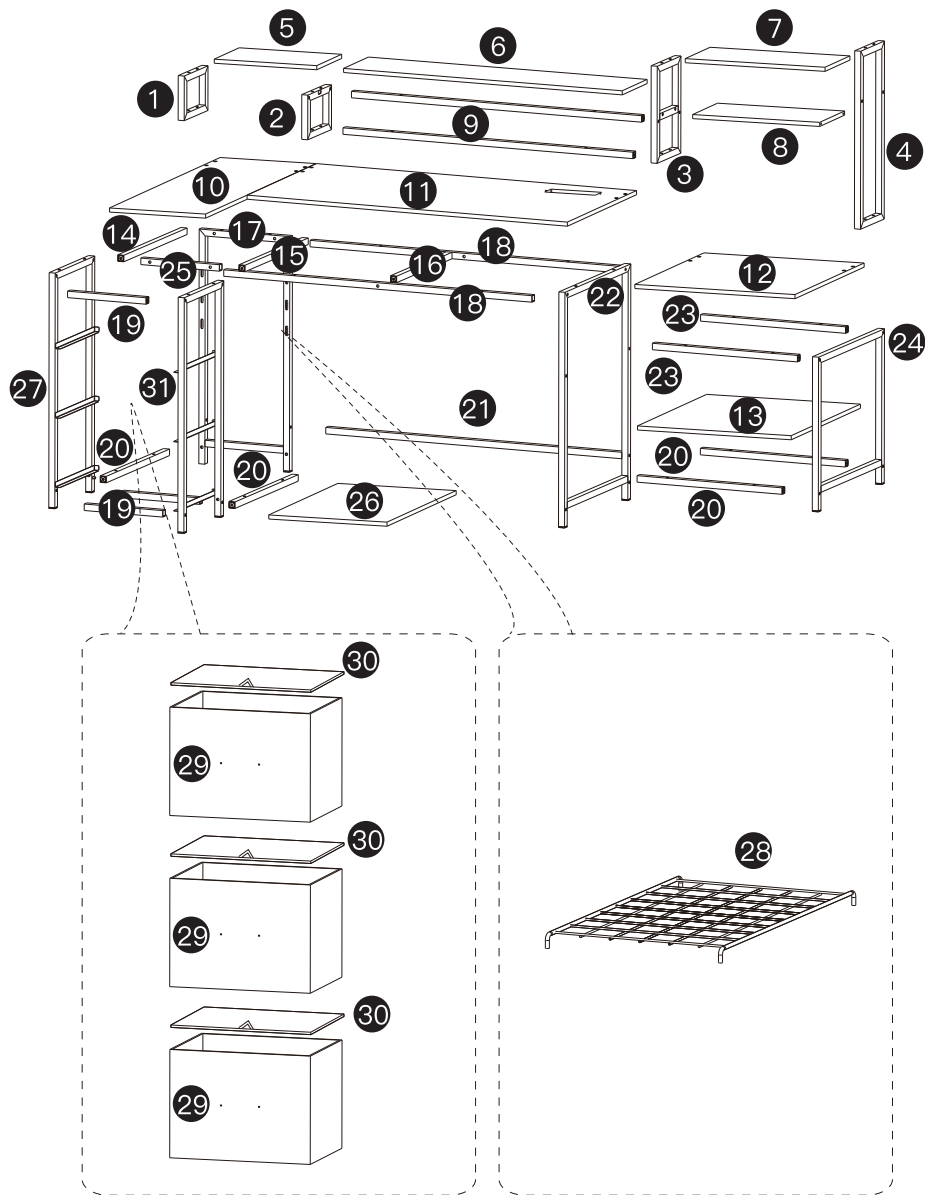



TYPE-A INSTALLATION

Step 1 Install part **E** on part **17**, **27** & **31**.

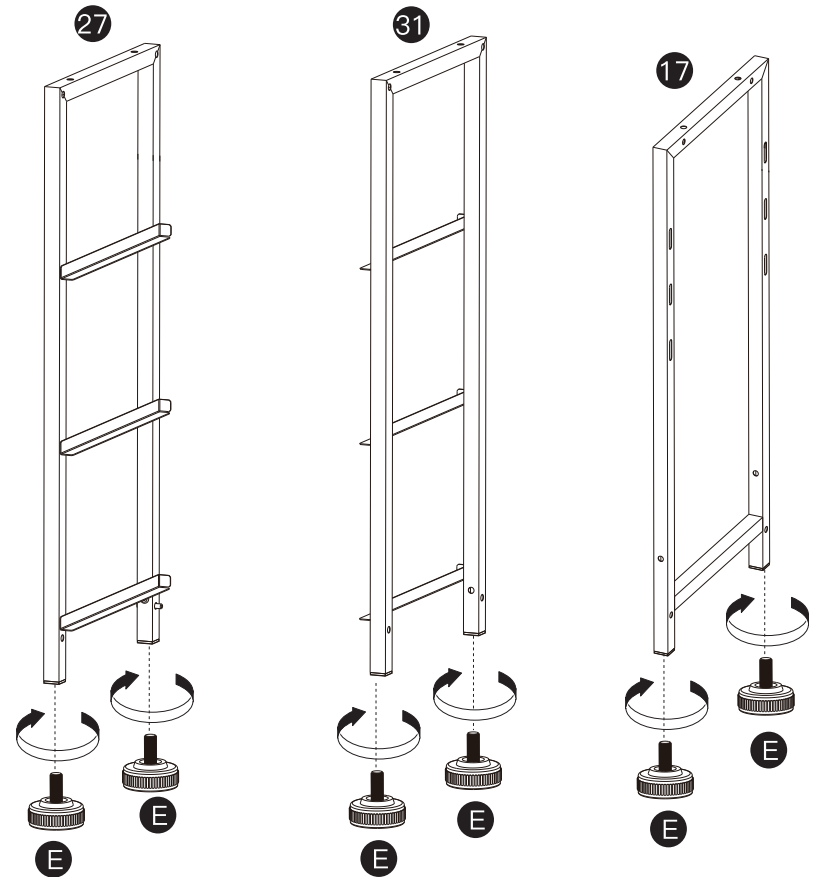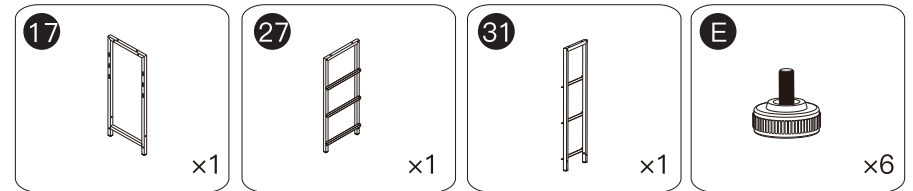



Step 2

Connect part 27 & 31 with part 19 & 25, use part A to screw them.

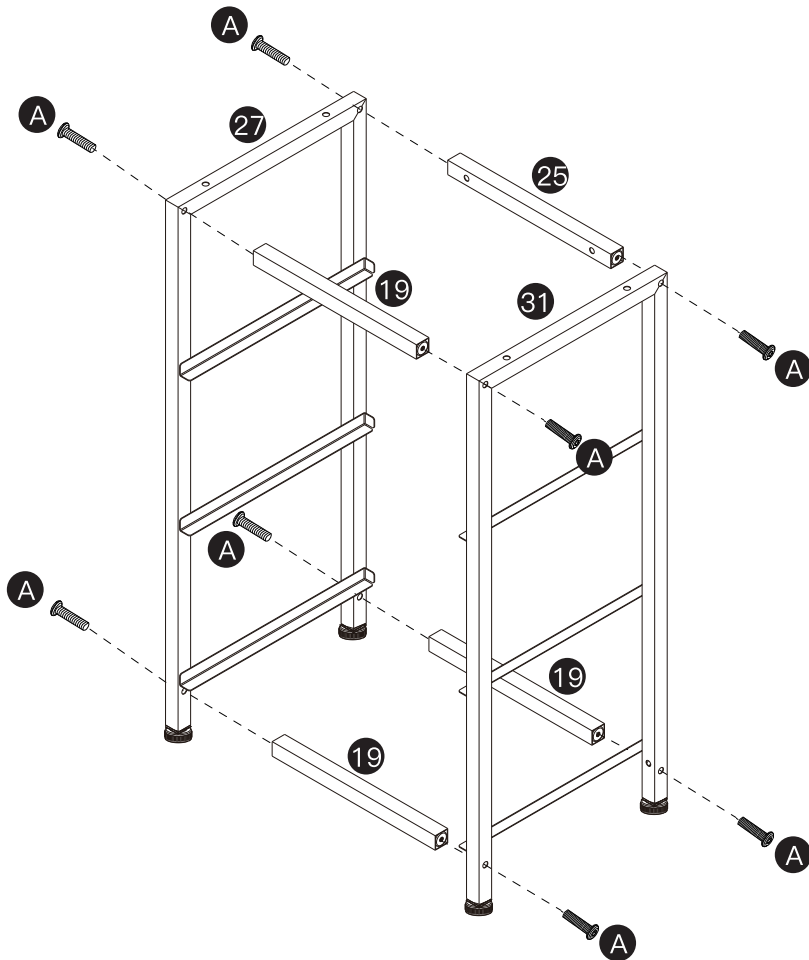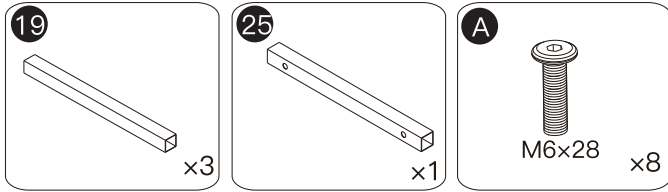



Step 3

Install part 20 on part 26, use part A to screw them.

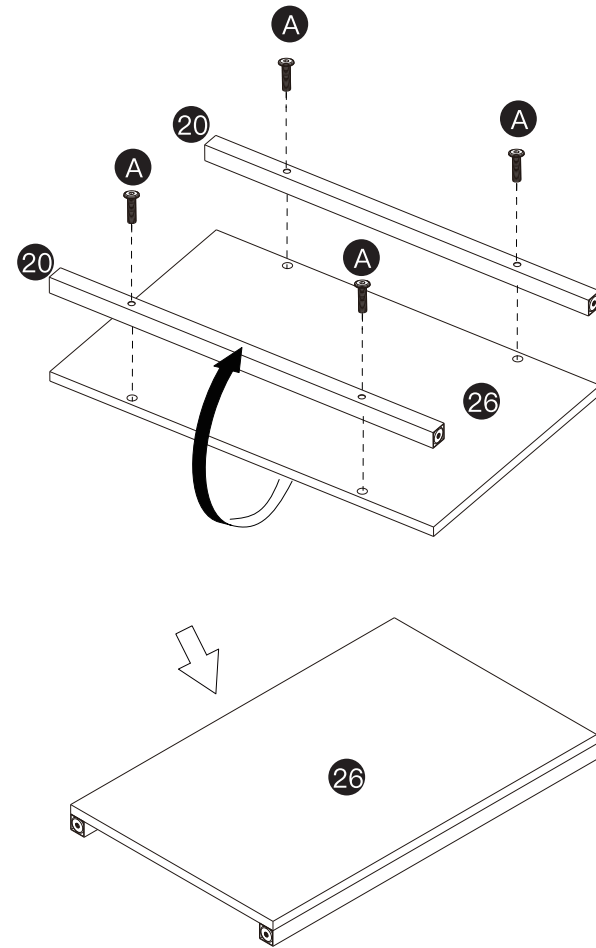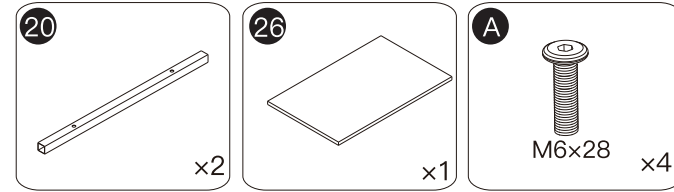



Step 4

Connect part 17 & 25 with part 14, 15 & 26 by part A.

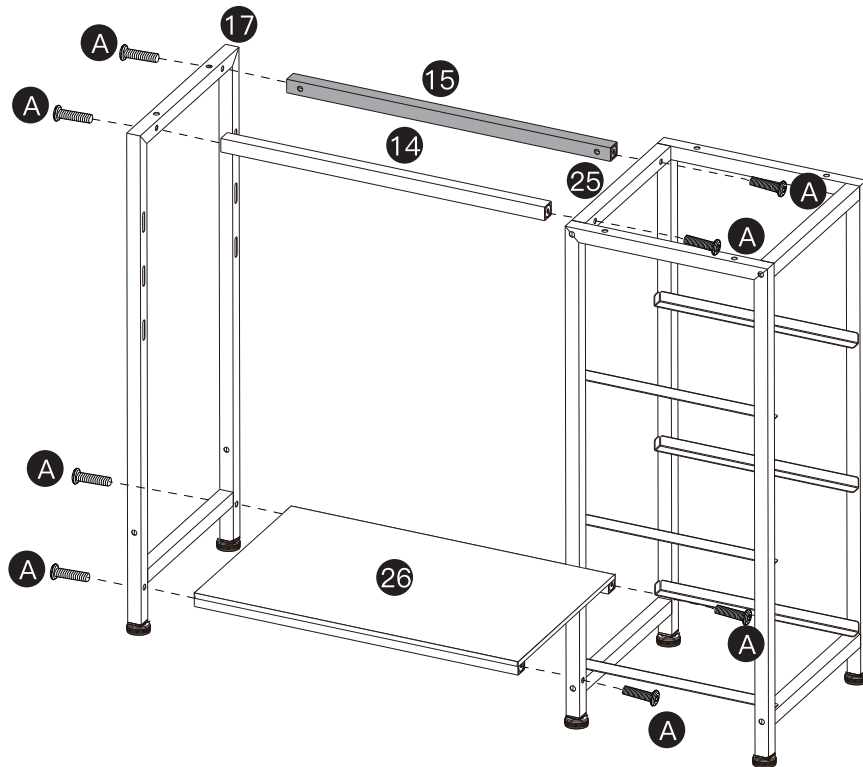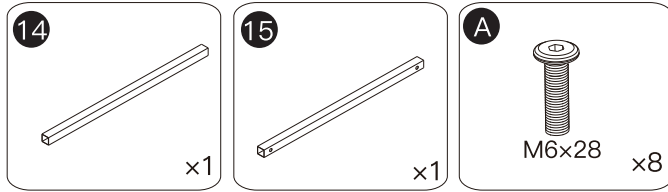

Step 5





Connect part 17 with 25 by part 28.

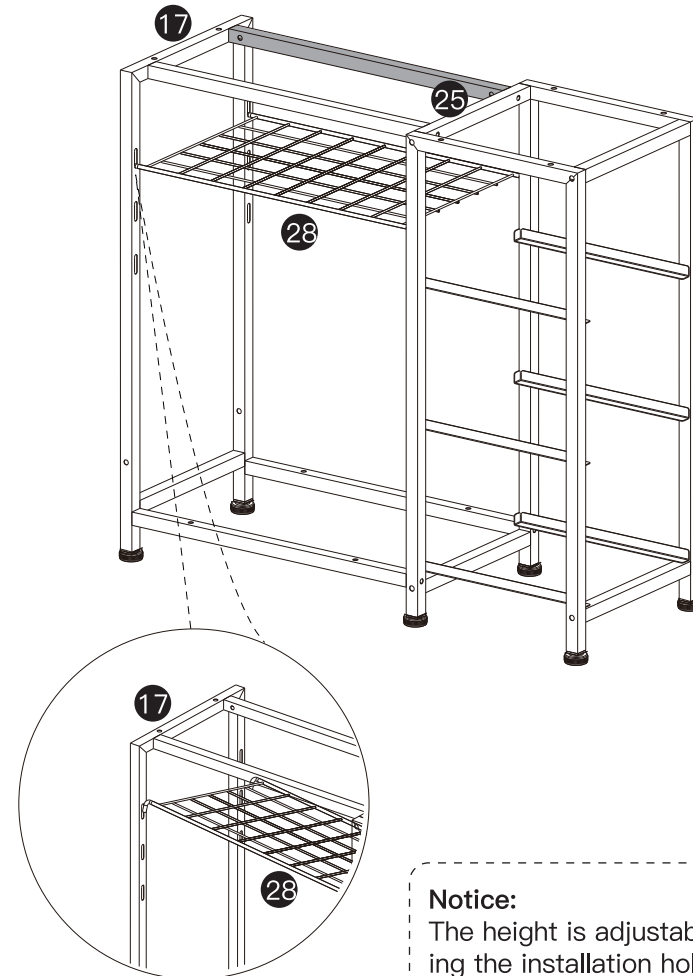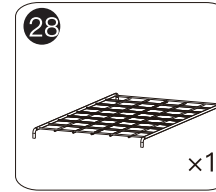

Notice:
The height is adjustable via changing the installation hole.






Step 6

Connect part 18 with part 16, use part A to screw them.

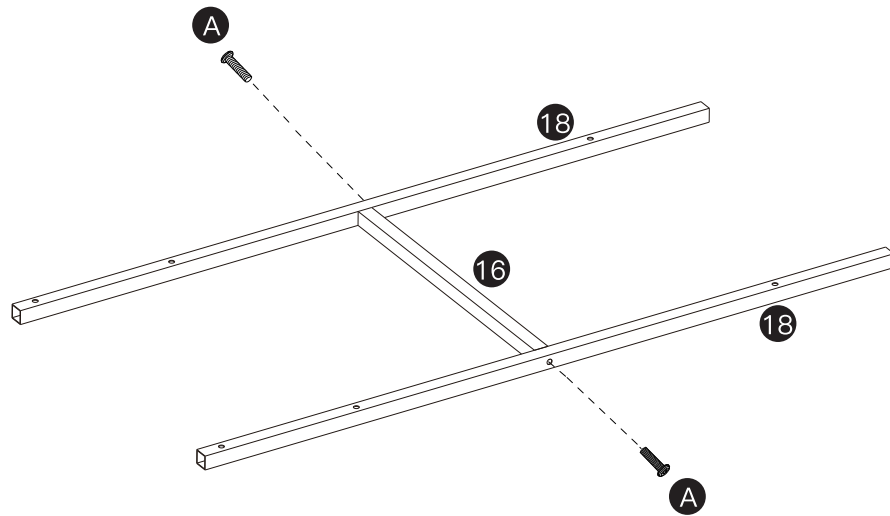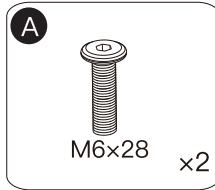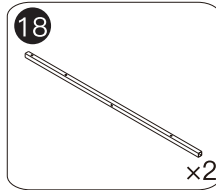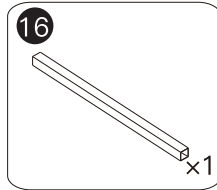



Step 7

Install part E on part 22 & 24.

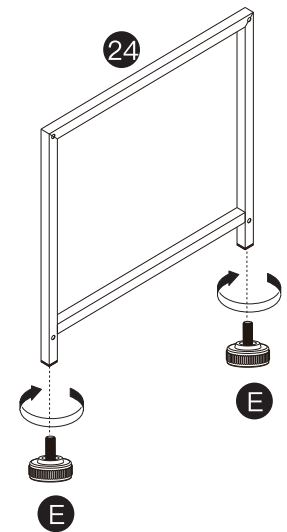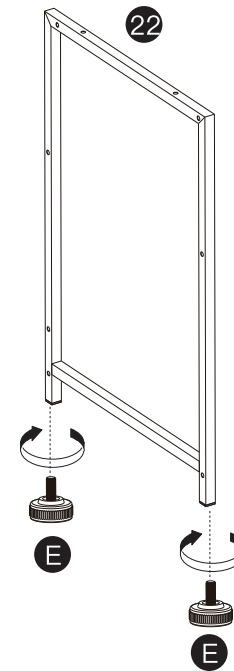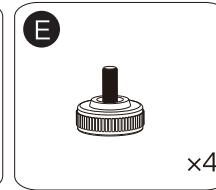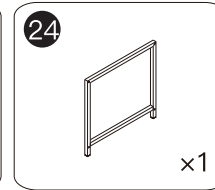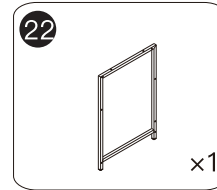


Step 8

Connect part 15 & 22 with assembled part 18 & part 21 by part A.

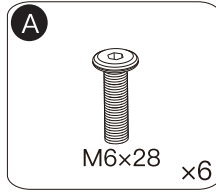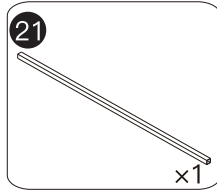





NOTICE:

Make sure that part 18 has a hole closer to the edge on the side attached to part 15.



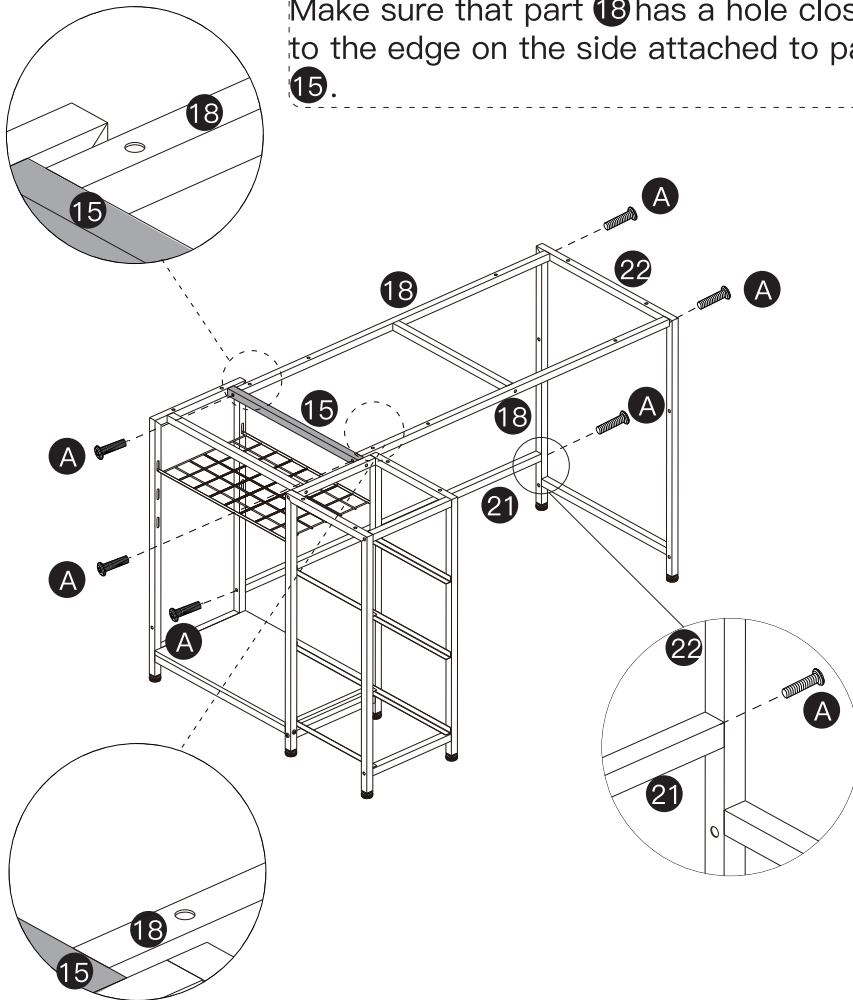


Step 9




Install part 20 on part 13, use part A to screw them.

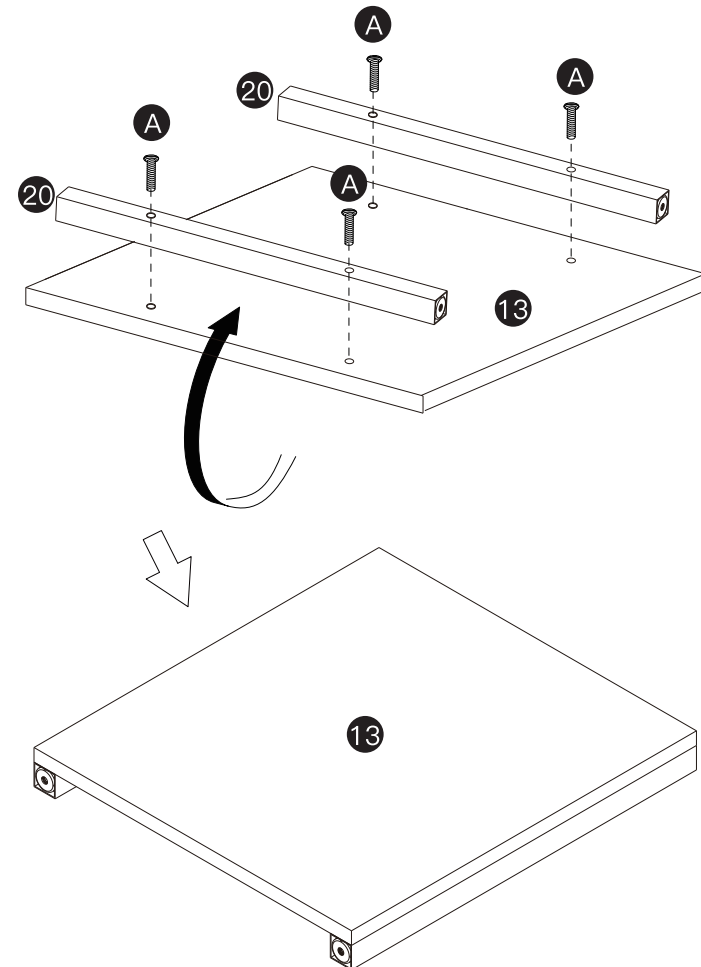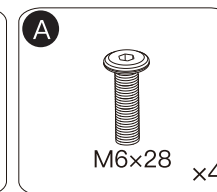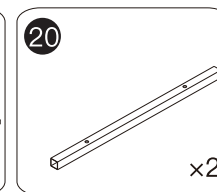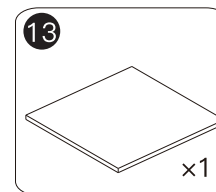



Step 10 Connect part 22 & 24 with part 23 & assembled part 13 by part A.

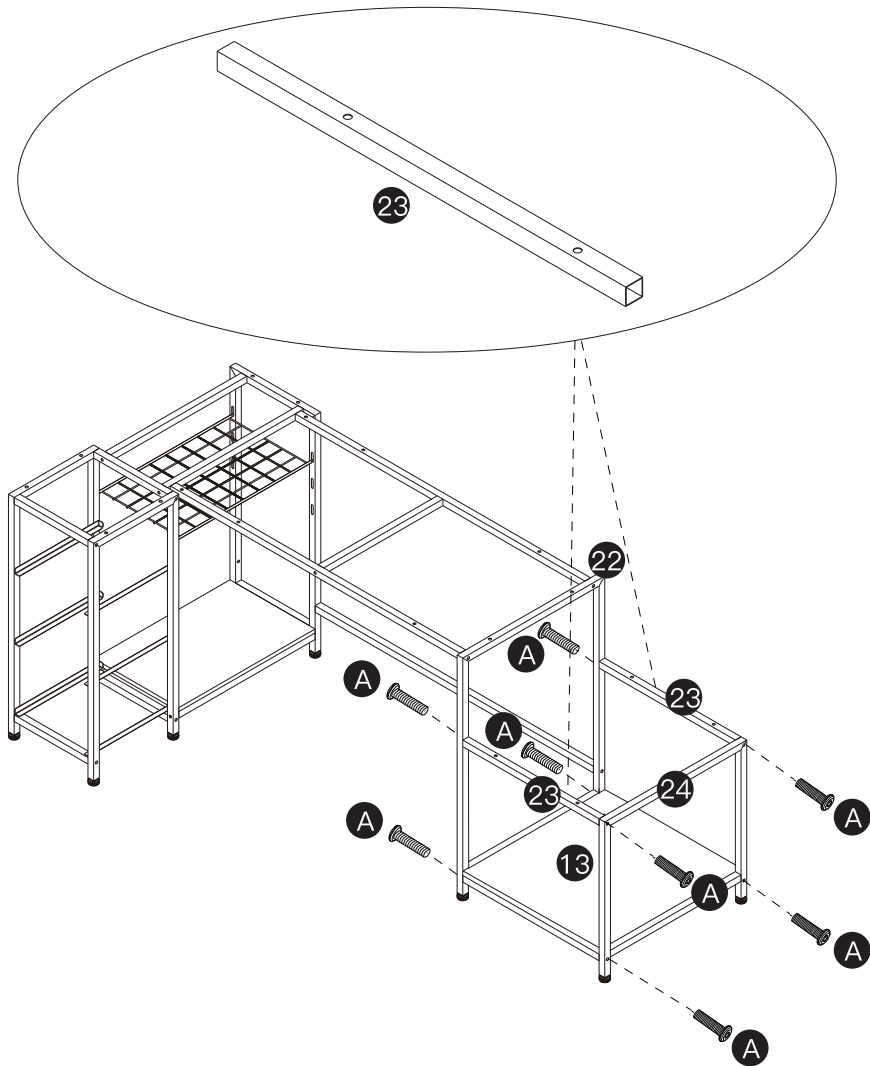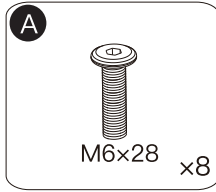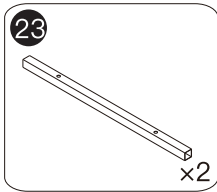



Step 11 Connect part 12 with part 23, use part A to screw them.

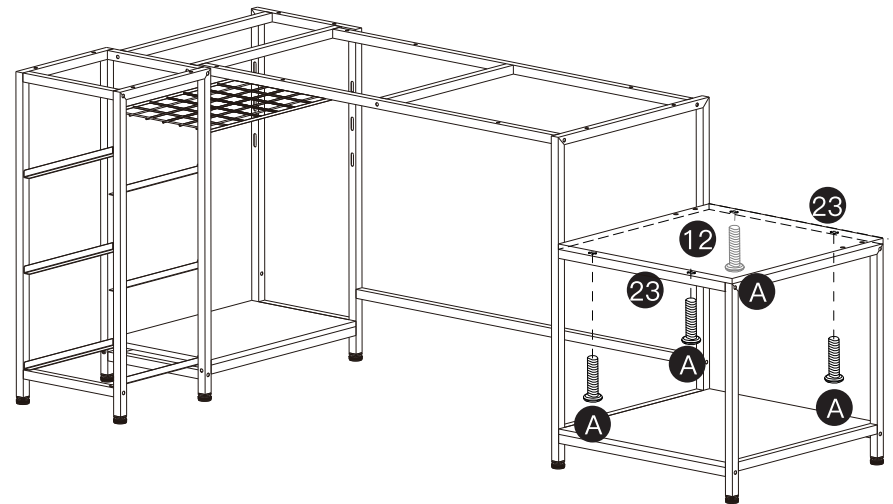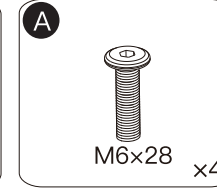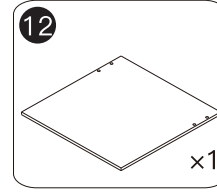



Step 12 Install part 10 on 17, 18, 27 & 31, use part A to screw them.

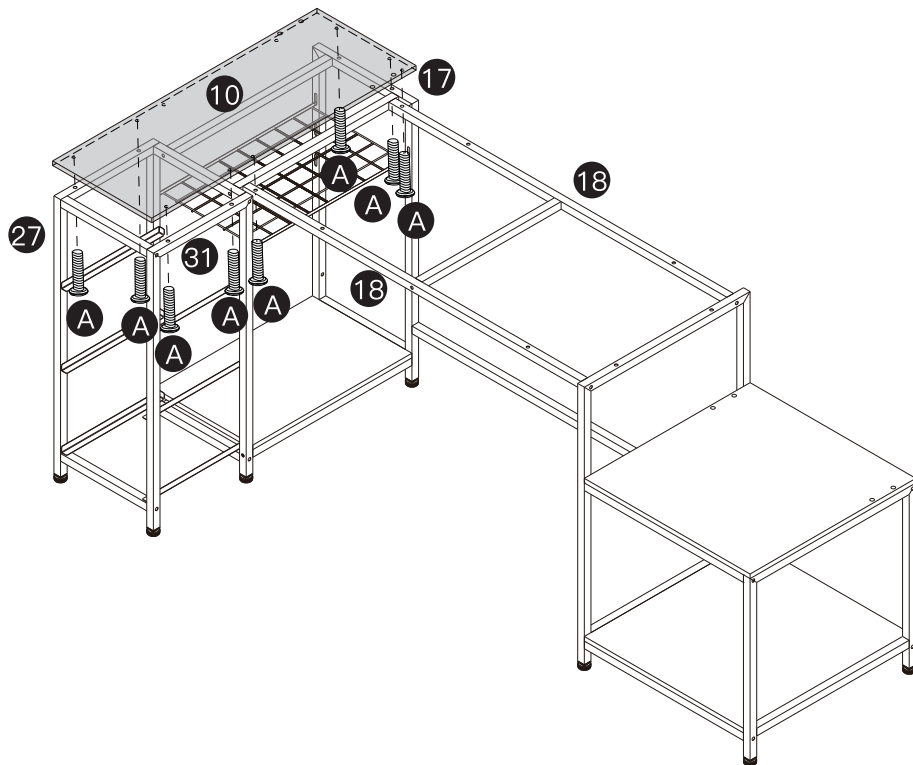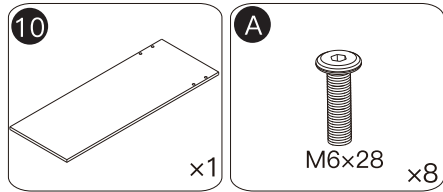

Step 13 Install part 11 on 18 & 22, use part A to screw them.

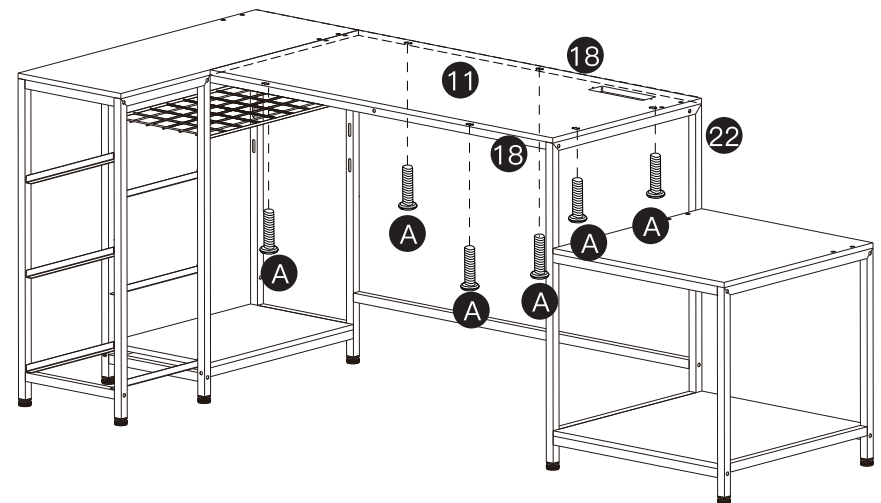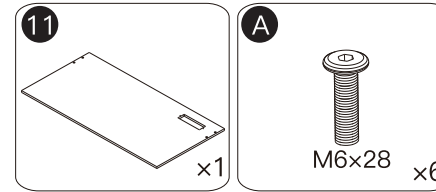


Step 14 Install part 1, 2, 3 & 4 on part 11, 10 & 12 by part A respectively.







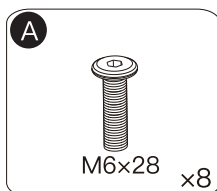
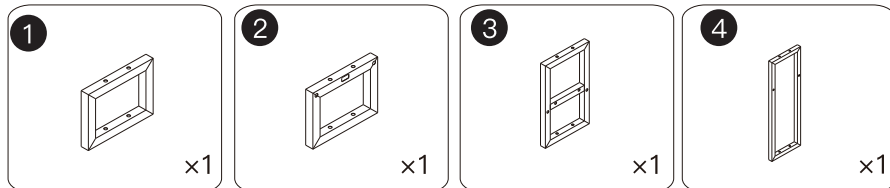


NOTICE:




The side with smaller holes of part 3 opposite part 4.

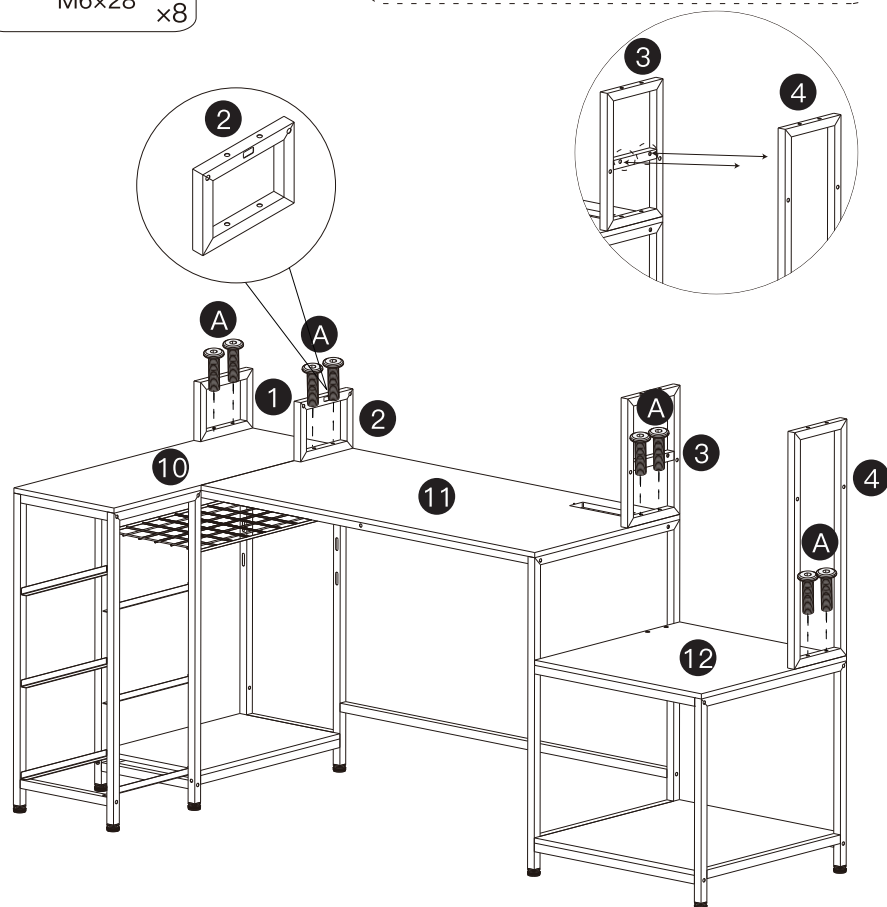



Step 15 Connect part 8 & 7 with part 3 & 4, use part part B & F and A to screw them respectively.

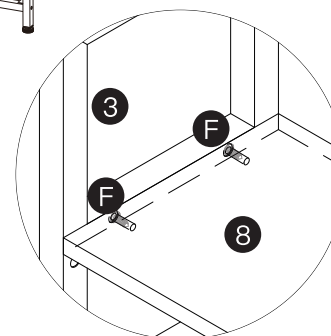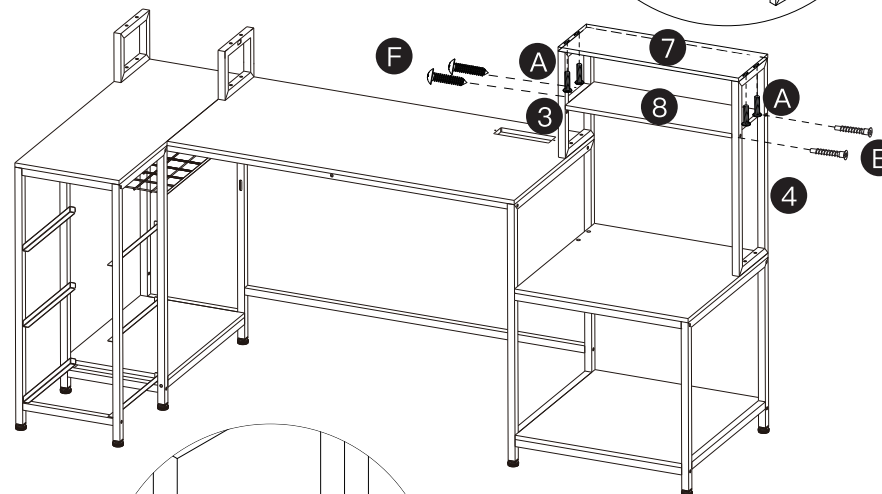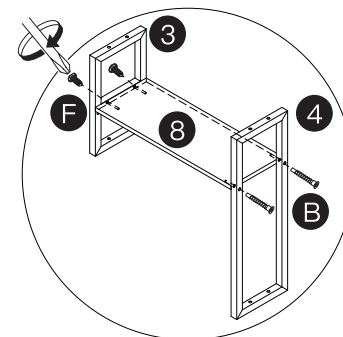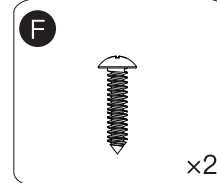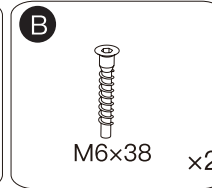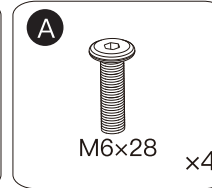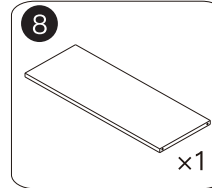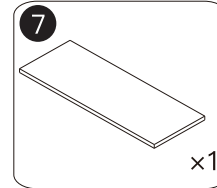



Step 16 Install part **K** on the back of part **6** with part **L** & **M**.

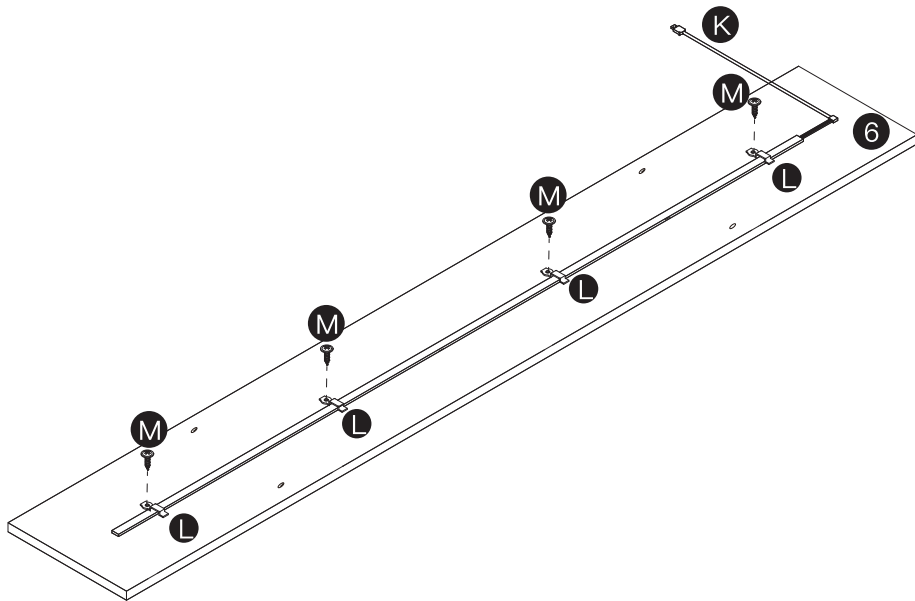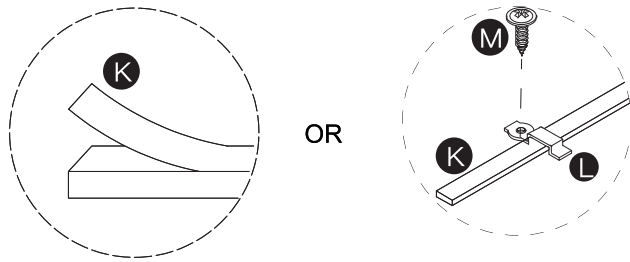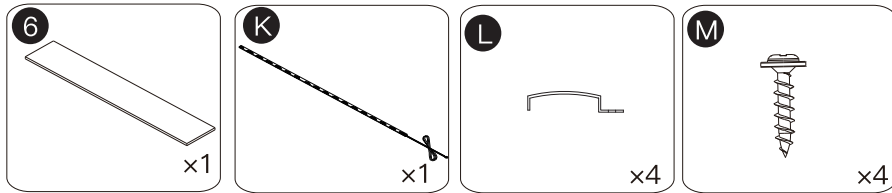




Step 17 Install part **9** on part **6**, use part **A** to screw them.

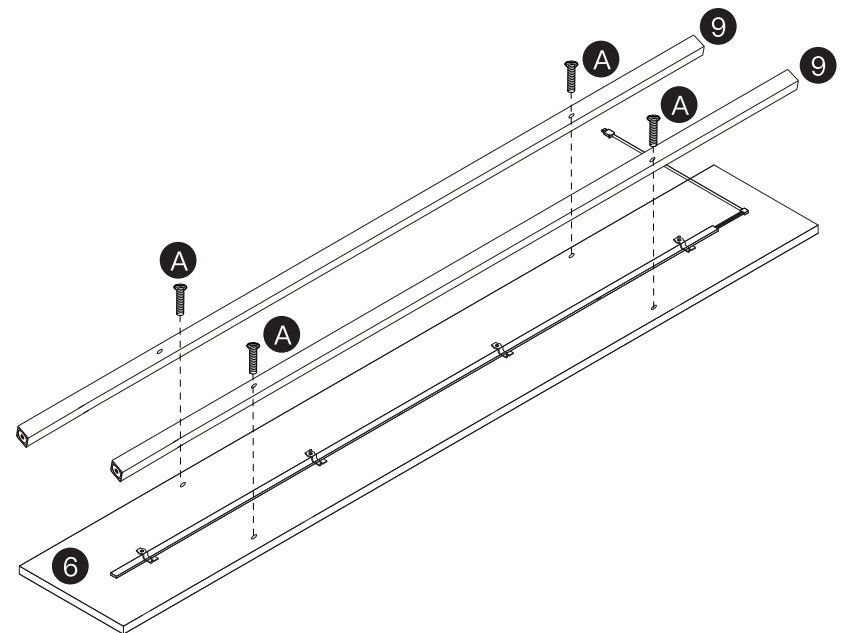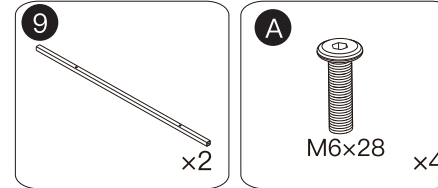



Step 18 Connect part ② & ③ with part ⑥, use part ④ to screw them.

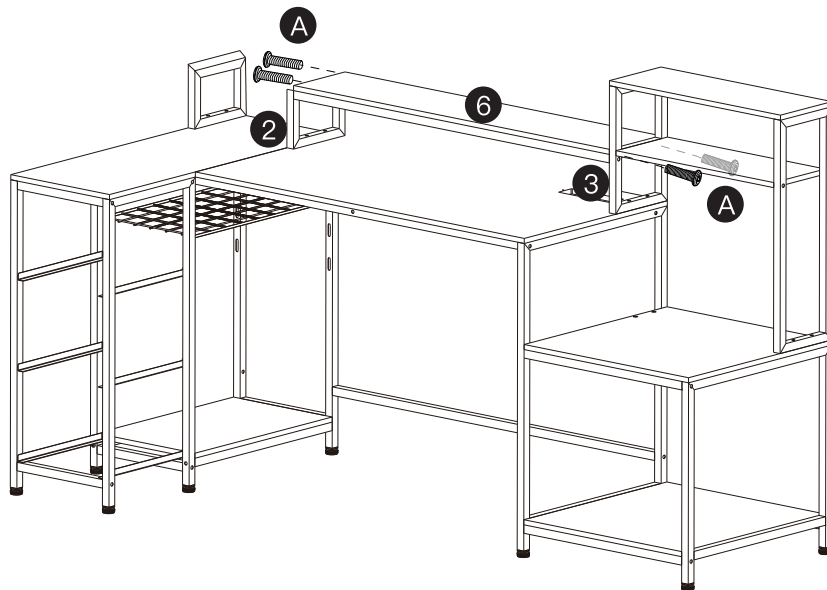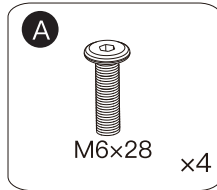


Step 19 Connect part ① & ② with part ⑤, use part ④ to screw them.

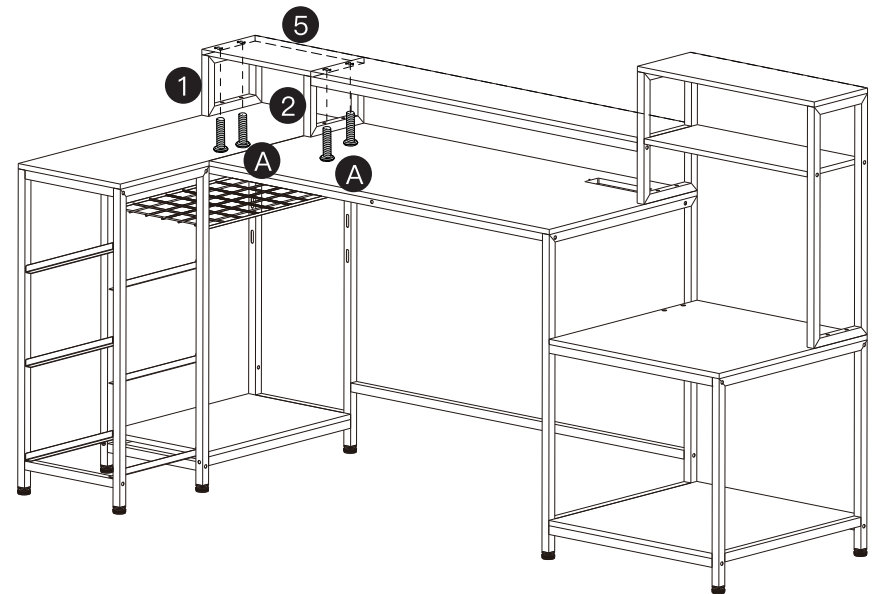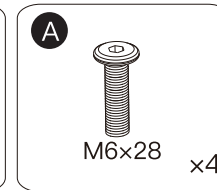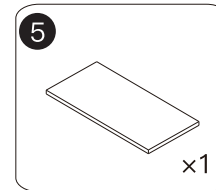





Step 20 Open the drawers part 29 and put part 30 inside, and install part H on the drawers with part C.

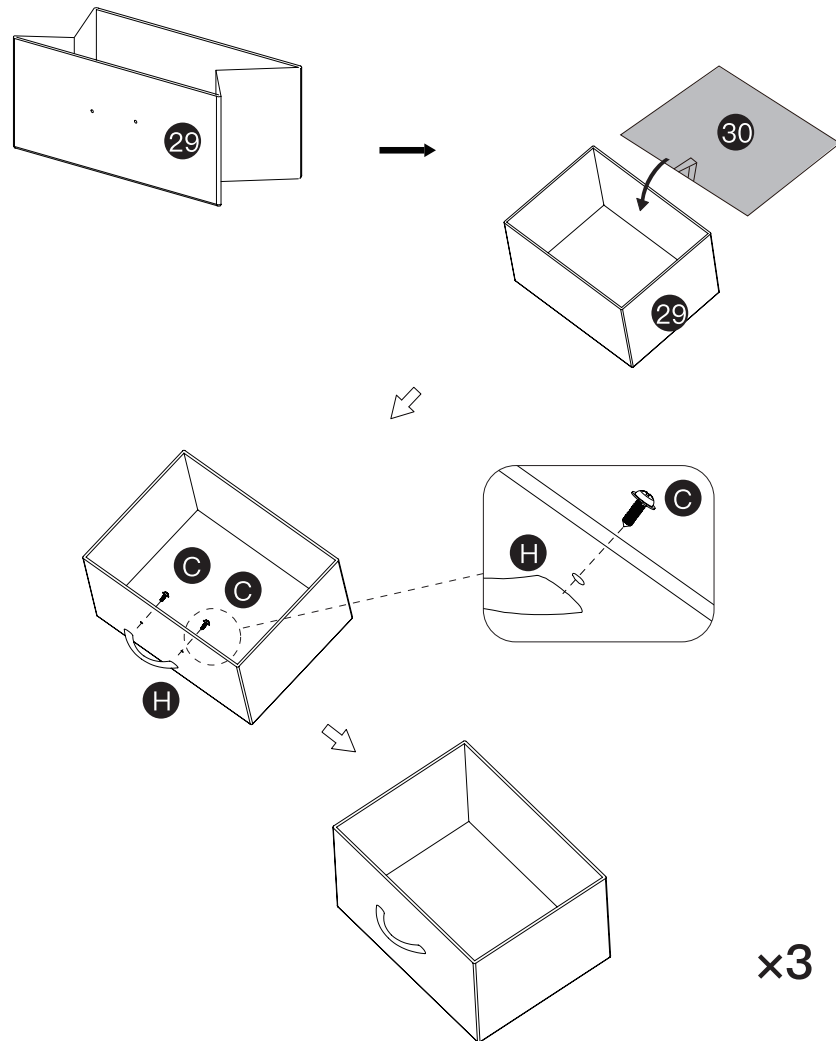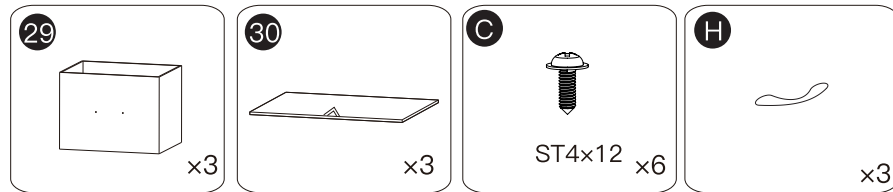


Step 21 Put all drawers in the frame.

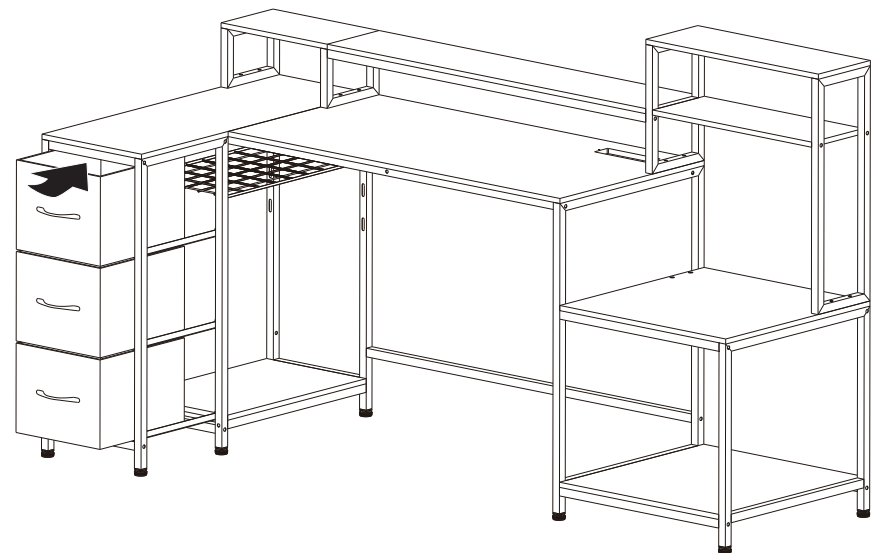


Step 22 Install part **J** on part **11** by part **D** .

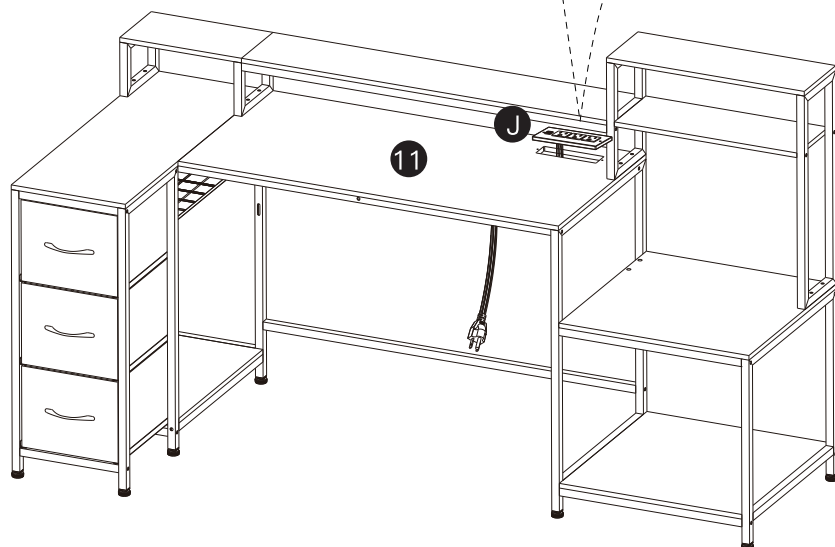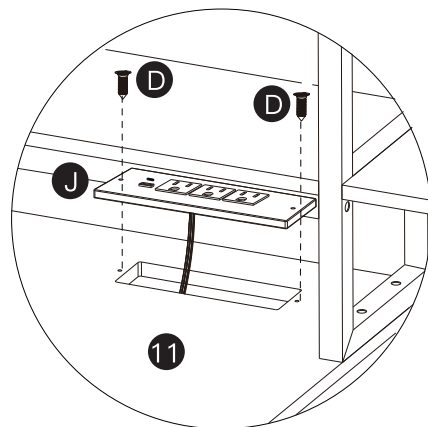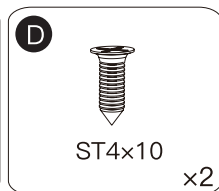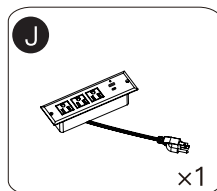


Step 23 (Optional) Install (part **N**) to keep the rack more stable.

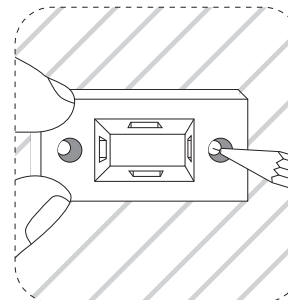


(1) Mark the location of bolt hole.

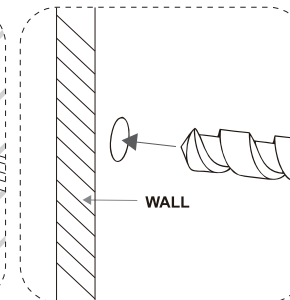


(2) Drill holes at marked location.

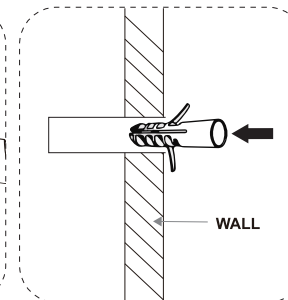

(3) Press the protective bolts in the wall.

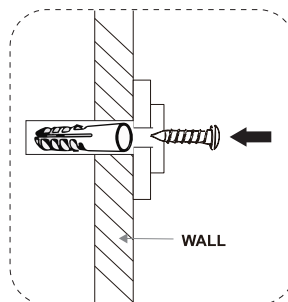



(4) Fix the safety lock on the wall with bolts.

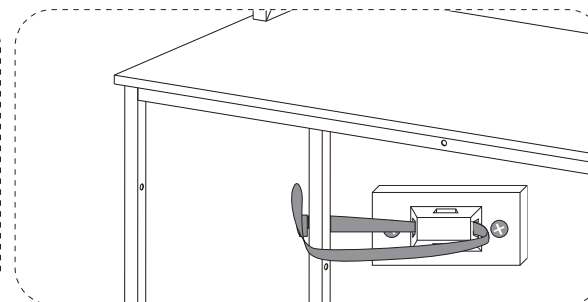

(5) Get the safety belts cross the lock and product, then get fastened.



TYPE-B INSTALLATION

Step 1 Install part **E** on part **17**, **27** & **31**.

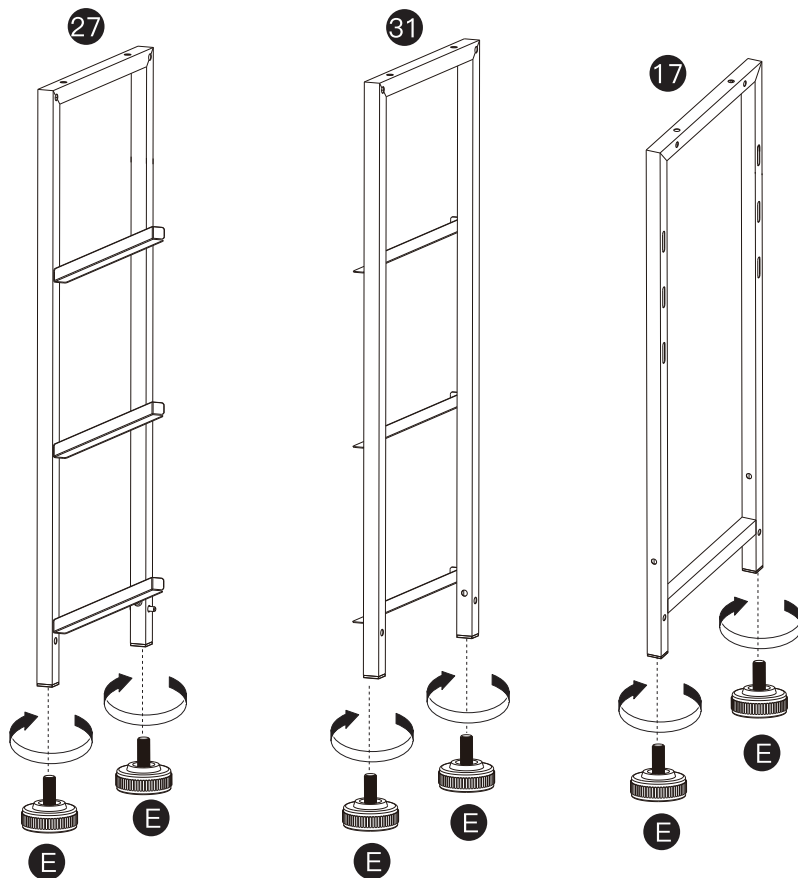
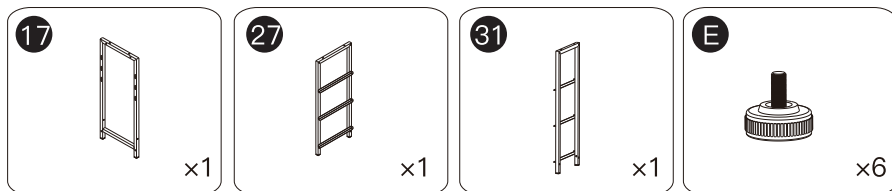


Step 2



Connect part **27** & **31** with part **19** & **25**, use part **A** to screw them.

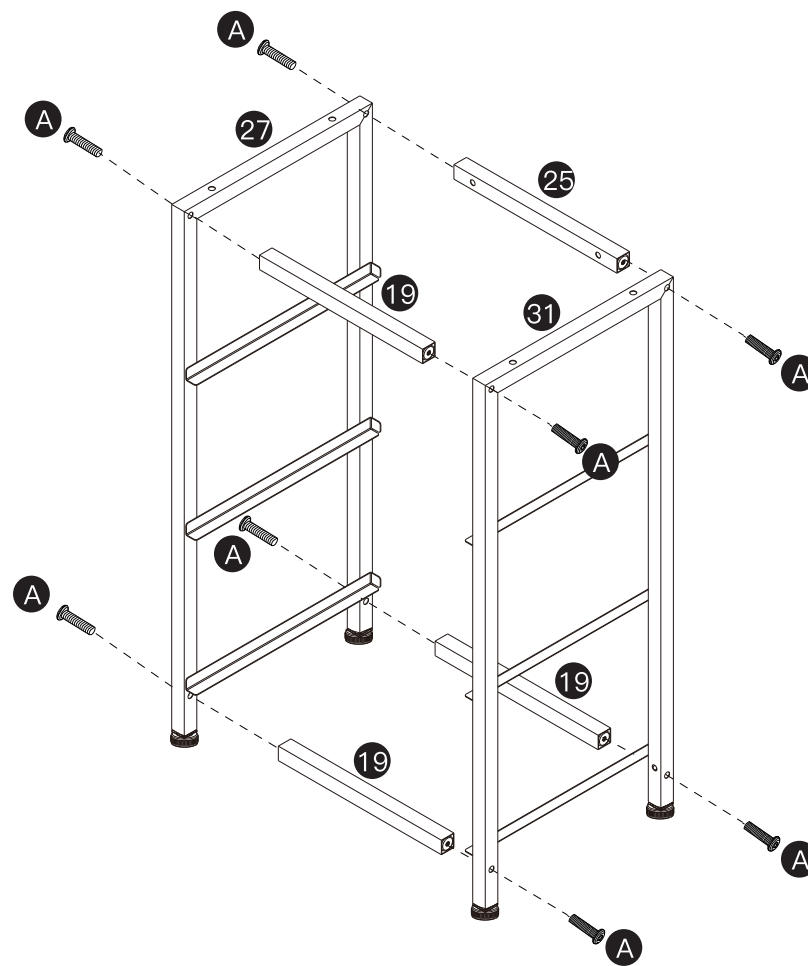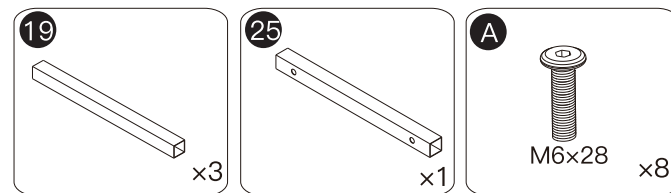

Step 3 Install part 20 on part 26, use part A to screw them.

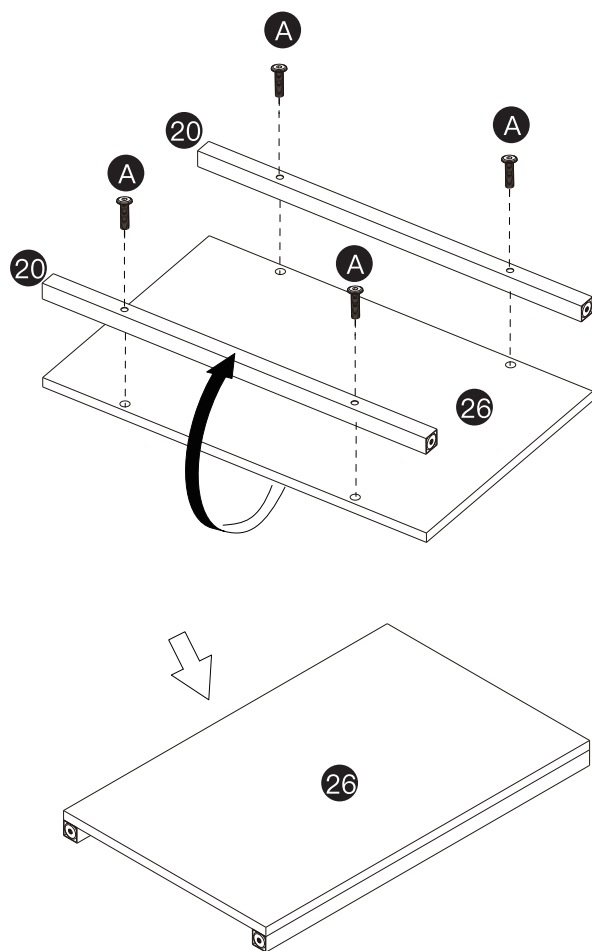
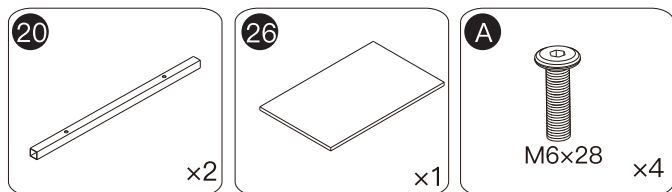


Step 4 Connect part 17 & 25 with part 14, 15 & 26 by part A.

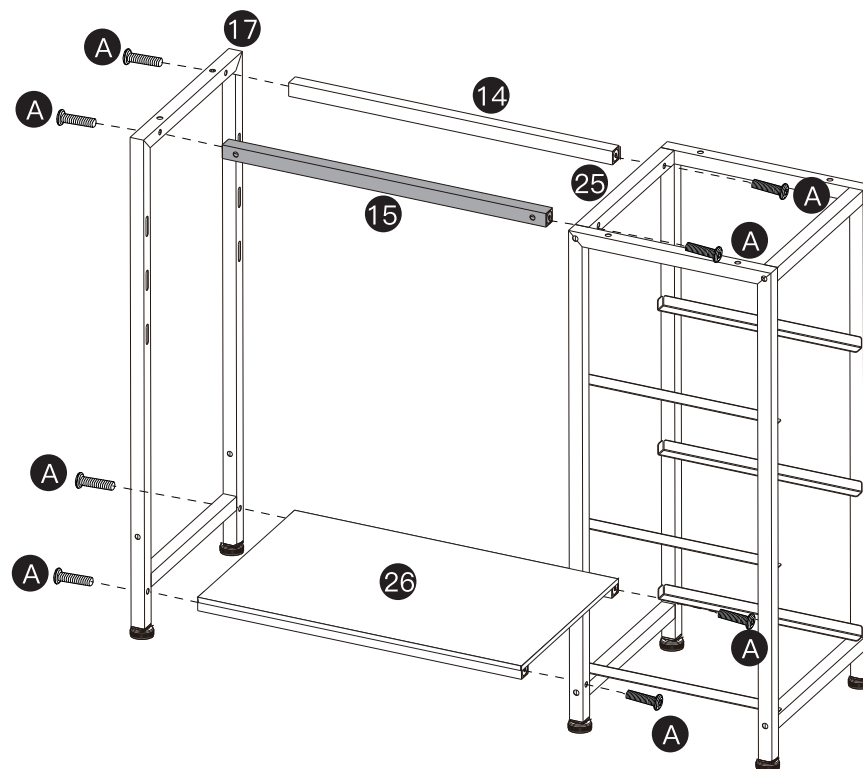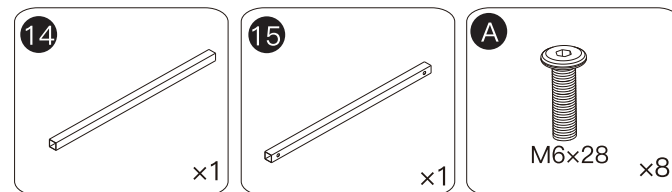

Step 5





Connect part 17 with 25 by part 28.

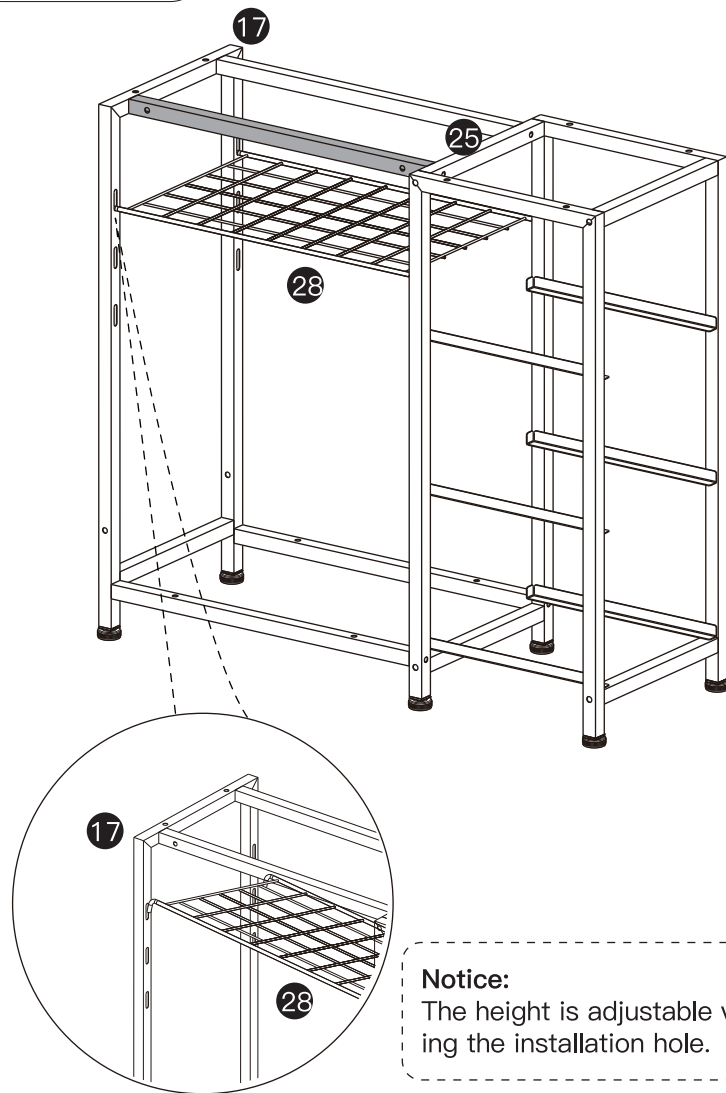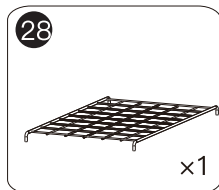



Notice:
The height is adjustable via changing the installation hole.

Step 6


Connect part 18 with part 16, use part A to screw them.

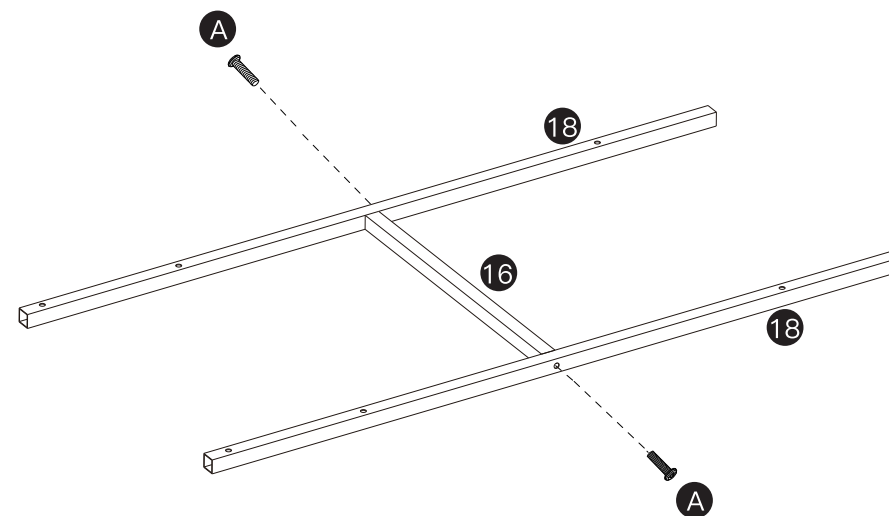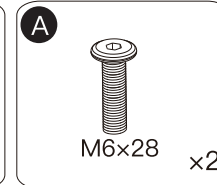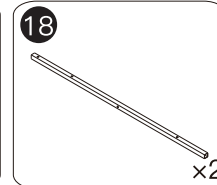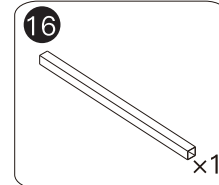

Step 7 Install part **E** on part **22** & **24**.

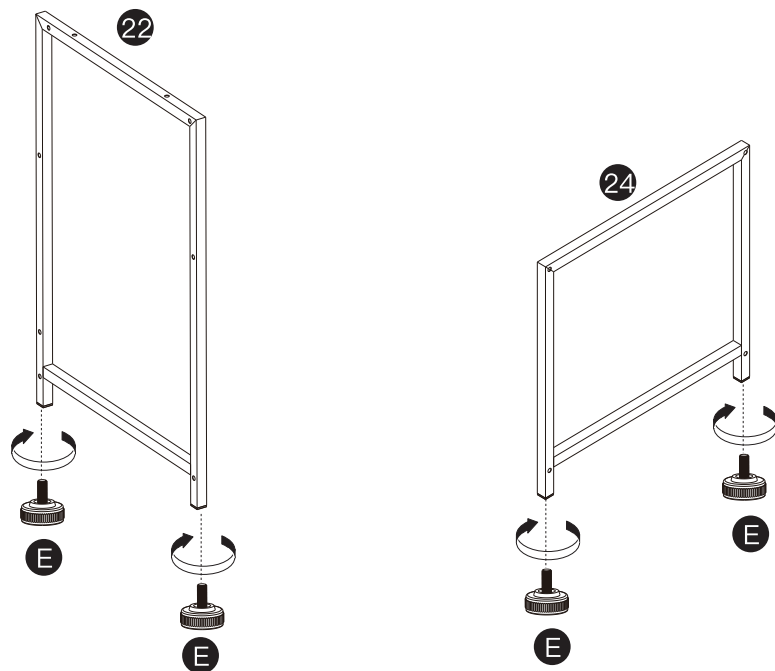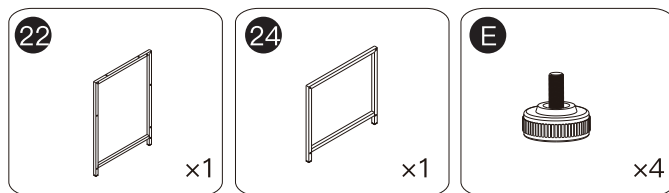



Step 8 Connect part **15** & **22** with assembled part **18** & part **21** by part **A**.

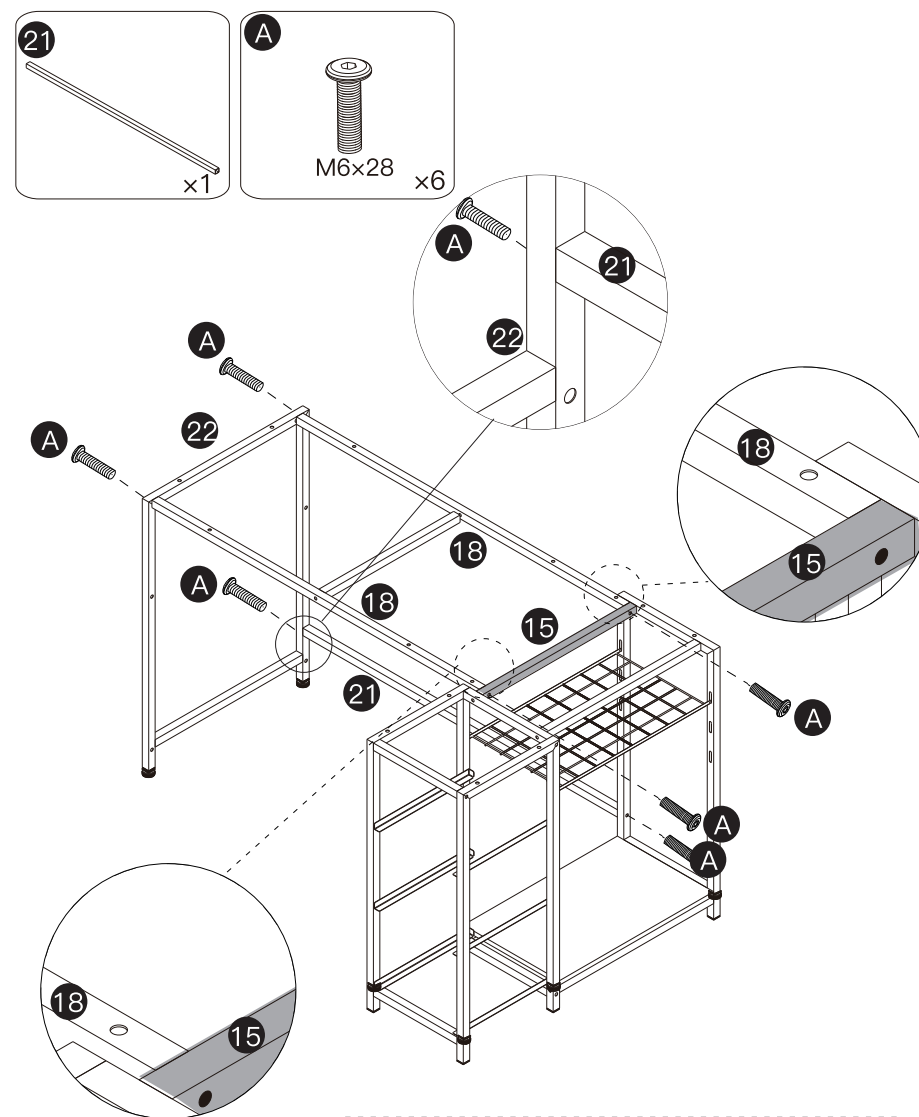



NOTICE:

Make sure that part **18** has a hole closer to the edge on the side attached to part **15**.




Step 9 Install part 20 on part 13, use part A to screw them.

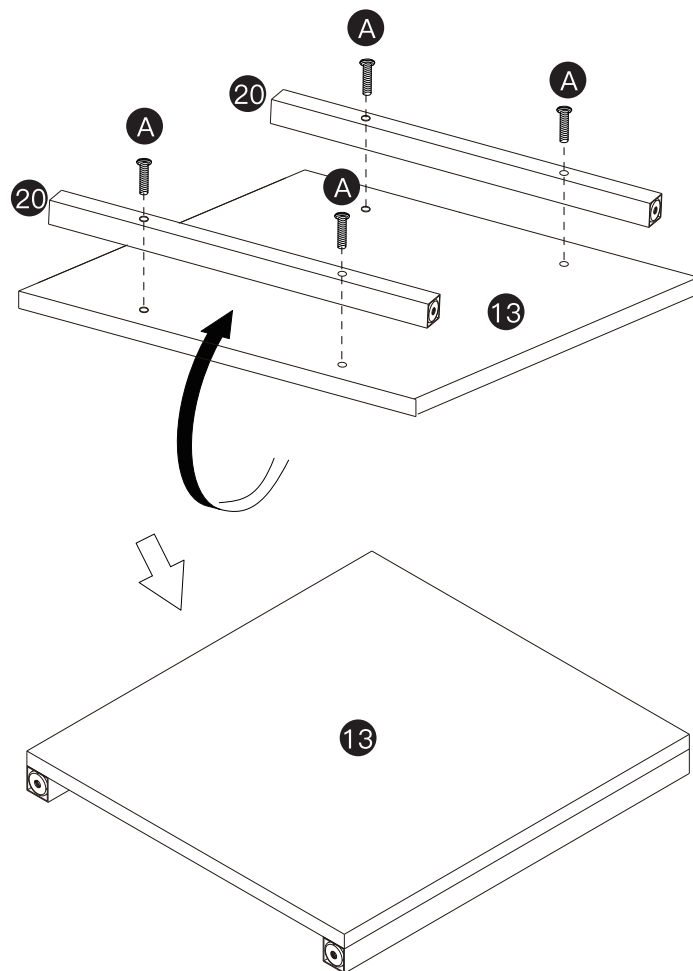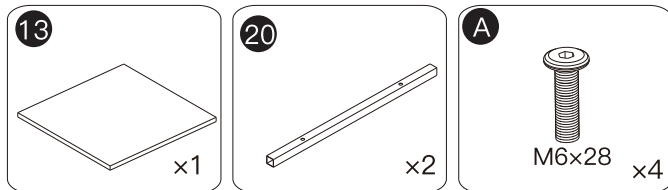




Step 10 Connect part 22 & 24 with part 23 & assembled part 13 by part A.

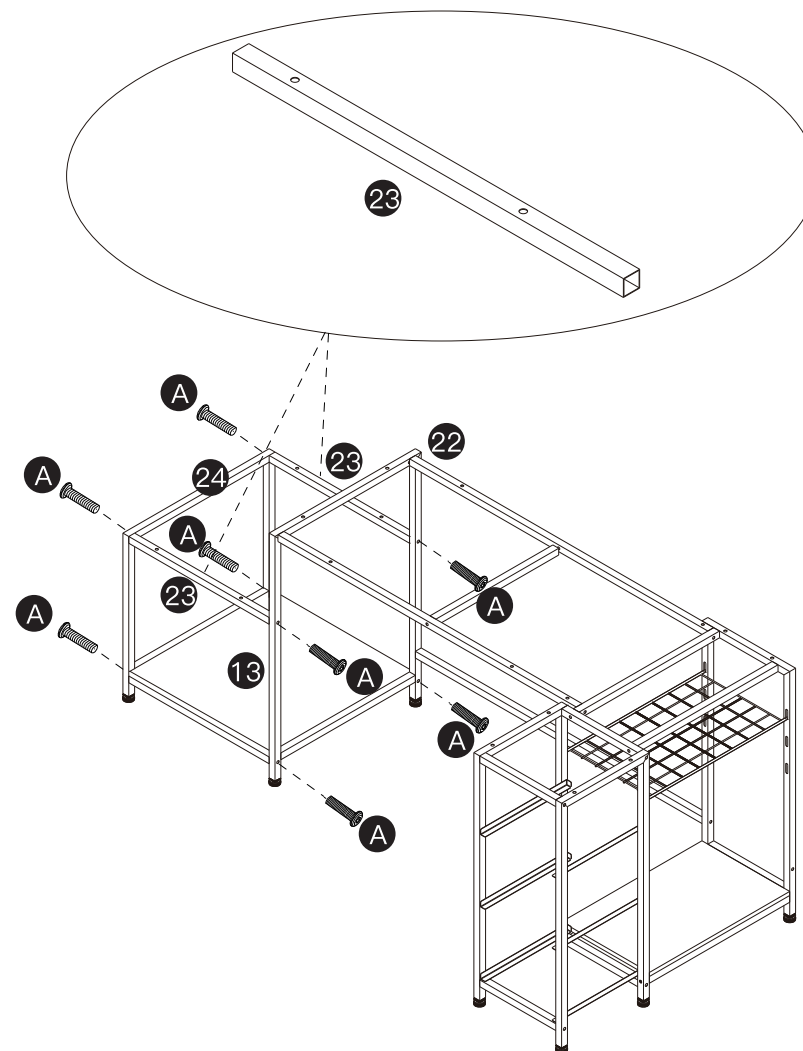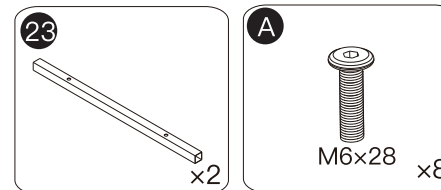



Step 11 Connect part 12 with part 23, use part A to screw them.

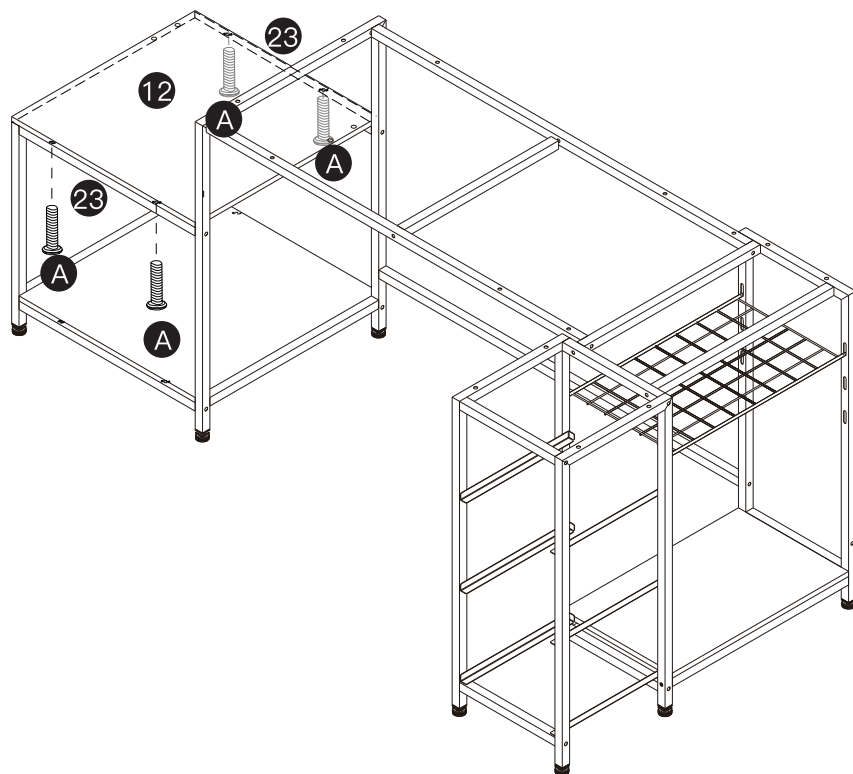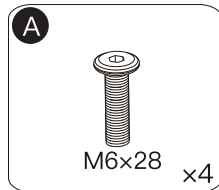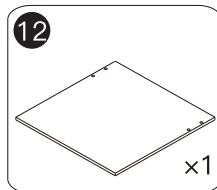



Step 12 Install part 10 on 17, 18, 27 & 31, use part A to screw them.

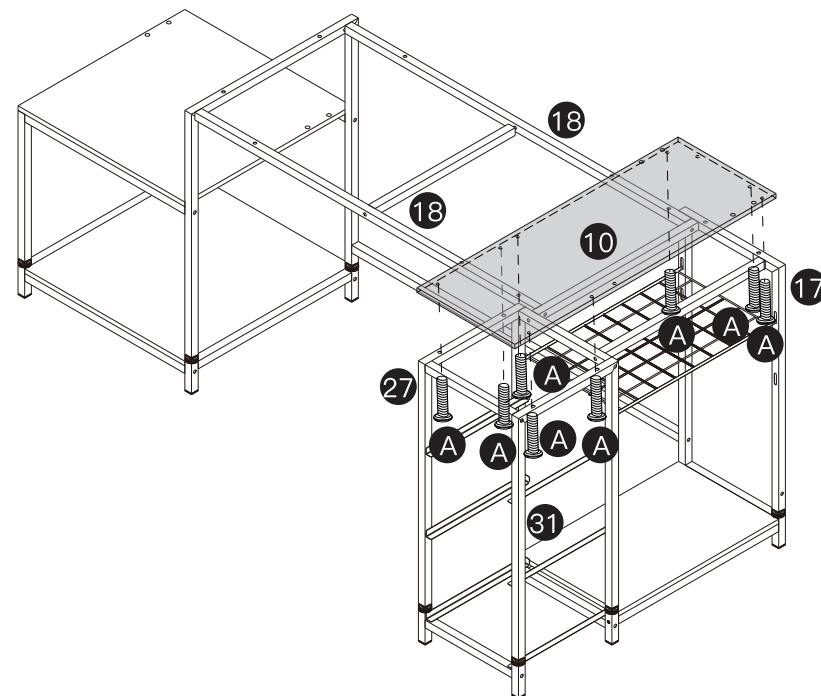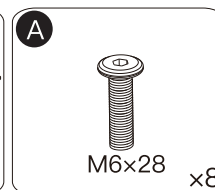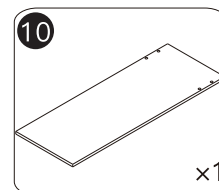


Step 13 Install part 11 on 18 & 22, use part A to screw them.

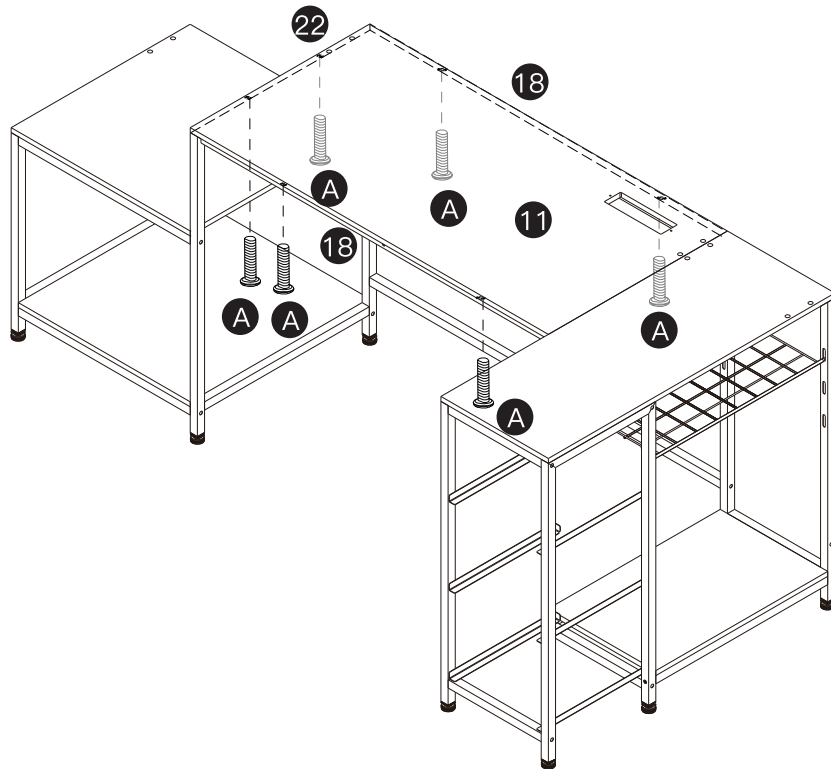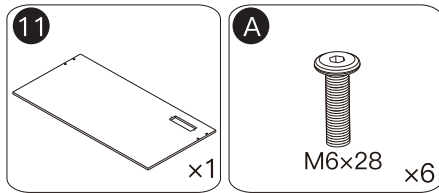



Step 14 Install part 1, 2, 3 & 4 on part 11, 10 & 12 by part A respectively.

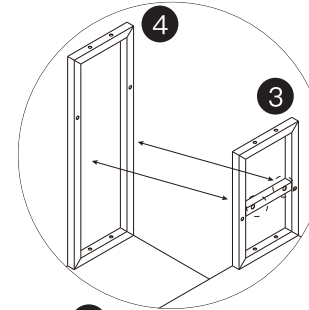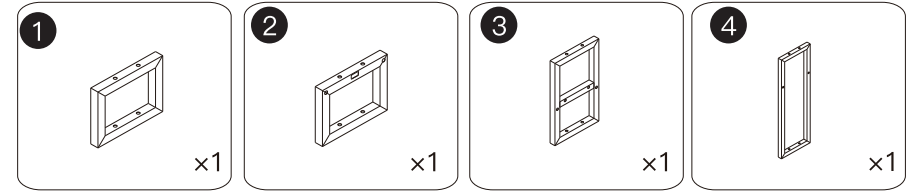



NOTICE:
The side with smaller holes of part 3 opposite part 4.

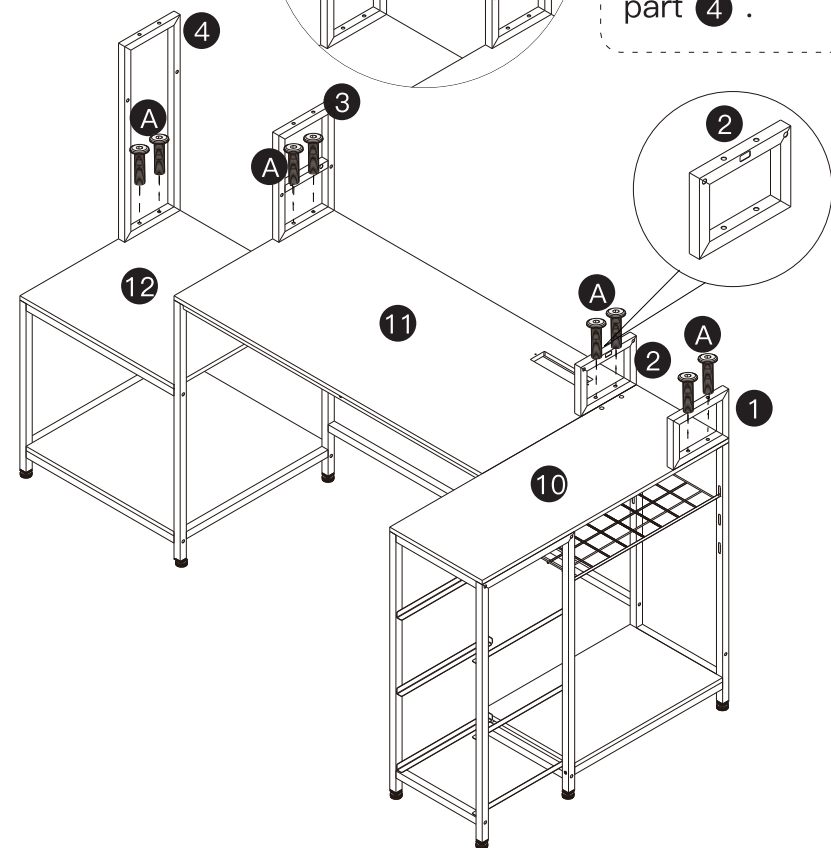



Step 15 Connect part 8 & 7 with part 3 & 4, use part B & F and A to screw them respectively.

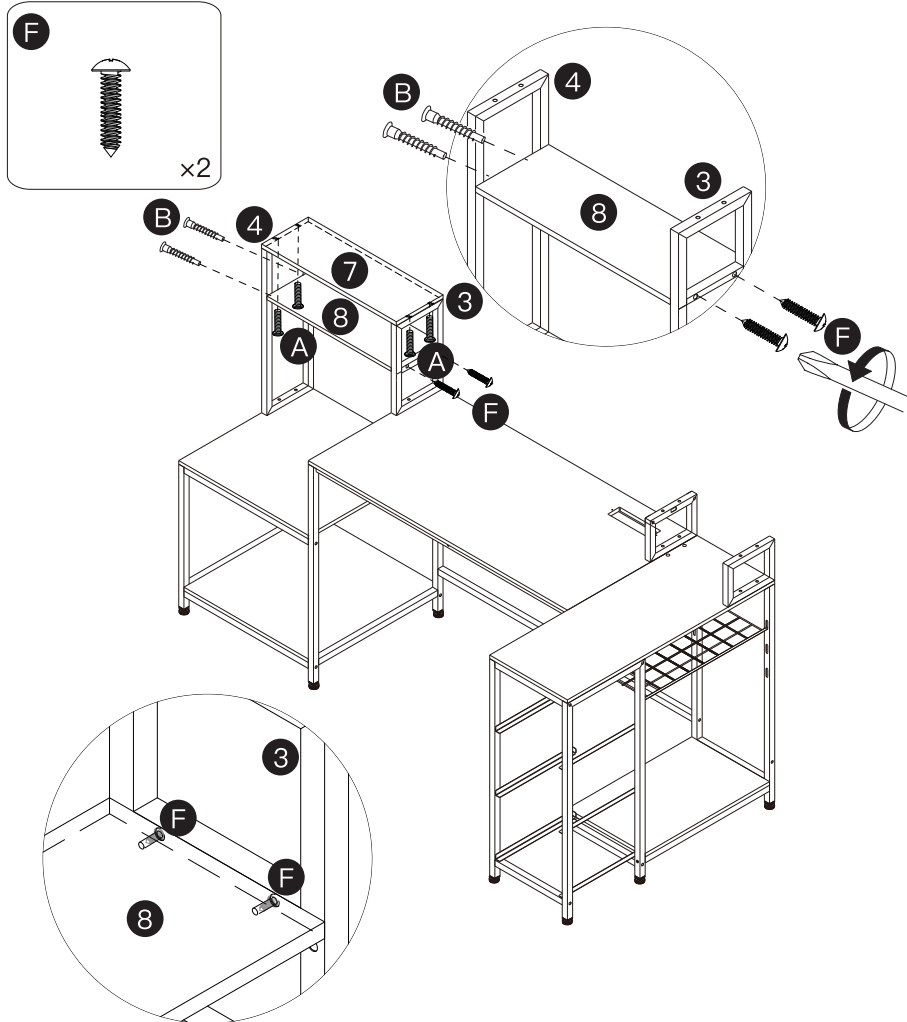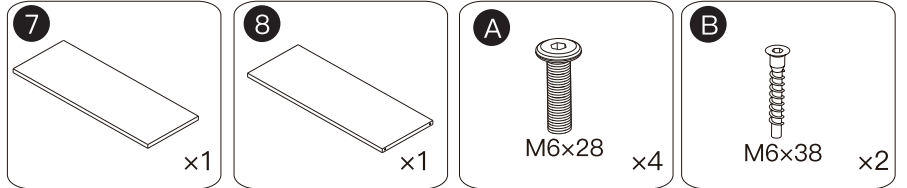



Step 16 Install part K on the back of part 6 with part L & M.

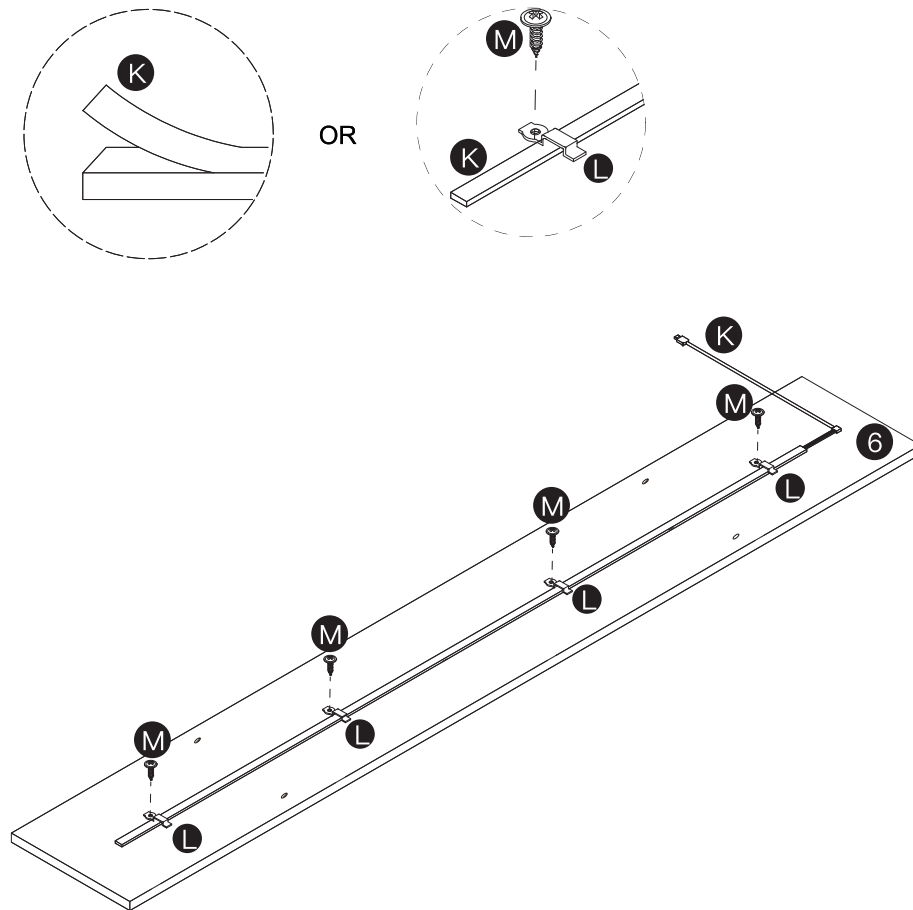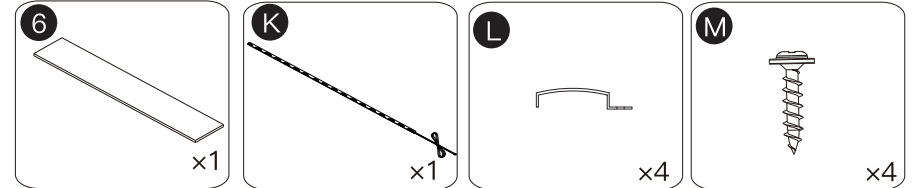



Step 17 Install part 9 on part 6, use part A to screw them.

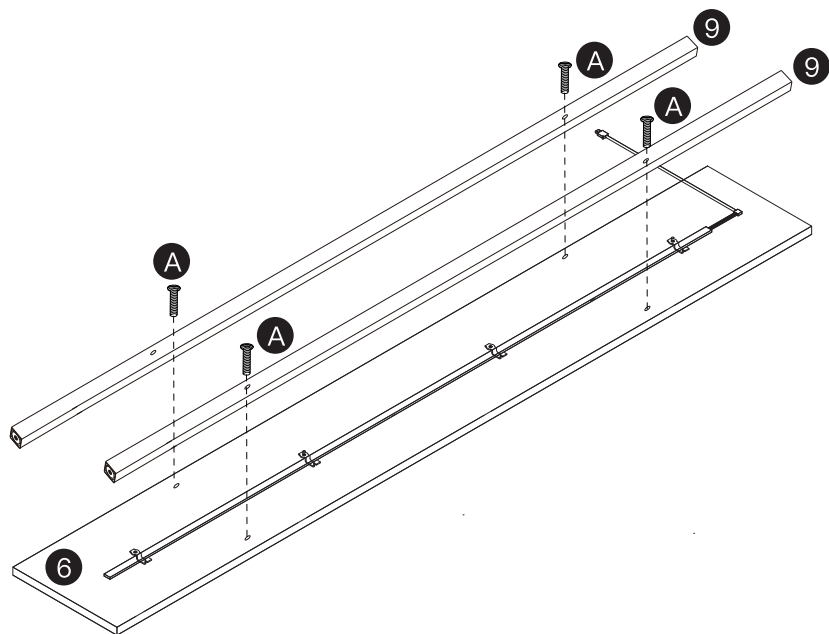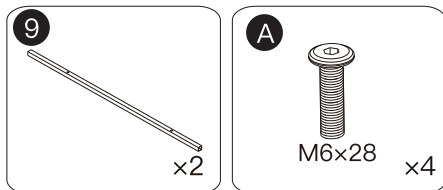



Step 18 Connect part 2 & 3 with part 6, use part A to screw them.

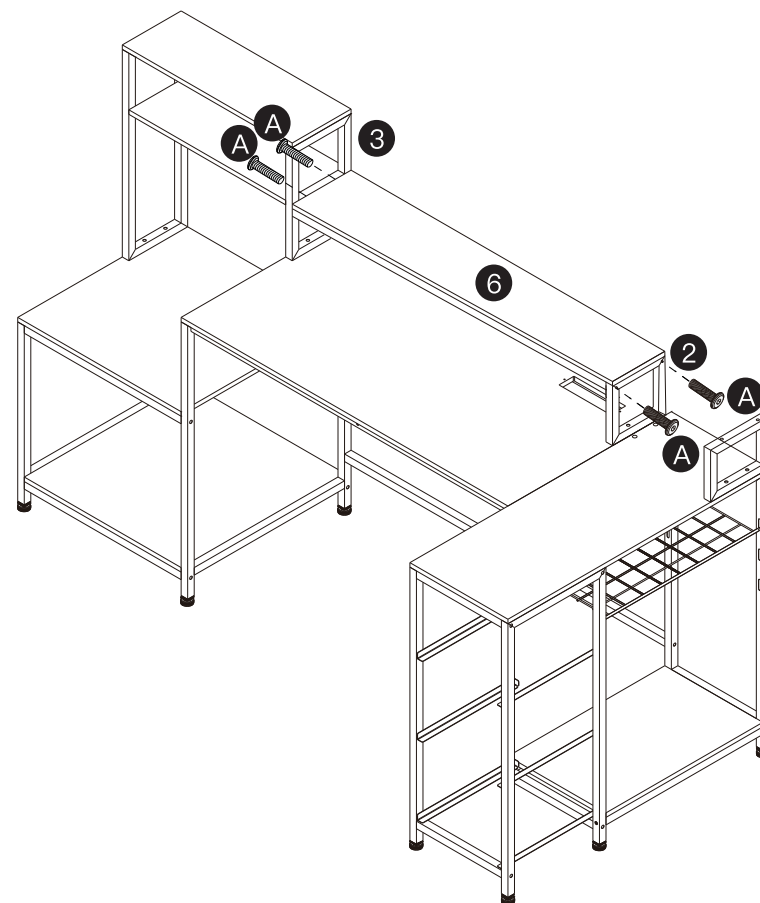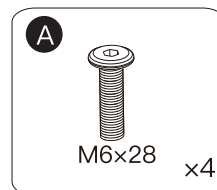


Step 19 Connect part ① & ② with part ⑤, use part ④ to screw them.

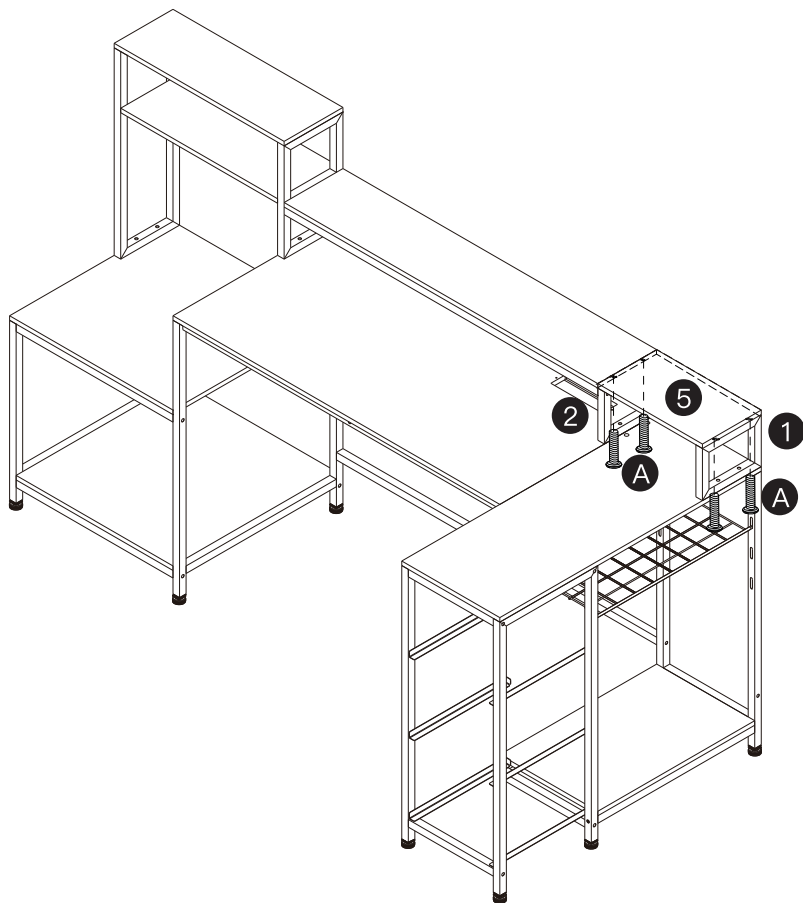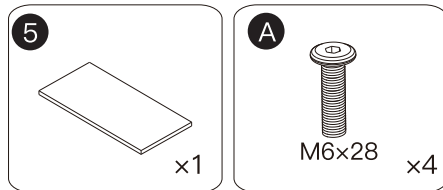




Step 20 Open the drawers part ②⑨ and put part ③① inside, and install part ④ on the drawers with part ③.

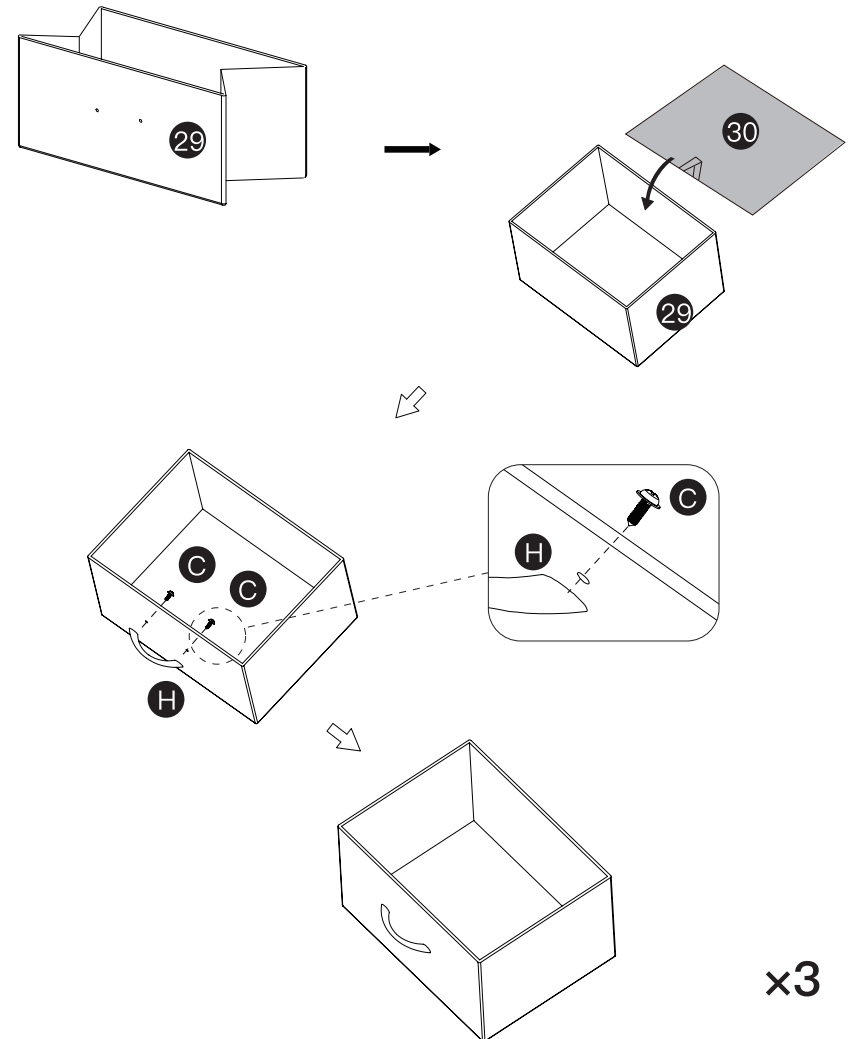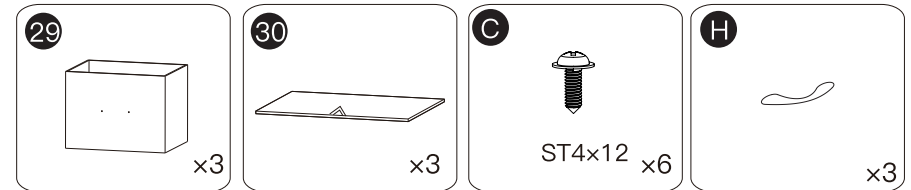


Step 21 Put all drawers in the frame.

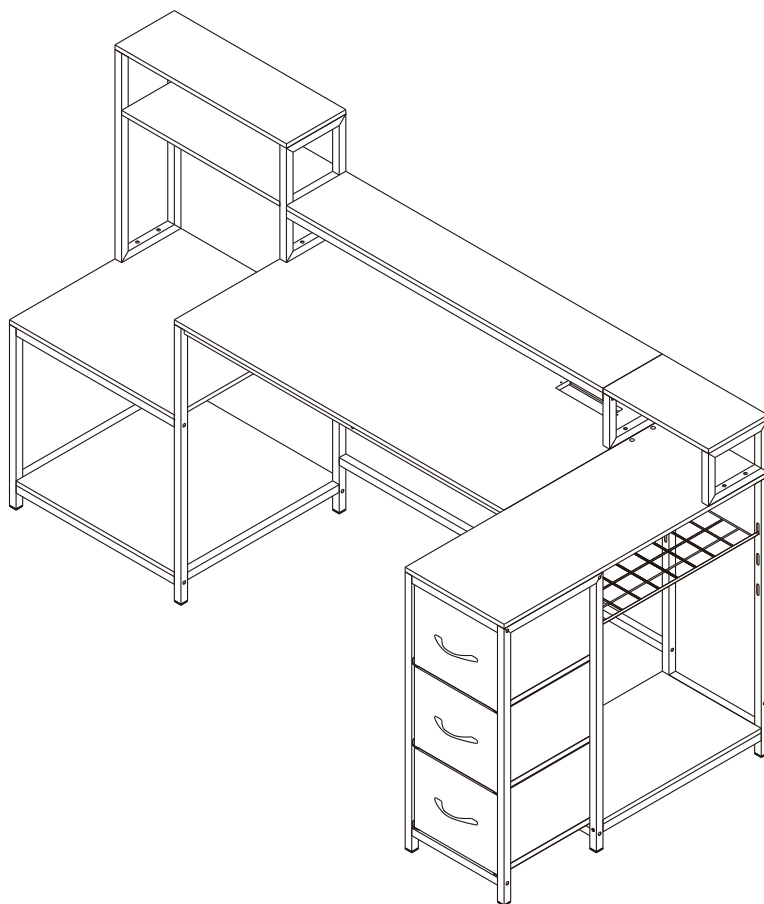


Step 22 Install part **J** on part **11** by part **D**.

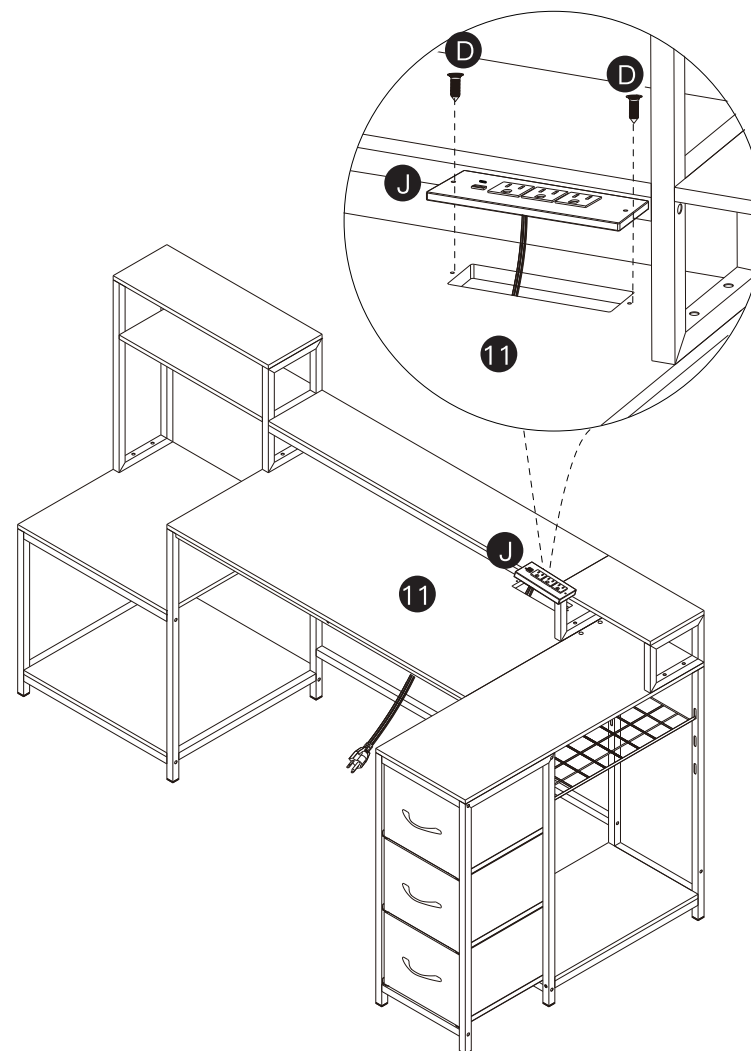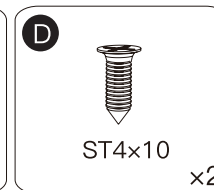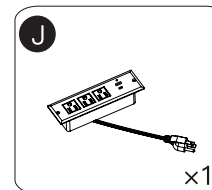


Step 23 (Optional) Install (part **N**) to keep the rack more stable.

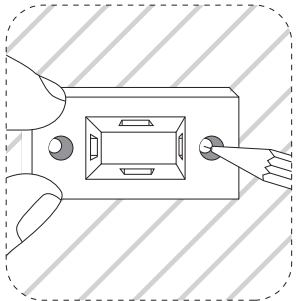


(1) Mark the location of bolt hole.

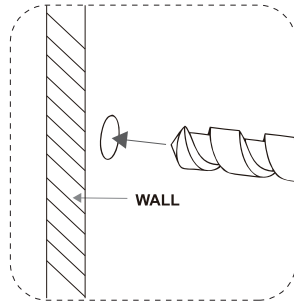


(2) Drill holes at marked location.

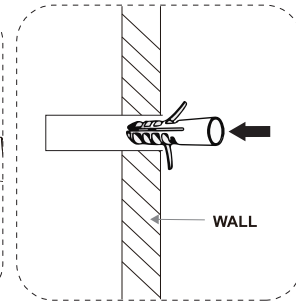

(3) Press the protective bolts in the wall.

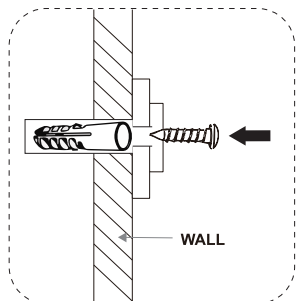

(4) Fix the safety lock on the wall with bolts.

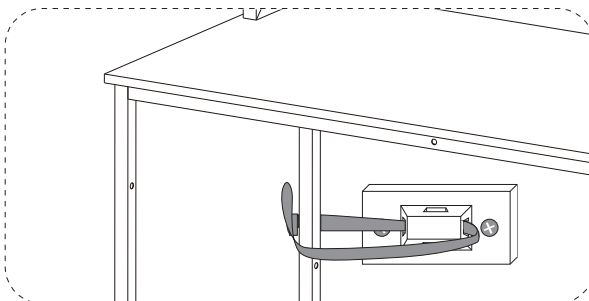

(5) Get the safety belts cross the lock and product, then get fastened.