


WP FURNITURE / INSTRUCTIONS



Model# 14_0040 (SLD-6)

Need Assistance? - 315-7580-751 - Text

email: lori@shopwp.com

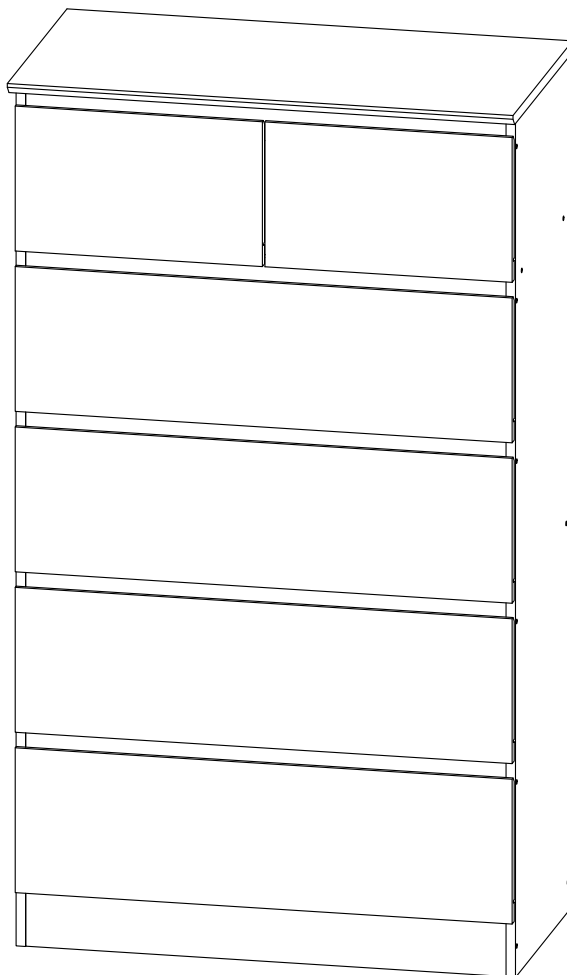

Hardware List

A2		Screw m3.5 x 14mm	64 pcs	E21		Anti-Tipping Pack	2 sets
A10		Screw m4 x 38mm	24 pcs	F2		Mini Fit 15mm	30 sets
A17		Screw m6.3 x 40mm	22 pcs	L2		Plastic Leg L Shape	4 pcs
A34		Euro Screw m5 x 8mm	24 pcs	M18		2 Way Slide_342mm	6 sets
A40		TH Screw m4 x 10mm	12 pcs	N1		Allen Key	1 pc
D4		Wood Dowel 6 x 25mm	16 pcs	R2		Single Plastic Cap	48 pcs
D6		Wood Dowel 8 x 25mm	24 pcs	Y		Crosshead Cover	20 pcs

*** Extra screw for your commitment.**

*** Please assemble flat or nice service.**

"Congratulations on Your Recent Purchase! Here Are Some Tips Before You Begin Assembling:"

"Preparing for your exciting new purchase? Be sure to set yourself up for a smooth assembly process by following these steps:"

- First, we recommend using a rug or any large clean surface as your workspace to provide a sturdy base for assembly.
- Next, it is important to separate all components and identify each part by their designated letters. This will make it easier to follow the assembly instructions and ensure all pieces are placed correctly.
- Additionally, on a clean surface separate and identify all screws lengths and hardware. You can use the assembly instructions as a guide and place the screws on top of the actual size pictured. This will save you time and confusion during the assembly process.
- Finally, we highly encourage you to carefully read through the assembly instructions and start from step one. Follow each step diligently until your new purchase is fully assembled. However, if you have any questions or need further assistance, please do not hesitate to reach out to us via email.

**Thank you again for choosing our product.
We wish you all the best and happy assembling!**














WP FURNITURE / INSTRUCTIONS


Model# 14_0040 (SLD-6)

Need Assistance? - 315-7580-751 - Text

email: lori@shopwp.com

Place your screw on top of the scale to identify their size.

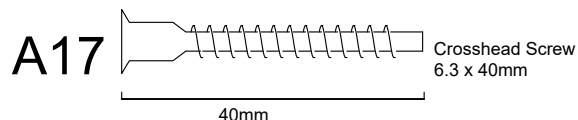

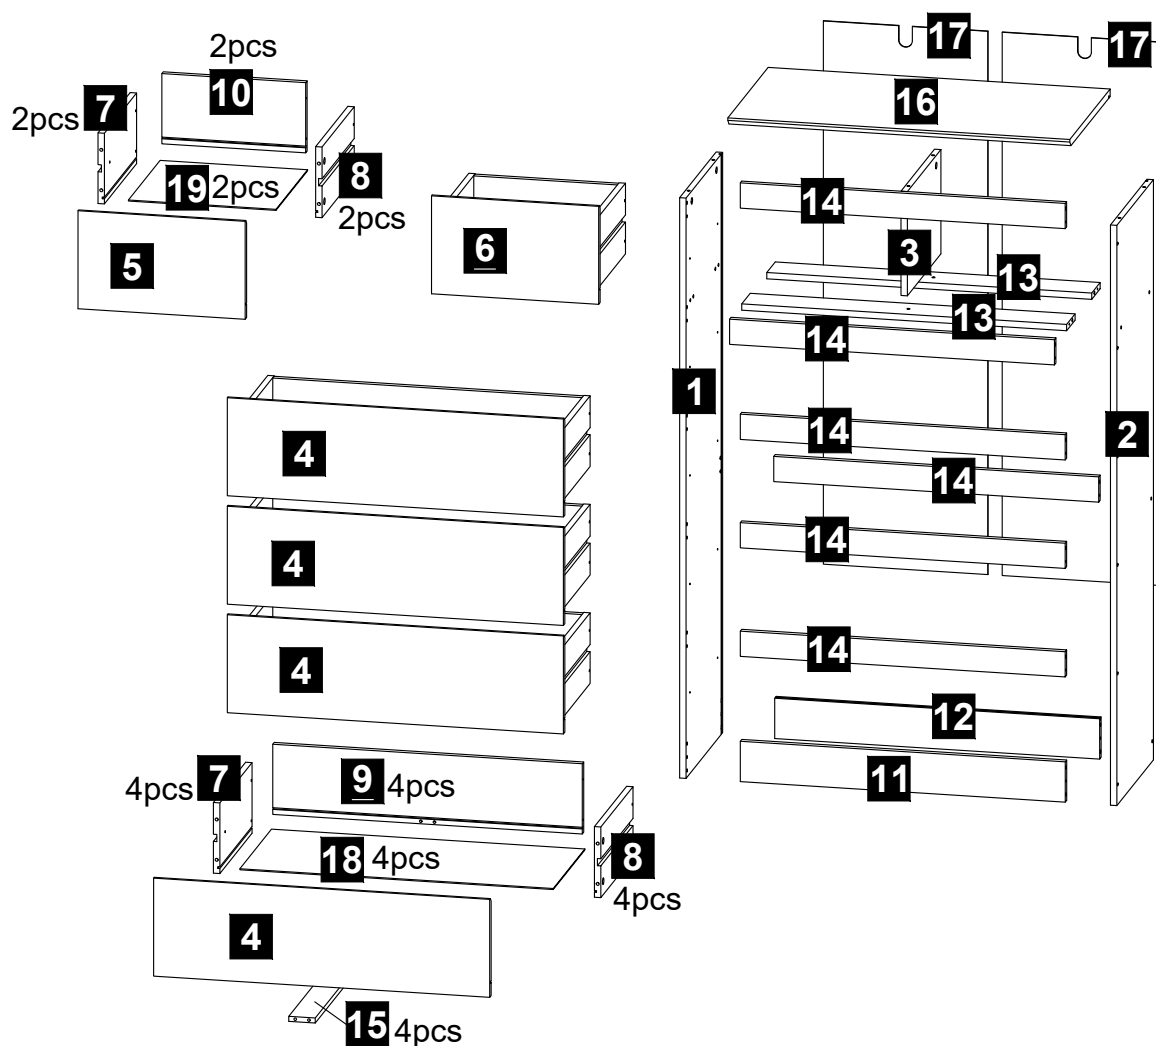

Parts List

1	Side Panel (L)	1 pc
2	Side Panel (R)	1 pc
3	Center Panel	1 pc
4	Drawer Front Panel	4 pcs
5	Small Drawer Front Panel (L)	1 pc
6	Small Drawer Front Panel (R)	1 pc
7	Drawer Side Panel (L)	6 pcs
8	Drawer Side Panel (R)	6 pcs
9	Big Drawer Back Board	4 pcs
10	Small Drawer Back Board	2 pcs


11	Bottom Crossbar	1 pc
12	Lower Crossbar	1 pc
13	Crossbar Panel	2 pcs
14	Small Crossbar	6 pcs
15	Drawer Crossbar	4 pcs
16	Top Panel	1 pc
17	Backboard	2 pcs
18	Drawer Bottom Panel	4 pcs
19	Small Drawer Bottom Panel	2 pcs


EACH PART IS LABELLED ACCORDING TO THE PARTS LIST




Before starting assembly
please verify if all parts and
hardware are included


STEP 1

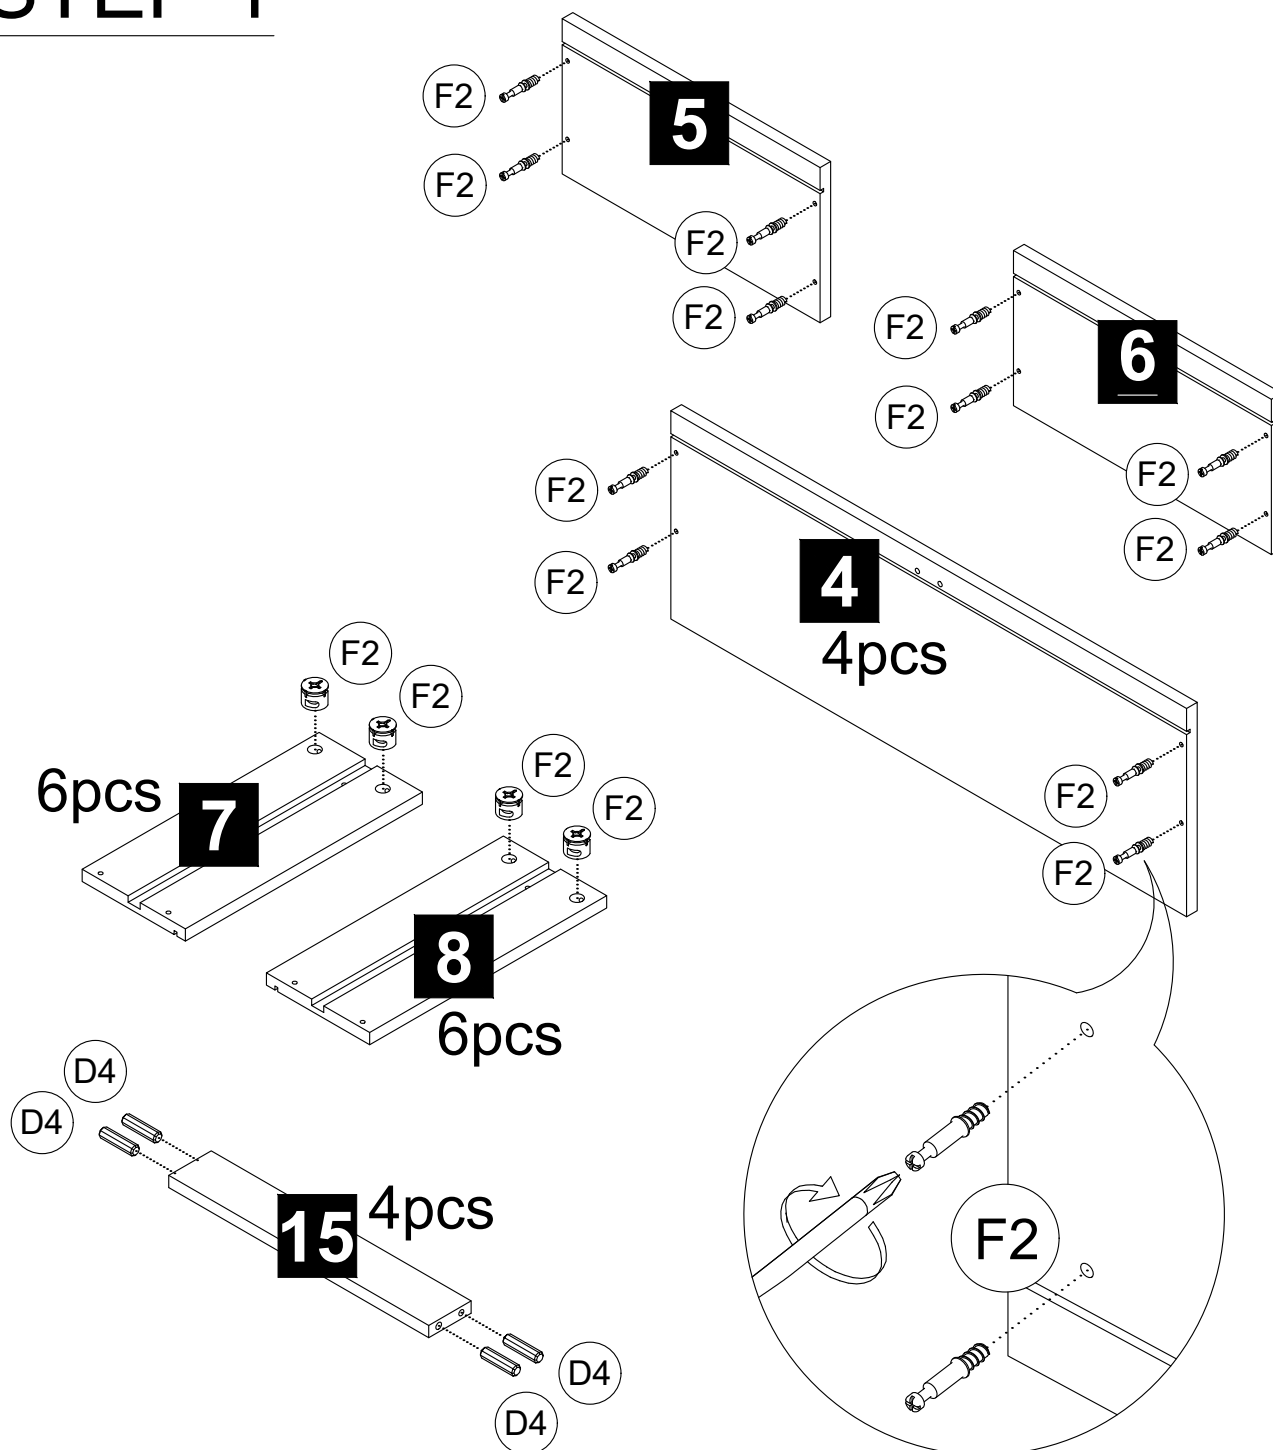


D4		Wood Dowel 6 x 25mm	16 pcs
F2		Mini Fit 15mm_Bolt	24 pcs
		Mini Fit 15mm_Cam	24 pcs

STEP 2

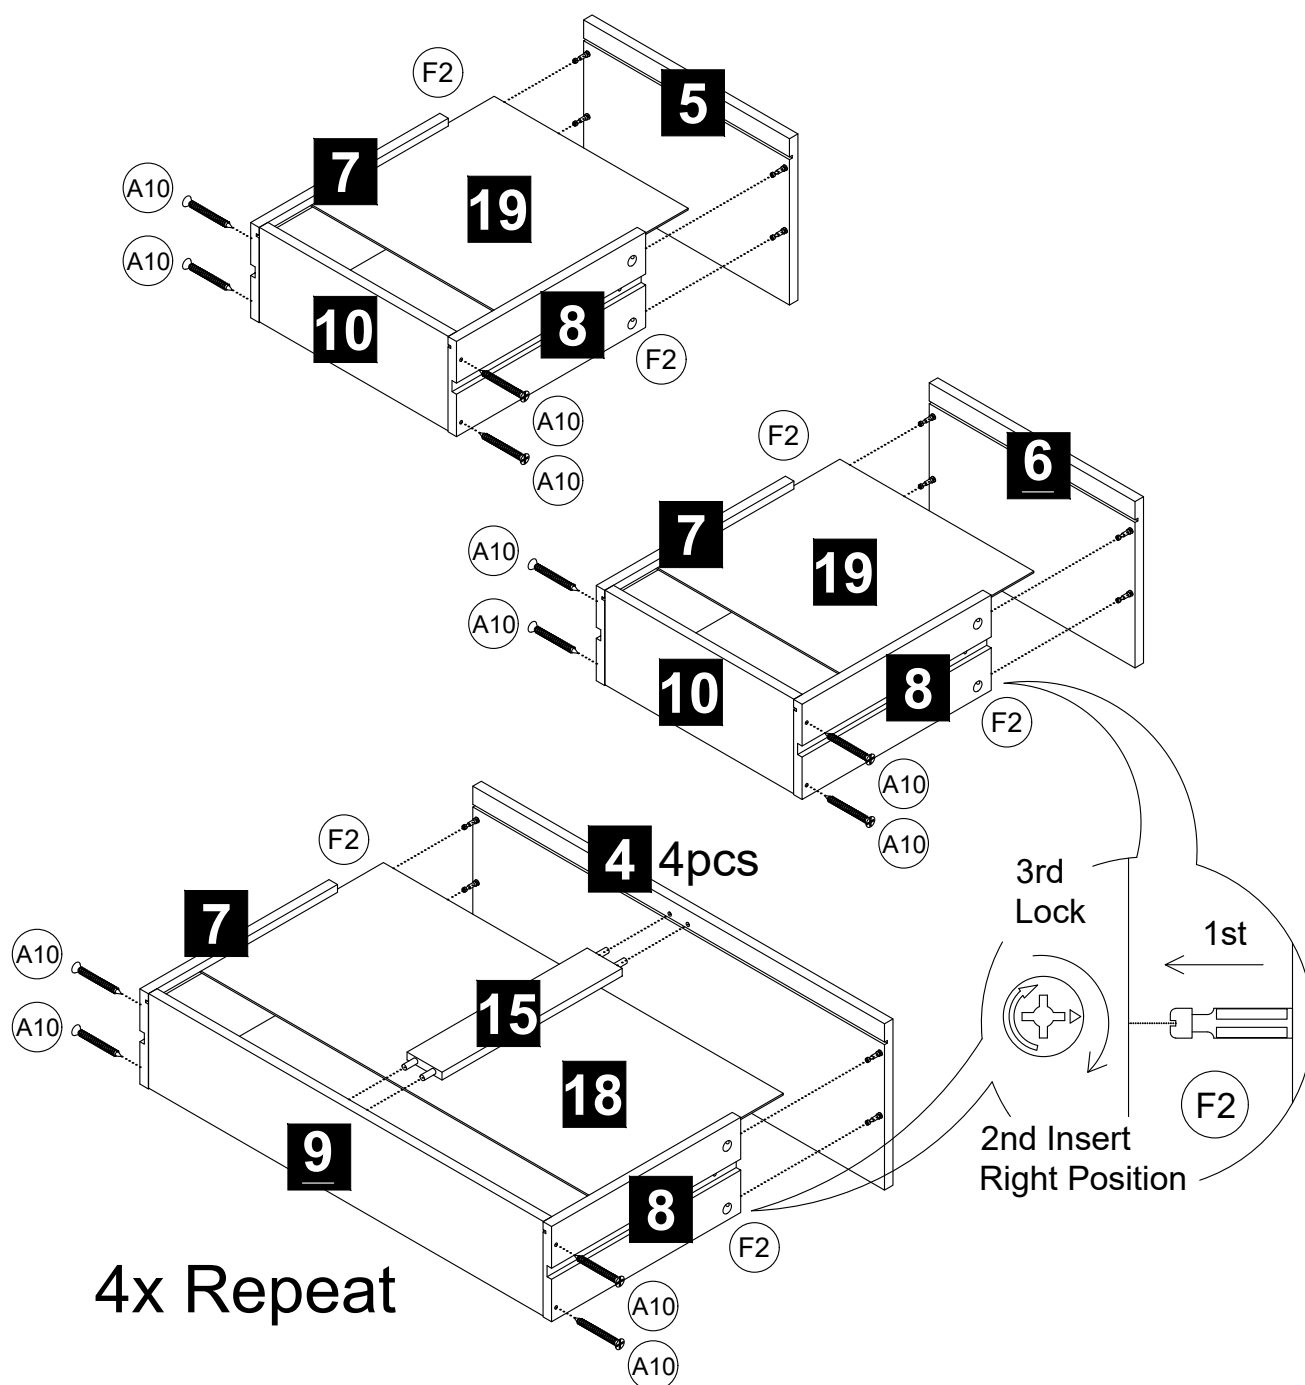

A10		Screw m4 x 38mm	24 pcs
-----	---	-----------------	--------

STEP 3

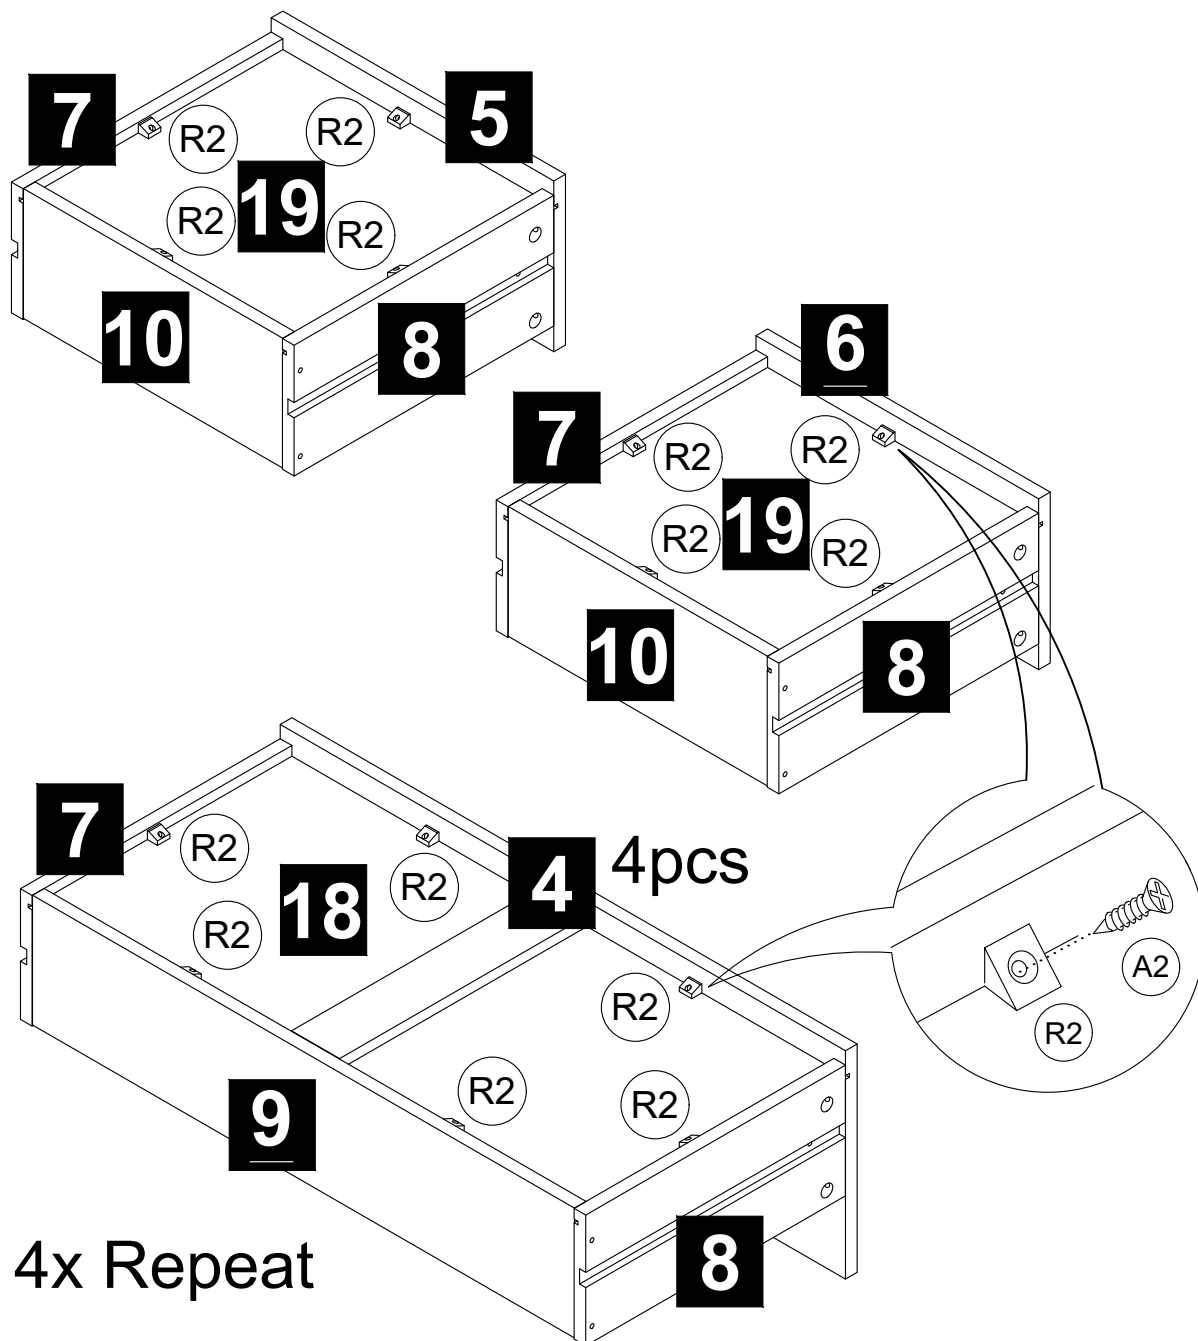



A2		Screw m3.5 x 14mm	32 pcs
R2		Single Plastic Cap	32 pcs

STEP 4

ATTENTION !


Assemble the panel on
clean surface or rug

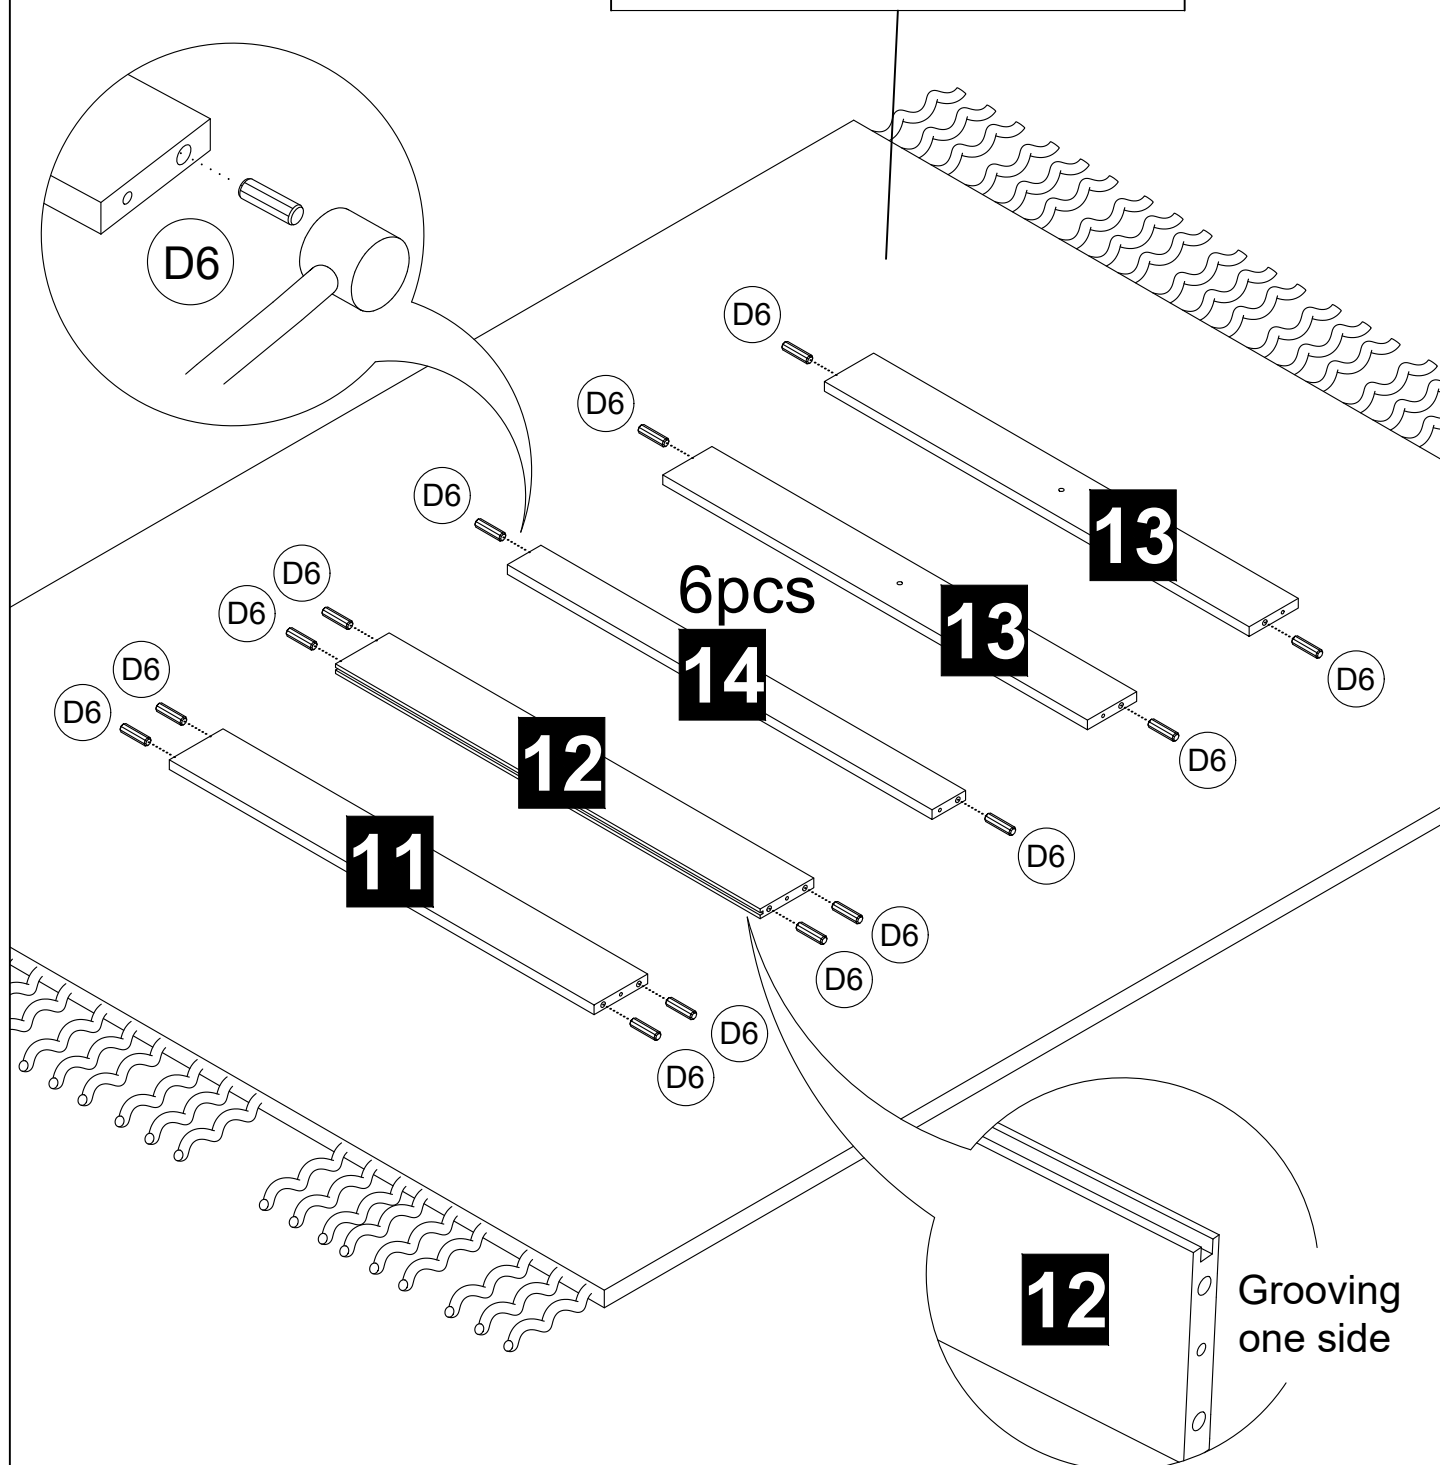

D6		Wood Dowel 8 x 25mm	24 pcs
----	---	---------------------	--------

STEP 5

To Assemble the 2 Way Slide, Please follow step as below



First slide go to back





FRONT

BACK



Second slide go to front

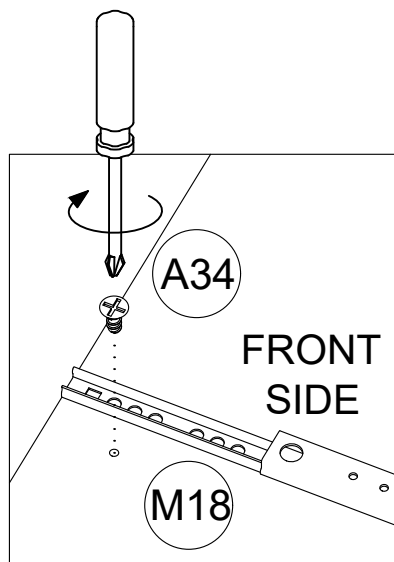

FRONT
SIDE

Front
Side

M18


3

Back
Side

1

2

Front
Side

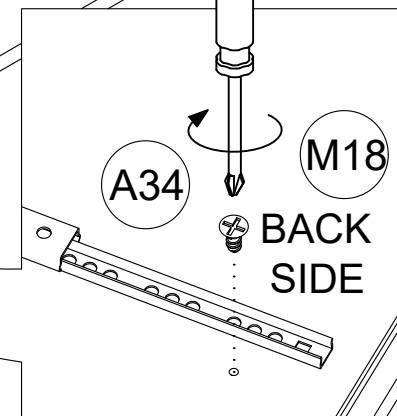


A34

BACK
SIDE


A34		Euro Screw m5 x 8mm	24 pcs
M18		2 Way Slide_342mm	6 sets

STEP 6

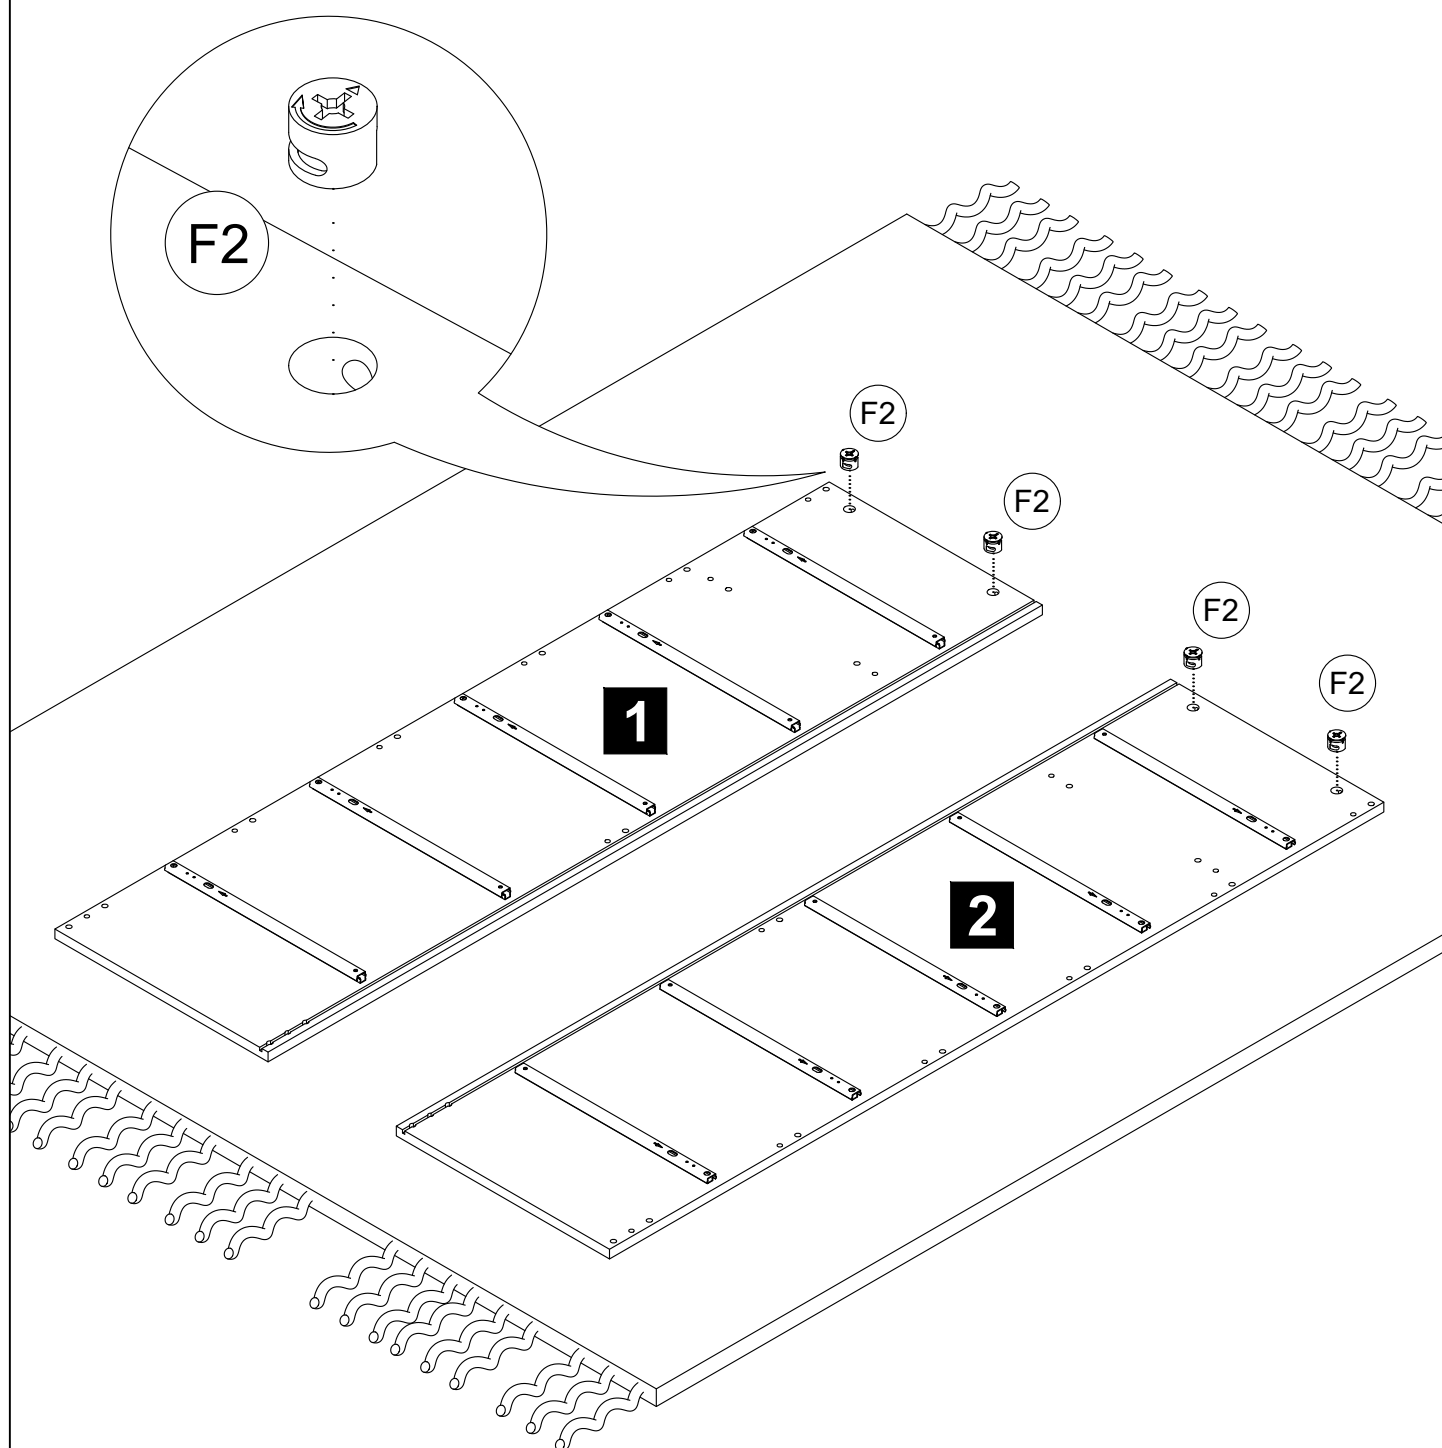


F2		Mini Fit 15mm_Cam	4 sets
----	---	-------------------	--------


STEP 7

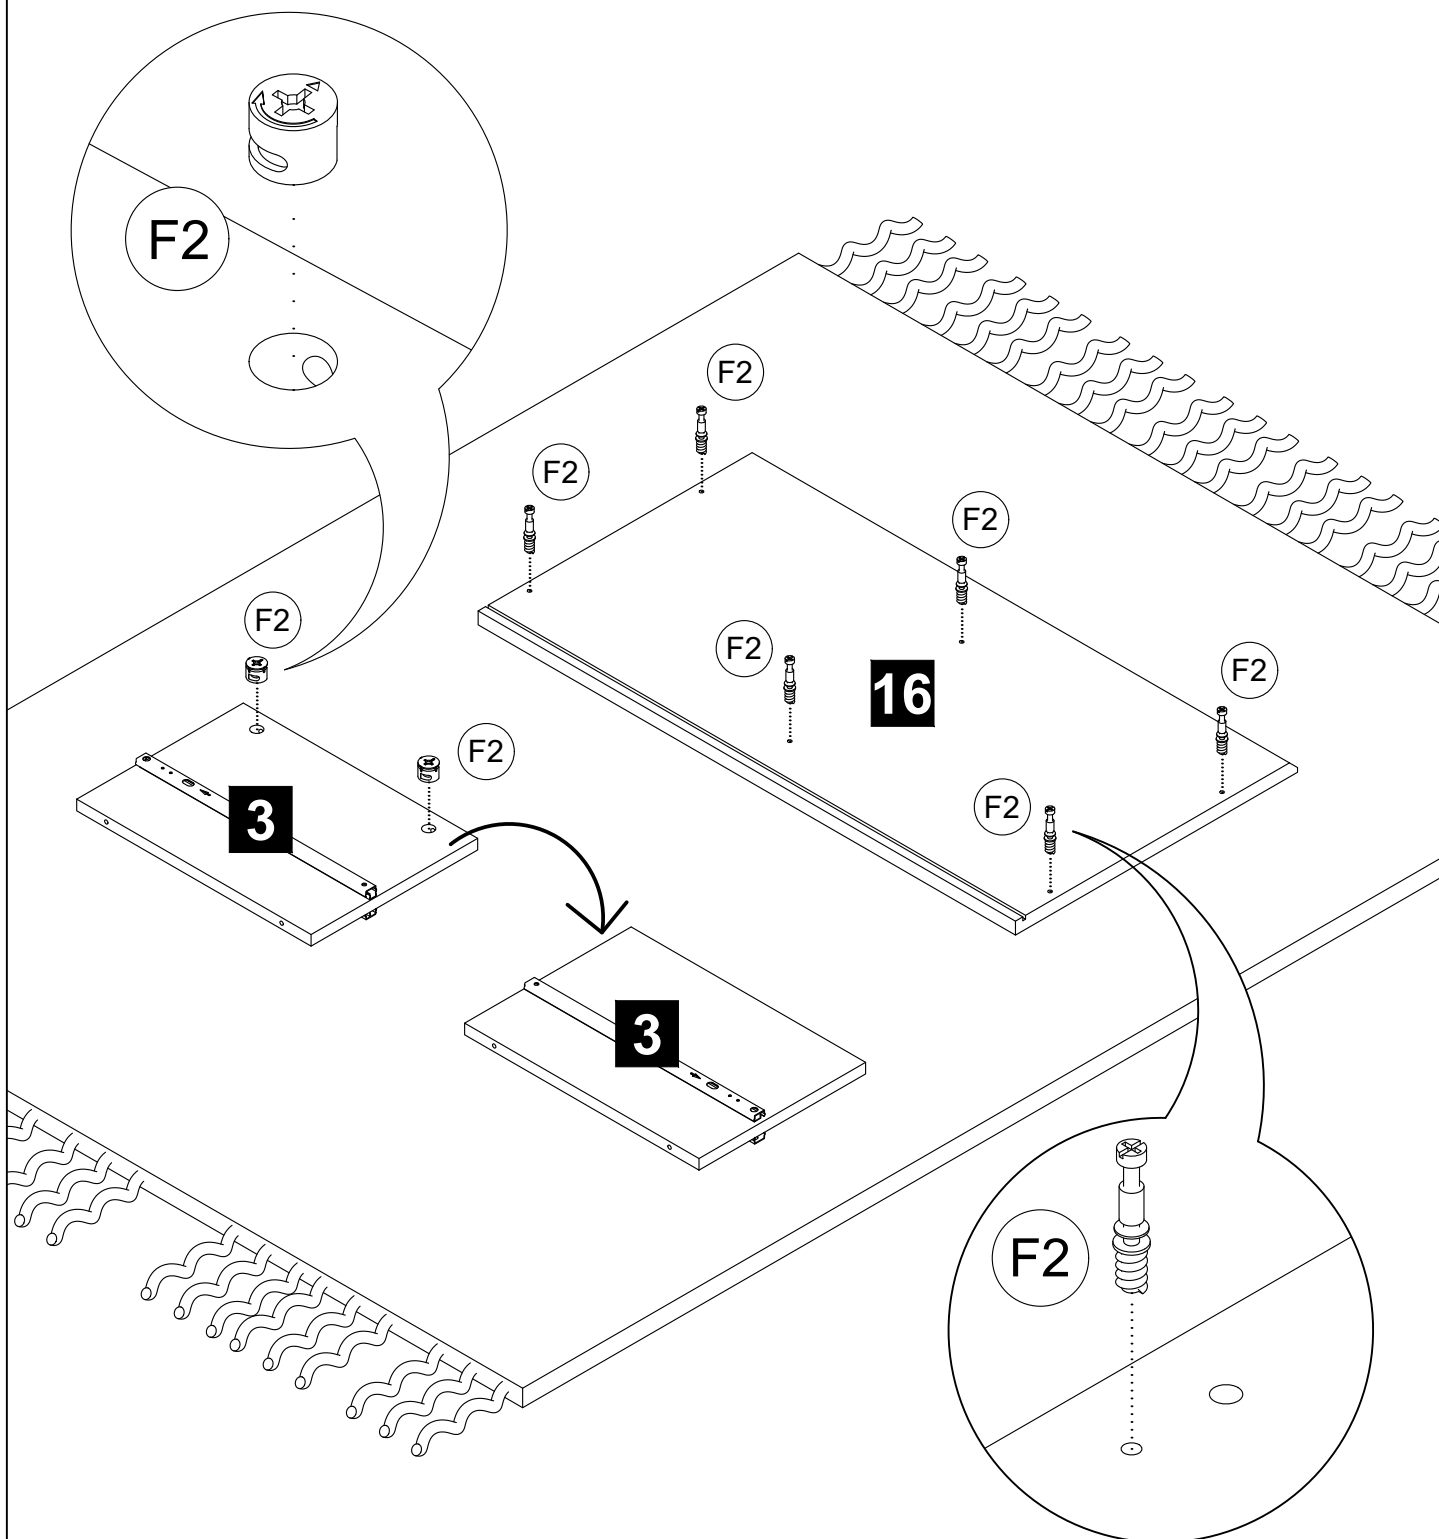


F2		Mini Fit 15mm_Bolt	6 pcs
		Mini Fit 15mm_Cam	2 pcs


STEP 8

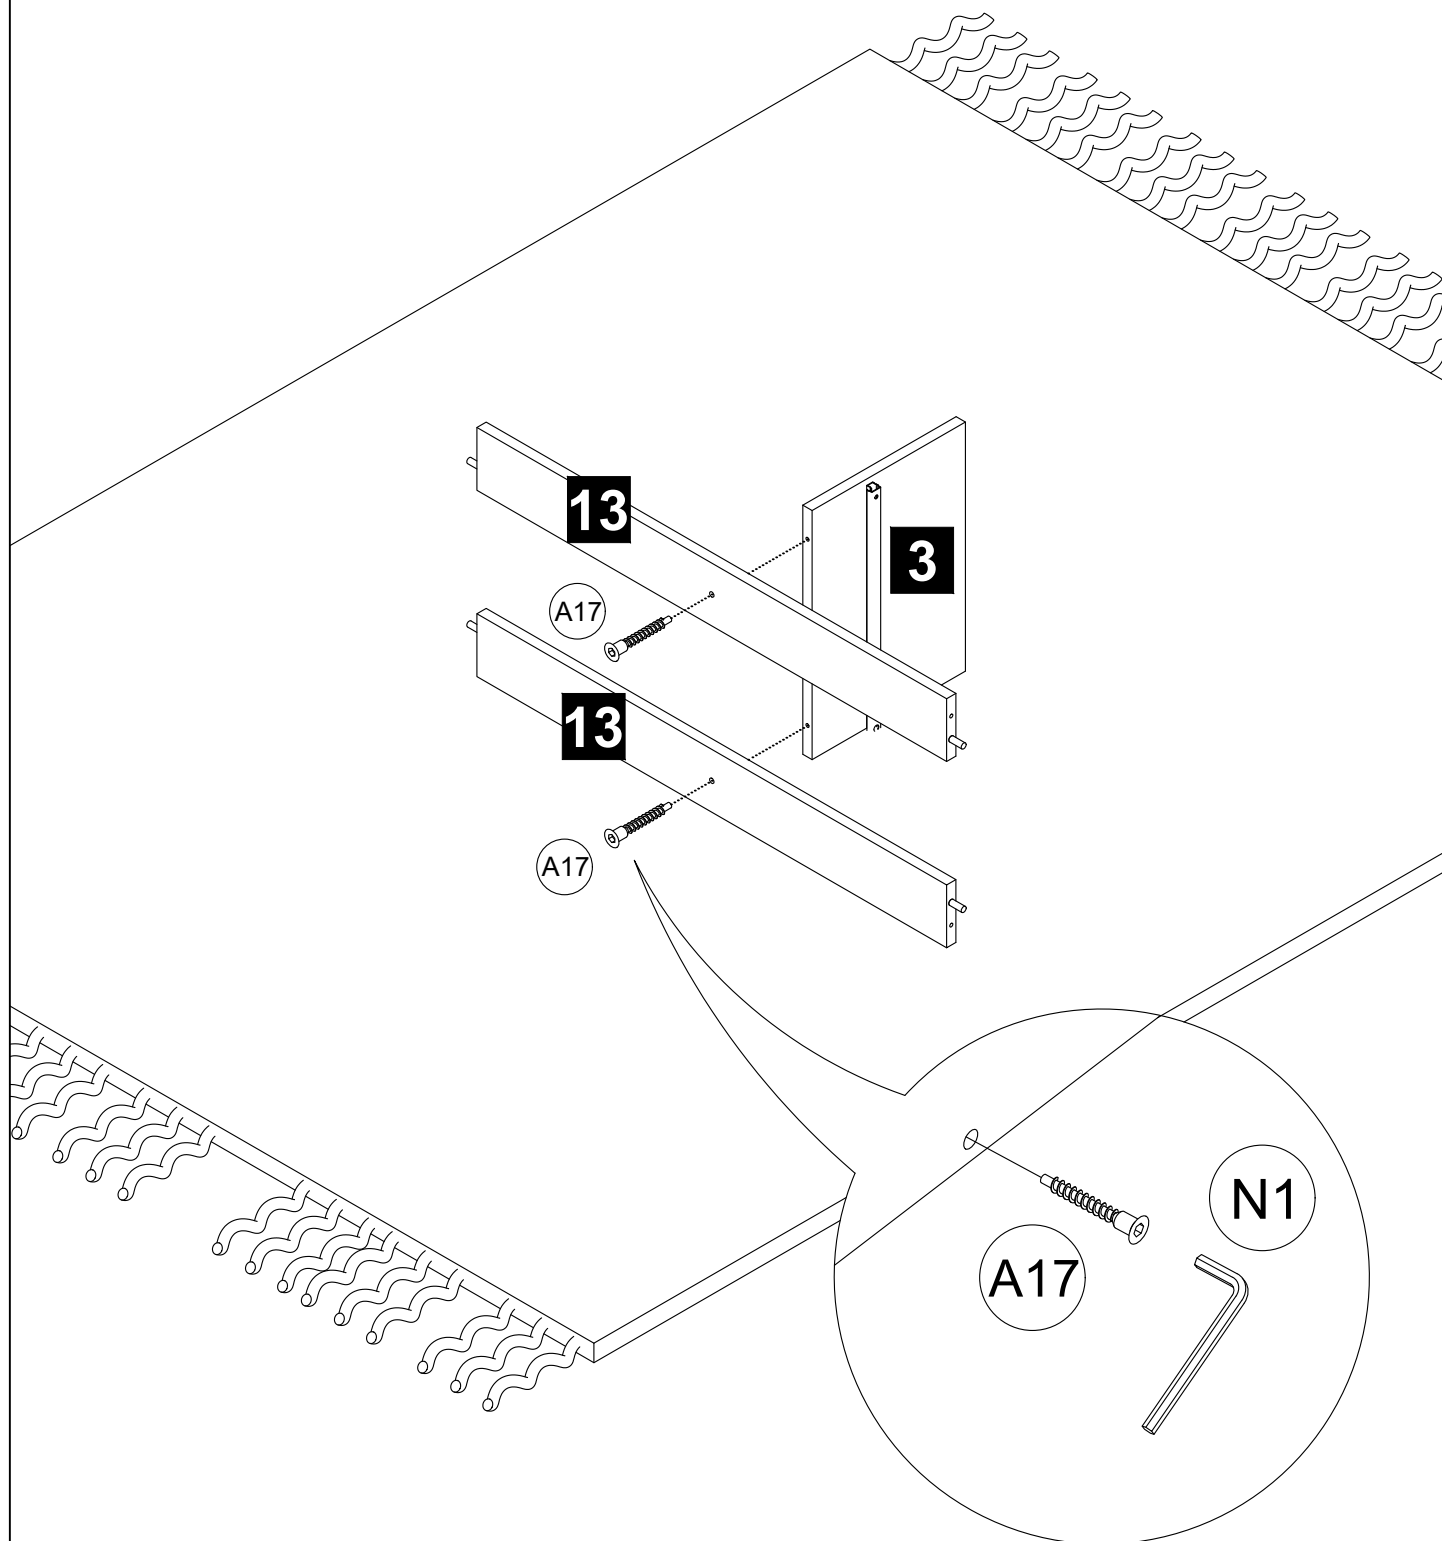


A17		Screw m6.3 x 40mm	2 pcs
N1		Allen Key	1 pc


STEP 9

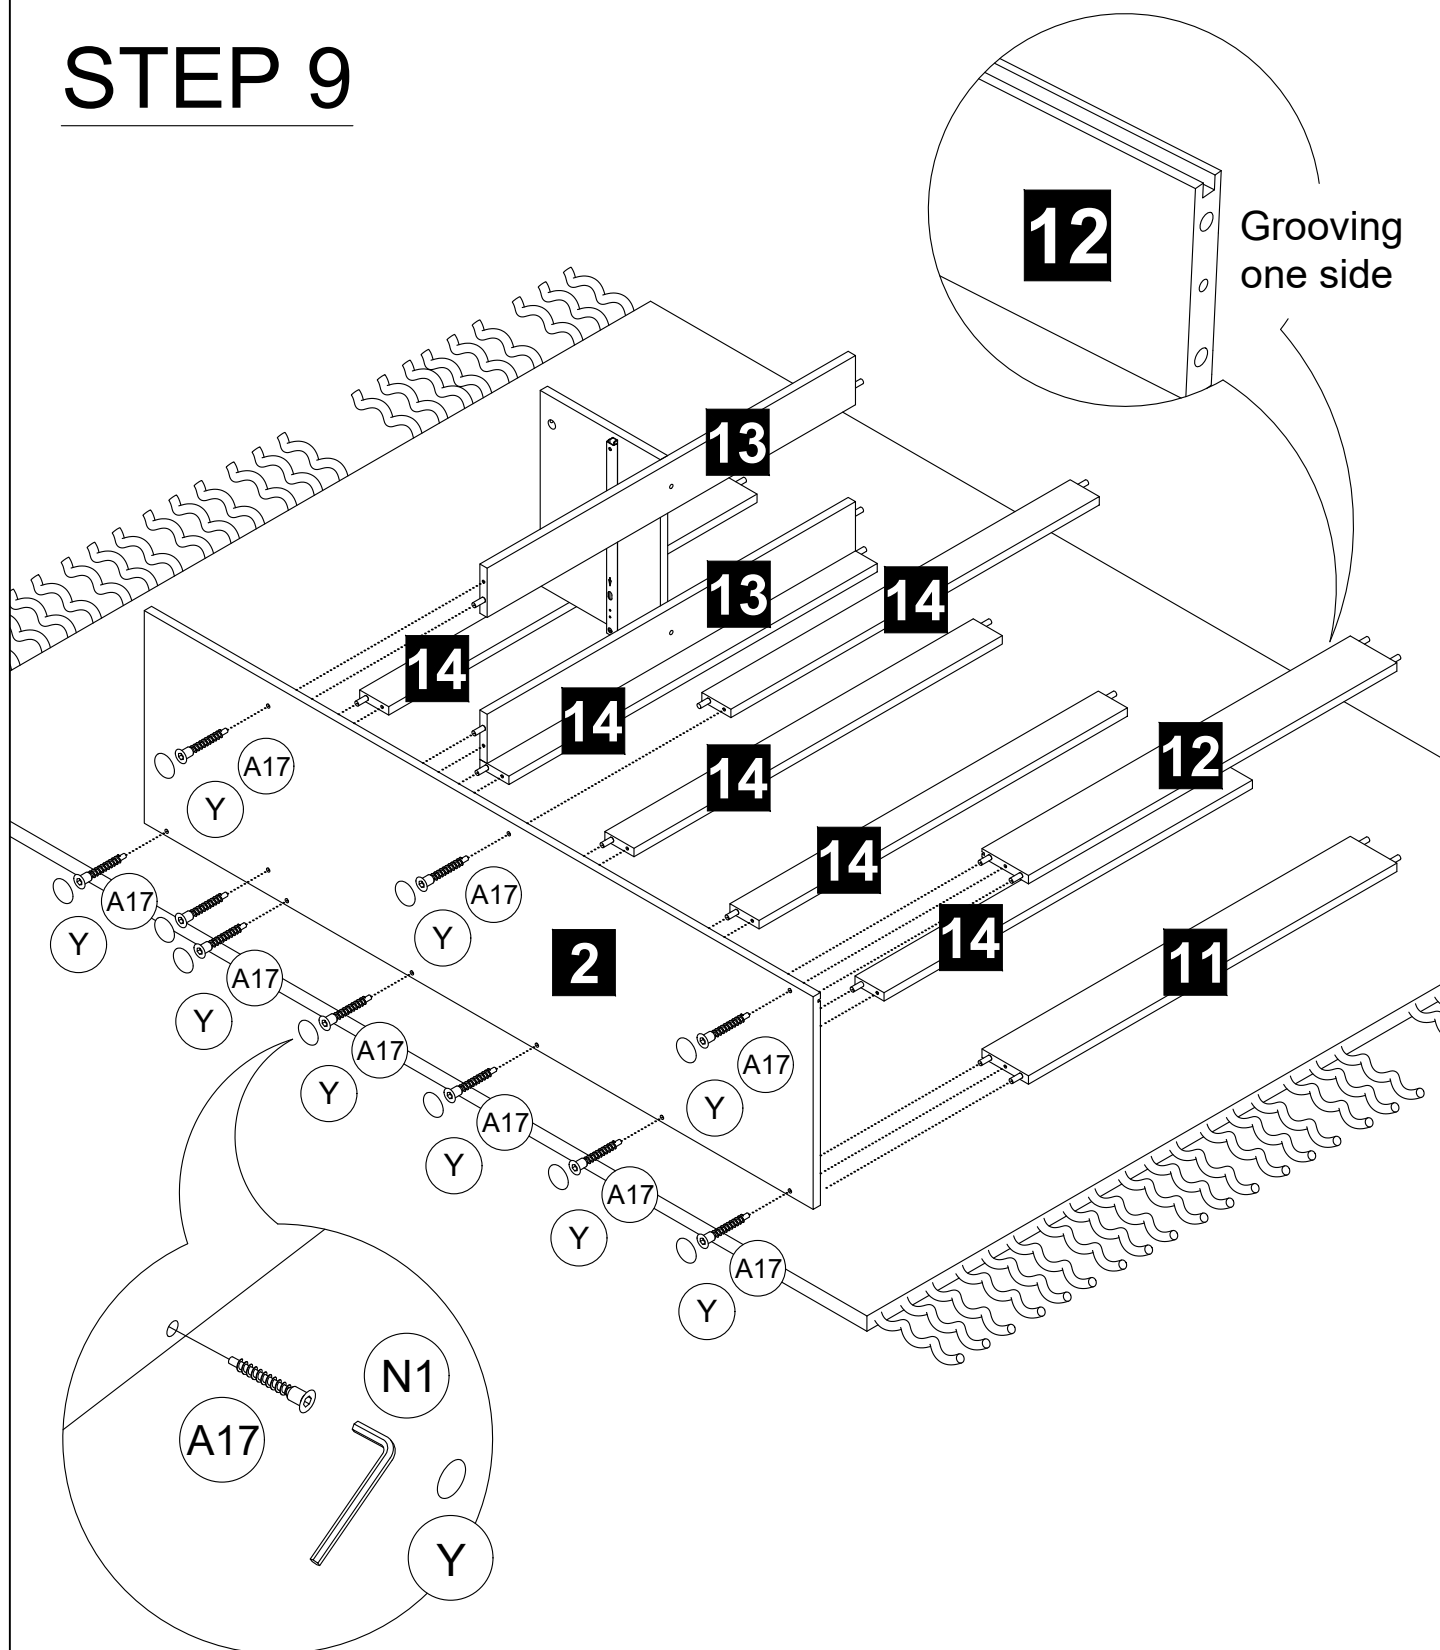


A17		Screw m6.3 x 40mm	10 pcs
N1		Allen Key	1 pc
Y		Crosshead Cover	10 pcs

STEP 10

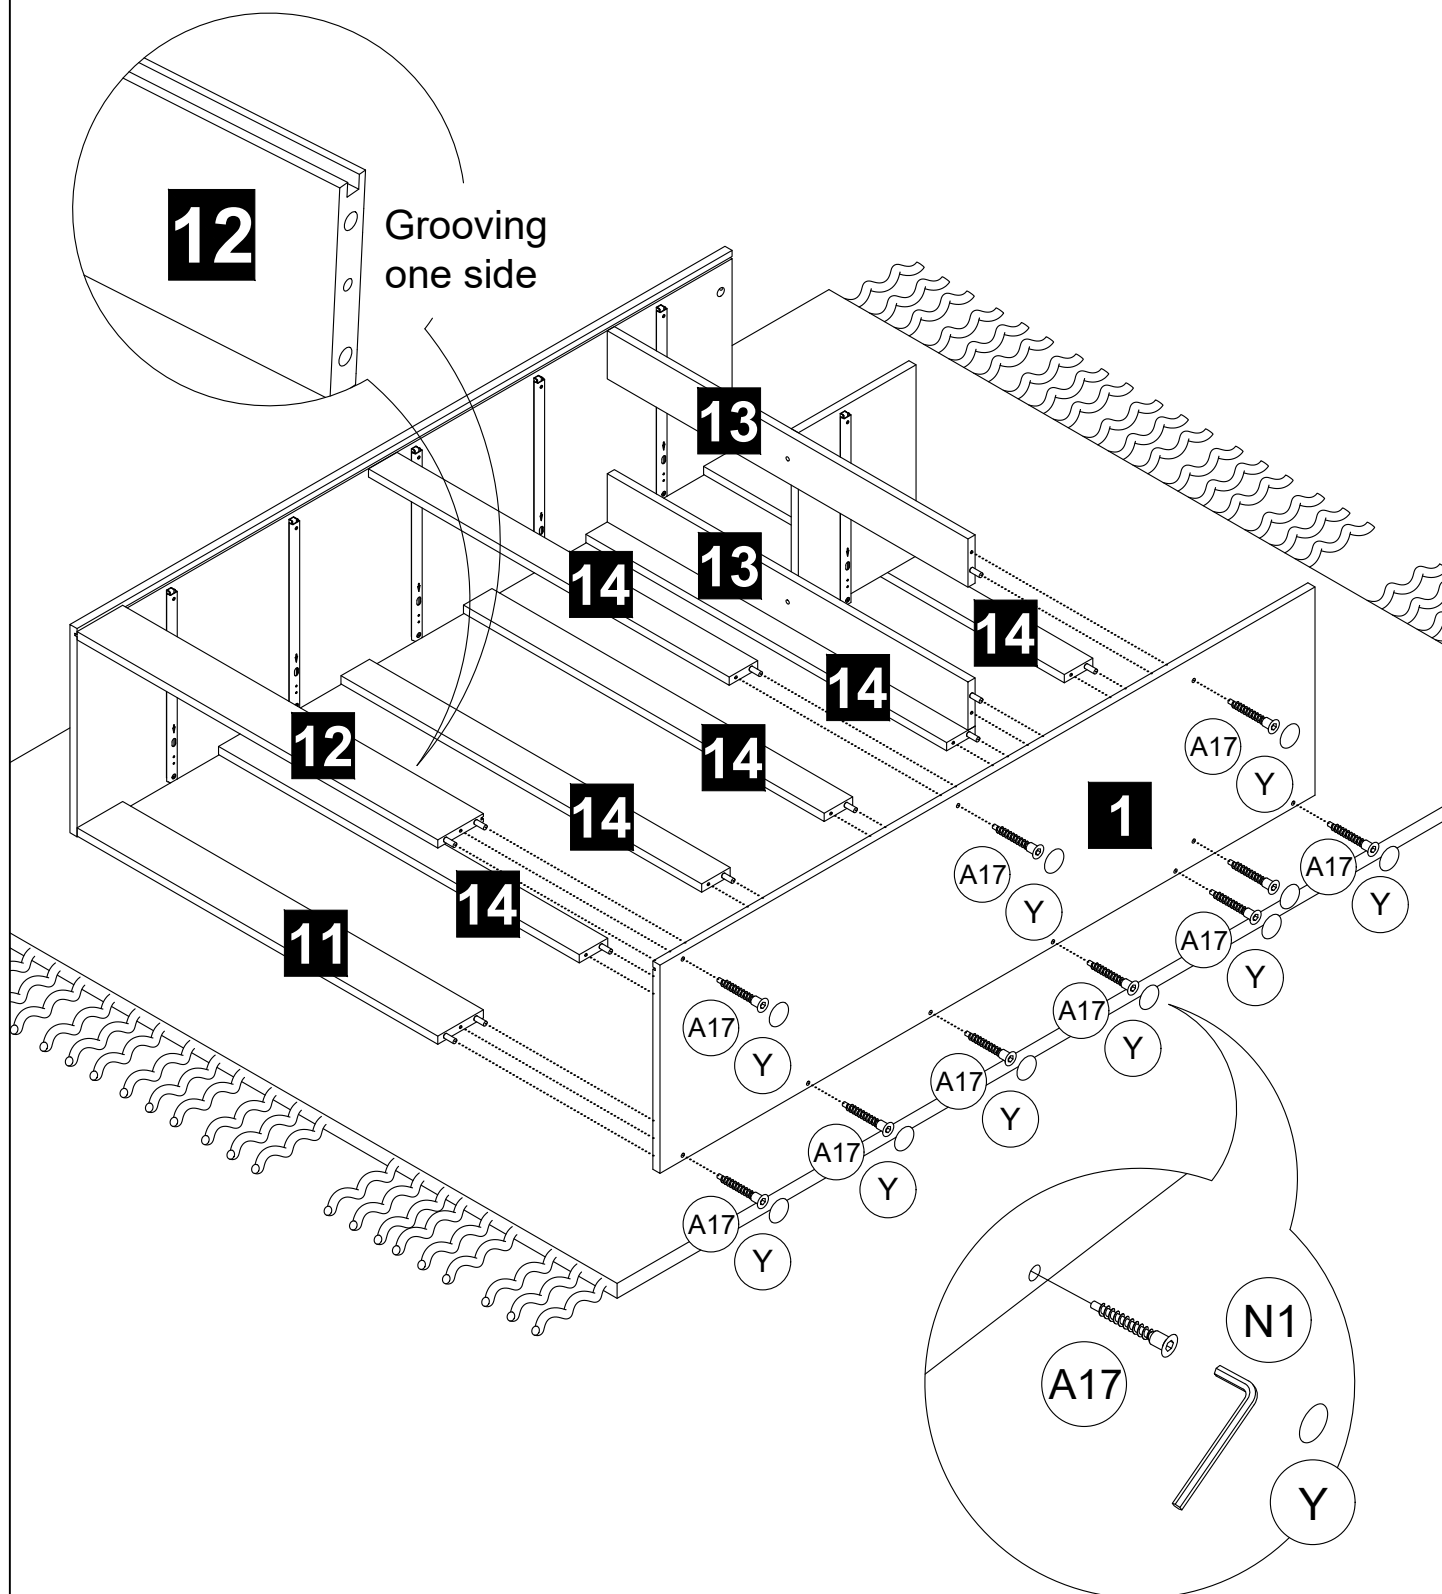


A17		Screw m6.3 x 40mm	10 pcs
N1		Allen Key	1 pc
Y		Crosshead Cover	10 pcs


STEP 11

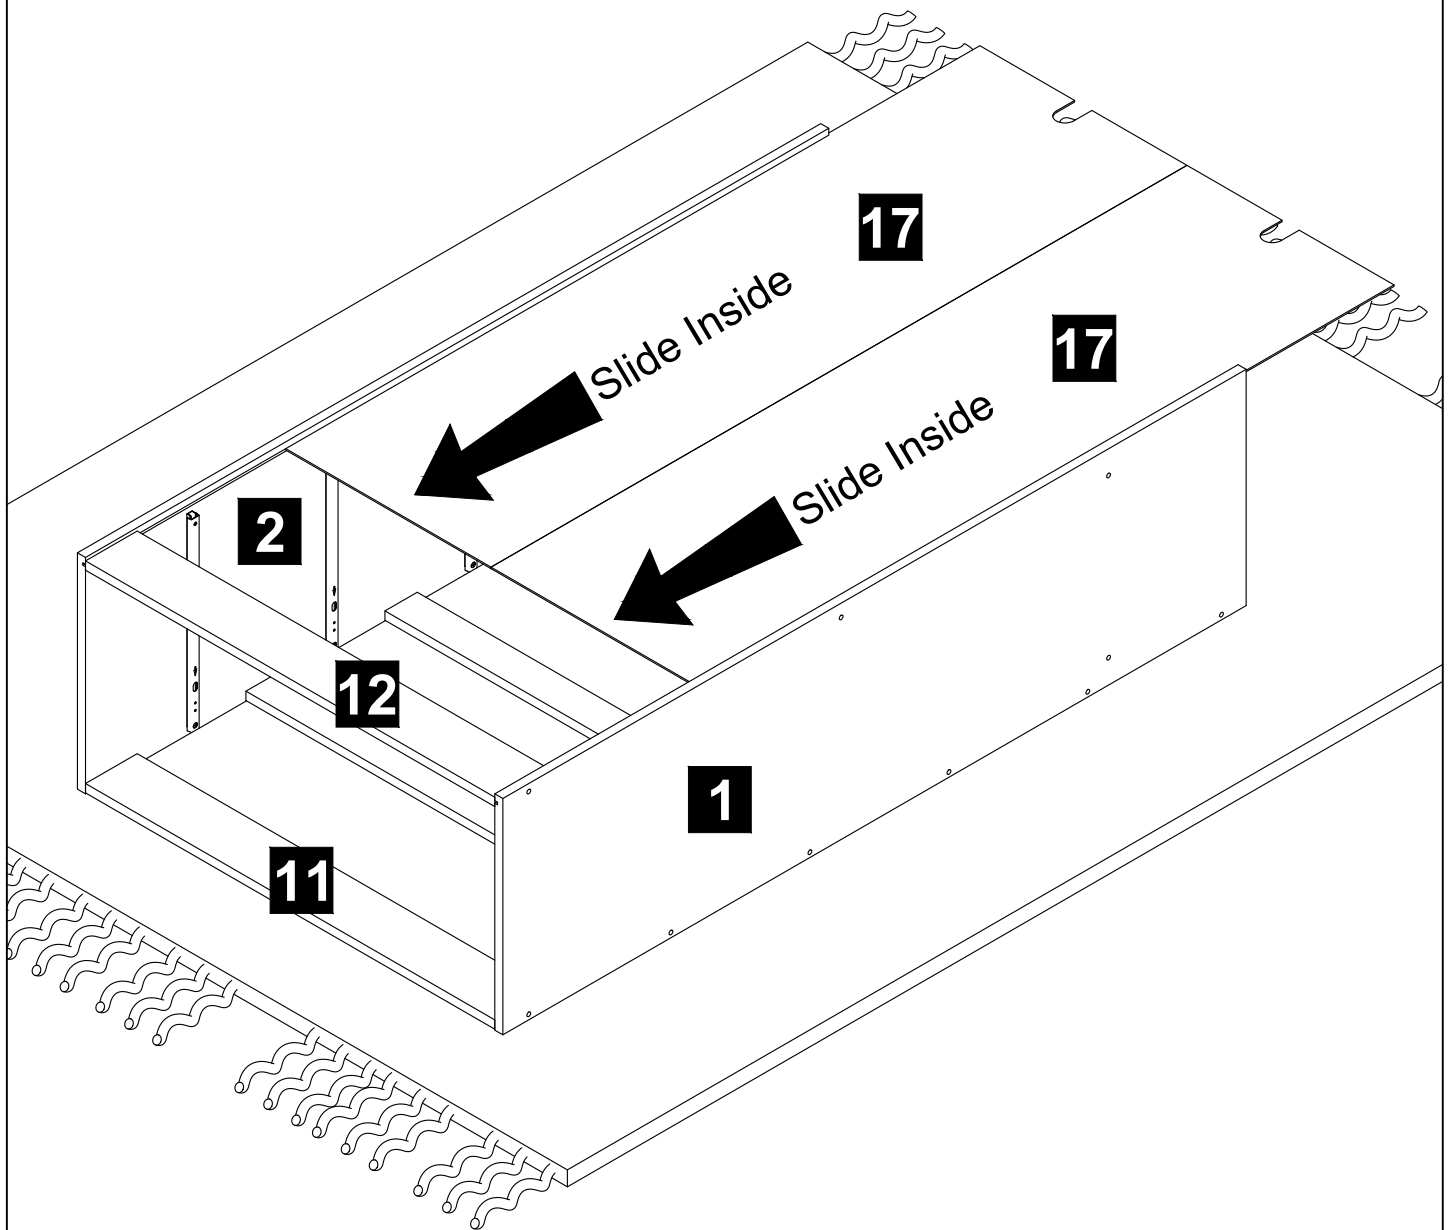

STEP 12

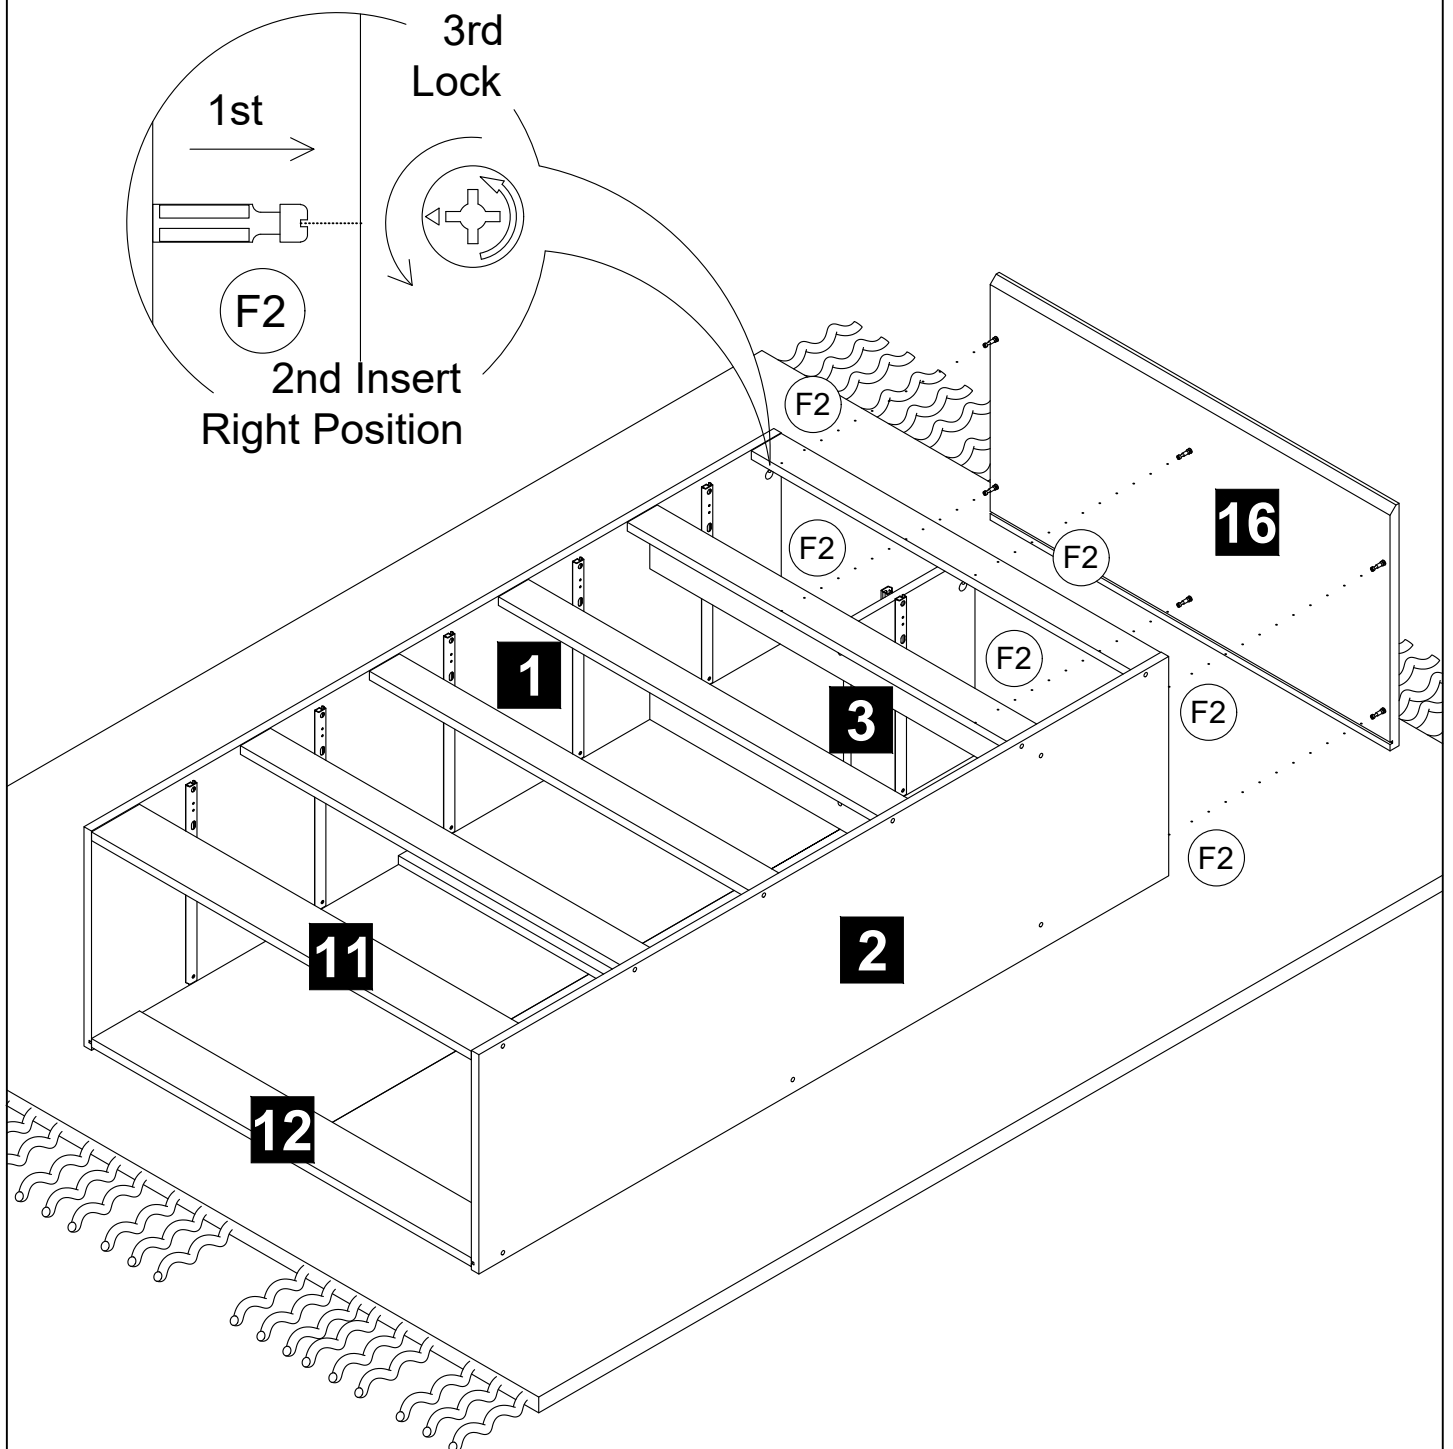

STEP 13

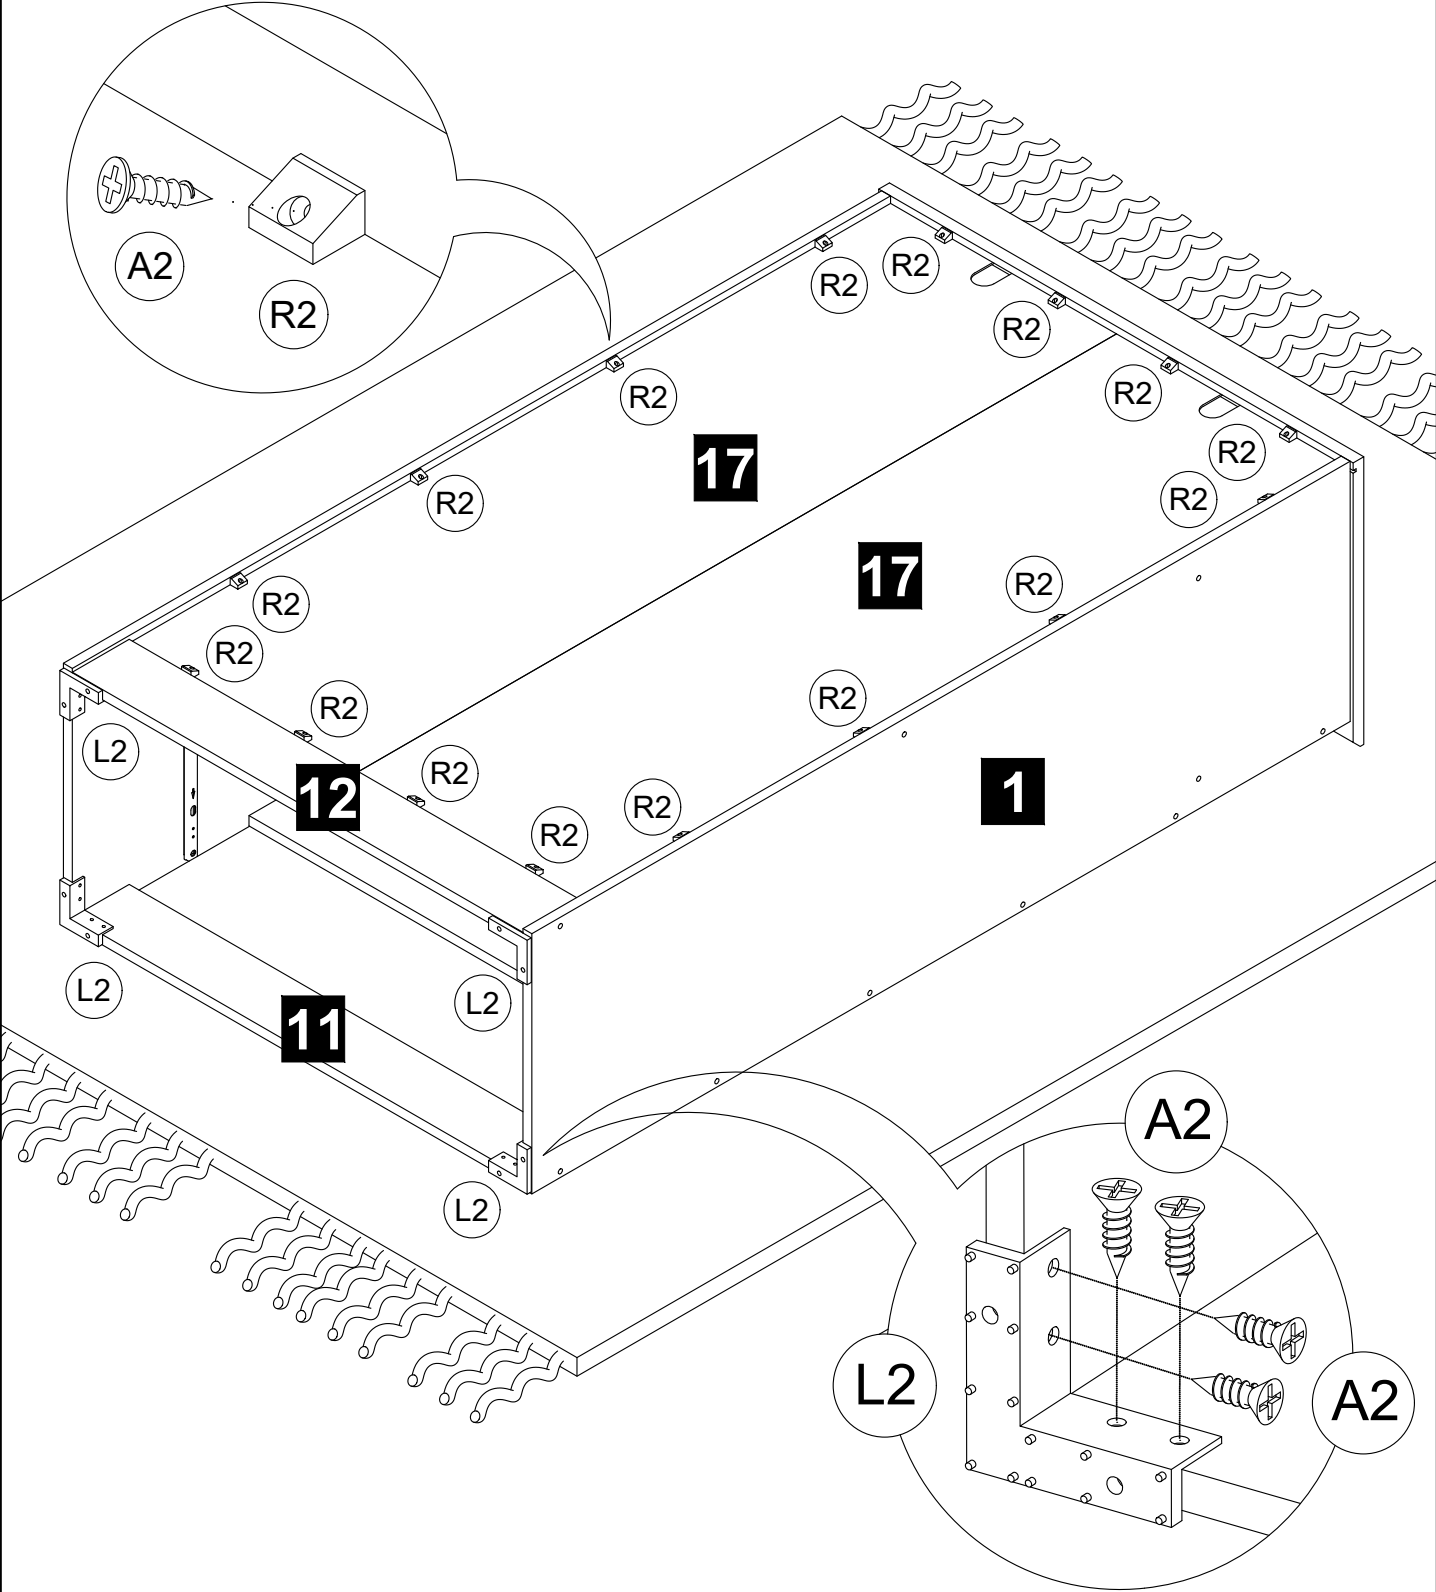


A2		Screw m3.5 x 14mm	32 pcs
L2		Plastic Leg L Shape	4 pcs
R2		Single Plastic Cap	16 pcs


STEP 14

Step 1 :


Push the drawers in following the rails and another drawers follow the same step.

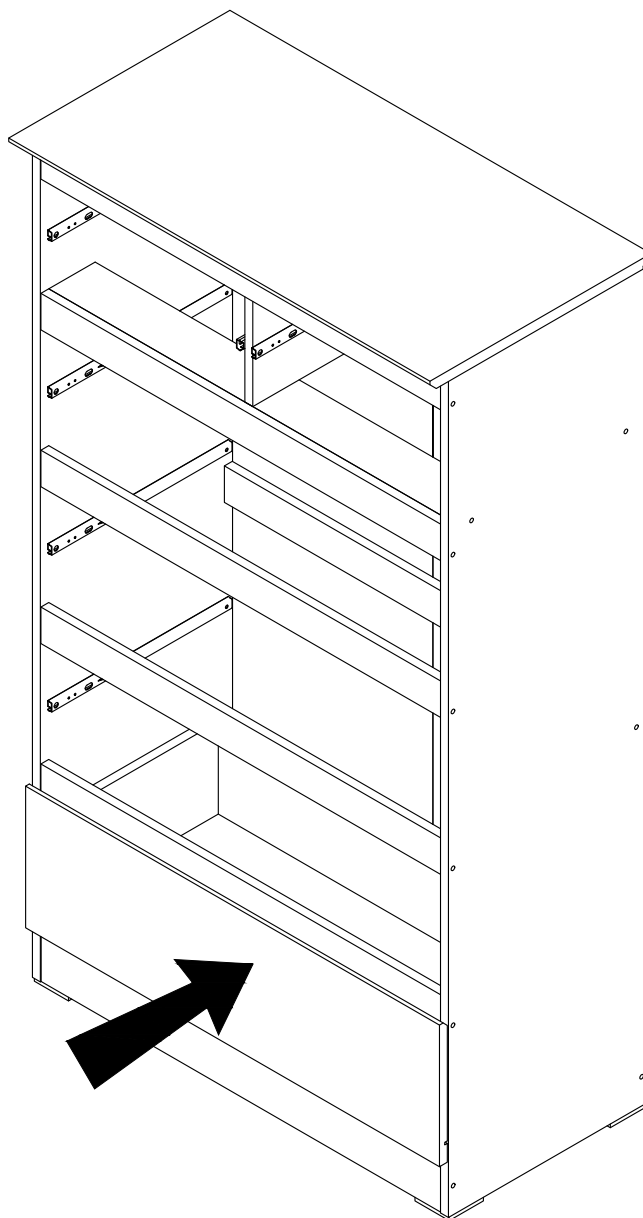

STEP 15




Please use Philips tip insert

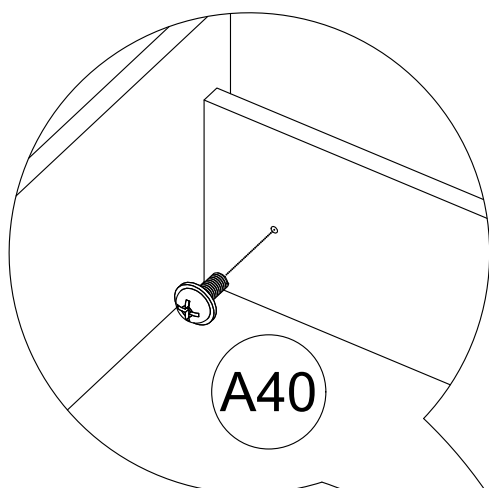

A40

Step 2 :

Pull the drawers out and insert the (**A40**) screw (one to the left and one to the right). Please align the hole on the inside of the drawer with the hole on the metal slide and another drawers follow the same step.

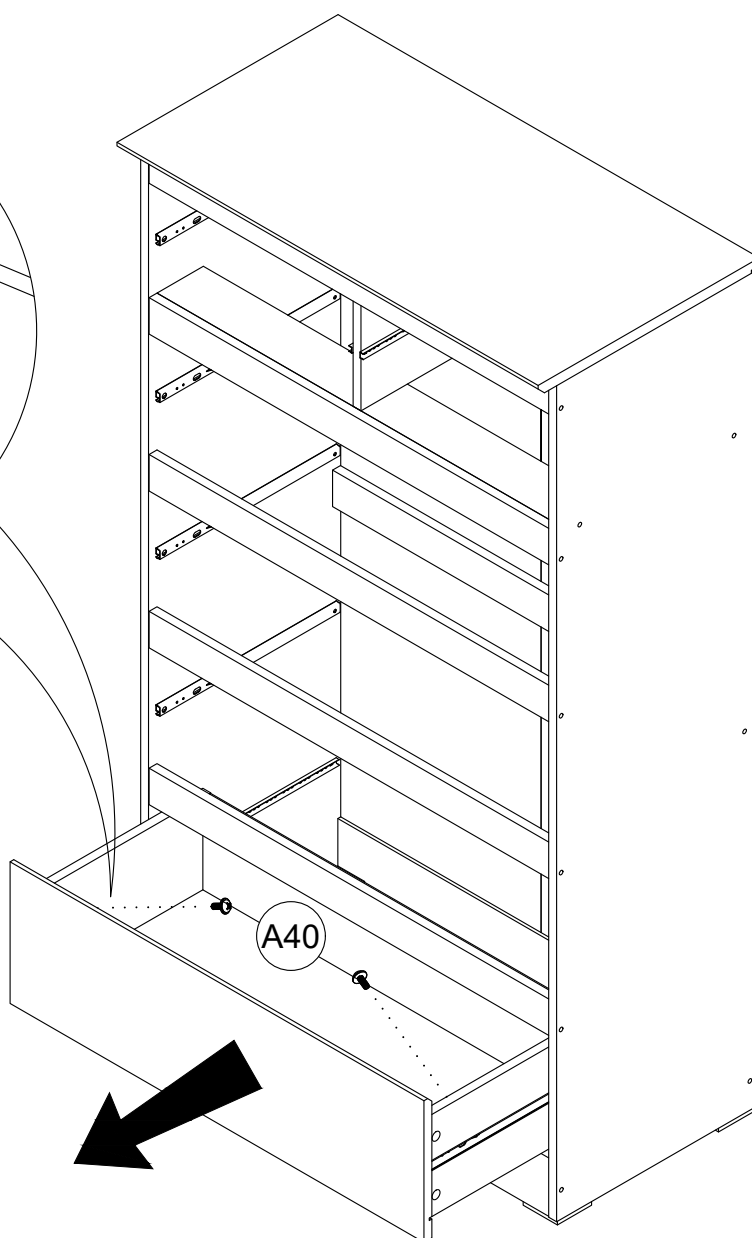

A40





TH Screw m4 x 10mm

12 pcs


INSTALLATION OF TIPOVER RESTRAINT KIT

The Tipover Restraint Kit is highly recommended
for this piece of furniture.


(Please take this into extra consideration around
young toddlers and children)

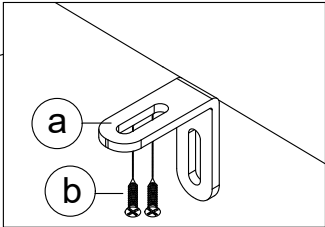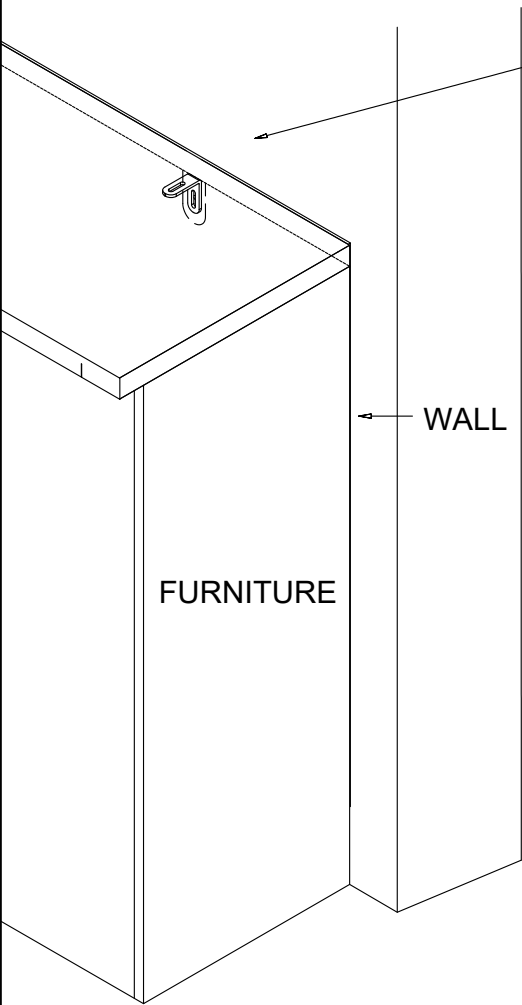





- STEP 1:**
- Attach the mounting bracket (a) to the bottom top panel near the edge of the side of the unit.
 - Screw (b) through the two holes of (a).

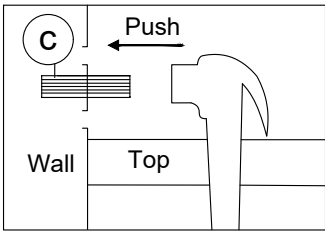

- STEP 2:**
- Insert the wall plug (c) into the wall behind the unit.

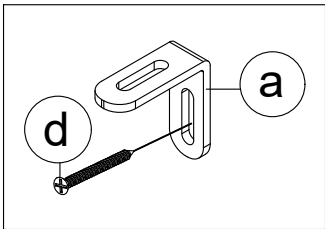

- STEP 3:**
- Attach to the mounting bracket (a) to the wall plug (c) through the hole by using (d).

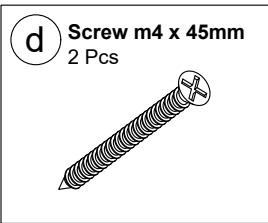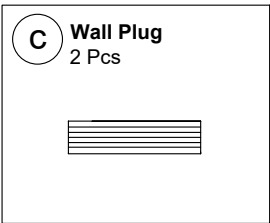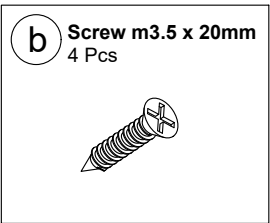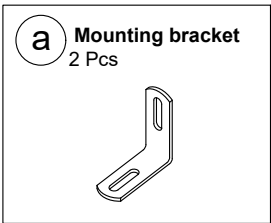

AH CHAI ENTERPRISE SDN BHD
LOT 17334, LORONG ASAS JAYA 3,
KWS PERINDUSTRIAN RINGAN ASAS JAYA,
PERMATANG TINGGI,
14000 BUKIT MERTAJAM, PENANG.
Manufacture Date: 9/12/2023

E21		Anti-Tipping Pack	2 sets
-----	--	-------------------	--------

Troubleshooting

- If the drawers are overlapping each other - **Solution:** The metal slides are placed upside down, please refer to the instruction manual.
- If the doors are overlapping each other - **Solution:** make sure the correct hinges are placed on the right door refer to the hinge assembly step on the manual.
- If the gap between the doors is too large or too small, the doors are overlapping each other, not parallel, or rubbing against the sides of the closet - **Solution:** See the page for " Door Adjustment. " or see video, QR code video is available below.

THANK YOU

We hope you enjoy your new purchase.

We have personally inspected this product.

In the event that you need any additional help for any reason,

Please do not hesitate to contact us at: 315-7580-751 / 973-751-7089

Email lori@shopwp.com

See our website wpfurniture.com

**WP FURNITURE
323 Cortland Street
Belleville New Jersey**

Thank you