


Hall Tree

Assmby Instructions - Please keep for future reference

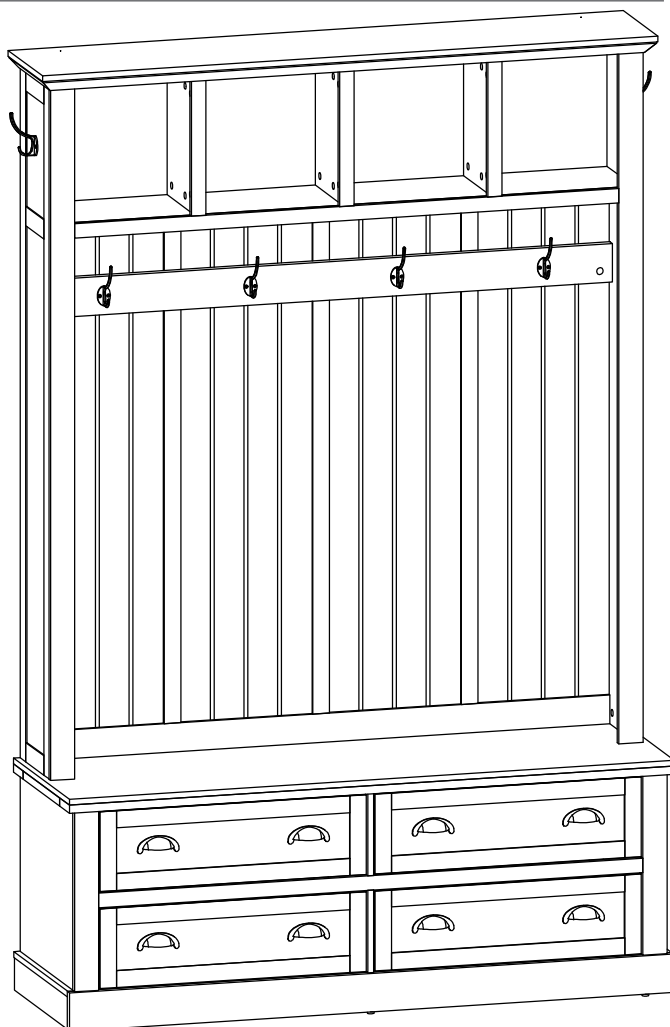

Dimensions

Width-51.18inch
Depth-15.75inch
Height-77.36inch

! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

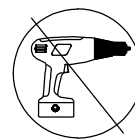

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

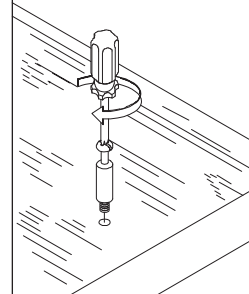

Step 2

Push the male camlock into the entry hole.

2

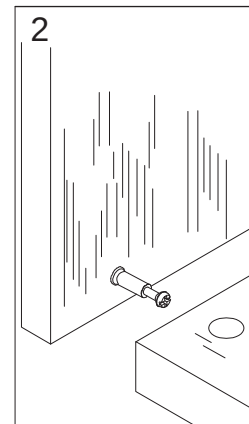


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

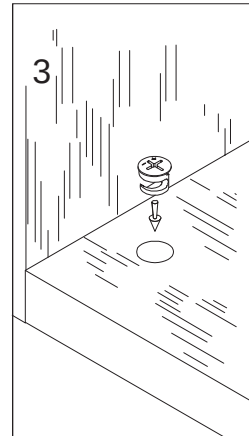


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

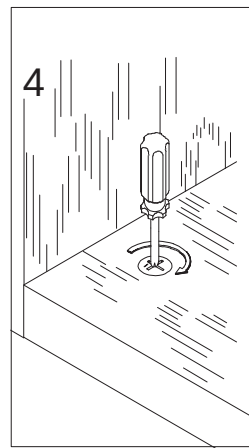











Assembly Instructions

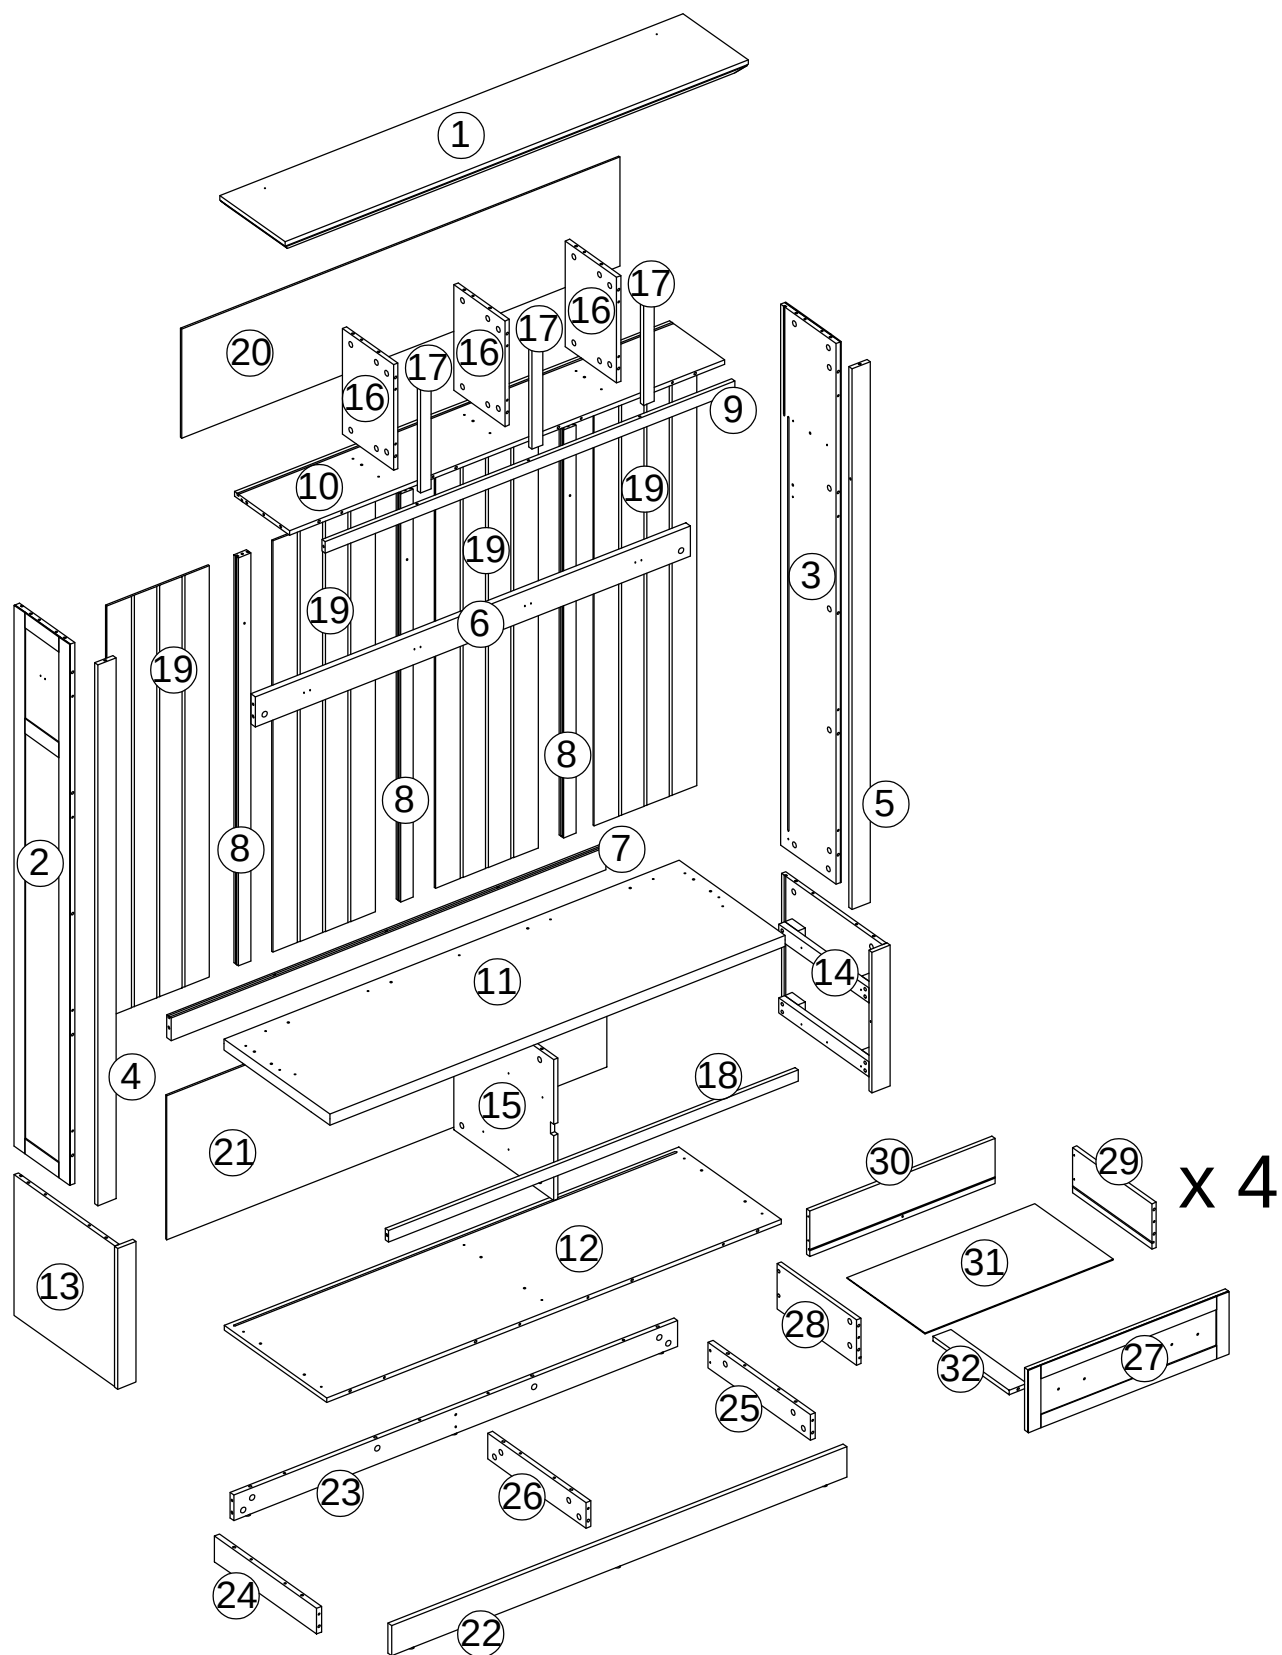

Assembly Instructions

There are 2 boxes of this product

















BOX-1: N721P504659

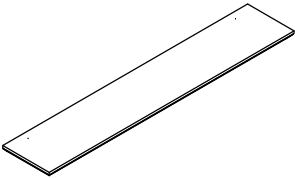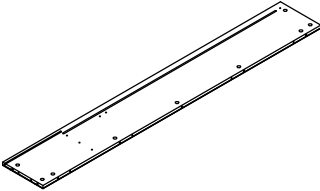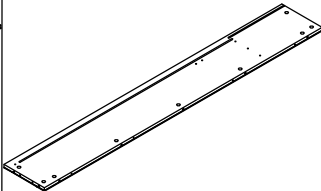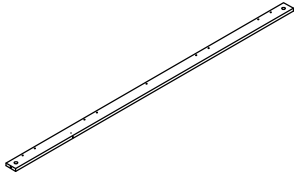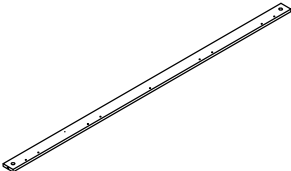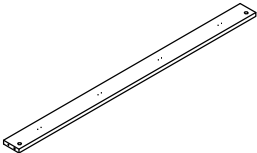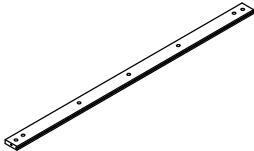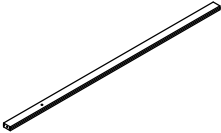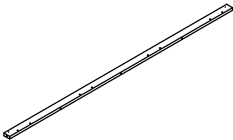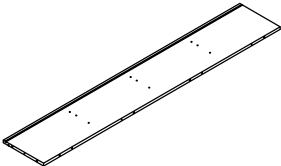 1300*246*37mm	 1433*209*15mm	 1433*209*15mm	 1433*51*12mm
① x 1	② x 1	③ x 1	④ x 1
 1433*51*12mm	 1221*80*17mm	 1221*60*17mm	 1081*35*17mm
⑤ x 1	⑥ x 1	⑦ x 1	⑧ x 3
 1150*30*12mm	 1221*208*12mm		
⑨ x 1	⑩ x 1		

Assembly Instructions

There are 2 boxes of this product








BOX-2: N721P504660

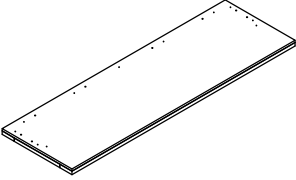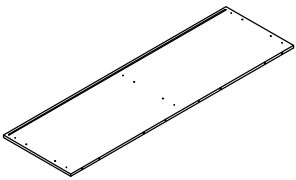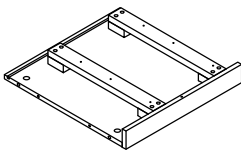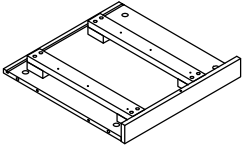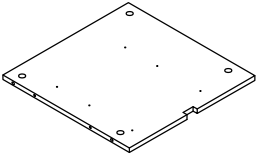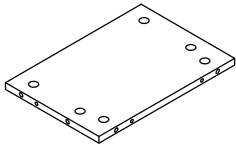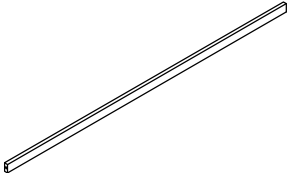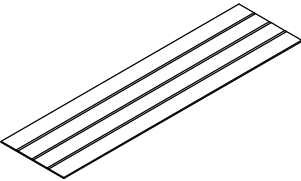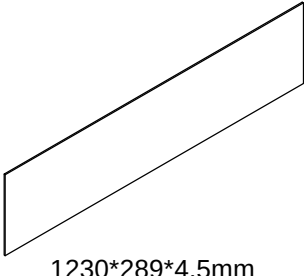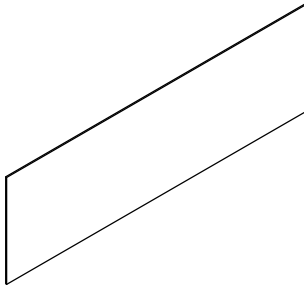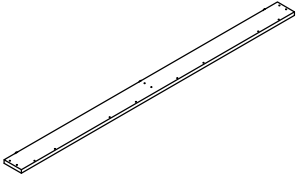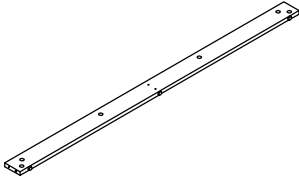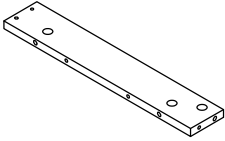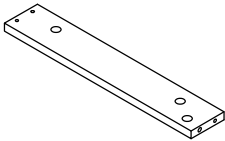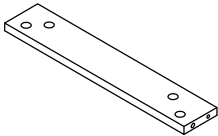			
1278*400*29mm	1276*386*12mm	392*373*51mm	392*373*51mm
⑪ x 1	⑫ x 1	⑬ x 1	⑭ x 1
			
376*373*12mm	280*193*12mm	280*30*12mm	1150*30*12mm
⑮ x 1	⑯ x 3	⑰ x 3	⑱ x 1
			
1090*288*4.5mm	1230*289*4.5mm	1235*382*4.5mm	1278*80*14mm
⑲ x 4	⑳ x 1	㉑ x 1	㉒ x 1
			
1246*68*14mm	385*68*14mm	385*68*14mm	370*68*14mm
㉓ x 1	㉔ x 1	㉕ x 1	㉖ x 1

Assembly Instructions

There are 2 boxes of this product


















BOX-2: N721P504660

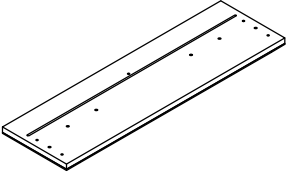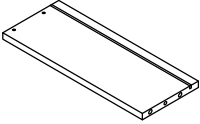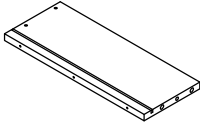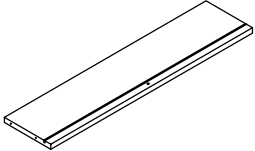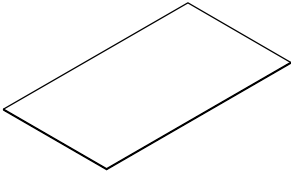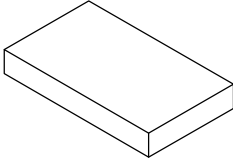 563*166*15mm	 300*120*12mm	 300*120*12mm	 520*120*12mm
②7 x 4	②8 x 4	②9 x 4	③0 x 4
 528*295*2.5mm	 287*50*12mm		
③1 x 4	③2 x 4	Hardware Pack X2	

Components-Fittings






Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

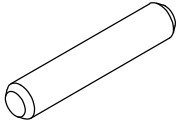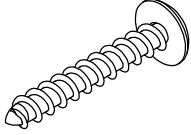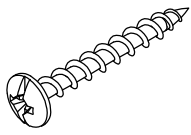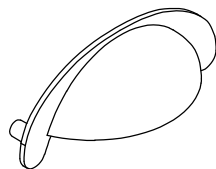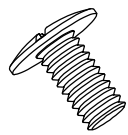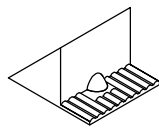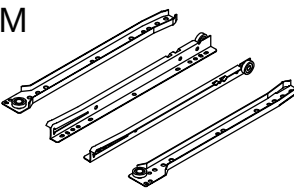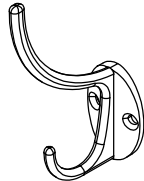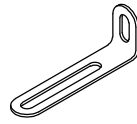
A  Ø6*34mm Cam Bolt x 115	B  Ø15*9.5mm Cam Lock x 115	C  6*30mm Dowel x 94	D  4*25mm Screw x 3
E  4*38mm Screw x 18	F  86*35*30mm Handle x 8	G  5/32*8mm Handle Bolt x 16	H  15*15*10mm Back panel buckle x 42
I  3*16mm Screw x 42	J  45*12*1.2mm Flat Bracket x 2	K  20*20*20mm Corner Bracket x 1	L  3.5*12mm Screw x 66
M  12" Drawer Slide x 4set	N  90*27*50mm Clothes-hook x 6	O  Ø20 Paper sticker x 50	P  Ø6*29mm Anchor x 2
Q  72*15*25mm Anti- tip L Bracket x 2	R  4*14mm Screw x 2		

Components-Fittings


“Please note that the shapes of screws D and E and I and L and R are similar. Please install according to the instructions and distinguish them.”

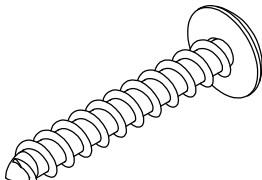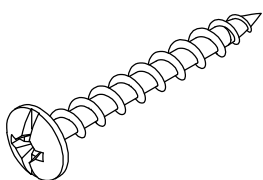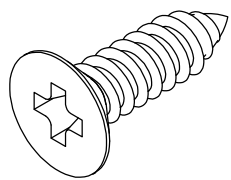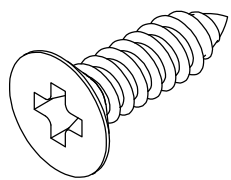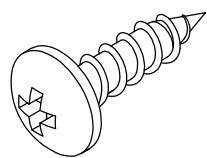D  4*25mm Screw x 3	E  4*38mm Screw x 18
I  3*16mm Screw x 42	L  3.5*12mm Screw x 66
R  4*14mm Screw x 2	


Step 1

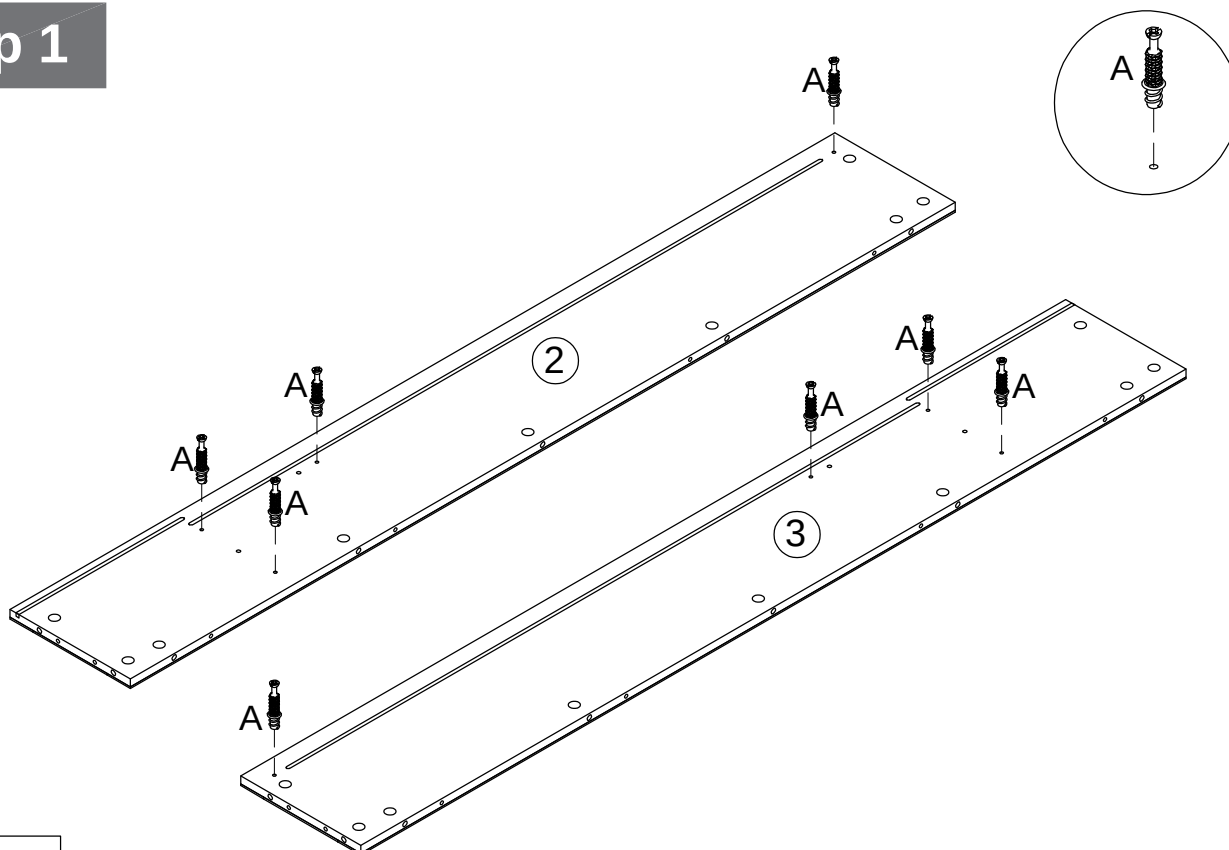


A*8




Step 2

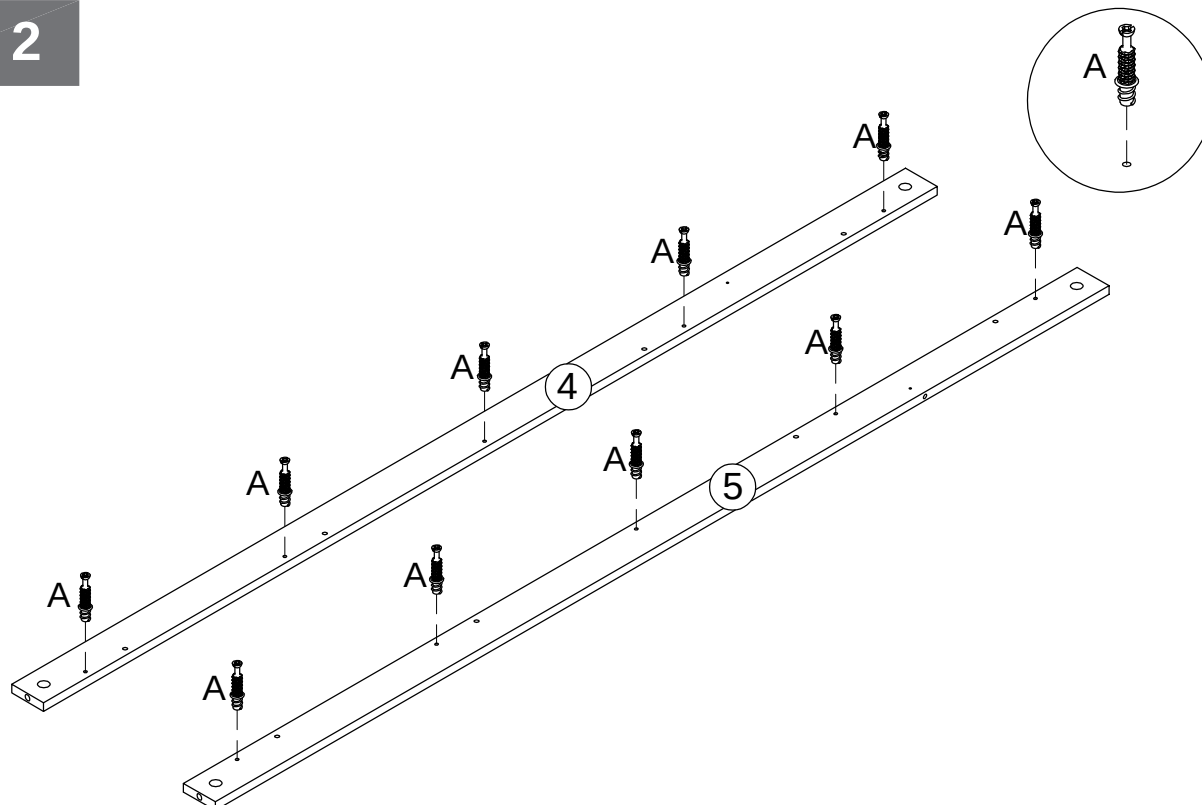

A*10




Step 3

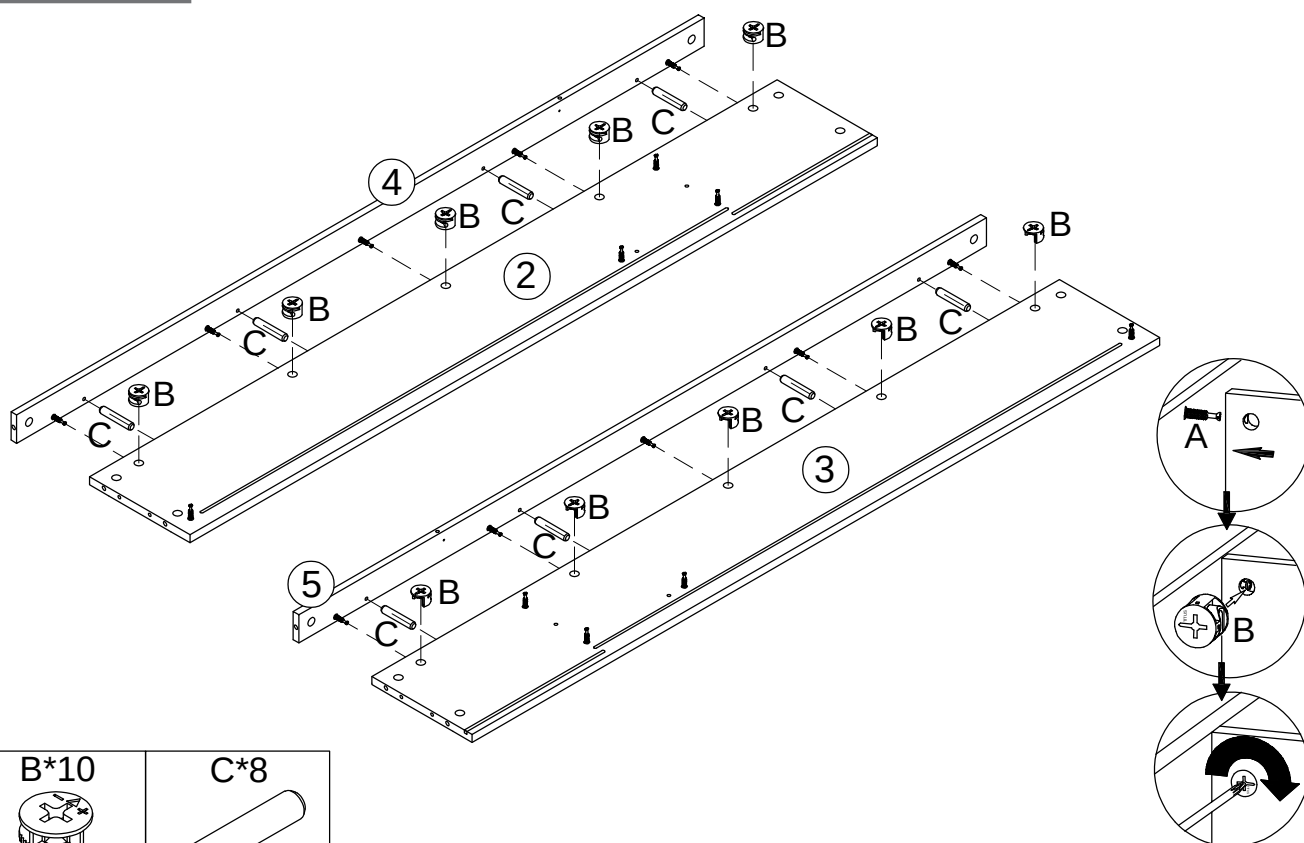


B*10




C*8




Step 4

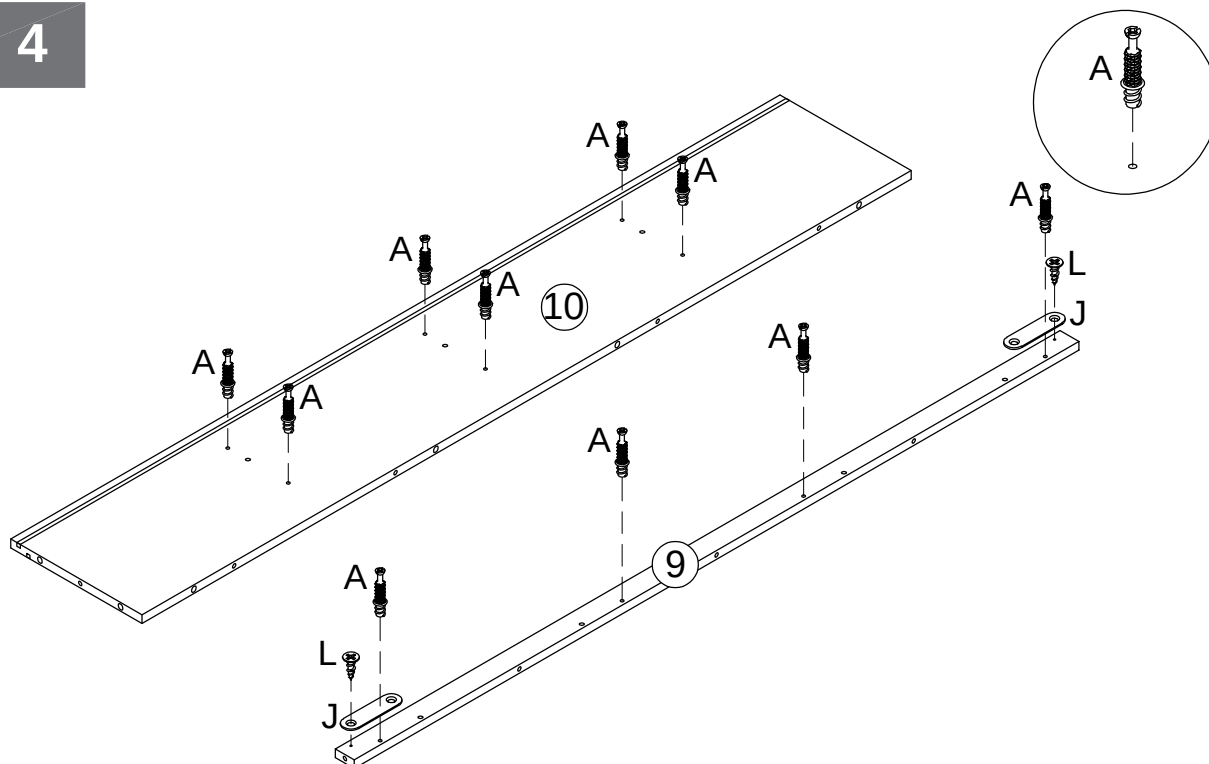

A*10




J*2



L*2





Step 5

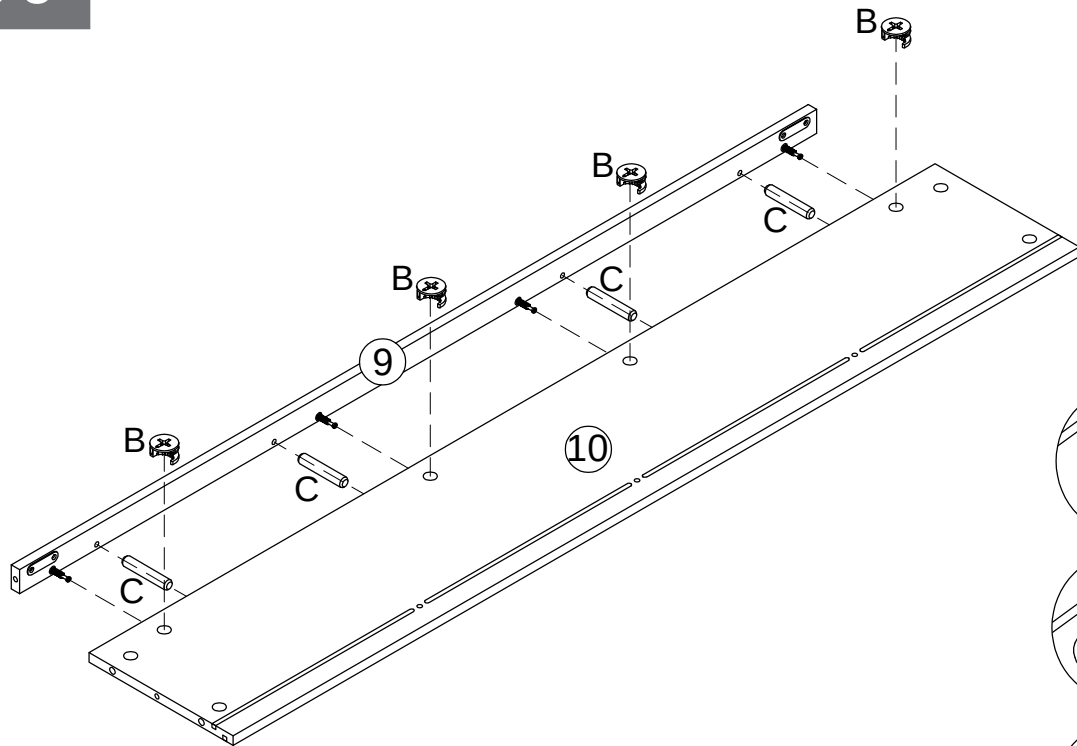


B*4




C*4

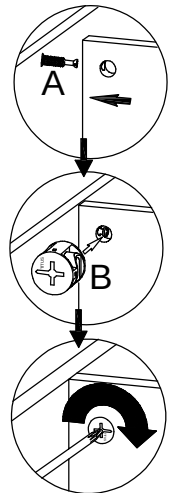


Step 6

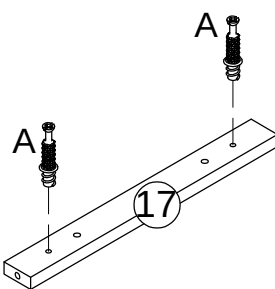

X 3

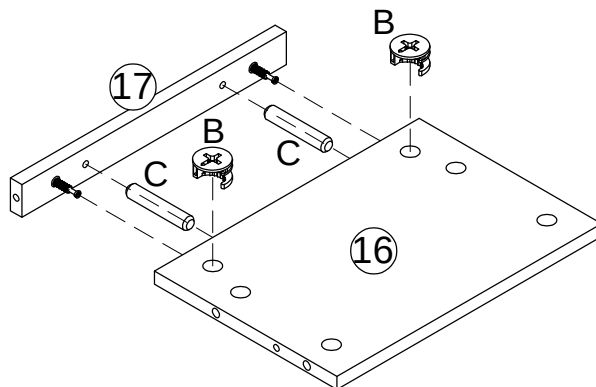




A*6




B*6




C*6

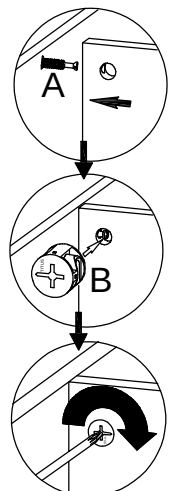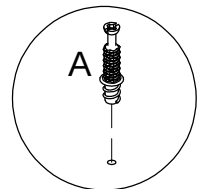

Step 7

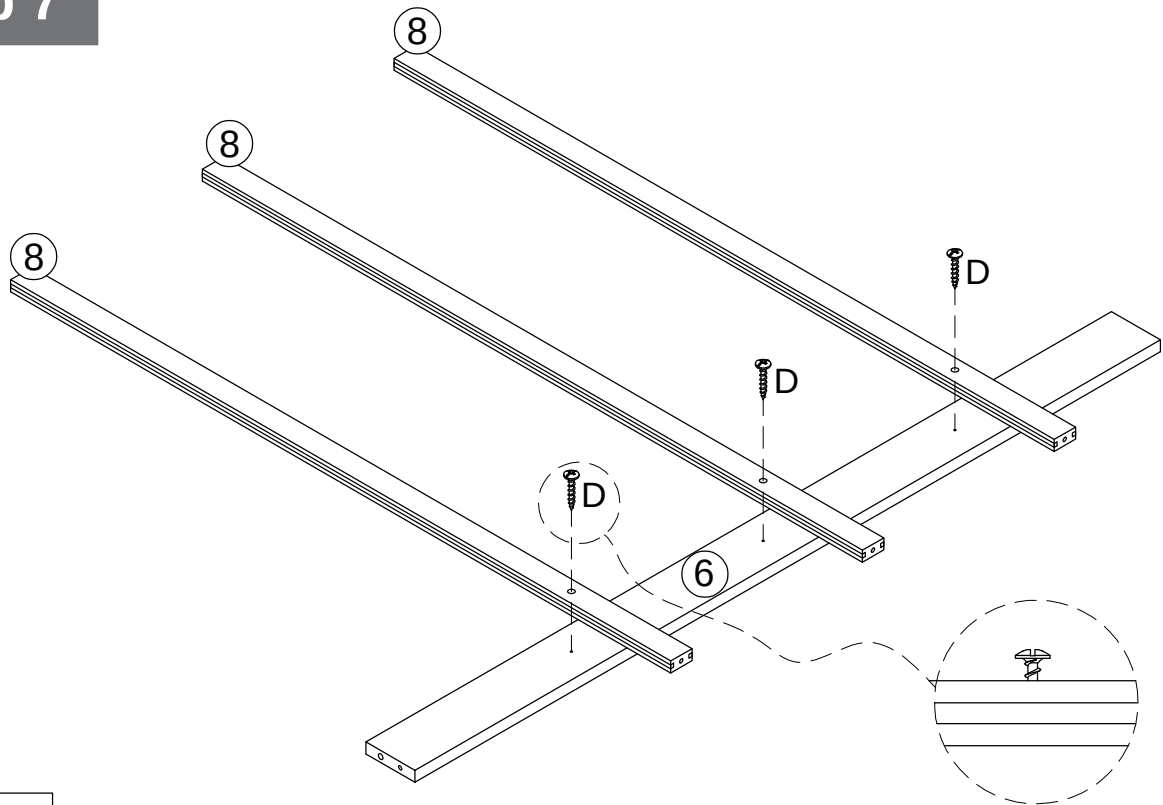


D*3




"Do not fully tighten the screws at this step."

Step 8

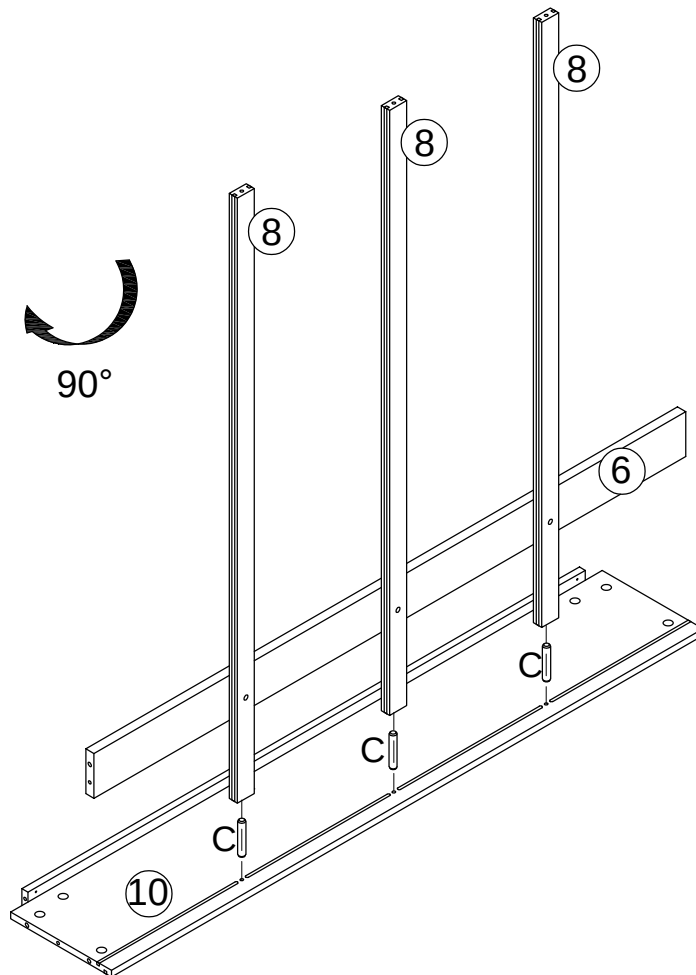


C*3




Step 9

Be careful! At least two people are required here

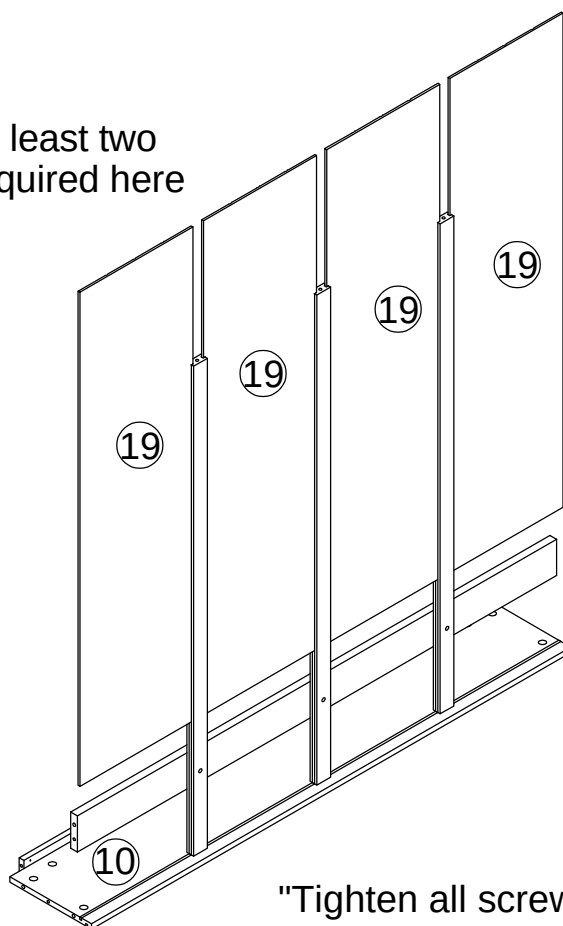


"Tighten all screws securely at this step."

Step 10

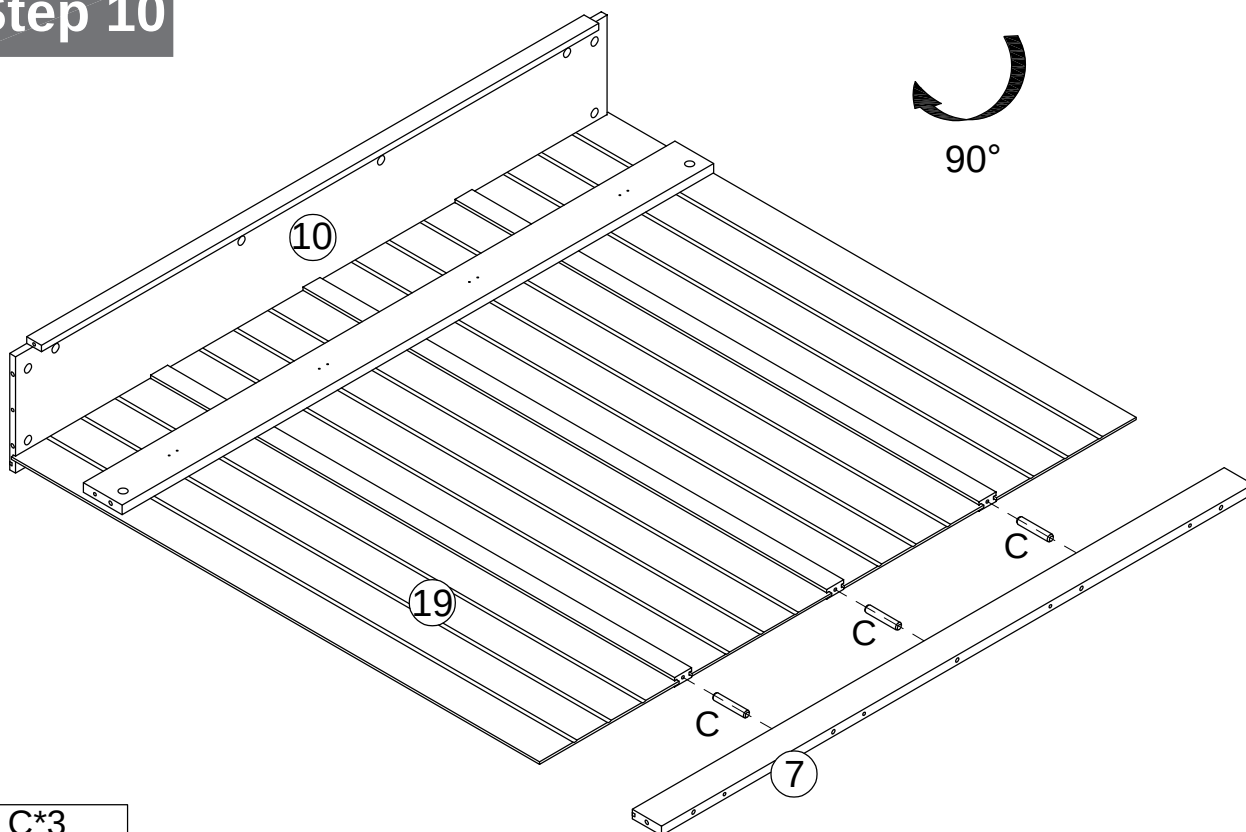


90°

C*3




Step 11

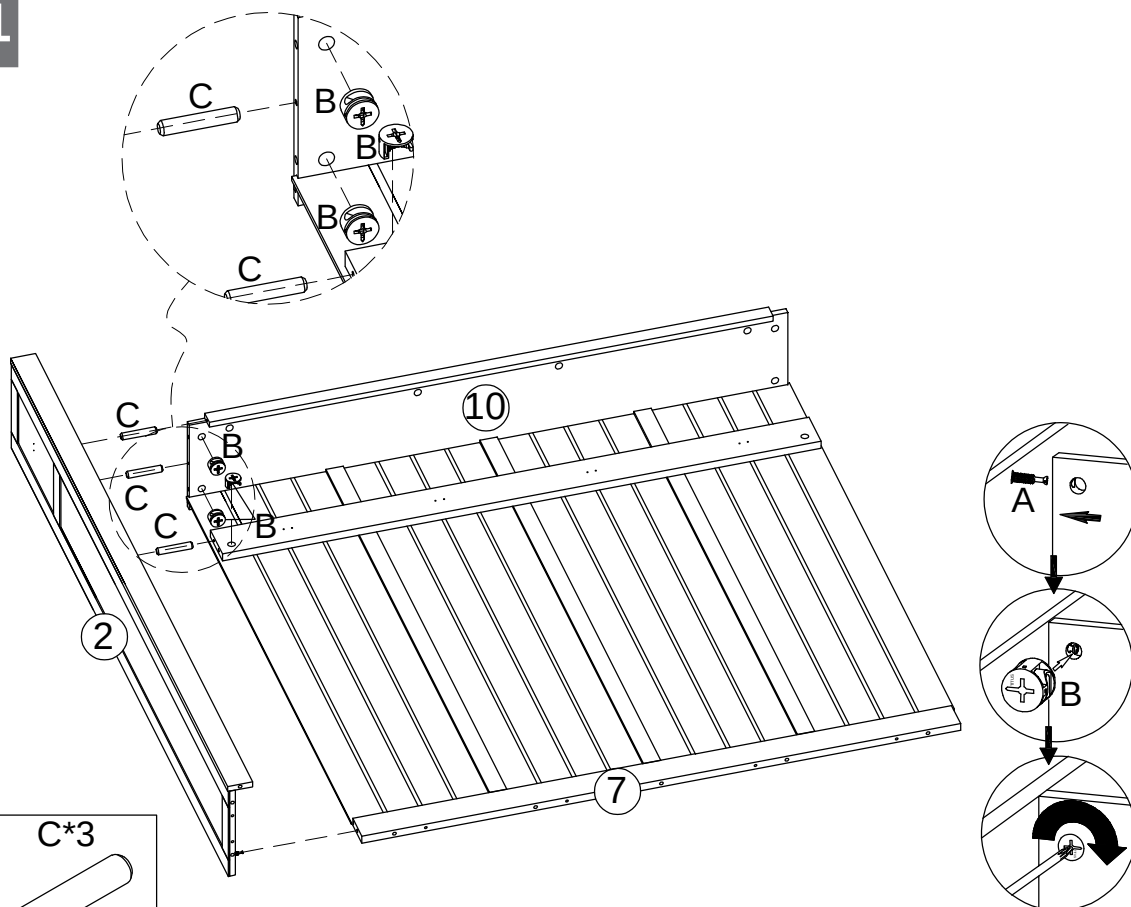


B*3



C*3




Step 12

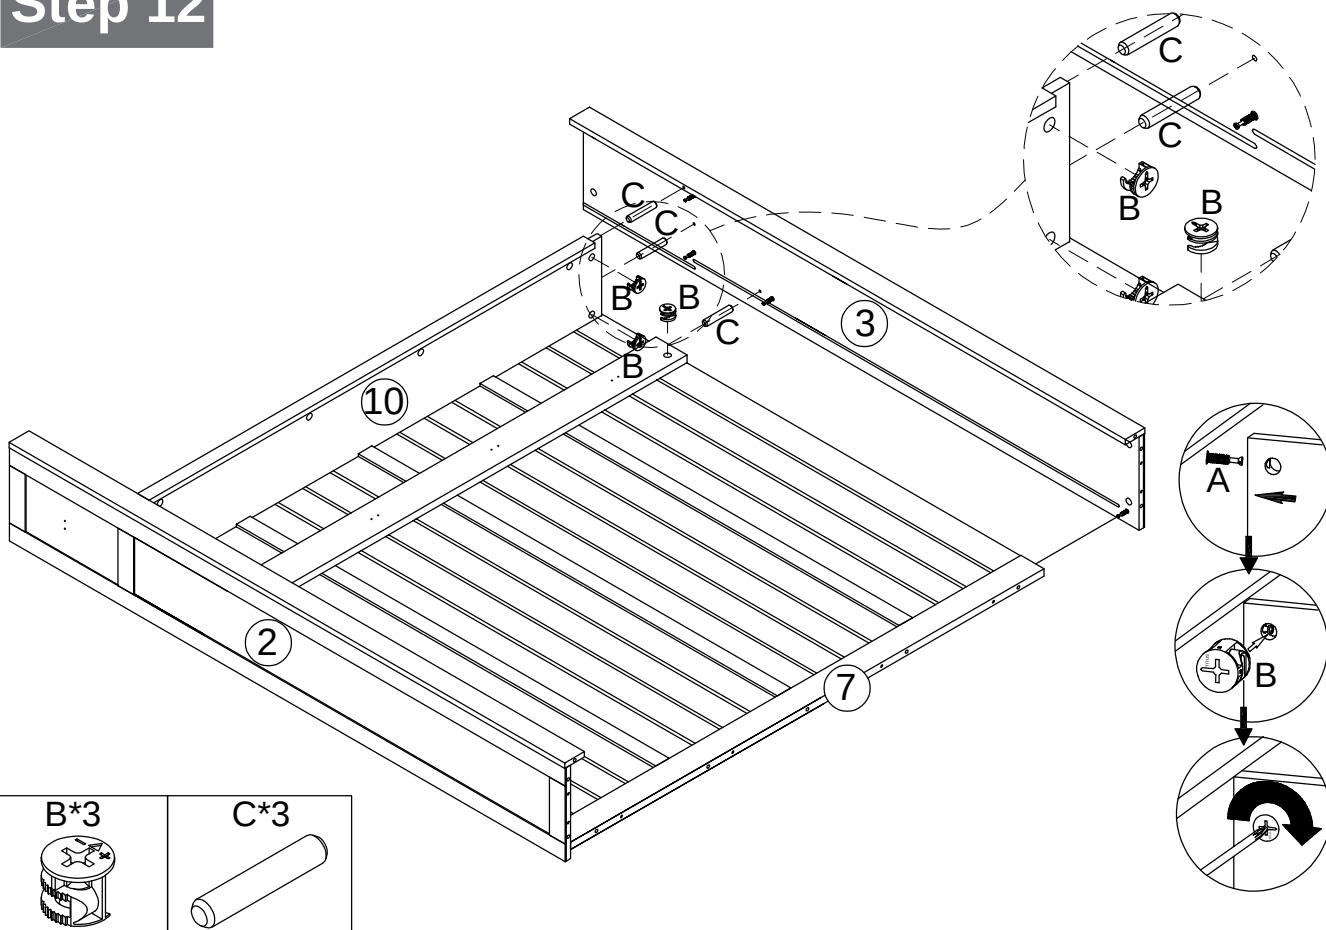

B*3



C*3




Step 13




90°


Be careful! At least two people are required here

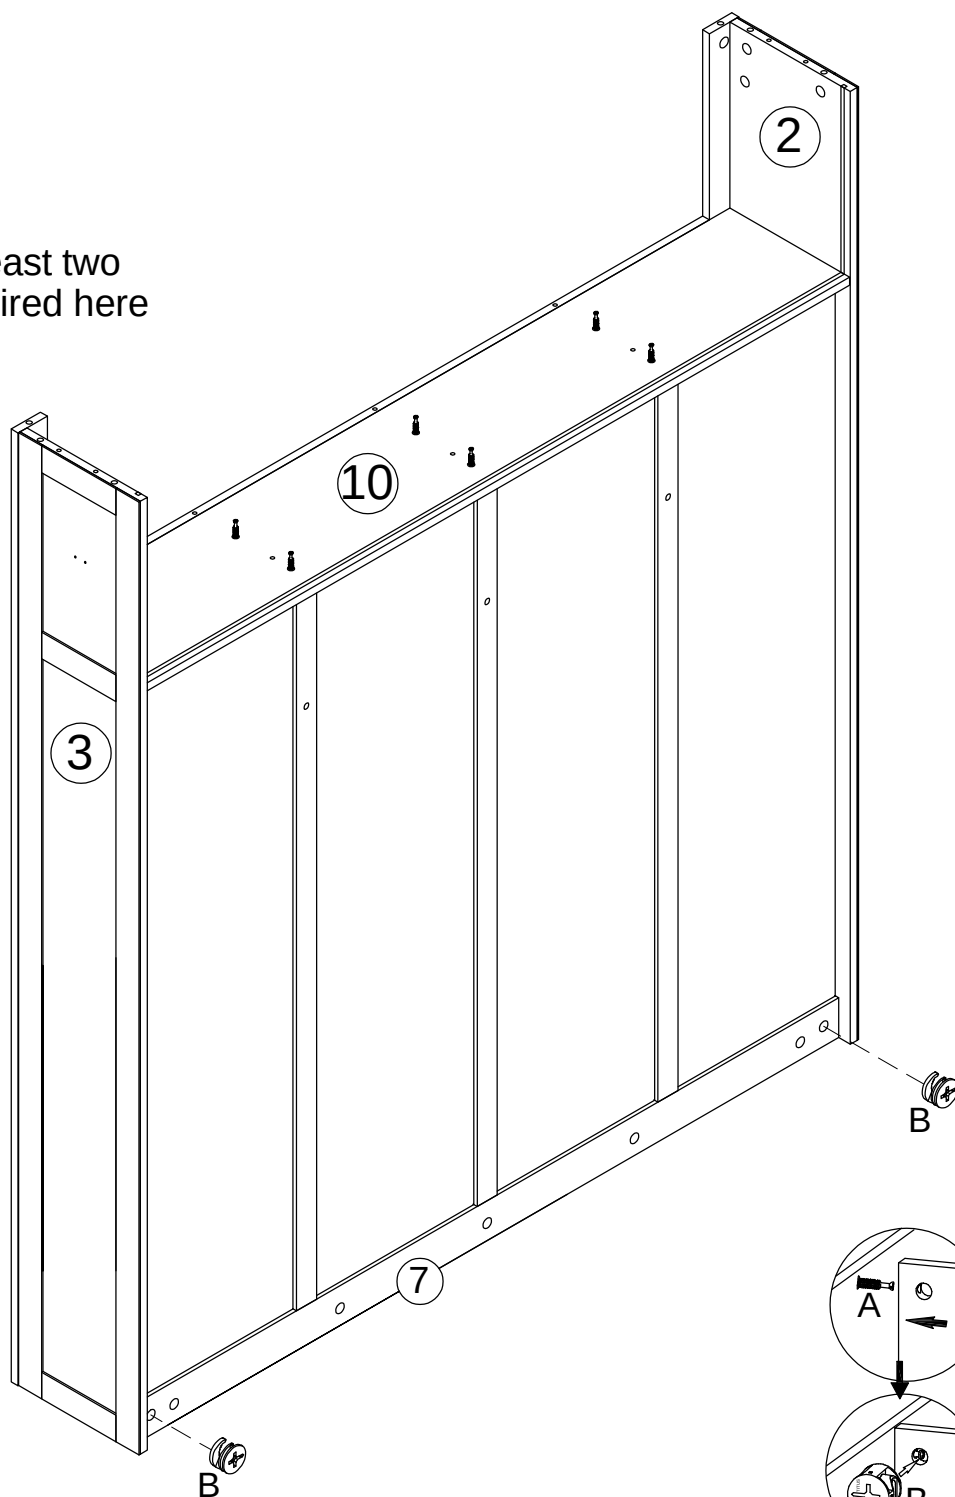

B*2

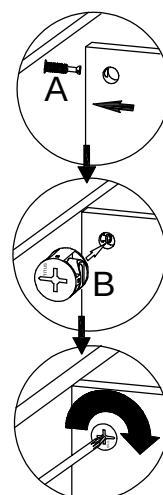


Step 14

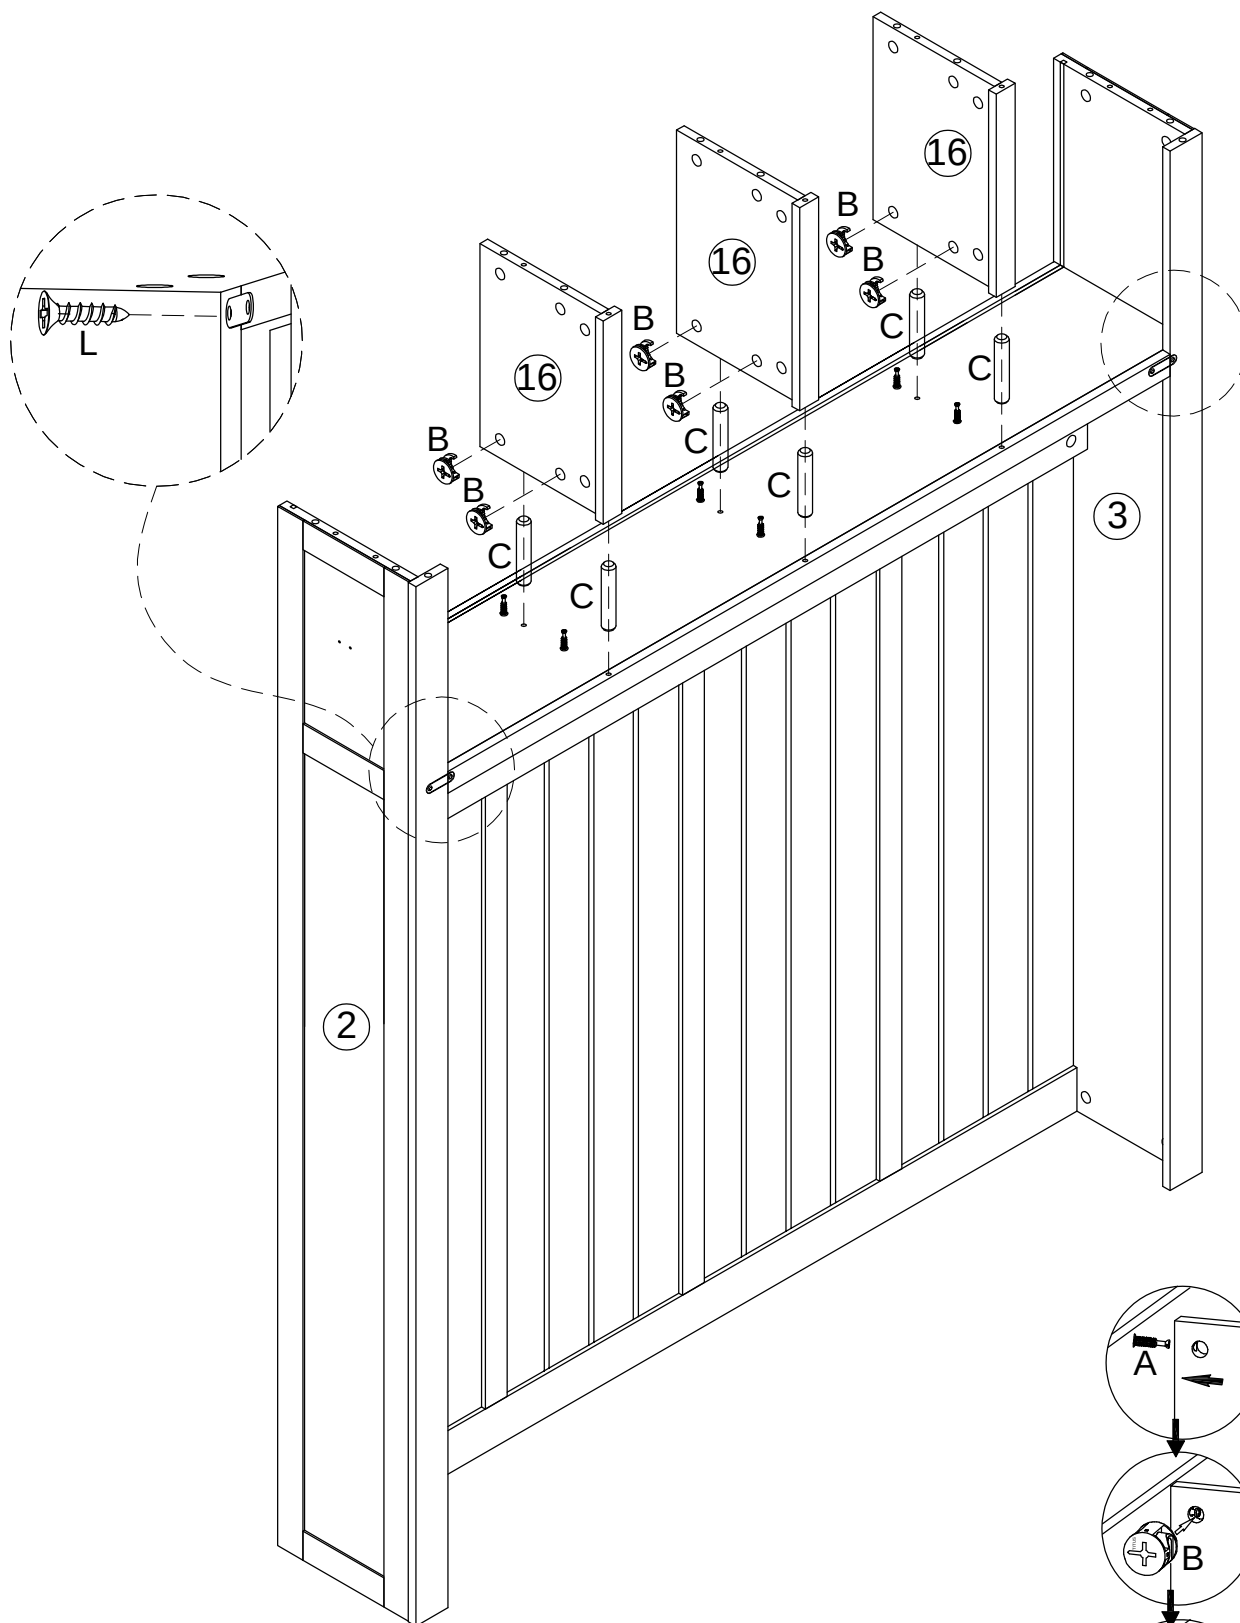


B*6




C*6




L*2

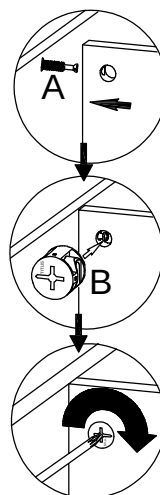


Step 15

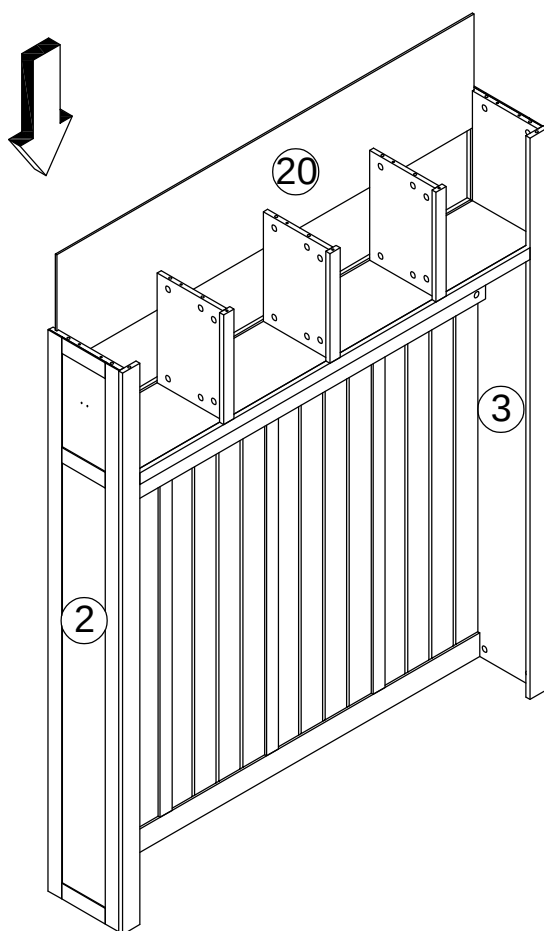

Step 16

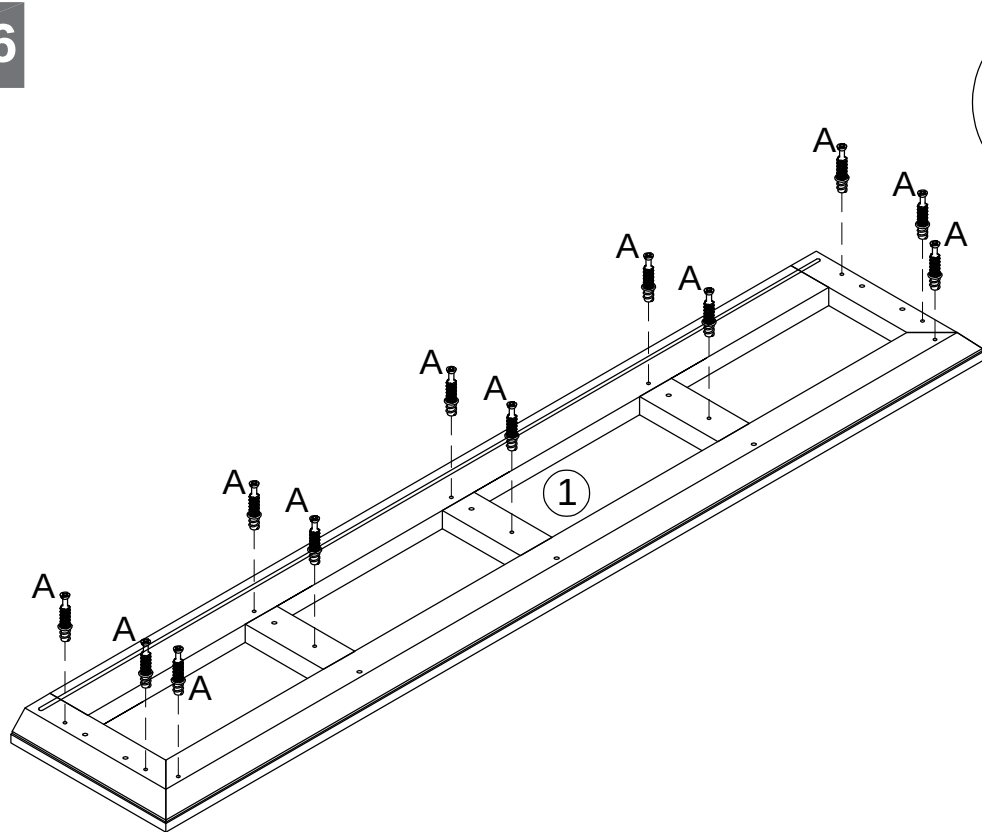


A*12



Step 17



Be careful! At least two people are required here

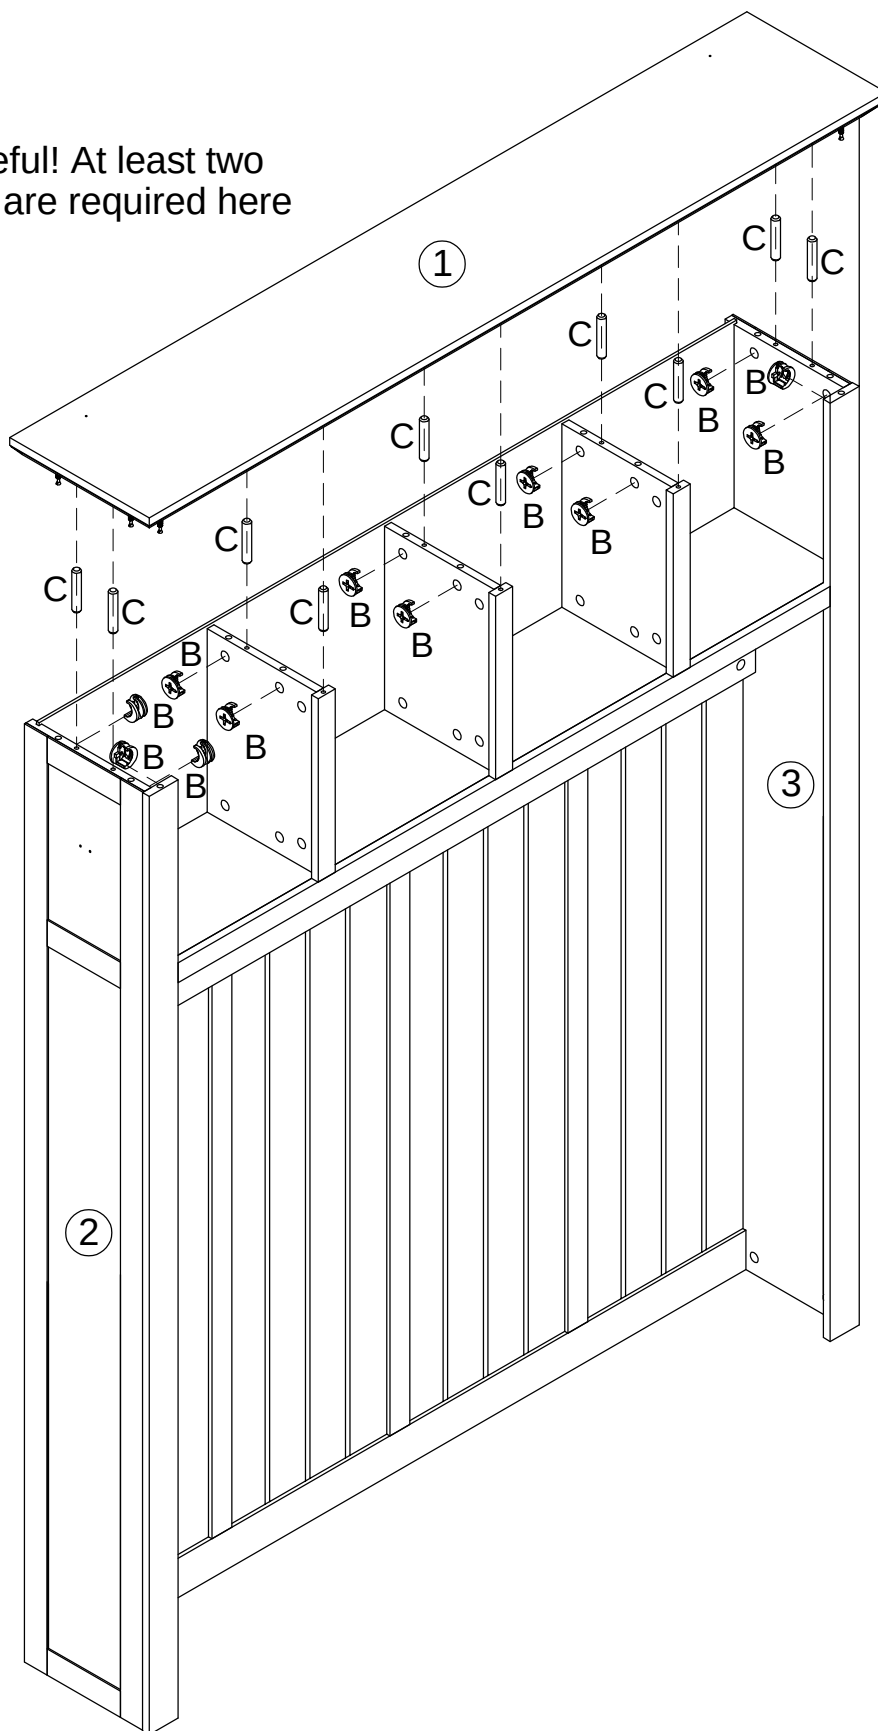


B*12




C*10

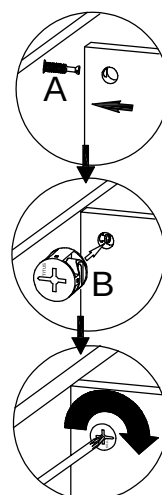


Step 18

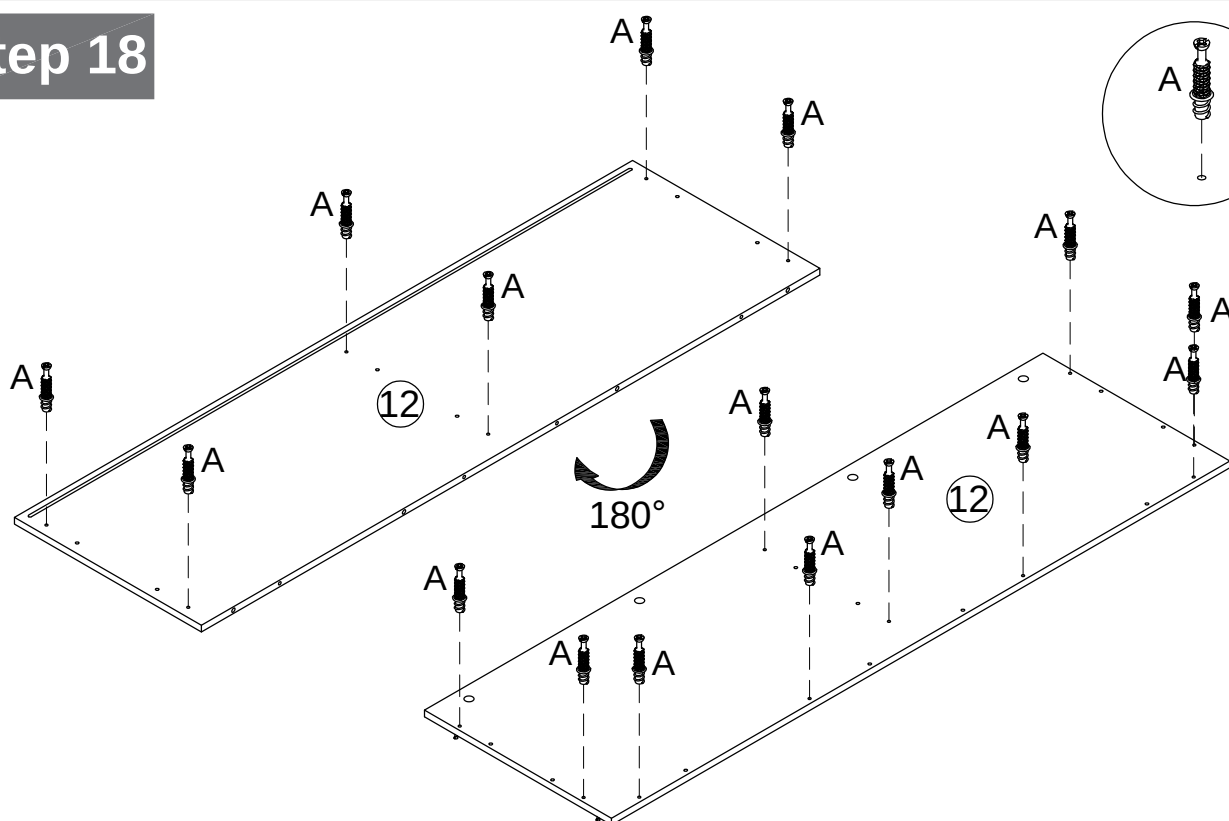


A*16





Step 19

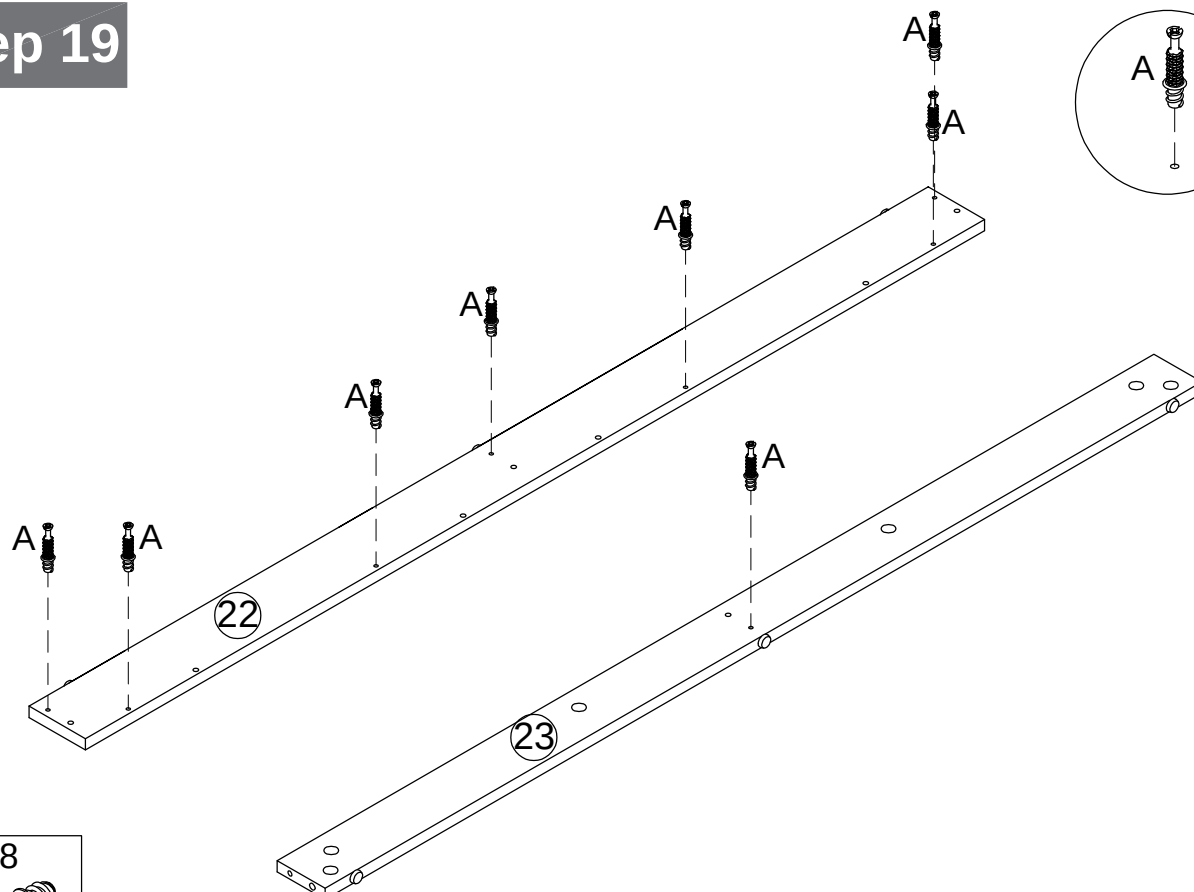


A*8







Step 20

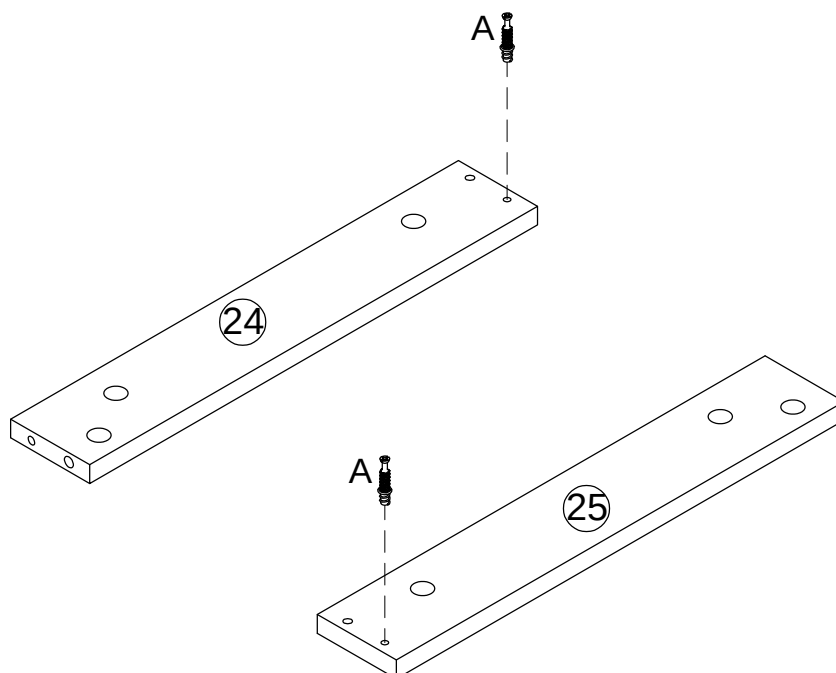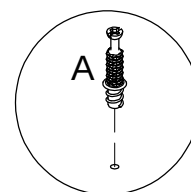

A*2




Step 21

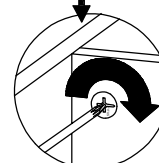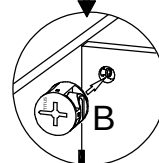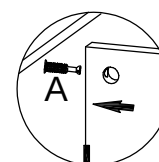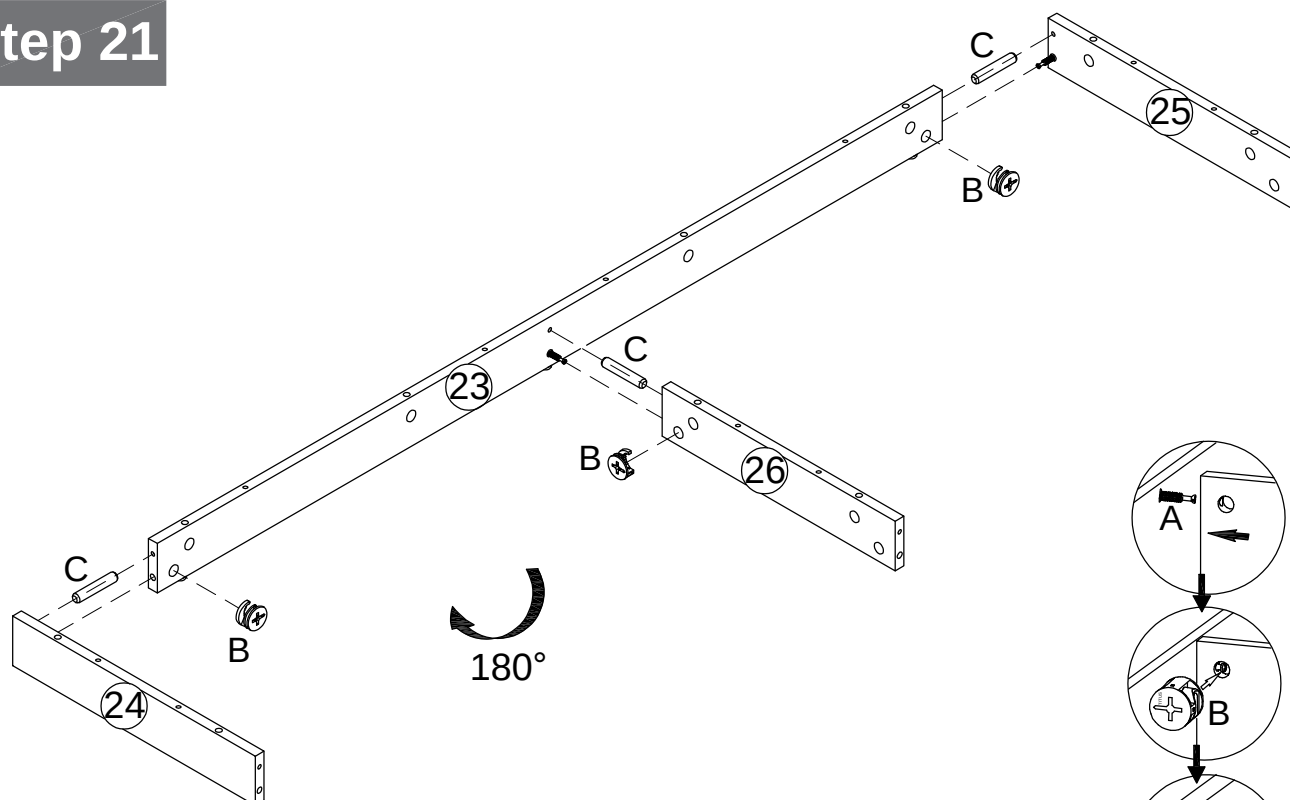


B*3



C*3





Step 22

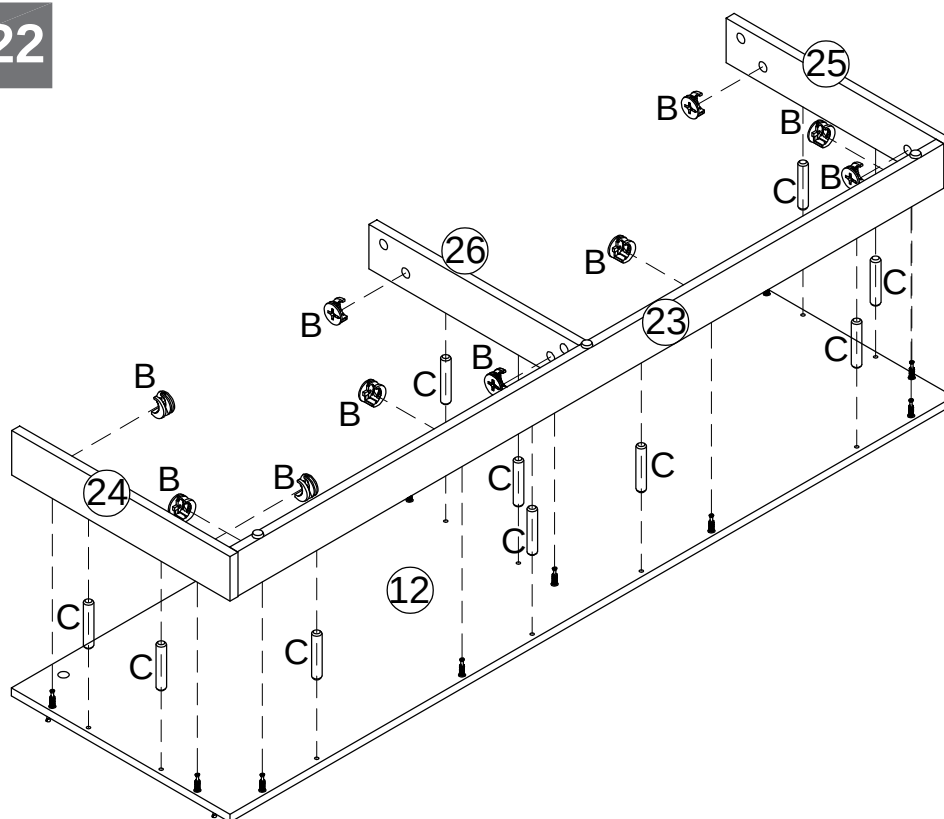


B*10



C*10

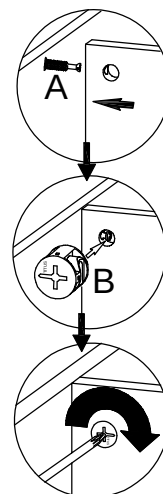


Step 23

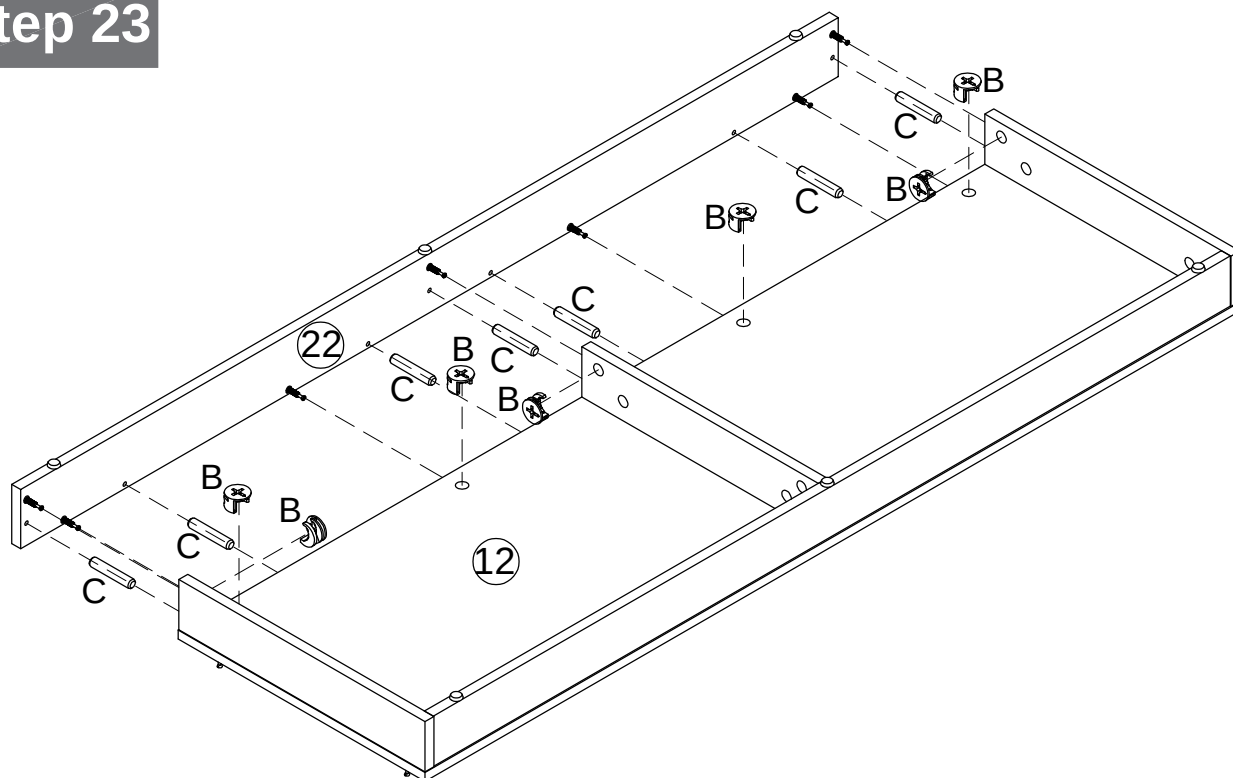



B*7




C*7



Step 24

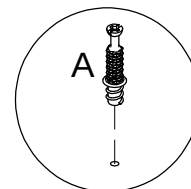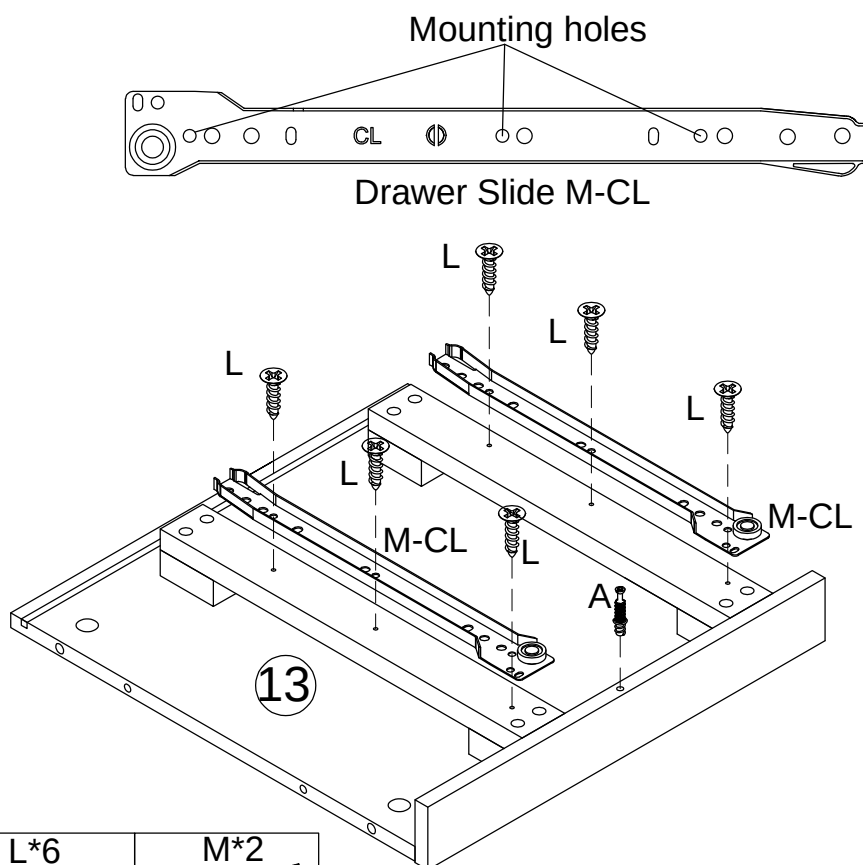

A*1





L*6




M*2



Step 25

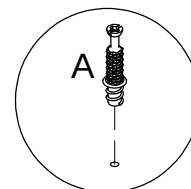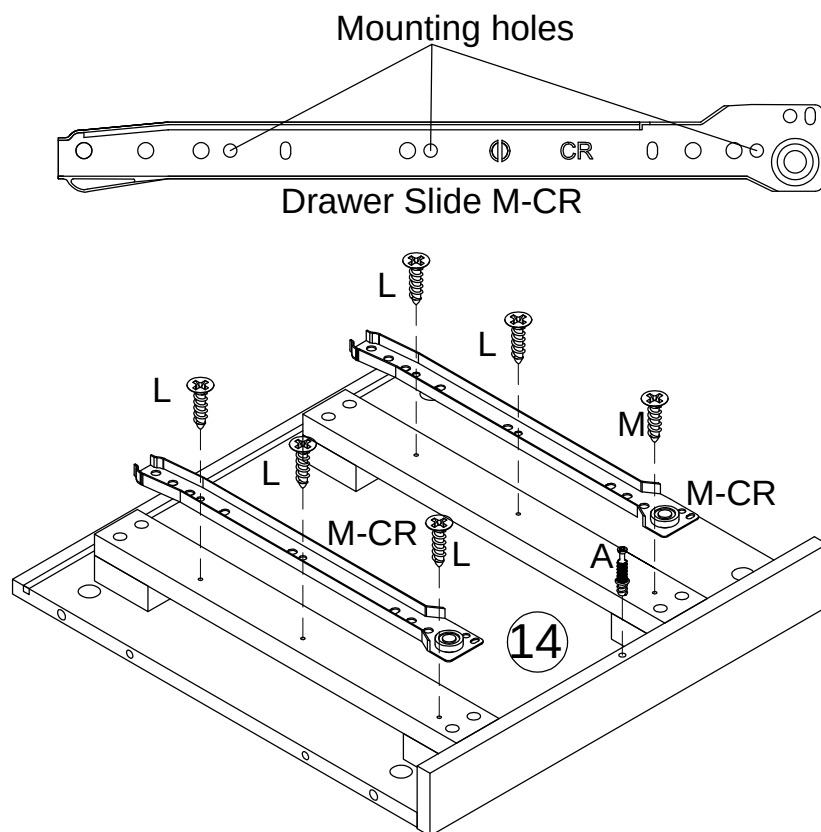


A*1




L*6



M*2




Step 26

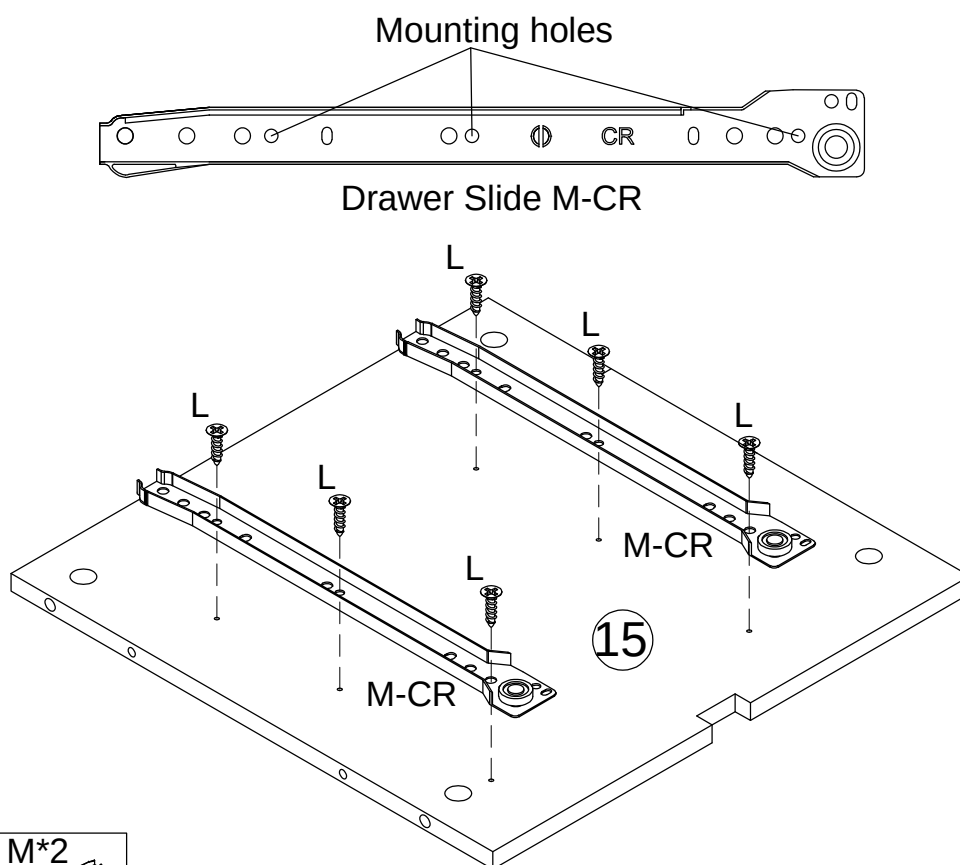


L*6



M*2




Step 27

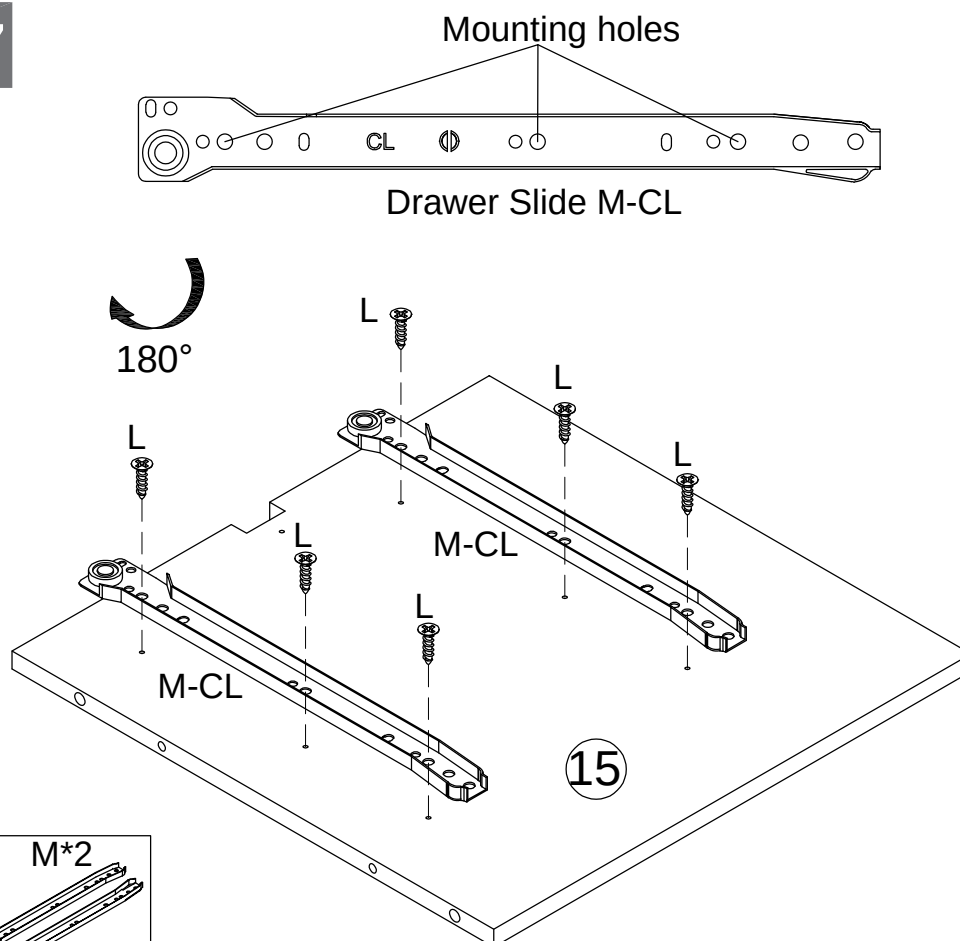


L*6



M*2




Step 28

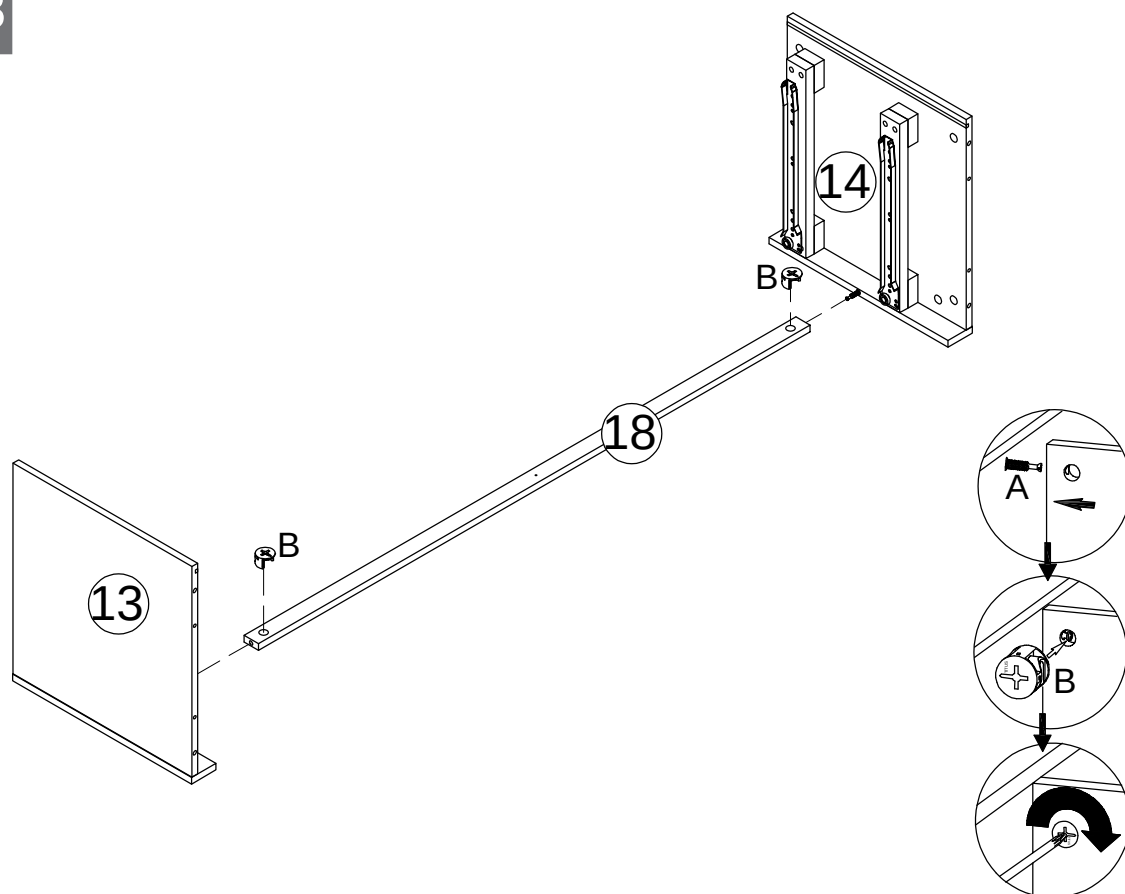

B*2



Step 29

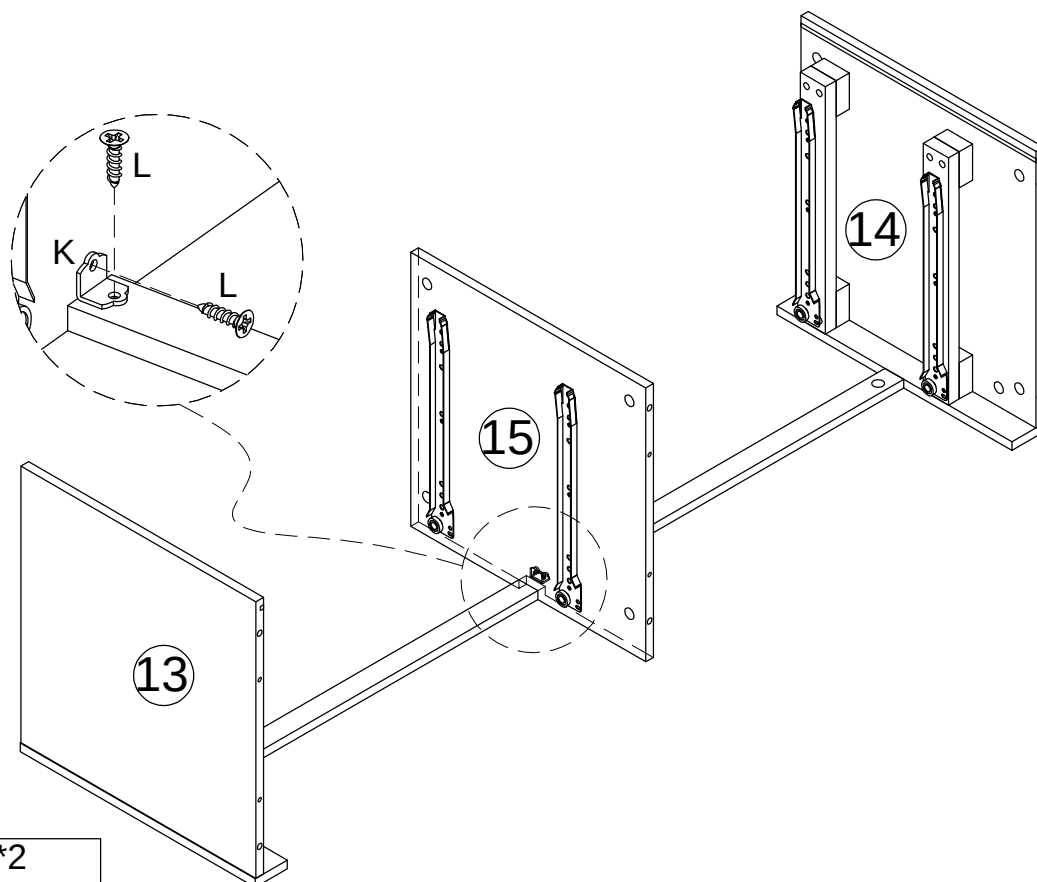

K*1





L*2



Step 30


Be careful! At least two people are required here

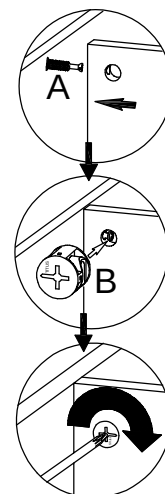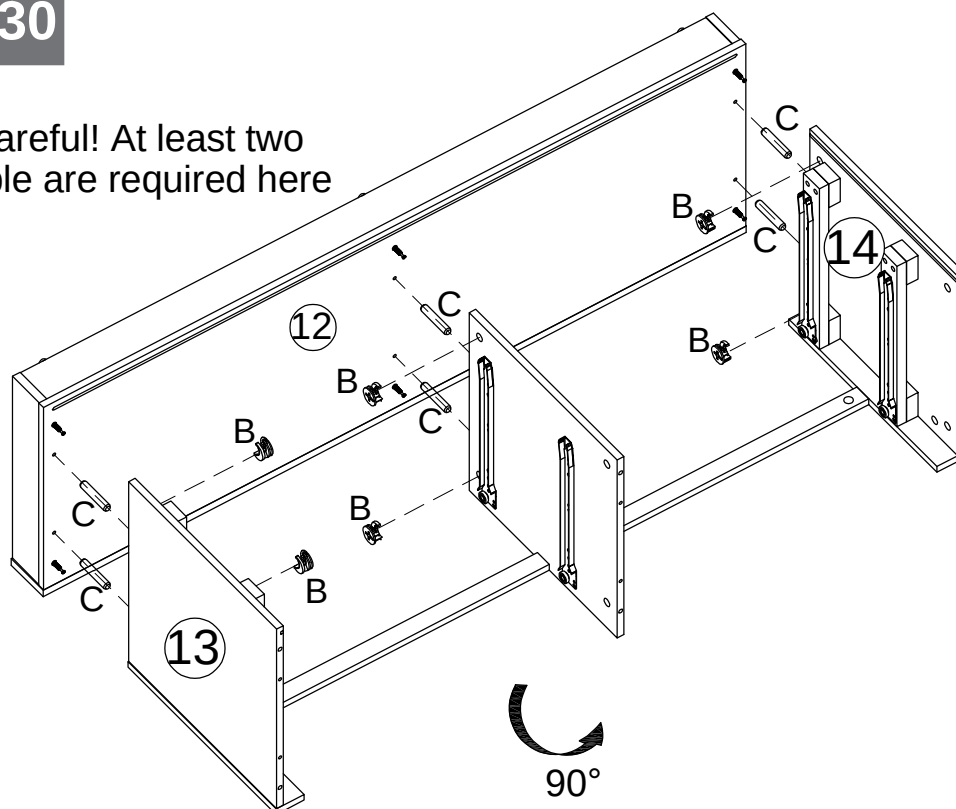


B*6




C*6




Step 31

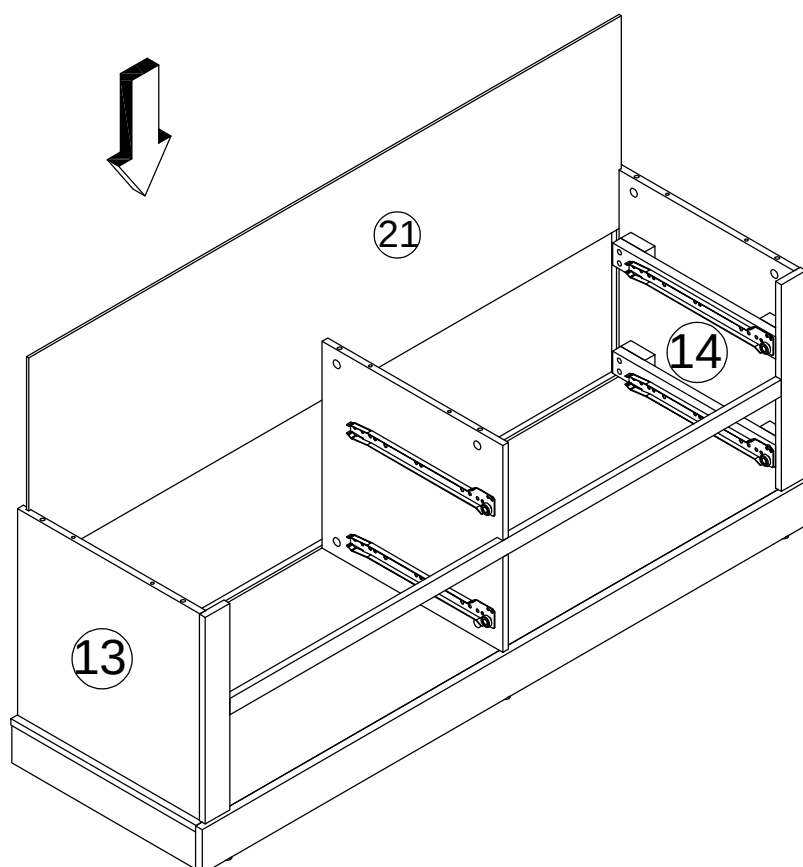


Step 32

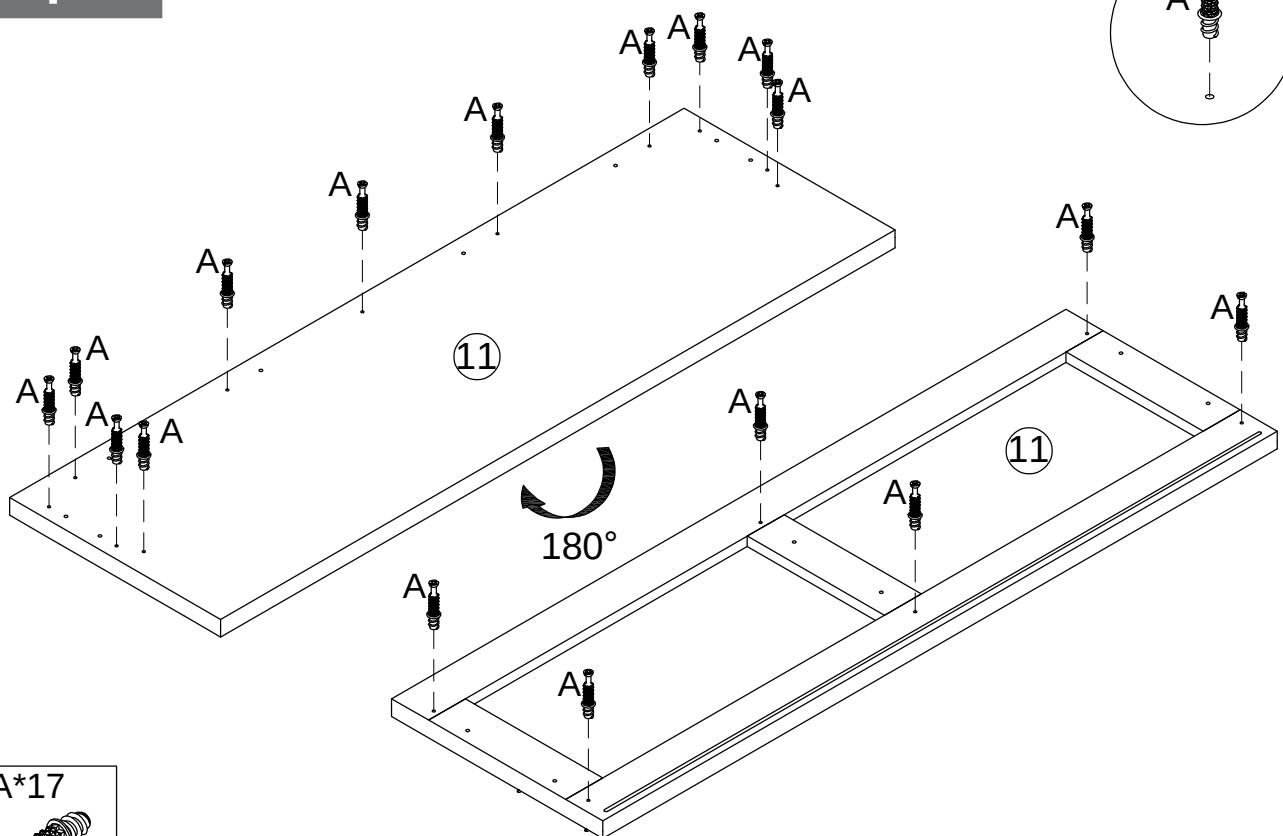

A*17





Step 33

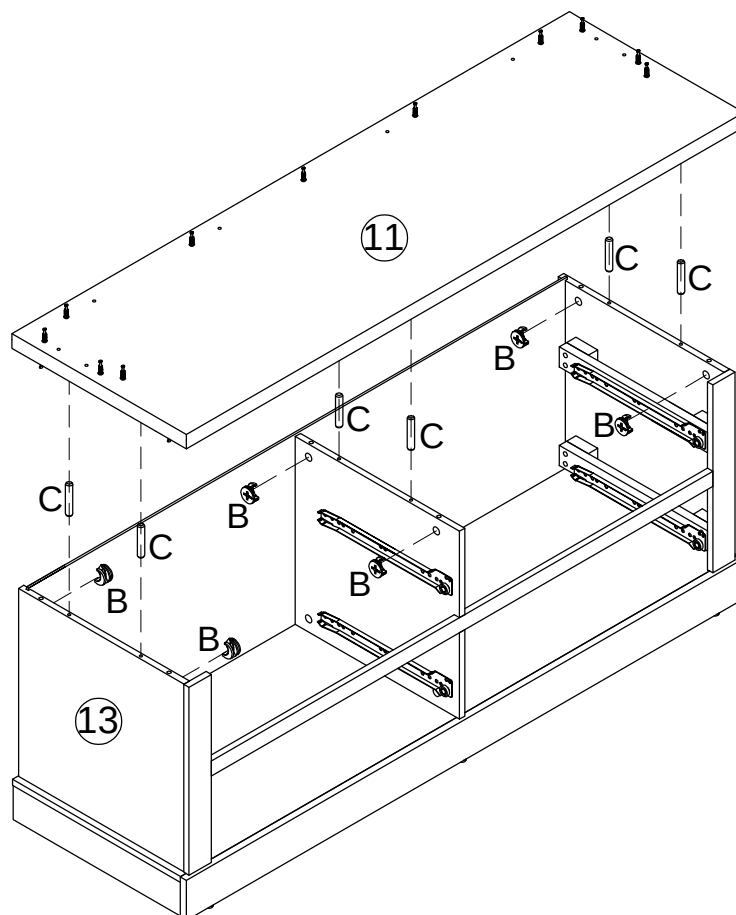

B*6




C*6

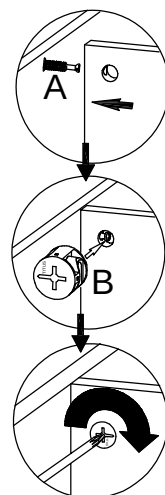

Step 34



Be careful! At least two people are required here

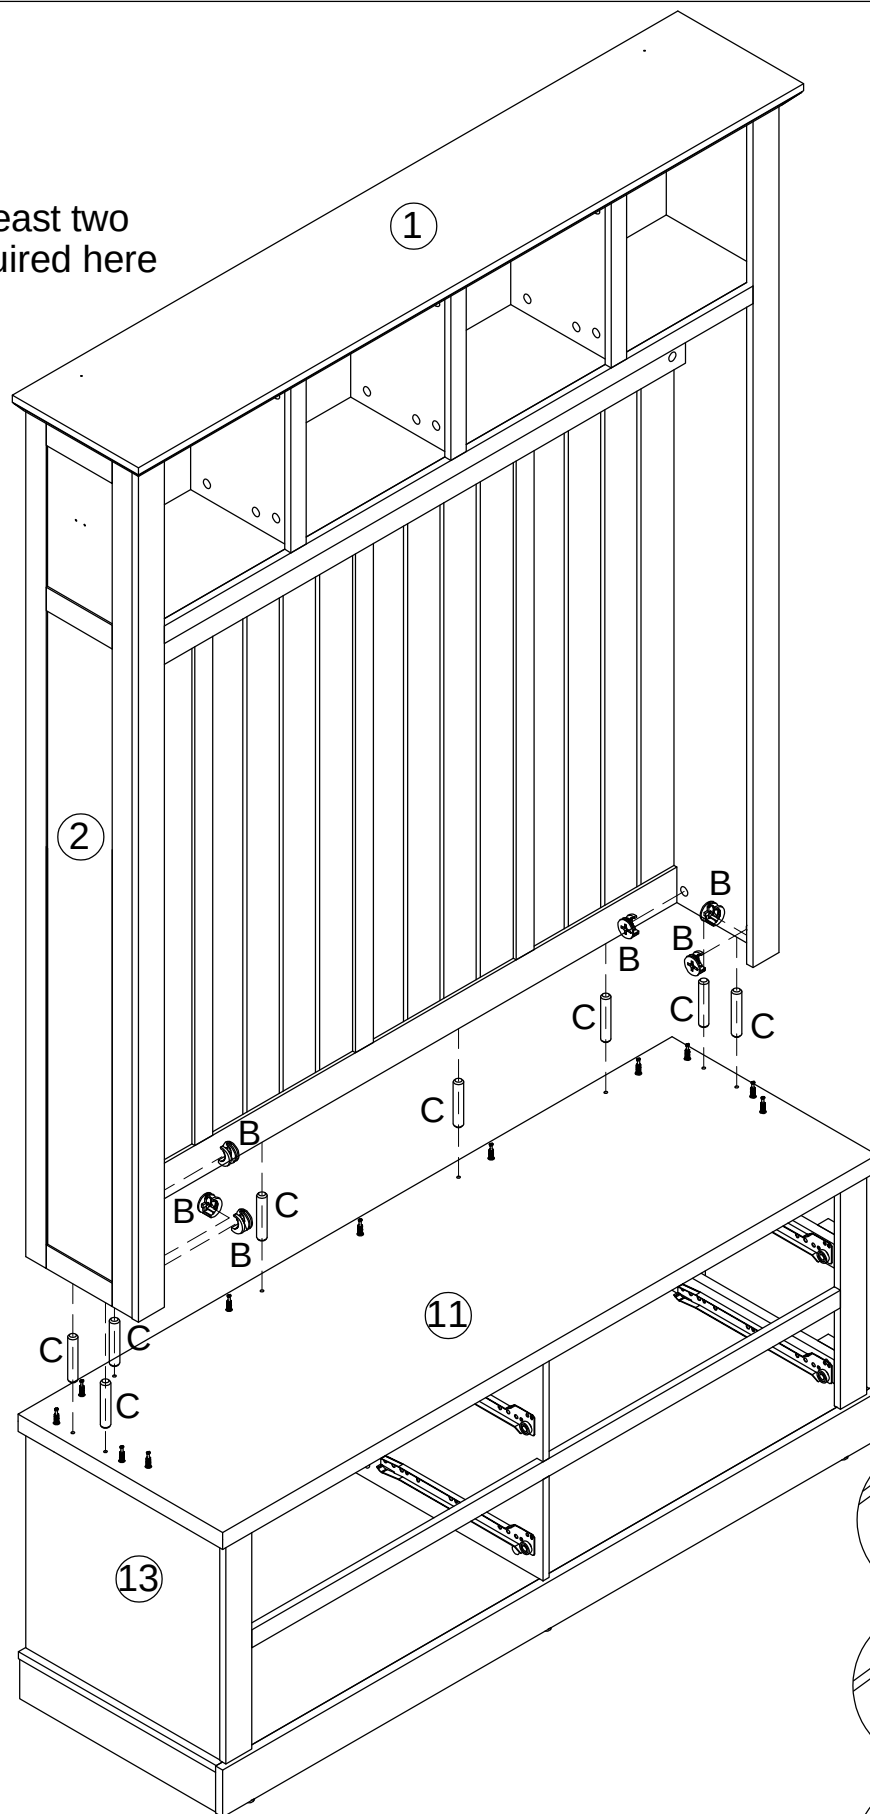



B*6



C*8

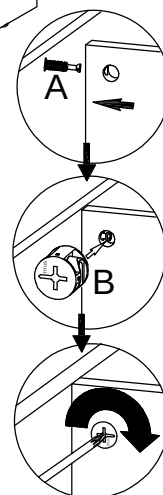


Step 35

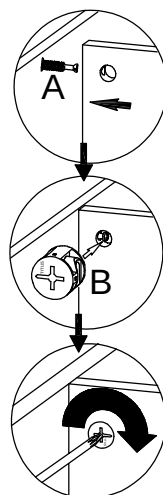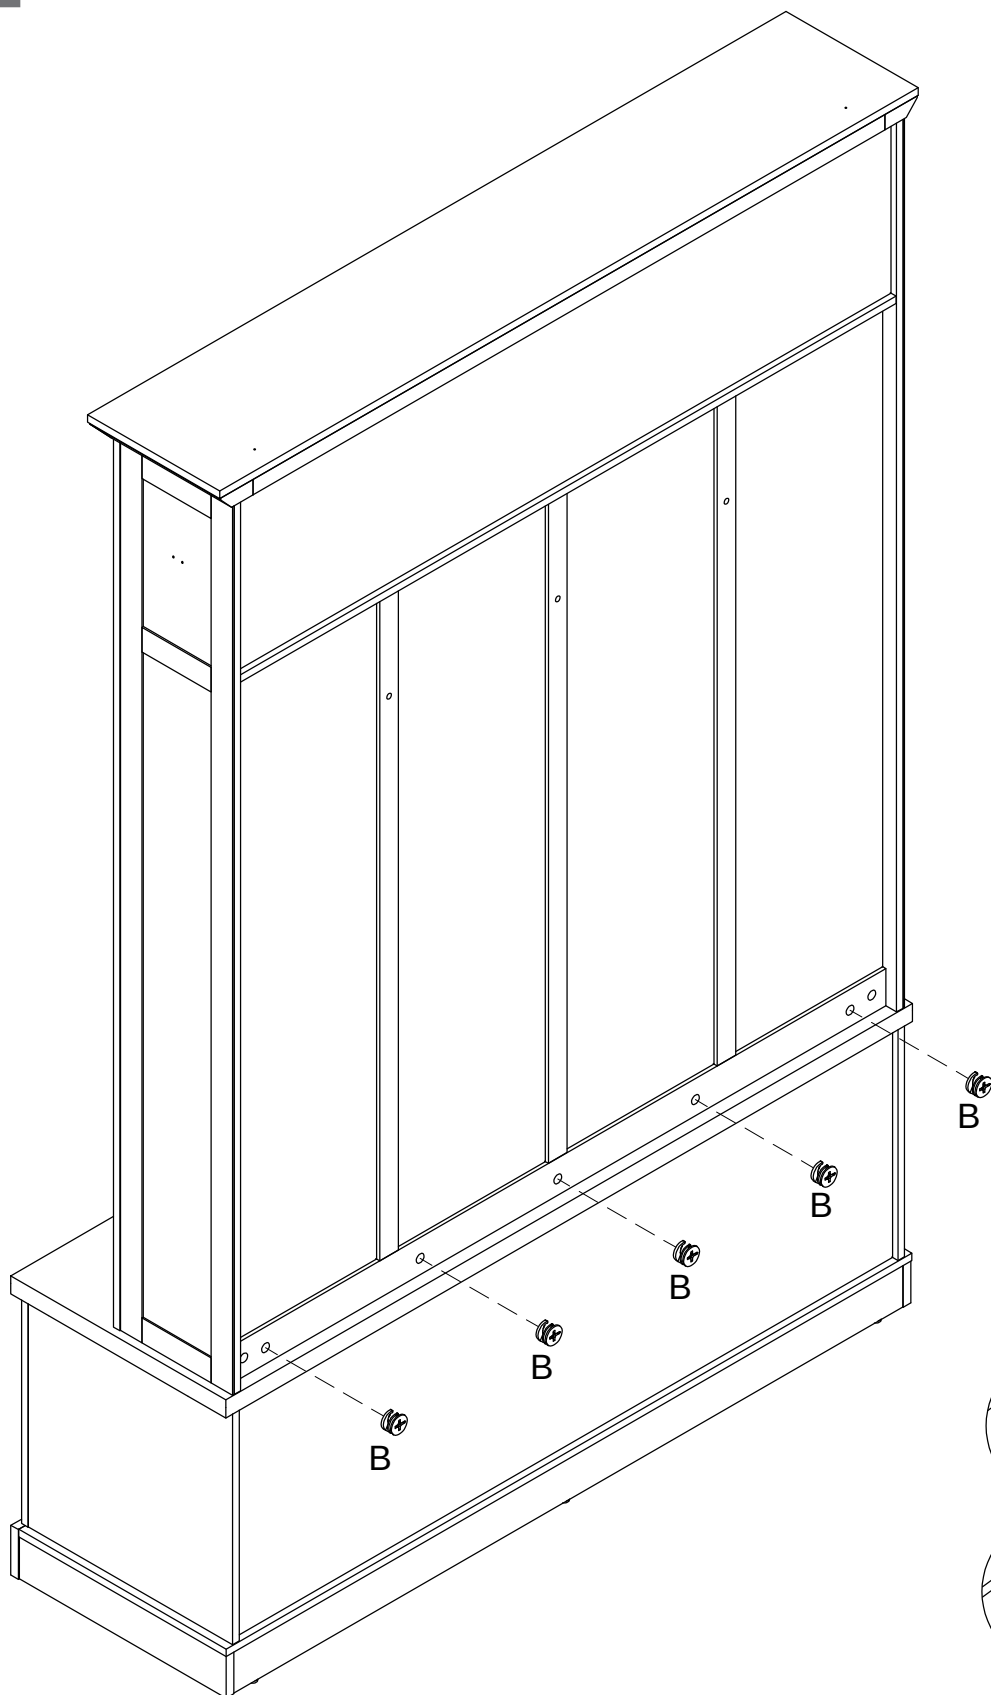


B*5



Step 36

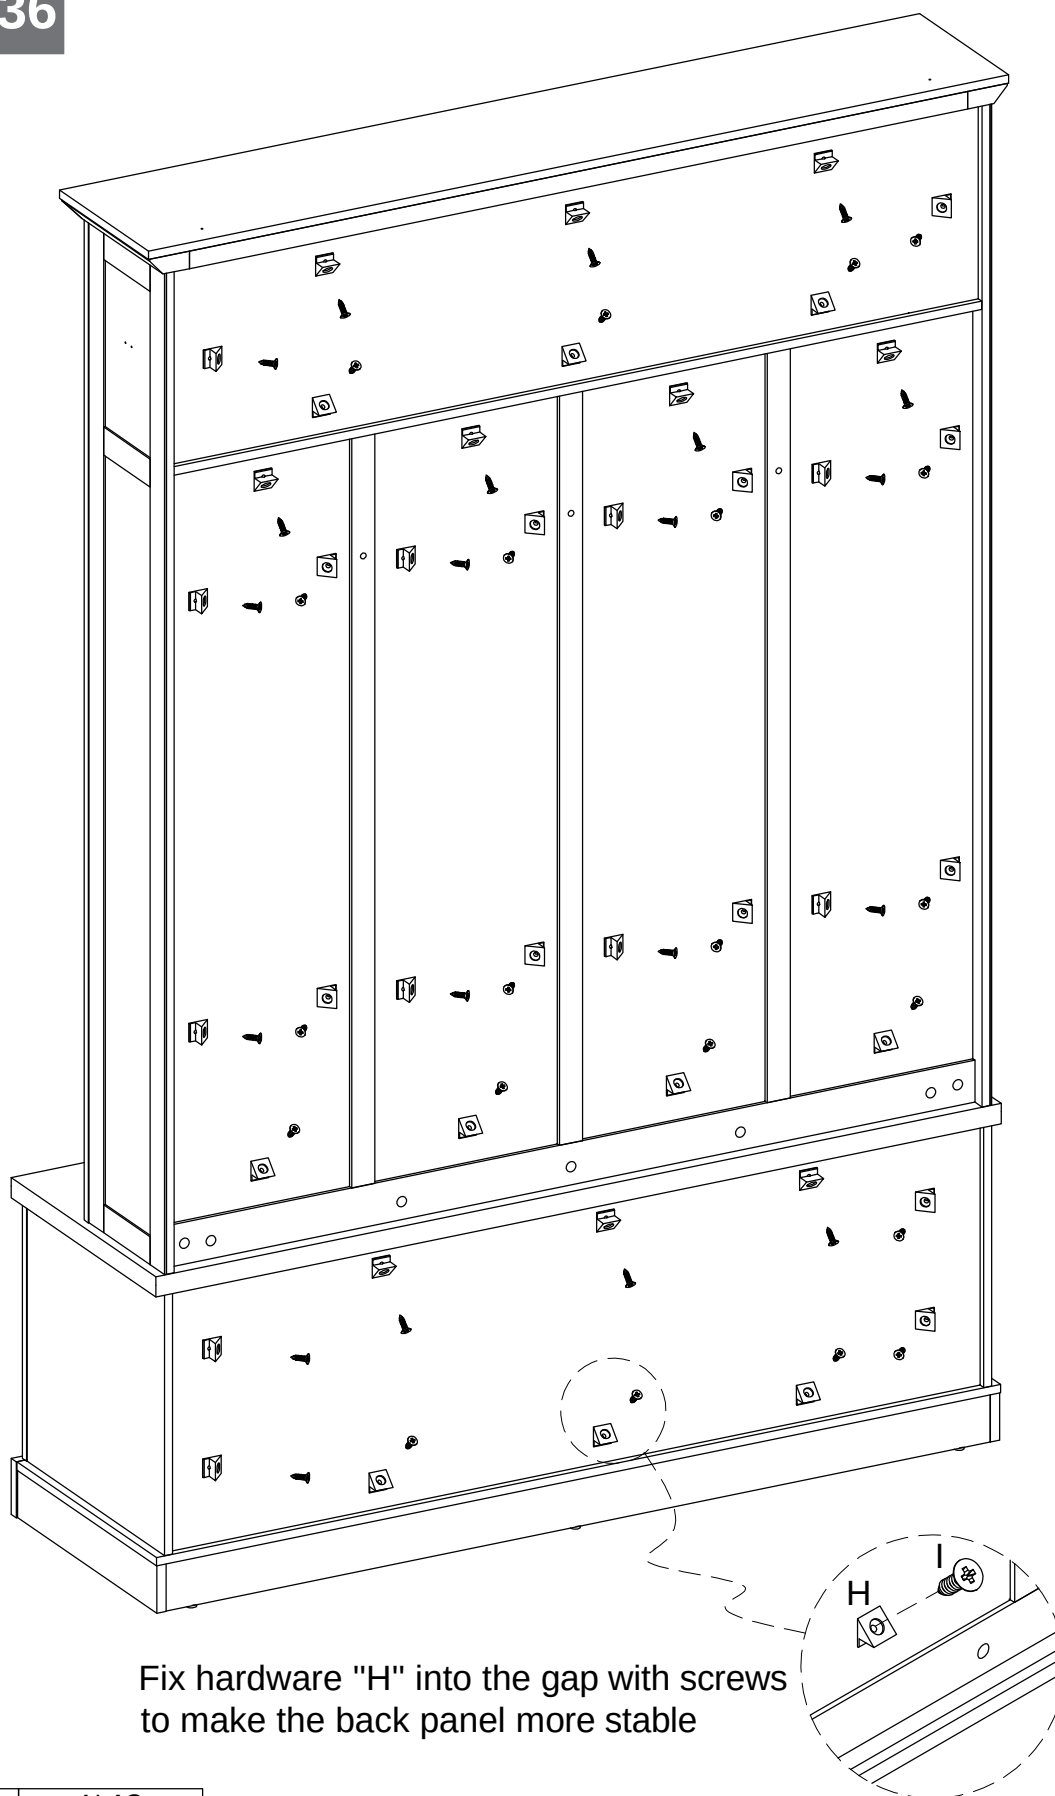


H*42



I*42



Step 37

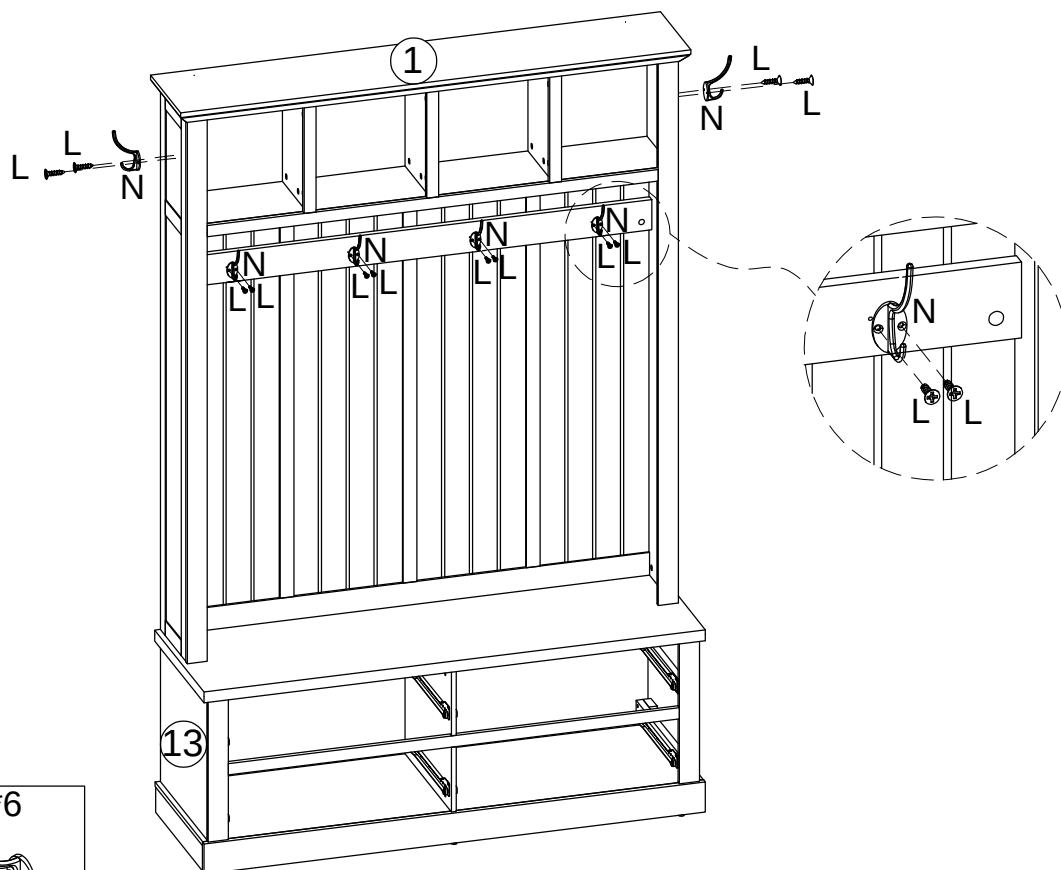


L*12



N*6




Step 38

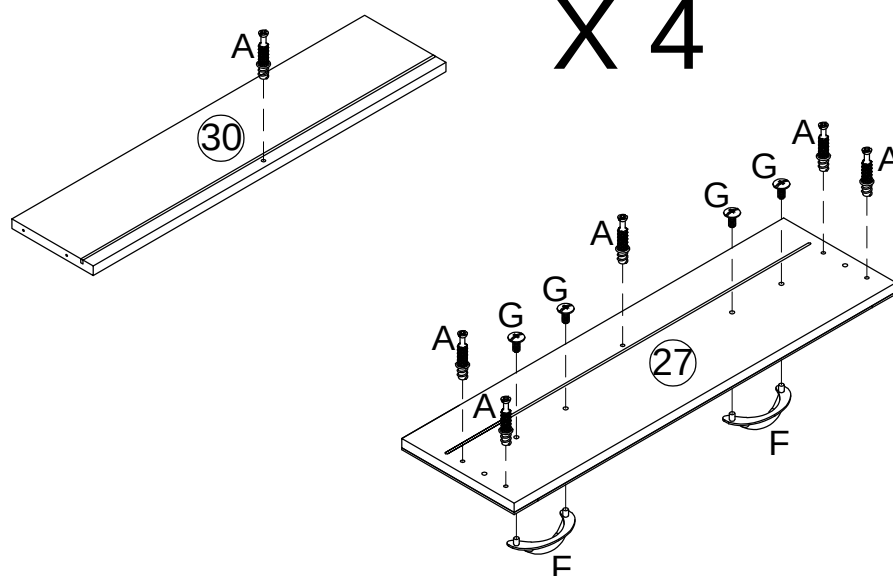

A



A*24




F*8




G*16




Step 39

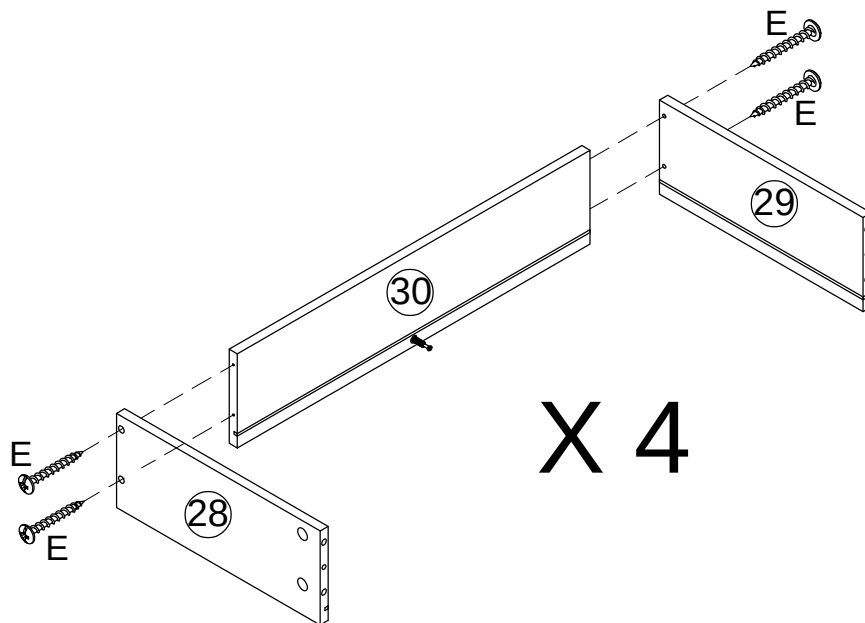


E*16



Step 40


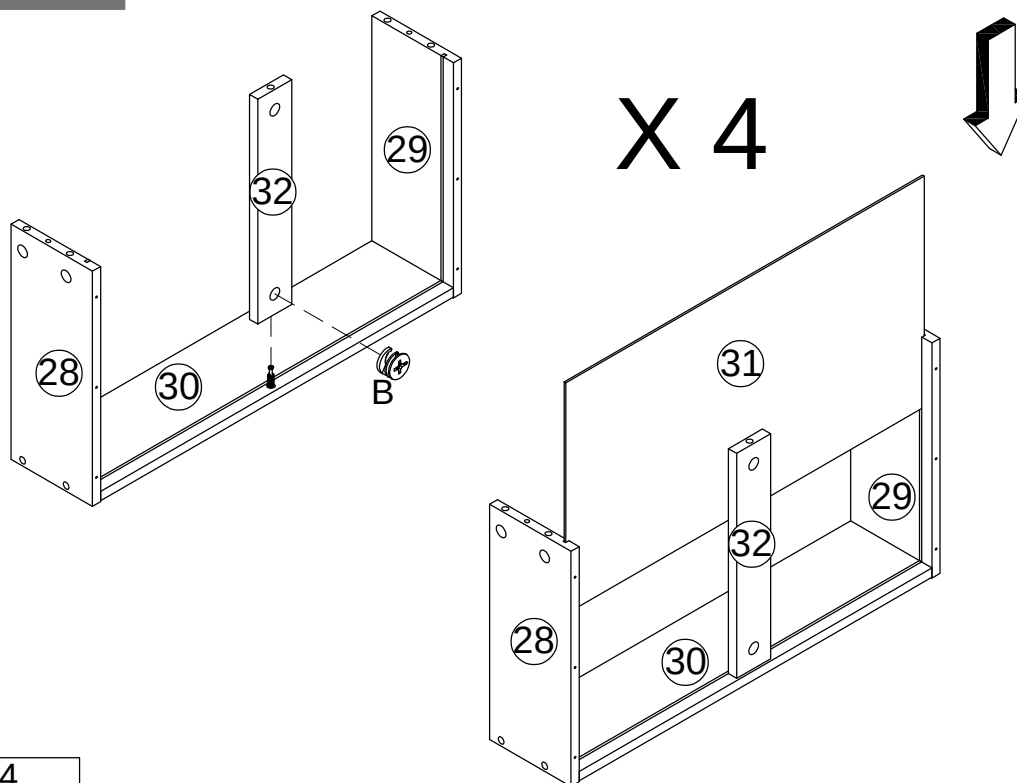


B*4

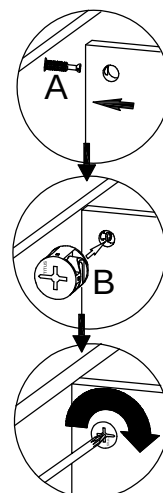

Step 41

X 4

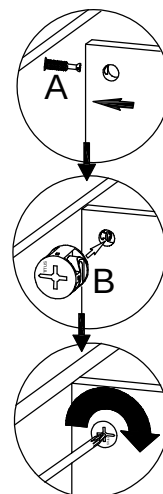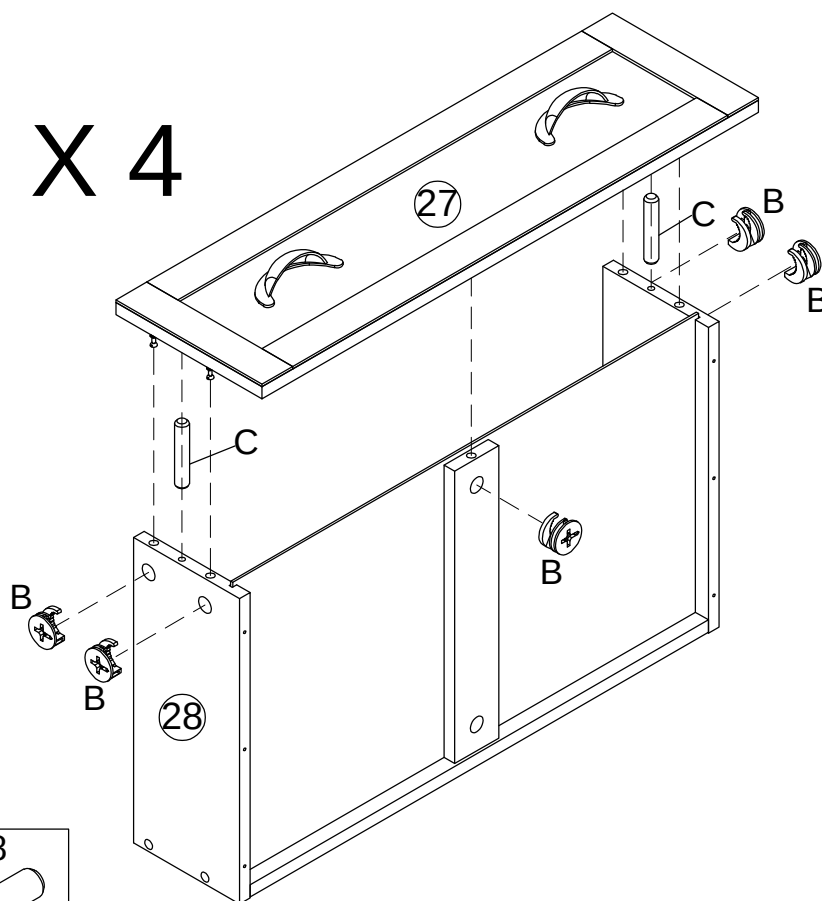

B*20




C*8




Step 42

Mounting Hole




Drawer Slide

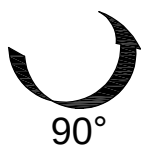

90°


X 4

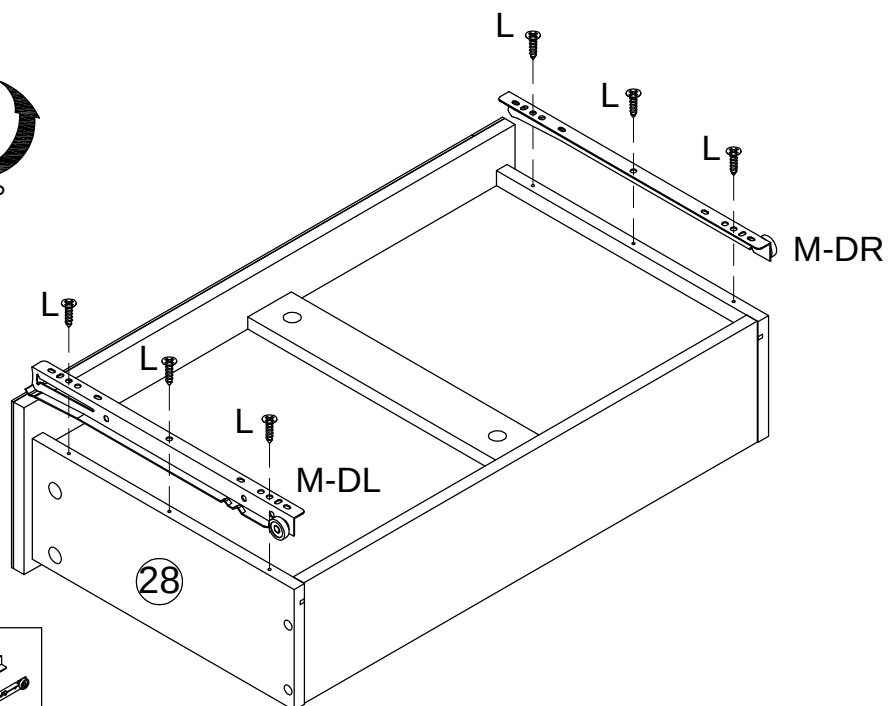


L*24




M*8



Step 43

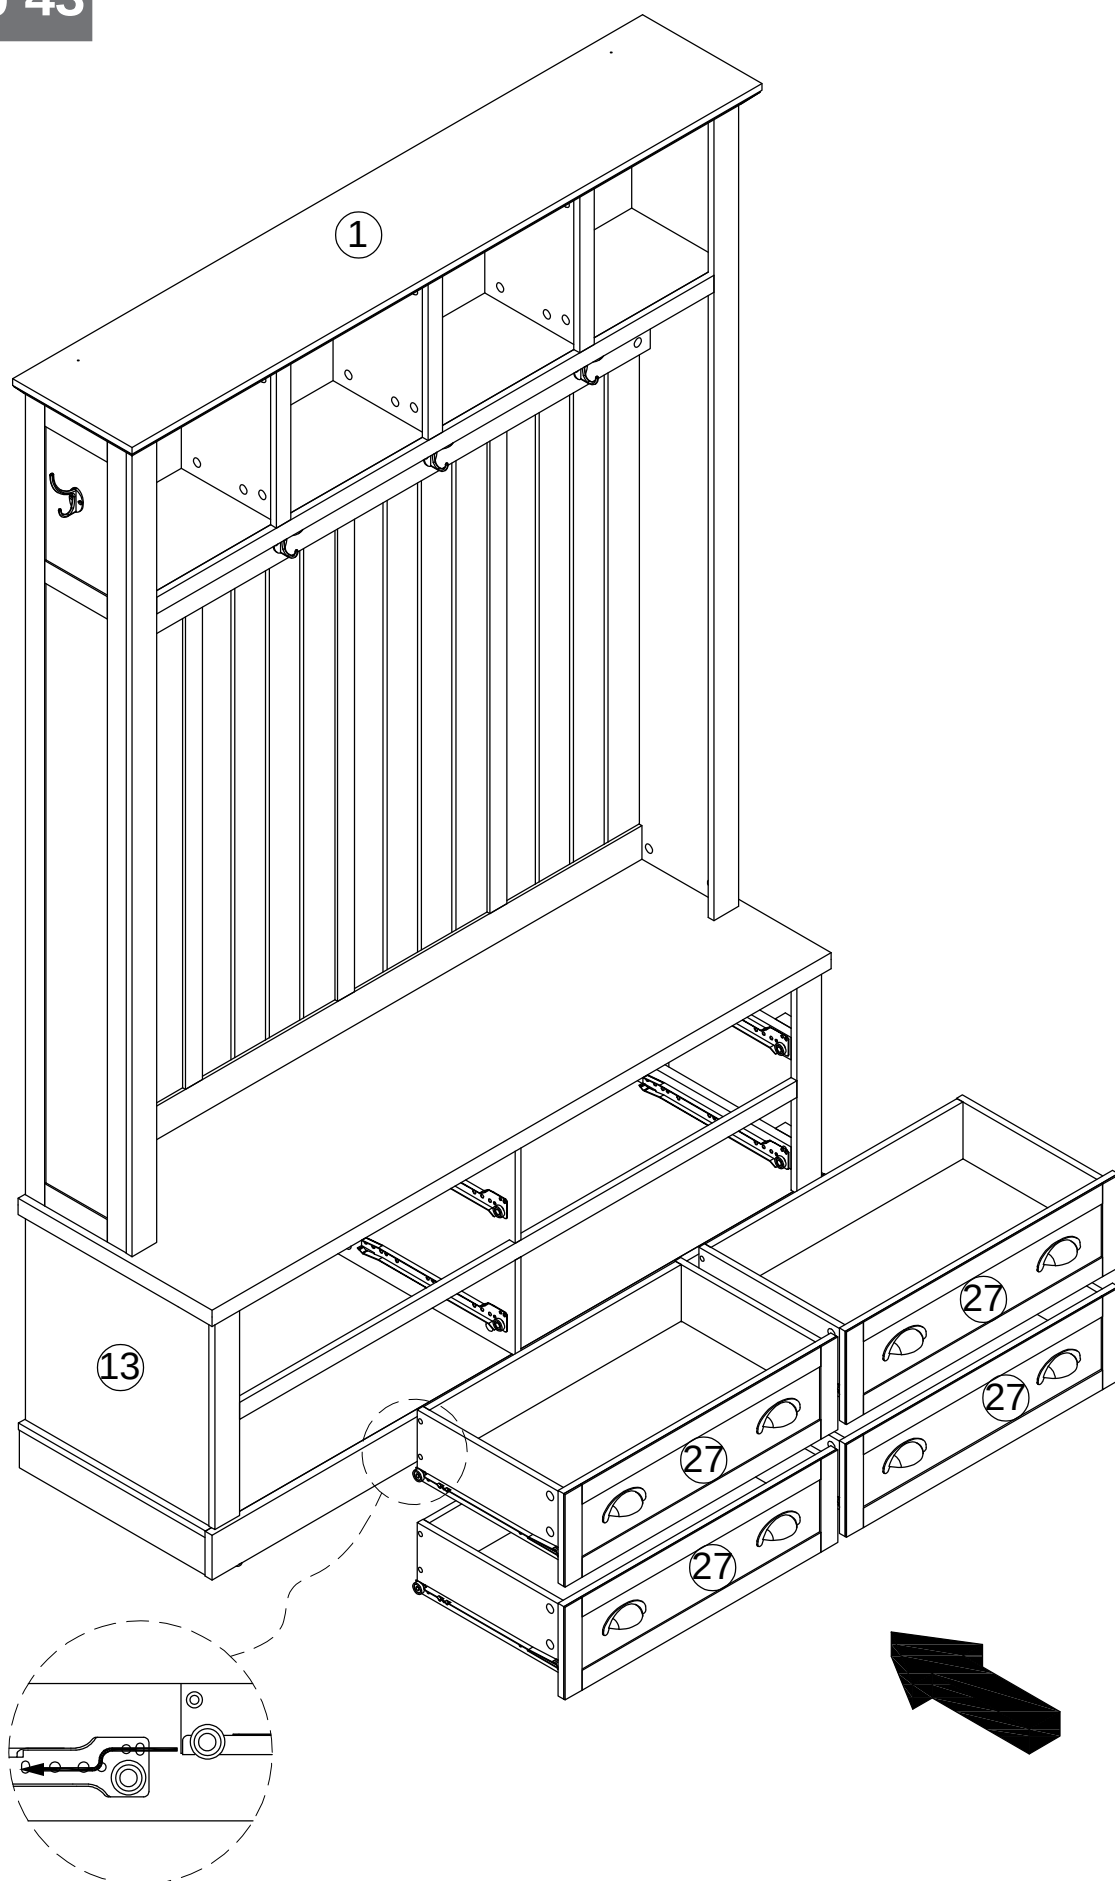

Step 44

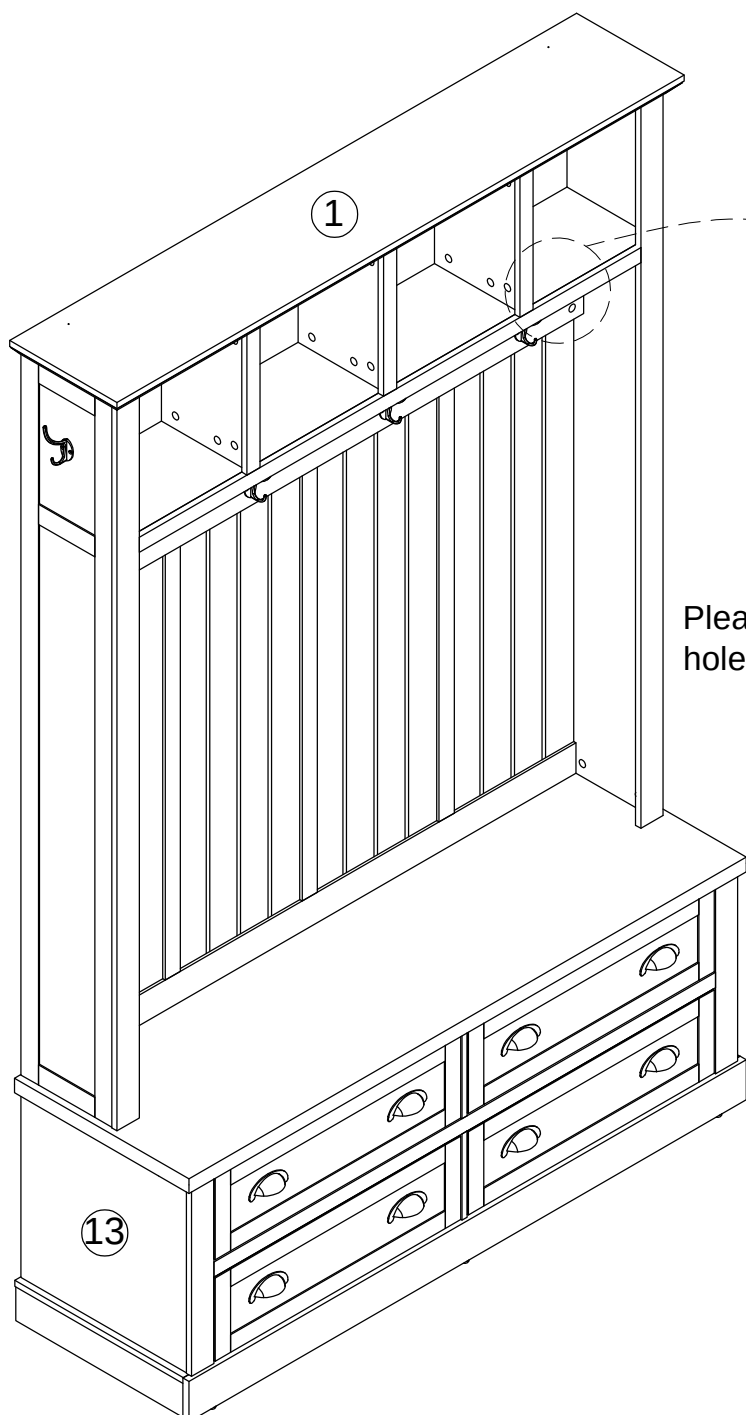


Please stick the hardware "O" on the exposed hole that makes your product more beautiful

O*50




Step 45

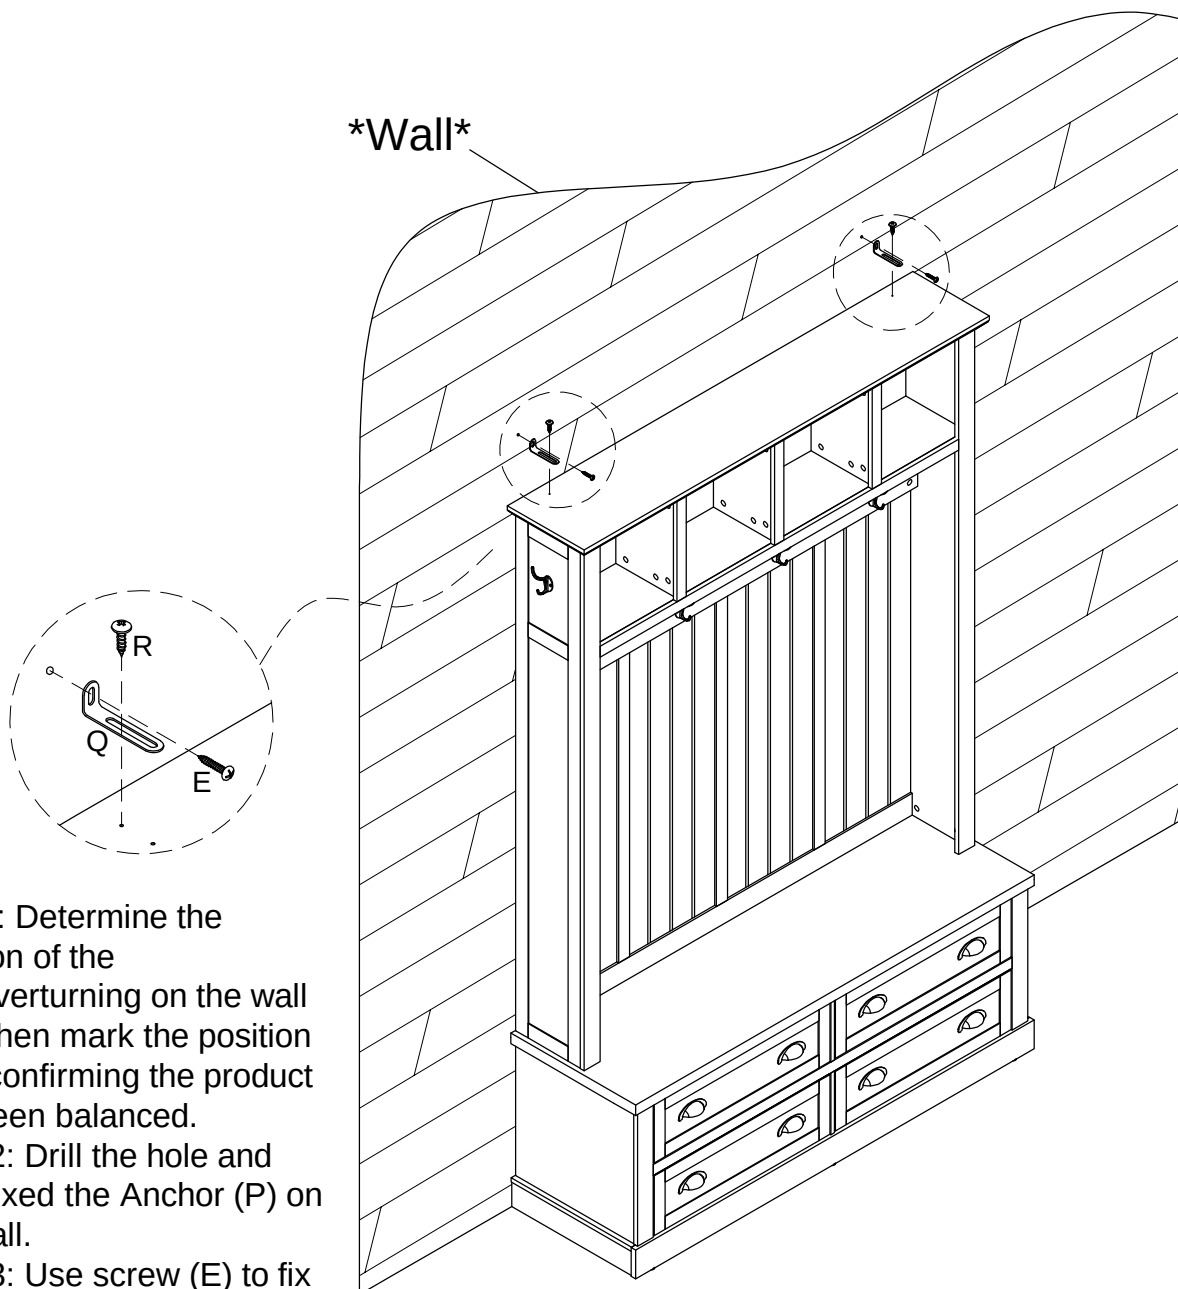


Step1: Determine the location of the anti-overturning on the wall and Then mark the position after confirming the product has been balanced.

Step 2: Drill the hole and then fixed the Anchor (P) on the wall.


Step 3: Use screw (E) to fix the L bracket (Q) on the wall.

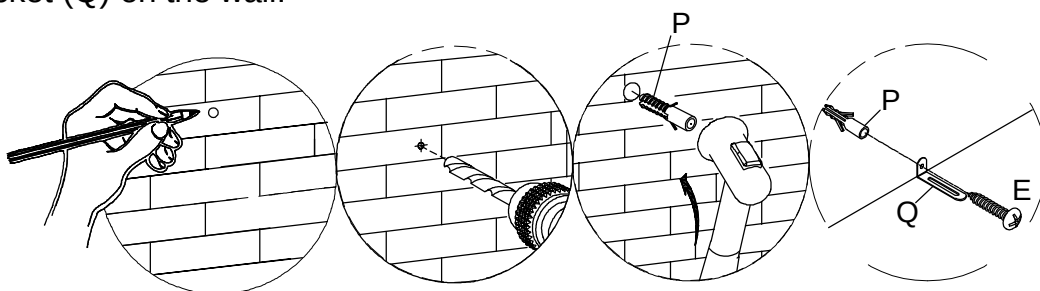


P*2




Q*2



E*2



R*2



FINISH

