



Computer desk with 4 tier shelves

A

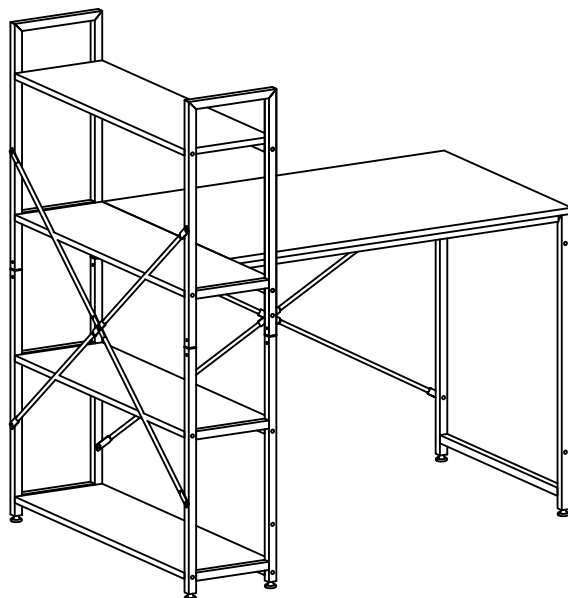

B

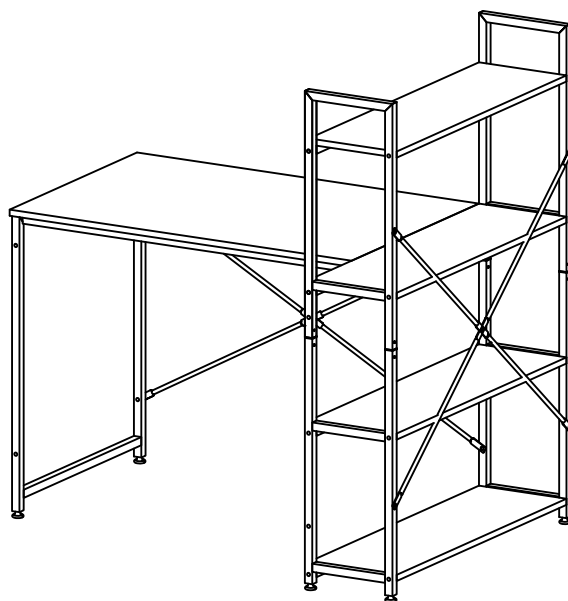

Thanks for choosing us. Your item is sent with care.
Please share your shopping experience on the platform if you are satisfied with it.
Feel free to contact us if you need help.

HELPFUL HINTS

! BEFORE YOU START

- Inspect product packaging to ensure the appearance is good.
- Read the assembly instruction carefully and follow it step by step.
- To avoid any scratching, putting a soft blanket on the floor is suggested.
- Identify, sort and count all the parts with tags.
- Find out installation position according to the drawing and install it in correct steps.

! OTHER


- People needed for assembly: 1-2
- Estimated assembly time: 0.5-1 hour.

! CAUTION











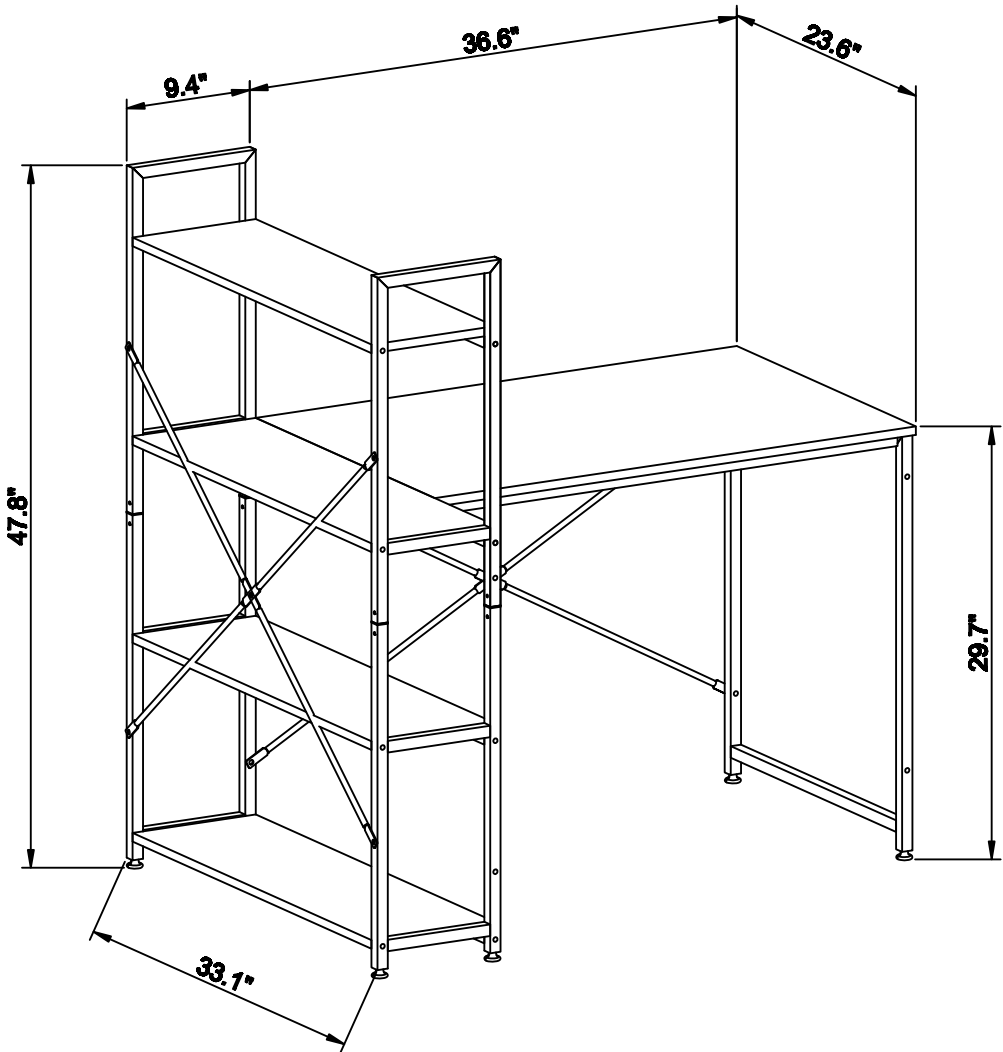

- Be cautious when using a power drill or power screwdriver.
- Please be aware to slow down and stop when screw is nearly tight.
- Do Not use any harsh chemicals or abrasive cleaners for this item.
- Push, pull or drag this item carefully.

DETAILS

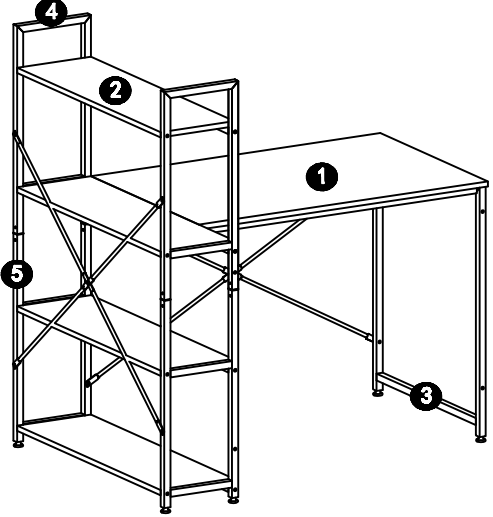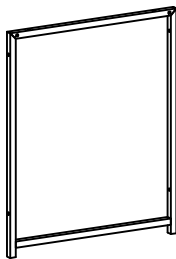








UNIT: INCH




PARTS LIST


		 ×1	 ×1
		 ×1	 ×2
 ×2	 ×2	 ×1	 ×3
 ×4	 ×6	 ×4	

ACCESSORIES LIST

No.	PICTURE	SIZE	QTY	No.	PICTURE	SIZE	QTY
A		M6x10	2	E		M6	10
B		M6x30	29	F		ST4x14	8
C		M6x35	12	G		ø8	4
D		ST5x60	8	 			

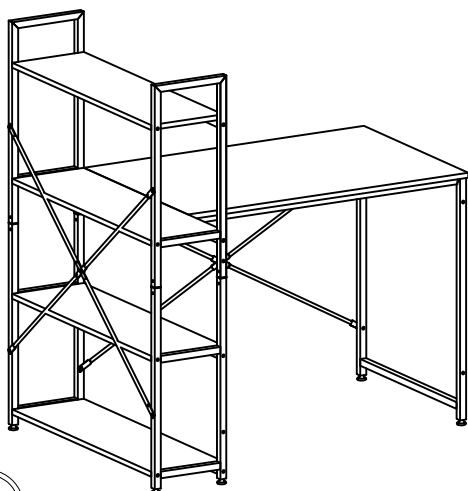


A

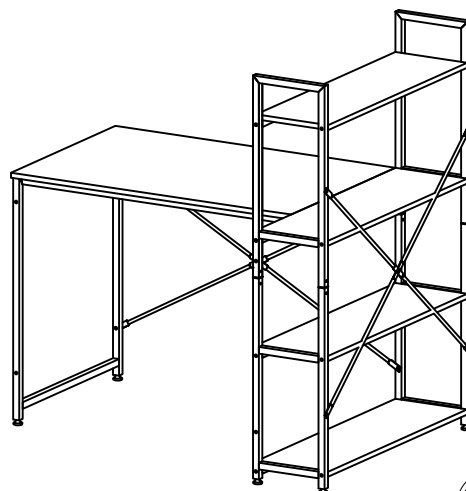


B

The shelves can be installed at left side "A" or right side "B" according to your preference

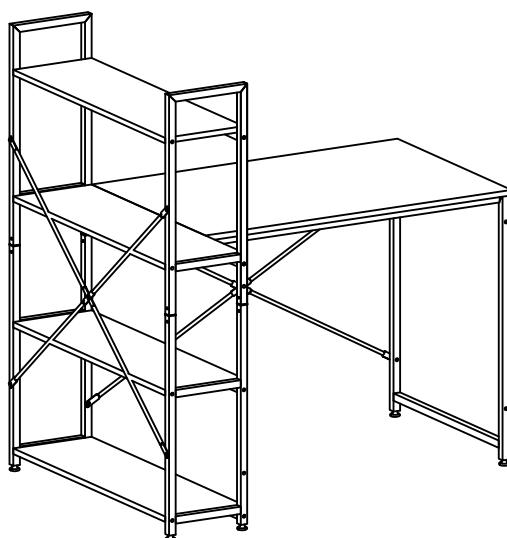


A

STEP 1

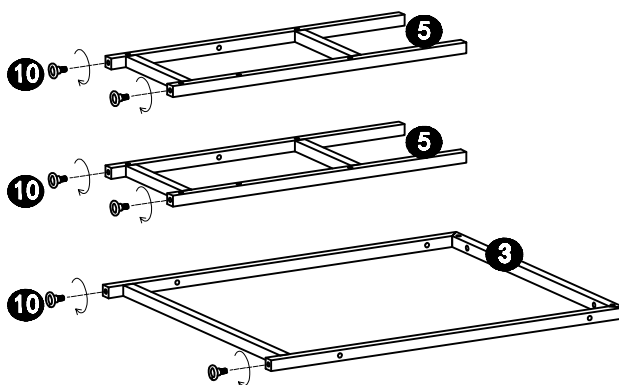


STEP 2

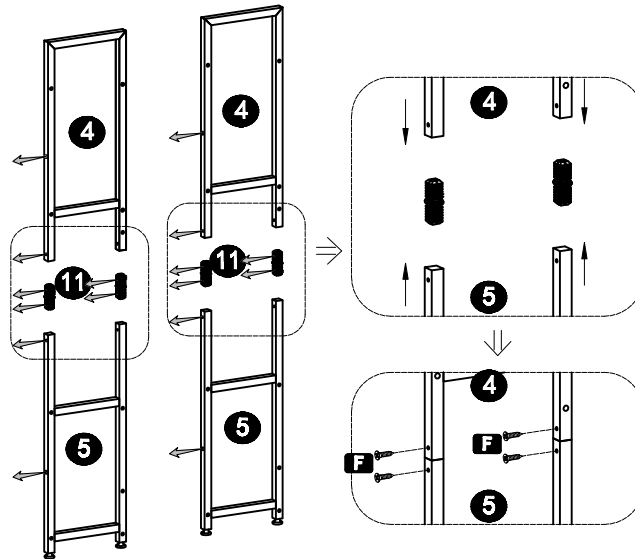

F  ST4x14 8

STEP 3

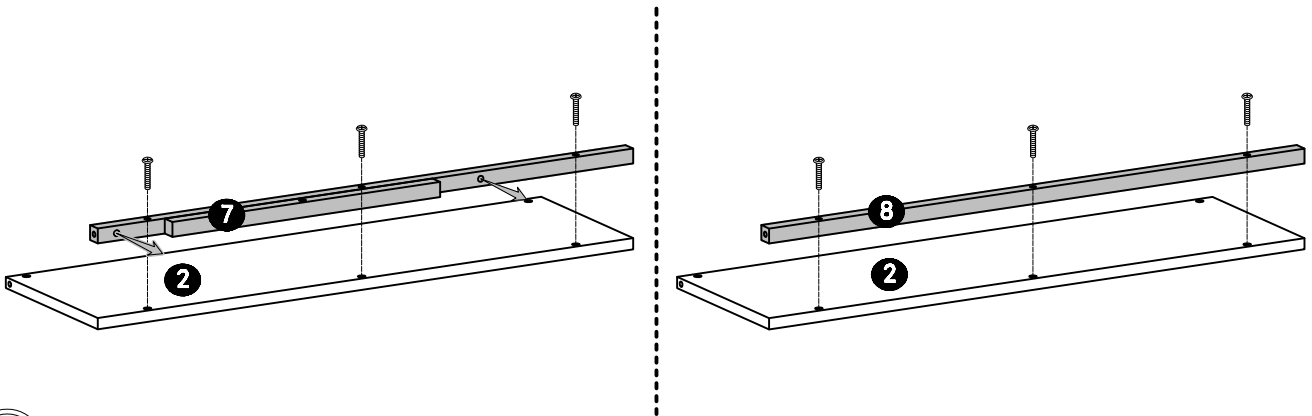


A

B  M6x30 12

× 3

STEP 4

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

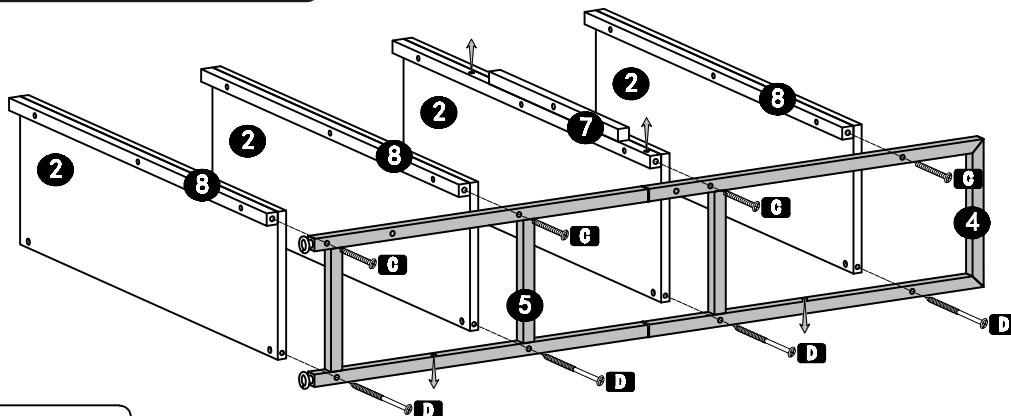


C  M6x35 4

D  ST5x60 4

STEP 5

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

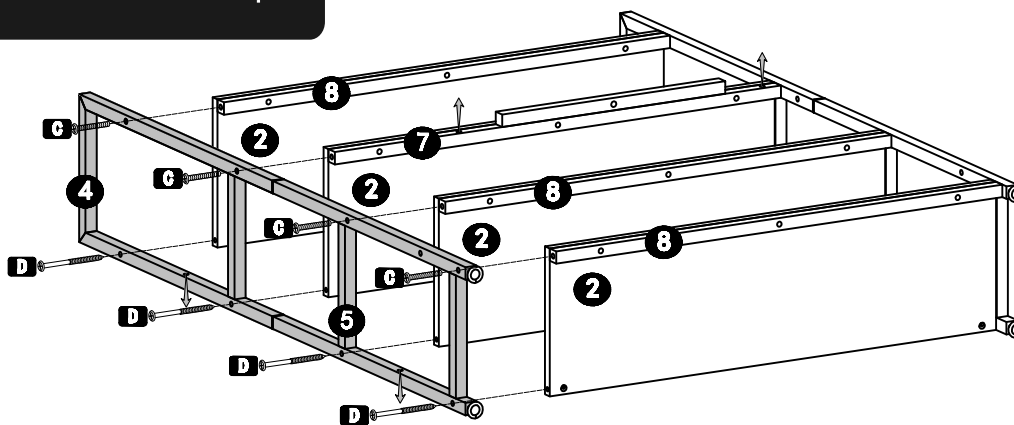


A

C  M6x35 4


D  ST5x60 4

STEP 6

※ Do not tighten the screws before step 8 finished

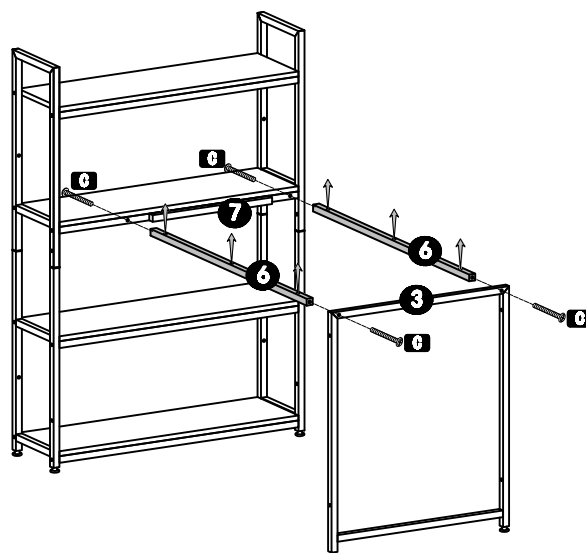


A

C  M6x35 4

STEP 7

※ Do not tighten the screws before step 8 finished

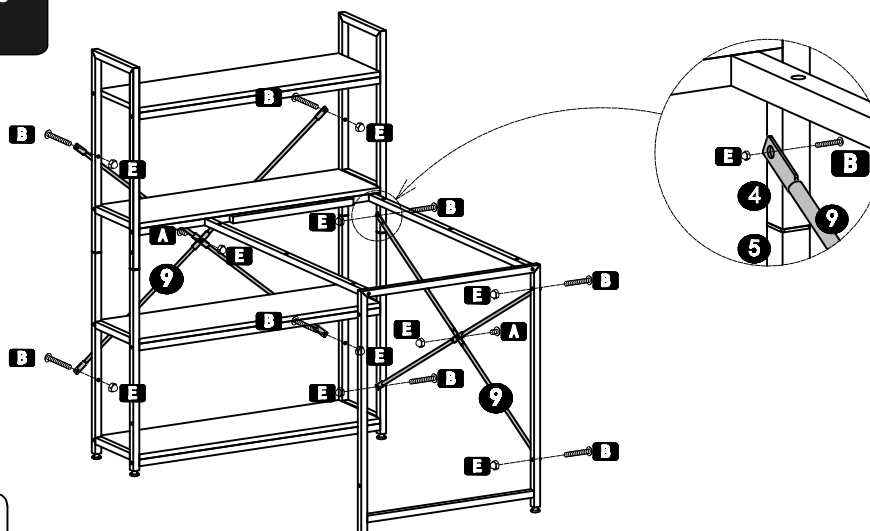

A


A  M6x10 2

B  M6x30 8

E  M6 10

STEP 8


※ Tighten all screws in this step when there is not gap.

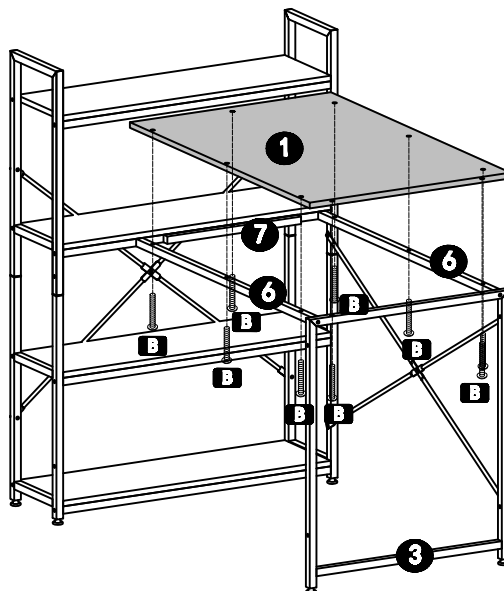

A


B  M6x30 9

STEP 9

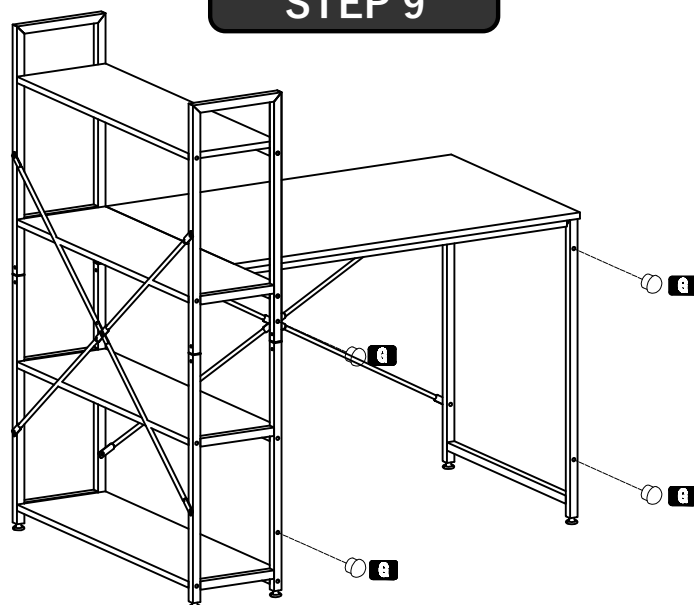


A

G  Ø8 4

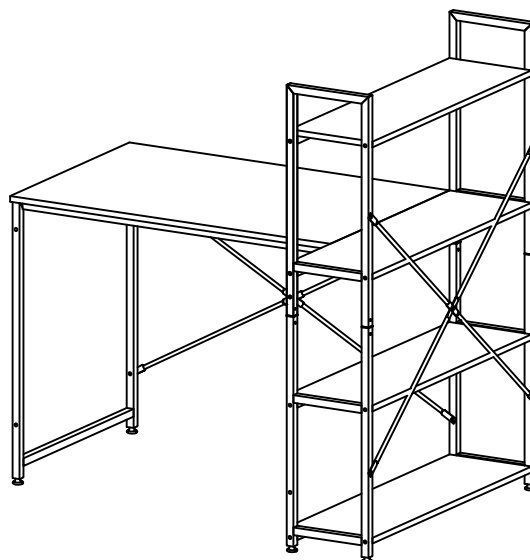


B

STEP 1

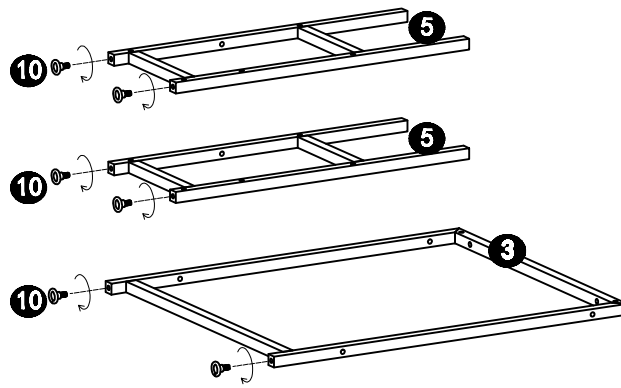


STEP 2

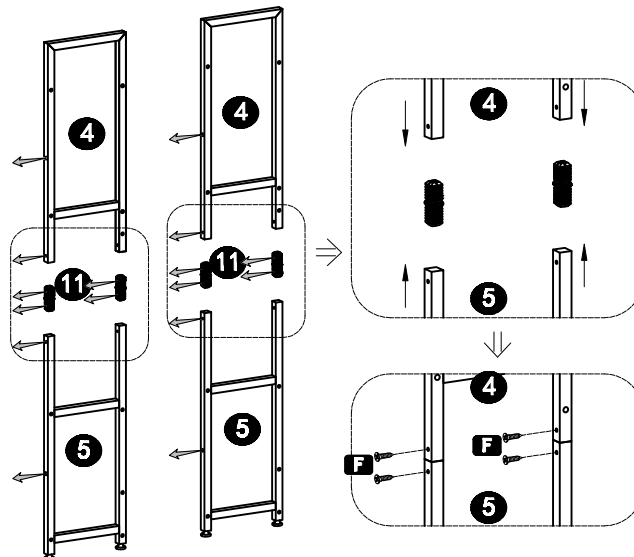

F  ST4x14 8


STEP 3

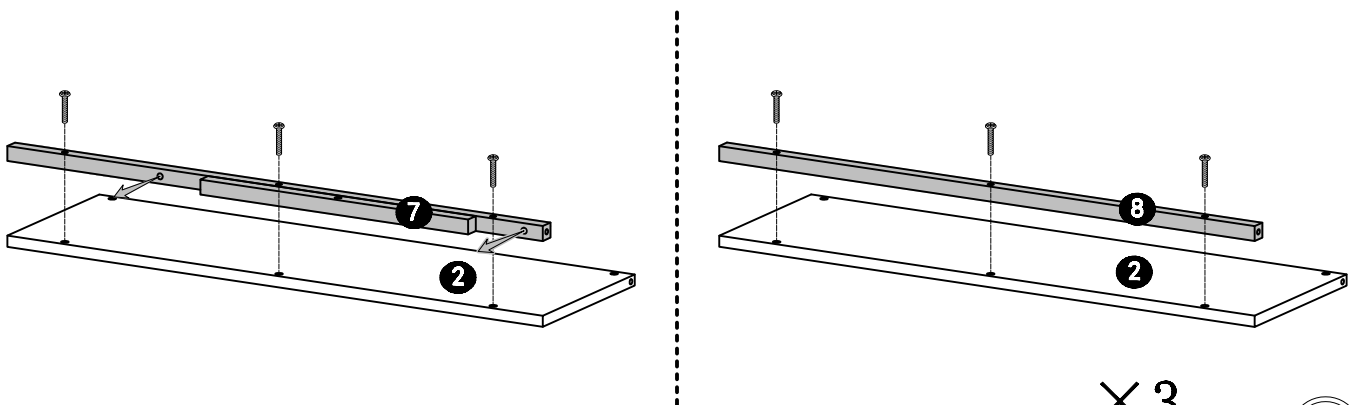

B  M6x30 12

STEP 4

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

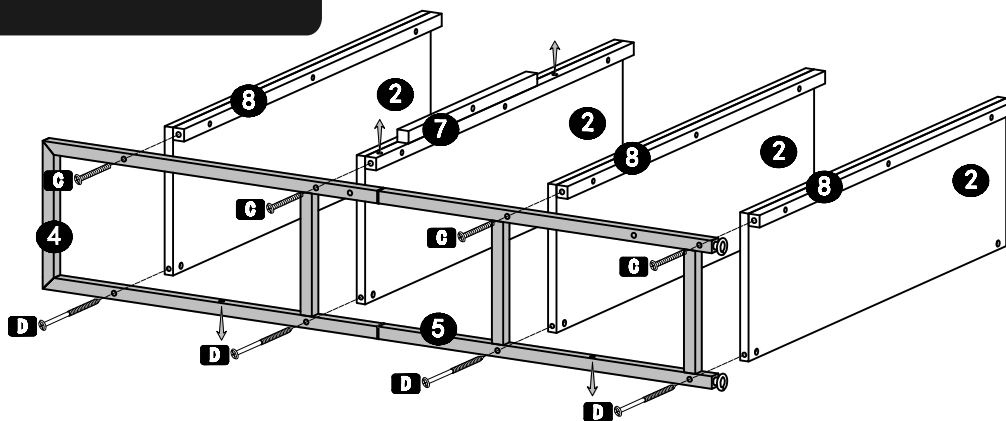


C  M6x35 4

D  ST5x60 4

(B)

STEP 5

※ Please make sure correct screws are used in different parts.
Do not tighten the screws before step 8 finished.

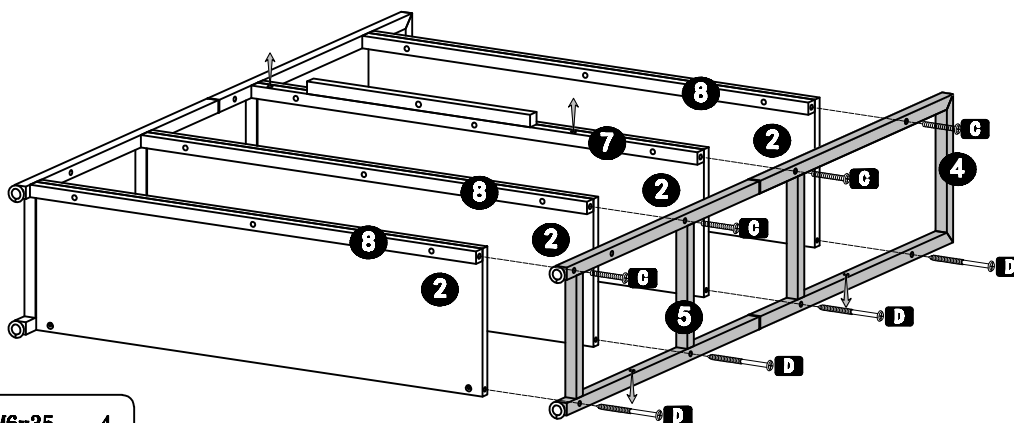


C  M6x35 4


D  ST5x60 4

(B)

STEP 6

※ Do not tighten the screws before step 8 finished

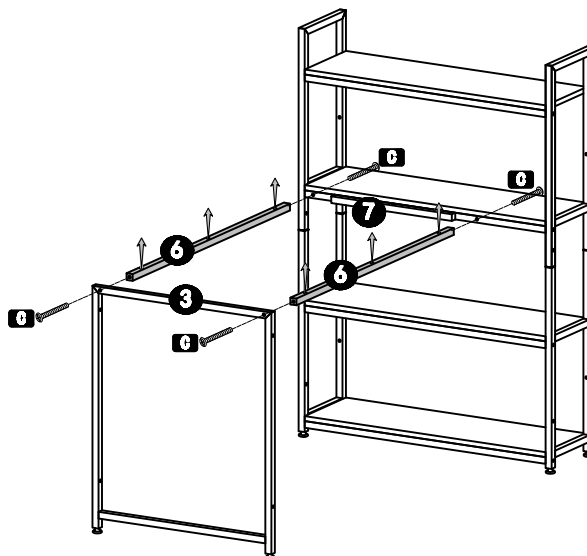


C  M6x35 4

(B)

STEP 7

※ Do not tighten the screws before step 8 finished

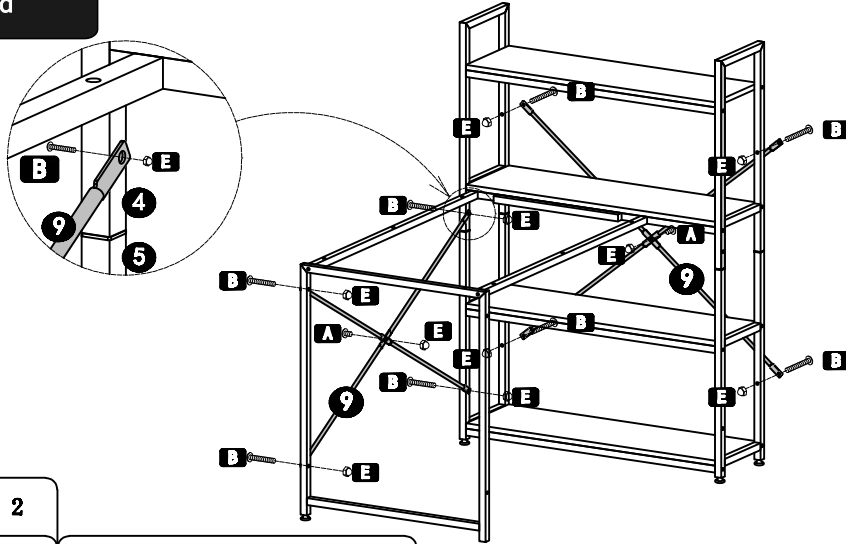

A  M6x10 2


B  M6x30 8

E  M6 10

(B)

STEP 8


※ Tighten all screws in this step when there is not gap.

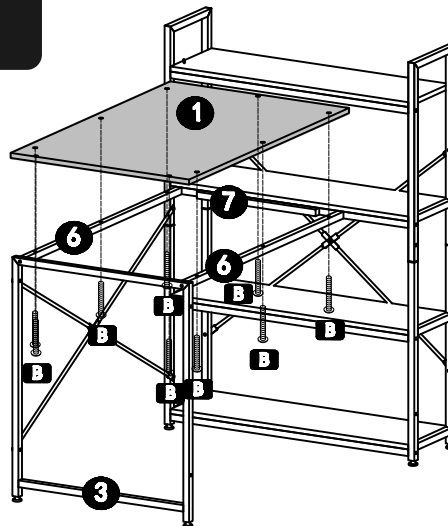

B  M6x30 9

(B)

STEP 9

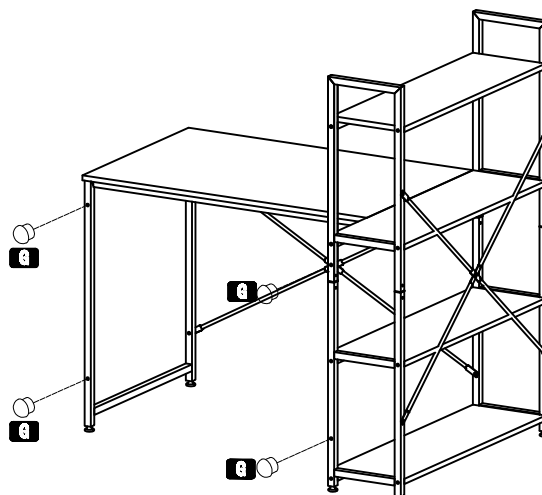

6  Ø8 4

(B)