



Shoe Rack

Assembly Instructions

XJ006 | 72CM | 5-layer

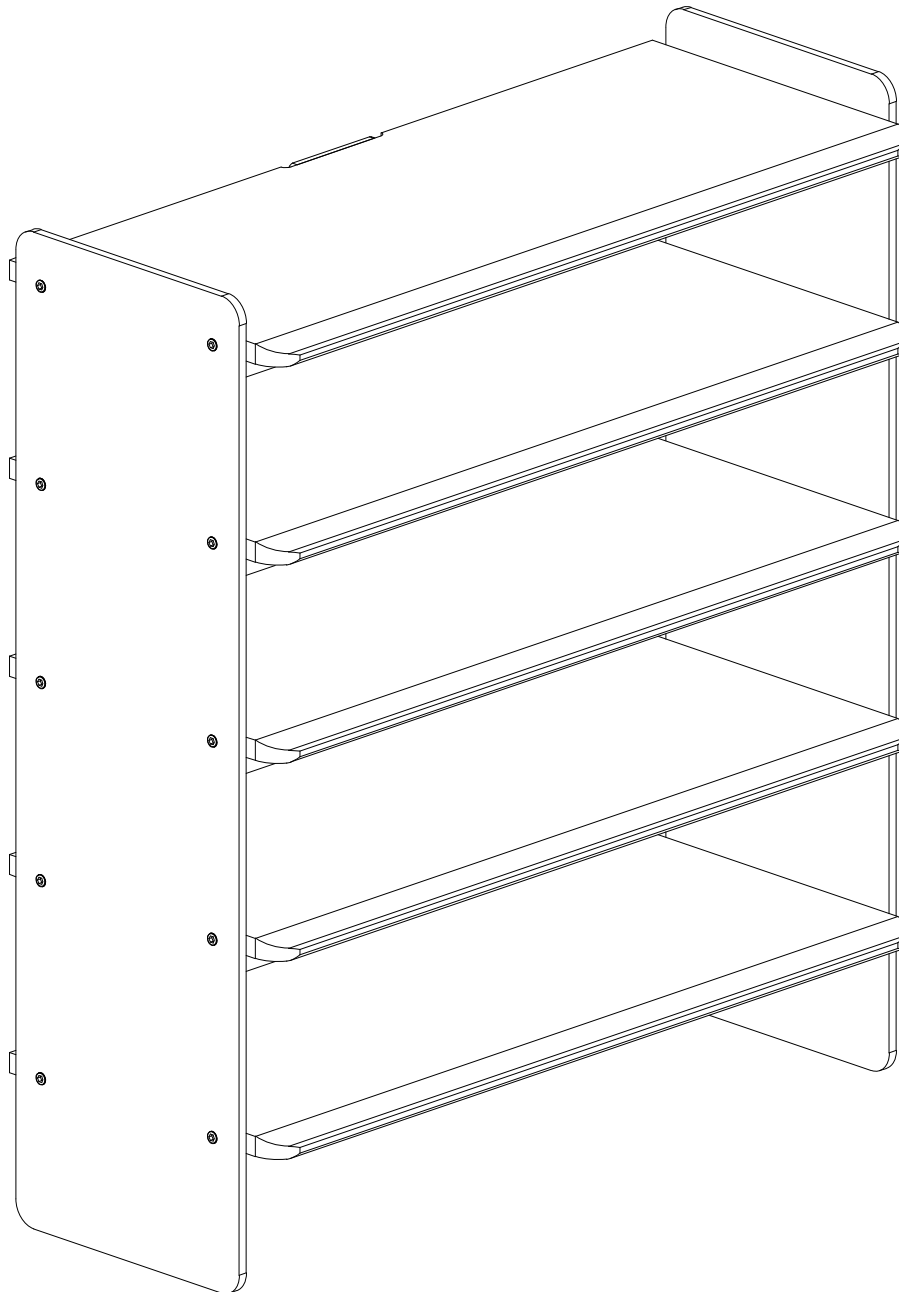

Assembly Overview

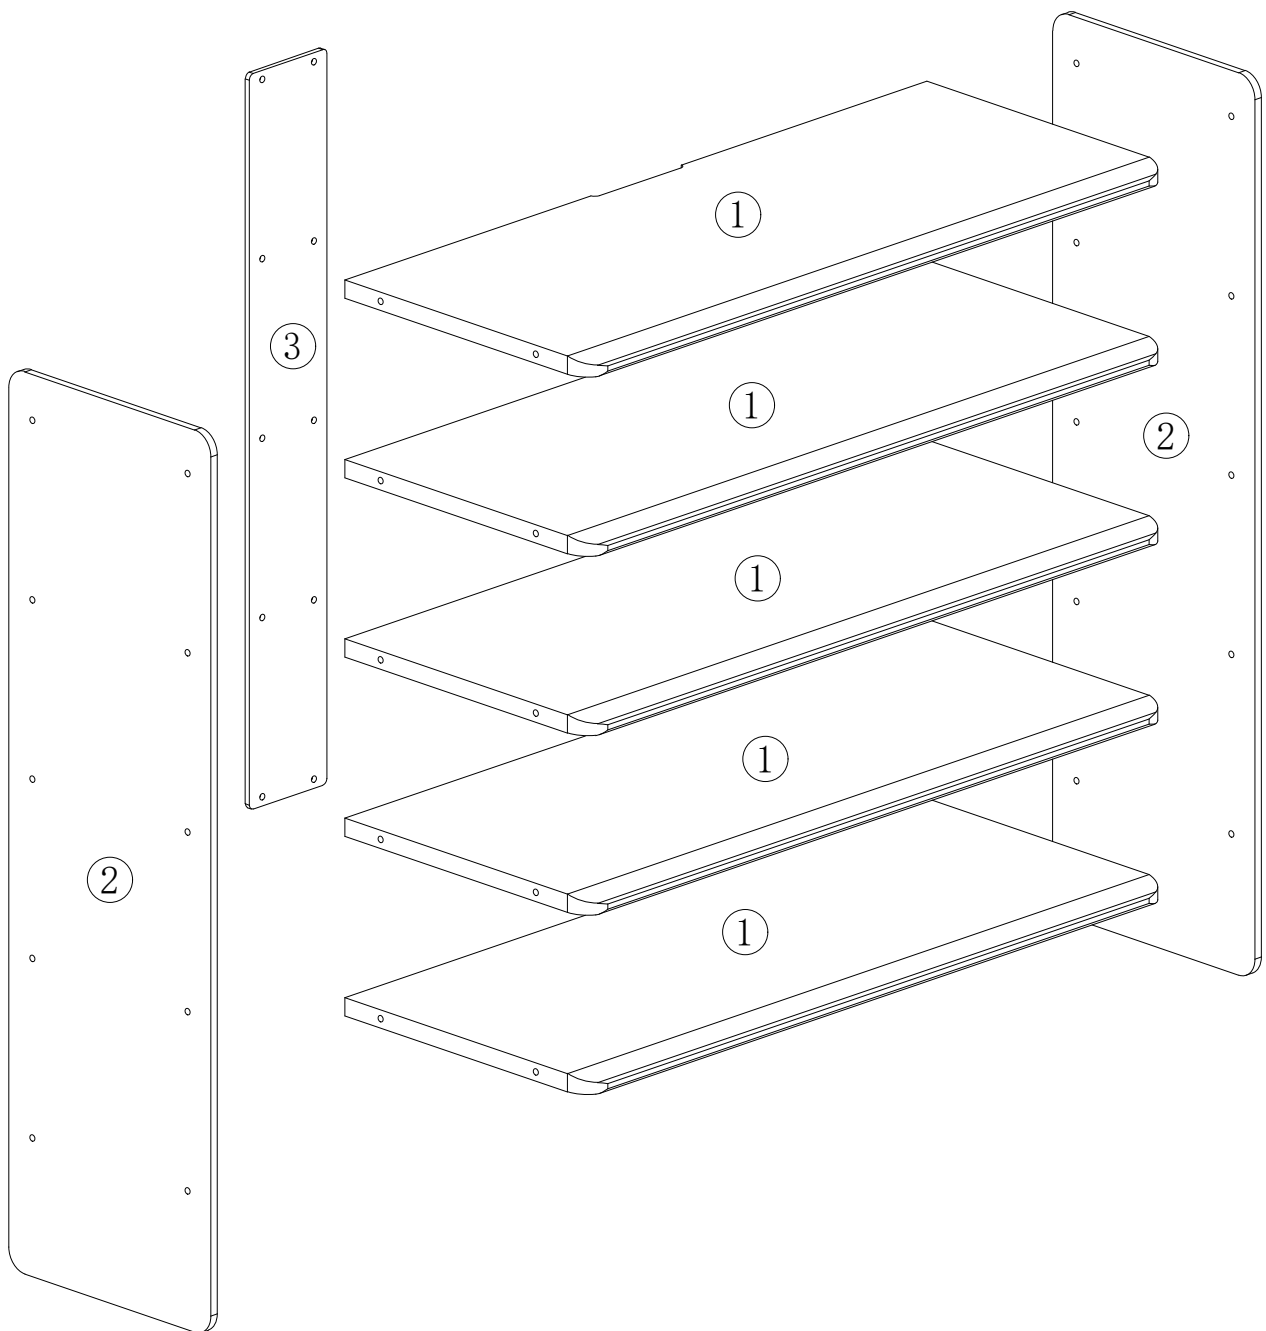


Parts List

1 Shelf

720 × 300 × 17MM


Qty: 5

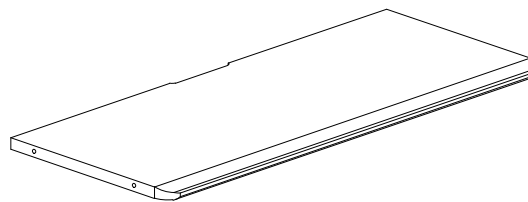

2 Side panel

840 × 250 × 8MM


Qty: 2

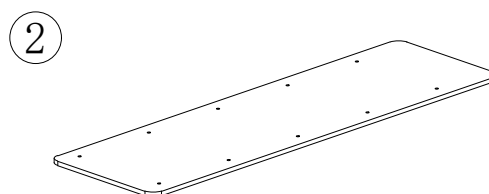

3 Back panel

685 × 96 × 5MM

Qty: 1

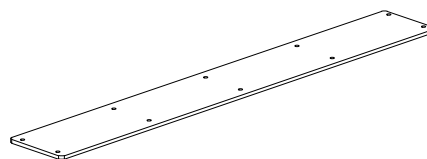


Hardware & Tool

A Hex socket barrel bolt


#7 × 35MM

30 + 3 PCS

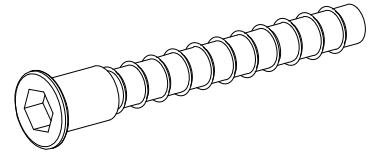

C Anti-tip kit


1 set

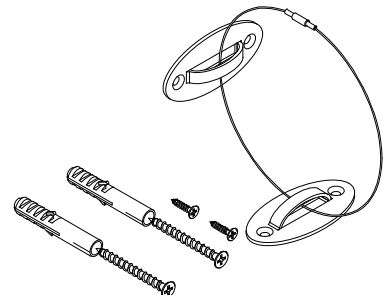

B Ratchet wrench (tool)

M4


1 set

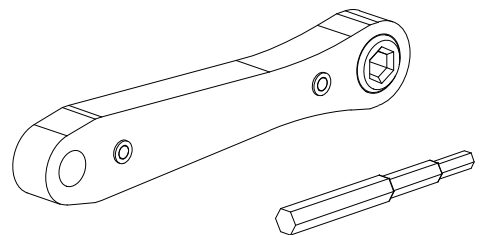

Choose the Correct Screws


Using the correct screws helps prevent damage to components.

Example

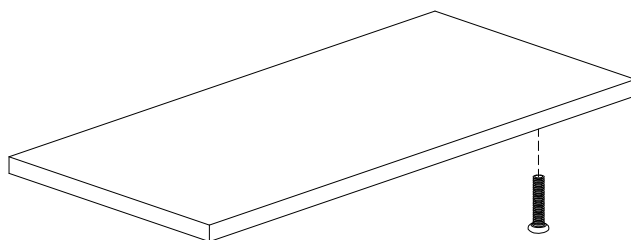


Incorrect

Oversized screws can crack the panel.

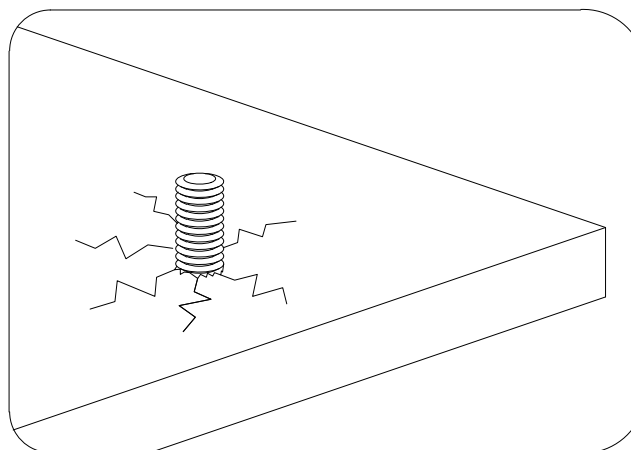


Correct

Matching screw size gives a stable installation.

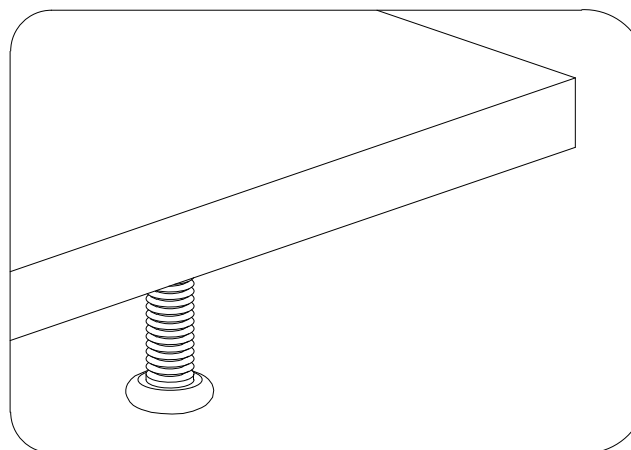

Ratchet Wrench Instructions

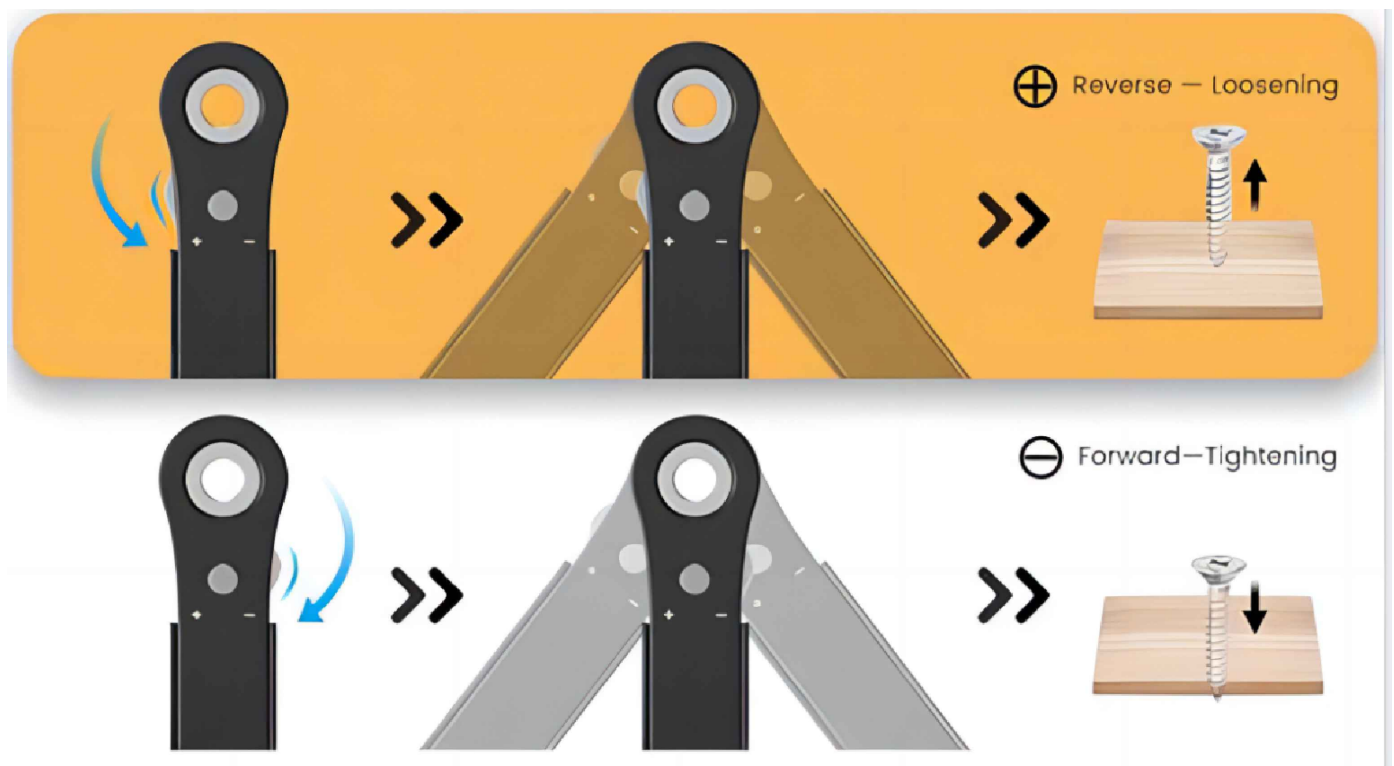


Tighten securely, but avoid over-tightening to prevent wood cracking.

Step 1

Connect shelves (1) and side panels (2), as shown.

Hardware: A × 20 Tool: B × 1 set


Check the top/bottom orientation of part 2 and front/back of part 1.

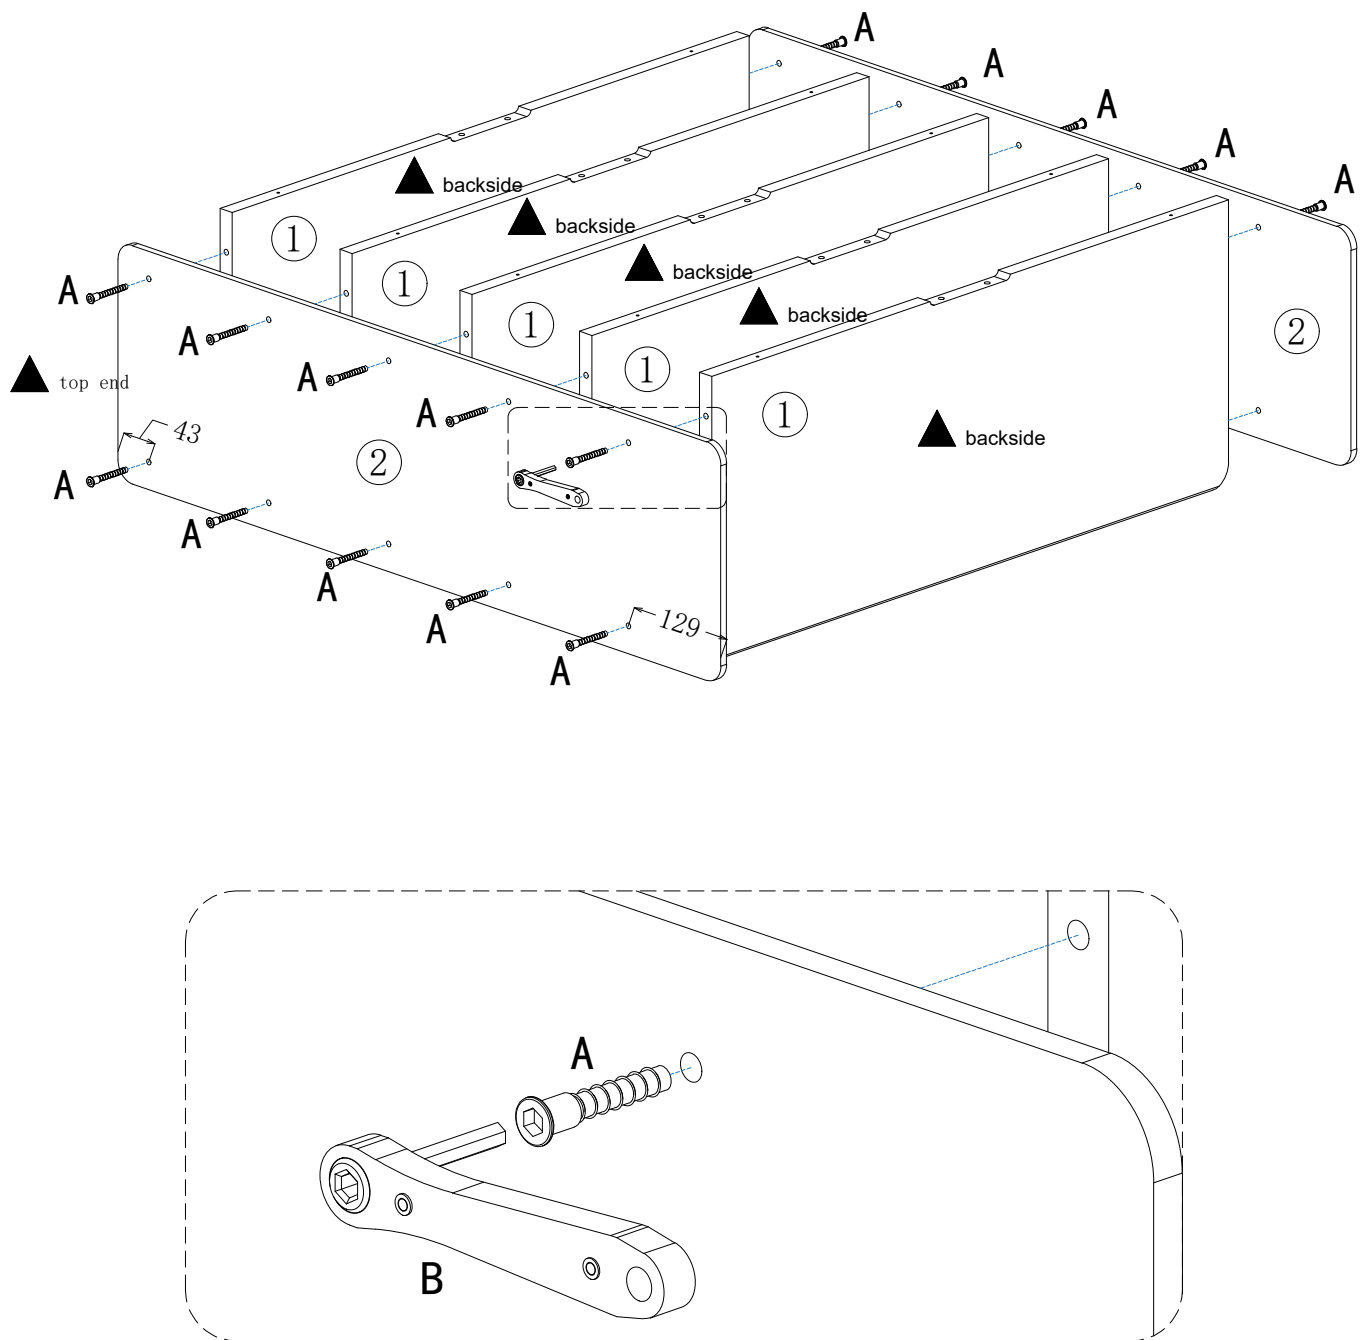

Step 2

Attach back panel (3) to the assembly from Step 1, as shown.

Hardware: A × 10 Tool: B × 1 set (reused)

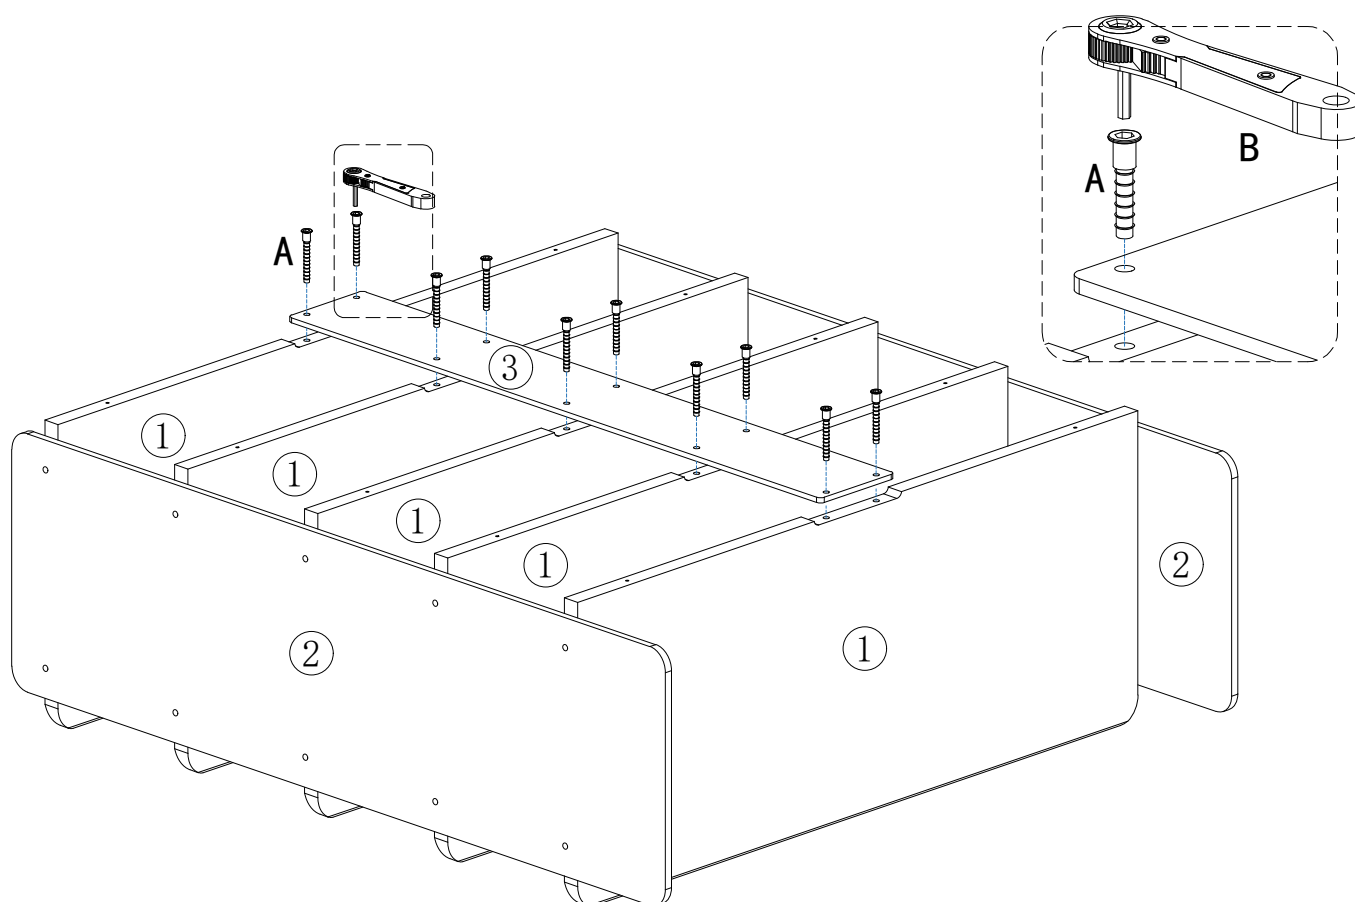

Step 3

Secure the assembled rack to the wall using anti-tip kit C, as shown.

Hardware: C × 1 set

