
ASSEMBLY INSTRUCTIONS

DJ1159-80CM

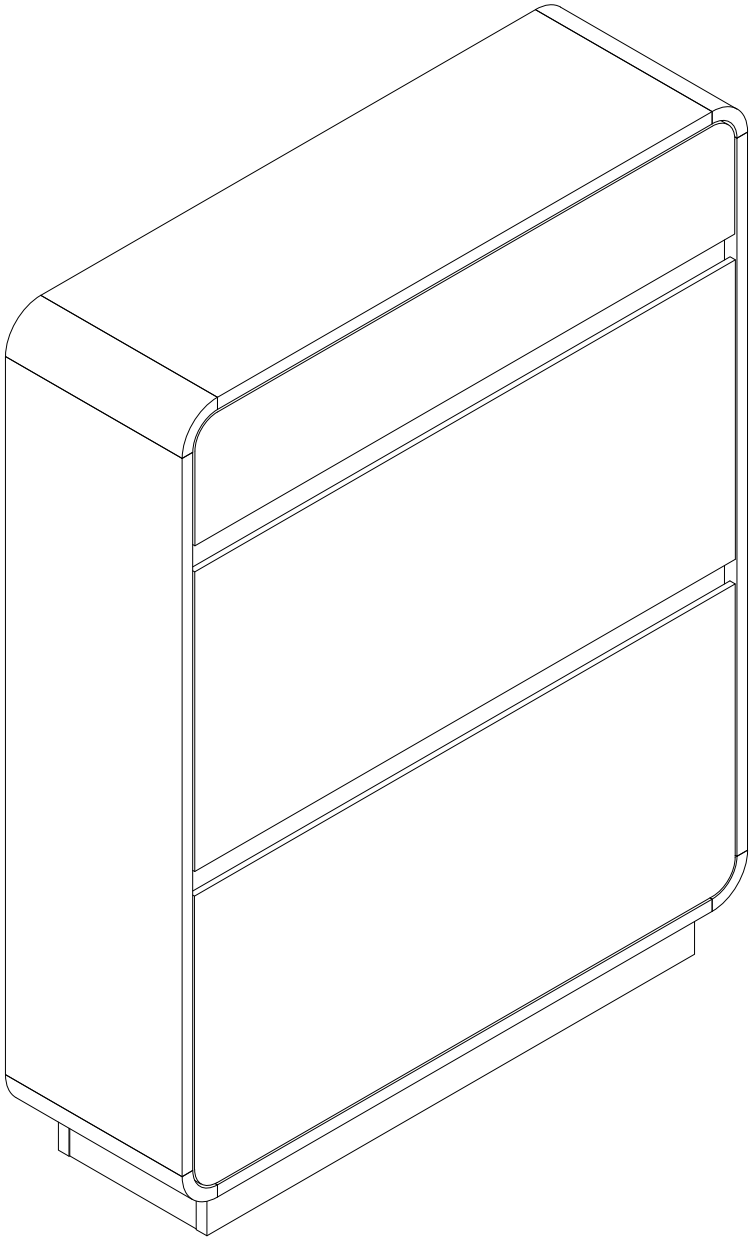

Installation Video QR

DJ1159
https://vimeo.com/1141041691

⚠SAFETY TIPS:
Static charge may cause dust on foam-clean with a dry or damp cloth. Small foam strands may be present-handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guideline.

Have an assembly question or need a replacement part?
Please contact with our customer service.

Warnings

Important reminder:

Please sort and check all accessories before assembly.
Place the product on an empty cardboard box or on carpet to prevent scratches.

⚠ Please use proper tools for assembly.Using an electric screwdriver can accelerate the assemoly speed, but please do not overtighten the screws.


⚠ Please follow the assembly steps and do not skip any of them.

⚠ If possible, please find a partner to help you with assembly, which can accelerate assembly.

⚠ Keep all small parts of this product away from children. They may cause serious injury.

⚠ We hope you can retighten the screws 2 weeks after assembly, and check the tightening procedure of the screws every 3 months.

If you meet any difficulty, our friendly customer team are always ready to help you.

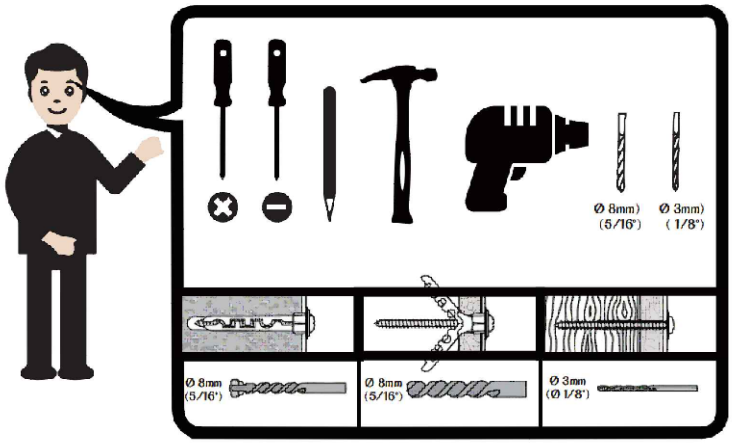




WARNING — Tip-Over / Crush Hazard





















Furniture can tip over and cause serious crushing injuries. If an anti-tip kit is provided, install it after assembly and use it as instructed. Do not modify the structure of this product. Use only as intended and ensure all fasteners are fully tightened. The manufacturer is not responsible for damage or injury caused by unauthorized modifications or improper assembly.

Peel off film before use


Explosion Diagram

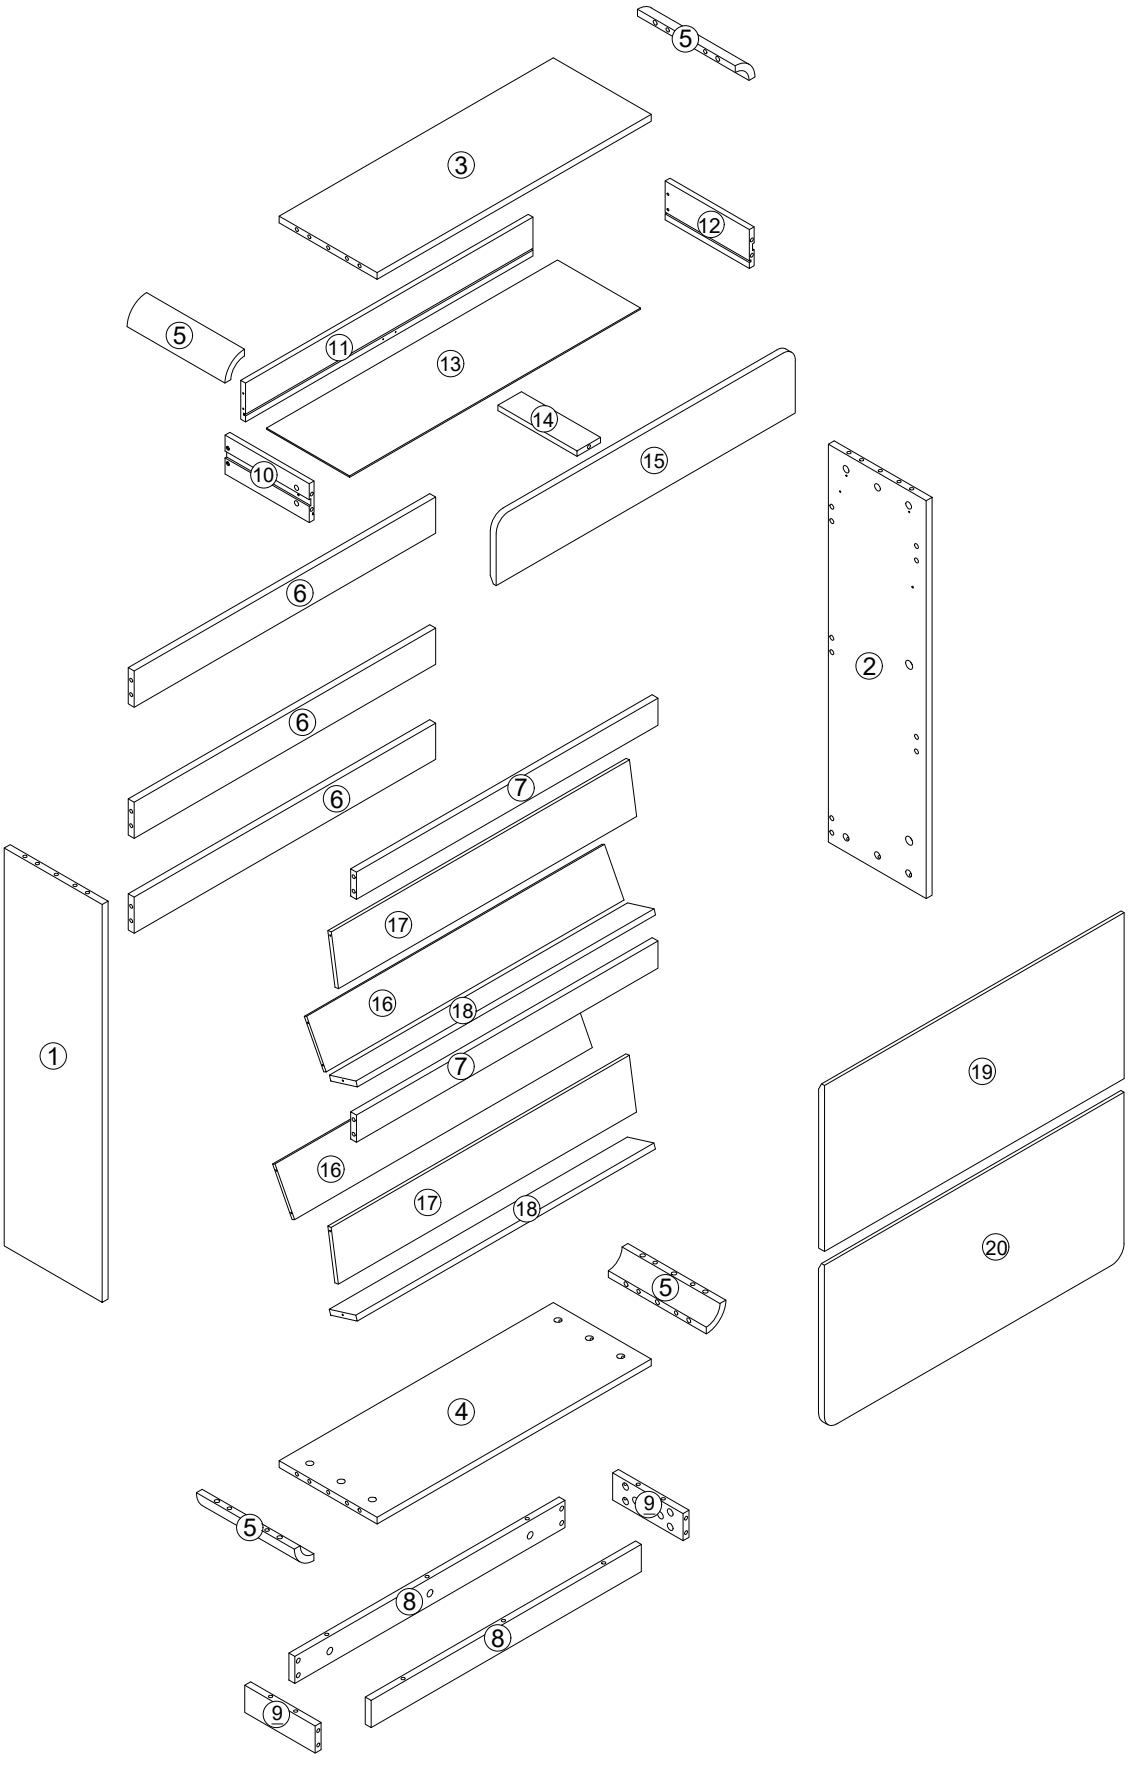


Parts List

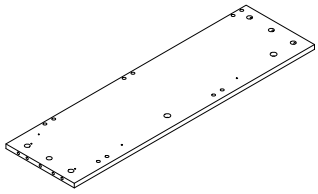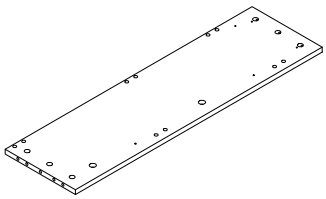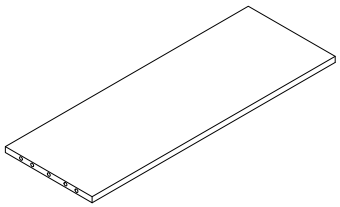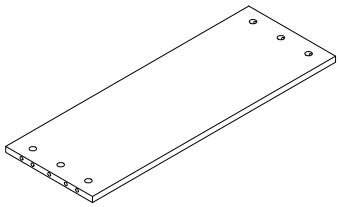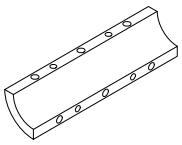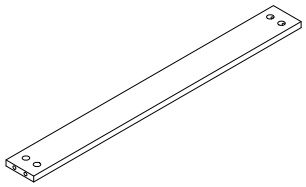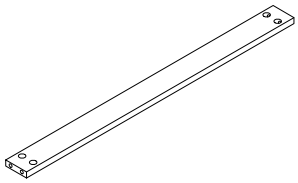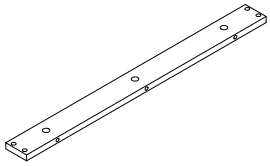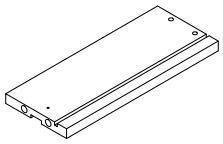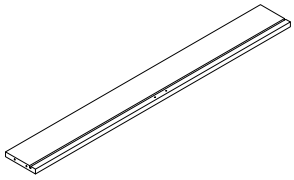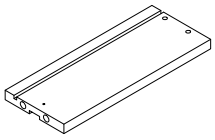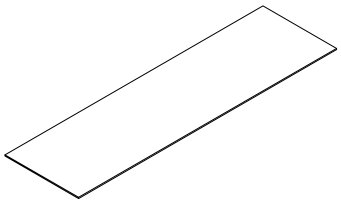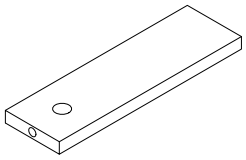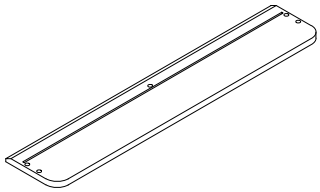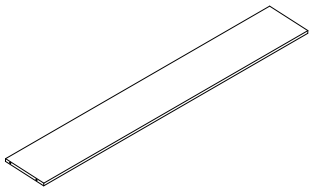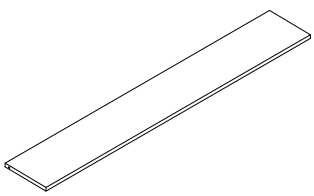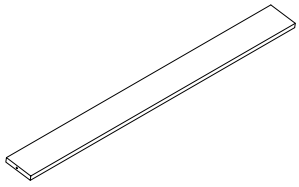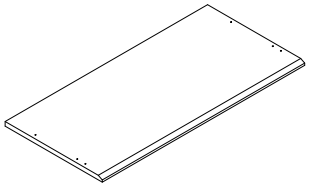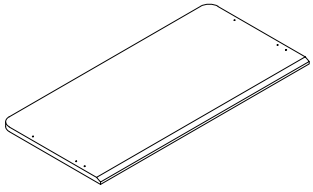			
① X1	② X1	③ X1	④ X1
			
⑤ X4	⑥ X3	⑦ X2	⑧ X2
			
⑨ X2	⑩ X1	⑪ X1	⑫ X1
			
⑬ X1	⑭ X1	⑮ X1	⑯ X2
			
⑰ X2	⑱ X2	⑲ X1	⑳ X1

Hardware List


No.	Code	Diagram	Description	Quantity	Spare
1	**A1**		M7 x 40 mm	43	2
2	**A2**		Ø15 x 9.5 mm	63	2
3	**A3**		M7 x 40 mm	24	2
4	**A4**		Ø12 x 9.5 mm	4	2
5	**B1**		Ø3.5 x 14 mm	32	2
6	**B2**		Ø3.5 x 35 mm	6	2
7	**B3**		M4 x 10 mm	2	
8	**B4**		Ø4 x 12 mm	4	2
9	**C1**		Ø8 x 40 mm	16	2
10	**C2**			2	
11	**C3**			2	
12	**C4**			4	
13	**C5**			4	
14	**C6**			4	
15	**C7**			2	
16	**C8**			2	
17	**C9**			28	2
18	**HG**			2	


Spare parts are packed together in one package.

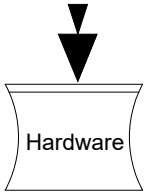


THE SPARE BAG INCLUED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING


Step 1

		
	B2 2PCS	

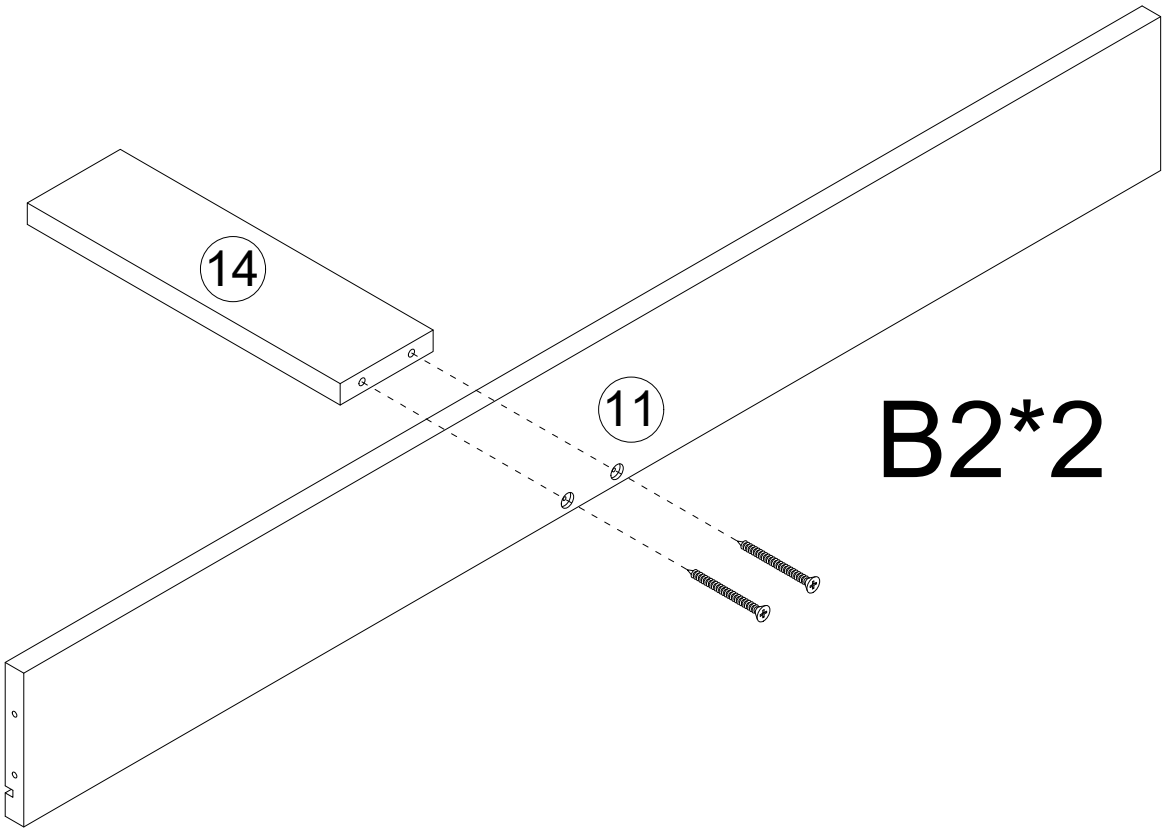



Step 2

		
	B2	4PCS

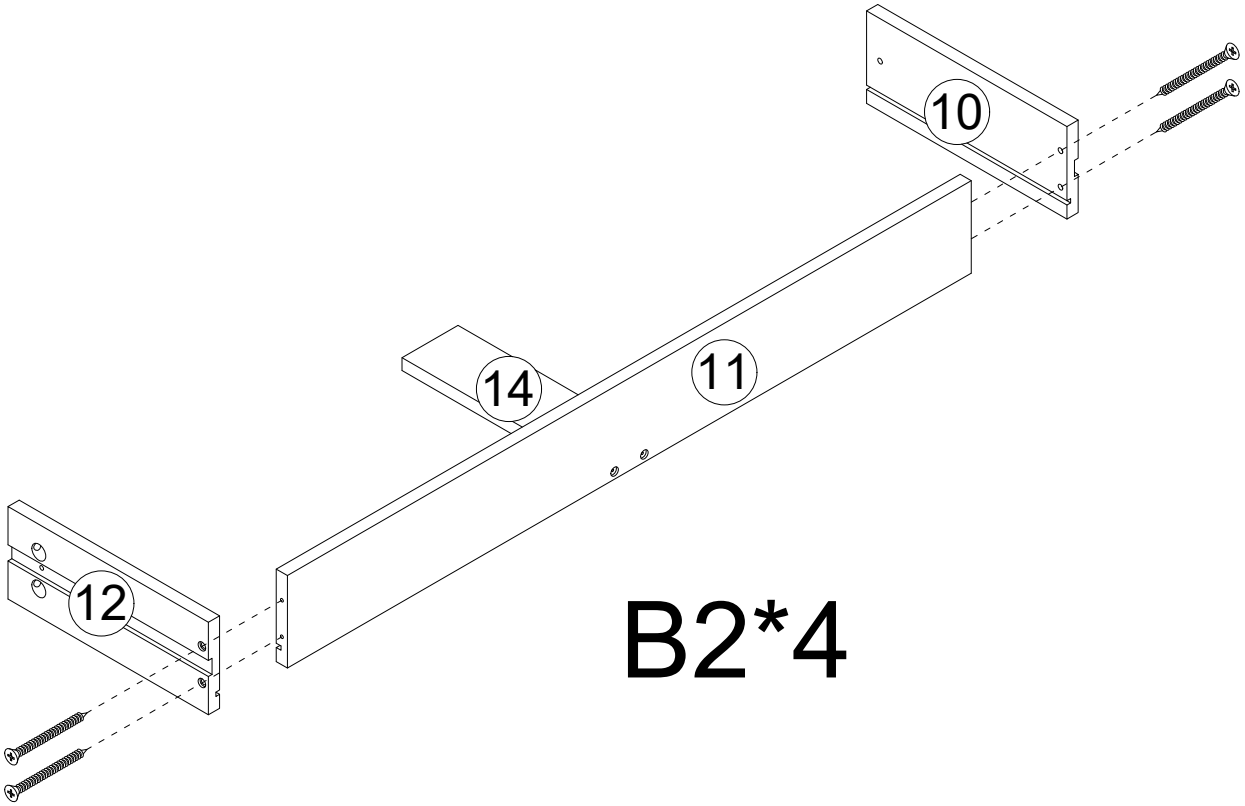



Step 3




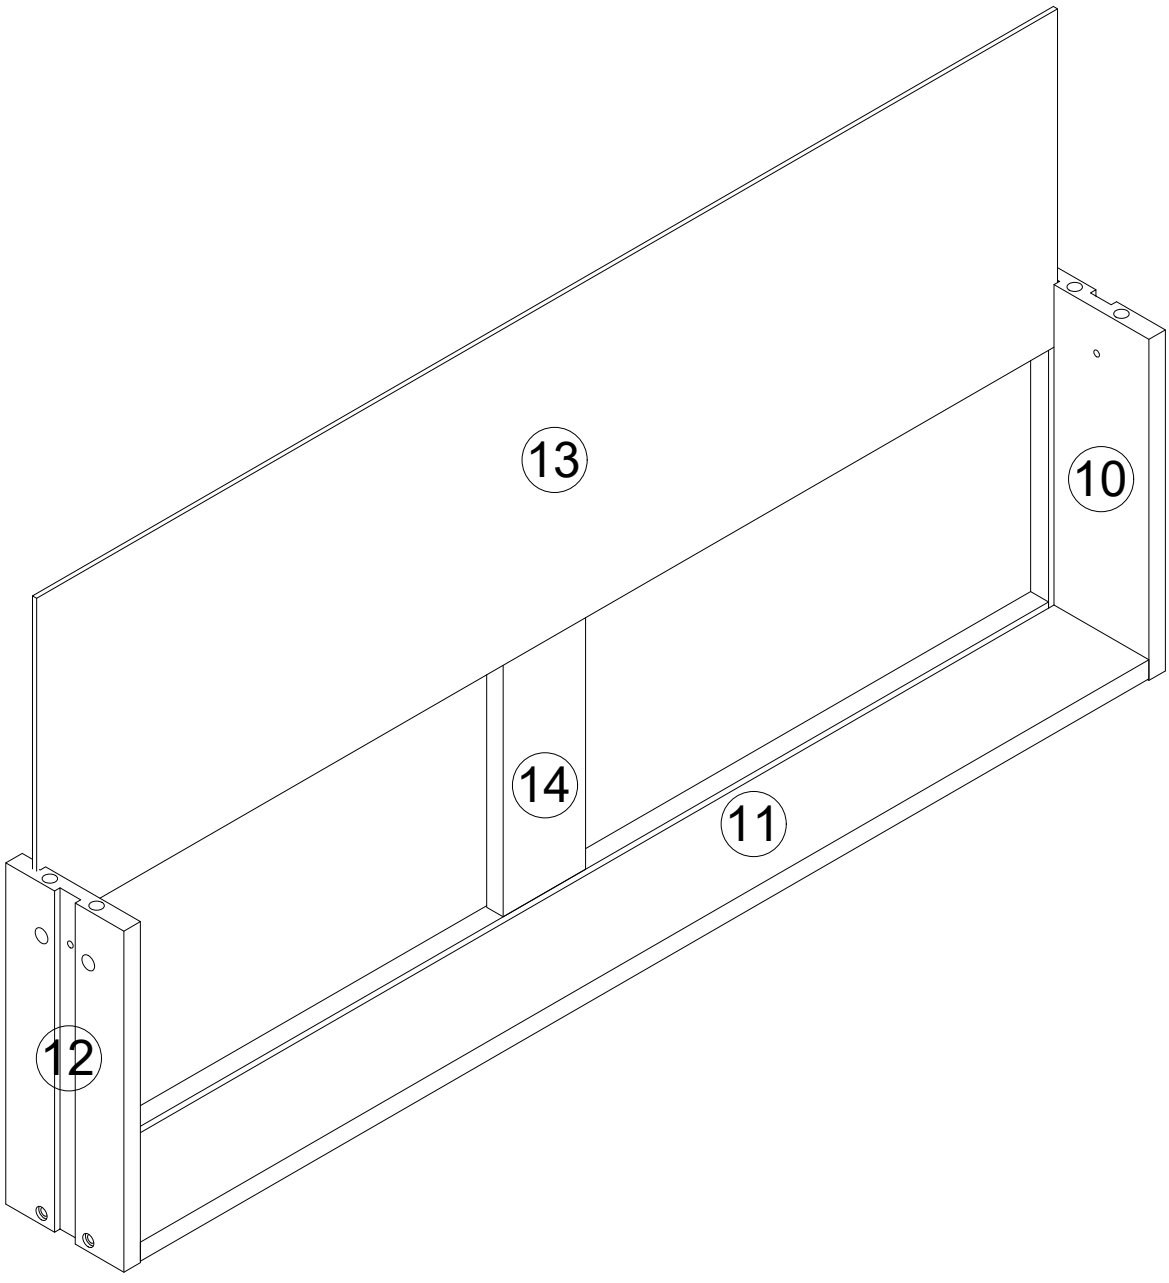


Step 4


		
	A1	5PCS

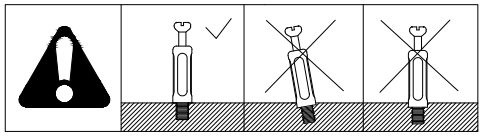


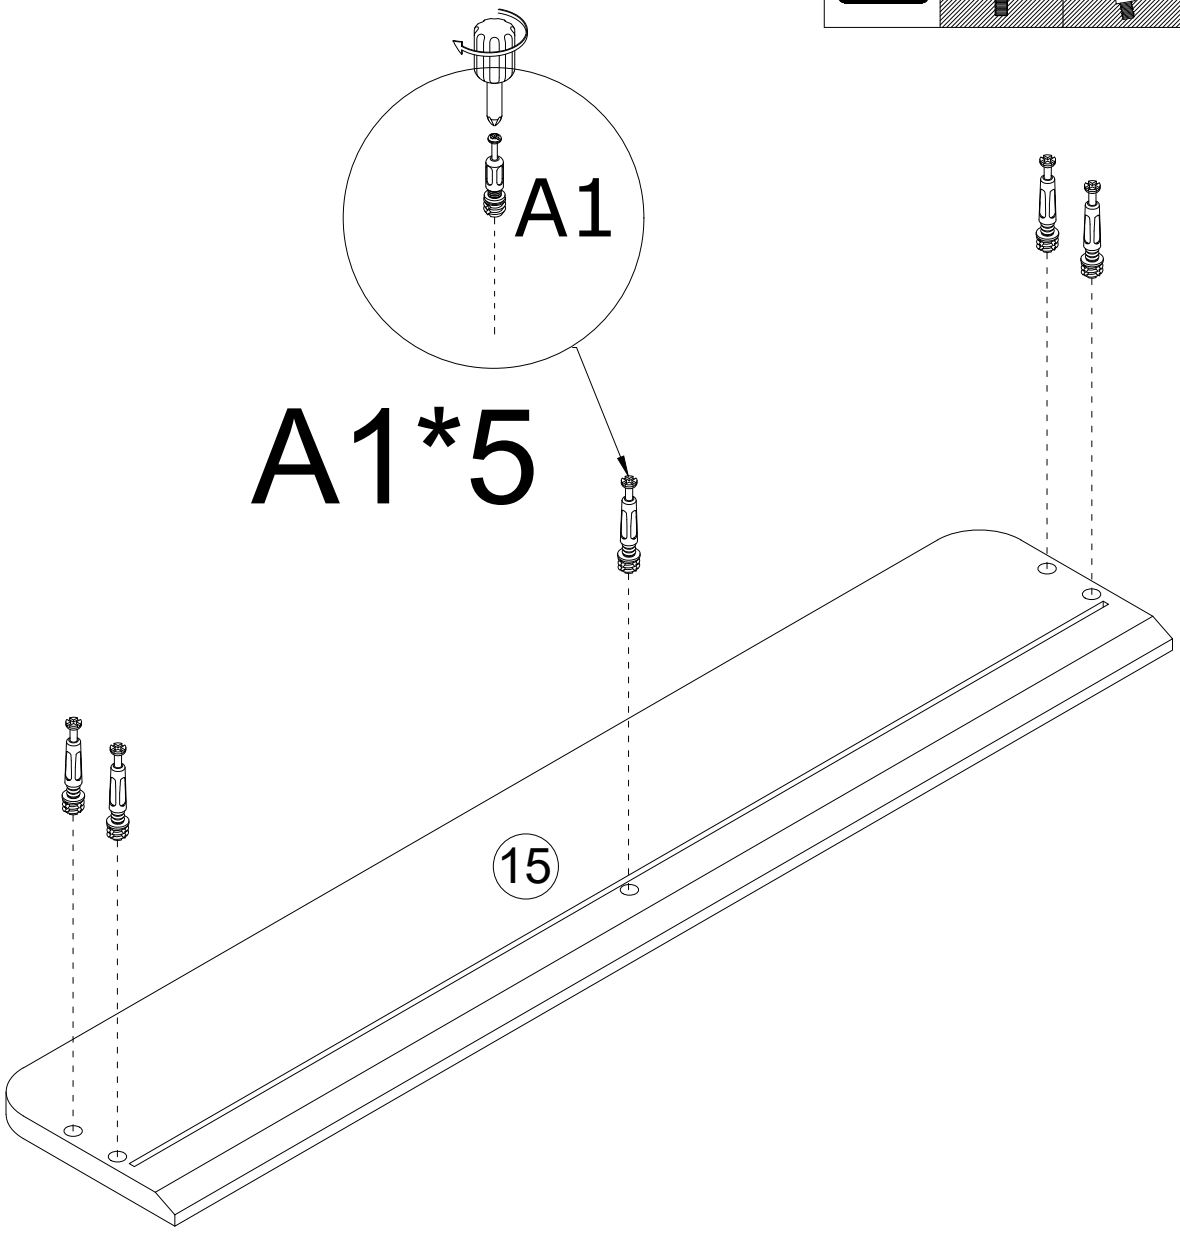

Step 5

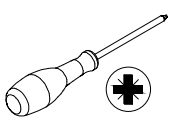
					
	A4	4PCS	A2	1PCS	

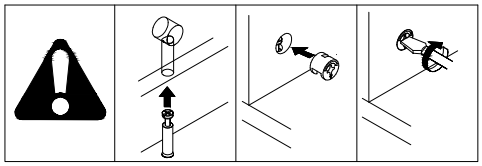


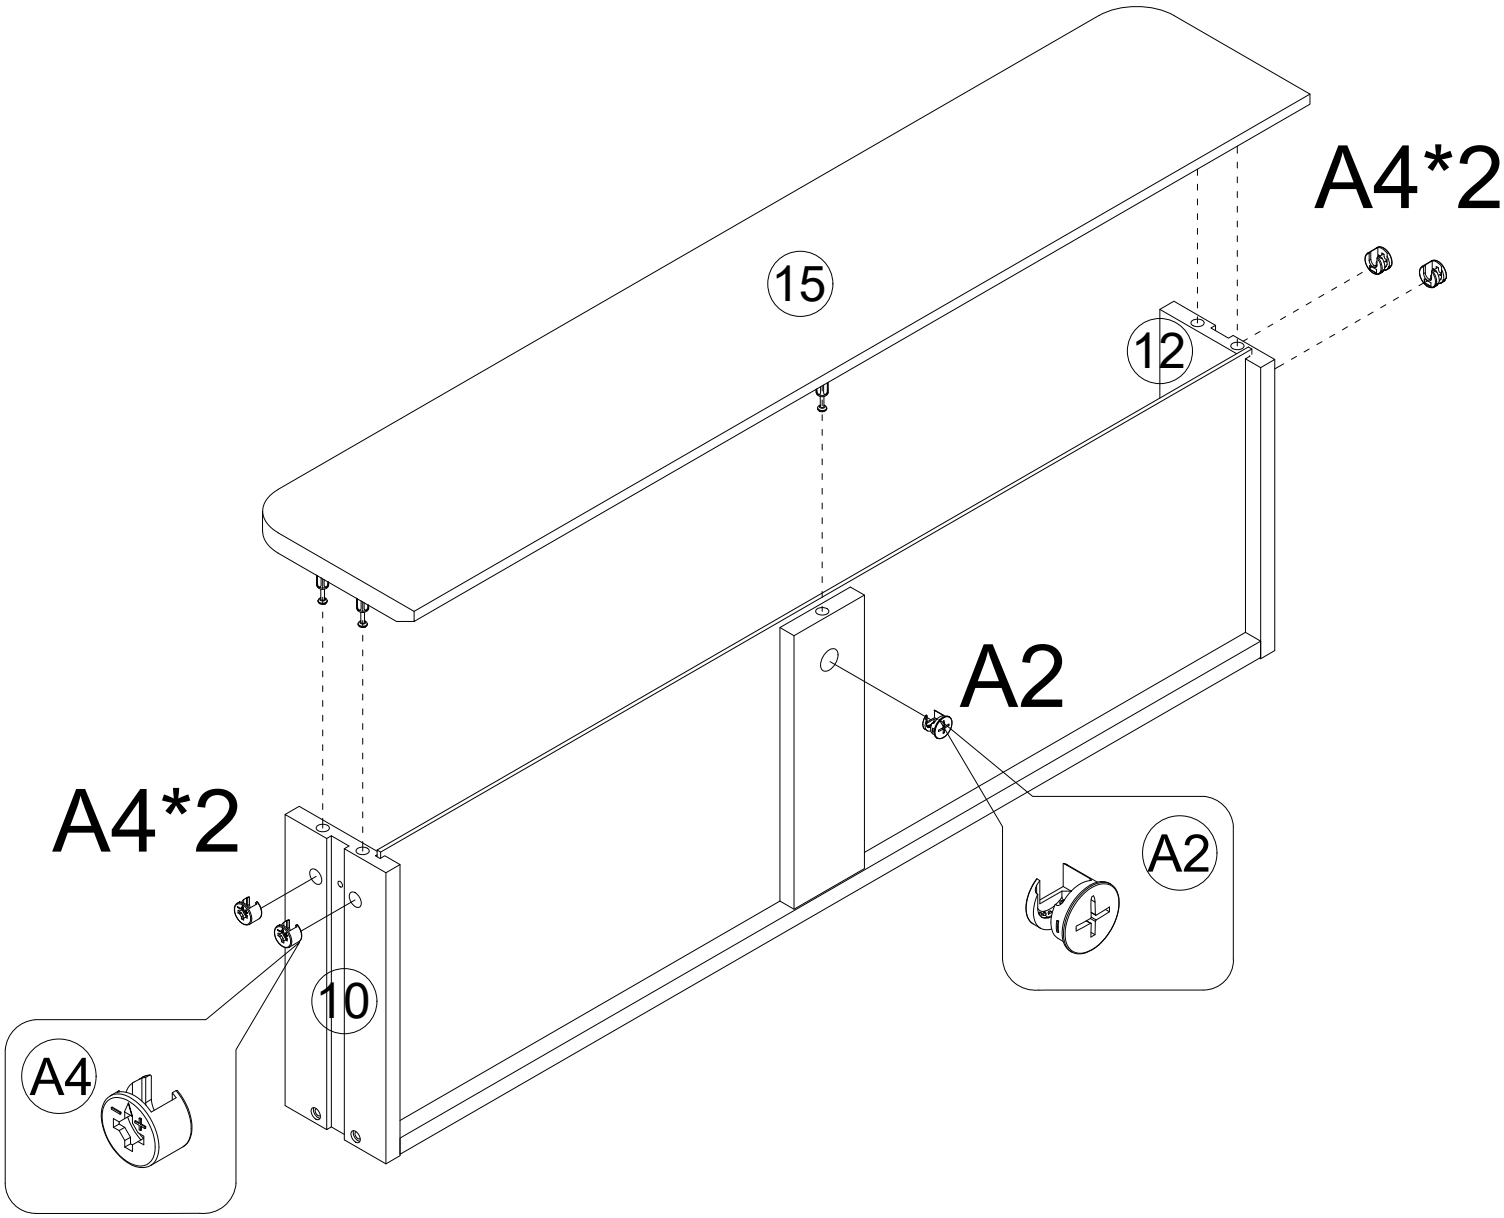


Step 6


	C9 4PCS	

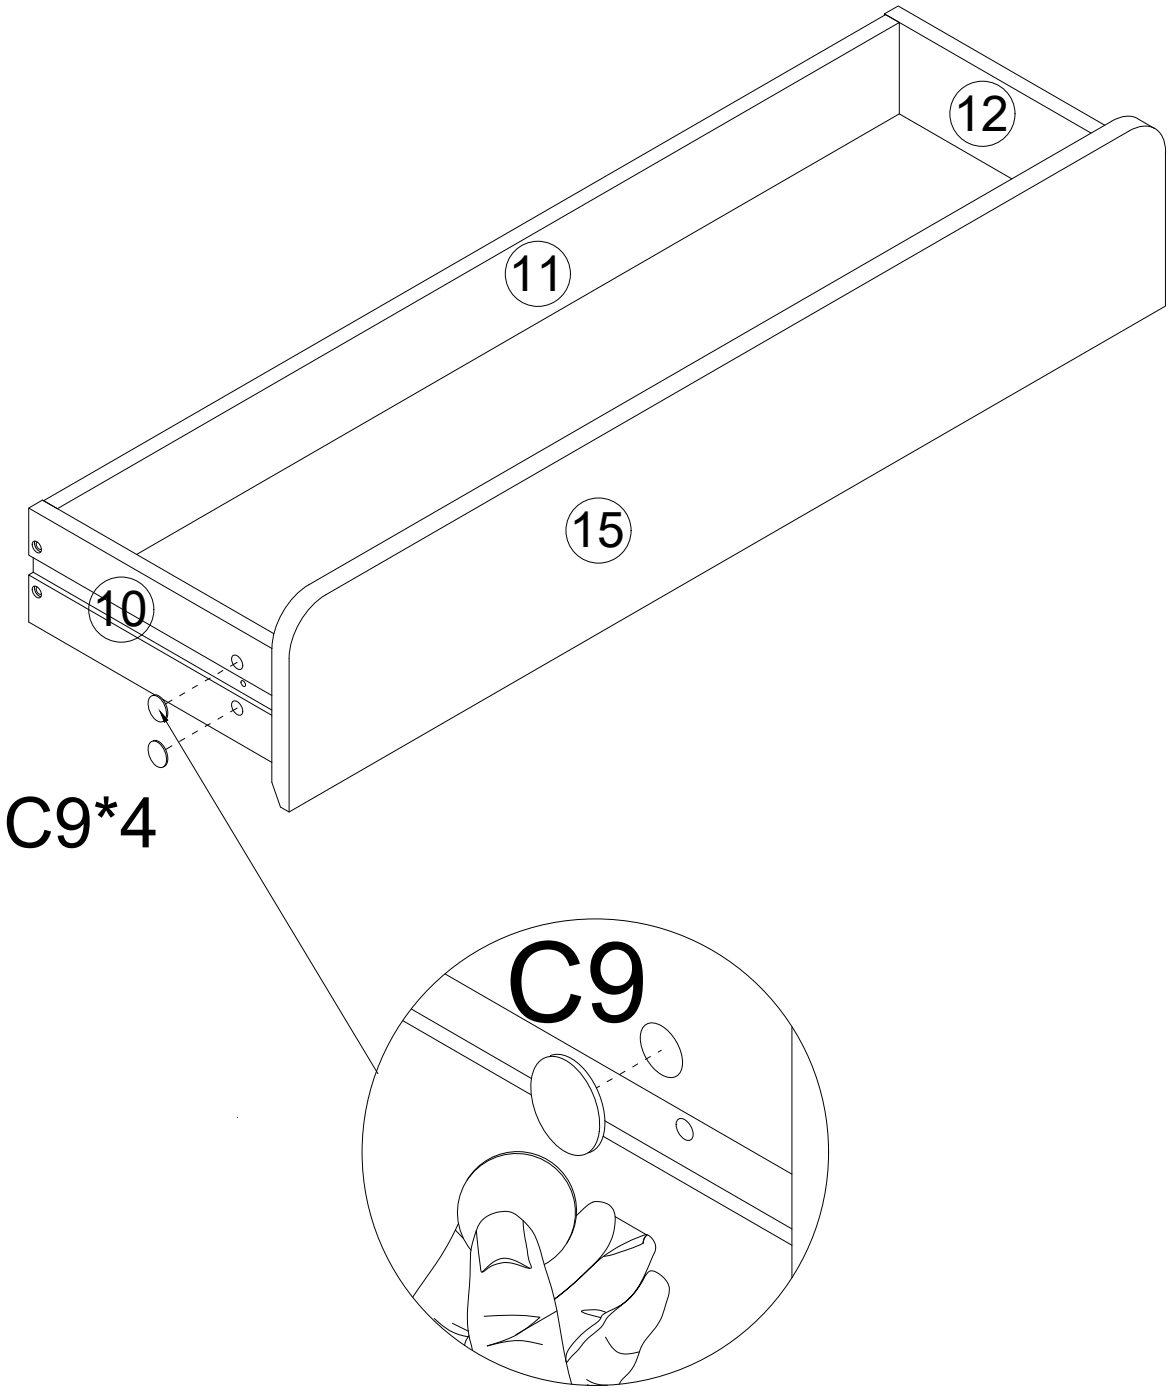


Step 7


		C3	2PCS		C2	2PCS	 	B1	4PCS

X2

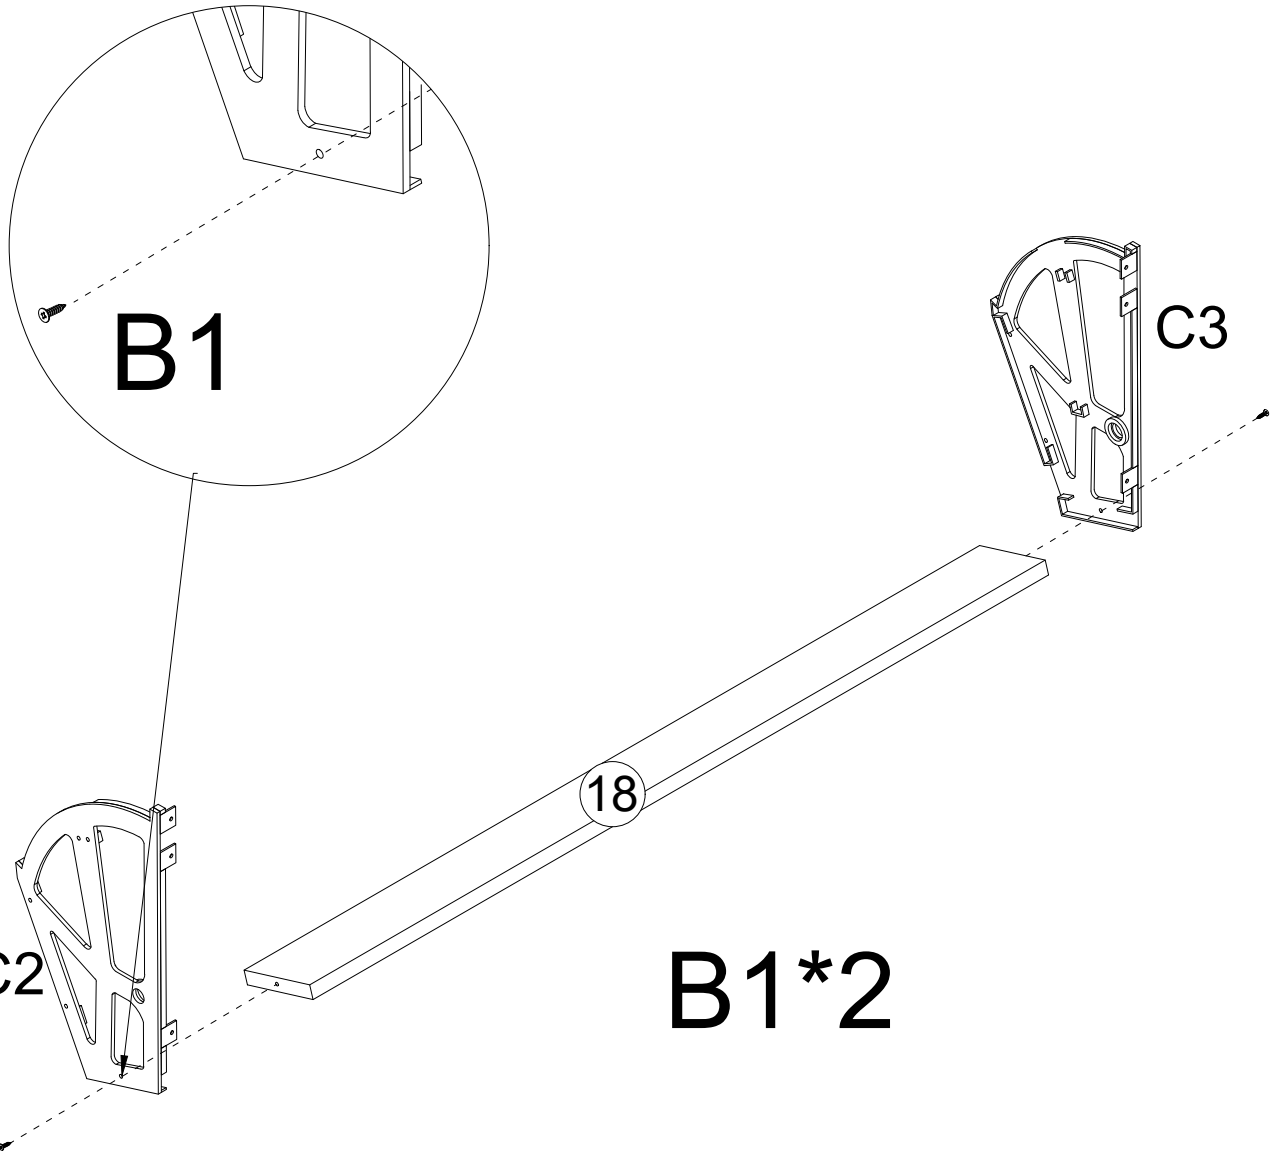



Step 8

		
	B1	12PCS

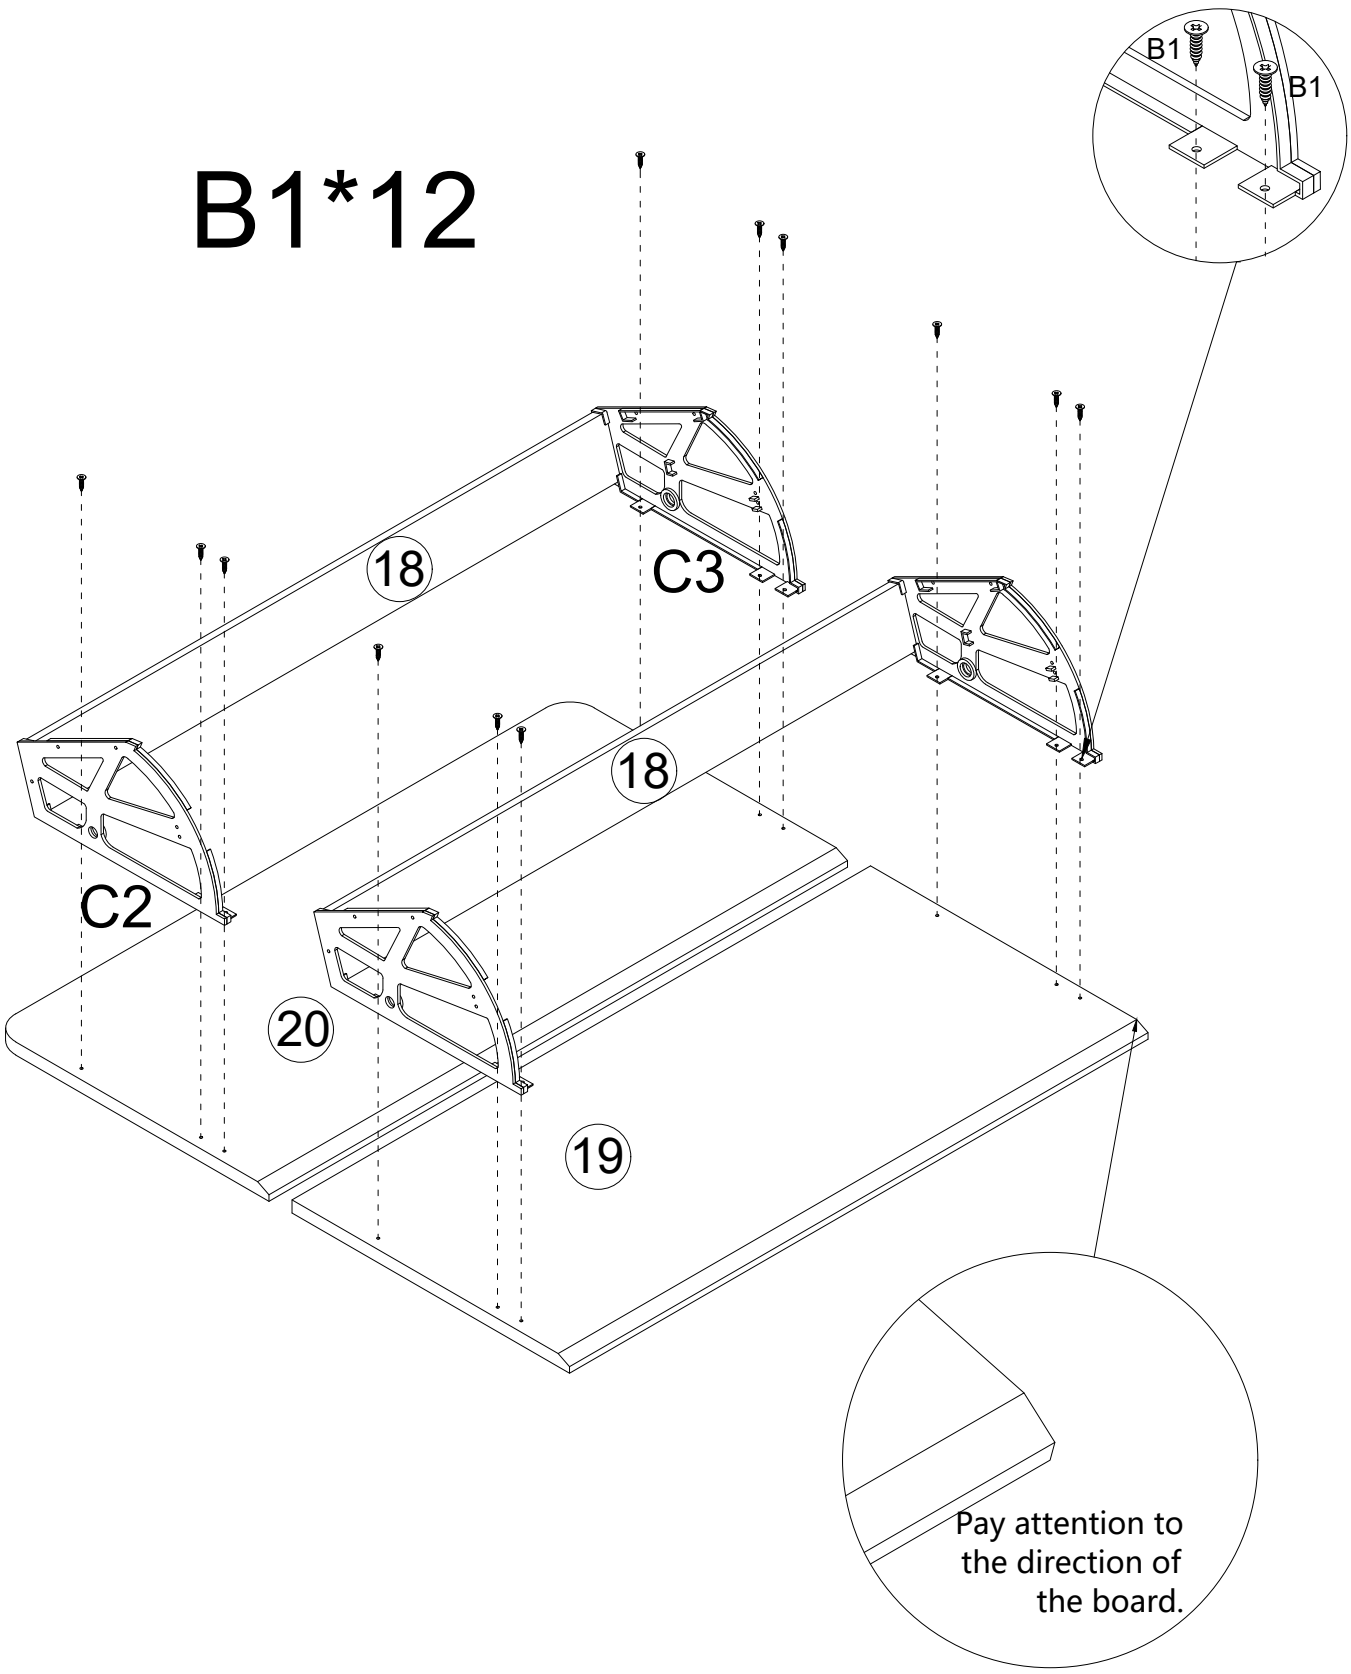


Step 9

		
	B1	12PCS

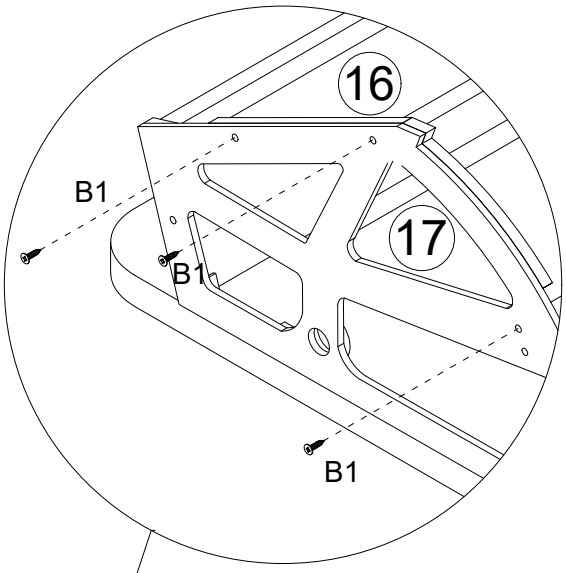


B1*12

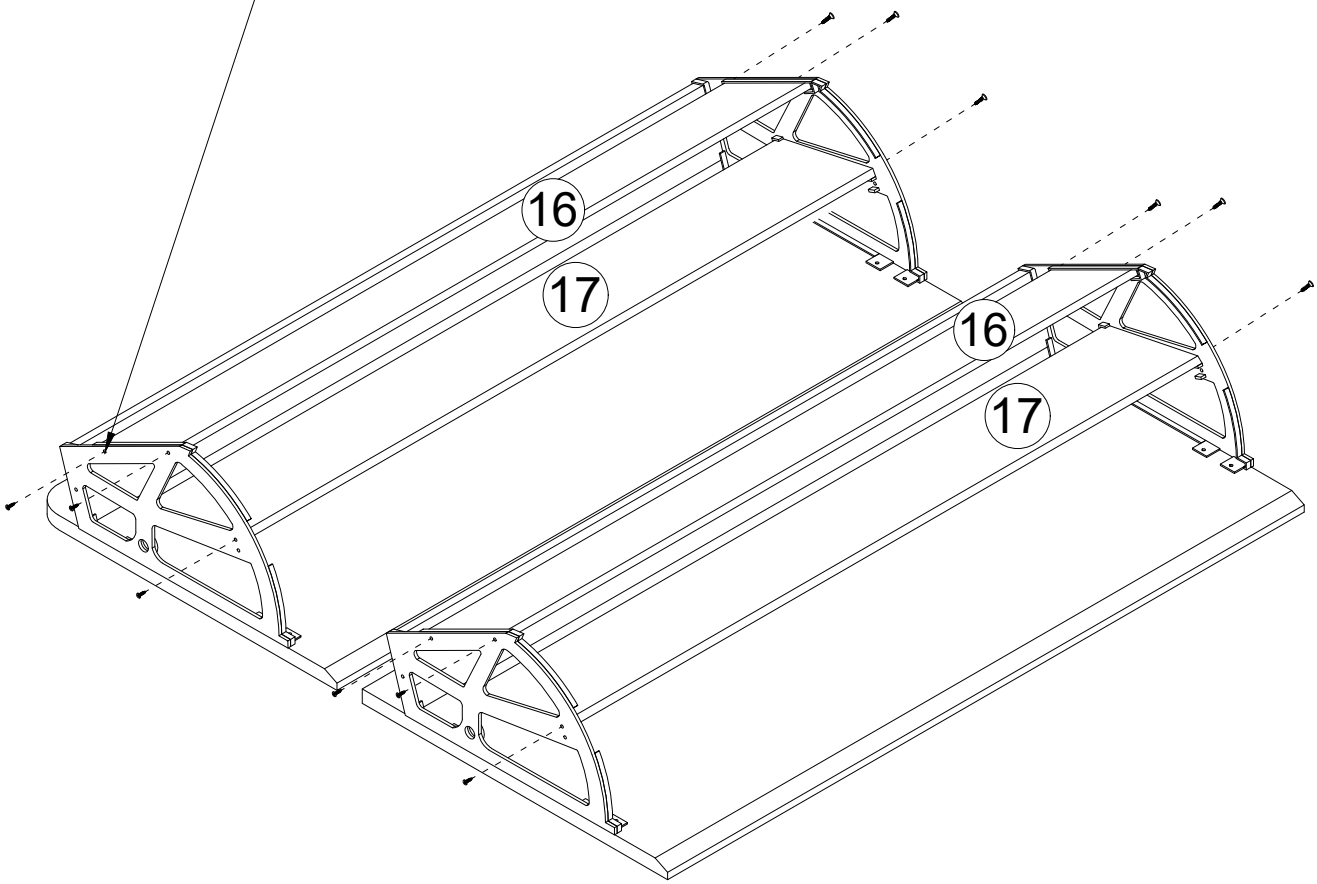


Step 10




A1	8PCS




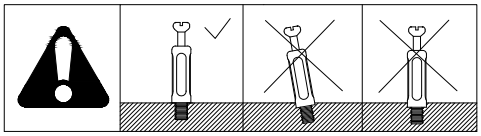



X2

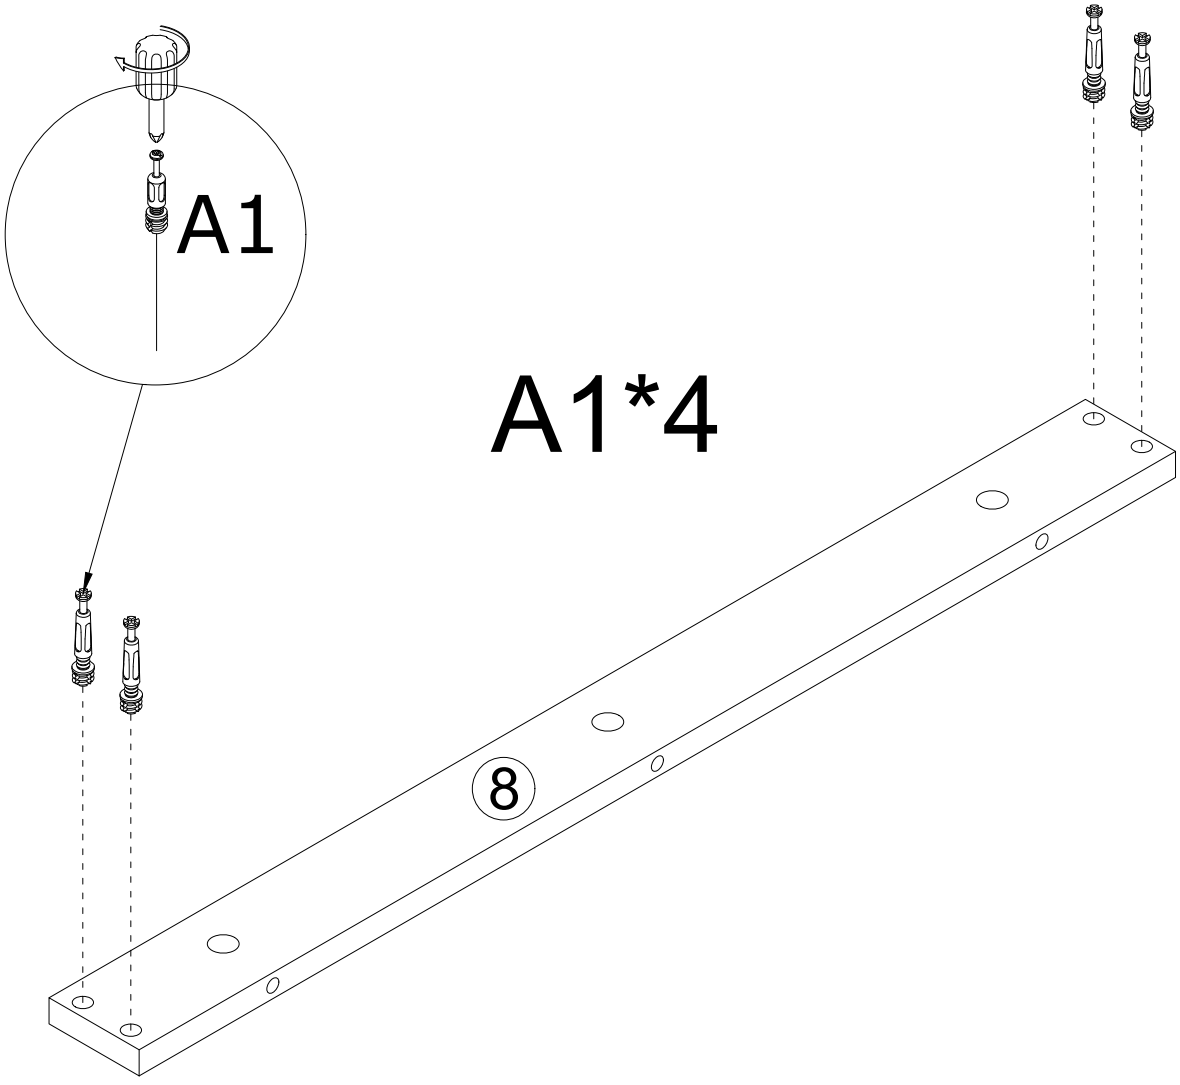


Step 11


		
	A2 8PCS	

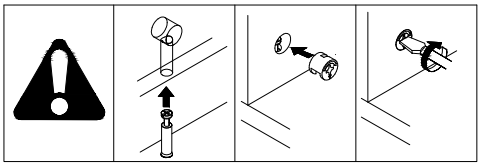


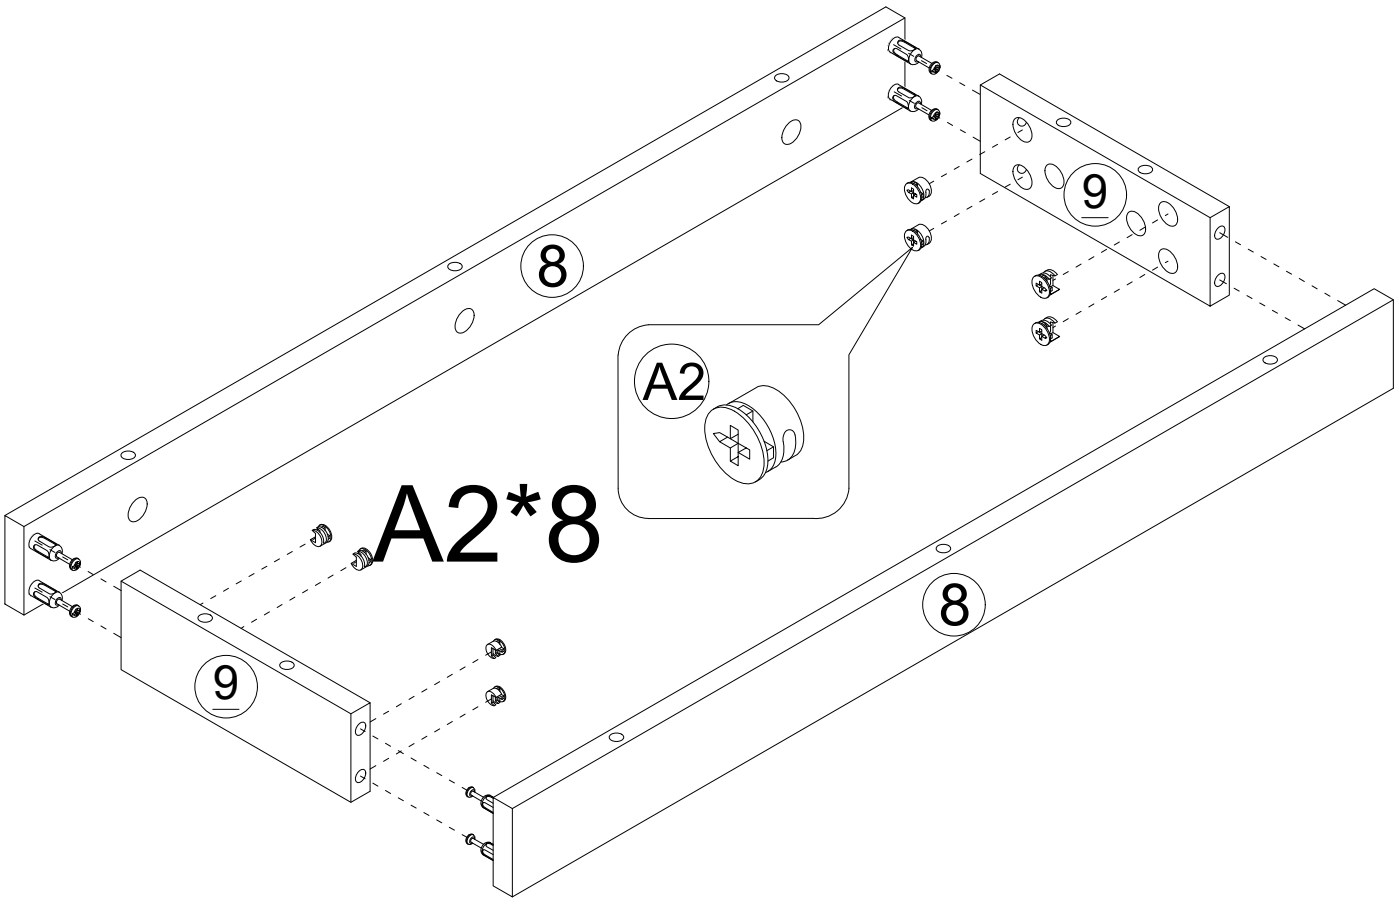


Step 12


		
	A1 10PCS	

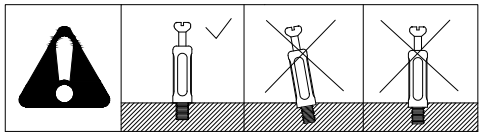


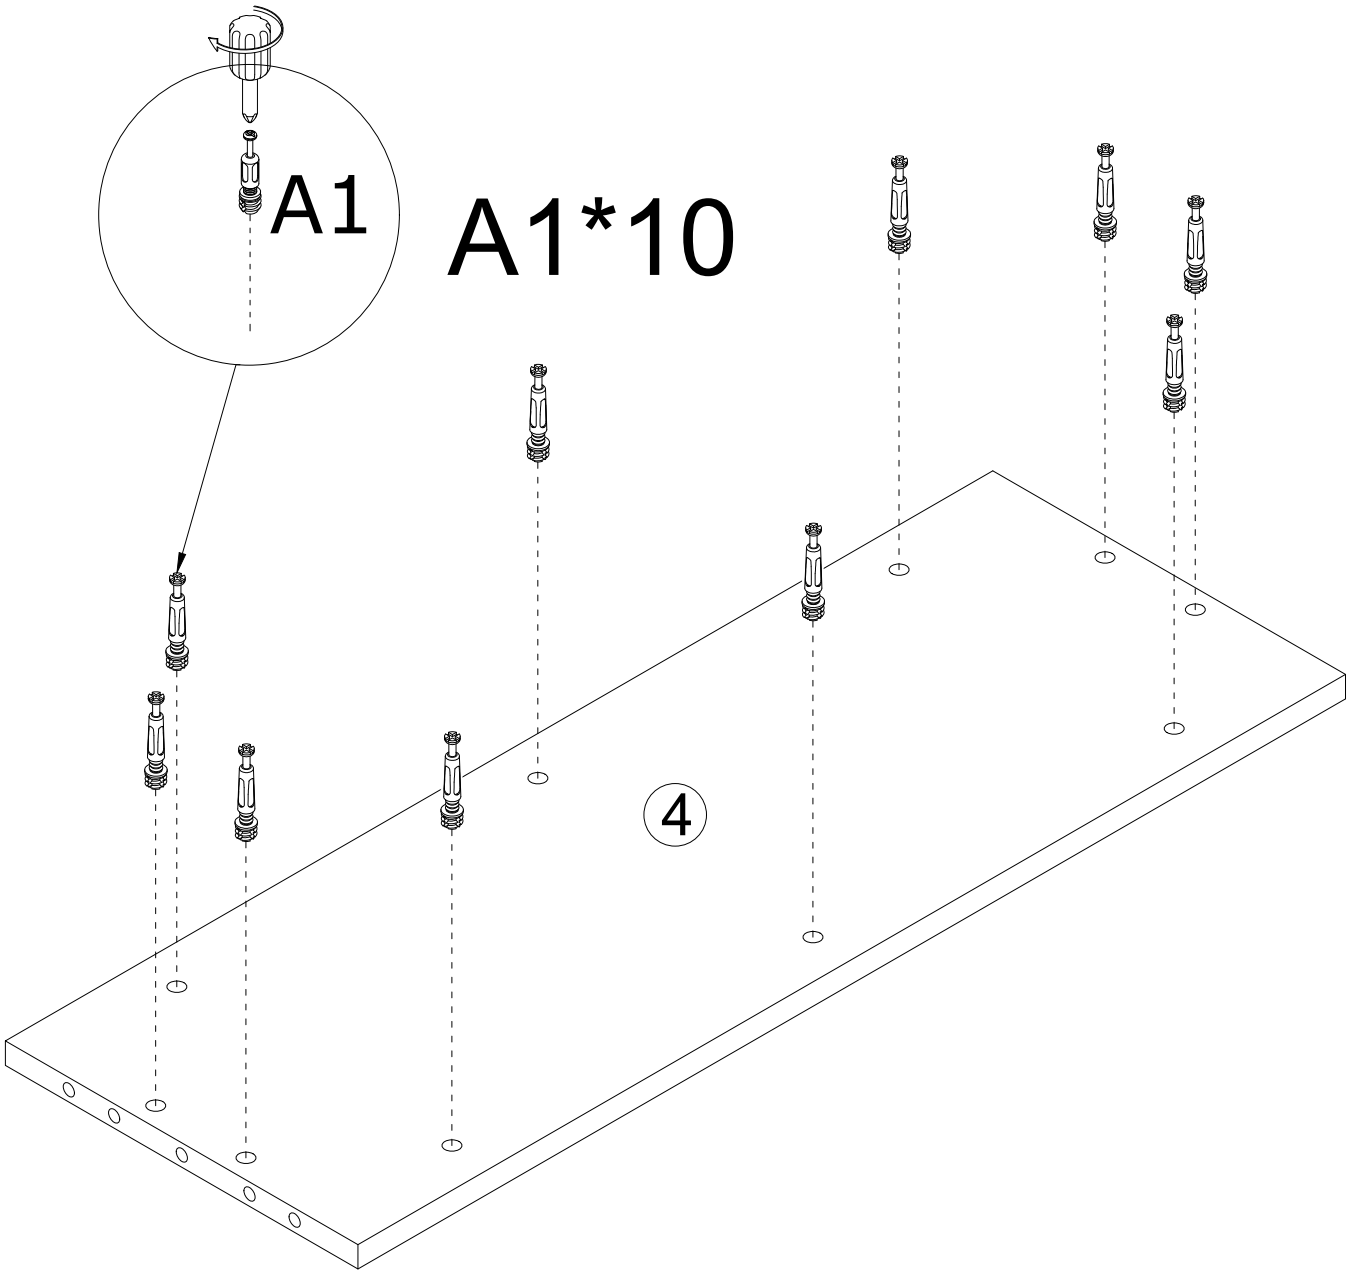

Step 13


		
	A2 10PCS	

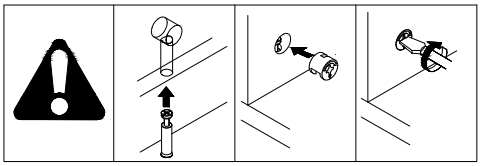


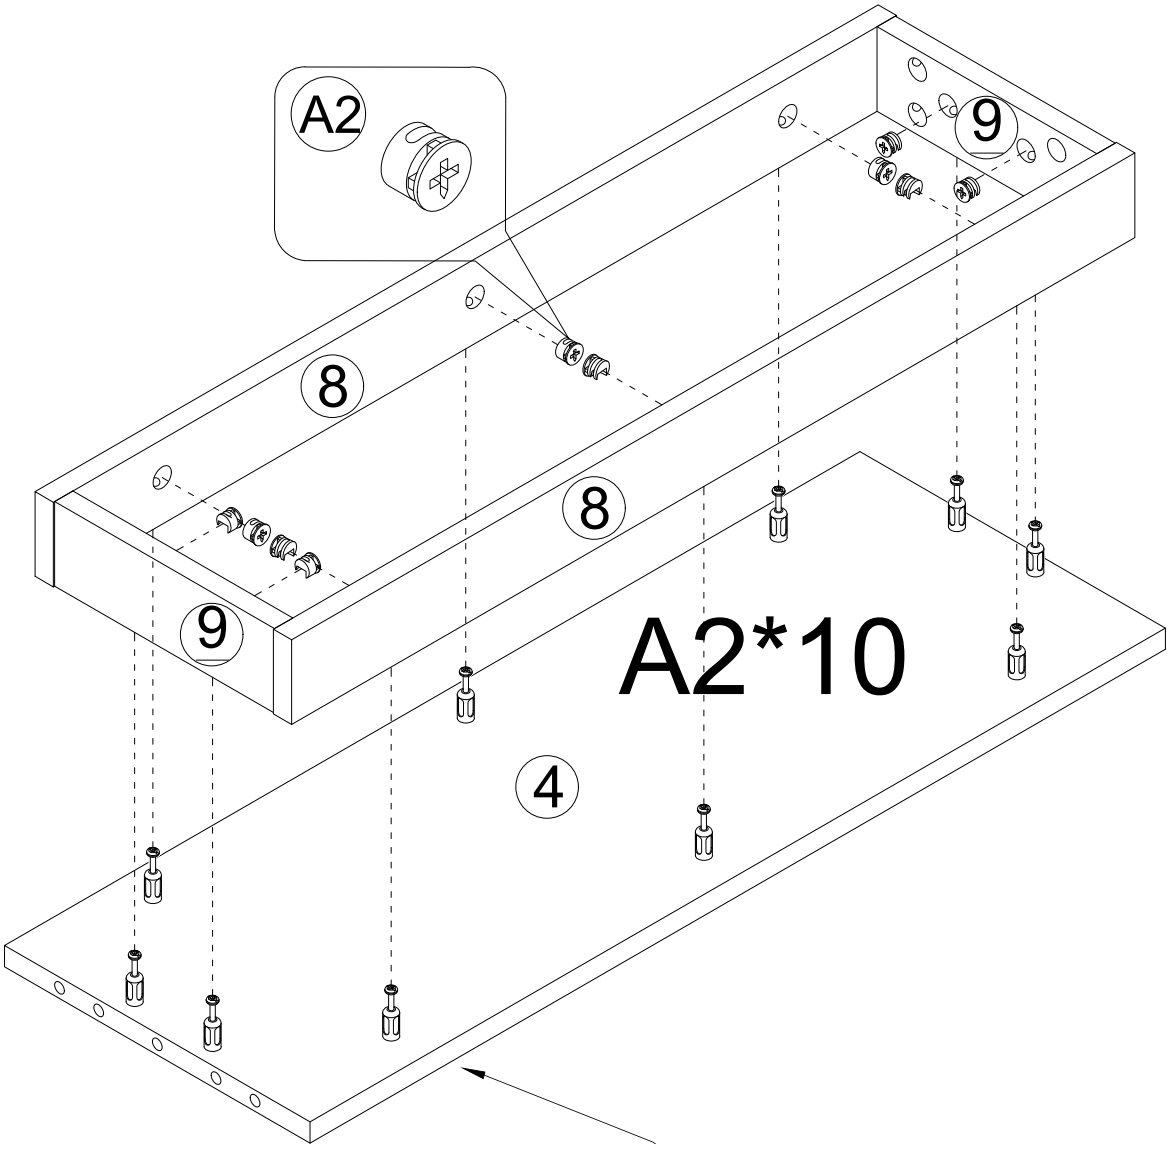


The visible surface is a matte edge.

Step 14


							
	C5	2PCS	C4	2PCS	A1	10PCS	

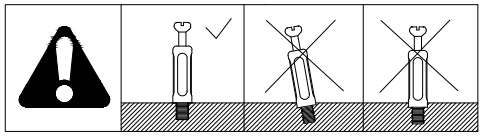



A1*10

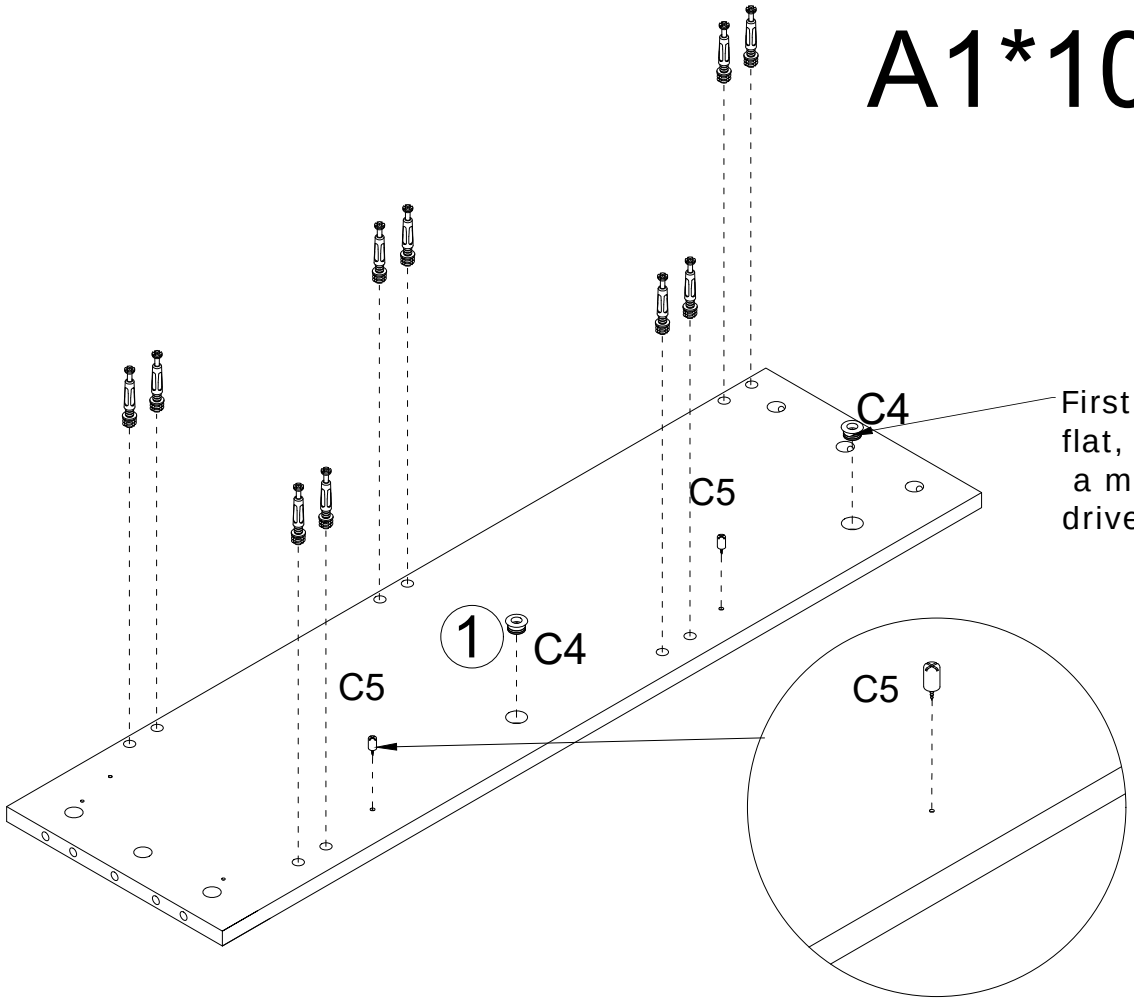


Step 15


		C5	2PCS		C4	2PCS	A1	10PCS	

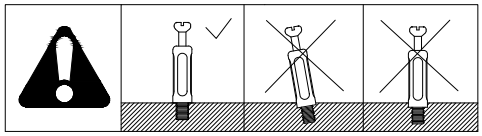


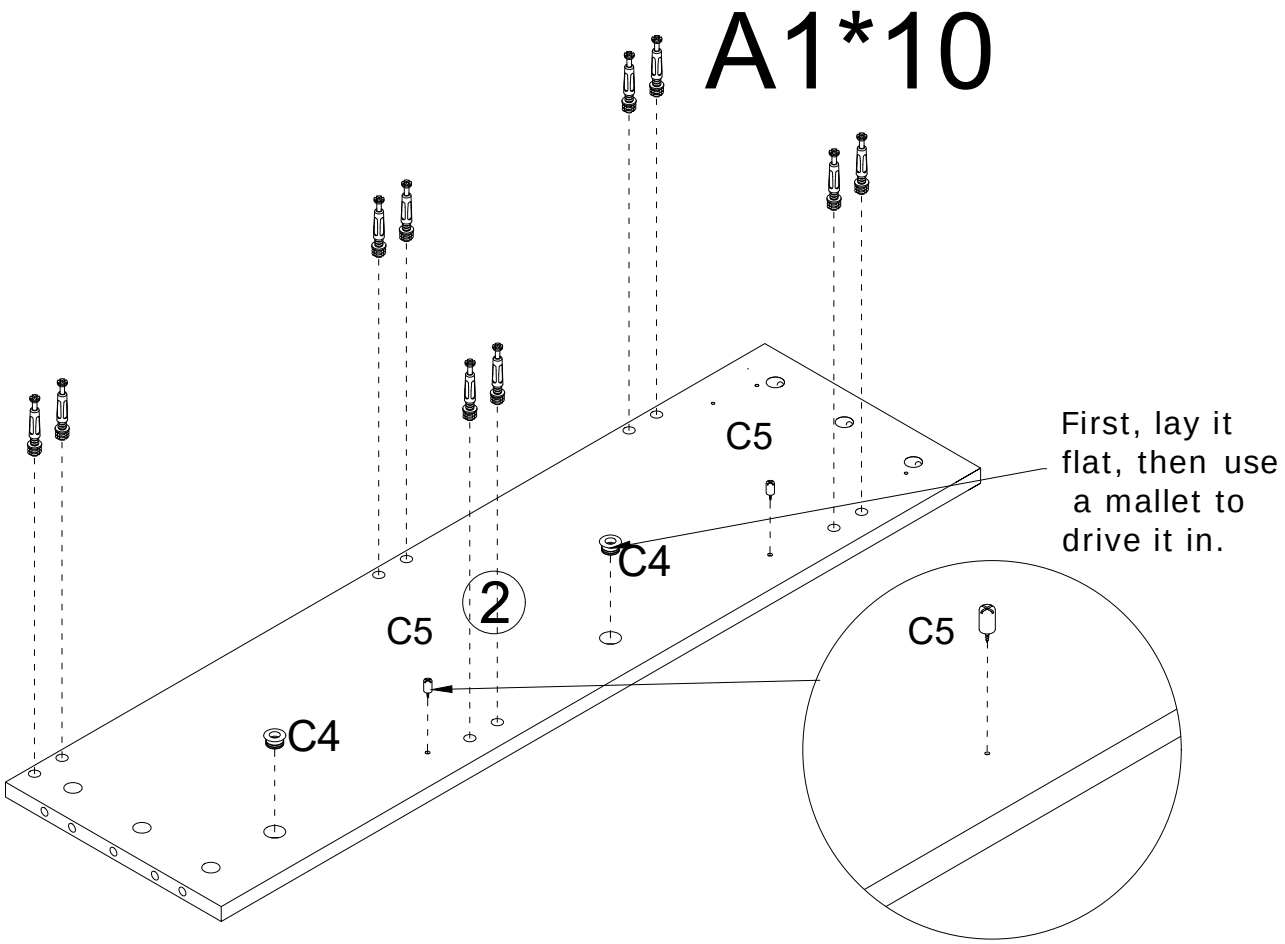



Step 16


		
	A2 20PCS	

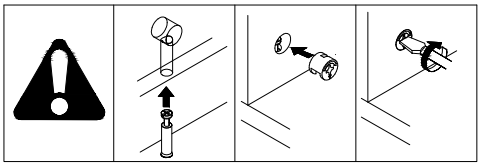


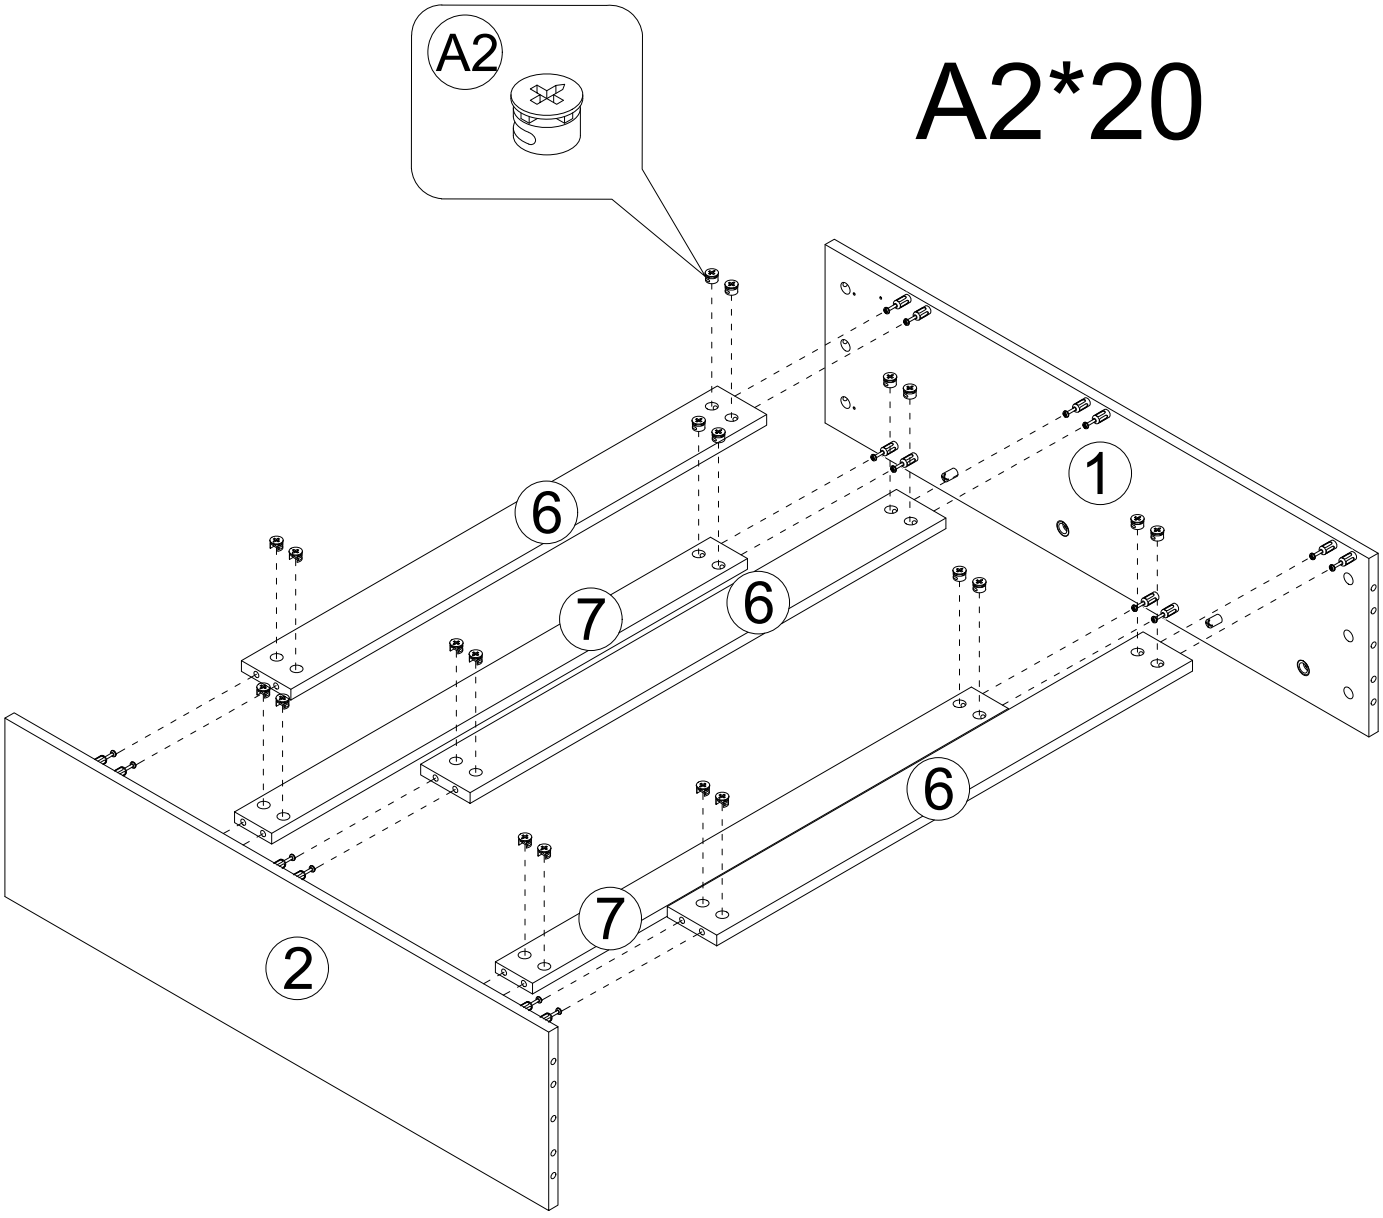

Step 17


		
	A3	24PCS

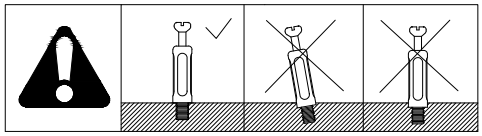


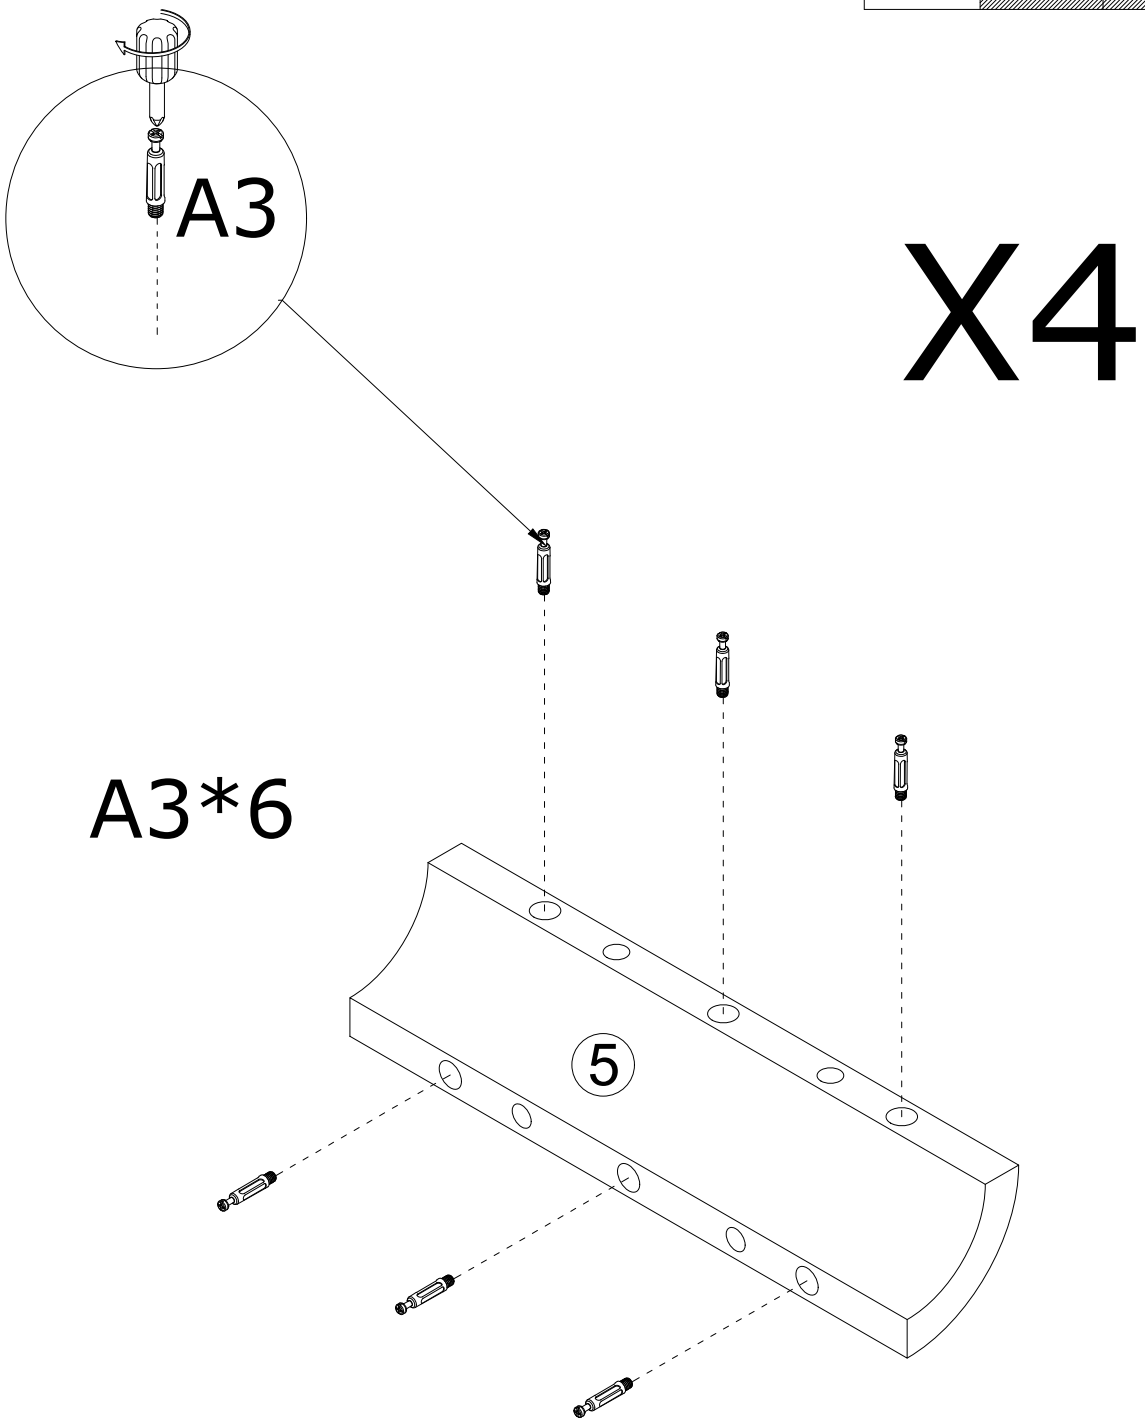


Step 18


		C1	4PCS	 A2	6PCS

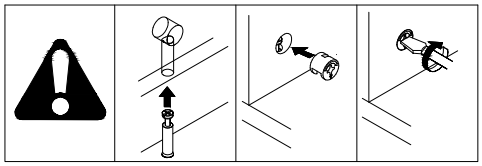


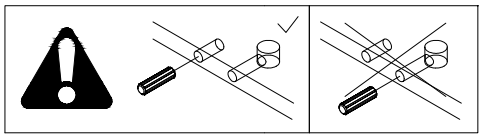


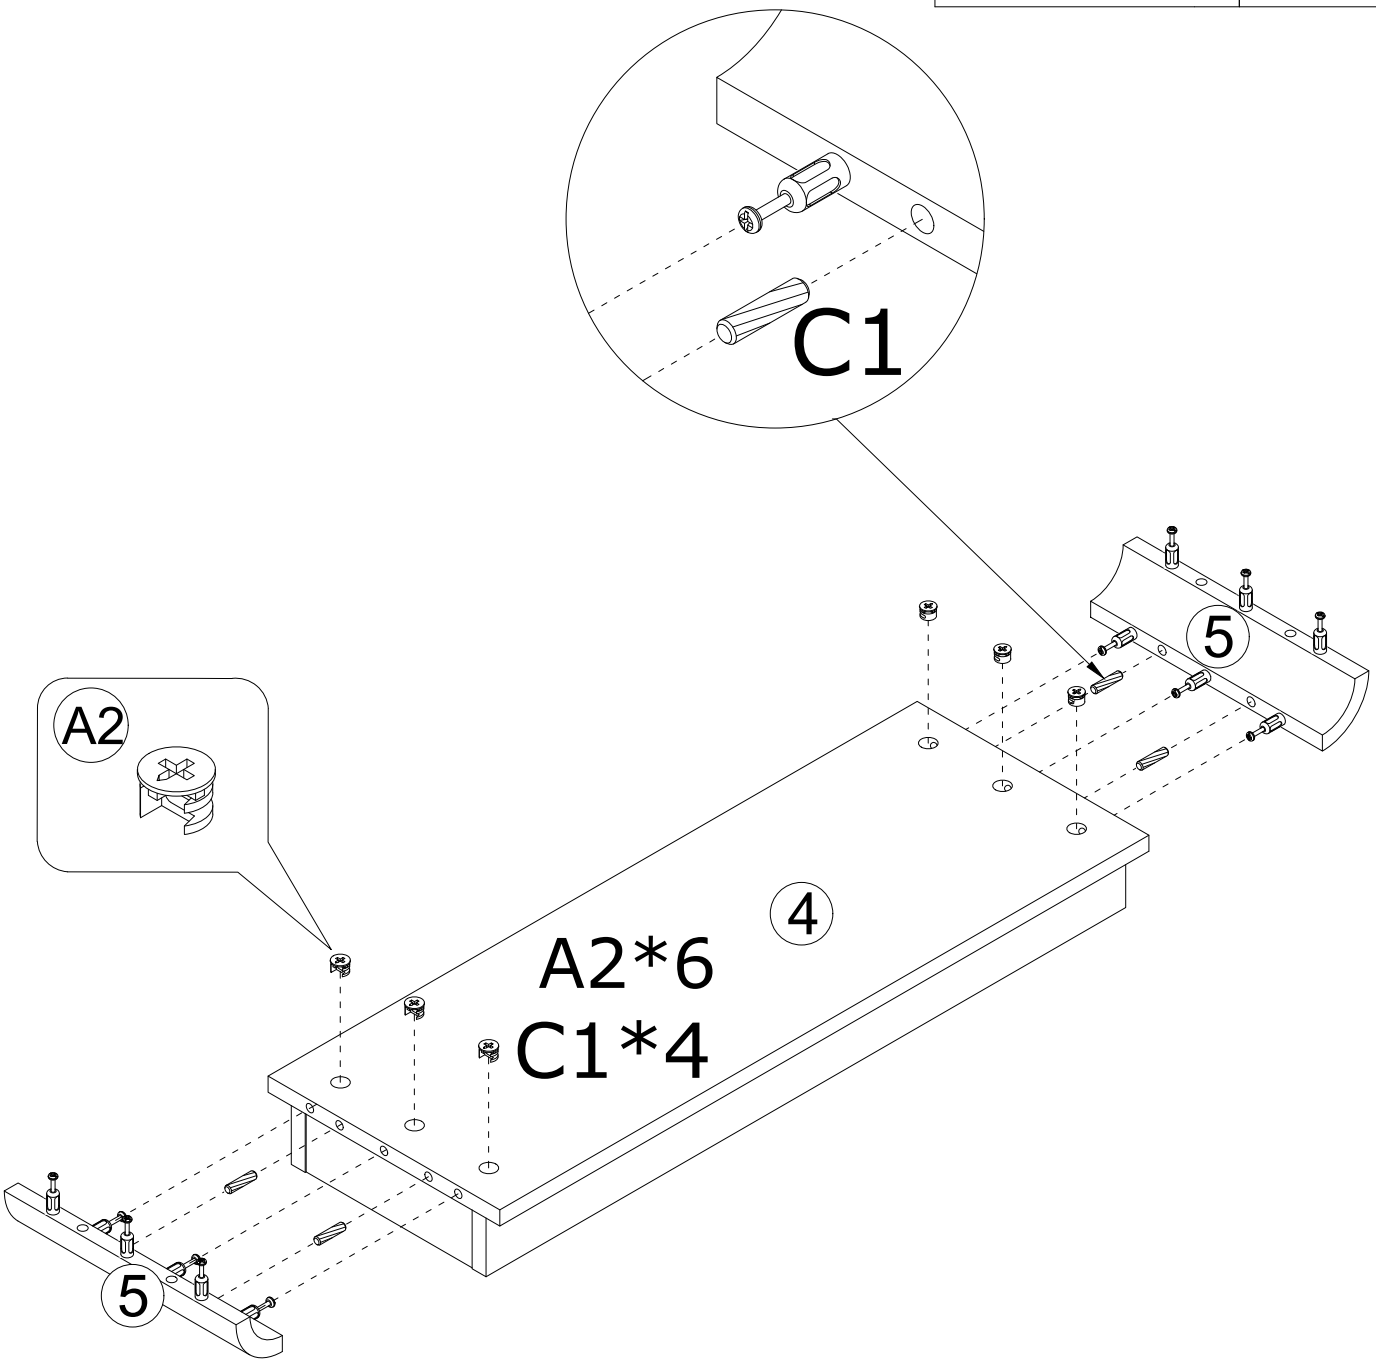

Step 19


				
	C1 4PCS		A2 6PCS	

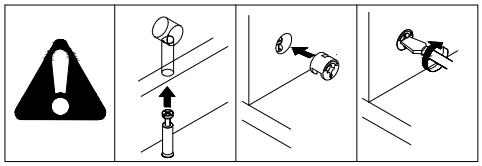


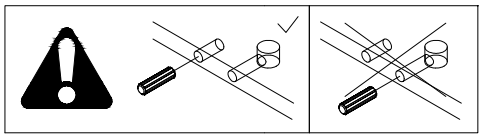


Step 20


		C1	4PCS	 A2	6PCS

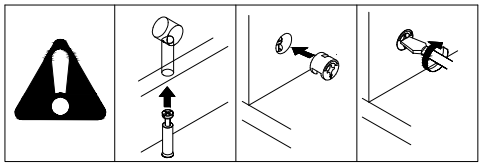


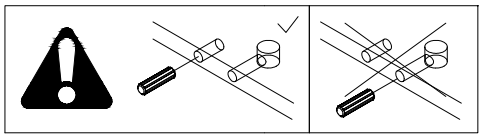


Step 21


				
	C1	4PCS	A2	6PCS

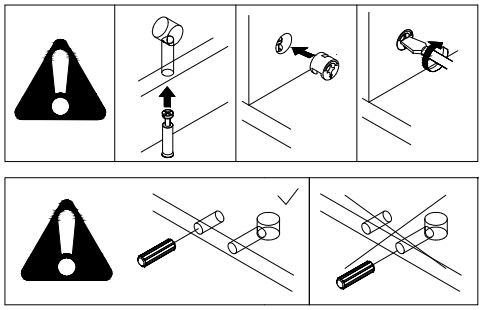

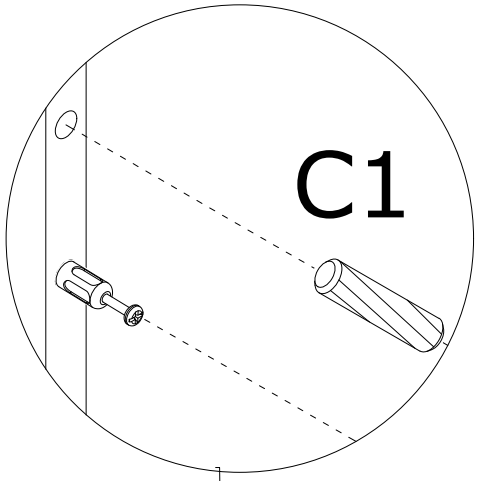


Glossy side down.

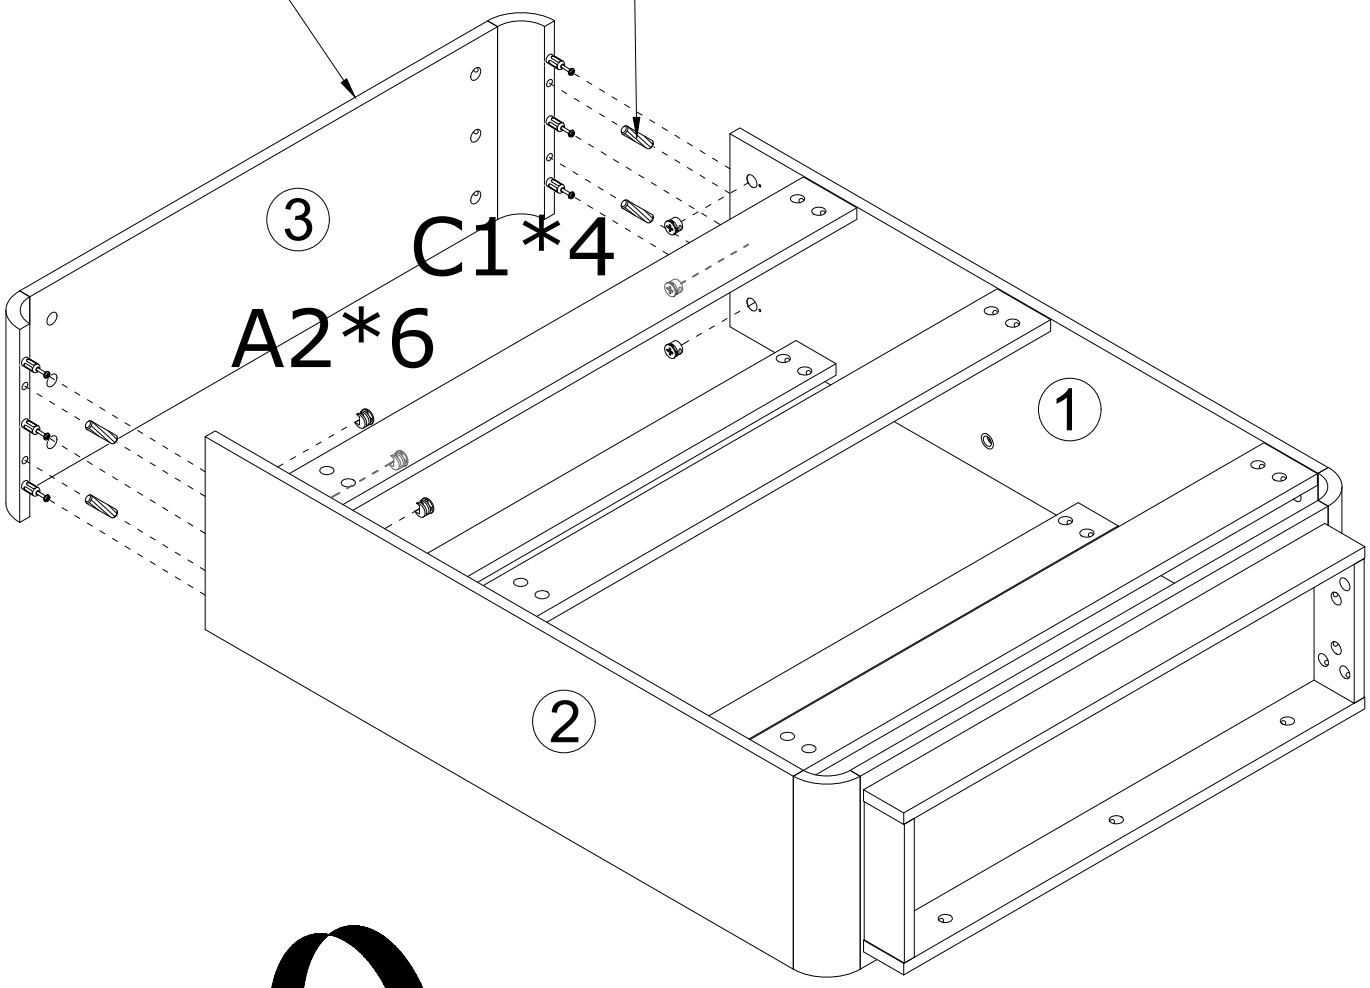


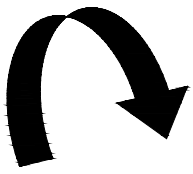


ROTATE 90°


Step 22

						
	B1	4PCS	HG	2PCS	C9	24PCS

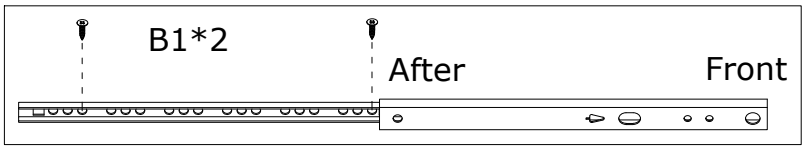



The guide rail can be moved back and forth. Use a B1 screw to lock the first hole at the front, and a B1 screw to lock the third hole at the back.

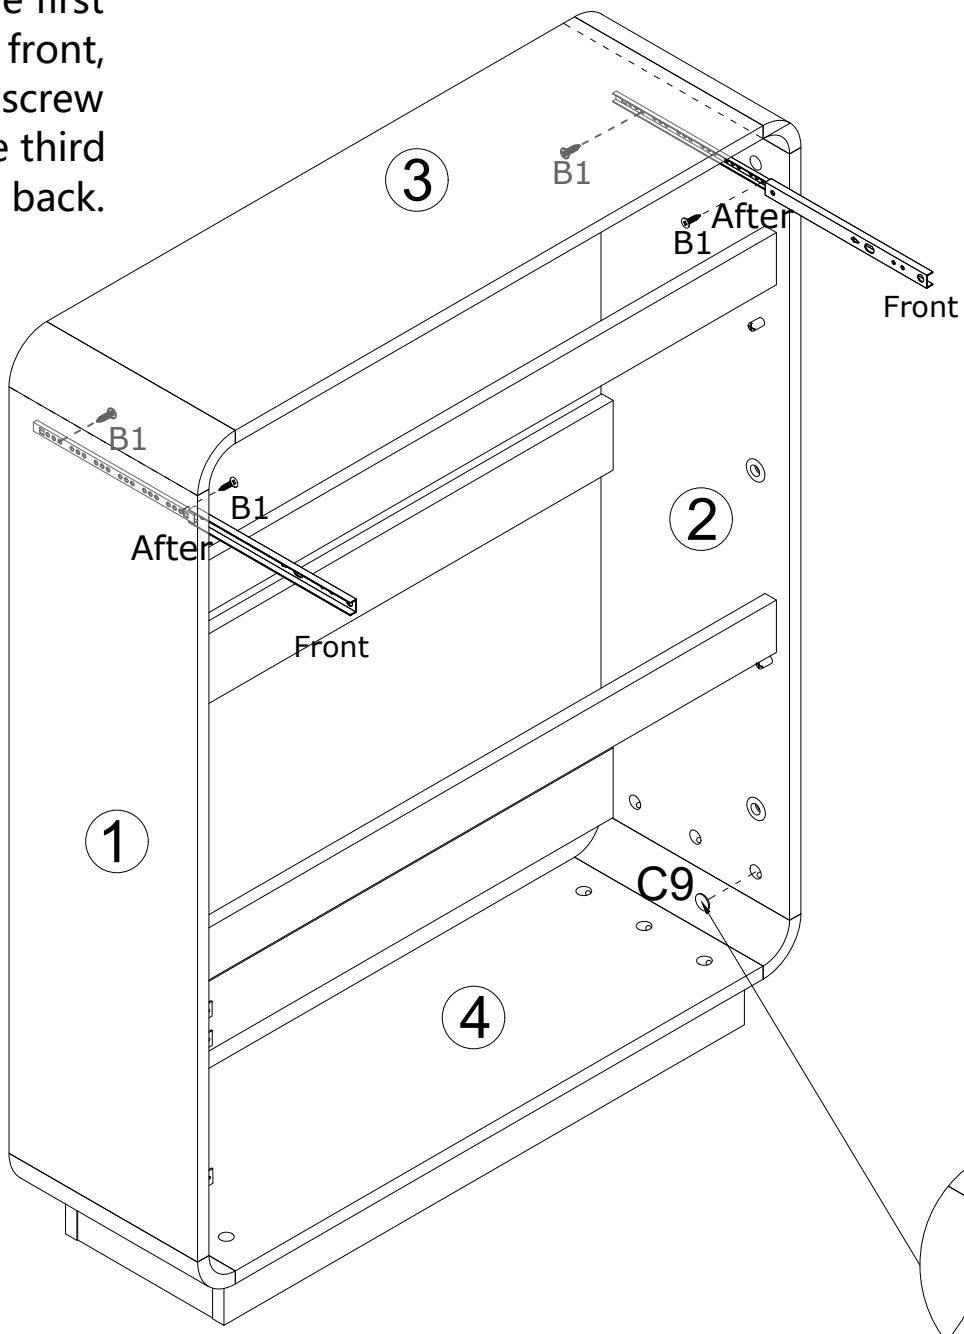


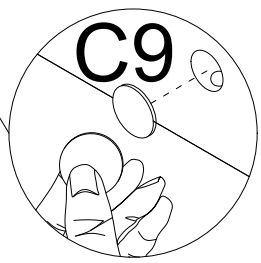


Step 23


				
	C8	2PCS	C7	2PCS

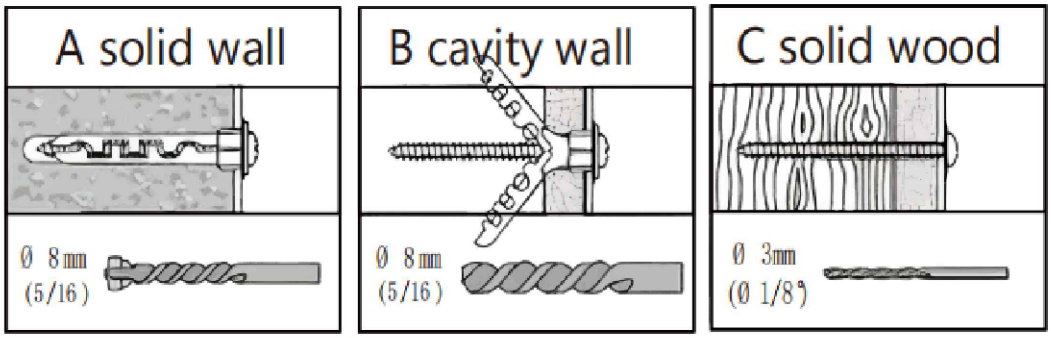

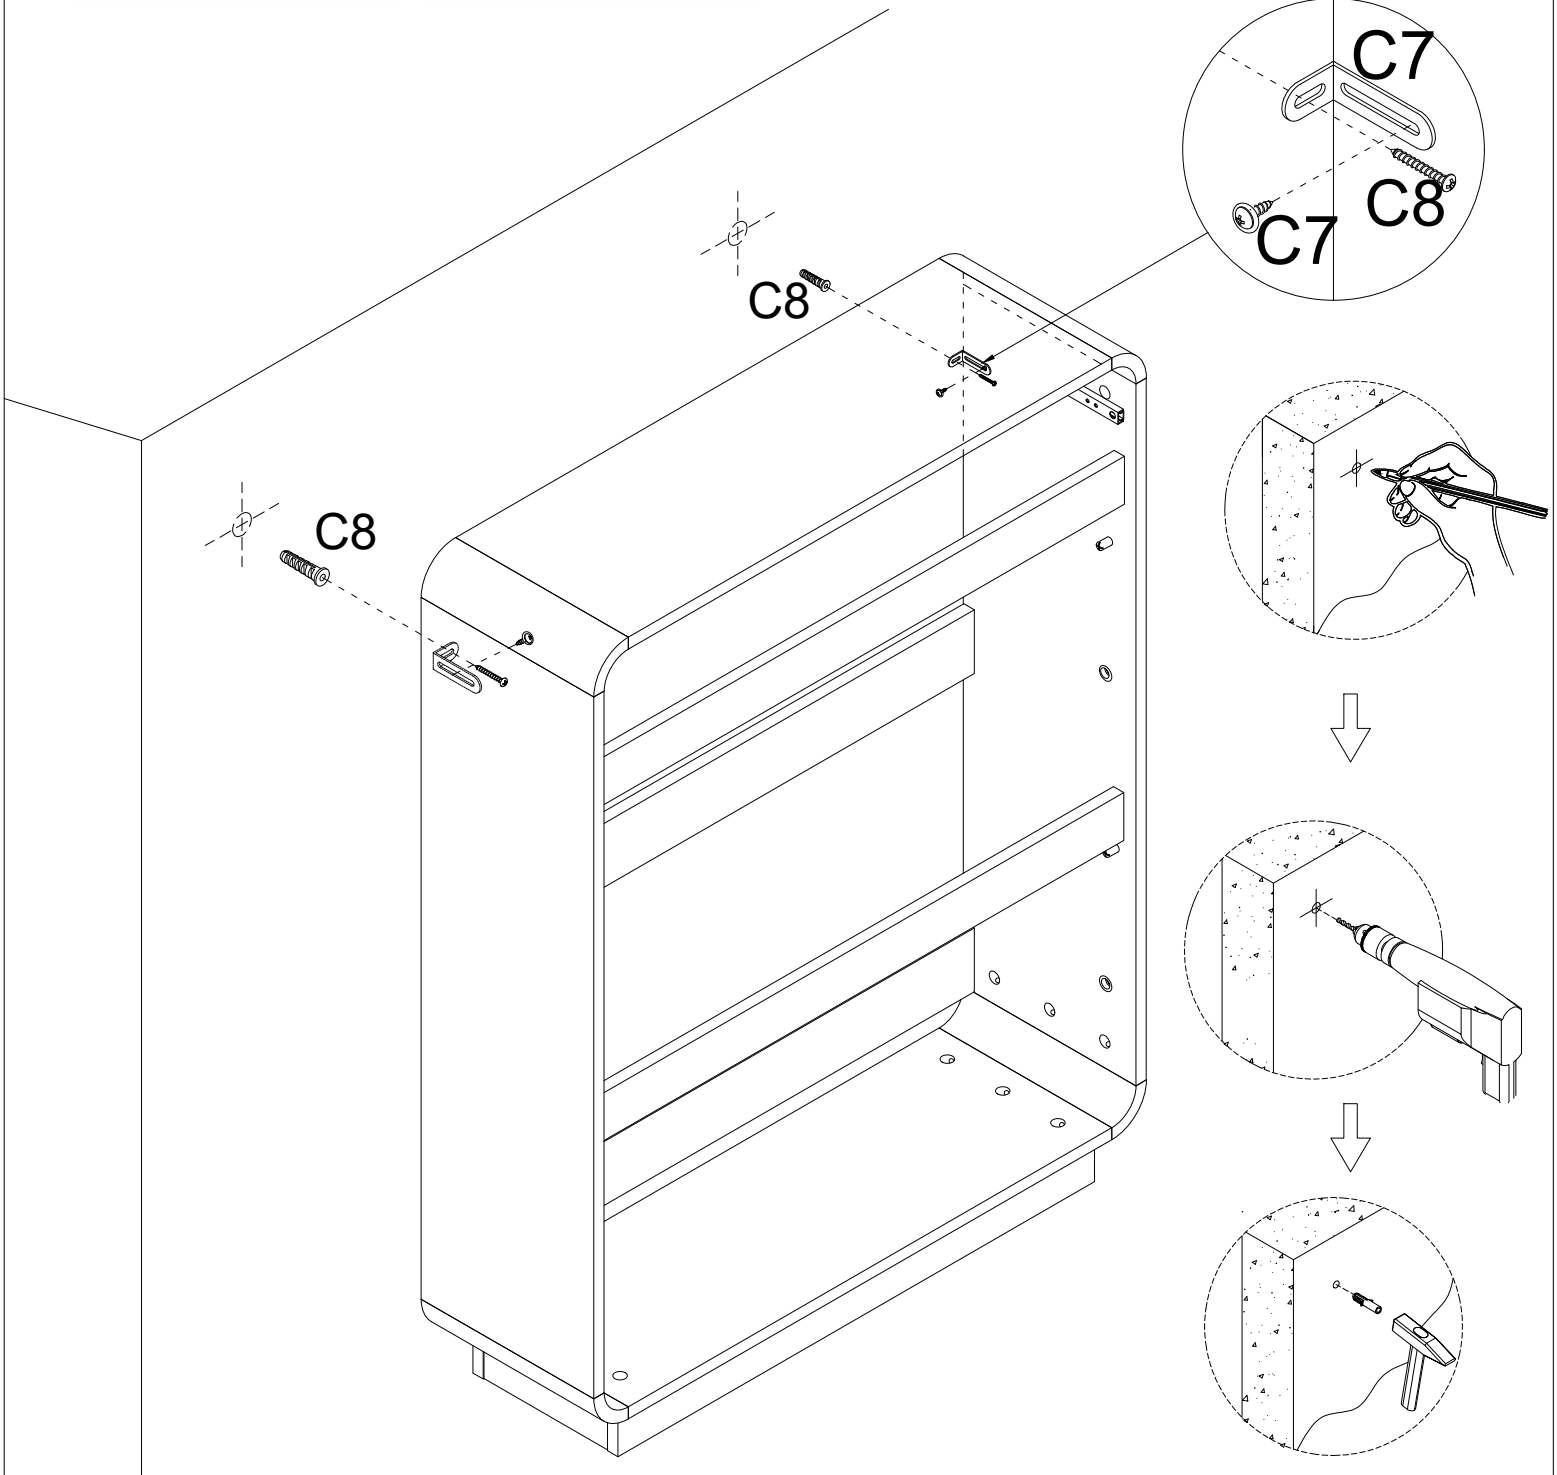



Step 24


		
	B3 2PCS	

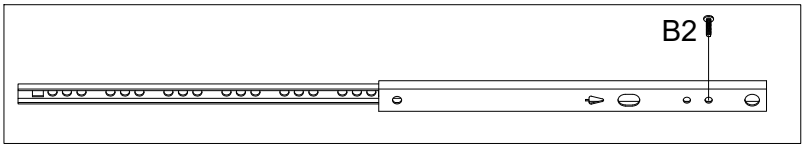


Step 25


					
	B4	4PCS	C6	4PCS	

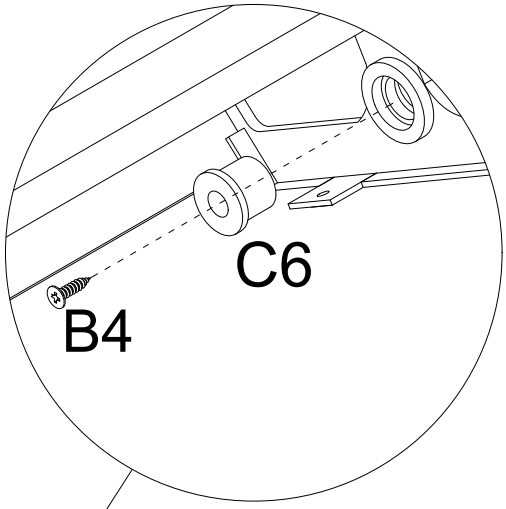

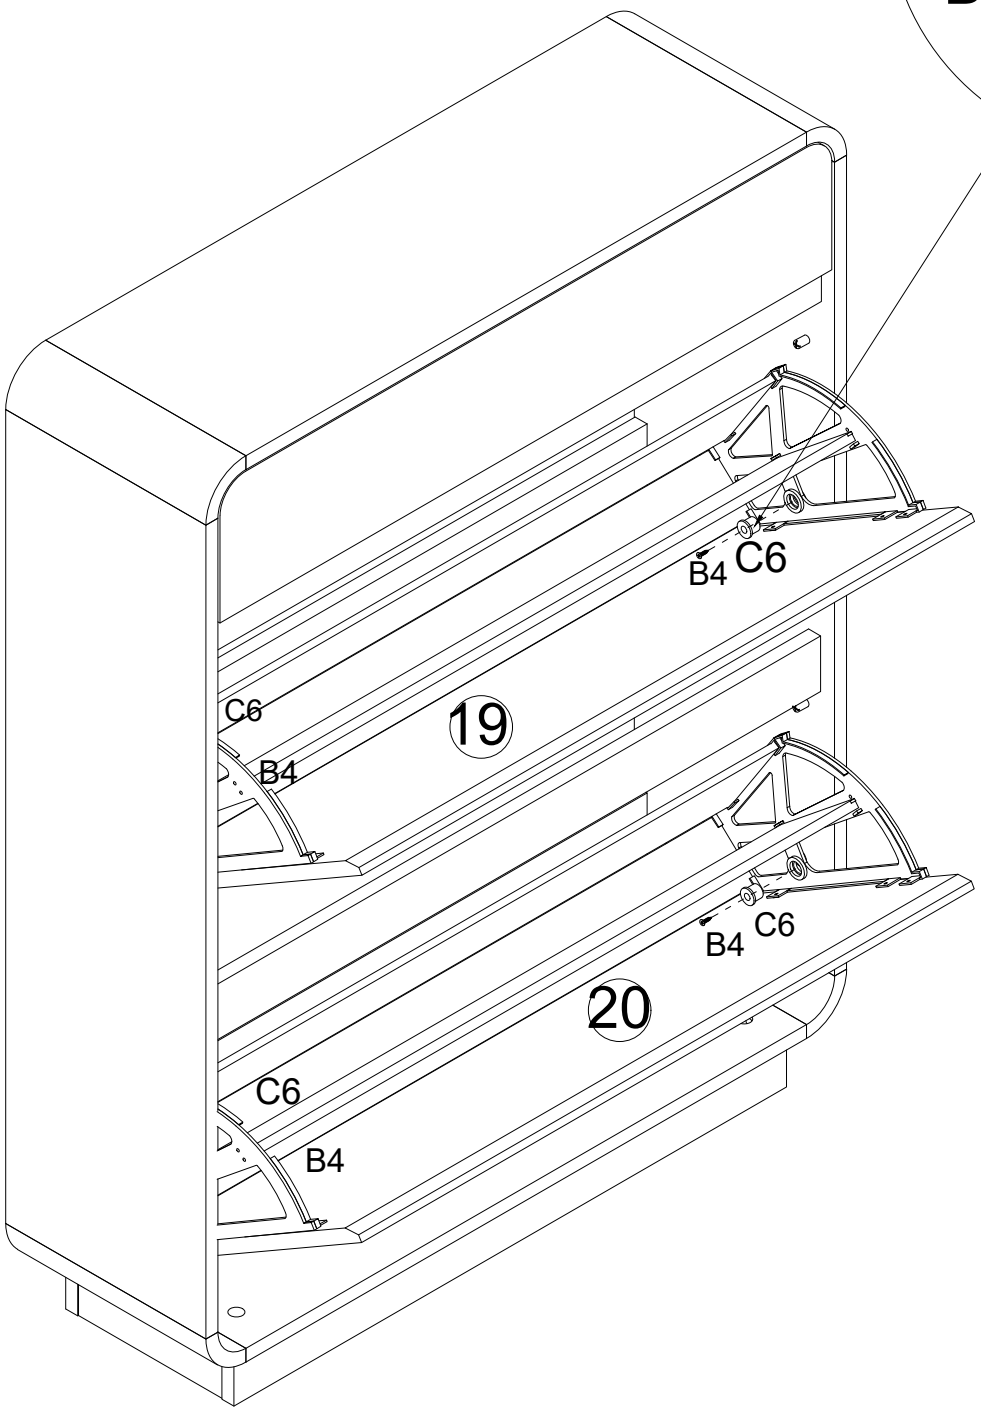

Step 26



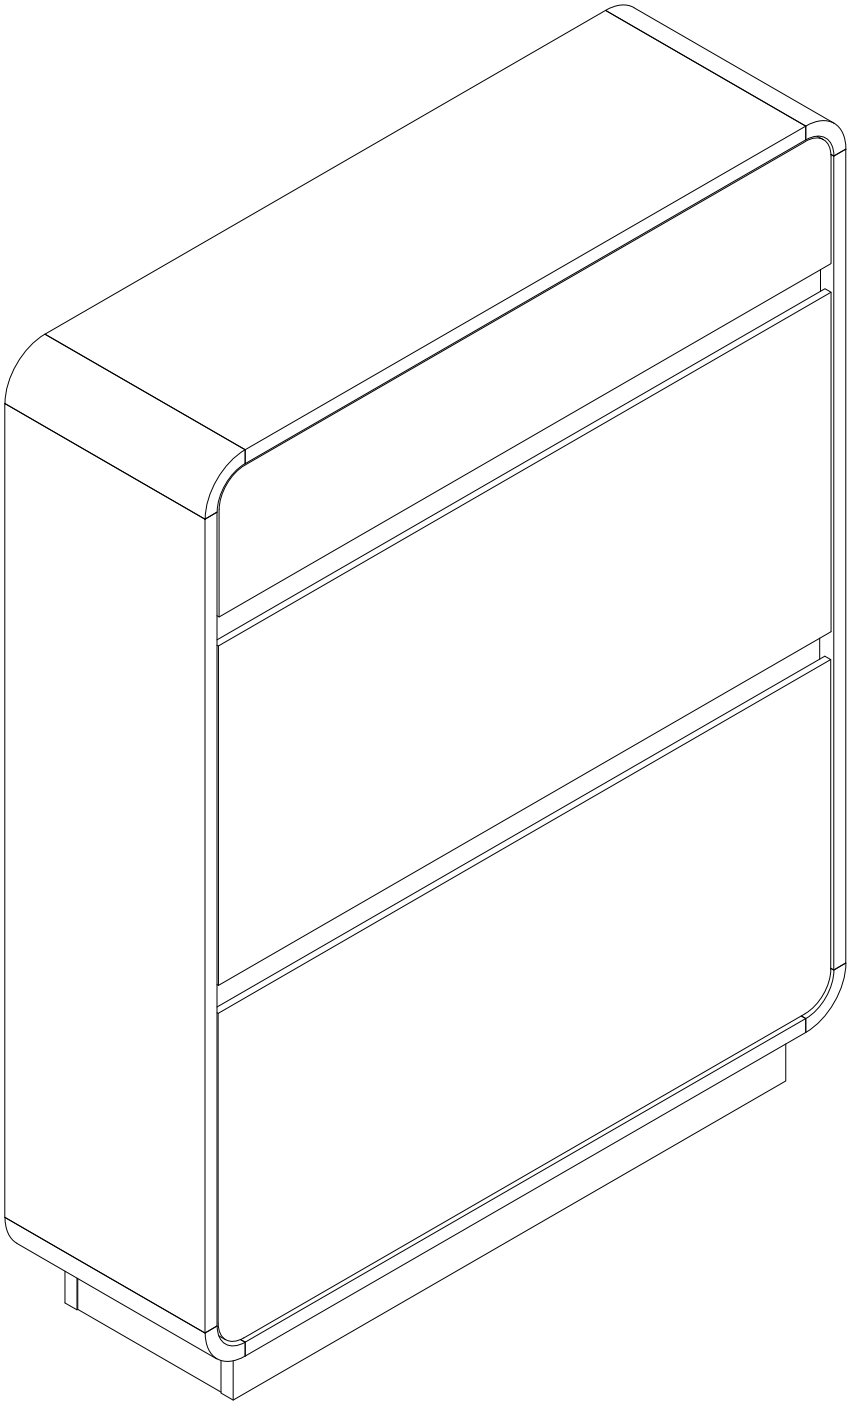

THIS PAGE INTENTIONALLY LEFT BLANK