

Two Installation Methods

Self-Adhesive Installation



1. Clean and keep the wall dry, mark the sticking position.



2. Tear off the protective film of stickers.




3. Stick it on the marked position, press the adhesive tightly to squeeze out the excess air.



4. Wait for 24 hours for using.

Punching Installation

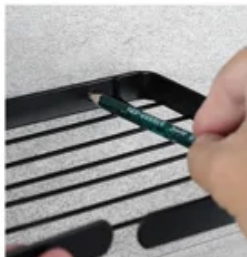

1. Clean the wall, mark the holes.



2. Drill the holes at the marked places.



3. Tap the expansion bolts into the wall with a hammer.



4. Fix the toilet paper holder to the wall, then tighten the screws with a screwdriver.