

N725P461092 / N725P461093
ASSEMBLY INSTRUCTIONS
36 INCHES 3 HOLES 8 INCH BATH VANITY
(COMBO)

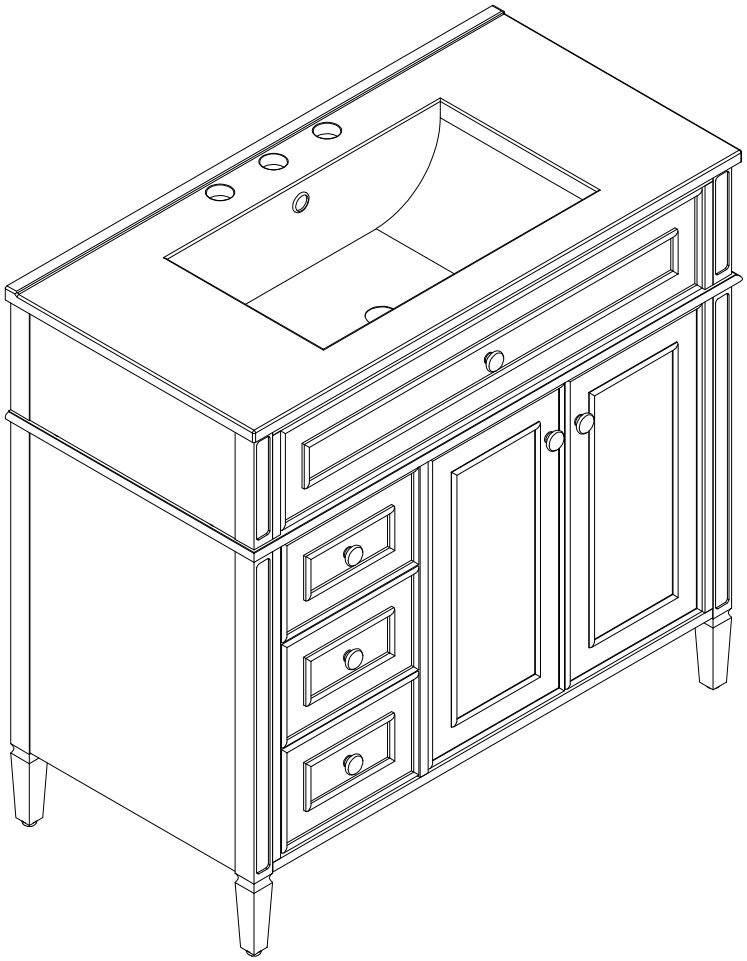

Thank you for purchasing this quality product. Be sure to check all pac material carefully for small parts which may have come loose inside t carton during shipment. Separate, identify and count all parts and hardw Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED

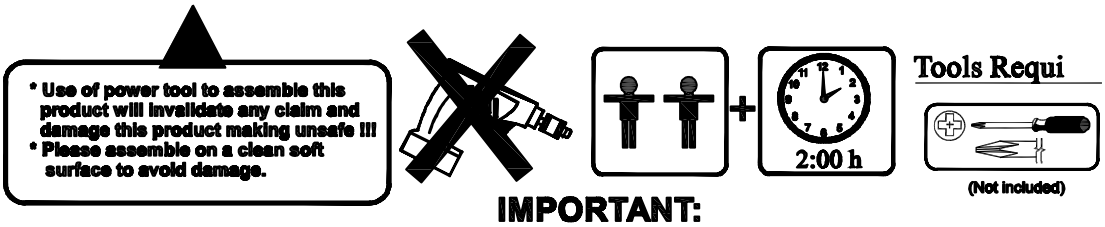

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation

Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.







. Please do not over tighten screws or bolts until the assembly is completed.

. Keep children and animal away from the work area, small parts could choke if swallowed.


. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.













Cam Lock Assembly Instructions

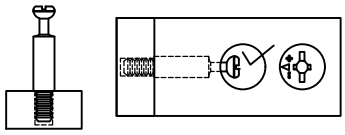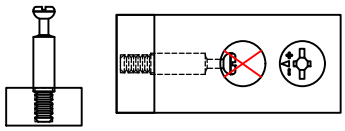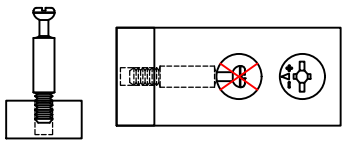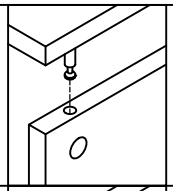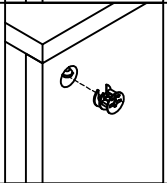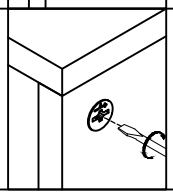	Insert Cam Bolt into hole as shown in diagram A.
	Make sure not to insert the Cam Bolt. Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
 	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
 	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. **Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*





PRODUCT DETAILS

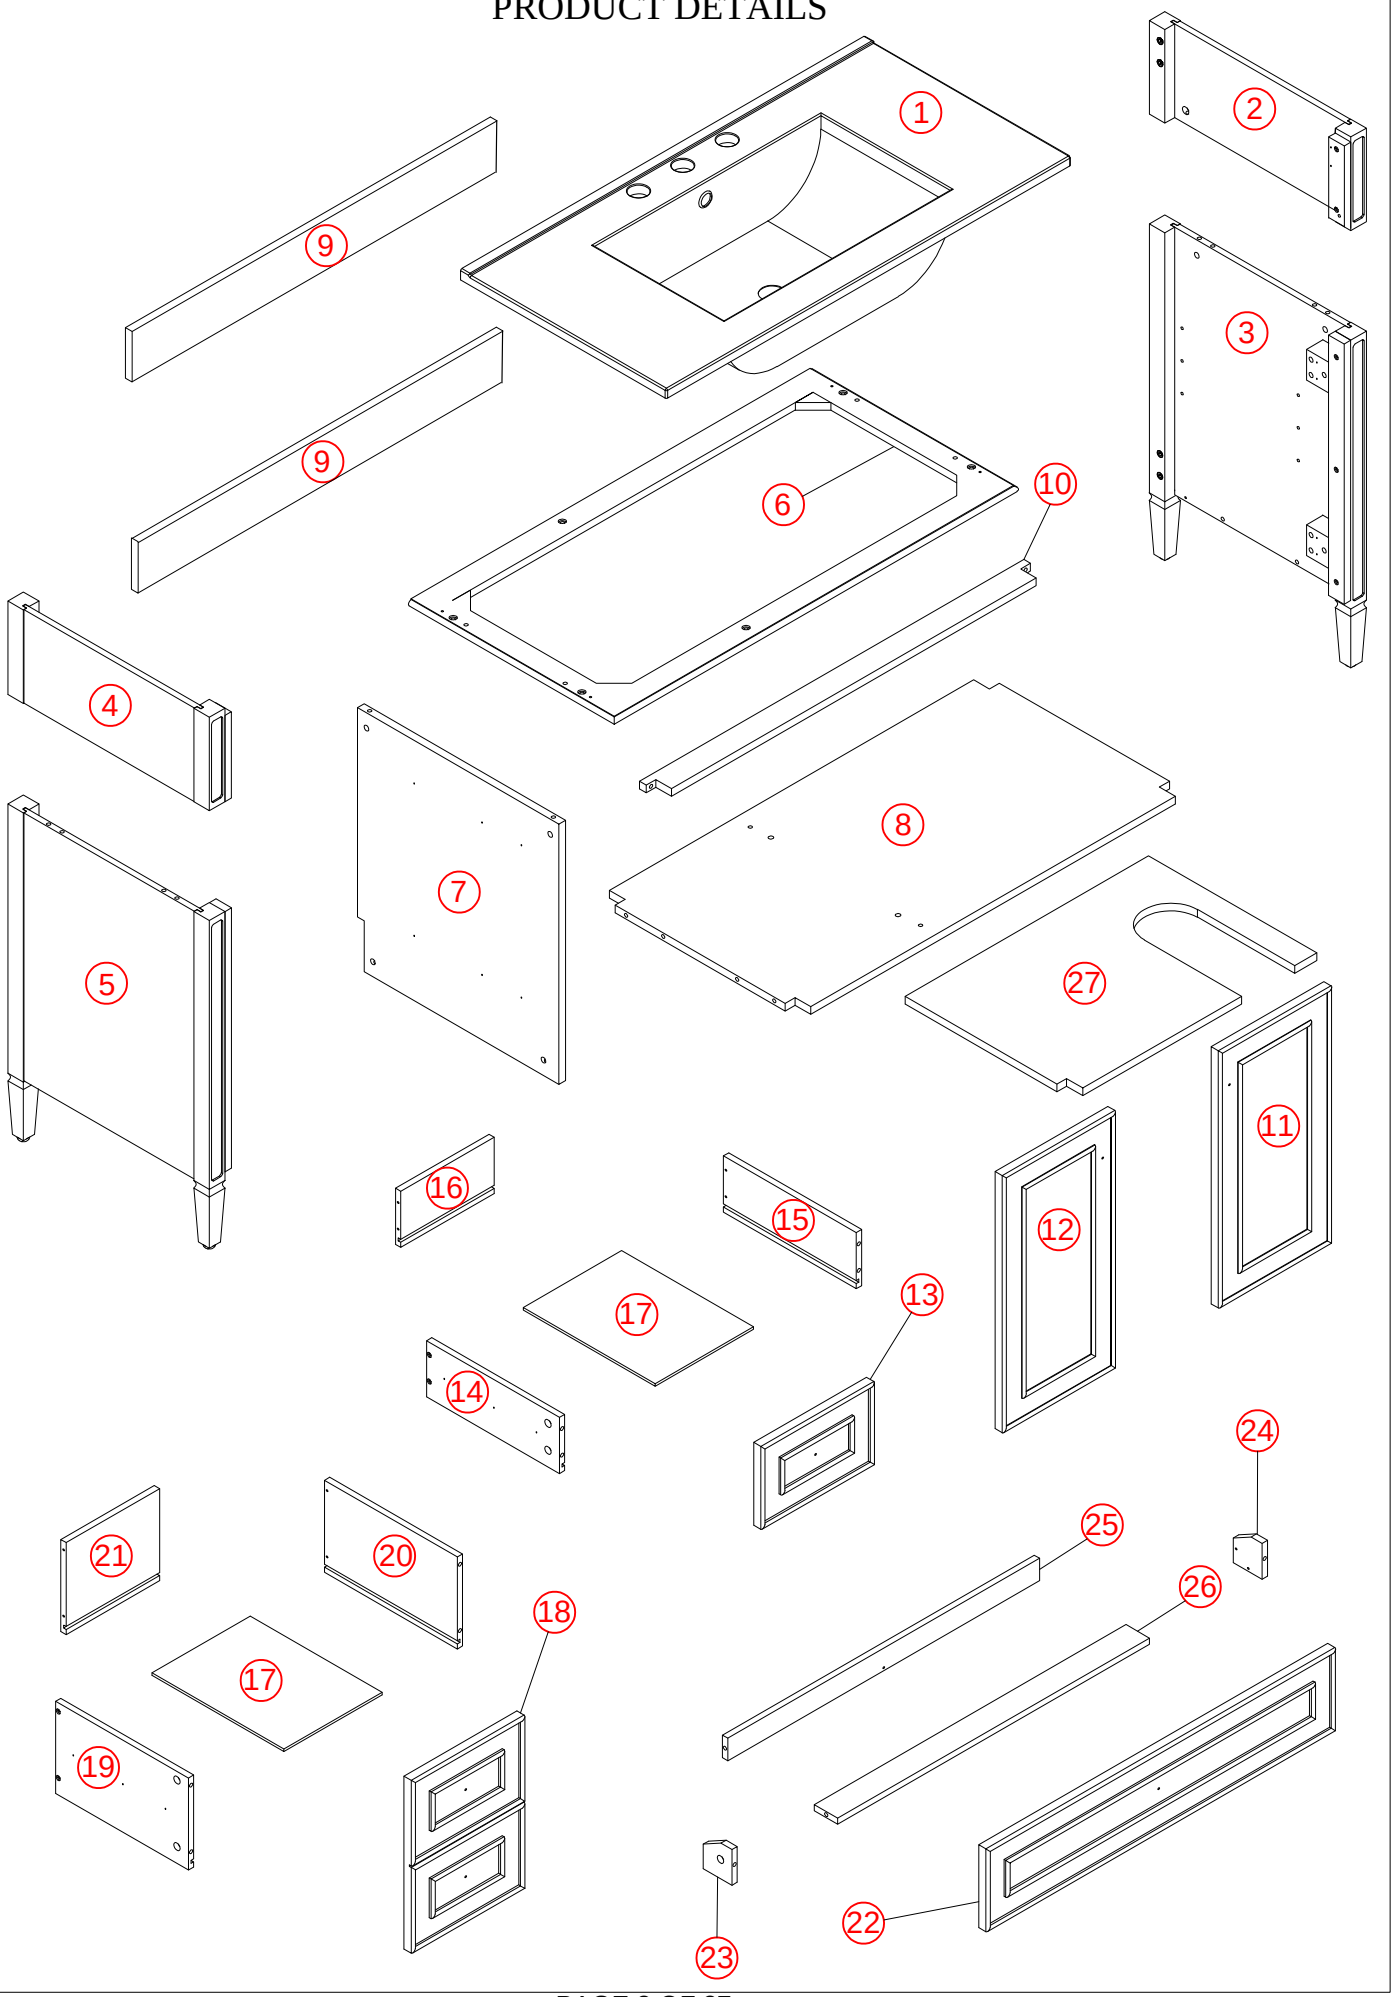

PART LIST
N725P461092

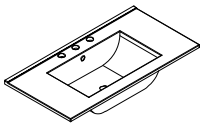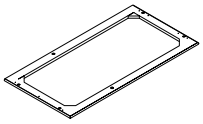


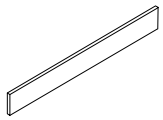

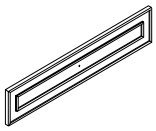



①	SINK (LAVABO)		1PC
②	UPPER RIGHT HIP		1PC
③	LOWER RIGHT HIP		1PC
④	UPPER LEFT HIP		1PC
⑤	LOWER LEFT HIP		1PC
⑥	MIDDLE FRAME		1PC
⑦	PARTITION BOARD		1PC
⑧	BOTTOM BOARD		1PC
⑨	REAR CROSSBAR		2PCS
⑩	FRONT UPPER BAR		1PC
㉒	FLIP-OFF DRAWER FRONT		1PC
㉕	BACK OF FLIP-UP DRAWER		1PC
㉖	FLIP-UP DRAWER BOTTOM		1PC
㉗	LOWER LEFT DRAWER		1PC

PART LIST
N725P461093


⑪	RIGHT DOOR PANEL		1PC
⑫	LEFT DOOR PANEL		1PC
⑬	DRAWER FACE 1		1PC
⑭	LEFT DRAWER FRONT 1		1PC
⑮	RIGHT DRAWER FRONT 1		1PC
⑯	DRAWER BACK BOARD 1		1PC
⑰	DRAWER BOTTOM		2PCS
⑱	DRAWER FACE 2		1PC
⑲	LEFT DRAWER FRONT 2		1PC
⑳	RIGHT DRAWER FRONT 2		1PC
㉑	DRAWER BACK BOARD 2		1PC
㉓	LEFT SIDE FLIP DRAWER		1PC
㉔	RIGHT SIDE FLIP DRAWER		1PC

HARDWARE LIST


N725P461093

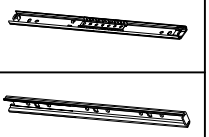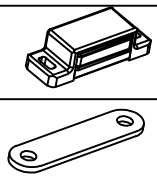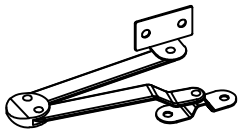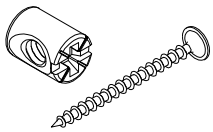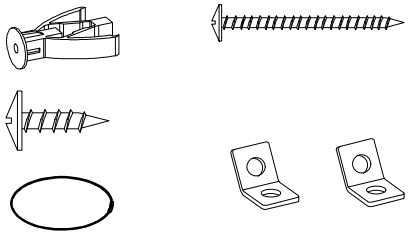A	A1 : D300MM A2 : D300MM		4SET	J	J1: L45MM J2: L45MM		3SETS
B	3.5*12MM		6PCS +1	K	3.5*15MM		30PCS +1
C	Ø5*35MM		37PCS +1	L	STAY ARM		1PC
D	Ø 15MM		37PCS +1	M	L15MM		6PCS
E	Ø 8*30MM		16PCS +1	N	3.5*12MM		34PCS +1
G	L4*58MM		1PC	O	HINGES		4PCS
H	M6*45MM		4SETS	P	M4*45MM		8SETS
I	M4*20MM		6SETS	Q			2SET

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





STEP 1

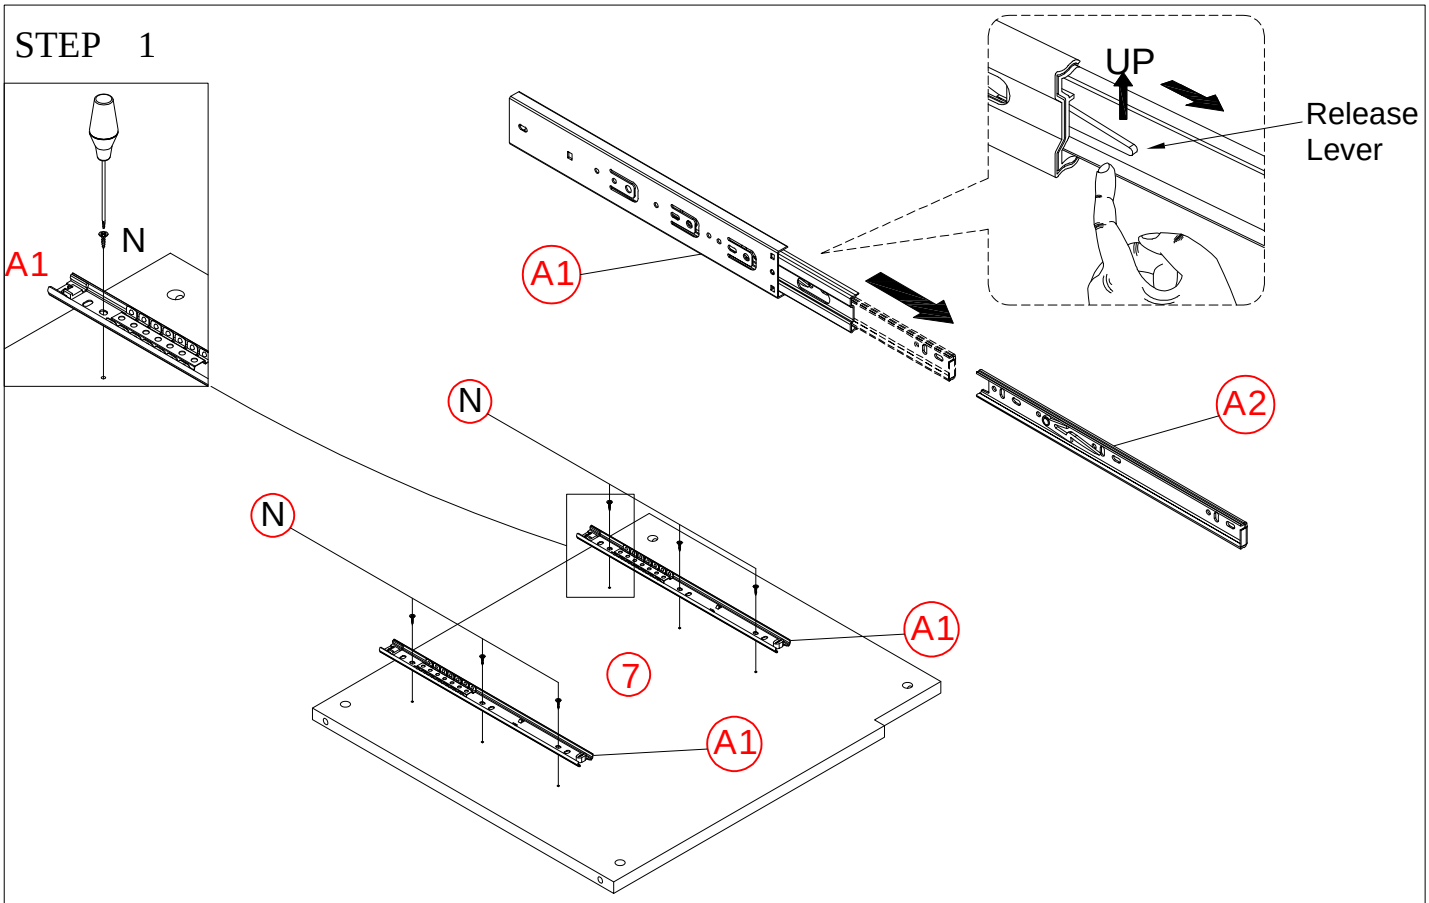

A	L45*300MM	2PCS	N	3.5*12MM	6PCS


STEP 2

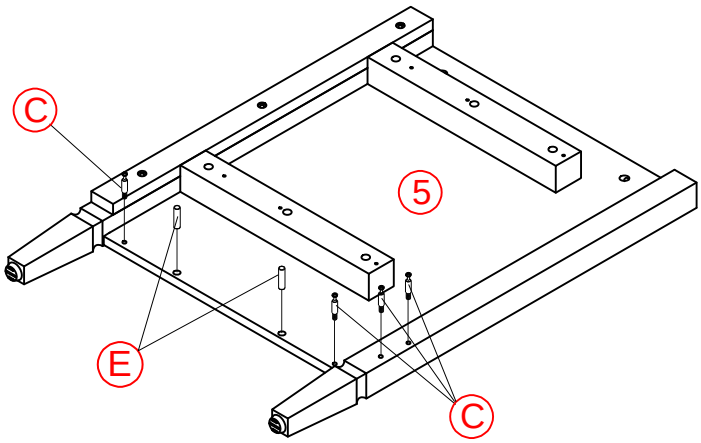


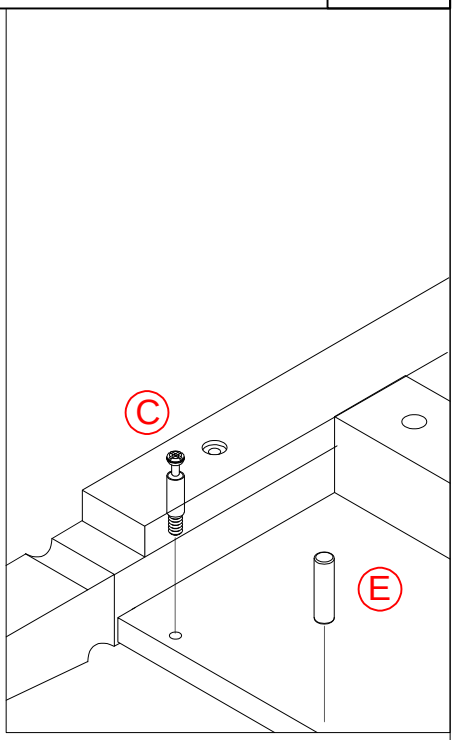

C	Ø5*35MM	4PCS	E	Ø 8 * 30MM	2PCS


STEP 3

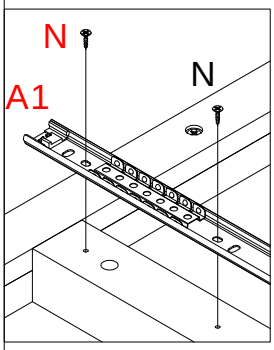


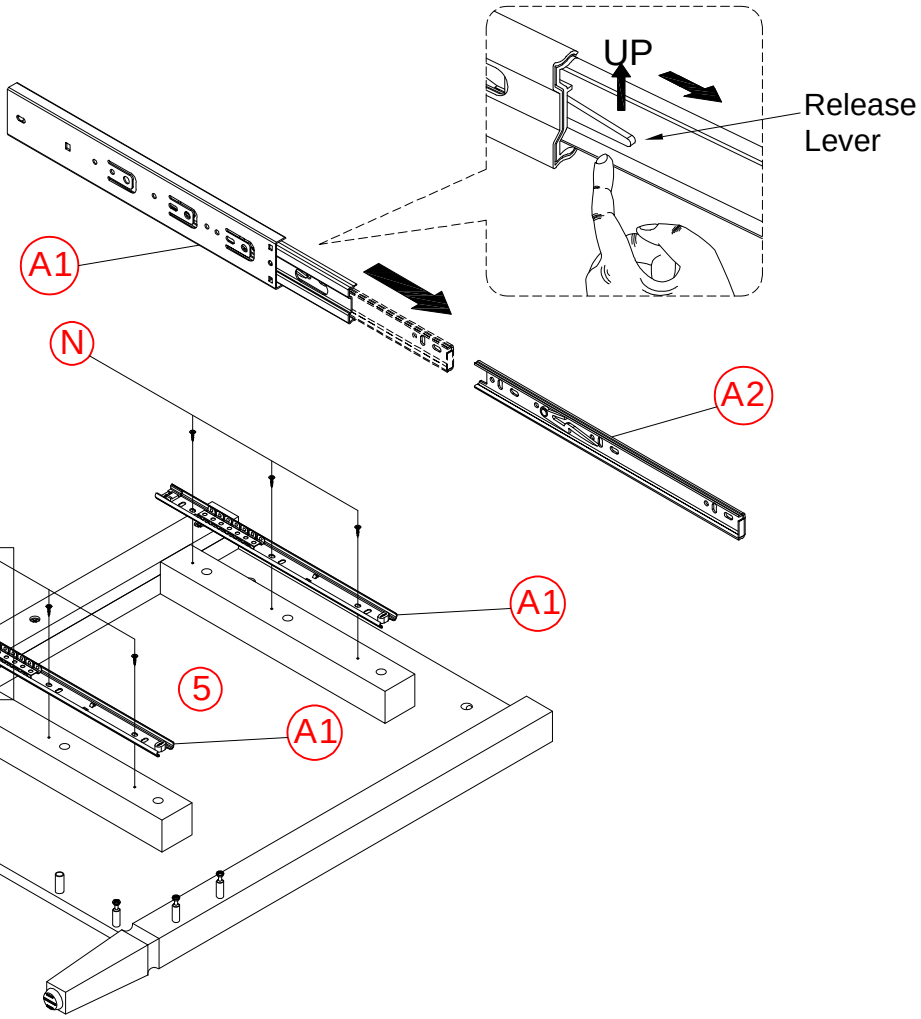

A	L45*300MM	2PCS	N	3.5*12MM	6PCS


STEP 4

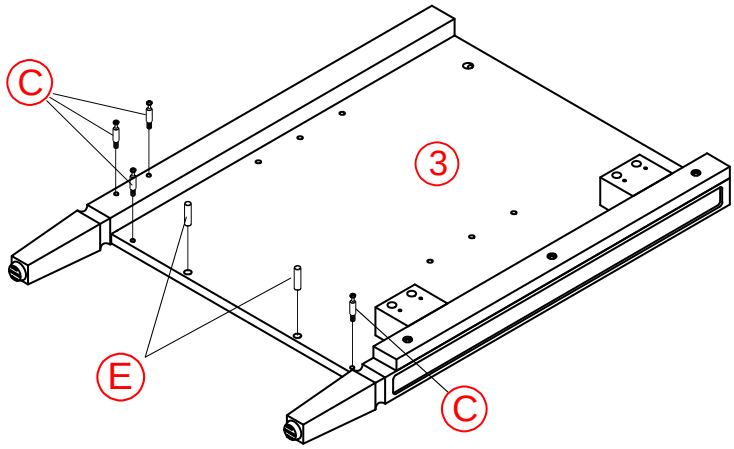


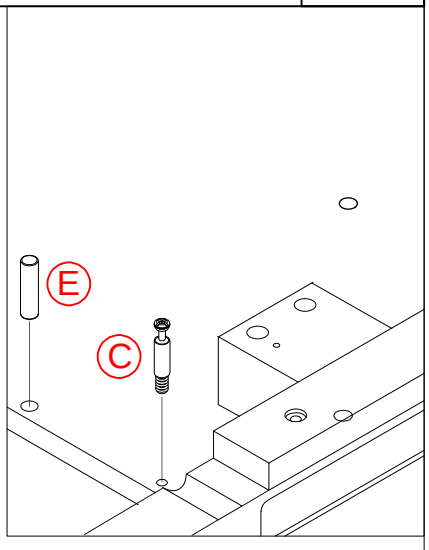

C	Ø5*35MM	4PCS	E	Ø 8 * 30MM	2PCS


STEP 5

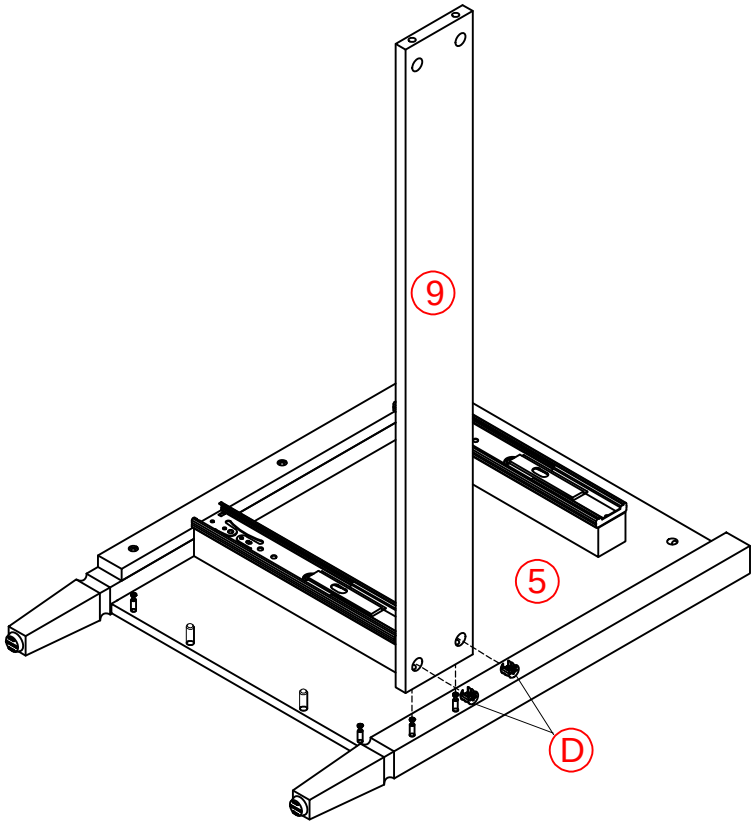


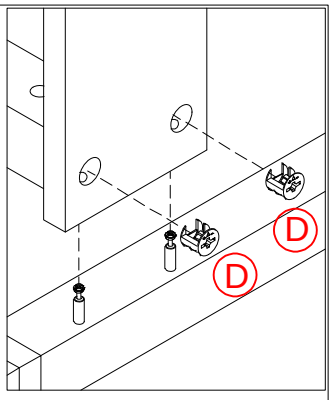

D	Ø 15MM		2PCS


STEP 6

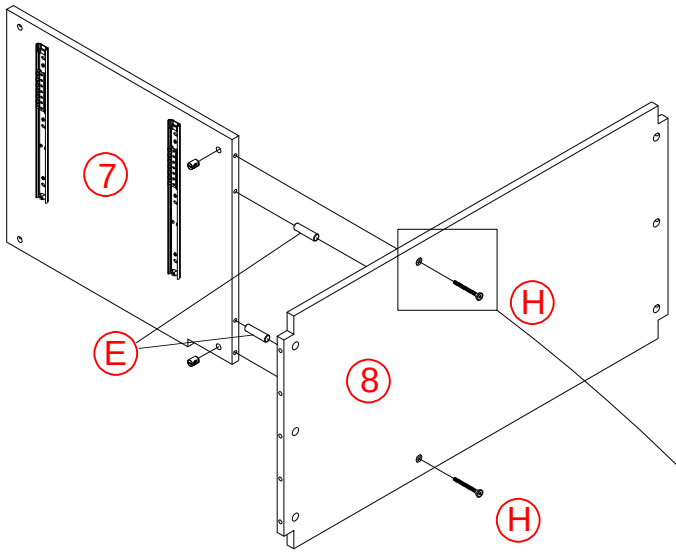


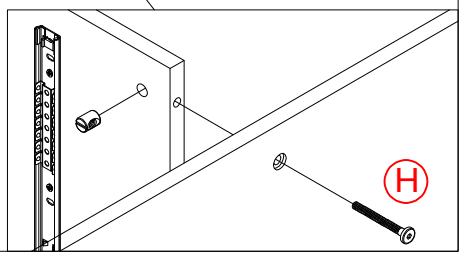


E	Ø 8 * 30MM		2PCS
H	M6*45MM		2PCS

STEP 7

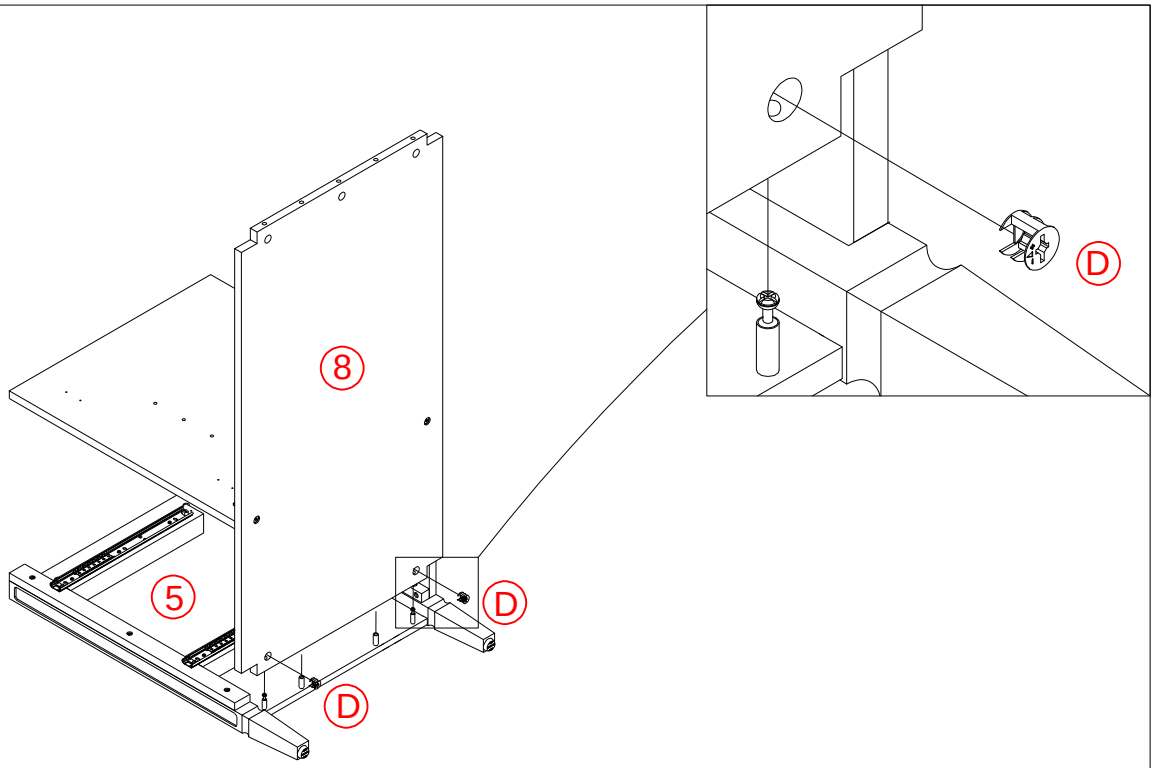


D	Ø 15MM		2PCS


STEP 8

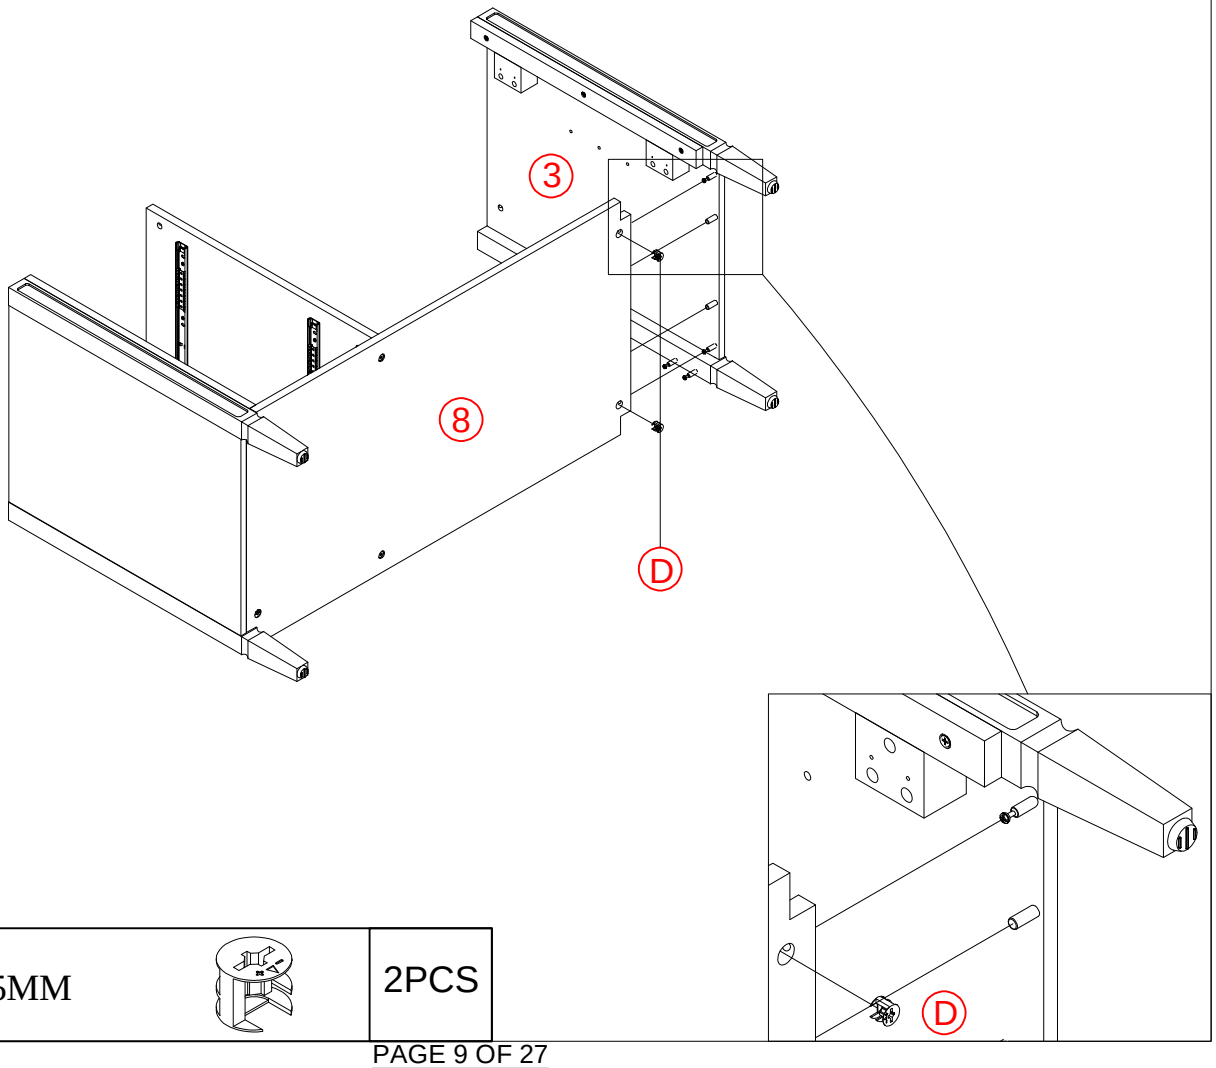

D	Ø 15MM		2PCS


STEP 9

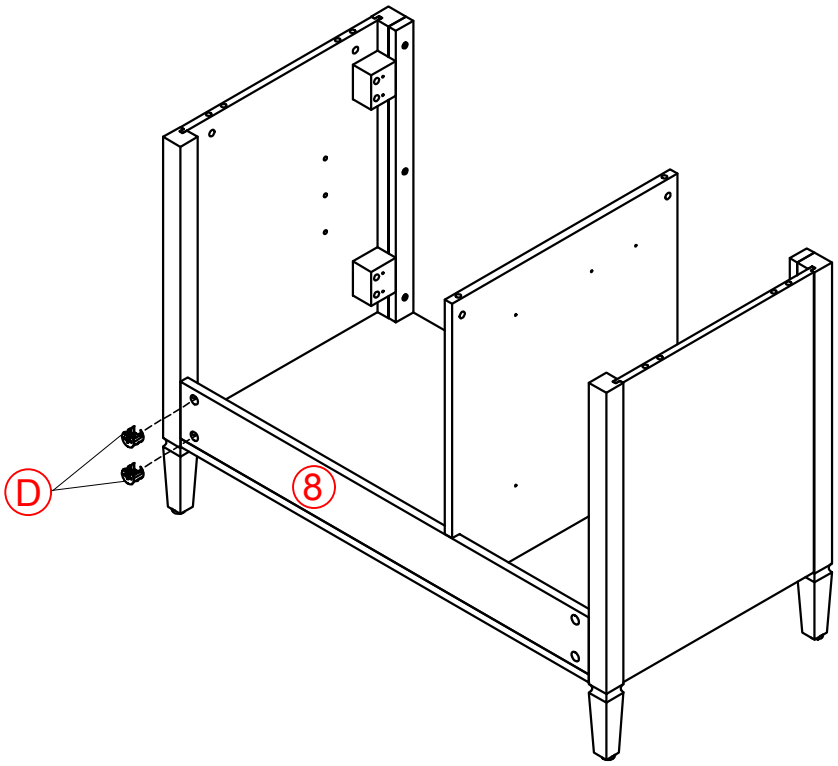


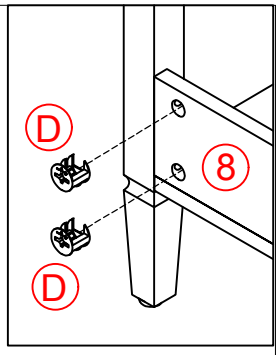



D	Ø 15MM		2PCS


STEP 10

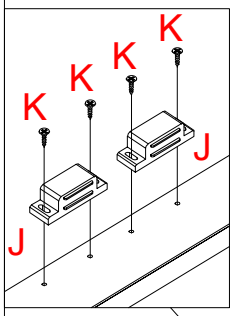


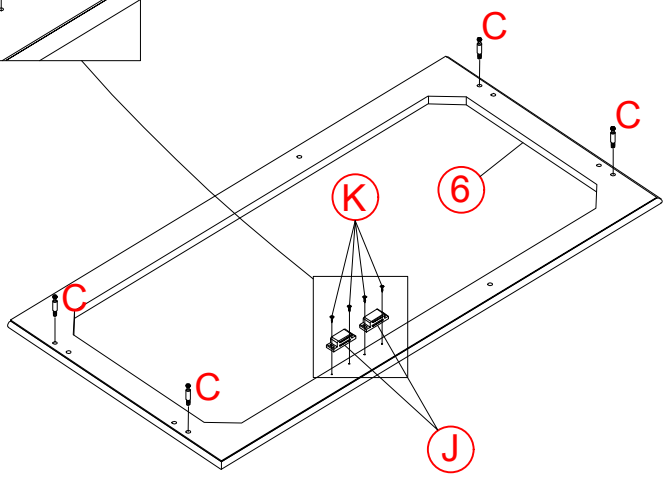



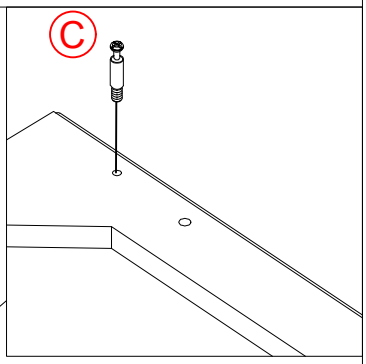


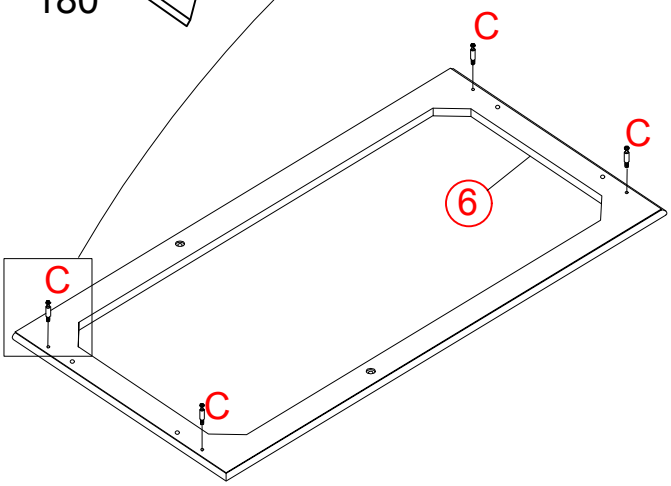

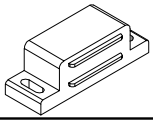J	J1: L45MM		2PCS
C	Ø5*35MM		8PCS


K	3.5*15MM		4PCS

STEP 11

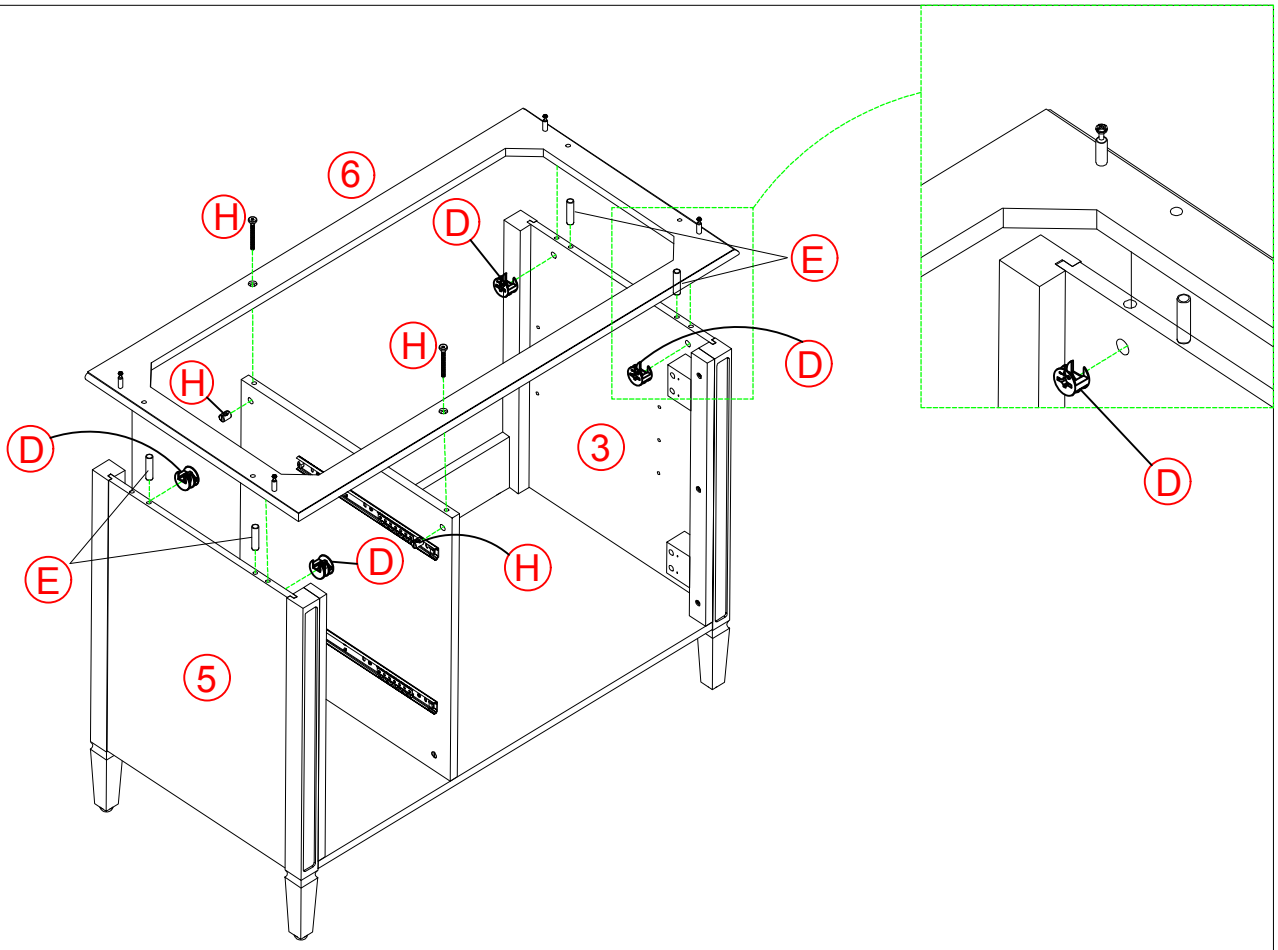


E	Ø 8 * 30MM	4CS				
H	M6*45MM	2SETS	D	Ø 15MM	4PCS	


STEP 12

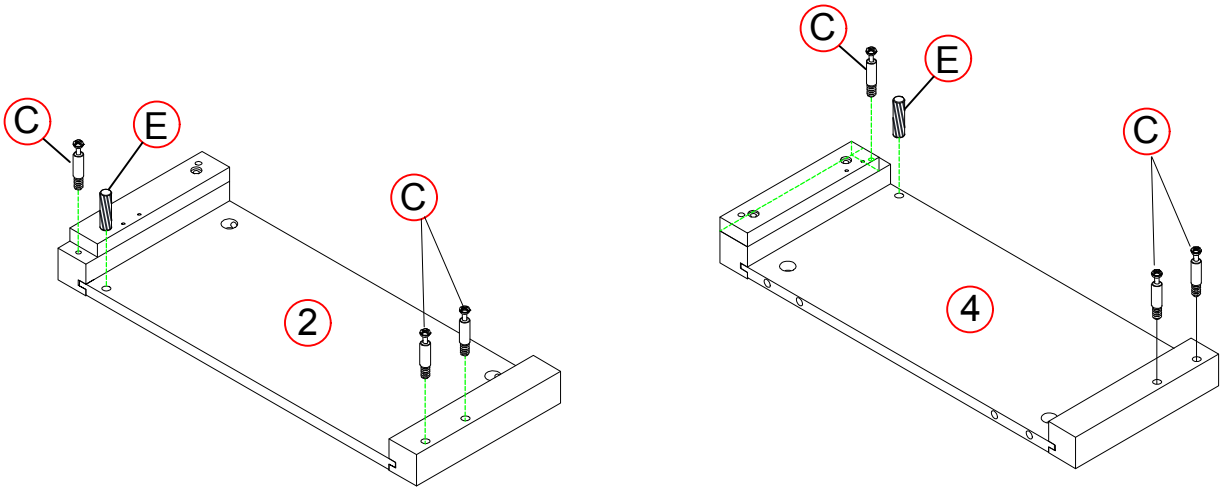


C	Ø5*35MM	6PCS	E	Ø 8*30MM	2PCS

STEP 13

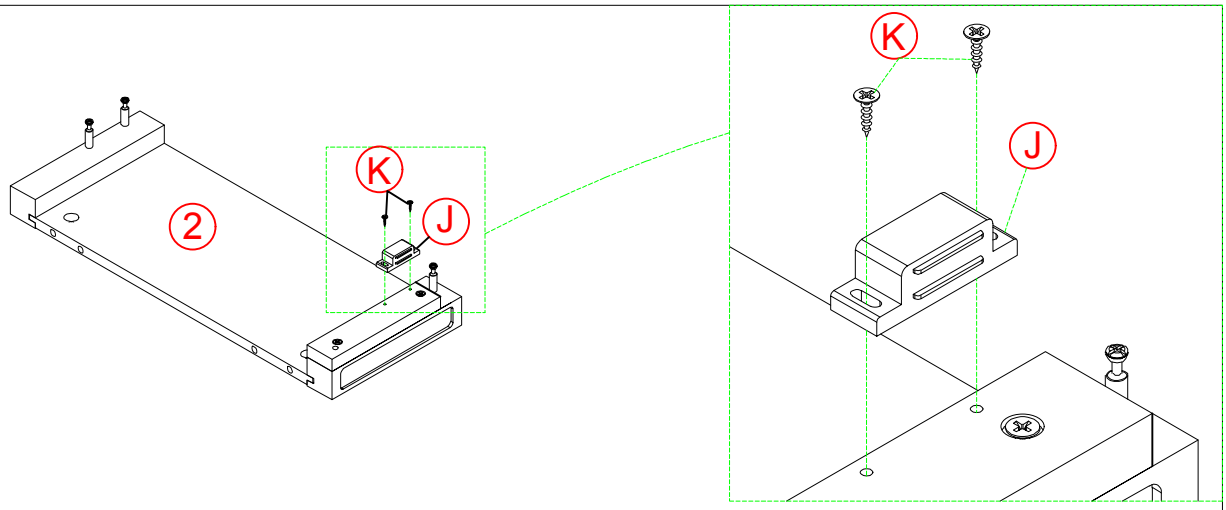

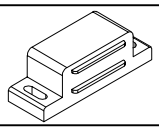
J	J1: L45MM		1PC	K	3.5*15MM 	2PCS

STEP 14

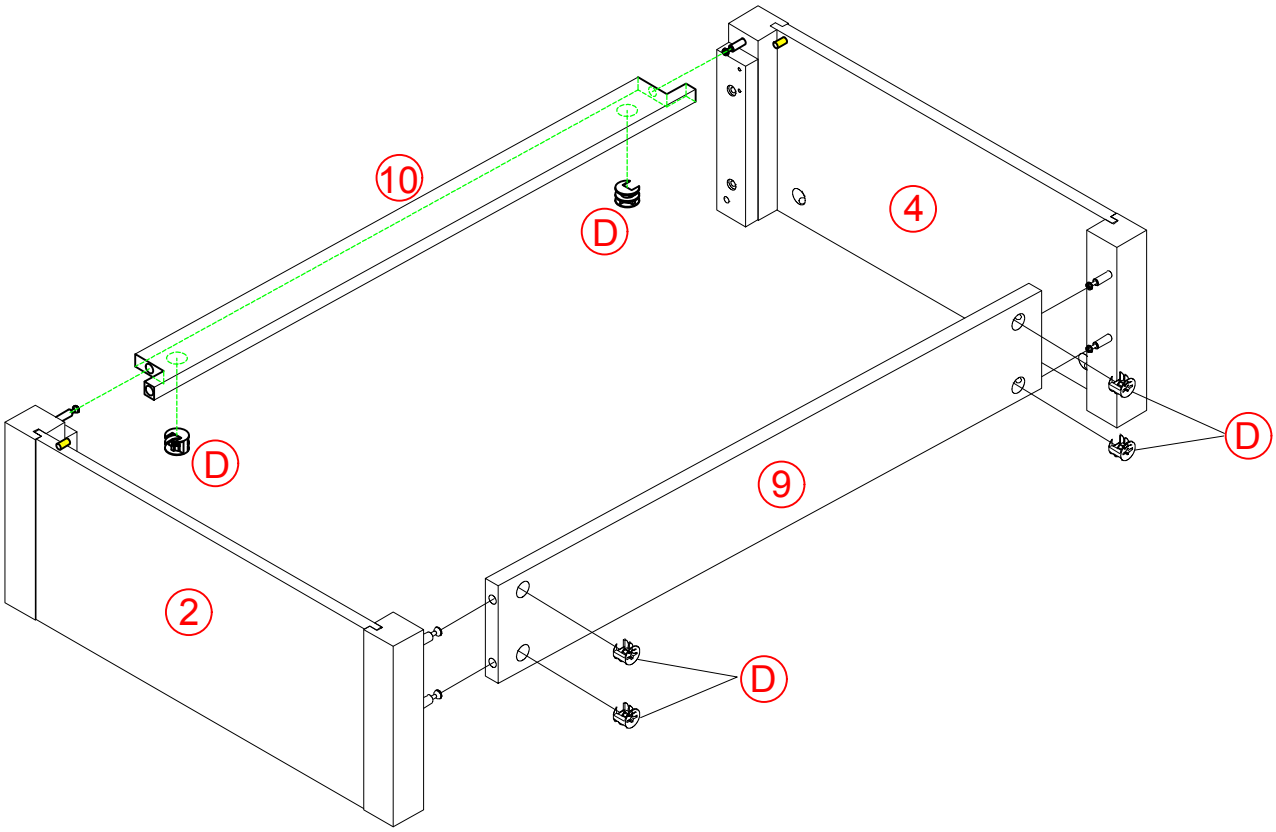


D	Ø 15MM		6PCS


STEP 15

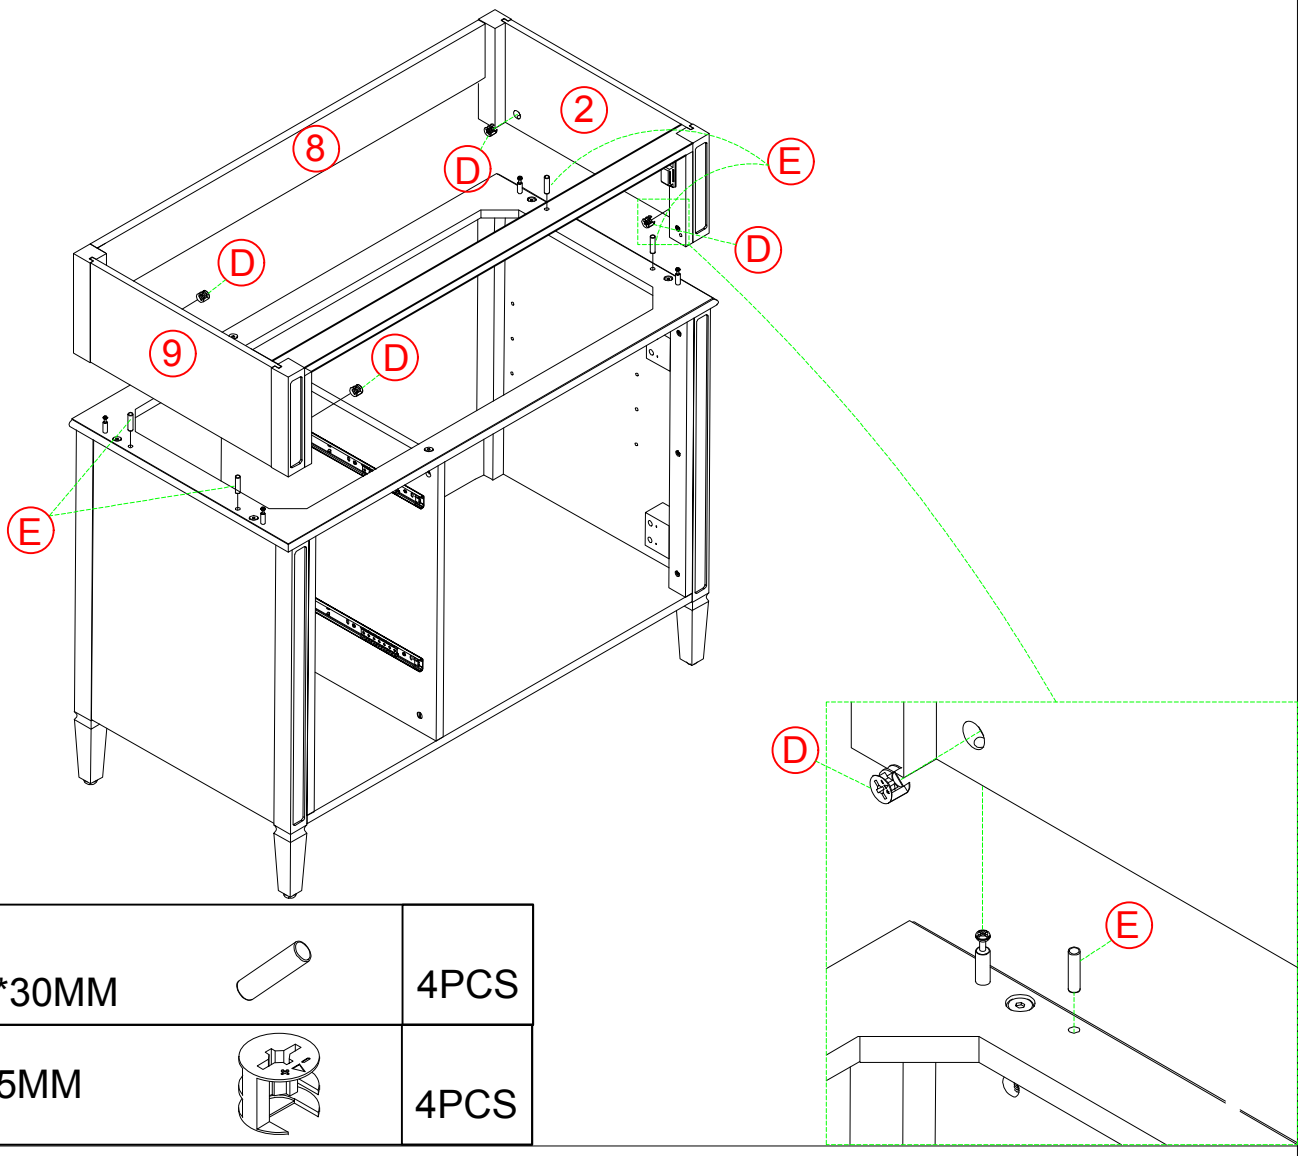

E	Ø 8*30MM		4PCS
D	Ø 15MM		4PCS


STEP 16

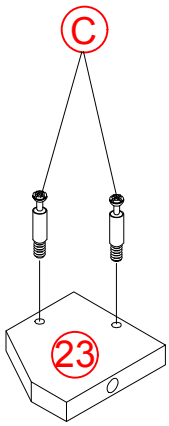

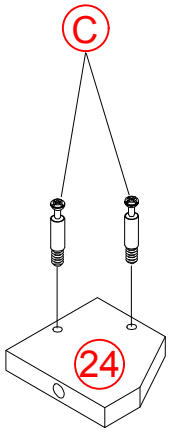


C	Ø5*35MM		4PCS

STEP 17

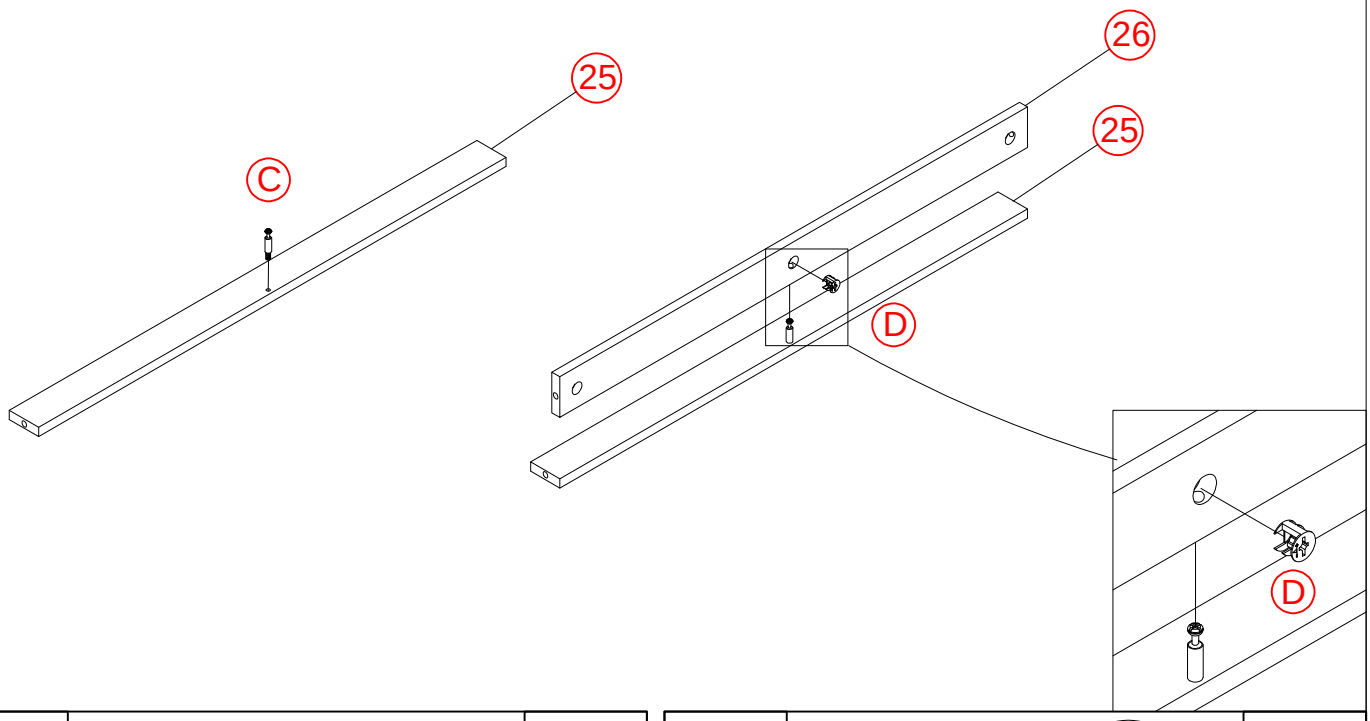


C	Ø5*35MM		1PC
D	Ø 15MM		1PC


STEP 18

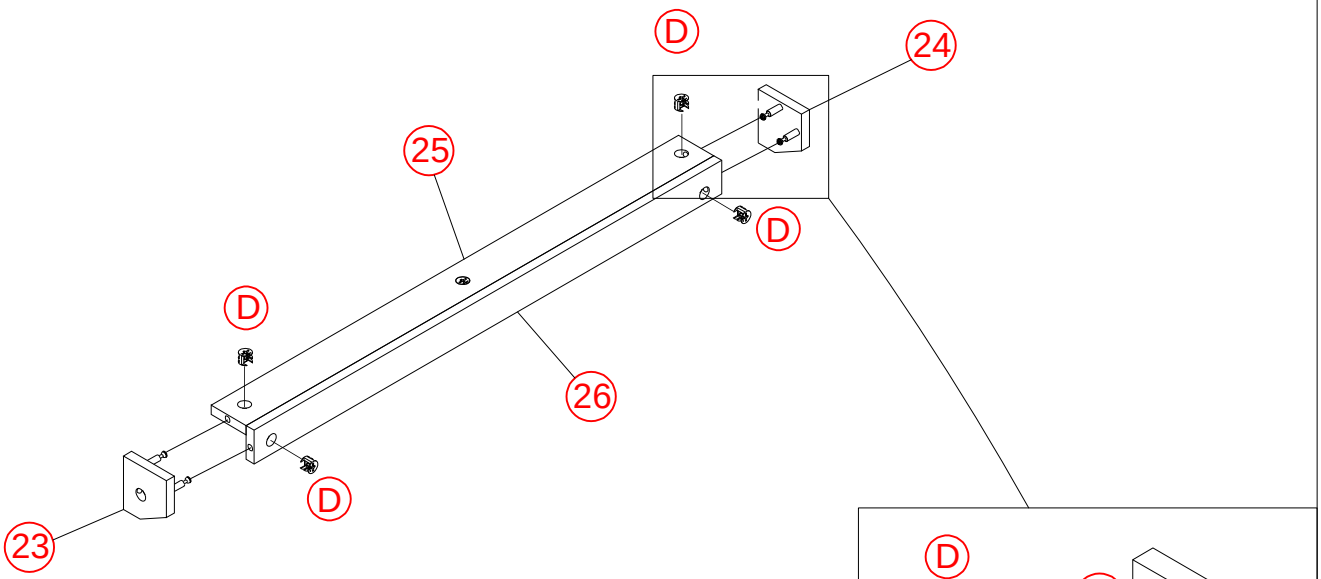


D	Ø 15MM		4PCS

STEP 19

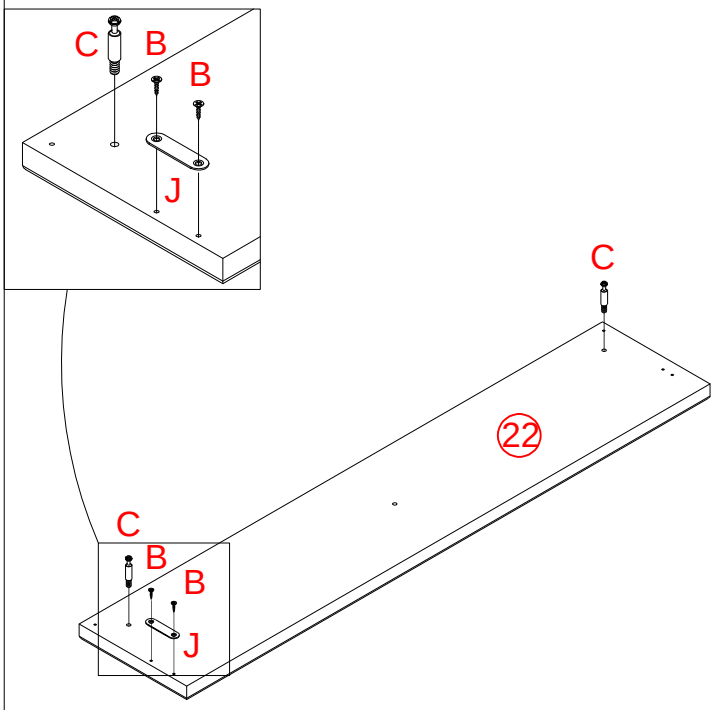


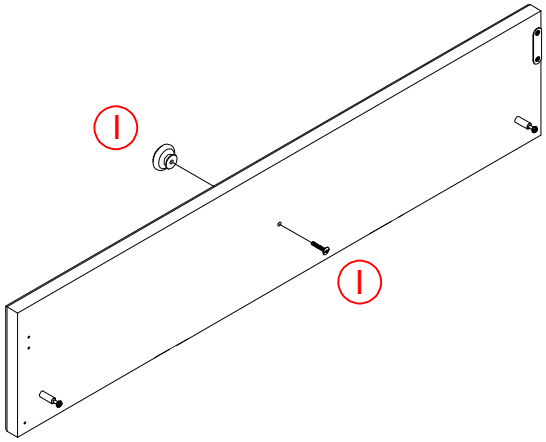

C	Ø5*35MM		2PCS
I	M4*20MM		1PC


J	J2: L45MM		1PC
B	3.5*12MM		2PCS


STEP 20

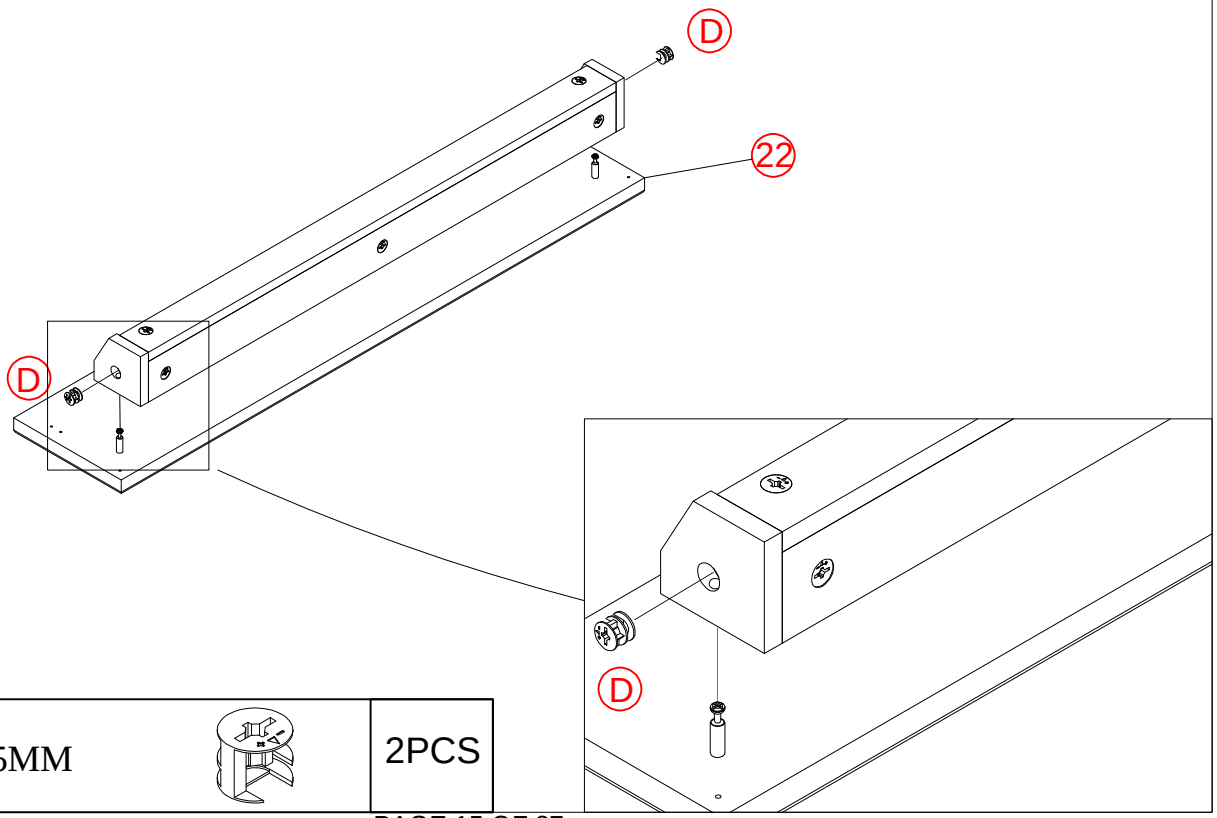

D	Ø 15MM		2PCS


STEP 21

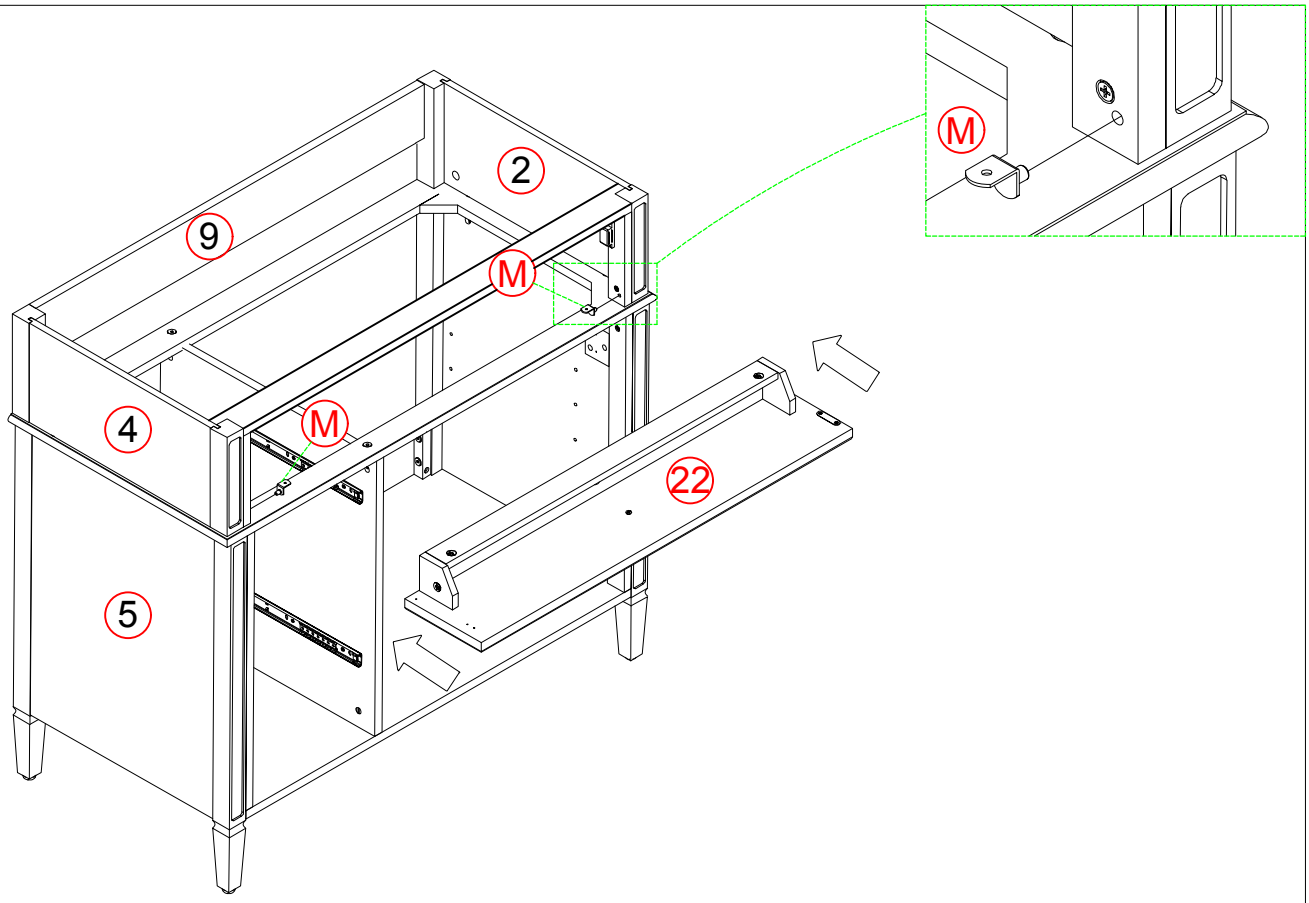


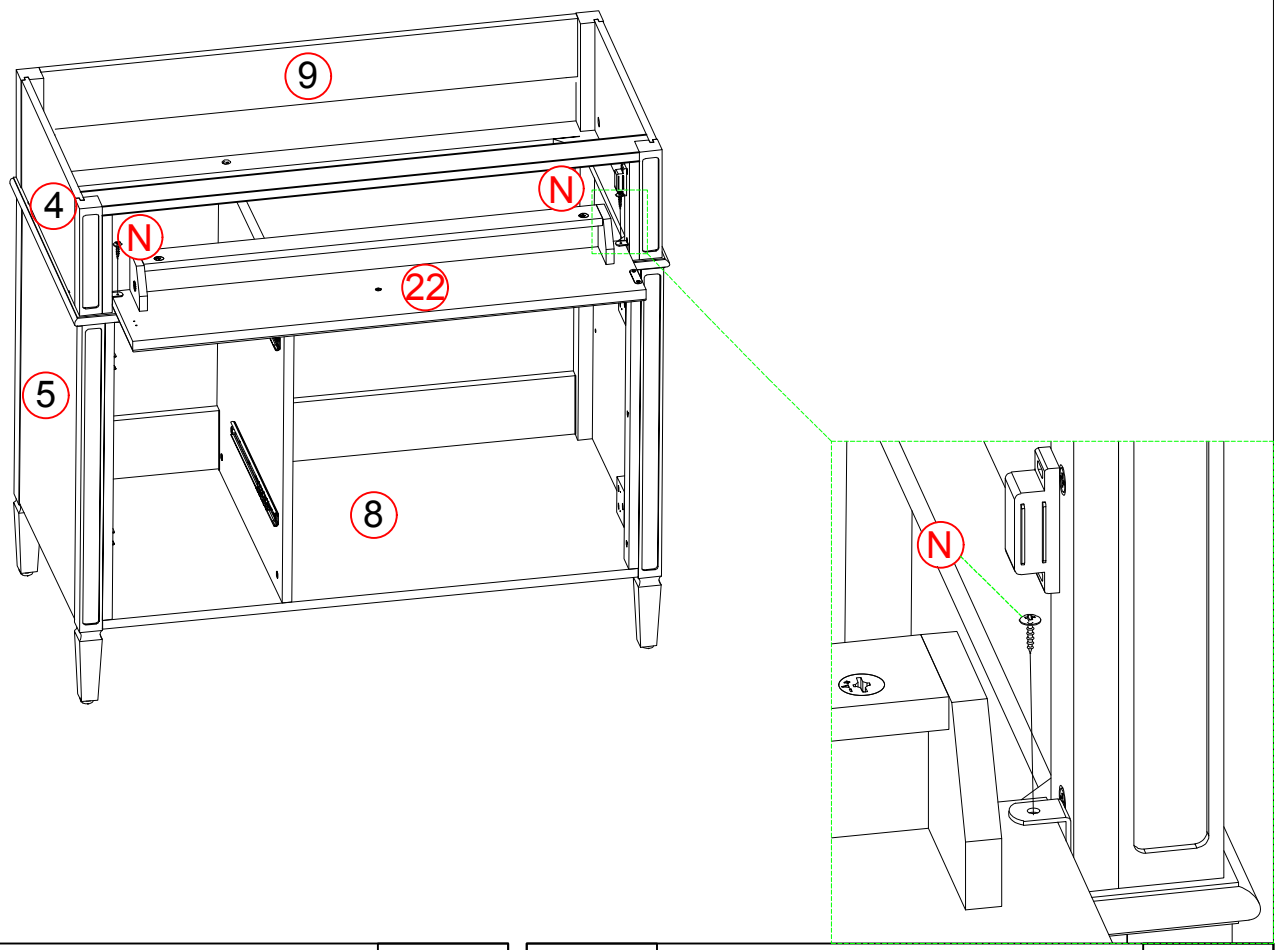



N	Ø 3.5*12MM		2PCS	M	L15MM	 2PCS


STEP 22

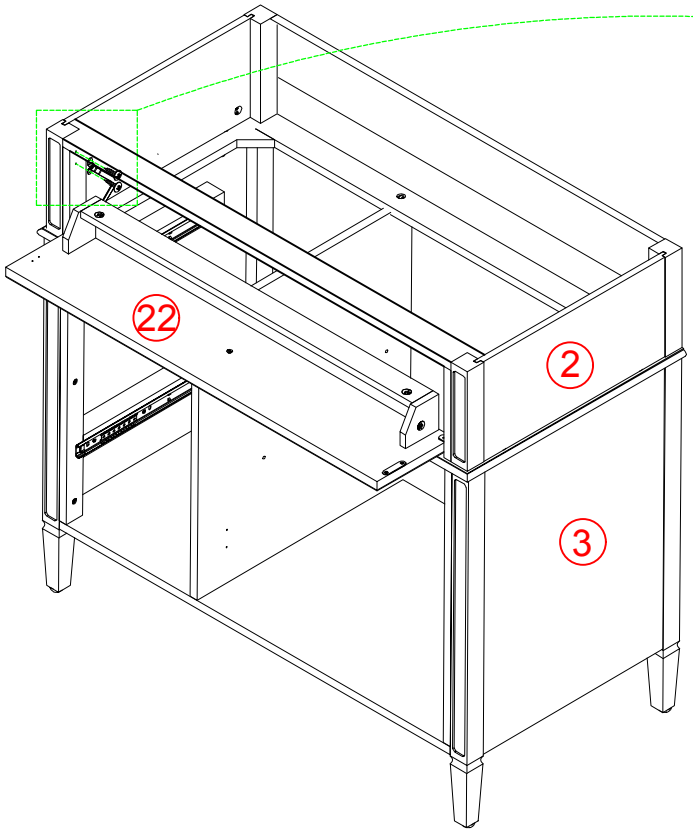

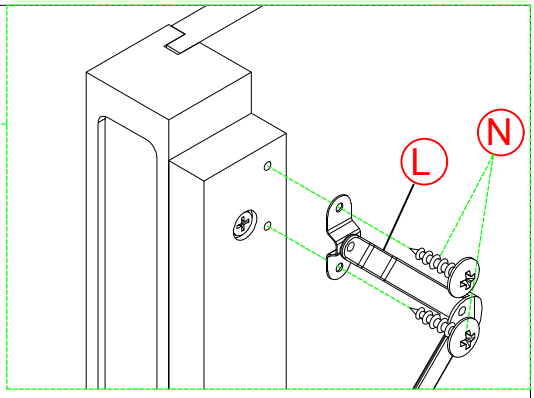


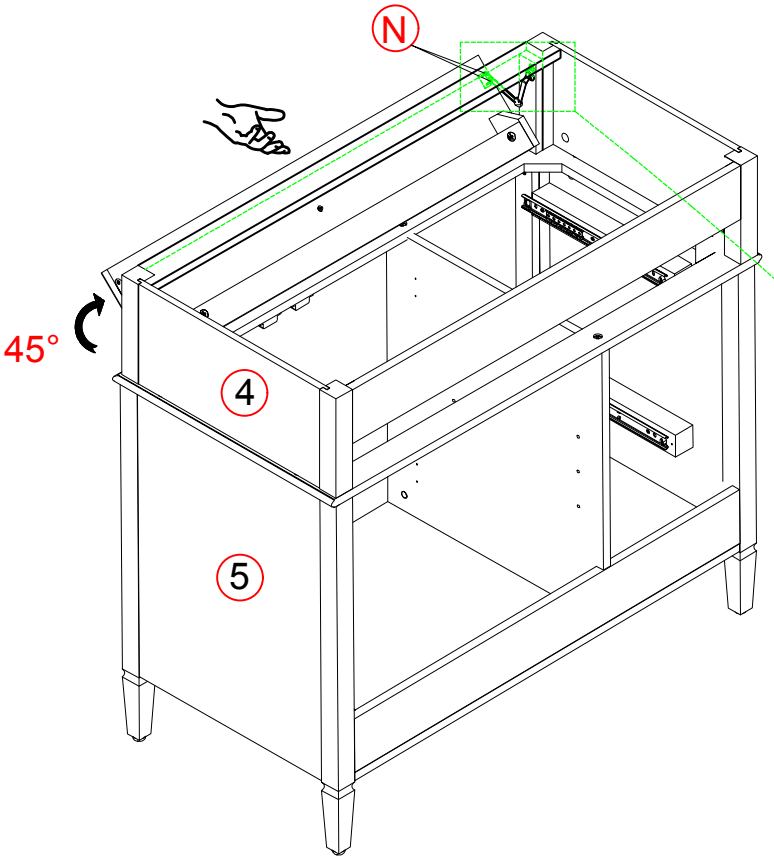


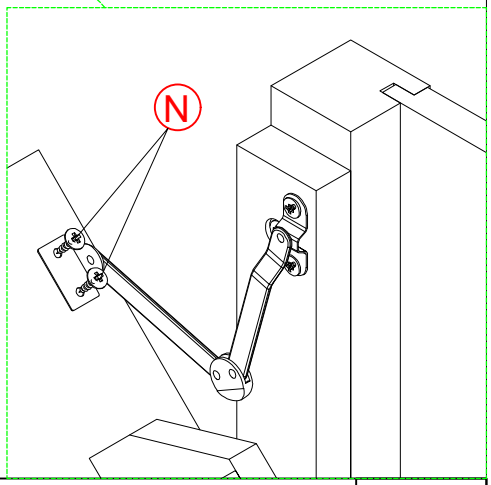

N	N 3.5*12MM		4PCS	L	STAY ARM	 1PC

STEP 23

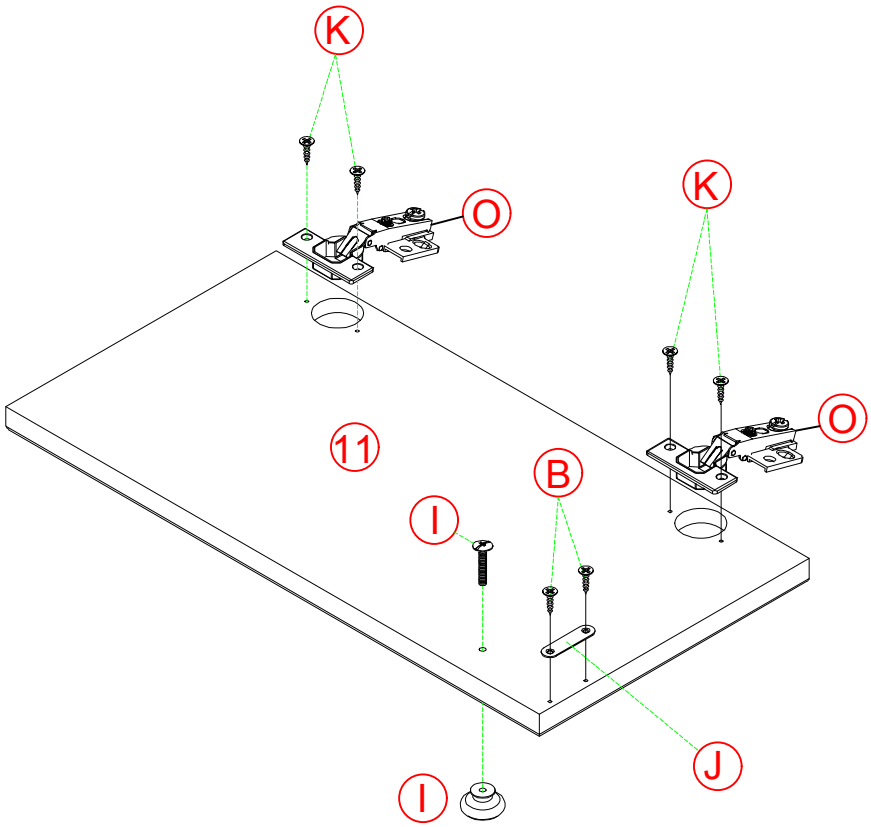


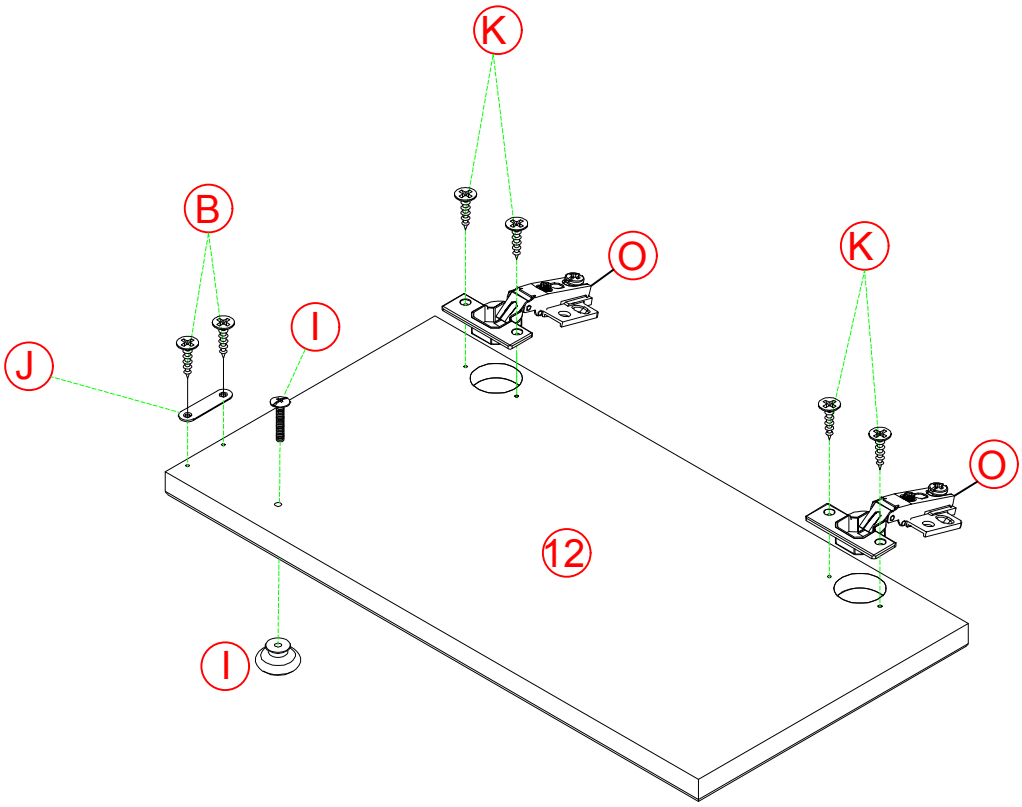


O	HINGES	4PCS
I	M4*20MM	2PCS
K	3.5*15MM	8PCS

J	J2: L45MM	2PCS
B	3.5*12MM	4PCS

STEP 24

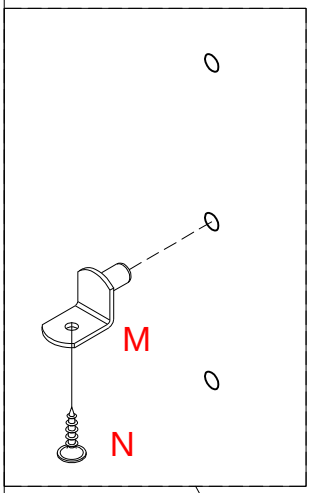


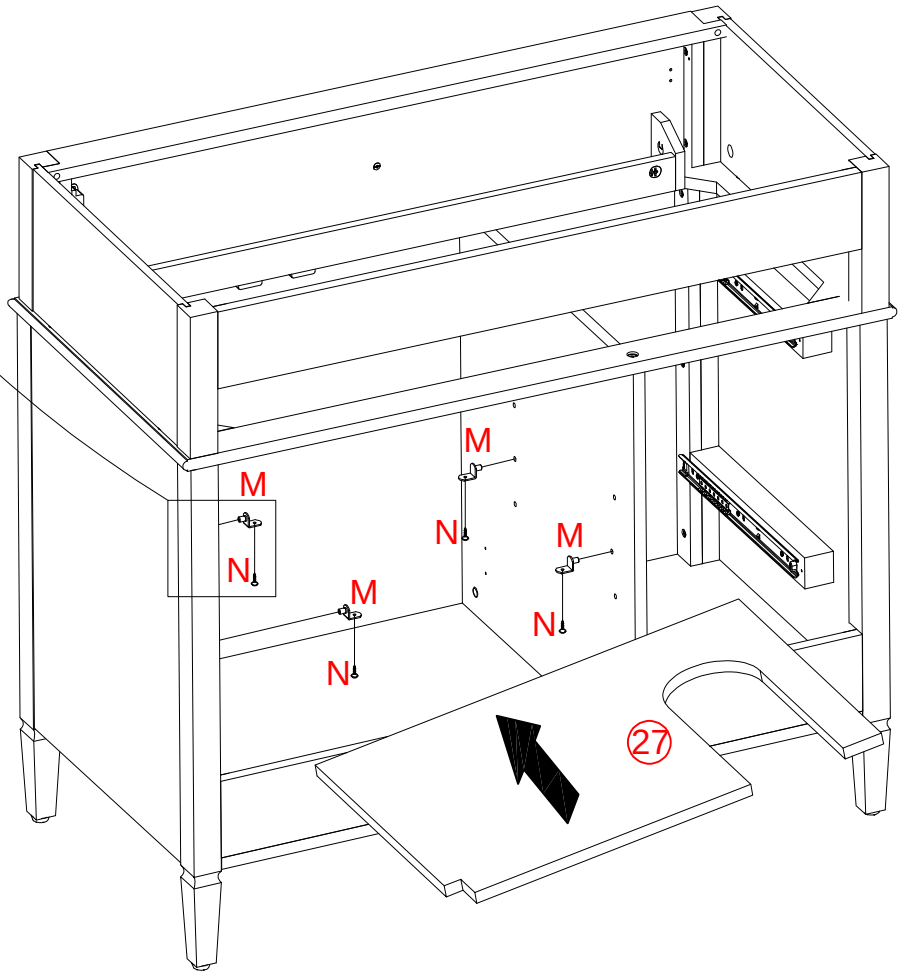



N	3.5*12MM	4PCS	M	L15MM	4PCS


STEP 25


Three-way adjustable hinge for perfectly aligned doors
1.TO ADJUST DOOR FORWARD OR BACKWARD.
2.TO ADJUST DOOR TO RIGHT ORTO LEFT.
3.TO ADJUST DOOR UP OR DOWN.

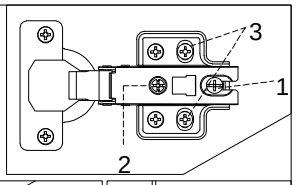

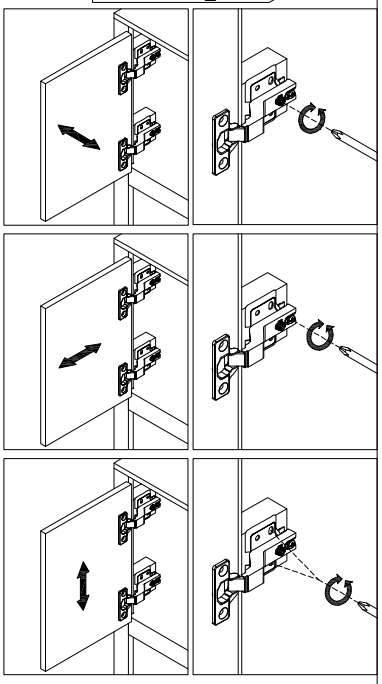

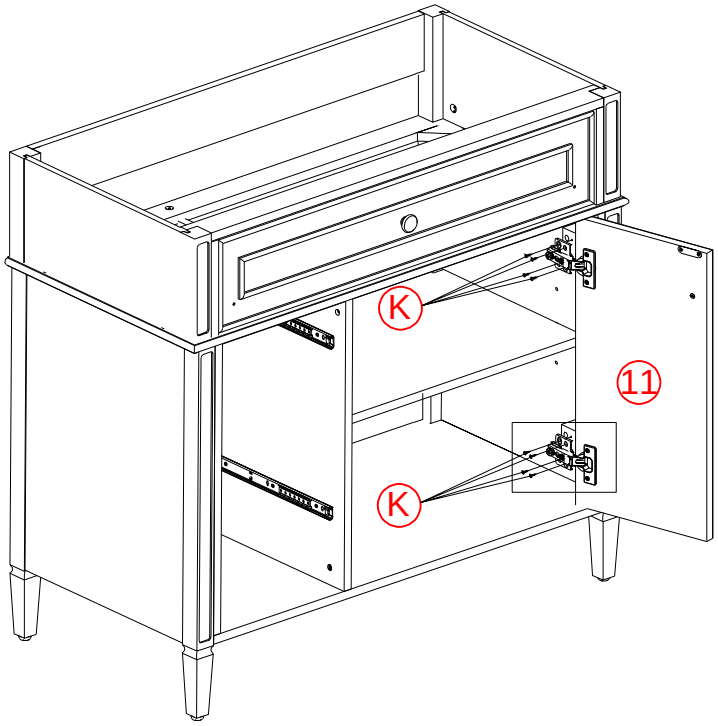


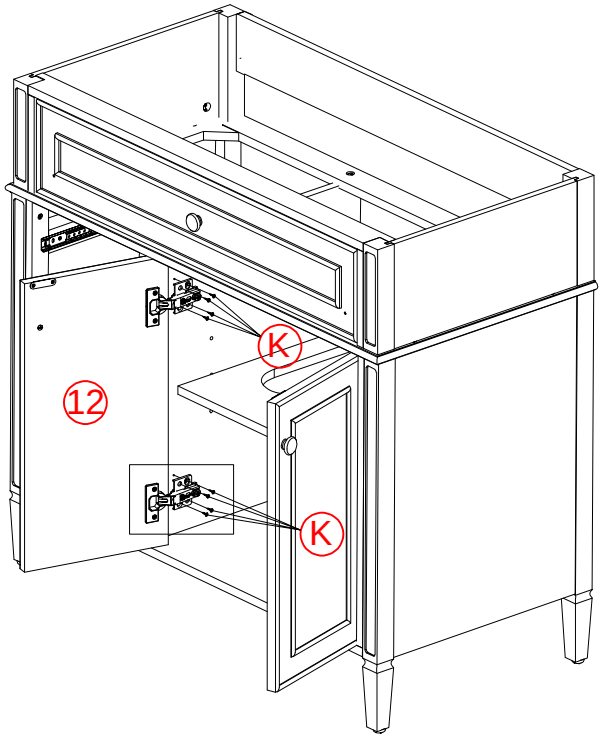


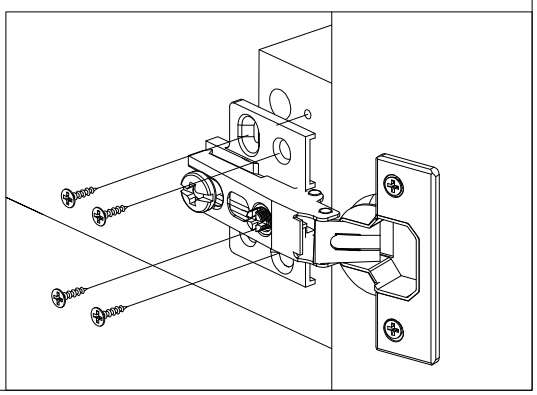


K	3.5*15MM		16PCS


STEP 26

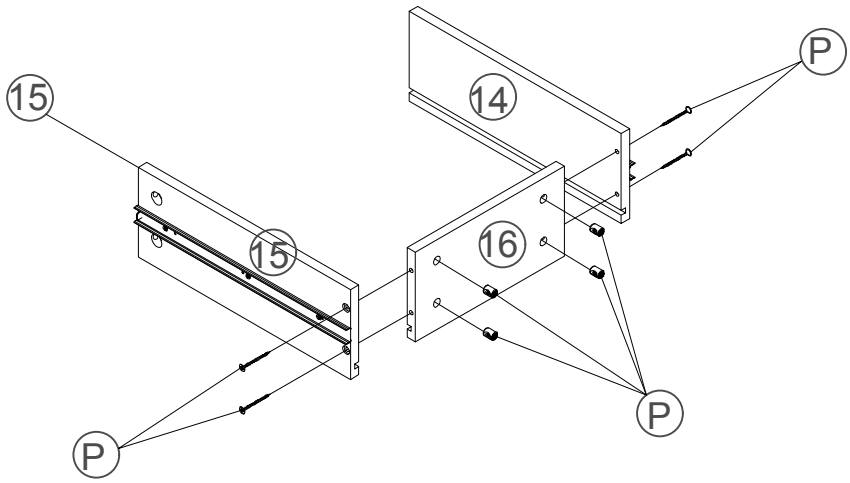

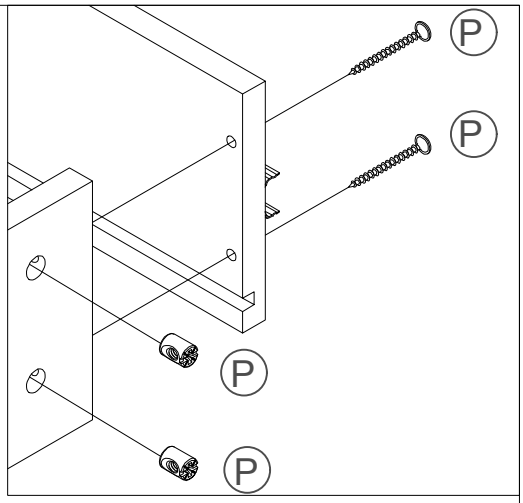


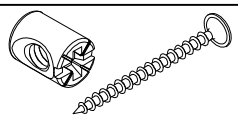
P	M4*45MM 	4SETS


STEP 27

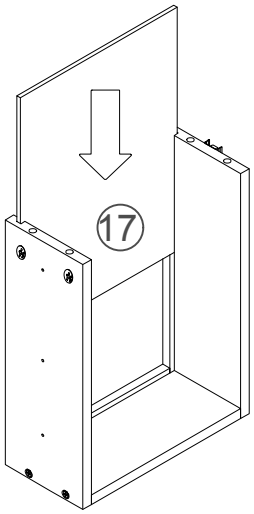


STEP 28

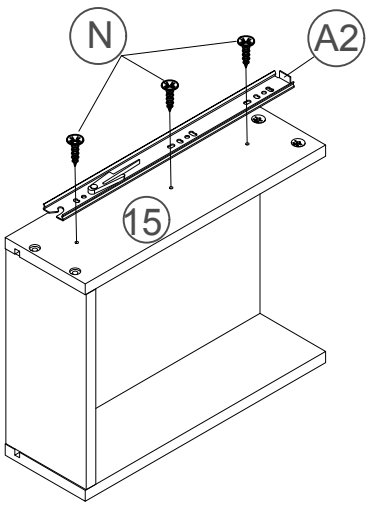


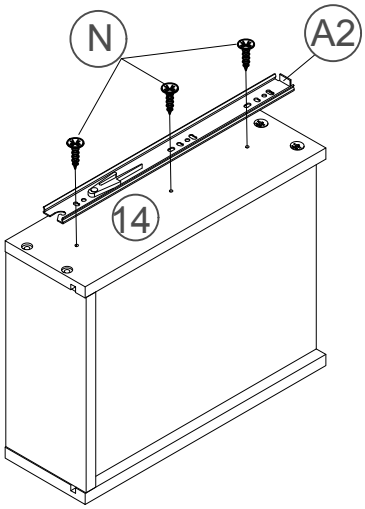


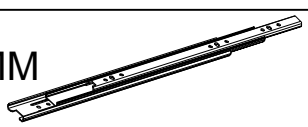
A	L45*300MM 	2PCS	N	3.5*12MM 	6PCS


STEP 29

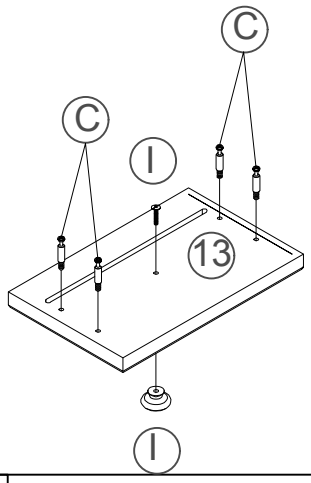

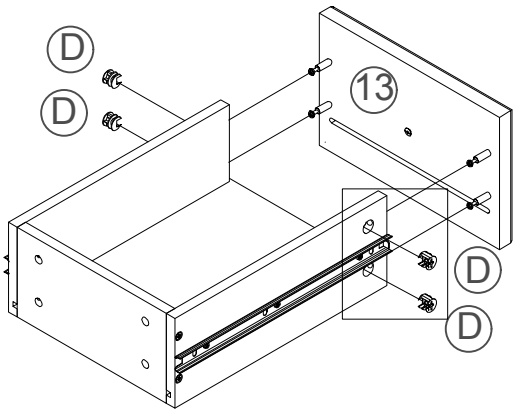


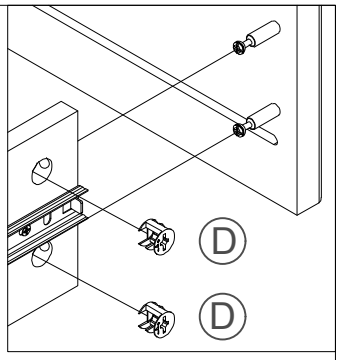



C	Ø5*35MM 	4PCS
L	M4*20MM 	1SET

D	Ø 15MM 	4PCS


STEP 30

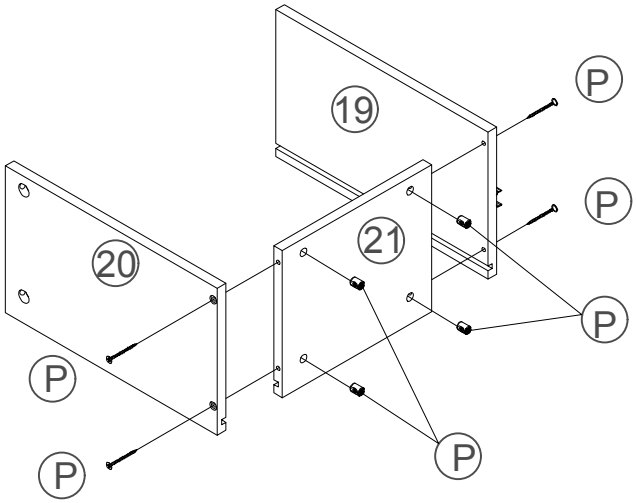


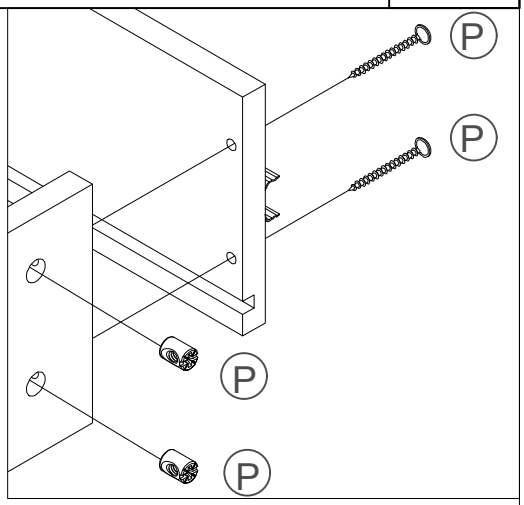


P	M4*45MM 	4SETS

STEP 31

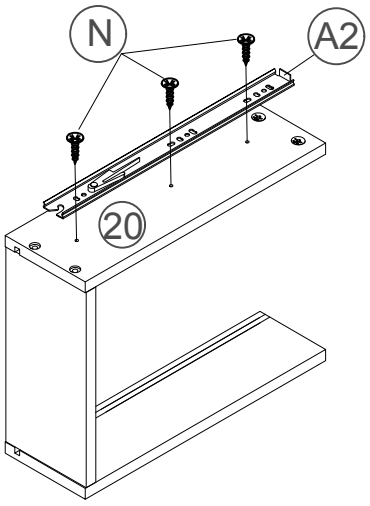


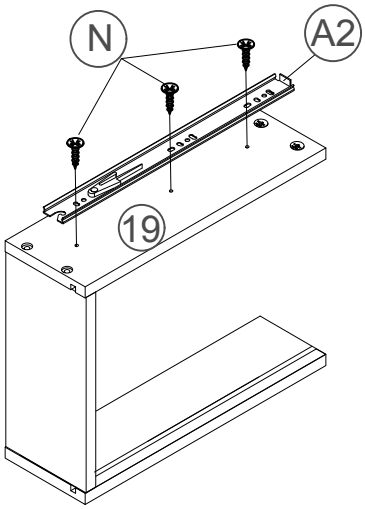


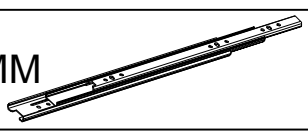A	L45*300MM 	2PCS


N	3.5*12MM 	6PCS


STEP 32

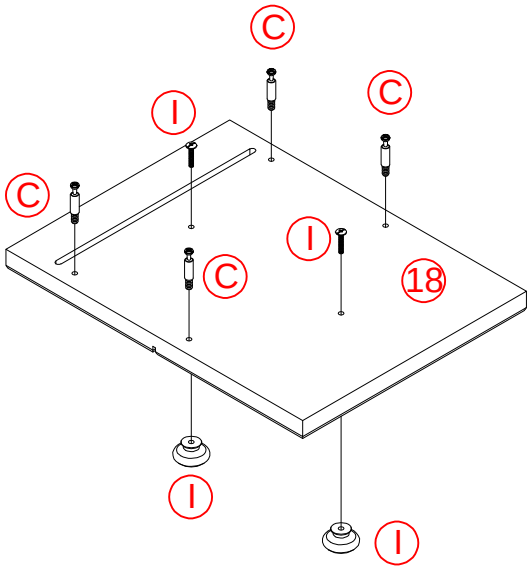


I	M4*20MM 	2SETS	
C	Ø5*35MM 	4PCS	

STEP 33

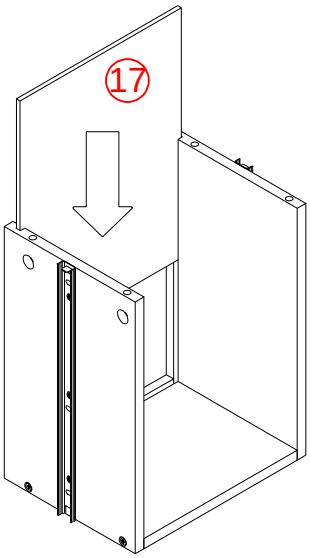


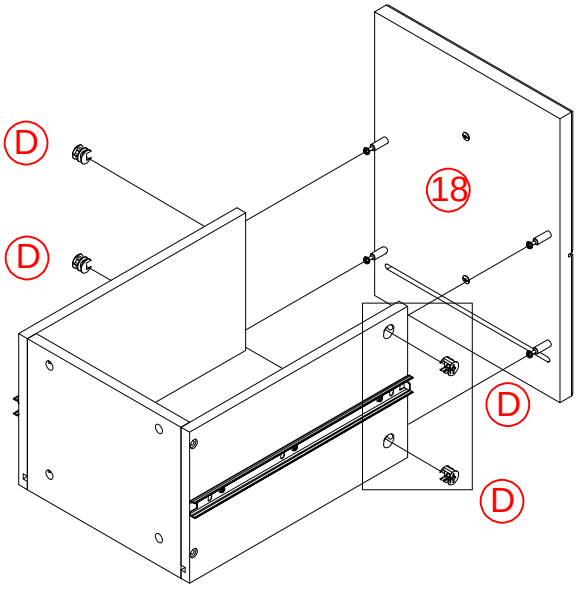

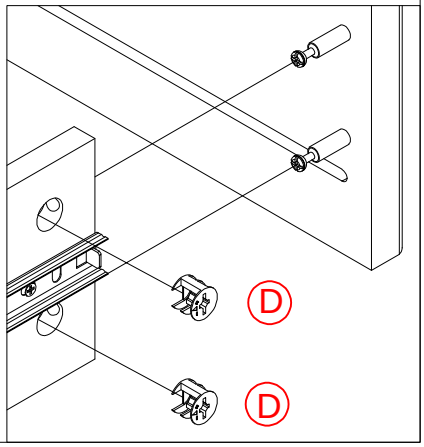


D	Ø 15MM 	4PCS	


STEP 34

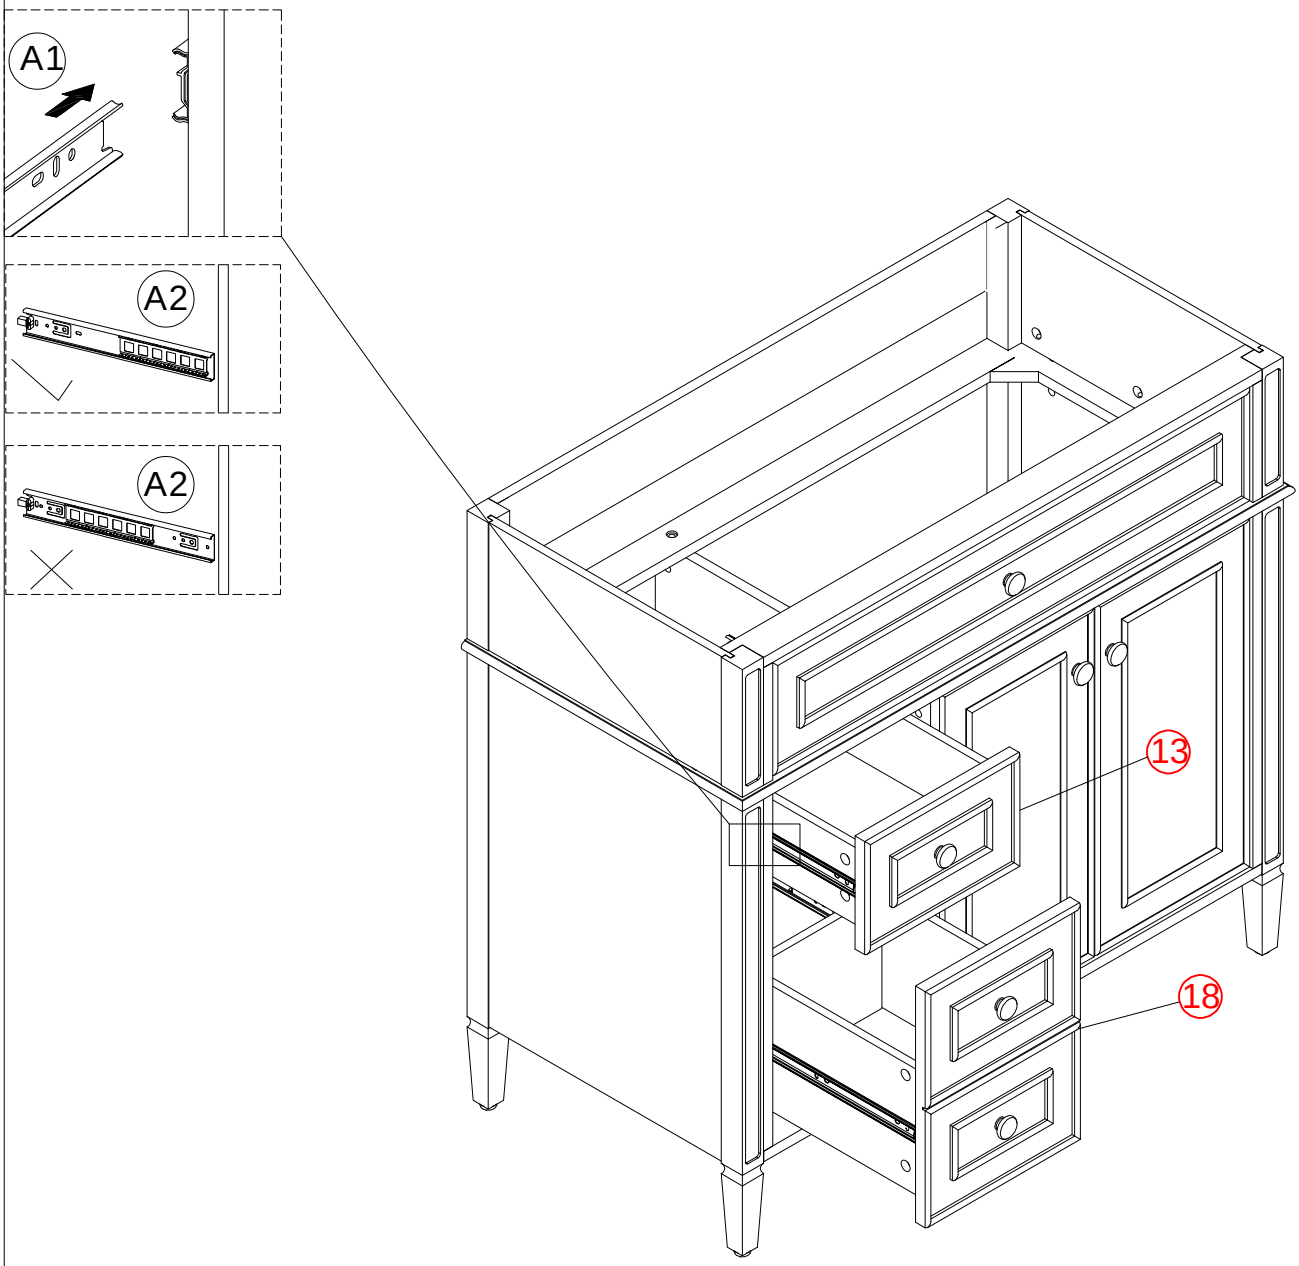


STEP 35

To install the Top (1) to the vanity (2).
Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink
top with assembled sink
onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

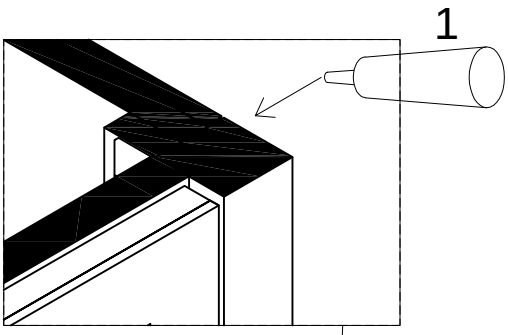


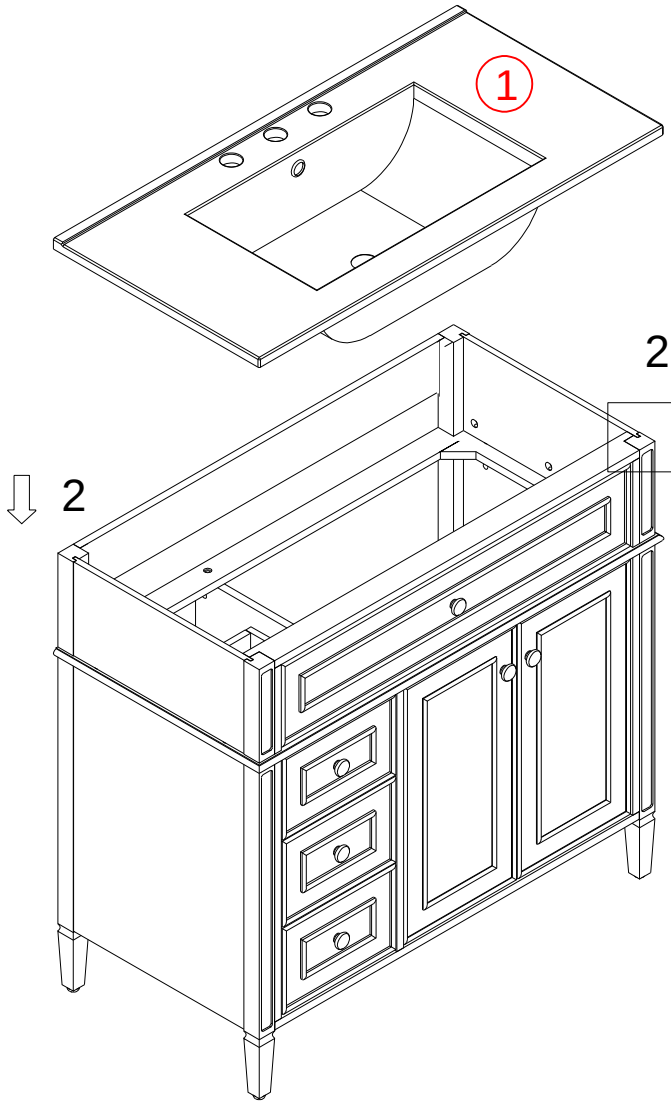

STEP 36

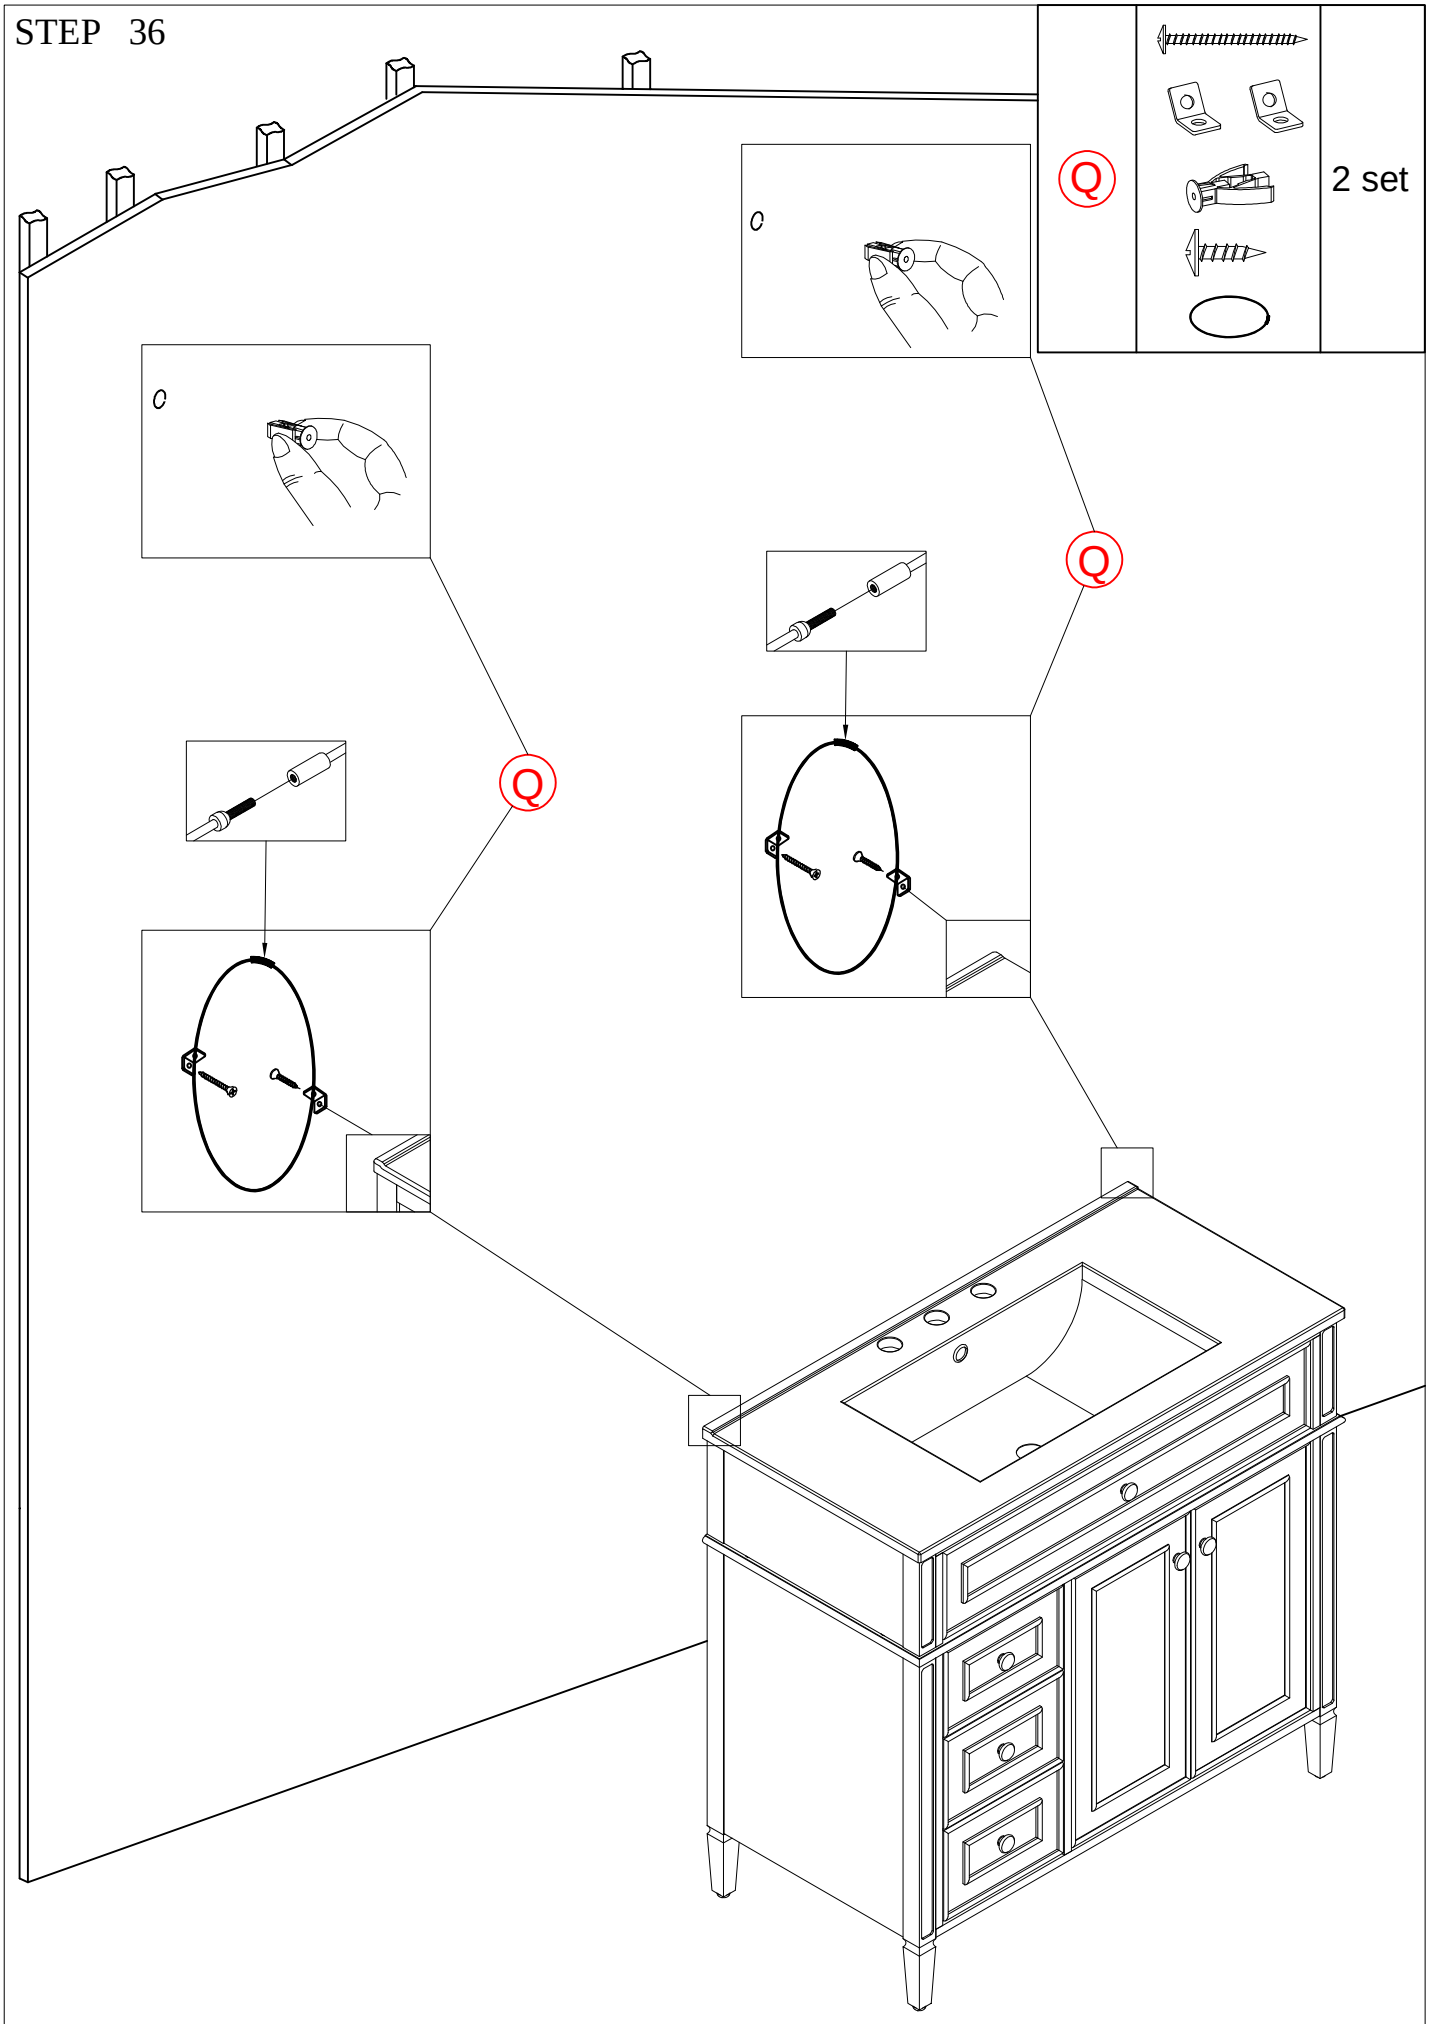


HINGE ADJUSTMENTS

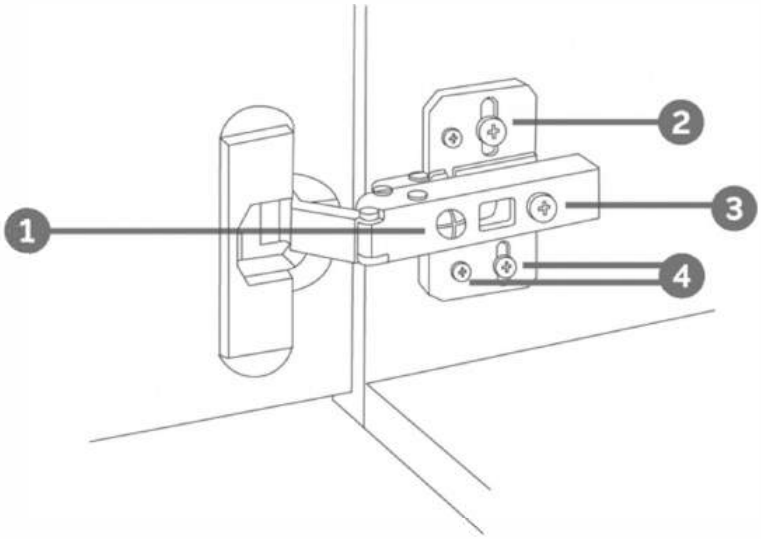


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

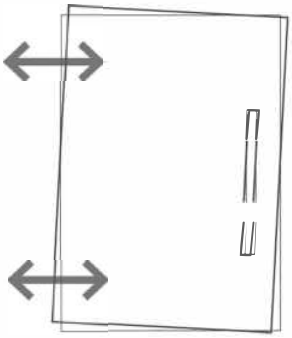

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

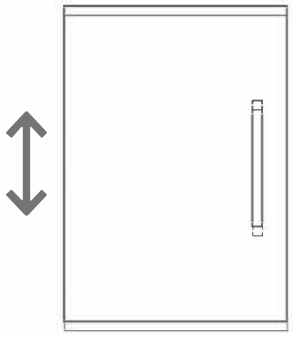

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

